

AVXMTGHR1DA


7" LCD MONITOR

WITH BUILT-IN DVD PLAYER

FOR REAR SEAT ENTERTAINMENT

OPERATION AND INSTALLATION MANUAL

Audiovox **MTG**

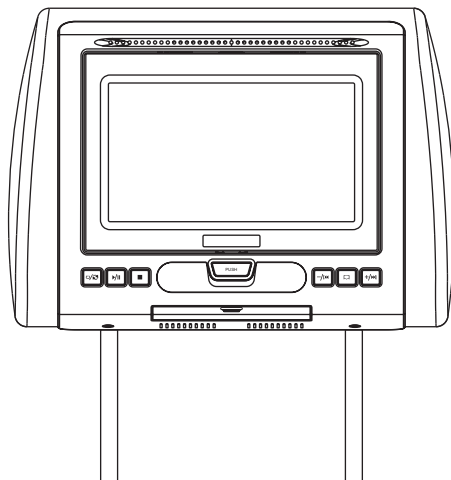

Important Notice

Installation of headrest products require careful planning and preparation. Be extremely careful with seats that have airbags built into them. Keep wiring away from any air bag wiring (usually identified by yellow connectors and yellow wire jackets). Damage to air bag wiring can result in personal injury to vehicle occupants. If you have any questions regarding wire routing or installation in a vehicle, please contact Audiovox Technical Support at 1-800-225-6074.

When connecting power and ground in a mobile video installation, insure that the ACC wire is fused at the point where it is connected to the vehicle ACC wiring. Failure to do so can result in damage to the vehicle if a short circuit develops between the vehicle connection point and the mobile video product.

An LCD panel and/or video monitor may be installed in a motor vehicle and visible to the driver if the LCD panel or video monitor is used for vehicle information, system control, rear or side observation or navigation. If the LCD panel or video monitor is used for television reception, video or DVD play, the LCD panel or video monitor must be installed so that these features will only function when the vehicle is in "park" or when the vehicle's parking brake is applied.

An LCD panel or video monitor used for television reception, video or DVD play that operates when the vehicle is in gear or when the parking is not applied must be installed to the rear of the driver's seat where it will not be visible, directly or indirectly, to be operator of the motor vehicle.

Licensed under one or more of the following patents:
Patent NOS. 7,245,274 , 6,899,365 and 6,678,892

FEATURES


- 7" Digital Thin Film Transistor (TFT) Active Matrix Liquid Crystal Display (LCD) Monitor
- Built-in DVD Player
- Last position memory for DVD player
- Four Audio / Video Source inputs "DVD, AV, AUX and Media (USB/SD)"
- USB 2.0 port / SD Card Reader input
- On Screen Display (OSD) for control of picture quality and functions
- Full function remote control
- Plays DVD, CD and MP3 discs
- IR headphone (optional)

| <u>SPECIFICATIONS</u> | |
|------------------------------|---|
| Type | TFT Active Matrix LCD |
| Resolution | 480x234 |
| Pixels | 336,960 |
| Operation Temperature | 32 ~113° F (0 ~ 45° C) |
| Storage Temperature | -4 ~ 149° F (-20 ~ 65° C) |
| Backlit life | 20,000 Hours |
| Video Display System | NTSC / PAL / AUTO |
| Headphone Audio Output | 0.03W @ 32 ohms |
| Video Output | 1.0Vp-p @ 75 ohms |
| Power Source | 12VDC |
| Dimension (L x W x H) | 147mm x 275mm x 200mm 5.7in x 10.8in x 7.8in |

Specifications subject to change without notice.

MATERIAL TO USE IN THIS PACKAGE:

1) AVXMTGHR1DA System Monitor with DVD Player (AVXMTGHR1DA) (1pc)

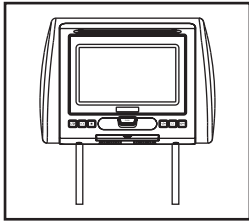

NOTE: The AVXMTGHR1DA monitor has been designed with interchangeable covers. The headrest cover as supplied is covered with shale colored vinyl. Black vinyl and pewter vinyl can replace the shale colored vinyl.

NOTE: Headrest cables are included with the headrest DVD player and the headrest monitor.




1) Remote Control
(P/N 136-5433) - (1pc)




2) AV Adapter Cable
(P/N 112B3227)-(1pc)


3) AV IN / Power Cable, 8 Pin Din to 3 RCA (Red)
(P/N 112-4309)-(1pc)

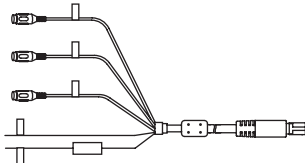

 
4) AV OUT Cable, 8 Pin Din to 3 RCA (Green)
(P/N 112-4310)-(1pc)



5) Black Vinyl Headrest Cover
(P/N 126-1377)-(1pc)

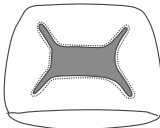


6) Pewter Vinyl Headrest Cover
(P/N 126-1378)-(1pc)

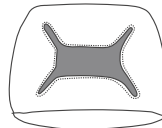

7) Shrink Tubing, Black
(P/N 138-1495)-(2pcs)




8) Support Tube Adaptor Box
(P/N 170-0170)-(1 Tray)

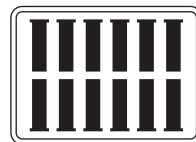

HEADREST COVER REPLACEMENT:


NOTE: If desired, replace the headrest cover before installing the headrest in the vehicle.

1. Using a Philips screwdriver, unscrew the two Philips screws and lift the bottom edge of the monitor upward.

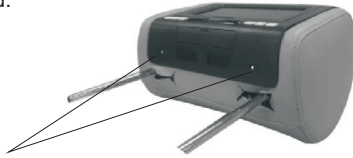

Unscrew Philips Screws

2. Remove the velcro tabs securing the headrest cover.

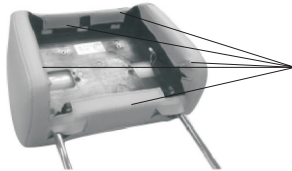


Remove Velcro Tabs

3. Replace the headrest cover with the desired color and secure the headrest cover by re-attaching the velcro tabs.




4. Place the monitor cable into the space on the right side of the headrest and lower the monitor into position to align the two Philips screws with the screw holes in the headrest. Close the screen and press the PUSH button to secure the screen.

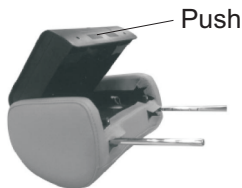

Push

5. Tighten screws

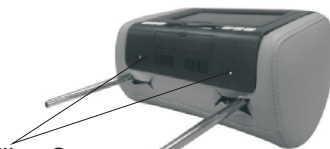

Tighten Philips Screws

VEHICLE PREPARATION

- 1) Decide on the system configuration and the options that will be installed.
- 2) Read the manual and get familiar with the electrical requirements and connections.
- 3) Decide on the mounting locations and methods of mounting the products that will be connected to the AVXMTGHR1DA.
- 4) Prepare the vehicle by removing any interior trim necessary to gain access to the vehicle's wiring as well as all areas where interconnecting wire harnesses will be located. This manual will only focus on the installation of the AVXMTGHR1DA Monitors in the supplied configuration.

NOTE: The Master Monitor should be installed in the passenger position most used.)

- 5) Locate an accessory power source +12VDC (ACC) present when the ignition key is in the accessory and run positions. 0VDC should be present when the ignition key is in the OFF position), and a good ground. Generally, these wires can be found at the ignition switch or fusebox.

NOTE: Ensure that the accessory power is fused at the source. Failure to do so may result in vehicle wiring damage.

- 6) Run the wiring harnesses throughout the vehicle as necessary. (Refer to the Wiring Diagrams on page 8). Be sure, that all the wiring is protected from sharp edges and is routed in such a manner that it will not be pinched when it is fully installed. Be sure to leave enough slack in the wiring at each component to allow sufficient working room. Be sure to leave enough slack in the monitor cables to allow the headrest to move up or down, and seat movement.

- 7) Install the headrests:
 - a. Remove vehicle's original headrests.
 - b. Insert appropriate support tube adaptors in vehicle post guides (if needed).
 - c. Hold the headrest above the seat and insert the two cables into the vehicle support guides. Make sure that the headrest is in the correct position (display facing the rear).
 - d. Route the cables through the seat back and out the bottom of the seat while pulling the cables to remove the slack. Be sure to leave enough slack in the monitor cables to allow the headrest to move up or down.
- 8) Connect all the components together (electrically) and verify proper operation of all the system functions.
- 9) If 2 AVXMTGHR1DA's are installed in a vehicle, set one unit to IRTA and the other unit to IRTB. See page 14 for instructions.

Wireless FM Modulator


The AVXMTGHR1DA is equipped with a built-in wireless FM Modulator, that allows you to listen to the DVD audio signal by tuning your vehicle's radio to the selected frequency, (**CH1** 87.7MHz, **CH2** 88.1MHz, **CH3** 88.5MHz, **CH4** 88.9MHz, **CH5** 106.7.1MHz, **CH6** 107.1MHz, **CH7** 107.5MHz, **CH8** 107.9MHz). This feature is accessed by using the FM transmitter buttons on the remote (FMM ON/OFF, and CHANNEL SELECT).

Whenever the FM Modulator is on, broadcast reception on the vehicles radio will be poor. Switching the FM Modulator off will allow normal radio reception.



NOTE: In certain areas where there are a large number of FM radio stations (e.g. large cities, urban areas), the reception of the FM signal may not be satisfactory, resulting in static, distorted sound or signal bleed thru from strong local radio stations. This is not a defect in the product, but the result of a stronger local radio station overpowering the wireless FM transmitter in your headrest monitor. Under these conditions use of wired or wireless headphones is recommended.

AVXMTGHR1DA WIRING DIAGRAM


Headrest Monitor

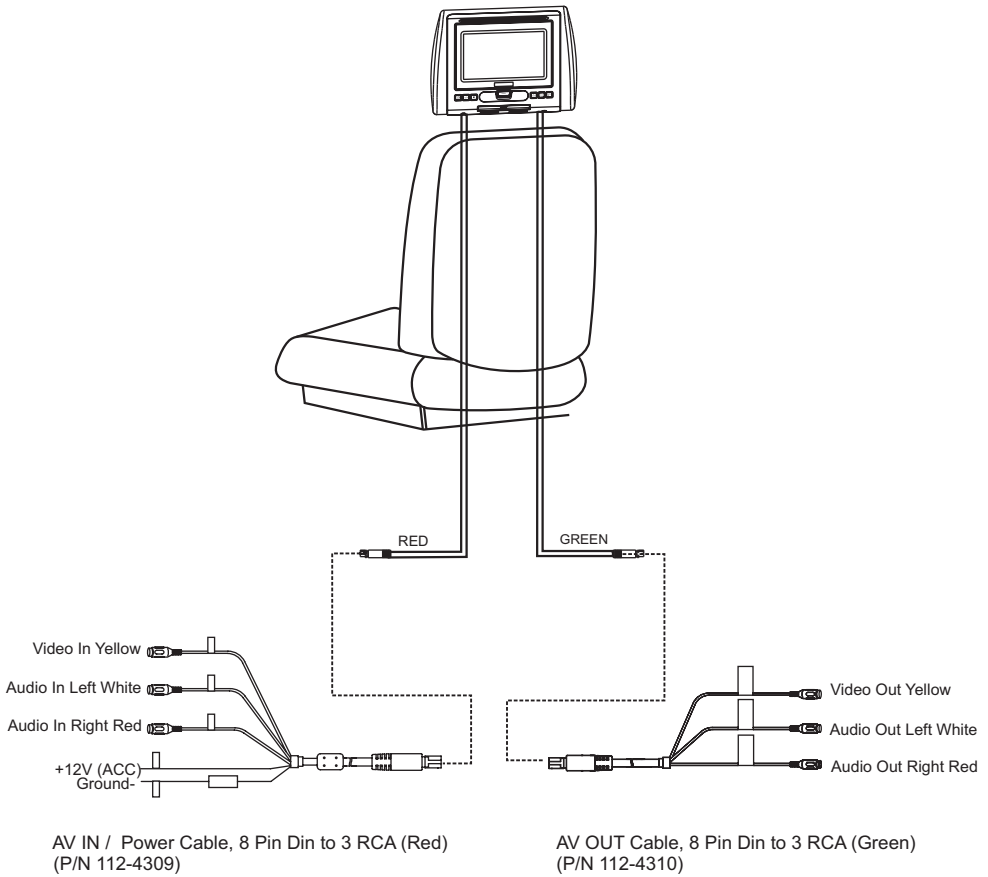


AVXMTGHR1DA CONTROLS AND INDICATORS DIAGRAM (FRONT VIEW)

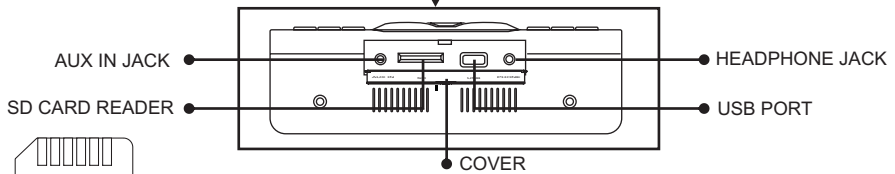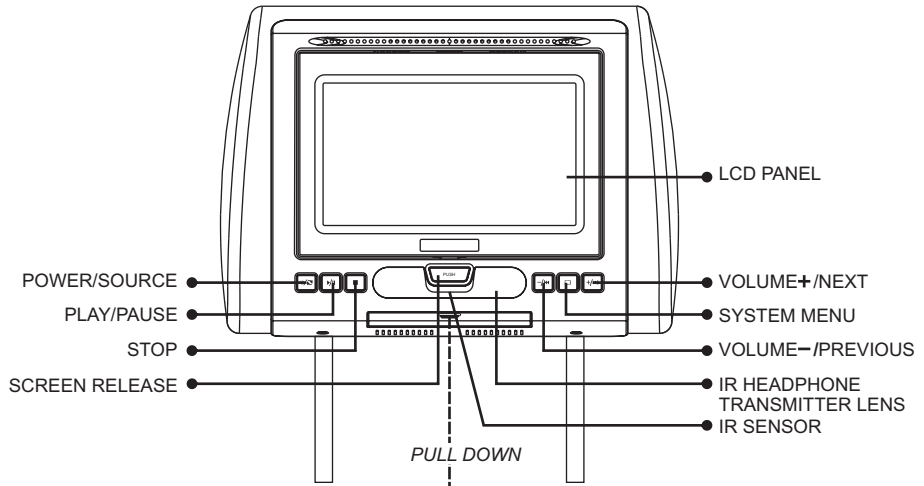

(BOTTOM VIEW)

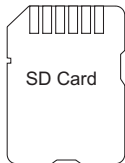

NOTE:
Insert the SD Card with
the card contacts facing
up and toward the user.

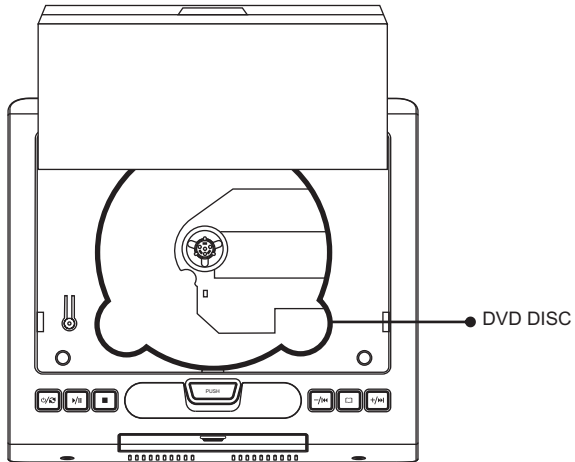


(FRONT VIEW MONITOR OPEN)

REMOTE CONTROL OPERATION


NOTE: The remote control has a battery installed with a pull tab to prevent battery discharge. Remove the pull tab before attempting to use the remote.

Battery Replacement

1. Depress the tab (1) and slide the battery holder (2) out in the direction of the arrow.
2. Install one CR2025 battery. Make sure that the proper polarity (+ or -) is observed.
3. Slide the battery holder into the remote control until it locks.

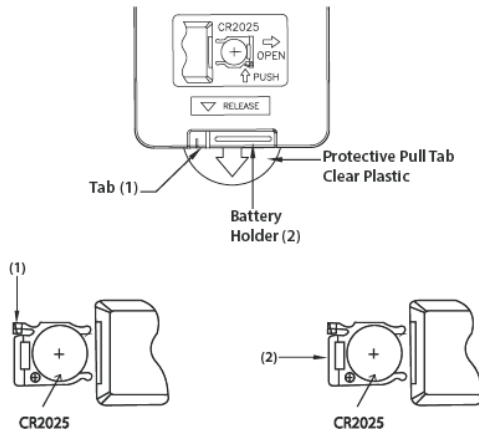

Remote Control Function Description

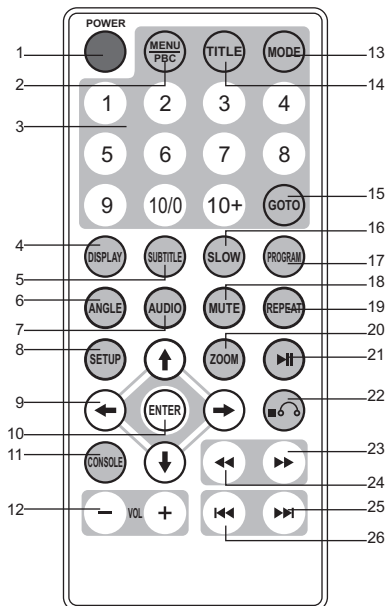

* Function control is available on the unit and the remote control.

1. POWER Button*

Press this button to turn the unit ON and OFF.

2. MENU / PBC Button

Press this button to call up DVD disc Root Menu.

3. NUMBER Button

Allows the user to enter numbers 0 to 9 to 10/0 and 10+ for selection of CD tracks, DVD chapters, and passwords.

4. DISPLAY Button

Press to display current disc information while the disc is playing. The information displayed will be Title Elapsed, Title Remain, Chapter Elapsed and Chapter Remain. Pressing the button will also turn the display off.

5. SUBTITLE Button

Press to display and select the available subtitle language in DVD mode. Each time the button is pressed the subtitle language changes. Pressing the button will also turn the subtitles off.

NOTE: The type and number of subtitle languages vary from disc to disc.

6. ANGLE Button

To select the movies display angle if available on the disc.

7. AUDIO Button

Press to display and select audio language in DVD mode. Each time you press the button, the language changes.

NOTE: The available languages vary from disc to disc.

8. SETUP Button

Allows the user to access the Setup Menu when the unit has been placed in DVD mode. Use the cursor buttons ▲▼◀▶ to select options such as General, Audio, Video and Preference Setup Page. Refer to the settings and adjustment section for more information.

9. CURSOR (▲▼◀▶) Buttons

Use these buttons to access menu selections on the screen.

10. ENTER Button

Used to implement a selected setting or menu option.

11. **CONSOLE Button***

Press to select System Menu, the OSD picture adjustment displays the "Adjustment bar" for BRIGHTNESS, CONTRAST, COLOR, TINT (For NTSC only), FMM, IRT or RESET. Once the desired adjustment bar is displayed, use the cursor buttons ◀▶ to adjust the setting. The display will automatically turn off if no adjustments are made within 6 seconds is pressed.

12. **VOLUME DOWN (-) or UP (+)***

Press to select the increase or decrease the volume for the wired headphones.

13. **MODE Button**

Each time the button is pressed, the unit will cycle through modes DVD, AV, AUX, MEDIA (USB/SD). Press the button again to remove the menu.

14. **TITLE Button**

Press this button to access the DVD disc Root Menu.

15. **GOTO Button**

Press this button to select DVD disc Chapter and Title.

16. **SLOW Button**

Press this button to slow down the movies play speed.

17. **PROGRAM Button**

Press this button to select DVD tracks and replay them in the order that they were programmed.

18. **MUTE Button**

Press this button to mute all the audio. Pressing the button again restores the sound to the previously set level.

19. **REPEAT Button**

Allows the user to repeat a selected Chapter, Title or All.

20. **ZOOM Button**

Press this button to enlarge or decrease the picture size when playing a DVD disc.

Press ZOOM button

Once
Twice
3 Times
4 Times
5 Times
6 Times
7 Times

DVD Player performs

Enlarges the picture 2X
Enlarges the picture 3X
Enlarges the picture 4X
Reduces the picture 1/2
Reduces the picture 1/3
Reduces the picture 1/4
Picture is returned to original size

21. PLAY/PAUSE Button*

Press to activate the play mode when a disc is loaded in the disc compartment, a USB memory device or a SD card is connected to the unit.
Allows the user to pause the playback. Pressing the button again button will resume normal playback.

22. STOP Button*

Press to stop playback. (Playback will resume from the point it is stopped).
Press twice to stop playback fully. (Playback will resume from the beginning of the disc).

23. FF SCAN FORWARD (») Button

Press to search in the forward direction. Press repeatedly to change the search speed from 2, 4, 8, 16 and 32 times the normal speed.

24. FR SCAN BACKWARD («) Button

Press to search in the backward direction. Press repeatedly to change the search speed from 2, 4, 8, 16 and 32 times the normal speed. Pressing the fifth time returns to normal speed.

25. NEXT (»») Button*

Press to skip to the next chapter or track.

26. PREVIOUS (««) Button*

Press to return to the previous chapter or track.

MENU ADJUSTMENT

The System Menu contains features and options that allow you to customize your system.

- 1) Press the “**□**” button on unit or press the CONSOLE button on the remote control, the menu display below will appear on screen.
- 2) Use the “**◀▶**” buttons to change the setting .
- 3) To select the next menu press the “**□**” button or the CONSOLE button on the remote control.

MENU DISPLAY

The picture can be adjusted under the system menu. The BRIGHTNESS, CONTRAST adjustments range from 0 to 32.

BRIGHTNESS +16

CONTRAST +16

COLOR +05

The COLOR adjustments range from 0 to 10.

TINT +00

The TINT adjustments range from -5 to +5.

FMM OFF

The FM Modulator adjustments consist of turning the FM Modulator on or off and selecting the FM Modulator frequency. The wireless FM Modulator Frequencies that can be selected are: (Ch1 87.7MHz, CH2 88.1MHz, CH3 88.5MHz, CH4 88.9MHz, CH5 106.7MHz, CH6 107.1MHz, CH7 107.5MHz, CH8 107.9MHz).

IRT A

The IRT can be set to Channel A or Channel B for use with optional wireless headphones. The IRT function can also be set to off.

RESET

The RESET function allows all setting options to be reset to factory settings.

SETTINGS AND ADJUSTMENTS

The Setup Menu contains features and options that let you customize your DVD player. For example, you can set a language for the on-screen display or prevent DVD playback for children.

Using the Setup Menu





1. Press the SETUP button on the remote. The Setup Menu appears on the screen. There are four menu pages which comprise the Setup Menu.
2. To select and set an option, use the cursor buttons (◀ or ▶) to move the highlight to the desired page.
3. After entering the highlighted page, use the cursor buttons (▲ or ▼) to highlight the desired option.
4. Press ▶ to open the sub menu that contains the different options available. Press ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection.
5. Repeat steps 3 and 4 to set the options that reside on the same menu page.
6. To change to another menu page, use the cursor buttons (◀ or ▶) then, repeat steps 2 through 5.


SETTINGS AND ADJUSTMENTS

The Setup Menu contains features and options that let you customize your DVD player. For example, you can set a language for the on-screen display or prevent DVD playback for children.

Using the Setup Menu

1. Press the SETUP button on the remote. The Setup Menu appears on the screen as shown in the illustration. There are 5 icons on the top part of the Setup Menu. Each icon represents a page.

-  Main Page
-  Audio Setup
-  Video Setup
-  Preference

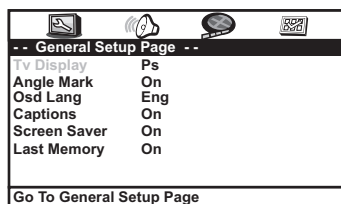


2. To set the desired option, move the highlight into the setup area using the cursor button ▶.
3. After entering the setup area, highlight the desired option using the cursor button ▲ or ▼.
4. Press ▶ to open the sub menu that contains the different options available. Press ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection.
5. Repeat steps 3~4 to set the options that reside on the same Setup Page.
6. To change to another Setup page, press ◀ to position the highlight back on the icon side of the setup page. Then, repeat steps 2~5.

GENERAL SETUP PAGE

TV Display

The TV Display feature allows the user to change the screen format (aspect ratio to Normal/4:3 PScan, Normal/4:3 LB, or 16:9 Wide).

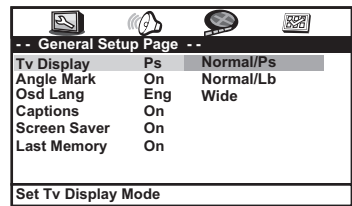


Angle Mark

The Angle Mark setup allows you to turn on/off the angle mark display on the screen.


On - The screen shows angle mark if an angle option is available on a DVD.

Off - There is no angle mark display on the screen even though there is an angle option available on a DVD.

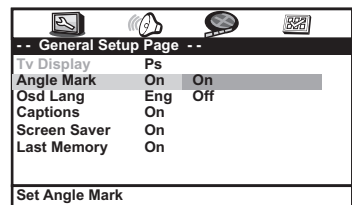

OSD Lang

The OSD Language setup allows you to select the language for the on-screen display. The user can either select English or Chinese for the OSD Language.

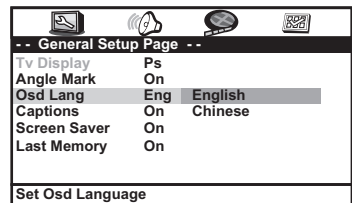


Captions

The Captions setup allows you to turn on/off the closed caption signal.

On - Turns on the closed caption.

Off - Turns off the closed caption.

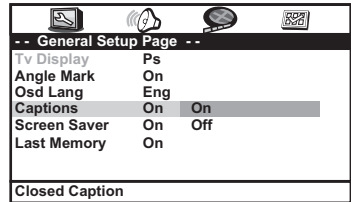


Screen Saver

This allows you to set the Screen Saver mode.

ON -Screen saver will appear


OFF -Screen saver will not appear

Note: The DVD player will enter Screen Saver mode if the unit is inactive for approximately 2 Minutes.

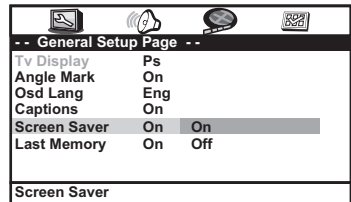

Last Memory



The last memory function allows DVD playback to begin from the point when playback was last stopped. The last memory feature allows the user to turn the last memory feature function on or off.

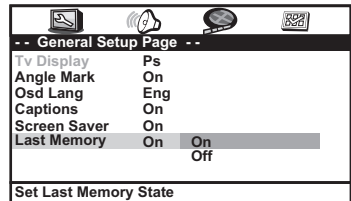

Audio Setup

Speaker Setup

The Audio Setup function allows you to choose the Speaker Setup Downmix at Lt/Rt, Stereo, V Surr.

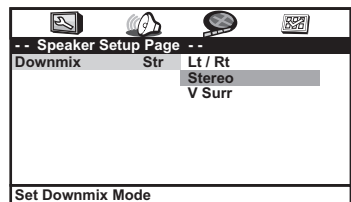
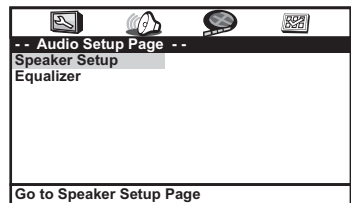


Equalizer

The equalizer allows you to choose from a variety of preset equalizer settings.

The options are :



None, Rock, Pop, Live, Dance, Techno, Classic and Soft.

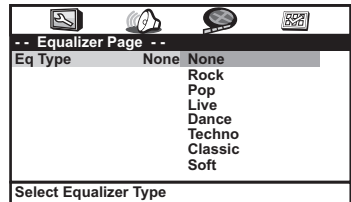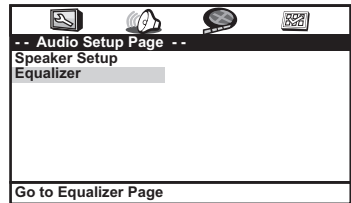

Video Setup

Panel Quality

The Video Setup function allows you to choose and set the Panel Quality Sharpness to High, Medium or Low.

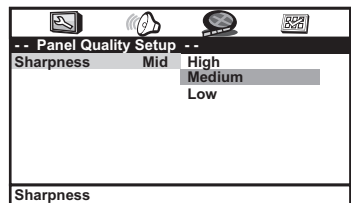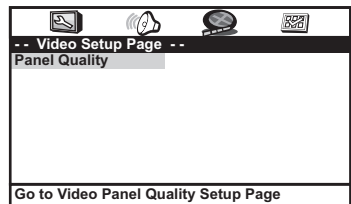

Preference Page

This menu page available if there is no disc in the disc tray, the disc tray is open or the disc in the disc tray is playing.

There are seven items in the Preference Page sub menu. They are Tv Type, Audio, Subtitle, Disc Menu, Parental, Password and Default.

Tv Type

This function matches video output of the unit to the broadcast system of a connected screen. The unit supports both National Television System Committee (NTSC) and Phase Alternating Line (PAL) television broadcasting standards.


Options:

PAL: Select this mode if the connected screen is a PAL system. The video signal of a NTSC disc will be output in PAL format.

AUTO: Select this mode if the connected screen is multi-system. The output format of video signal will be in accordance with the video signal of the disc.

NTSC: Select this mode if the connected screen is a NTSC system. The video signal of a PAL disc will be output in NTSC format.

1. To select the TV type use the cursor button ▲ or ▼ to highlight TV TYPE. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

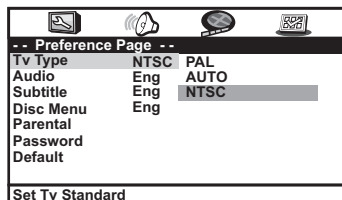


Audio

This item allows you to select a preferred audio language. This function only applies to discs encoded with different audio languages.

Options: English, French, Spanish, Chinese, Japanese, Korean, Russian, and Thai.

NOTE: If the selected language is not available for the currently playing disc, the disc's default setting is applied.

1. To select the audio feature use the cursor button ▲ or ▼ to highlight AUDIO. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

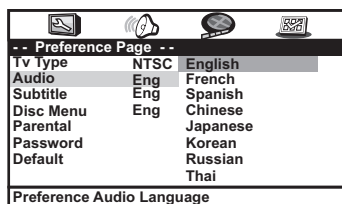


Subtitle

This item allows you to select a preferred subtitle language. This function only applies to discs encoded with subtitles.

Options: English, French, Spanish, Chinese, Japanese, Korean, Russian, and Thai.

NOTE: If the selected language is not available for the currently playing disc, the disc's default setting is applied.

1. To select the subtitle feature use the cursor button ▲ or ▼ to highlight SUBTITLE. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

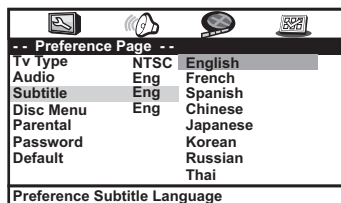

| -- Preference Page -- | | |
|-----------------------|------|----------|
| TV Type | NTSC | English |
| Audio | Eng | French |
| Subtitle | Eng | Spanish |
| Disc Menu | Eng | Chinese |
| Parental | | Japanese |
| Password | | Korean |
| Default | | Russian |
| | | Thai |

Preference Subtitle Language


Disc Menu

This item allows you to select a preferred disc menu language.

Options: English, French, Spanish, Chinese, Japanese, Korean, Russian, and Thai.

NOTE: If the selected language is not available for the currently playing disc, the disc's default setting is applied.

1. To select the disc menu feature use the cursor button ▲ or ▼ to highlight DISC MENU. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

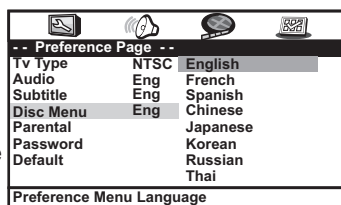

| -- Preference Page -- | | |
|-----------------------|------|----------|
| TV Type | NTSC | English |
| Audio | Eng | French |
| Subtitle | Eng | Spanish |
| Disc Menu | Eng | Chinese |
| Parental | | Japanese |
| Password | | Korean |
| Default | | Russian |
| | | Thai |

Preference Menu Language

Parental


This item allows you to limit the content of movie playback from Kid Safe to Adult. The lower the value, the more strict the control. Movies rated higher than the level set for the parental lock can not be viewed without entering the correct password.

Options:

- 1 Kid Saf
- 2 G
- 3 PG
- 4 PG 13
- 5 Pgr
- 6 R
- 7 Nc 17
- 8 Adult

NOTE: The rating level can be changed only when the correct password is provided. This function only works with those discs with parental function.

1. To select the parental feature use the cursor button ▲ or ▼ to highlight PARENTAL. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

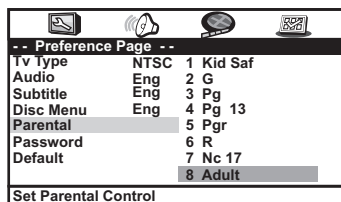

| -- Preference Page -- | | |
|-----------------------|------|-----------|
| TV Type | NTSC | 1 Kid Saf |
| Audio | Eng | 2 G |
| Subtitle | Eng | 3 Pg |
| Disc Menu | Eng | 4 Pg 13 |
| Parental | | 5 Pgr |
| Password | | 6 R |
| Default | | 7 Nc 17 |
| | | 8 Adult |

Set Parental Control

Password

This function allows you to change the password. The default password is 3308.

1. To select the password feature use the cursor button ▲ or ▼ to highlight Password. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection.

To change the password:

1. Use the cursor button ▼ to highlight Password. Press the cursor button ► to highlight Change. Press Enter.
2. Enter the old password in the Old Password row.
3. Enter the new password in the New Password row.
4. Enter the new password again in the Confirm Pwd row.






NOTE: You may reset the password if you forget the old password by using the default password: 3308. This password is always active even after you have selected your own password and changed it. To avoid the possibility of others using the default password to set the parental level and change the password, record this default password in another area and delete it from this manual.

5. Use the cursor button ◀ to return to the options.

Default

This function allows you to restore all the default settings except the settings in the Password Setup Page and the Parental item.

1. To select the default feature use the cursor button ▲ or ▼ to highlight Default. Press the cursor button ► to open the sub menu that contains the different options available. Press the cursor button ▲ or ▼ to highlight the desired option, and press ENTER to confirm the selection. Use the cursor button ◀ to return to the options.

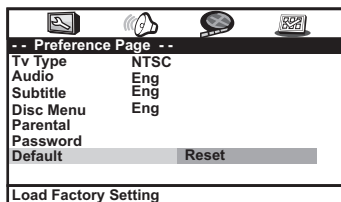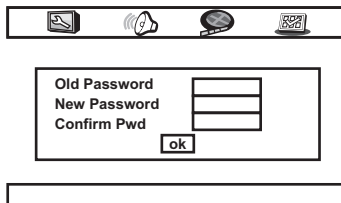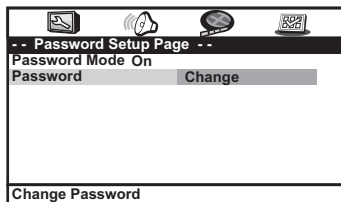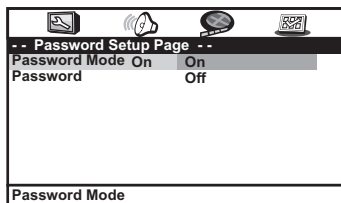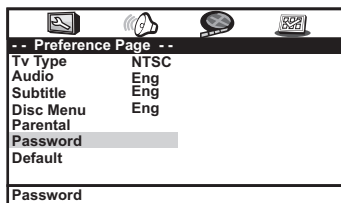

Playing DVDs

Press the play button to activate the play mode when a disc is loaded in the disc compartment, Press the DISPLAY button on the remote control to display the status banner. The banner includes disc title, chapter, and elapsed time.

Title selection

Press numeric (0-9) buttons to initiate a change of chapter title selection.

Playing USB Devices

The System will detect the insertion of the USB media automatically if no disc is loaded. The system auto detects the media inserted (DVD, SD Card or USB device).

When a disc is inserted, the system will switch to DVD mode immediately regardless if USB media is currently playing. The DVD source (DVD or USB) can only be changed while the DVD is not playing. When a USB device is loaded in the player, the navigation menu appears automatically.

1. Press the cursor button ▲ or ▼ to move the highlight to the desired folder and press ENTER to display the contents in the folder.
2. Press the cursor button ▲ or ▼ to move the highlight to the desired file in the folder and press ENTER to begin playback of the highlighted file.

Note: The System supports:

Files: MP3 and JPEG files only.

File systems: FAT16 and FAT32

The system will NOT support:

Files: BMP, MP4, WAV, ASF, H.264, DivX,

File systems: NTFS, ExFAT

The system will always default to the DVD when the system detects a disc in the DVD player.

Playing Audio CDs

When playing an audio CD, the DISPLAY banner appears automatically. The track number and the elapsed time of the disc are displayed.

Selecting a Track

Selection of a specific track is accomplished by using the numbers keys. Press the number key corresponding to the desired track and the player will implement the selection.

Press the previous button (⏮) to return to the previous chapter or track.

Press the next button (⏭) to skip to the next chapter or track.

Using the REPEAT feature

The default mode for the Repeat feature is OFF. Pressing REPEAT consecutively changes the repeat options

- TRACK – repeat the track that is playing.
- ALL – repeat the entire disc that is playing.
- REPEAT OFF – repeat is turned off.

Playing MP3 Discs

Mp3 is a format for storing digital audio. An audio CD-quality song can be compressed into MP3 format with very little loss of quality, while taking up much less space. CD-R discs that have been encoded in MP3 format can be played on the DVD player. The DVD player plays the songs in the order they were burned on to the disc.

Selecting Folders and Songs

When an MP3 disc is loaded in the player, the navigation menu will appear on the screen automatically. When an MP3 disc is loaded in the player, the navigation menu will appear on the screen automatically.

Press the cursor button, ▲ or ▼ , to move the highlight to the desired folder and press the ENTER button to display the songs in the folder.

Press the cursor button, ▲ or ▼ , to move the highlight to the desired song and press the ENTER button to begin playback of the highlighted song.

Selecting a Play Mode

You can choose what order the songs will play on a disc temporarily. The default play mode is FOLDER. Press REPEAT consecutively to choose the desired play mode. The play mode options are:

- Folder Repeat the disc that is playing.
- Shuffle Plays songs in a random order.
- Random Plays songs in a random order.
- Single Repeat the song that is playing.
- Repeat One Repeat the song that is playing.
- Repeat Folder Repeat the disc that is playing.
- Repeat Off Turn off repeat function.

Playing SD Card

The System will detect the insertion of the SD Card automatically if no disc is loaded. The system only auto detects the first media inserted (DVD or the second media source)., A USB device ,SD card or CD disc must be manually selected by pressing the DVD Mode button on the remote control.

When a disc is inserted, the system will switch to DVD mode immediately regardless if SD Card media is currently playing. The DVD source can only be changed while the DVD is not playing. When a SD Card is loaded in the player, with no disc is loaded the navigation menu appears automatically.

NOTE: Insert the SD Card with the card contacts facing up.

1. Press the cursor button ▲ or ▼ to move the highlight to the desired folder and press ENTER to display the contents in the folder.
2. Press the cursor button ▲ or ▼ to move the highlight to the desired file in the folder and press ENTER to begin playback of the highlighted file.


The system will always default to the DVD when the system detects a disc in the DVD player.

DVD Basics

To get the optimum use out of the DVD Player, please read the following:.

DVD Region Code

The DVD player is preset to a region code at the factory depending on where the DVD player is sold. A DVD from a different region cannot be played in this unit and the unit will display "WRONG REGION".

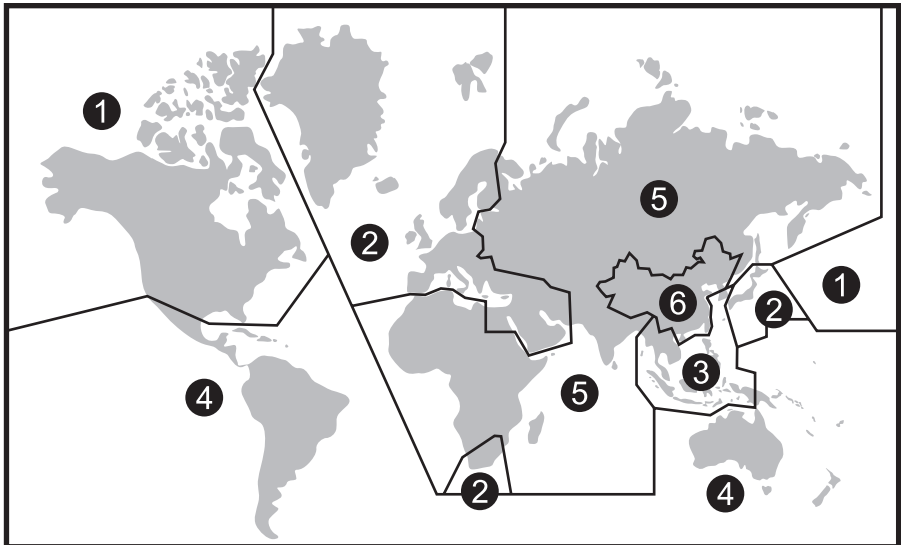

Region 1- USA, Canada

Region 2- Japan, Europe, South Africa, Middle East, Greenland

Region 3- S. Korea, Taiwan, Hong Kong, Parts of South East Asia

Region 4- Australia, New Zealand, Latin America (including Mexico)

Region 5- Eastern Europe, Russia, India, Africa

Region 6- China

TROUBLESHOOTING

| PROBLEM | SOLUTION |
|---|---|
| IR remote inoperative | <ul style="list-style-type: none"> • Verify that the battery in the remote is fresh. • Verify that the remote sensor eye is not obstructed. |
| Disc won't play | <ul style="list-style-type: none"> • Insert a disc with the label side facing upwards. • Check the type of disc you put into disc tray. This DVD only plays DVD, audio CD and MP3s. • Both the unit and the disc are coded by region. If the regional codes don't match, the disc can't be played. |
| Play starts, but then stops immediately | <ul style="list-style-type: none"> • The disc is dirty. Clean it. • Condensation has formed. Allow player to dry out. |
| No sound or distorted sound | <ul style="list-style-type: none"> • Make sure your DVD is connected properly. Make sure all cables are securely inserted into the appropriate jacks. • If you are using the 2-channel IR headphones, make sure you turn on the IR headphone power, make sure the correct channel (A or B) is selected. • If the FM Modulator is ON make sure proper frequency has been selected. |
| Cannot advance through a movie | <ul style="list-style-type: none"> • Most discs prohibit advancing through the opening credits and warning information that appear at the beginning of movies. |
| The icon (⓪) appears on screen | <ul style="list-style-type: none"> • The feature or action cannot be completed at this time because: <ol style="list-style-type: none"> 1. The disc's software restricts it. 2. The disc's software doesn't support the feature (e.g., angles) 3. The feature is not available at the moment. 4. A title or chapter number that is out of range has been requested. |
| Picture is distorted | <ul style="list-style-type: none"> • The disc might be damaged. Try another disc. • It is normal for some distortion to appear during forward or reverse scan. |



12 MONTH LIMITED WARRANTY

Applies to Movies To Go Mobile Video Products

VOXX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor. A game controller, if supplied, is similarly warranted for ninety (90) days.

To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.

This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, to costs incurred for installation, removal or reinstallation of the product, or to damage to digital memory/media devices, gaming devices, discs, speakers, accessories, or vehicle electrical systems.

This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

This Warranty is in lieu of all other express warranties or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

VOXX Electronics Corporation,
150 Marcus Blvd., Hauppauge, New York 11788 | 1-800-645-4994

128-9329

NOTES



For Customer Service
Visit Our Website At
www.voxxelectronics.com
Product Information, Photos,
FAQ's, Owner's Manuals