

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW AND	Ignition Harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition Harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1388	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW AND	Ignition Harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition Harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW AND	Ignition Harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition Harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW AND	Ignition Harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition Harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE or WHITE/BLACK	Ignition Harness
STARTER WIRE 1	BLACK/WHITE	Ignition Harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition Harness
ACCESSORY WIRE 1	YELLOW AND	Ignition Harness
ACCESSORY WIRE 2	BLUE/WHITE	Ignition Harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	At Brake Switch
HORN TRIGGER (-)	BLUE/RED	At Steering Column
POWER DOOR LOCK (-)	GREEN/WHITE	Driver Kick Panel
POWER DOOR UNLOCK (-)	GREEN/RED	Driver Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse Box
HEADLIGHTS (+)	RED/WHITE	At Light Switch
DOOR TRIGGER (-)	BLACK/WHITE	At Harness Above Fuse Box Or Green Plug To Right Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness In Driver's Kick Panel or Light In Trunk
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
5.25"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
DIN opening - none required	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Notes: Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: The factory radio is a front loaded double DIN radio. An installation kit is required for all aftermarket installations

- 1 Pull out the ashtray and remove the 3 screws securing the ashtray light and slide housing.
- 2 From inside the ashtray cavity remove 2 8mm bolts securing the radio, unplug, and remove

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker in a factory enclosure or a 6.5" speaker

- 1 Pry out the cap from inside the door release trim, then remove the screw located there.
- 2 Carefully pop out the plastic clips from the top inside corner of the panel.
- 3 Remove the screw from inside the door pull cup.
- 4 Remove the screw from along the outside edge of the panel, just above the door pocket.
- 5 Carefully pop loose the door panel clips, pull the panel back, unplug, and remove.
- 6 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory rear speaker is either a 6x9" or a 6.5" speaker

- 1 From inside the trunk remove 3 nuts from the grill studs
- 2 From inside the car lift the grill and speaker out, unplug, and remove
- 3 The factory speaker is mounted to the factory grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Notes: Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: The factory radio is a front loaded double DIN radio. An installation kit is required for all aftermarket installations

- 1 Pull out the ashtray and remove the 3 screws securing the ashtray light and slide housing.
- 2 From inside the ashtray cavity remove 2 8mm bolts securing the radio, unplug, and remove

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker in a factory enclosure or a 6.5" speaker

- 1 Pry out the cap from inside the door release trim, then remove the screw located there.
- 2 Carefully pop out the plastic clips from the top inside corner of the panel.
- 3 Remove the screw from inside the door pull cup.
- 4 Remove the screw from along the outside edge of the panel, just above the door pocket.
- 5 Carefully pop loose the door panel clips, pull the panel back, unplug, and remove.
- 6 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory rear speaker is either a 6x9" or a 6.5" speaker

- 1 From inside the trunk remove 3 nuts from the grill studs
- 2 From inside the car lift the grill and speaker out, unplug, and remove
- 3 The factory speaker is mounted to the factory grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Notes: Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: The factory radio is a front loaded double DIN radio. An installation kit is required for all aftermarket installations

- 1 Pull out the ashtray and remove the 3 screws securing the ashtray light and slide housing.
- 2 From inside the ashtray cavity remove 2 8mm bolts securing the radio, unplug, and remove

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker in a factory enclosure or a 6.5" speaker

- 1 Pry out the cap from inside the door release trim, then remove the screw located there.
- 2 Carefully pop out the plastic clips from the top inside corner of the panel.
- 3 Remove the screw from inside the door pull cup.
- 4 Remove the screw from along the outside edge of the panel, just above the door pocket.
- 5 Carefully pop loose the door panel clips, pull the panel back, unplug, and remove.
- 6 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory rear speaker is either a 6x9" or a 6.5" speaker

- 1 From inside the trunk remove 3 nuts from the grill studs
- 2 From inside the car lift the grill and speaker out, unplug, and remove
- 3 The factory speaker is mounted to the factory grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Fuse box
DOOR TRIGGER (-)	BLACK/WHITE	Harness To Left Of Steering Column
TRUNK TRIGGER (-)	GREEN/BLACK	Harness To Left Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	BLACK/RED	2-Pin Harness In Driver's Kick Wrapped In Blue Tape
Notes: Wagon models use GREEN/WHITE for lock and YELLOW/WHITE for unlock. You can find these wires either in the drivers door harness or under the rear seat.		
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/GREEN	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B	METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.		

RADIO REMOVAL

NOTE: The factory radio is a front loaded double DIN radio. An installation kit is required for all aftermarket installations

- 1 Pull out the ashtray and remove the 3 screws securing the ashtray light and slide housing.
- 2 From inside the ashtray cavity remove 2 8mm bolts securing the radio, unplug, and remove

FRONT SPEAKER REMOVAL

NOTE: The factory speaker is a 5" speaker in a factory enclosure or a 6.5" speaker

- 1 Pry out the cap from inside the door release trim, then remove the screw located there.
- 2 Carefully pop out the plastic clips from the top inside corner of the panel.
- 3 Remove the screw from inside the door pull cup.
- 4 Remove the screw from along the outside edge of the panel, just above the door pocket.
- 5 Carefully pop loose the door panel clips, pull the panel back, unplug, and remove.
- 6 Remove the screws securing the speaker, unplug, and remove.

REAR SPEAKER REMOVAL

NOTE: The factory rear speaker is either a 6x9" or a 6.5" speaker


- 1 From inside the trunk remove 3 nuts from the grill studs
- 2 From inside the car lift the grill and speaker out, unplug, and remove
- 3 The factory speaker is mounted to the factory grill.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

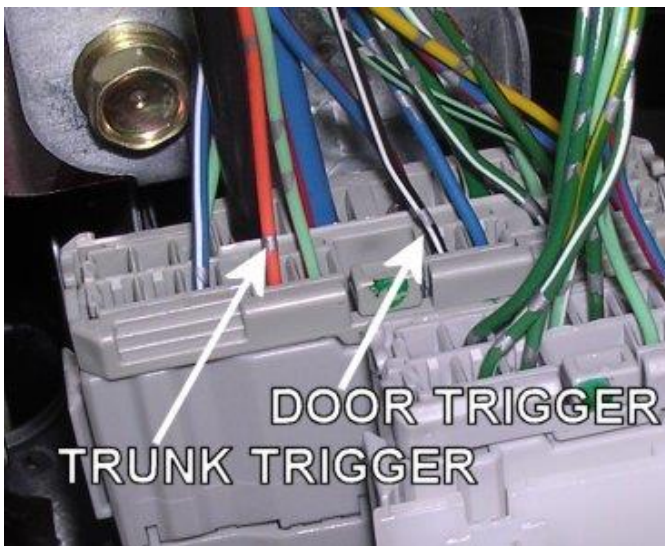

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		EX models equipped with 6x9" in rear
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B		METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

NOTE: The factory radio is a double DIN style that loads through the front of the dash. An installation kit is required for all aftermarket installations.

- 1** Remove the ashtray and remove the screw located in the ashtray cavity securing the radio dash bezel to the dash.
- 2** Remove the cup holder located in front of the console storage compartment and remove the 3 screws from inside the cavity securing the console.
- 3** Carefully pry up on the cover panel located in the console storage pocket with a small screwdriver and remove the 2 screws securing the console.
- 4** Carefully slide the console back far enough to access and remove the 2 screws behind the shifter.
- 5** Carefully pry up on the perimeter of the radio trim bezel starting around the shifter to release the clips securing it to the dash, unplug all connectors and remove the bezel.
- 6** Remove the 2 bolts securing the rear support of the radio to the dash below the radio assembly, pull the radio out of the dash cavity, unplug all connectors and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some modification may be needed for some speakers.

- 1** Remove the cover cap inside the door handle cavity and remove the screw behind.
- 2** Remove the cover cap in the door handle cavity by carefully prying out with a small screwdriver and remove the screw behind.
- 3** Remove the door handle housing assembly by sliding the assembly forward to release it from the door, unplug all connectors, disconnect the door release pull rod and remove the assembly.
- 4** Using a door panel removal tool carefully remove the pushpin fastener from the top inside corner of the door panel.
- 5** Carefully pry on the perimeter of the door panel with a door panel removal tool to release the pin fasteners securing the door panel to the door, lift up to release from the window lip, unplug all connectors and remove the door panel.
- 6** Remove the 3 screws securing the speaker to the adapter, pull the speaker out of the door, unplug the leads, and remove.

REAR SPEAKER REMOVAL


NOTE: An aftermarket 6X9" speaker will fit.

- 1** From inside the trunk, remove the 3 screws securing the speaker grill to the rear deck, then lift up and remove grill from the inside of the vehicle.
- 2** Remove the screws securing the speaker, pull from the cavity, unplug the leads, and remove.

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

ADDITIONAL NOTES

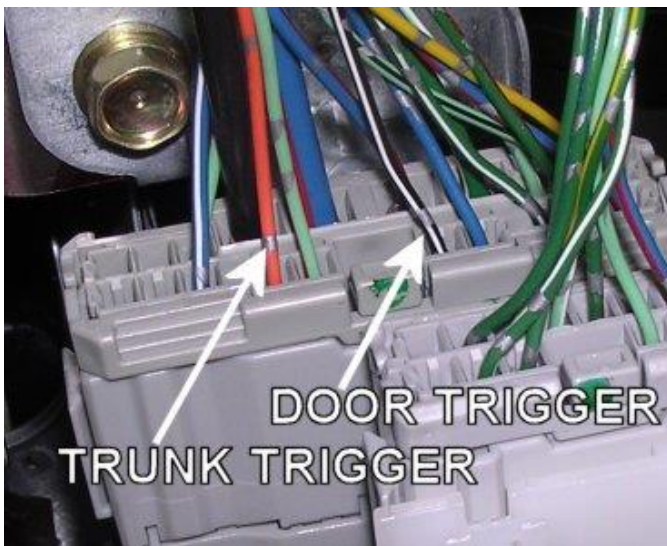

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		EX models equipped with 6x9" in rear
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B		METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

NOTE: The factory radio is a double DIN style that loads through the front of the dash. An installation kit is required for all aftermarket installations.

- 1 Remove the ashtray and remove the screw located in the ashtray cavity securing the radio dash bezel to the dash.
- 2 Remove the cup holder located in front of the console storage compartment and remove the 3 screws from inside the cavity securing the console.
- 3 Carefully pry up on the cover panel located in the console storage pocket with a small screwdriver and remove the 2 screws securing the console.
- 4 Carefully slide the console back far enough to access and remove the 2 screws behind the shifter.
- 5 Carefully pry up on the perimeter of the radio trim bezel starting around the shifter to release the clips securing it to the dash, unplug all connectors and remove the bezel.
- 6 Remove the 2 bolts securing the rear support of the radio to the dash below the radio assembly, pull the radio out of the dash cavity, unplug all connectors and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some modification may be needed for some speakers.

- 1 Remove the cover cap inside the door handle cavity and remove the screw behind.
- 2 Remove the cover cap in the door handle cavity by carefully prying out with a small screwdriver and remove the screw behind.
- 3 Remove the door handle housing assembly by sliding the assembly forward to release it from the door, unplug all connectors, disconnect the door release pull rod and remove the assembly.
- 4 Using a door panel removal tool carefully remove the pushpin fastener from the top inside corner of the door panel.
- 5 Carefully pry on the perimeter of the door panel with a door panel removal tool to release the pin fasteners securing the door panel to the door, lift up to release from the window lip, unplug all connectors and remove the door panel.
- 6 Remove the 3 screws securing the speaker to the adapter, pull the speaker out of the door, unplug the leads, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" speaker will fit.



- 1 From inside the trunk, remove the 3 screws securing the speaker grill to the rear deck, then lift up and remove grill from the inside of the vehicle.
- 2 Remove the screws securing the speaker, pull from the cavity, unplug the leads, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door

INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

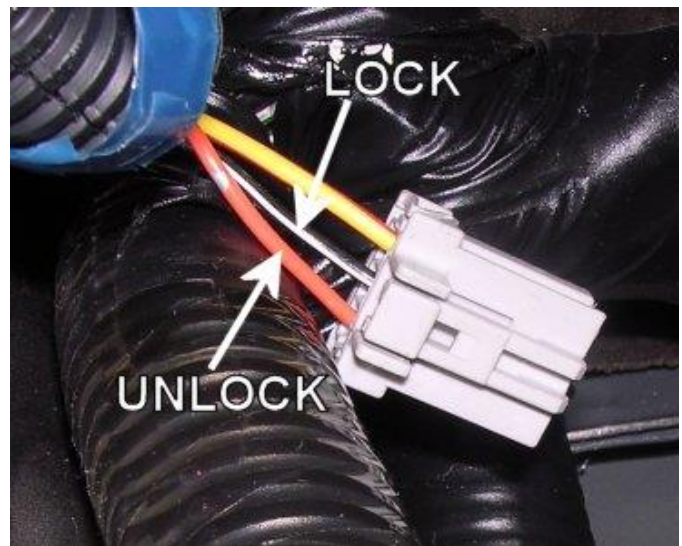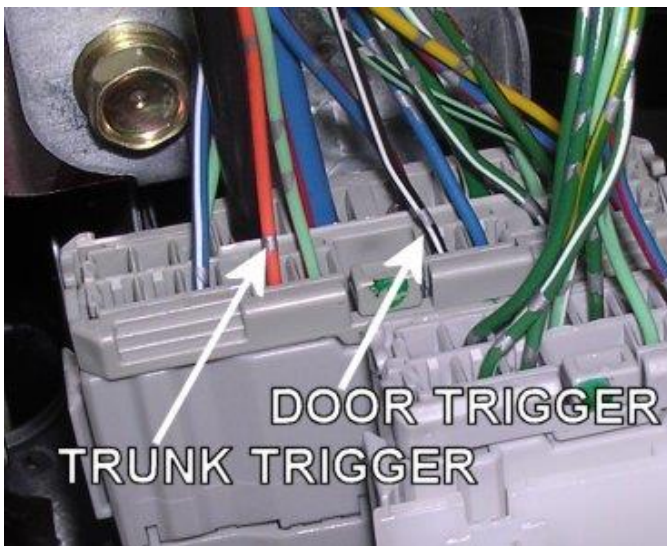

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		EX models equipped with 6x9" in rear
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B		METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

NOTE: The factory radio is a double DIN style that loads through the front of the dash. An installation kit is required for all aftermarket installations.

- 1 Remove the ashtray and remove the screw located in the ashtray cavity securing the radio dash bezel to the dash.
- 2 Remove the cup holder located in front of the console storage compartment and remove the 3 screws from inside the cavity securing the console.
- 3 Carefully pry up on the cover panel located in the console storage pocket with a small screwdriver and remove the 2 screws securing the console.
- 4 Carefully slide the console back far enough to access and remove the 2 screws behind the shifter.
- 5 Carefully pry up on the perimeter of the radio trim bezel starting around the shifter to release the clips securing it to the dash, unplug all connectors and remove the bezel.
- 6 Remove the 2 bolts securing the rear support of the radio to the dash below the radio assembly, pull the radio out of the dash cavity, unplug all connectors and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some modification may be needed for some speakers.

- 1 Remove the cover cap inside the door handle cavity and remove the screw behind.
- 2 Remove the cover cap in the door handle cavity by carefully prying out with a small screwdriver and remove the screw behind.
- 3 Remove the door handle housing assembly by sliding the assembly forward to release it from the door, unplug all connectors, disconnect the door release pull rod and remove the assembly.
- 4 Using a door panel removal tool carefully remove the pushpin fastener from the top inside corner of the door panel.
- 5 Carefully pry on the perimeter of the door panel with a door panel removal tool to release the pin fasteners securing the door panel to the door, lift up to release from the window lip, unplug all connectors and remove the door panel.
- 6 Remove the 3 screws securing the speaker to the adapter, pull the speaker out of the door, unplug the leads, and remove.

REAR SPEAKER REMOVAL



NOTE: An aftermarket 6X9" speaker will fit.

- 1 From inside the trunk, remove the 3 screws securing the speaker grill to the rear deck, then lift up and remove grill from the inside of the vehicle.
- 2 Remove the screws securing the speaker, pull from the cavity, unplug the leads, and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
STARTER WIRE 1	BLACK/WHITE	Ignition harness
IGNITION WIRE 1	BLACK/YELLOW	Ignition harness
ACCESSORY WIRE 1	YELLOW	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	LT.GREEN/BLUE or BLUE/RED	In Blue Connector High In Driver's Kick Panel
PARKING LIGHTS (+)	RED/BLACK	Blue Connector At Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	In Larger Gray Connector Right Of Steering Column
TRUNK TRIGGER (-)	ORANGE	In Larger Gray Connector Right Of Steering Column
POWER DOOR LOCK (-)	BLACK/WHITE	Gray Plug Above Fuse Box Wrapped In Blue Tape
POWER DOOR UNLOCK (-)	ORANGE	Gray Plug Above Fuse Box Wrapped In Blue Tape
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE	Harness In Driver's Kick From Driver Door
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW UP	GREEN	Harness In Driver's Kick From Driver Door
LEFT REAR WINDOW DOWN	GREEN/YELLOW	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW UP	YELLOW/GREEN	Harness In Driver's Kick From Driver Door
RIGHT REAR WINDOW DOWN	YELLOW	Harness In Driver's Kick From Driver Door
INTERFACE	PART NUMBER	NOTES
None required	NA	NA
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

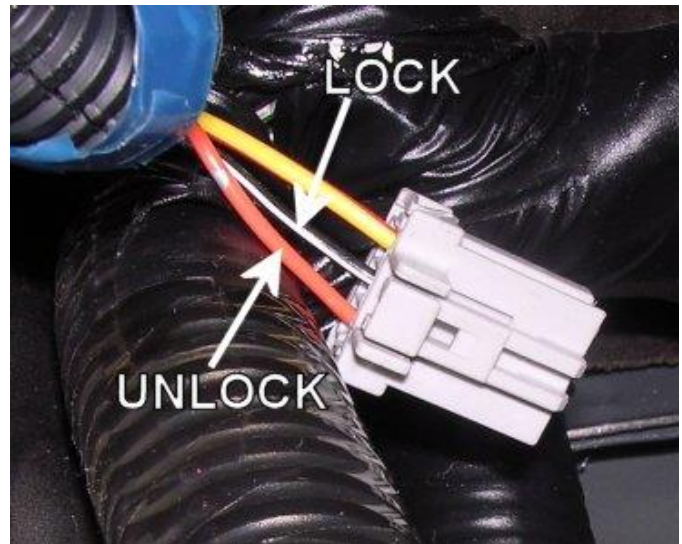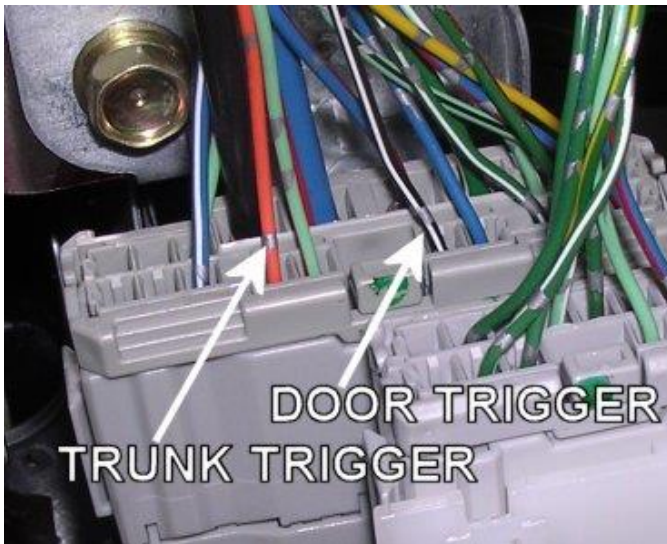

Remote starter and security installations should be attempted by experienced security installers only. Information contained is accurate to the best of our knowledge and experience. Information contained is without any representation of warranty. It is the installer's responsibility to test and confirm all circuits with a digital multi-meter. Proper installation remains the responsibility of the installer. CarAlarmPros assumes no liability or responsibility resulting from an improper installation, even in reliance with the information contained in this guide.

AUDIO WIRING			
WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	BLUE/WHITE	Radio Harness	
RADIO GROUND	YELLOW/RED	Radio Harness	
RADIO SWITCHED	BLACK	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	
FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		EX models equipped with 6x9" in rear
RADIO DASH KIT OPTIONS		RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7890, SCOSCHE HA1563B		METRA 70-1720, SCOSCHE HA02B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

NOTE: The factory radio is a double DIN style that loads through the front of the dash. An installation kit is required for all aftermarket installations.

- 1 Remove the ashtray and remove the screw located in the ashtray cavity securing the radio dash bezel to the dash.
- 2 Remove the cup holder located in front of the console storage compartment and remove the 3 screws from inside the cavity securing the console.
- 3 Carefully pry up on the cover panel located in the console storage pocket with a small screwdriver and remove the 2 screws securing the console.
- 4 Carefully slide the console back far enough to access and remove the 2 screws behind the shifter.
- 5 Carefully pry up on the perimeter of the radio trim bezel starting around the shifter to release the clips securing it to the dash, unplug all connectors and remove the bezel.
- 6 Remove the 2 bolts securing the rear support of the radio to the dash below the radio assembly, pull the radio out of the dash cavity, unplug all connectors and remove the radio.

FRONT SPEAKER REMOVAL

NOTE: An aftermarket 5.25" or 6.5" speaker will fit. Some modification may be needed for some speakers.

- 1 Remove the cover cap inside the door handle cavity and remove the screw behind.
- 2 Remove the cover cap in the door handle cavity by carefully prying out with a small screwdriver and remove the screw behind.
- 3 Remove the door handle housing assembly by sliding the assembly forward to release it from the door, unplug all connectors, disconnect the door release pull rod and remove the assembly.
- 4 Using a door panel removal tool carefully remove the pushpin fastener from the top inside corner of the door panel.
- 5 Carefully pry on the perimeter of the door panel with a door panel removal tool to release the pin fasteners securing the door panel to the door, lift up to release from the window lip, unplug all connectors and remove the door panel.
- 6 Remove the 3 screws securing the speaker to the adapter, pull the speaker out of the door, unplug the leads, and remove.

REAR SPEAKER REMOVAL

NOTE: An aftermarket 6X9" speaker will fit.

- 1 From inside the trunk, remove the 3 screws securing the speaker grill to the rear deck, then lift up and remove grill from the inside of the vehicle.
- 2 Remove the screws securing the speaker, pull from the cavity, unplug the leads, and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
NOTE: If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
NOTE: The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	

FACTORY ALARM DISARM



FACTORY DISARM NO UNLOCK (-)

NOTE: On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers unde		
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
NOTE: Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

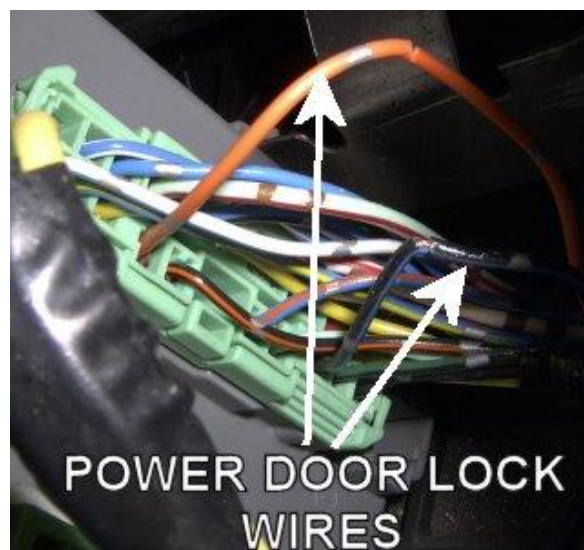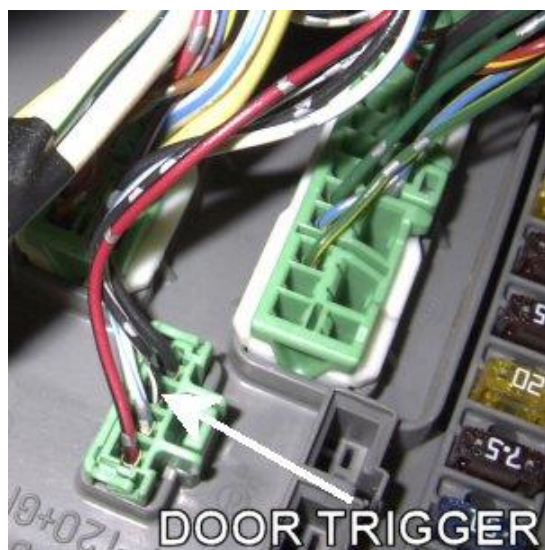

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO CONSTANT	WHITE/GREEN	Radio Harness
RADIO GROUND	BLACK	Radio Harness
RADIO SWITCHED	WHITE/RED	Radio Harness
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7894	70-1721	Not required
Notes: If installing double-DIN stereo use 95-7801 installation kit.			
SCOSCHE	HA1564B	HA08B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

- 1 Remove two (2) screws from the bottom of the radio bezel.
- 2 Carefully remove the hazard switch/clock assembly with a pick tool or panel removal tool.
To avoid scratching the dash while removing the hazard switch/clock assembly, wrap a thin cloth around the panel removal tool.
- 3 Carefully pry away the radio bezel to release the clips securing it to the dash. Unplug all connectors and remove.
- 4 Remove the four (4) screws securing the radio to the dash. Unplug all connectors and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE Factory tweeters are only present on vehicles with premium audio

- 1 With a pick tool or panel removal tool, carefully lift the tweeter grill. Unplug the connector and remove.

DOOR PANEL REMOVAL

- 1 Remove the cap from the door pull cup and remove one (1) screw from behind the cap.
- 2 Slide the door pull cup forward to release. Disconnect the door pull rod and power lock connector and set aside.
- 3 Carefully lift up the power window switch panel. Unplug all connectors and remove.
- 4 Carefully unsnap the side mirror panel from the door.
- 5 Using a panel removal tool, remove a clip from the top front of the door panel.
- 6 Using a panel removal tool, release the clips around the perimeter of the door panel. Lift the panel up to release it from the door. Unplug all connectors and remove.
- 7 Remove three (3) screws securing the speaker to the door. Unplug and remove.

REAR SPEAKER REMOVAL

- 1 From inside the trunk, remove two (2) screws securing each speaker grill
- 2 From inside the vehicle, remove each speaker grill and remove four (4) 8mm bolts securing the speaker. Unplug all connectors and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
NOTE: If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
NOTE: The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	

FACTORY ALARM DISARM



FACTORY DISARM NO UNLOCK (-)

NOTE: On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers unde		
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
NOTE: Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

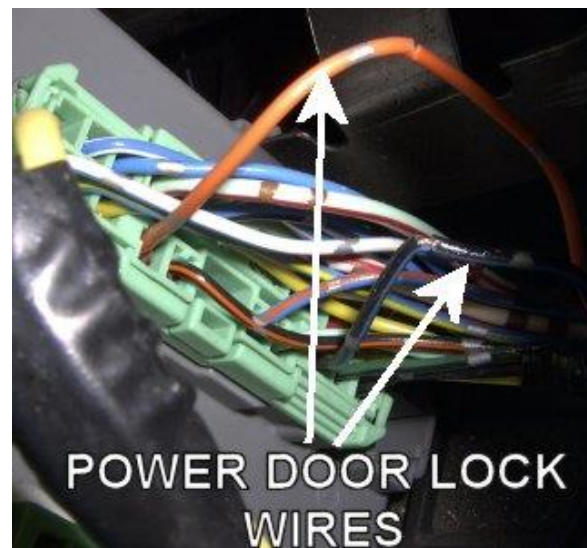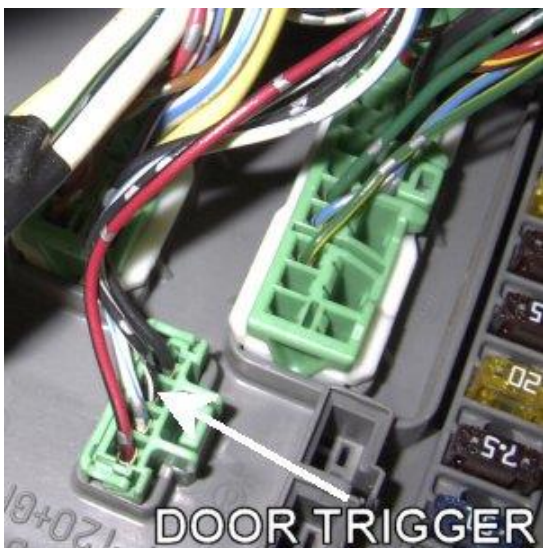

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO CONSTANT	WHITE/GREEN	Radio Harness
RADIO GROUND	BLACK	Radio Harness
RADIO SWITCHED	WHITE/RED	Radio Harness
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7894	70-1721	Not required
Notes: If installing double-DIN stereo use 95-7801 installation kit.			
SCOSCHE	HA1564B	HA08B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

- 1 Remove two (2) screws from the bottom of the radio bezel.
- 2 Carefully remove the hazard switch/clock assembly with a pick tool or panel removal tool.
To avoid scratching the dash while removing the hazard switch/clock assembly, wrap a thin cloth around the panel removal tool.
- 3 Carefully pry away the radio bezel to release the clips securing it to the dash. Unplug all connectors and remove.
- 4 Remove the four (4) screws securing the radio to the dash. Unplug all connectors and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE Factory tweeters are only present on vehicles with premium audio

- 1 With a pick tool or panel removal tool, carefully lift the tweeter grill. Unplug the connector and remove.

DOOR PANEL REMOVAL

- 1 Remove the cap from the door pull cup and remove one (1) screw from behind the cap.
- 2 Slide the door pull cup forward to release. Disconnect the door pull rod and power lock connector and set aside.
- 3 Carefully lift up the power window switch panel. Unplug all connectors and remove.
- 4 Carefully unsnap the side mirror panel from the door.
- 5 Using a panel removal tool, remove a clip from the top front of the door panel.
- 6 Using a panel removal tool, release the clips around the perimeter of the door panel. Lift the panel up to release it from the door. Unplug all connectors and remove.
- 7 Remove three (3) screws securing the speaker to the door. Unplug and remove.

REAR SPEAKER REMOVAL

- 1 From inside the trunk, remove two (2) screws securing each speaker grill
- 2 From inside the vehicle, remove each speaker grill and remove four (4) 8mm bolts securing the speaker. Unplug all connectors and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
NOTE: If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
NOTE: The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	

FACTORY ALARM DISARM



FACTORY DISARM NO UNLOCK (-)

NOTE: On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers unde		
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
NOTE: Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

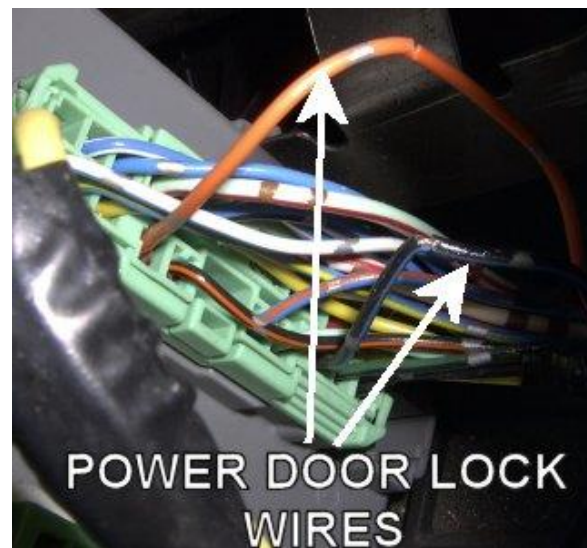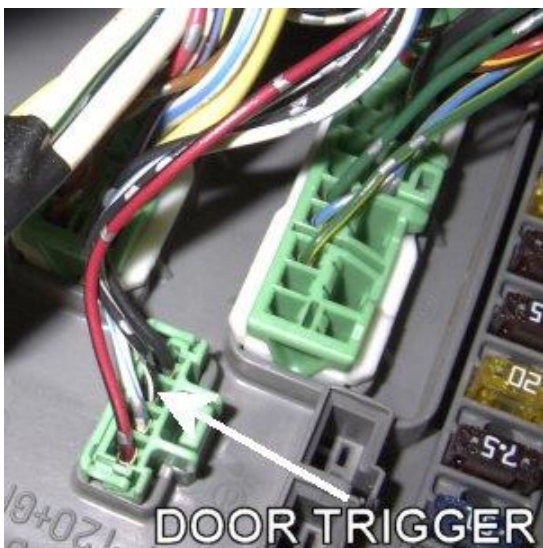

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO CONSTANT	WHITE/GREEN	Radio Harness
RADIO GROUND	BLACK	Radio Harness
RADIO SWITCHED	WHITE/RED	Radio Harness
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7894	70-1721	Not required
Notes: If installing double-DIN stereo use 95-7801 installation kit.			
SCOSCHE	HA1564B	HA08B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

- 1 Remove two (2) screws from the bottom of the radio bezel.
- 2 Carefully remove the hazard switch/clock assembly with a pick tool or panel removal tool.
To avoid scratching the dash while removing the hazard switch/clock assembly, wrap a thin cloth around the panel removal tool.
- 3 Carefully pry away the radio bezel to release the clips securing it to the dash. Unplug all connectors and remove.
- 4 Remove the four (4) screws securing the radio to the dash. Unplug all connectors and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE Factory tweeters are only present on vehicles with premium audio

- 1 With a pick tool or panel removal tool, carefully lift the tweeter grill. Unplug the connector and remove.

DOOR PANEL REMOVAL

- 1 Remove the cap from the door pull cup and remove one (1) screw from behind the cap.
- 2 Slide the door pull cup forward to release. Disconnect the door pull rod and power lock connector and set aside.
- 3 Carefully lift up the power window switch panel. Unplug all connectors and remove.
- 4 Carefully unsnap the side mirror panel from the door.
- 5 Using a panel removal tool, remove a clip from the top front of the door panel.
- 6 Using a panel removal tool, release the clips around the perimeter of the door panel. Lift the panel up to release it from the door. Unplug all connectors and remove.
- 7 Remove three (3) screws securing the speaker to the door. Unplug and remove.

REAR SPEAKER REMOVAL

- 1 From inside the trunk, remove two (2) screws securing each speaker grill
- 2 From inside the vehicle, remove each speaker grill and remove four (4) 8mm bolts securing the speaker. Unplug all connectors and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
NOTE: If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
NOTE: The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	

FACTORY ALARM DISARM



FACTORY DISARM NO UNLOCK (-)

NOTE: On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers unde		
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
NOTE: Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

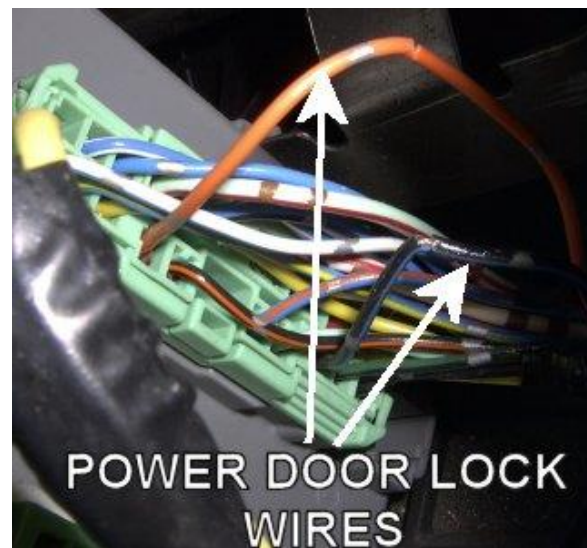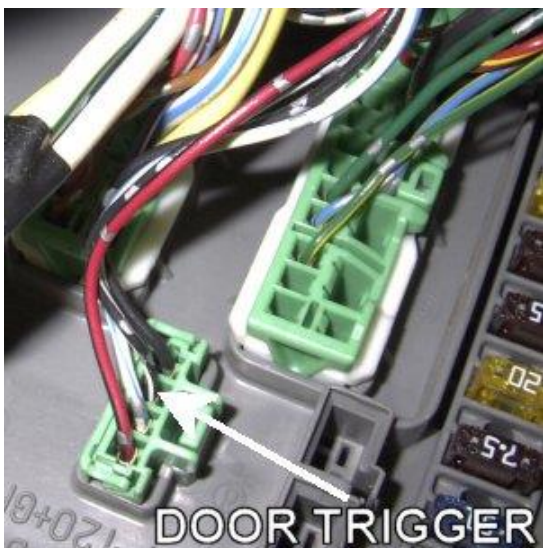

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO CONSTANT	WHITE/GREEN	Radio Harness
RADIO GROUND	BLACK	Radio Harness
RADIO SWITCHED	WHITE/RED	Radio Harness
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7894	70-1721	Not required
Notes: If installing double-DIN stereo use 95-7801 installation kit.			
SCOSCHE	HA1564B	HA08B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

- 1 Remove two (2) screws from the bottom of the radio bezel.
- 2 Carefully remove the hazard switch/clock assembly with a pick tool or panel removal tool.
To avoid scratching the dash while removing the hazard switch/clock assembly, wrap a thin cloth around the panel removal tool.
- 3 Carefully pry away the radio bezel to release the clips securing it to the dash. Unplug all connectors and remove.
- 4 Remove the four (4) screws securing the radio to the dash. Unplug all connectors and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE Factory tweeters are only present on vehicles with premium audio

- 1 With a pick tool or panel removal tool, carefully lift the tweeter grill. Unplug the connector and remove.

DOOR PANEL REMOVAL

- 1 Remove the cap from the door pull cup and remove one (1) screw from behind the cap.
- 2 Slide the door pull cup forward to release. Disconnect the door pull rod and power lock connector and set aside.
- 3 Carefully lift up the power window switch panel. Unplug all connectors and remove.
- 4 Carefully unsnap the side mirror panel from the door.
- 5 Using a panel removal tool, remove a clip from the top front of the door panel.
- 6 Using a panel removal tool, release the clips around the perimeter of the door panel. Lift the panel up to release it from the door. Unplug all connectors and remove.
- 7 Remove three (3) screws securing the speaker to the door. Unplug and remove.

REAR SPEAKER REMOVAL

- 1 From inside the trunk, remove two (2) screws securing each speaker grill
- 2 From inside the vehicle, remove each speaker grill and remove four (4) 8mm bolts securing the speaker. Unplug all connectors and remove.

ALARM & REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition harness
12V IGNITION	BLACK/YELLOW	Ignition harness
SECOND 12V IGNITION	YELLOW	Ignition harness
STARTER	BLACK/WHITE	Ignition harness
NOTE: If interrupting the starter wire for a starter kill, cut the wire between the ignition cylinder and fuse box. DO NOT INTERRUPT THE STARTER WIRE BETWEEN FUSE BOX AND STARTER or the check engine light will come on.		
12V ACCESSORY	WHITE/BLACK	Ignition harness
TACHOMETER WIRE	BLUE	At Distributor Or Test Connector
NOTE: The test connector is located behind the battery on the 4 cylinder, and on a bracket attached to the drivers side strut tower on the 6-cylinder motor. The test connector is a white 2-pin connector, and may be covered by a black rubber boot.		
BRAKE WIRE (+)	GREEN/WHITE	Brake switch
HORN TRIGGER (-)	BLUE/RED or GREEN/BLUE	Harness At Steering column
PARKING LIGHTS (+)	RED/BLACK	Harness At Driver Fuse Box
DOOR TRIGGER (-)	BLACK/WHITE	Harness At Passenger Fuse Box
TRUNK TRIGGER (-)	ORANGE	Harness In Driver's kick panel
FACTORY ALARM ARM	Factory alarm arms and disarms with the door locks on EX models. The LX models arm only with the factory transmitter	

FACTORY ALARM DISARM



FACTORY DISARM NO UNLOCK (-)

NOTE: On EX models, to disarm the factory security without unlocking the doors give a negative pulse to a BLUE wire at the driver's power window switch inside the driver door. On LX models, the wire is at the factory keyless module attached to the drivers unde		
POWER LOCK (-)	BLACK/BLUE	Harness At Passenger Fuse Box
POWER UNLOCK (-)	ORANGE	Harness At Passenger Fuse Box
NOTE: Use BLACK/WHITE for lock and GREEN/RED for unlock on LX models without factory security. These wires can be found in a 2-pin connector near the driver side fuse box. Test door locks using passenger door lock key switch.		
TRUNK RELEASE (+)	WHITE/RED	Harness In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/YELLOW	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/BLUE	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	BLUE/WHITE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	BLUE/YELLOW	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/YELLOW	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	RED/BLUE	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/YELLOW	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	RED/BLUE	At Right Rear Window Switch

ALARM & REMOTE START INTERFACE MODULES

MODULE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

ADDITIONAL NOTES

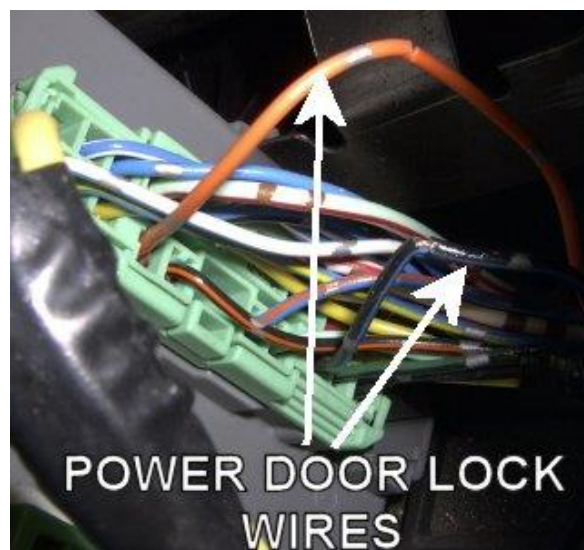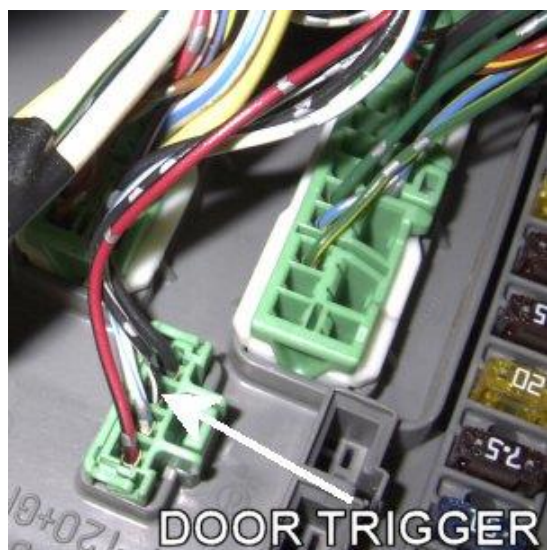

AUDIO WIRING		
WIRE	COLOR	LOCATION
RADIO CONSTANT	WHITE/GREEN	Radio Harness
RADIO GROUND	BLACK	Radio Harness
RADIO SWITCHED	WHITE/RED	Radio Harness
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker

AUDIO SYSTEM NOTES			
FRONT SPEAKERS	REAR SPEAKERS	AMP LOCATION	NOTES
6.5"	6x9"		

STEREO INSTALLATION PARTS			
BRAND	DASH KIT	WIRE HARNESS ADAPTER	ANTENNA ADAPTER
METRA	99-7894	70-1721	Not required
Notes: If installing double-DIN stereo use 95-7801 installation kit.			
SCOSCHE	HA1564B	HA08B	Not required
Please verify all part numbers before ordering.			

RADIO REMOVAL

- 1 Remove two (2) screws from the bottom of the radio bezel.
- 2 Carefully remove the hazard switch/clock assembly with a pick tool or panel removal tool.
To avoid scratching the dash while removing the hazard switch/clock assembly, wrap a thin cloth around the panel removal tool.
- 3 Carefully pry away the radio bezel to release the clips securing it to the dash. Unplug all connectors and remove.
- 4 Remove the four (4) screws securing the radio to the dash. Unplug all connectors and remove.

FRONT SPEAKER REMOVAL

DASH SPEAKER REMOVAL

NOTE Factory tweeters are only present on vehicles with premium audio

- 1 With a pick tool or panel removal tool, carefully lift the tweeter grill. Unplug the connector and remove.

DOOR PANEL REMOVAL

- 1 Remove the cap from the door pull cup and remove one (1) screw from behind the cap.
- 2 Slide the door pull cup forward to release. Disconnect the door pull rod and power lock connector and set aside.
- 3 Carefully lift up the power window switch panel. Unplug all connectors and remove.
- 4 Carefully unsnap the side mirror panel from the door.
- 5 Using a panel removal tool, remove a clip from the top front of the door panel.
- 6 Using a panel removal tool, release the clips around the perimeter of the door panel. Lift the panel up to release it from the door. Unplug all connectors and remove.
- 7 Remove three (3) screws securing the speaker to the door. Unplug and remove.

REAR SPEAKER REMOVAL

- 1 From inside the trunk, remove two (2) screws securing each speaker grill
- 2 From inside the vehicle, remove each speaker grill and remove four (4) 8mm bolts securing the speaker. Unplug all connectors and remove.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
Notes: Test power door lock wires by using the passenger door lock switch.		
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Notes: Test power door lock wires by using the passenger door lock switch.		
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE/GREEN	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7803G, SCOSCHE HA1573B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
Notes: Test power door lock wires by using the passenger door lock switch.		
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Notes: Test power door lock wires by using the passenger door lock switch.		
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556HW or DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE/GREEN	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7803G, SCOSCHE HA1573B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
Notes: Test power door lock wires by using the passenger door lock switch.		
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Notes: Test power door lock wires by using the passenger door lock switch.		
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE/GREEN	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7803G, SCOSCHE HA1573B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
Notes: Test power door lock wires by using the passenger door lock switch.		
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Notes: Test power door lock wires by using the passenger door lock switch.		
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE/GREEN	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7803G, SCOSCHE HA1573B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLACK/YELLOW	Ignition Harness
STARTER	BLACK/WHITE	Ignition Harness
12V ACCESSORY	BLACK/RED	Ignition Harness
SECOND ACCESSORY	WHITE/RED	Ignition Harness
TACHOMETER WIRE	BLUE or BLUE/RED	At Engine Control Module On Front Of Transmission Tunnel With Connectors On Passenger Side
BRAKE WIRE (+)	WHITE/BLACK	Brake Switch
HORN TRIGGER (-)	GREEN/YELLOW	Harness At Steering Column
PARKING LIGHTS (+)	RED/BLACK	Large Connector Above Fuse Box
DOOR TRIGGER (-)	GREEN/RED	Small Green Connector Behind Fuse Box
TRUNK TRIGGER (-)	BLUE/BLACK	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
POWER LOCK (-)	PINK/BLACK	Green Connector At Fuse Box
Notes: Test power door lock wires by using the passenger door lock switch.		
POWER UNLOCK (-)	PINK/BLUE	Same Connector As Power Lock
Notes: Test power door lock wires by using the passenger door lock switch.		
TRUNK RELEASE (+)	YELLOW/GREEN	Bundle Of Wires Running Towards Rear Of Vehicle In Driver's Kick Panel
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE/GREEN	Radio Harness	
RADIO GROUND	BLACK	Radio Harness	
RADIO SWITCHED	YELLOW/RED	Radio Harness	
LEFT FRONT SPEAKER (+)	BLUE/GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	GRAY/BLACK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	RED/GREEN	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	BROWN/BLACK	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	BLUE/YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	GRAY/WHITE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	RED/YELLOW	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	BROWN/WHITE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6x9"		

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7803G, SCOSCHE HA1573B	METRA 70-1721, SCOSCHE HA08B	Not required
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING		
WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLUE	Ignition Harness
STARTER	YELLOW	Ignition Harness
12V ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	RED	Ignition Harness
TACHOMETER WIRE	BROWN	At PCM Module Behind Headlight on Driver's Side
KEY SENSE (-)	WHITE	Ignition Switch Harness
NEUTRAL SAFETY (-)	LIGHT GREEN	At Driver Side Under Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	Brake Switch
HORN TRIGGER (-)	ORANGE	Harness At Steering Column
PARKING LIGHTS (+)	GRAY	At Passenger Side Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BROWN	At Driver's Side Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	GREEN	At Driver's Side Fuse Box
LEFT REAR DOOR TRIGGER (-)	LIGHT GREEN	At Passenger Side Fuse Box
RIGHT REAR DOOR TRIGGER (-)	Light GREEN	At Passenger Side Fuse Box
TRUNK TRIGGER (-)	WHITE	At Driver's Side Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
FACTORY ALARM ARM (-)	ORANGE	At Driver's Window Control Switch
FACTORY ALARM DISARM (-)	BROWN	At Driver's Window Control Switch
Notes: Doors will unlock with a double-pulse to the factory alarm disarm wire		
POWER LOCK (-)	ORANGE	In Driver's Door
POWER UNLOCK (-)	BROWN and WHITE	In Driver's Door
Notes: Unlock requires a double pulse.		
TRUNK RELEASE (+)	ORANGE	In Plug At Fuse Box
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch
INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
RADIO SWITCHED	VIOLET	Radio Harness	
LEFT FRONT SPEAKER (+)	LIGHT GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7875, SCOSCHE HA1707DCDGB	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB
Notes: If equipped with manual climate controls can use METRA 99-7874 or SCOSCHE HA1707DGB dash kits.		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLUE	Ignition Harness
STARTER	YELLOW	Ignition Harness
12V ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	RED	Ignition Harness
TACHOMETER WIRE	BROWN	At PCM Module Behind Headlight on Driver's Side
KEY SENSE (-)	WHITE	Ignition Switch Harness
NEUTRAL SAFETY (-)	LIGHT GREEN	At Driver Side Under Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	Brake Switch
HORN TRIGGER (-)	ORANGE	Harness At Steering Column
PARKING LIGHTS (+)	GRAY	At Passenger Side Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BROWN	At Driver's Side Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	GREEN	At Driver's Side Fuse Box
LEFT REAR DOOR TRIGGER (-)	LIGHT GREEN	At Passenger Side Fuse Box
RIGHT REAR DOOR TRIGGER (-)	Light GREEN	At Passenger Side Fuse Box
TRUNK TRIGGER (-)	WHITE	At Driver's Side Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
FACTORY ALARM ARM (-)	ORANGE	At Driver's Window Control Switch
FACTORY ALARM DISARM (-)	BROWN	At Driver's Window Control Switch
Notes: Doors will unlock with a double-pulse to the factory alarm disarm wire		
POWER LOCK (-)	ORANGE	In Driver's Door
POWER UNLOCK (-)	BROWN and WHITE	In Driver's Door
Notes: Unlock requires a double pulse.		
TRUNK RELEASE (+)	ORANGE	In Plug At Fuse Box
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
RADIO SWITCHED	VIOLET	Radio Harness	
LEFT FRONT SPEAKER (+)	LIGHT GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7875, SCOSCHE HA1707DCDGB	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB

Notes: If equipped with manual climate controls can use METRA 99-7874 or SCOSCHE HA1707DGB dash kits.

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLUE	Ignition Harness
STARTER	YELLOW	Ignition Harness
12V ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	RED	Ignition Harness
TACHOMETER WIRE	BROWN	At PCM Module Behind Headlight on Driver's Side
KEY SENSE (-)	WHITE	Ignition Switch Harness
NEUTRAL SAFETY (-)	LIGHT GREEN	At Driver Side Under Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	Brake Switch
HORN TRIGGER (-)	ORANGE	Harness At Steering Column
PARKING LIGHTS (+)	GRAY	At Passenger Side Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BROWN	At Driver's Side Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	GREEN	At Driver's Side Fuse Box
LEFT REAR DOOR TRIGGER (-)	LIGHT GREEN	At Passenger Side Fuse Box
RIGHT REAR DOOR TRIGGER (-)	Light GREEN	At Passenger Side Fuse Box
TRUNK TRIGGER (-)	WHITE	At Driver's Side Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
FACTORY ALARM ARM (-)	ORANGE	At Driver's Window Control Switch
FACTORY ALARM DISARM (-)	BROWN	At Driver's Window Control Switch
Notes: Doors will unlock with a double-pulse to the factory alarm disarm wire		
POWER LOCK (-)	ORANGE	In Driver's Door
POWER UNLOCK (-)	BROWN and WHITE	In Driver's Door
Notes: Unlock requires a double pulse.		
TRUNK RELEASE (+)	ORANGE	In Plug At Fuse Box
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
RADIO SWITCHED	VIOLET	Radio Harness	
LEFT FRONT SPEAKER (+)	LIGHT GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7875, SCOSCHE HA1707DCDGB	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB
Notes: If equipped with manual climate controls can use METRA 99-7874 or SCOSCHE HA1707DGB dash kits.		
Please verify all part numbers before ordering.		

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLUE	Ignition Harness
STARTER	YELLOW	Ignition Harness
12V ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	RED	Ignition Harness
TACHOMETER WIRE	BROWN	At PCM Module Behind Headlight on Driver's Side
KEY SENSE (-)	WHITE	Ignition Switch Harness
NEUTRAL SAFETY (-)	LIGHT GREEN	At Driver Side Under Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	Brake Switch
HORN TRIGGER (-)	ORANGE	Harness At Steering Column
PARKING LIGHTS (+)	GRAY	At Passenger Side Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BROWN	At Driver's Side Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	GREEN	At Driver's Side Fuse Box
LEFT REAR DOOR TRIGGER (-)	LIGHT GREEN	At Passenger Side Fuse Box
RIGHT REAR DOOR TRIGGER (-)	Light GREEN	At Passenger Side Fuse Box
TRUNK TRIGGER (-)	WHITE	At Driver's Side Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
FACTORY ALARM ARM (-)	ORANGE	At Driver's Window Control Switch
FACTORY ALARM DISARM (-)	BROWN	At Driver's Window Control Switch
Notes: Doors will unlock with a double-pulse to the factory alarm disarm wire		
POWER LOCK (-)	ORANGE	In Driver's Door
POWER UNLOCK (-)	BROWN and WHITE	In Driver's Door
Notes: Unlock requires a double pulse.		
TRUNK RELEASE (+)	ORANGE	In Plug At Fuse Box
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
RADIO SWITCHED	VIOLET	Radio Harness	
LEFT FRONT SPEAKER (+)	LIGHT GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7875, SCOSCHE HA1707DCDGB	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB

Notes: If equipped with manual climate controls can use METRA 99-7874 or SCOSCHE HA1707DGB dash kits.

Please verify all part numbers before ordering.

ALARM REMOTE START WIRING

WIRE	COLOR	LOCATION
12V CONSTANT	WHITE	Ignition Harness
12V IGNITION	BLUE	Ignition Harness
STARTER	YELLOW	Ignition Harness
12V ACCESSORY	ORANGE	Ignition Harness
SECOND ACCESSORY	RED	Ignition Harness
TACHOMETER WIRE	BROWN	At PCM Module Behind Headlight on Driver's Side
KEY SENSE (-)	WHITE	Ignition Switch Harness
NEUTRAL SAFETY (-)	LIGHT GREEN	At Driver Side Under Dash Fuse Box
BRAKE WIRE (+)	LIGHT GREEN	Brake Switch
HORN TRIGGER (-)	ORANGE	Harness At Steering Column
PARKING LIGHTS (+)	GRAY	At Passenger Side Fuse Box
LEFT FRONT DOOR TRIGGER (-)	BROWN	At Driver's Side Fuse Box
RIGHT FRONT DOOR TRIGGER (-)	GREEN	At Driver's Side Fuse Box
LEFT REAR DOOR TRIGGER (-)	LIGHT GREEN	At Passenger Side Fuse Box
RIGHT REAR DOOR TRIGGER (-)	Light GREEN	At Passenger Side Fuse Box
TRUNK TRIGGER (-)	WHITE	At Driver's Side Fuse Box
HOOD TRIGGER (-)	YELLOW/RED	At Factory Hood Pin Switch
FACTORY ALARM ARM (-)	ORANGE	At Driver's Window Control Switch
FACTORY ALARM DISARM (-)	BROWN	At Driver's Window Control Switch
Notes: Doors will unlock with a double-pulse to the factory alarm disarm wire		
POWER LOCK (-)	ORANGE	In Driver's Door
POWER UNLOCK (-)	BROWN and WHITE	In Driver's Door
Notes: Unlock requires a double pulse.		
TRUNK RELEASE (+)	ORANGE	In Plug At Fuse Box
LEFT FRONT WINDOW UP	RED/BLACK	At Driver Window Motor Inside Door
LEFT FRONT WINDOW DOWN	RED/YELLOW	At Driver Window Motor Inside Door
RIGHT FRONT WINDOW UP	RED/BLUE	At Right Front Window Switch
RIGHT FRONT WINDOW DOWN	RED	At Right Front Window Switch
LEFT REAR WINDOW UP	RED/WHITE	At Left Rear Window Switch
LEFT REAR WINDOW DOWN	BLUE/BLACK	At Left Rear Window Switch
RIGHT REAR WINDOW UP	RED/WHITE	At Right Rear Window Switch
RIGHT REAR WINDOW DOWN	BLUE/BLACK	At Right Rear Window Switch

INTERFACE	PART NUMBER	NOTES
Transponder Immobilizer Bypass Module	DEI 556UW	Required when installing a remote start system
Please verify all part numbers before ordering.		

AUDIO WIRING

WIRE	COLOR	LOCATION	NOTES
RADIO CONSTANT	WHITE	Radio Harness	
RADIO GROUND	BROWN	Radio Harness	
RADIO SWITCHED	VIOLET	Radio Harness	
LEFT FRONT SPEAKER (+)	LIGHT GREEN	Radio Harness Or Speaker	
LEFT FRONT SPEAKER (-)	PINK	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (+)	GRAY	Radio Harness Or Speaker	
RIGHT FRONT SPEAKER (-)	RED	Radio Harness Or Speaker	
LEFT REAR SPEAKER (+)	YELLOW	Radio Harness Or Speaker	
LEFT REAR SPEAKER (-)	BROWN	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (+)	BLUE	Radio Harness Or Speaker	
RIGHT REAR SPEAKER (-)	ORANGE	Radio Harness Or Speaker	

FRONT SPEAKERS SIZE	REAR SPEAKERS SIZE	AMP LOCATION	NOTES
6.5"	6.5"		If equipped, subwoofer is 8"

RADIO DASH KIT OPTIONS	RADIO WIRE HARNESS OPTIONS	ANTENNA ADAPTER OPTIONS
METRA 99-7875, SCOSCHE HA1707DCDGB	METRA 70-1729, SCOSCHE HA11B	METRA 40-HD10, SCOSCHE HAAB

Notes: If equipped with manual climate controls can use METRA 99-7874 or SCOSCHE HA1707DGB dash kits.

Please verify all part numbers before ordering.