

MAINTENANCE SCHEDULE

NORMAL SERVICE INTERVALS	
5,000 miles*	Α
7,500 miles	A
15,000 miles	A
22,500 miles	A
30,000 miles	A B
37,500 miles	A
45,000 miles	A C
52,500 miles	A
60,000 miles	A B D
67,500 miles	A
75,000 miles	A C
82,500 miles	A
90,000 miles	A B

Tip: For additional service intervals and complete details, see Owner's Manual

Maintenance notes:

Rotate tires every 7,500 miles or sooner if needed

- A. Replace: Engine oil/replace filter
- B. Inspect: Cooling system, drive belts, fuel lines and hoses, idle speed, brake lines and hoses, disc and drum brakes, steering operation and linkages, front suspension ball joints, driveshaft dust boots, chassis and body bolts and nuts, exhaust system heat shields, refrigerant amount and compressor operation Replace: Air filter, spark plugs
- C. Replace: Engine coolant
- D. Inspect: Engine valve clearance, hoses and tubes for emission system; inspect/replace engine timing belt[†]
 - *Special operating conditions †See Owner's Manual

This Quick Tips® guide is provided by Mazda to make your Mazda ownership experience more convenient. It is not intended to replace your Owner's Manual.

If you have any questions about your vehicle, you are invited to contact your local dealer.


Or if you need additional help, feel free to call our

Customer Assistance Center at 1-800-222-5500


Monday through Friday, 9 am-4:45 pm, Pacific 9 am-5:45 pm, Eastern/Central



©2002 Calcar, Quick Tips® is a trademark of Calcar, made in USA 8/02 83.95M GL Mazda North American Operations reserves the right to change product specifications at any time without incurring obligations.

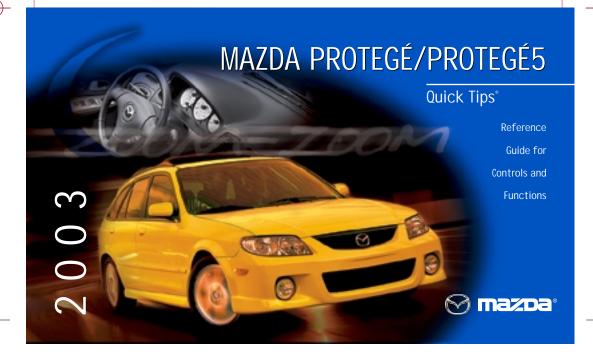



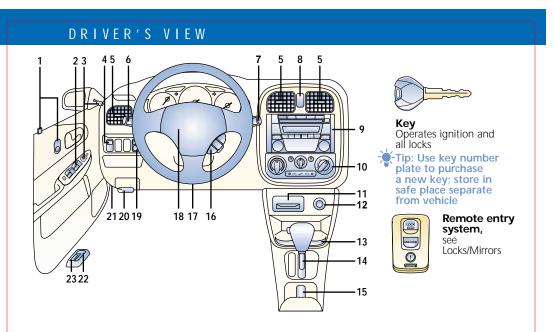

- 1. Door locks, see Locks
- 2. Power window switches, see Switches
- 3. Mirror controls, see Locks/Mirrors
- 4. Fog light switch Push to activate/deactivate; functions only with headlight
- low beams on 5. Air vents To open/close: Rotate thumbwheel up/down

To direct air up/down: Move vent To direct air side-to-side: Move thumbwheel in center of vent

6. Turn signal/lighting control lever,

see Driver Controls

7. Wiper/washer control

see Driver Controls

- 8. A Hazard warning switch Push to activate/deactivate
- 9. Audio system, see Audio Systems
- 10. Climate control panel, see Climate Controls
- 11. Ashtray
- 12. Cigarette lighter
- 13. Cup holders
- 14. Gearshift lever, see Transaxle
- 15. Parking-brake lever To engage: Pull up

To release: Pull up slightly, while depressing button at front of lever, lower parking brake lever

- 16. Cruise control*, see Switches
- 17. Tilt steering wheel lever Pull lever down to unlock column, adjust wheel position; push lever up to lock
- 18. Horn/Air bag To beep: Press
- 19. Vinstrument cluster lighting To brighten/dim: Turn
- thumbwheel up/down 20. A Hood release handle Pull to open partially
- 21. Fuse panel
- 22. 🗪 Remote trunk-lid release (Protegé Sedan) To open: Pull lever up
- 23. In Fuel-filler lid release To open: Pull lever up

*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

Driver's **View**



Instrument Cluster

INSTRUMENT CLUSTER

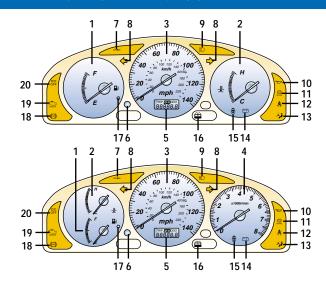

Instrument Cluster

Instrument Cluster with Tachometer*

GAUGES

- 1. Fuel gauge 13.2-gallon/50-liter tank (1.6L engine) 14.5-gallon/55-liter tank
- 2. Engine coolant temperature gauge Stop car if above normal range, turn off engine, let vehicle cool; check coolant level when safe

(1.8L and 2.0L engines)

- 3. Speedometer
- 4. Tachometer
- 5. Odometer/Trip odometer display
- 6. Odometer/Trip odometer selector

Press to view odometer; press again to reset trip odometer A/B settings

WARNING LIGHTS

- 7. CRUISE Cruise control on* Lights when cruise control is set
- 8. ←→ Turn signals/hazard warning on
- 9. D High beams on
- 10. Engine oil-pressure warning light
 Stop car when safe and turn off engine; check oil level
- 11. Brake system
 Parking brake on/low brake fluid
- 12. Always fasten seat belts
- 13. Air bag/front seat belt pretensioner system If light flashes or stays on, the air bags/front seat belt pretensioners may not operate in an accident; dealer inspection required

14.

Charging system warning light

Charging system malfunction; dealer inspection required

- 15. 🕯 Door-ajar
- 16. Low washer fluid level*
- 17. Low fuel
- 18. Anti-lock Brake
 System (ABS)*
 ABS malfunction, normal
 brakes only; dealer
- inspection required

 19. Check engine
 Dealer inspection required
- **20.** OFF Overdrive off indicator*, see Transaxle

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Instrument Cluster

\oplus

Driver Controls

DRIVER CONTROLS




Turn signal/lighting control lever

OFF = Lights off

⇒€ = Tail, dashboard and parking lights on: Rotate knob (1) to first notch

Tail, dashboard, parking and head lights on: Rotate knob (1) to second notch High beams on/off: Push lever forward for high beams/pull back for low

 To flash high beams: Pull lever back slightly and release Turn signals right/left: Move lever up/down



Wiper/washer control lever

Single wipe: Push lever up Washer: Pull back, also operates wipers

 
Intermittent wiper: One click down

Normal wiper speed: Two clicks down

High-speed wiper: Three clicks down


Rear window wiper/washer (Protegé5)

To activate rear interval wiper: Rotate knob (2) up to INT To activate rear normal speed wiper: Rotate knob (2) up to ON To activate rear washer: Rotate knob (2) to (3) and release



Cruise control*

 Operates above 25 mph Press MAIN (1) to turn system on/off




To accelerate: Press and hold RESUME/ACCEL (3); release button at desired speed

To decelerate: Press and hold SET/COAST (2); release button at desired speed

Incremental acceleration: Press and release (3); each tap = plus 1 mph

Incremental deceleration: Press and release (2); each tap = minus 1 mph

To cancel: Press CANCEL (4) or MAIN (1); tap brake pedal or depress clutch pedal*

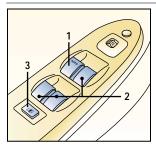

Power windows

Ignition must be on

All windows controlled from the driver's armrest; passenger doors have separate switches

- 1. Driver's window: One-touchdown; push down firmly and release, window goes down all the way: pull switch back briefly to stop: press lightly and hold for normal operation
- 2. Passenger window switches: Push down and hold to open, pull back and hold to close
- 3. Power window lockout switch: Press down until click, only driver's window switches operate; press again and passenger window switches function again

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Switches



Locks

LOCKS




Manual door locks

1. Lock tab

To lock: Press down on tab To unlock doors: Pull up tab

 Tip: Doors can be locked with key in ignition (chime sounds to alert you to key in ignition when any door is open)




Power door lock switches

To lock/unlock all doors: Press bottom/top of door switch (2)


To lock doors without key: With door open, press LOCK on door switch (2), exit car, close doors To unlock: Use key to unlock either front door and hold in unlock position, all doors will unlock

 All doors lock automatically when either front door is locked with a key




Childproof locks

 Located at the edge of rear doors To activate: Slide switch (3) outward; door opens from outside only To cancel: Slide switch (3) inward



Remote entry system

 Functions only with ignition in ACC or LOCK



Door locking/unlocking To lock doors: Press LOCK (1); pressing again within 5 seconds causes doors/liftgate to re-lock, horn to beep once and hazard warning lights to flash once if doors/liftgate properly closed To unlock: Press UNLOCK (2) for driver's door; press again within 5 seconds for all other doors Panic alarm: Press ! (3); horn sounds, parking lights flash and illuminated entry system

Dual power mirrors*

Ignition must be in ACC or ON To adjust left/right mirror: Press control switch (4) left/right, press switch (5) in direction of desired mirror movement

Tip: To lock mirrors in place, move control switch to center position

turns on; press any button on transmitter to stop

After unlocking with the transmitter, all doors or the liftgate will automatically lock if a door or the liftgate is not opened within about 30 seconds

Illuminated entry system Activates interior lights when dome light switch set to DOOR position; lights off after driver's door is locked or ignition in ON position



Manual mirrors

To adjust: Mové knob (6) on door

*Denotes optional equipment

Always check the Owner's Manual for more operating information and safety features

Locks/ **Mirrors**

Seats

SEATS

Seat controls

- 1. Fore-aft adjustment Lift lever and hold, slide seat, release lever
- 2. Raise/lower front of seat Turn dial backward/forward
- 3. Raise/lower rear of seat Turn dial backward/forward
- 4. Seat back angle To adjust: Lift and hold lever, lean forward or backward to tilt seat, release lever
- 5. Head restraint To raise/lower: Pull up/ hold release button (6) and push down

Tip: Side air bags* deploy from outboard side of front seatbacks

Shoulder belt height adjustment

To raise/ lower belt: Push button (7), slide up/down, release button



⚠ WARNINGS: Do not adjust seats while driving

 
Safety belts must always be worn when vehicle is in motion

Air bags are supplemental and do not replace safety belt usage

Always wear your safety belt and properly secure children 12 and under in the rear seat

Never place rear-facing infant-safety seat in front of any air bag, an infant is in serious danger of being injured or killed

If you choose to install a forward-facing child-safety seat in the front seating position, move vehicle seat as far back as possible



Child-safety seat

To install in rear outboard seats: Use dual locking mode retractor seat belts; see Owner's Manual for proper installation and child seat tether and LATCH system instructions

⚠ WARNING: Use age appropriate child restraints, see Owner's Manual and state or province laws

 
Dual locking mode lap/shoulder belt retractor (front passenger/rear out-board seat belts only)

Emergency locking mode: Belt locks only on hard braking/ cornering or impacts of about 5 mph or higher

Automatic locking mode must be used when installing child restraint seat

To activate: Pull webbing fully out of retractor; belt will only tighten

To disengage: Unbuckle belt and allow webbing to retract fully; for complete details see Owner's Manual



Split fold-down rear seatbacks

To fold: Pull release knob (3), push seatback down

To return and lock: Push seatback firmly until latched

Folding rear seat bottoms[†]
To fold rear seats flat: Remove head restraints (1), pull strap (2) and lift end of seat bottom up and forward; lift seat bottom forward, pull release knob (3), purb scattering forward. push seatback down

*Denotes optional equipment

 
Always check the Owner's Manual for more operating information and safety features

Seats


Climate Controls

CLIMATE CONTROLS/TRANSAXLE

- 1. Temperature control Rotate knob to blue for cool, red for warm
- 2. Air Conditioning* Press to activate/deactivate



 - 3. Fan control Rotate knob right/left to increase/decrease speed, turn to **0** to shut system off
- 4. Air Intake Control Slide lever to select = recirculate inside air; use for maximum heating/ cooling or to keep odors out = fresh air
- ⚠ WARNING: Do not use 👄 position in cold weather; windows will fog and hamper vision



- 5. Rear window defogger Press to activate/deactivate
- 6. Air flow selections

= air to dash

= air to dash and floor

air to floor نری = air to floor and windshield

 
= defrost, air to windshield

Control positions for maximum defrost

Fan to maximum, temperature to maximum hot, air flow selector knob to W

Tips: When wselected, air is dried when temperature is above 39°F

To prevent moisture buildup, never drive with system off Objects placed under the front seats may interfere with air flow to the rear



Automatic Transaxle* Gearshift must be in Park or Neutral to start engine; it must be in Park to remove ignition key

P = Park

To move gearshift from Park: Press firmly on brake pedal, then press release button (1) on gearshift

R = Reverse

N = Neutral No gear engaged (Overdrive)

For normal driving: Shifts through four forward gears automatically

(Overdrive Off)

Provides extra power and increased engine braking Stops 3rd-4th gear cycling in stop/go driving

Overdrive Switch

Press (2) to enable/disable overdrive gear

2 = Second Gear

Provides extra power and increased engine braking Use to reduce wheel spin when starting on slippery surfaces

1 = First Gear

Provides extra power and increased engine braking



Manual shift mode* Move shift lever from D to M; then M to D for

M (Manual)

Manual gear selection is achieved by moving shifter back and forward Shift and gear position indicator located in the instrument panel, M will be illuminated for manual mode, numeral for gear position will be shown below shift position indicator



Manual transaxle Depress clutch pedal to start engine and change gears

Tips: Do not shift into 1st above 20 mph or clutch failure could occur

Resting your foot on clutch pedal while driving or using the clutch to hold your vehicle at a standstill while waiting on a hill may reduce clutch life

*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

automatic mode

Transaxle

Audio **Systems**

RADIO/COMPACT DISC

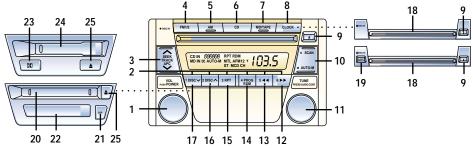

1. Power/Volume

Press to turn on/off; rotate to increase/decrease volume

2. Memory preset buttons To set: Tune to station, press and hold until beep is heard

8. Clock

To set: Press (8) and hold until beep is heard; press upper/ lower portion of (10) to advance Hours/Minutes; press (8) again to set

9. CD eject button

14. Program Random[†]

Press to enable/cancel random play

15. Repeat

Press to replay current CD/ tape selection

16. Disc up ^ †

Press to skip forward to beginning of next CD

3. SEEK/TRACK/APC

Radio: Press ∧ / ∨ to automatically seek higher/ lower frequency CD: Press ∧ / ✓ to select next/previous track Tape: Press ∧ / ∨ to automatically advance tape to beginning of next selection/ replay selection; to stop this operation, press button again

4. FM1/2

Press to select between FM1/FM2 station preset buttons (2)

Press to select AM frequency band

6. CD

Press to play CD

7. MD*/Tape*

Press to play Mini-disc Player/ cassette tape

10. Scan/Auto-Memory

Press to briefly sample next listenable selections; functions in all modes

Radio: Press and hold until a beep is heard; system automatically scans and temporarily stores six strong stations in each band; press again to cancel

11. Tuning/Audio Control

Tune: Rotate counterclockwise/clockwise for lower frequency/higher frequency Audio control: Press to select BASS/MID/TREBLE/FADE/ BALANCE; rotate right/left to adjust selected feature

12. Fast forward ▶▶

Press to fast forward through a track

13. Reverse ◀◀

Press to reverse through a track

17. Disc down ✓ †

Press to skip back to beginning of previous CD

18. CD slot* 19. LOAD*

To load multiple discs: Press and hold LOAD (19) until beep is heard; insert CD when "In" is displayed To eject disc: Press Eject (9) To eject specific disc: Press and hold Eject (9) until beep is heard; within five seconds press the within five seconds press the desired tray number 1-6 (2)

20. Mini Disc slot*

21. DISP*

22. Mini Disc display*
23. Dolby® Noise Reduction* Reduces tape noise and hiss, press to activate/deactivate

24. Cassette door*

25. Eject button*

 
Denotes optional equipment †For use with cassette tape player, MD player, or CD changer

Always check the Owner's Manual for more operating information and safety features


Audio Systems

Interior Lights


INTERIOR LIGHTS



 - 1. Interior light
- 2. Interior light switch ON = Light always on OFF = Light off DOOR = Light on when door is open



 
- 3. Map/reading lights*
- 4. Map/reading light switches* Press on/off
- 5. Tilt sunroof* To tilt/close rear of sunroof: Press rear/front of switch



6. Sunroof* To open/close: Press and hold rear/front of switch



 
7. Cargo light* ON = Light on with liftgate open OFF = Light off



Protegé Sedan

Trunk

 - **1. Temporary spare tire**Stored under panel in trunk;
 to change flat tire: Follow instructions in Owner's Manual
- **⚠WARNING:** Do not exceed 50 mph with temporary spare
- Tip: Do not use temporary spare tire for long periods of time
- 2. Tool bag
- 3. Jack 4. Jack handle
- 5. Cargo light
- 6. Cargo area cover
- 7. Cargo securing loops
- 8. Rear seatback lock Lock or unlock: Move lever



Protegé5



9. Emergency trunk release

(Protegé Sedan) Allows you to escape should you become locked in trunk

To open: Pull "T" handle; "T" handle will glow if exposed to light

*Denotes optional equipment


Always check the Owner's Manual for more operating information and safety features

Trunk



Under Hood

UNDER HOOD

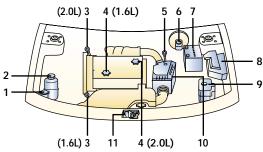

1.6/2.0-liter Engine

Tip: Check all fluids with vehicle parked on a level surface and engine off unless otherwise stated

1. Windshield washer reservoir Fill with windshield washer fluid

Tip: Clutch uses same

reservoir as brakes 7. Battery

 
8. Fuse panel Push latch in, lift cover

5. Automatic transaxle fluid dipstick*

marks on the dipstick 6. Brake/clutch fluid reservoir Fill to MAX mark with DOT 3 fluid; check with cap on

Check with engine on and at operating temperature; fluid must be between the indicator

- 9. Engine coolant reservoir Level should be between COLD FILL RANGE indicator marks
- coolant reservoir cap while engine is running or hot; remove only when safe



2. Power steering fluid reservoir

Level should be between MIN and MAX lines

Break-in period

First 600 miles: Avoid heavy braking and acceleration; drive at varying road and engine speeds

-Tip: Follow the same procedures with newly overhauled engine or when brakes are replaced

Anti-lock Brake System (ABS)* When brake pedal is pressed, ABS automatically reduces hydraulic pressure to any wheel on the verge of locking up

You may feel a slight pulsing of the brake pedal and hear a clicking noise; this tells you the ABS is functioning properly; increase pressure on pedal for maximum braking

4. Engine oil filler cap

Fluid should be between

fill above F

F and L on dipstick; do not

See Owner's Manual for recommended engine oil

-Tips: Maintain constant pressure on the brake pedal Do not pump the brakes

Tire economy and tips

Check pressure at least monthly when tires are cold

Tires should be of the same make, kind and dimension

Maintain correct front-end alignment and tire balance; rotate tires at 3,750-mile intervals; see Owner's Manual for rotation chart

Tire pressure

Decal on driver's door provides tire pressure information

*Denotes optional equipment

10. Air filter

11. Hood latch

Pull up to release hood

Tire chains*†

Use only SAE Class "S" chains; install on front tires as tightly as possible and re-tighten periodically; do not use chains on dry roads or with aluminum wheels, damage may occur, use on steel wheels only

Gasoline Unleaded regular 87-octane minimum 1.6L engine: 13.2-gallon/ 50-liter tank; 2.0L engine: 14.5-gallon/ 55-liter tank

Always check the Owner's Manual for more operating information and safety features