


# 2008 Cadillac SRX Navigation System

---

<b>Overview</b> .....	1-1	<b>Navigation Audio System</b> .....	3-1
Overview .....	1-2	Navigation Audio System .....	3-2
<b>Features and Controls</b> .....	2-1	<b>Voice Recognition</b> .....	4-1
Features and Controls .....	2-2	Voice Recognition .....	4-2
		<b>Index</b> .....	1

---

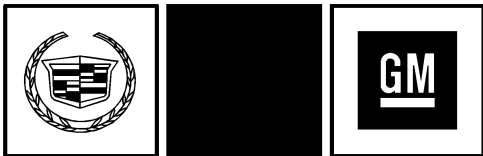

GENERAL MOTORS, GM, the GM Emblem, CADILLAC, the CADILLAC Crest & Wreath, and the name SRX are registered trademarks of General Motors Corporation.

Dolby<sup>®</sup> is manufactured under license from Dolby<sup>®</sup> Laboratories. Dolby<sup>®</sup> and the double-D symbol are trademarks of Dolby<sup>®</sup> Laboratories.

The information in this manual supplements the owner manual. This manual includes the latest information available at the time it was printed. We reserve the right to make changes in the product after that time without notice. For vehicles first sold in Canada, substitute the name General Motors of Canada Limited for Cadillac Motor Car Division whenever it appears in this manual.

Keep this manual with the owner manual in the vehicle, so it will be there if it is needed. If the vehicle is sold, leave this manual in the vehicle.



DTS and DTS Digital Surround are registered trademarks of Digital Theater Systems, Inc.

Litho in U.S.A.  
Part No. 25833233 A First Printing

©2007 General Motors Corporation. All Rights Reserved.

## Canadian Owners

A French language copy of this manual can be obtained from your dealer/retailer or from:

Helm, Incorporated  
P.O. Box 07130  
Detroit, MI 48207  
1-800-551-4123  
[www.helminc.com](http://www.helminc.com)

## Propriétaires Canadiens

On peut obtenir un exemplaire de ce guide en français auprès de concessionnaire ou à l'adresse suivante:

Helm Incorporated  
P.O. Box 07130  
Detroit, MI 48207  
1-800-551-4123  
[www.helminc.com](http://www.helminc.com)




# Section 1 Overview

---





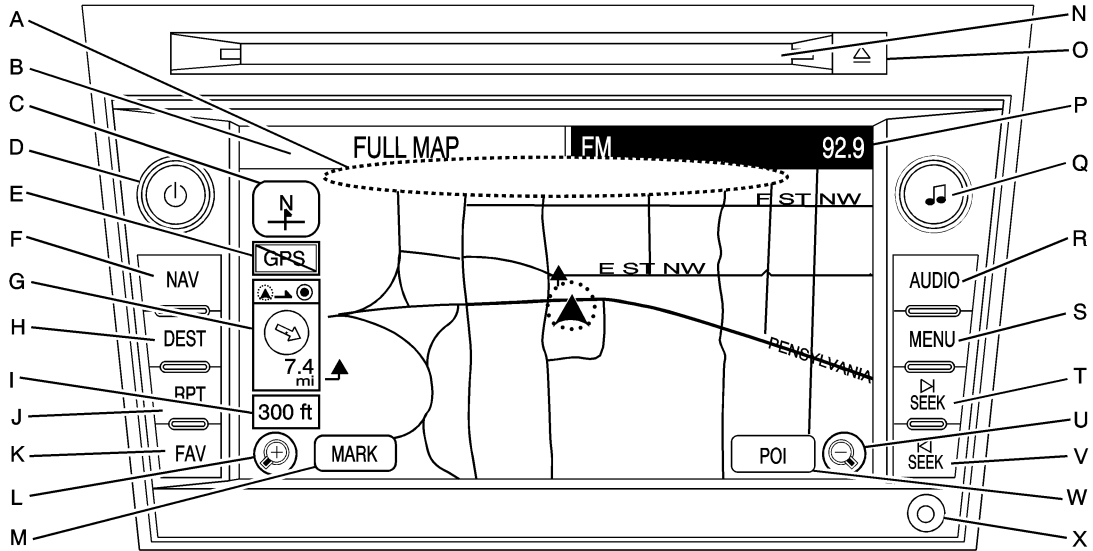

<b>Overview</b> .....	1-2	Getting Started .....	1-4
Navigation System Overview .....	1-2	Cleaning the Video Screen .....	1-11

# Overview

## Navigation System Overview



Screen shown with Map Disc Inserted

- A. Map DVD Slot. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
- B. FULL MAP Touch Screen Button. See “NAV ” under “Hard Keys” under *Using the Navigation System on page 2-2* for more information.
- C. North Up/Heading Up Symbol. See *Symbols on page 2-8* for more information.
- D.  (Power/Volume) Knob. See “Hard Keys” under *Using the Navigation System on page 2-2* for more information.
- E. No GPS Symbol. See *Symbols on page 2-8* for more information.
- F. NAV (Navigation) Key. See “Hard Keys” under *Using the Navigation System on page 2-2* for more information.
- G. Straight Line to Distance Symbol. See *Symbols on page 2-8* for more information.
- H. DEST (Destination) Key. See *Destination on page 2-14* for more information.
- I. Map Scale. See “Map Scales” under *Maps on page 2-4* for more information.
- J. RPT (Repeat) Key. See “Hard Keys” under *Using the Navigation System on page 2-2* for more information.
- K. FAV (Favorite) Key. See “Storing Preset Stations” under *Navigation Audio System on page 3-2* for more information.
- L.  (Zoom In) Touch Screen Button. See “Map Scales” under *Maps on page 2-4* for more information.
- M. Mark Touch Screen Button. See “Adding Destinations to the Address Book” under *Destination on page 2-14* for more information.
- N. CD/DVD Slot. See *CD Player on page 3-11* or *DVD Player on page 3-17* for more information.
- O.  (CD/DVD Video/Audio Eject) Key. See *CD Player on page 3-11* or *DVD Player on page 3-17* for more information.
- P. Source (AM, FM, XM, CD, etc.) Touch Screen Button. See *Navigation Audio System on page 3-2* for more information.
- Q.  (Tune/Sound) knob. See *Navigation Audio System on page 3-2* for more information.
- R. AUDIO Key. See *Navigation Audio System on page 3-2* for more information.
- S. MENU Key. See *Configure Menu on page 2-29* for more information.
- T.  SEEK Key (Next). See *Navigation Audio System on page 3-2* for more information.
- U.  (Zoom Out) Touch Screen Button. See “Map Scales” under *Maps on page 2-4* for more information.

- V. **⏪ SEEK Key (Previous).** See *Navigation Audio System on page 3-2* for more information.
- W. **POI (Point of Interest) Touch Screen Button.** See “Displaying Points of Interest (POI) on the Map Screen” under *Symbols on page 2-8* for more information.
- X. **Auxiliary Jack.** See *Auxiliary Devices on page 3-36* for more information.

## Getting Started

Before you begin to operate the navigation system, read this manual thoroughly to become familiar with it and to understand how the system works.

Any route suggestions made by this navigation system may never override local traffic regulations, your own judgement, and/or knowledge of safe driving practices.

Disregard route suggestions made by the navigation system if such suggestions would; cause you to perform a hazardous or illegal maneuver, place you in a hazardous situation, or route you into an area you consider unsafe.

DVD Map Disc noise, when entering the vehicle and turning the vehicle off, is normal system operation.

Keeping your mind on the drive is important for safe driving. See “Defensive Driving” in the Index of your vehicle’s owner manual for more information. Get familiar with your vehicle’s navigation system so you can use it with less effort and take full advantage of its features. Your navigation system includes not only navigation, but also audio functions. While your vehicle is parked:

- Familiarize yourself with all of its controls: hard keys on the faceplate and touch-sensitive screen buttons.
- Familiarize yourself with its operation.
- Set up your audio by presetting your favorite stations, setting the tone, and adjusting the speakers. Then, when driving conditions permit, you can tune to your favorite stations using the presets and steering wheel controls (if equipped).
- Set up the navigation features that can only be done before you begin driving, such as entering an address or a preset destination.

Entering a destination or alphanumeric text requires many steps, so you can only perform these operations when the vehicle is in PARK (P). You will notice that touch-sensitive screen buttons leading to the alphanumeric keyboard are dimmed-out while driving.



Other functions may also be locked out while driving and they too will appear grayed out on the screen — but all functions are available when parked. Some functions can be performed while driving, as long as you can do so without diverting too much of your attention from your driving.

 **CAUTION:**

**This system provides you with a far greater access to audio stations and song listings. Giving extended attention to entertainment tasks while driving can cause a crash and you or others can be injured or killed. Always keep your eyes on the road and your mind on the drive — avoid engaging in extended searching while driving.**

 **CAUTION:**

**Looking at the moving map on the navigation screen frequently or for too long while driving can cause a crash and you or others can be injured or killed. Keep your eyes and mind on the road and avoid looking too long or too often at the moving map on the navigation screen. Use the voice guidance directions whenever possible.**

The navigation system allows you to do the following:

- Plan a route with provided turn-by-turn route and map guidance with voice prompts.
- Select a destination using various methods and choices.
- Receive RDS broadcast announcements.

You should always be alert and obey traffic and roadway laws and instructions, regardless of the guidance from the navigation system. The navigation system uses street map information that does not include all traffic restrictions or the latest road changes, it may suggest using a road that is now closed for construction or a turn that is prohibited by signs at the intersection.

The system uses limited information, you must always evaluate whether following the system's directions is safe and legal for the current conditions.

### CAUTION

Remember, if you are distracted while driving, you could cause a crash and you or others could be injured or killed.

Before using this system while driving, read the owner's manual and learn how the system operates.

Always concentrate on your driving first by keeping your eyes and mind on the road, and your hands on the wheel.

Some function of this system will not operate when the car is moving. See owner's manual for more information.

OK

Each time the vehicle is started and the navigation system is turned on, the Caution screen may appear or the previous active screen will appear dependent on system power off time. If the Caution screen appears, touch OK to load the map DVD information. If OK is not selected, all hard keys except for NAV (Navigation) and DEST (Destination) can be accessed.

Once the NAV or DEST hard keys are pressed, this Caution screen will appear and OK must be pressed to load the map DVD information from the map disc.

When getting started you may set the navigation system to your preference or delete information you may have entered using various options. To do so, reference the following topics.

## Language — English/Metric

To change the language of the navigation screens, see "DIC Vehicle Customization" in the Index of your vehicles owner manual.



To change the navigation screens from English or metric, see "DIC Operation and Displays" in the Index of your vehicles owner manual.

## Deleting Personal Information

This navigation system can record and store personal information such as names and addresses. At times, such as when you are disposing of your vehicle, you may want to delete this information. See "Edit Address Book — Edit/View" under *Configure Menu on page 2-29* for deleting information from the address book.

## Storing Radio Station Presets

To set preset radio stations, do the following:

1. Press the  (power) knob to turn the system on.
2. Press the AUDIO hard key and select the desired band (AM, FM1, FM2, XM1, or XM2 (if equipped)).
3. Use the  (tune) knob or the SEEK arrows to tune to the desired station.
4. Press and hold one of the five preset screen buttons, at the bottom of the screen, until you hear a beep or see the station displayed on the selected preset button.
5. Repeat the steps for each preset.

See “Storing Preset Stations” under *Navigation Audio System on page 3-2* for more information.

## Setting the Time


See “Analog Clock” in the Index of your vehicle’s owner manual.

## Setting the Search Area, Entering an Address and Point of Interest, and Storing Preset Destinations

Before entering an Address, Point of Interest, Home, or Preset Destination, select the appropriate region that contains the final destination. Your vehicle must be in PARK (P) to perform this operation.

### Setting the Search Area

To set the search area, do the following:

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Press the Change Search Area screen button.
7. Select the appropriate region numbered screen button that contains your final destination.



The system will return to the Destination Entry menu. See *Destination on page 2-14* for more information.

## Entering an Address




If you are having trouble finding a city or a street name, do the following:

- Input the street name first instead of the city name, or vice versa.
- Input more characters or reduce the amount of characters to reduce or expand the available options.

To set a destination by entering a city name, do the following:

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Press the  Address Entry screen button.

7. The City name category will automatically be selected for entry. Start entering the city name.  
If five or less names are available for the entered characters, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.
8. Once a city is selected the street name category will automatically be selected for entry. Start entering the street name.

Do not enter directional information or street type, and use the space symbol screen button (  ) between street or city names. For example, the street name N. Royal Oak Rd. should be entered as royal  oak. Use the backspace (  ) screen button if an incorrect character has been entered.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.


9. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.).


10. Once a street has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.
11. Select the Go screen button. A map screen, with the destination marked, will appear.
12. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
13. Select the Start Guidance screen button. You are now ready to start your route.

See “Address Entry ” under *Destination on page 2-14* for more information.

## Entering a Point of Interest (POI)


To set a destination by entering a Point of Interest (POI), do the following:

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 2-4* for more information.

4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Press the  Point of Interest screen button.
7. Enter the specific title of the POI in the POI name space (i.e. Washington Monument).  
If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available POIs. Select this button to view the list.
8. Select the Go screen button. A map screen, with the destination marked, will appear.
9. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
10. Select the Start Guidance screen button. You are now ready to start your route.

See “Point of Interest (POI)” under *Destination on page 2-14* for more information.

## Storing Preset Destinations

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.  
Enter a destination. See *Destination on page 2-14* for more information on how to enter a destination.
6. Press the Mark screen button from the map screen to add the current final destination as a preset destination.  
The address book screen will appear.


7. Select the Name screen button. An alpha-keyboard will display. Enter the name.
8. Press and hold one of the screen buttons at the bottom of the screen until a pop-up confirmation displays.

The name will appear in that preset destination screen button and is now available to select from the Destination Entry screen. See “Using Your Stored Preset Destinations” next in this section to select it as a destination.

See “Adding or Changing Preset Destinations” under *Destination on page 2-14* for information on how to add preset destinations.

## Using Your Stored Preset Destinations

These destinations are available for selection while driving.

1. If the radio is already on with a map disc inserted, skip to Step 5.
2. Press the  (power) knob to turn the system on.
3. Insert the DVD map disc. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
4. A caution may appear. Touch the OK screen button to proceed.
5. Press the DEST hard key.
6. Select one of the available preset destination screen buttons. A map screen, with the destination marked, will appear.
7. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
8. Select the Start Guidance screen button. You are now ready to start your route.

See “Preset Destination” under *Destination on page 2-14* for more information.


## Canceling Guidance

Guidance will be canceled once you arrive at your final destination. To cancel guidance prior to arrival at the final destination, do the following:

1. Press the DEST hard key.
2. Press the Cancel Guidance screen button.

## Guidance Volume

To adjust the volume of voice guidance prompts, do the following:

1. Press the MENU hard key to enter the menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.
2. Press the  Voice Prompt screen button.
3. Press the + (plus) or – (minus) screen buttons to increase or to decrease the volume of the voice prompts.

See “Voice Prompt ” under *Configure Menu on page 2-29* for more information.

## Cleaning the Video Screen

When cleaning the video screen, use only a soft clean cotton cloth dampened with clean water.





## Section 2 Features and Controls

---

<b>Features and Controls</b> .....	2-2	Global Positioning System (GPS) .....	2-37
Using the Navigation System .....	2-2	Vehicle Positioning .....	2-38
Maps .....	2-4	Problems with Route Guidance .....	2-39
Symbols .....	2-8	If the System Needs Service .....	2-39
Destination .....	2-14	Ordering Map DVDs .....	2-40
Configure Menu .....	2-29	Database Coverage Explanations .....	2-40

# Features and Controls

## Using the Navigation System

This section presents basic information needed to operate the navigation system.


Use the hard keys located on the navigation system along with the available touch-sensitive screen buttons on the navigation screen to operate the system.

See *Navigation System Overview on page 1-2* for more information.


Once the vehicle is moving, various functions will be disabled to reduce driver distractions.

## Hard Keys

The following hard keys are located on the navigation system:

 **(Power/Volume):** Press this knob to turn the system on and off. Turn the knob to increase or decrease the volume to the audio system.

If your vehicle has the Rear Seat Entertainment (RSE) and Rear Seat Audio (RSA), press and hold this knob for more than two seconds to turn off the navigation system, the RSE, and RSA.

 **(Tune/Speaker Adjustment):** Press this knob to access the Sound screen to adjust bass, midrange, treble, and equalization or Digital Signal Processing (DSP), if the vehicle has the Bose® sound system. Turn the tune knob to go to the next or previous radio station. See *Navigation Audio System on page 3-2* for more information.

 **(CD/DVD Eject):** Press the eject button to eject CDs or DVDs.

**NAV (Navigation):** Press this key to view your vehicle's current position on the map screen. Each press of this key will cycle through Full Map and the tab that displays the current audio source (AM, FM, CD, etc.). Full Map displays the screen in full map view. Selecting the audio tab will split the screen between the map screen and the current audio source screen menu. See "Audio" under *Navigation Audio System on page 3-2* for more information.

**DEST (Destination):** Press this key to access the Destination Entry screen to plan a destination or to change the search area. See *Destination on page 2-14* for more information.

**RPT (Navigation Repeat):** Press this key to repeat the last voice guidance prompt.

**FAV (Favorite):** Press this key to access the preset stations. See “Storing Radio Station Presets” under *Navigation Audio System on page 3-2* for more information.

**AUDIO:** Press this key to access the full Audio screen to change AM, FM, XM™ Satellite Radio Service (if equipped), CD, DVD (if equipped), and auxiliary input. See “Audio” under *Navigation Audio System on page 3-2* for more information.

**MENU:** Press this key to adjust features for sound, radio, navigation, and the display. See *Configure Menu on page 2-29* for more information.

▷ **SEEK** / ◁ **SEEK:** Press the seek arrows to seek and scan radio stations, to seek tracks on a CD, and to seek chapters on a DVD. See *Navigation Audio System on page 3-2*, *CD Player on page 3-11*, and *DVD Player on page 3-17* for more information.

## Touch-Sensitive Screen Buttons

Touch-sensitive screen buttons are located on the screen. When a screen button has been selected, a beep will sound. Screen buttons are highlighted when a feature is available.

## Alpha-Numeric Keyboard


Letters of the alphabet, symbols, punctuation, and numbers, when available, will display on the navigation screen as an alpha or numeric keyboard. The alpha keyboard will display when the system requires entry of a city or street name.

All characters are touch-sensitive screen buttons. Touch a character to select it.

**A-Y (Accent Alphabet):** Select this screen button to select letters with accent symbols. This button may toggle to A-Z.

**A-Z (Alphabet):** Select this screen button to select letters from the alphabet. This button may toggle to A-Y.

**0-9 (Numbers):** Select this screen button to select numbers.

 **(Space):** Select the space screen button to enter a space between characters or the words of a name.

◀ **(Backspace):** Select the backspace screen button if an incorrect character has been selected.

To make name selections easier, the system will only highlight the characters that can follow the last one entered. For example, if a Z is entered, a T may not be available for selection.

If a name does not display after entry, it may need to be entered differently, the map DVD disc may not contain that information, or the correct search area has not been selected. See *Database Coverage Explanations on page 2-40* for more information or *Destination on page 2-14* to change the search area.

## Maps

This section includes basic information needed to know about the map database.

The maps are stored on a DVD. The 48 contiguous United States and portions of Canada are contained on one disc.

## Detailed Areas

Road network attributes are contained in the map database for detailed areas. Attributes include information such as street names, street address, turn restrictions, etc. A detailed area will include all major highways, service roads, and residential roads. The detailed areas include points of interest (POI) such as: restaurants, airports, banks, hospitals, police stations, gas stations, tourist attractions, historical monuments, etc. The map database may not include data for newly constructed areas or map database corrections that are completed after the production of the disc. The navigation system will provide full route guidance in the detailed map areas.

## Limited Guidance Areas

Any area that is not classified as detailed is a limited guidance area. Limited guidance streets will be displayed on the map display but route guidance may not be given on these streets. Some POI categories, such as the city center POI category, and some street addresses are included in the limited guidance areas.


The navigation system will inform you by voice prompts when you are traveling into a limited guidance area where route guidance will not be available. The street maps and the directional arrow displayed on the navigation system can then be used to determine the remaining route to your destination.


## Installing the DVD Map Disc

When a DVD Map Disc is installed, noise from the disc may occur when entering the vehicle and turning the vehicle off, this is normal system operation.

Your dealer/retailer may have installed the map DVD. If the map DVD was not installed, do the following to load it:

Read the following steps completely before operating this feature.

1. Turn the ignition on.
2. Press the  (power) knob to turn the navigation system on.
3. Touch the OK screen button to agree to the Caution screen.

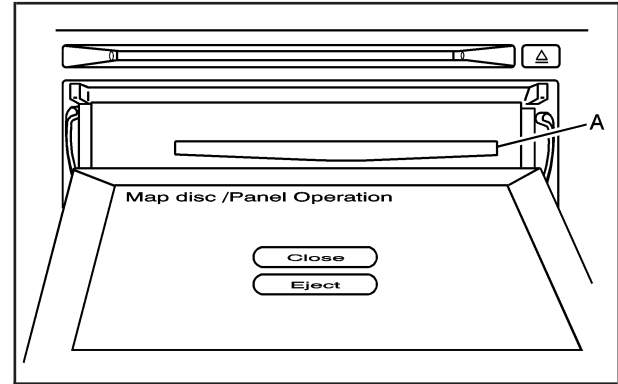

A. Map DVD Slot

4. Touch the Insert Map Disc screen button. The screen will tilt to access the map DVD slot.
5. Load the map DVD partway into the slot. The system will pull it in.
6. Once the map DVD is loaded, touch the Close screen button. The screen will close.

## DVD Map Disc Messages

If Disc Read Error appears on the display and/or the map disc comes out, it could be for one of the following reasons:

- If the map disc was installed into the CD slot. See “Installing the DVD Map Disc” previously.
- It is very hot, when the temperature returns to normal, the map disc should play.
- You are driving on a very rough road. When the road becomes smoother, the map disc should play.
- The map disc is dirty, scratched, wet, or upside down.

If any error occurs repeatedly or if an error cannot be corrected, contact your dealer/retailer.

## Ejecting the DVD Map Disc

When the DVD map disc is not loaded, you will not be able to use the navigation portion of the system.

1. Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.
2. Touch the Map Database Information screen button.

3. Touch the Change screen button. The screen will tilt, exposing the map DVD slot and the map DVD will eject. Pull the disc out.
4. Touch the Close screen button. The screen will close.

## Handling the DVD Map Disc


When handling the DVD map disc, be careful of the following:

- Handle the disc very carefully to avoid contamination or flaws. Signals may not read out properly if the disc gets contaminated or flawed.
- If the disc gets soiled, use a soft cloth to gently wipe it out from the center of the disc to the outside. Do not use photographic record cleaner, solvents, or other cleaners.
- Do not use the disc to rest on while writing or drawing using any writing utensil or attach a seal to any of the sides or the disc.
- Do not keep the disc in direct sunlight, high temperatures, or humidity.
- After using the disc, place it back into the original case.


## Map Adjustments

The system allows you to adjust the scale of view on the map. Also, as you drive, the map will scroll automatically based on the direction of travel.

## Map Scales

 **(Zoom In/Zoom Out):** Touch the zoom in or out screen buttons or the scale on the bar to change the level of map detail. The scale will appear on the screen once the zoom in or zoom out screen buttons are selected. The system will adjust the map accordingly. The scale of a map can range from 150 ft. (45 m) to 250 mi. (402 km). To change from English or metric, see “Driver Information Center, DIC Controls and Displays” in the Index of your vehicle’s owner manual.

## Scrolling the Map

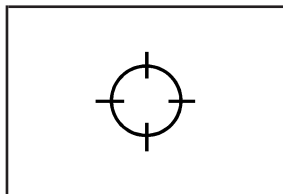

Touch anywhere on the map screen and the scroll symbol will appear. Use this feature to scroll across the map.

Move your finger in any direction on the map screen and the map will continue to scroll in that direction until you remove your finger.

If scrolling while your vehicle is in PARK (P), the system will scroll initially at a slower rate. It will increase if you continue touching the map screen.

If scrolling while your vehicle is in motion, you have one scroll speed and a limited distance to scroll. You have to keep touching the map screen to scroll for a longer distance.


If you have used the scroll feature to scroll the map and your vehicle icon becomes lost, press the NAV (Navigation) key to return to the current vehicle location on the map.

You can use the scroll feature on the map to set a destination. See “Pick from Map” under *Destination on page 2-14* for more information.


When scrolling on the map without a planned route, press the GO screen button to calculate the route from your current position to the destination mark.

## Symbols

The following symbols are the most common symbols that will appear on a map screen.

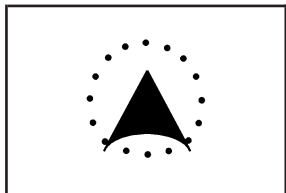

Your vehicle is shown as this symbol. It indicates the current position and heading direction of your vehicle on the map.

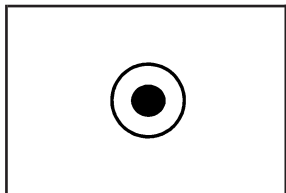

The destination symbol will appear on the map, after a route has been planned, marking your final destination.



The waypoint symbol will display on the map after a waypoint has been added to your route.


The waypoint symbol will be numbered from one through three depending on how many intermediate waypoints have been set.




The distance to destination symbol indicates the distance to your final destination.

It only appears when you are scrolling on the map.



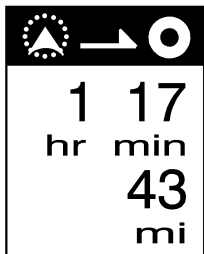

The distance and time to destination symbol indicates the distance and the estimated time remaining to your final destination or arrival time, depending on the option selected.

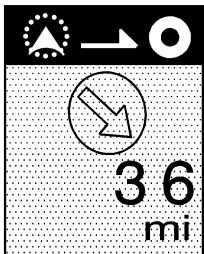


The straight line to distance symbol indicates the straight-line distance to your destination.

This symbol will appear before you start driving on the route or if you are on a road where navigation guidance cannot be given.



The north up symbol indicates the map with North Up, known as North Up mode.

While in North Up mode, the vehicle icon will follow the north direction on the map regardless of which direction the vehicle is traveling. Select this screen symbol to switch between North Up and Heading Up modes.

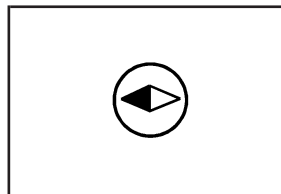

The heading up symbol indicates the map with the vehicle travel direction up, known as Heading Up mode.

The shaded triangle indicates the North direction. While in Heading Up mode, the direction your vehicle is traveling will always be at the top of the map screen. The vehicle icon will always be headed in the direction your vehicle is traveling. Select this screen symbol to switch between Heading Up and North Up modes.



The No GPS symbol will appear when your vehicle is not receiving a Global Positioning System (GPS) satellite signal.


See *Global Positioning System (GPS)* on page 2-37 for more information.



Select the MARK screen button to store the location on the screen in your address book.


The system will automatically store the point in the address book. See “Adding Destinations to the Address Book” under *Destination* on page 2-14 for more information.

## Displaying Points of Interest (POI) on the Map Screen

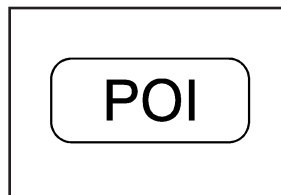

Touch anywhere on the map to display the POI (Point of Interest) screen button.

Select the POI screen button to display or delete POI icons from the map. Displaying POI icons on the map let you know where POIs (i.e. restaurants, gas stations, etc.) are located. This screen will appear after selecting the POI screen button.

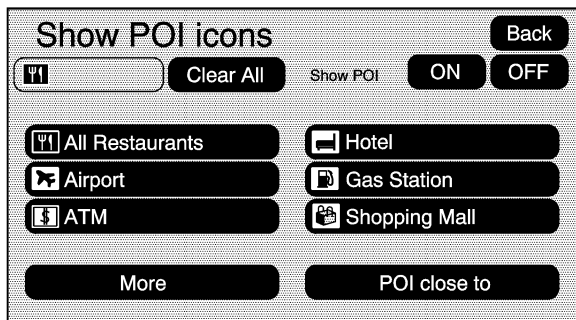

Select one of the POI categories to display or to delete POI icons from the map screen. Once a category has been selected, the POI icon will display at the top of the screen. Five categories can be selected to display on the map screen. When a category is selected those POI icons will display on the map. Press the POI screen button again to add more POI icons.

**More:** Select this screen button to view more POI categories.



**POI Close to:** Once a category has been selected, select this screen button to display the list of available POIs for the selected POI categories. The list provides the POI icon, the name, the direction, and the distance to the POI from your vehicles current position. Use the scroll arrows to move up and down the list. Use the Sort by DIST. (distance), Icon, Name, and, on Route as desired.

**Go:** Press this screen button, next to the desired POI, to make this POI a destination or a waypoint.

Select a POI name to receive information about the POI. From this screen you can select: Add to Address Book, Go, or Map.

**Add to Address Book:** Press this screen button to add this POI to the address book. See “Nav” under *Configure Menu on page 2-29* for information on editing address book entries.

**Go:** Press this screen button to make this POI a destination or a waypoint.

**Map:** Press this screen button to display the map showing the location of the POI.

**Show:** Select this screen button to update the map screen and the list once a category has been selected.

**Show POI:** Select ON to display the POI icons on the map screen. Select OFF to remove the POI icons from the map screen.

**List all Categories:** Select this screen button to list all POIs sorted alphabetically.

**Clear:** To delete a category, do one of the following:

- To delete the last added POI category, select the Clear screen button.
- To delete a specific POI category:
  1. Select the category.
  2. Select the subcategory.
  3. A pop-up confirmation will display. Select the Delete screen button, the map screen will display with that POI category deleted.


**Clear All:** Select this screen button to clear all selected POI categories. A pop-up confirmation will display. Select the Delete screen button, the map screen will display with all POI categories deleted.

## Driving on a Route

When a destination has been routed and you are driving on route, the map screen will automatically display the next maneuver.



This next maneuver pop-up will display the next maneuver direction and how many miles or kilometers you are from it.

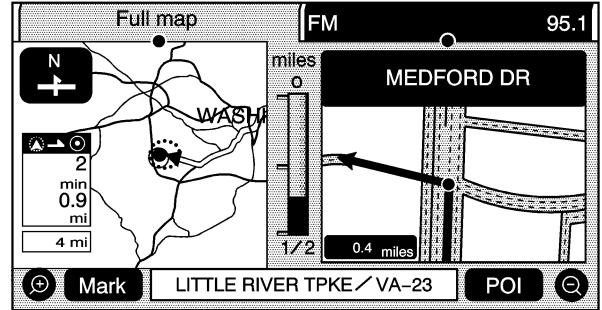

When you are approximately 1/2 mi. (.08 km) from the next maneuver, the screen will display the name and a detailed view of the next maneuver.

## Auto Reroute

When your destination is set and you are off the planned route, the system will automatically plan a new route and begin to reroute. You will be able to see the new route highlighted on the screen.

## Traveling Across Regions


If you plan to drive across many states, you may have to change the region selected to represent the area you are traveling to. To change the region, do one of the following:

- Change the selected region in the search area when you get closer to your destination. See *Destination on page 2-14* or,
- Change the selected region in the search area when entering your destination and route settings. See *Destination on page 2-14*.

For example, if you were traveling from Michigan to Florida, change the region currently selected in the search area to Florida. Enter a destination in Florida under the Destination Entry menu.

## Destination


Press the DEST key to access the Destination Entry screen. From this screen, you can select from several options to plan a route by entering destination points.

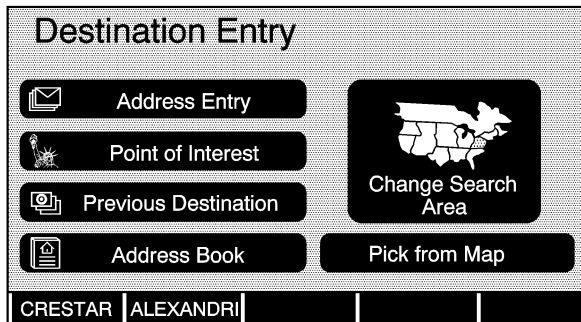

## Search Area

The Destination Entry screen allows you to select the area included in the search for your destination. A map that divides the 48 contiguous United States and a part of Canada into 11 regions is displayed.


Before selecting a method of destination entry, review the search area map to make sure your destination is located in the highlighted region.

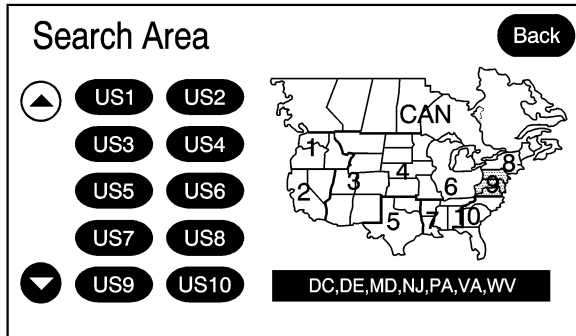

Touch the Change Search Area screen button to view the Search Area screen. Touch the numbered screen button to the left of the search area map that corresponds with the numbered region and to view a list of states included in the region selected. The selected area will be highlighted on the map. Touch the down arrow to select CAN (Canada). Touch the back screen button to return to the Destination Entry screen and to store the selected region.


To enter a destination, choose from one of the following destination entry methods:

## Address Entry


 **Address Entry:** The address entry destination method allows you to enter an address by providing the system with a city name or a street name.

If you are having trouble finding a city or a street name, do the following:

- Input the street name first instead of the city name, or vice versa.
- Input more characters or reduce the amount of characters to reduce or expand the available options.

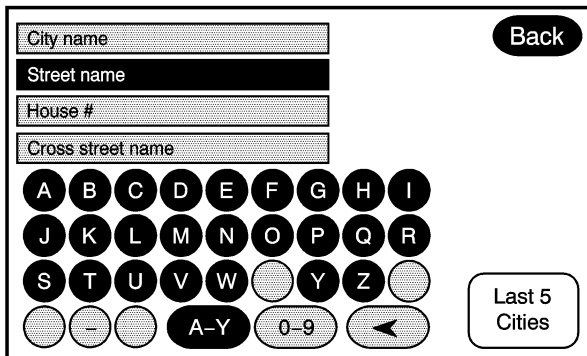

To enter a destination by entering the city name first, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the City name button.
4. Enter the city name or touch the Last 5 Cities screen button.


The Last 5 Cities screen will display a list of the last five city names that had been entered. Select a city from the list and it will appear in the City name area.

If using the alpha keyboard, finish entering the city name. If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.

5. Once a city has been selected the Street name category will automatically be selected for entry. Start entering the street name. If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.
6. Select the street name with the correct prefix (Dr., Ln, St., etc.) from the list.
7. Once a street has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.
8. Select the Go screen button. The map screen, with the destination marked, will display.
9. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
10. Select the Start Guidance screen button. You are now ready to start your route.  
See "Getting Started on Your Route" later in this section for more information.



To enter a destination by entering the street name first, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the Street screen button and start entering the street name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.


4. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.).
5. Once a street has been selected the City name category will automatically be selected for entry.

If five or less cities are available for the selected street, the system will display the list of cities. If more than five cities are available the system will display the alpha keyboard. Start entering the city name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cities. Select this button to view the list and select a city.

6. Once a city has been selected, the numeric keyboard will display, allowing you to enter the house number. The system will display the house number range that is available for the street.
7. Select the Go screen button. The map screen, with the destination marked, will display.
8. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
9. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

To enter a destination by entering a cross street, do the following:

1. Press the DEST hard key.
2. Select the  Address Entry screen button.
3. Select the Street screen button and start entering the street name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available streets. Select this button to view the list.

4. Select the desired street name with the correct prefix from the list (Dr., Ln., St., etc.).
5. Once a street has been selected the Cross Street screen button will become available. Select the Cross Street button and start entering the cross street name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available cross streets. Select this button to view the list.

6. Select the street name with the correct prefix from the list (Dr., Ln., St., etc.). An Information screen will automatically display.
7. Select the Go screen button. The map screen, with the destination marked, will display.
8. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
9. Select the Start Guidance screen button. You are now ready to start your route.

See "Getting Started on Your Route" later in this section for more information.

## Point of Interest (POI)

The Point of Interest (POI) destination entry method allows you to select a destination from the POI list.

POI name

City

Phone #

Back

Browse POI

A B C D E F G H I


J K L M N O P Q R

S T U V W X Y Z

& A-Y 0-9

**Point of Interest:** Touch this screen button to access the Point of Interest (POI) screen. From this screen you have two options to select/enter a destination; enter the name using the alpha keyboard or select a category from the category list.


To use the point of interest destination entry method by entering the name, do the following:

1. Press the DEST hard key.
2. Select the  Point of Interest screen button.
3. Enter the POI name.

If five or less names are available, a list will display. If more than five are available, there will be a screen button with a number in it, it represents the number of available POIs. Select this button to view the list.

4. Select the Go screen button next to the POI. The map screen, with the destination marked, will display.
5. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
6. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

To use the point of interest destination entry method by selecting a category, do the following:

1. Press the DEST hard key.
2. Select the  Point of Interest screen button.

3. Select the Browse POI screen button to view the list of POI categories.

4. Select a category, and then a sub-category.


The system will display available POI names in the selected sub-category or if the list is too long the system will display the alpha keyboard.


If the alpha keyboard is displayed, enter the POI name until a list of available POIs appear. There is a screen button with a number in it, it represents the number of available POIs. Select this button to view the list and select the POI.

5. Select the Go screen button next to the POI. The map screen, with the destination marked, will display.
6. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
7. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.


## Previous Destination

The previous destination entry method allows you to select a destination from a list of previous destination points.

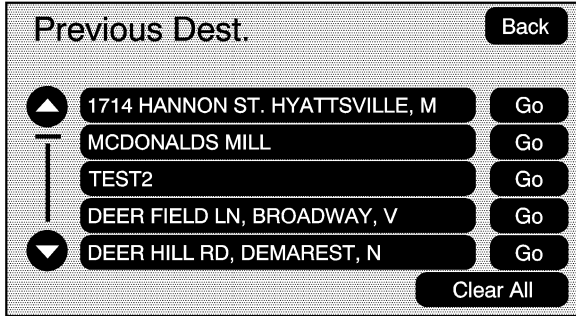


 **Previous Destination:** Touch this screen button to access the Previous Dest. screen. The system will store up to 100 points that have been previously entered. As new destinations are entered, the system will automatically delete the oldest destinations and add the new destinations.


To use the previous destination entry method, do the following:

1. Press the DEST hard key.
2. Select the  Previous Destination screen button.
3. Select a previous destination from the list. Use the arrow to the right of the destination to view the entire destination name as necessary. Use the scroll arrows to the left to scroll through the list.
4. Select the Go screen button next to the destination. The map screen, with the destination marked, will display.
5. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
6. Select the Start Guidance screen button. You are now ready to start your route.  
See "Getting Started on Your Route" later in this section for more information.


## Address Book

The address book entry method allows you to select a destination by selecting an address that has been stored in your address book.

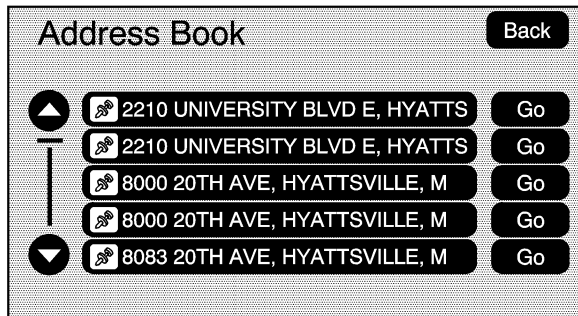


 **Address Book:** Touch this screen button to access the Address Book screen. From this screen you can select an address that already exists as the destination.

To use the address book entry method, do the following:

1. Press the DEST hard key.
2. Select the  Address Book screen button.  
A list of your address book addresses will display.
3. Select the Go screen button next to the destination. The map screen, with the destination marked, will display.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.  
See “Adding Destinations to the Address Book” later in this section.

## Pick from Map

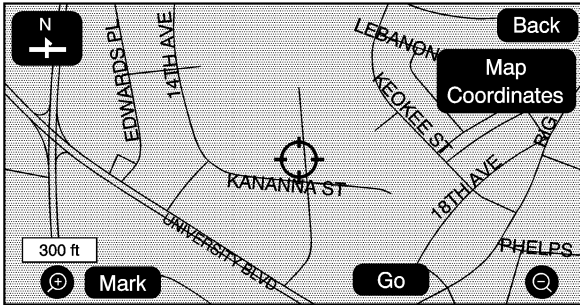

This destination entry method allows you to select a destination by scrolling on the map.



**Pick from Map:** Touch this screen button to enter the pick from map destination entry method.


To use this destination entry method, do the following:

1. Press the DEST hard key.
2. Select the Pick from Map screen button. A map screen will display with the scrolling symbol.

3. Use the  /  (zoom in/out) screen buttons and touch on the map to find the area that you would like to select as your destination.  
Pressing/holding and dragging your finger on the map will activate fast scrolling.
4. Press/touch once on the area that you would like to set as your destination.  
The map screen will display the address information.
5. Select the Go screen button. The map screen, with the destination marked, will display.
6. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
7. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

## Map Coordinates

The coordinates destination entry method allows you to select a destination by entering latitude and longitude coordinates.

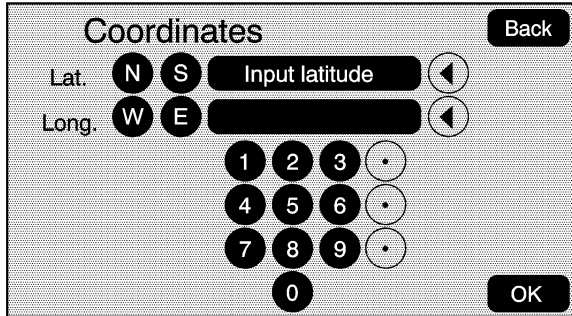

**Map Coordinates:** Touch this screen button to access the Coordinates screen.


To use the coordinates destination entry method, do the following:

1. Press the DEST hard key.
2. Select the Pick from Map screen button.

3. Select the Map Coordinates screen button.
4. Touch N (north) or S (south) next to Lat. (latitude) to enter the direction of the latitude coordinate. Enter the numeric portion of the latitude coordinate.
5. Touch E (east) or W (west) next to Long. (longitude) to enter the direction of the longitude coordinate. Enter the numeric portion of the longitude coordinate.
6. Once both coordinates are entered, select the OK screen button. The map screen, with the destination marked, will display.
7. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
8. Select the Start Guidance screen button. You are now ready to start your route.  
See “Getting Started on Your Route” later in this section for more information.

## Preset Destination

The preset destination entry method allows you to set a destination by selecting from one of five previously stored destinations. Besides voice tagged destinations, these are the only destinations available to set while the vehicle is moving. If a destination is not set for one of the screen buttons, the button will be dimmed and not available for use. See “Adding or Changing Preset Destinations” later in this section for information on how to add a preset destination.

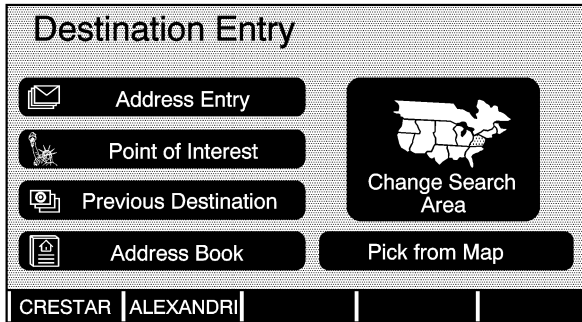

To use the preset destination entry method, do the following:


1. Press the DEST hard key.
2. Select the desired preset destination screen button. The screen buttons are labeled with the name that was selected for the destination when it was stored. The map screen, with the destination marked, will display.
3. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
4. Select the Start Guidance screen button. You are now ready to start your route.

See “Getting Started on Your Route” later in this section for more information.




## Getting Started on Your Route

Once you have entered a destination there are several functions that can be performed. Press the DEST hard key to access the Route screen.

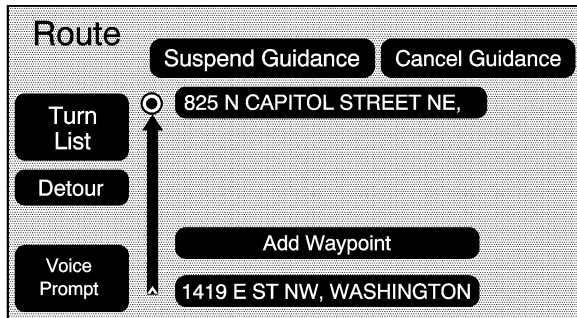

## Turn List

**Turn List:** Touch this screen button to view the list of turn maneuvers for the entire route and to avoid turns on the route.

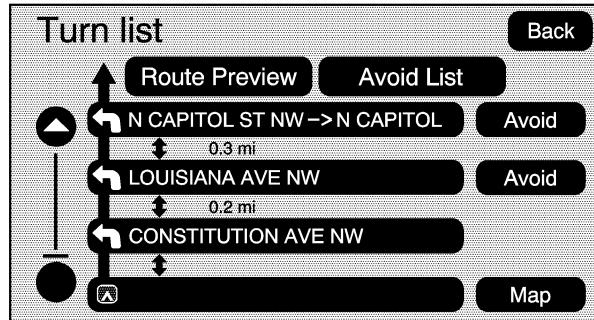


**▲ / ▼ (Scroll Arrows):** Touch the up and down arrow screen buttons to scroll through the list of maneuvers.

**Avoid:** Touch this screen button, next to the adjacent street name, to avoid the maneuver.

The map screen will display. Select the Fastest, Shortest, or Other screen buttons. Press the Start Guidance screen button. The route will re-calculate without the selected avoided maneuver.

**Avoid List:** Select this screen button to cancel an avoided turn. The list of selected avoided turns will display. Select the turn to cancel the turn from being avoided.

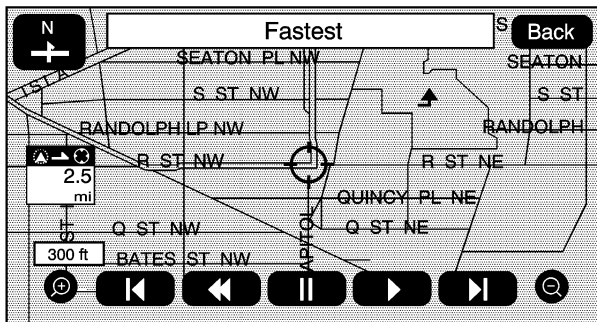

**Route Preview:** Select this screen button to preview the entire route in either direction.

◀ (Reverse Skip): Select this screen button to go back to the start point or previous waypoint.

◀ / ◀◀ (Reverse Scroll): Select this screen button to scroll to the start point or previous waypoint. This button will toggle between slow and fast speed.

|| (Pause): Select this screen button to pause the route preview, while in reverse or fast forward scroll.

▶ / ▶▶ (Fast Forward Scroll): Select this screen button to scroll to the next waypoint or to the final destination. This button will toggle between slow and fast speed.

▶| (Fast Forward Skip): Select this screen button to go to the next waypoint or to the final destination.


## Detour

**Detour:** Select this screen button from the Route screen, then select to detour 1 mile, 3 miles, or 5 miles (1 km, 3 km, or 5 km) around the current route. You may also select to detour the whole route if necessary. This option is only available while you are driving on your current planned route.

## Voice Prompt

Select this screen button from the Route screen to turn voice prompts on or off and to change the volume of voice prompts. See “Nav” under *Configure Menu* on page 2-29 for more information.

## Add Waypoint

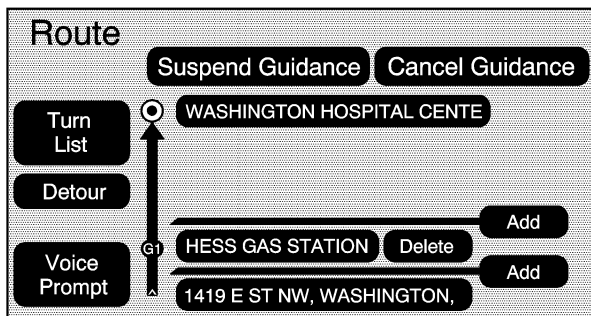

**Add Waypoint:** Select this screen button from the Route screen. This feature allows you to add up to three waypoints to the current route, between your start point and final destination. Once a waypoint has been added, the points can be edited or deleted.

To add a waypoint:

1. Press the DEST hard key.
2. Select the Add Waypoint screen button. This button will only appear if a route has been calculated.
3. Using the desired method of entering a destination, enter the waypoint. See “Destination” previously for more information.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.
6. To add the second and third waypoints, press the DEST hard key, then select the Add screen button, where you would like the next waypoint to fall on the route.
7. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
8. Select the Start Guidance screen button. You are now ready to start your route.

To delete a waypoint from your current route:

1. Press the DEST hard key.
2. Select the Delete screen button for the desired waypoint to delete.
3. The system will display a pop-up confirmation message. Choose Yes to delete the waypoint; touch No to cancel this operation.
4. Select the route preference (Fastest, Shortest, or Other). The system will calculate and highlight the route.
5. Select the Start Guidance screen button. You are now ready to start your route.

## Suspend Guidance

Press this screen button, from the Route screen, to put the current route on hold.

## Resume Guidance

Press this screen button, from the Route screen, to resume guidance on the current route.

## Cancel Guidance

Press this screen button, from the Route screen, to cancel the current route.

## Adding Destinations to the Address Book

There are two ways to add a destination to the address book:

- To add the current final destination to the address book, press the Mark screen button from the map screen. The system will automatically save the final destination information in the address book.
- Press the Add to Address Book screen button when available on POI information screens, Destination Entry screens, or POI screens. The system will automatically save this information in the address book.

See “Nav” under *Configure Menu on page 2-29* for information on editing address book entries.

## Adding or Changing Preset Destinations

This feature allows you to add or change one of five preset destinations. When a destination has been added as a preset destination, it will be available to select from the Destination Entry screen. See “Preset Destination” previously for information on how to select a preset destination as a final destination.


To store the current final destination as a preset destination:

1. Select the Mark screen button from the map screen to add the current final destination. The Address Book screen will appear.
2. Select the Name screen button. An alpha-keyboard will display. Enter the name.
3. Press and hold one of the buttons at the bottom of the screen until a pop-up confirmation displays. The name will appear in that preset destination screen button and is now available to select from the Destination Entry screen.

To store an address book entry as a preset destination:

1. Select the MENU hard key.
2. Select the Nav screen button or press the MENU key until the Nav screen button is selected or touch the Nav screen button.
3. Select the Edit/View screen button.
4. Select the address book entry that you would like to store as the preset destination. Select the Name screen button to add a name, if needed.
5. Press and hold one of the buttons at the bottom of the screen until a pop-up confirmation displays. The name will appear in the that preset destination screen button and is now available to select from the Destination Entry screen.

## Configure Menu

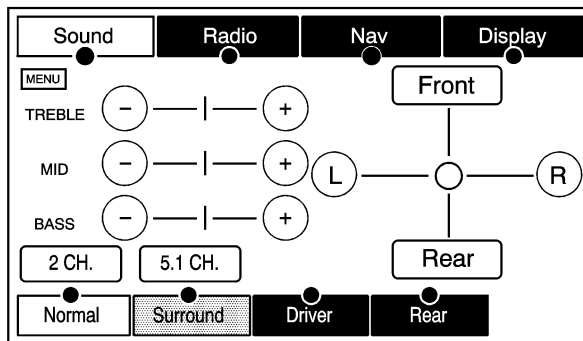

Press the MENU hard key to adjust several of your system's features and preferences. The last selected menu screen will be the screen that displays (Sound, Radio, Nav (navigation), or Display).


## Sound

Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Sound is selected or touch the Sound screen button to make speaker and equalization or DSP (Digital Signal Processing) adjustments. See *Navigation Audio System on page 3-2* for more information.

## Radio


Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button to make changes for radio information displayed, preset pages, XM™ categories, and Automatic Volume Control or Bose® AudioPilot®. See *Navigation Audio System on page 3-2* for more information.

## Nav (Navigation)

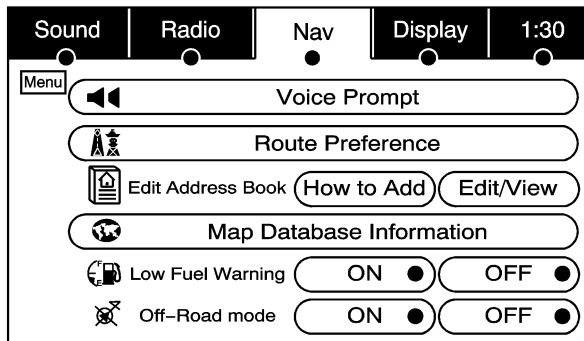

Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Nav is selected or touch the Nav screen button.


## Voice Prompt

 **Voice Prompt:** Touch the Voice Prompt screen button to change the volume of the voice prompts or to turn the voice prompts on and off.

**Voice Prompt Volume:** Touch the + (plus) or – (minus) screen buttons to increase or to decrease the volume of the voice prompts.

**Turn voice turn instruction:** Touch the ON or OFF screen buttons to turn voice instructions on and off while traveling on a planned route.

## Route Preference

Touch the  Route Preference screen button to change route options when the system calculates a route.

**Allow highway:** This feature allows the system to use major roads when calculating a planned route.

**Allow toll road:** This feature allows the system to use toll roads when calculating a planned route.

**Allow ferry:** This feature allows the system to use ferries when calculating a planned route.


**Allow time and seasonal restricted road:** This feature allows the system to use time restricted and seasonal roads when calculating a planned route.


## Edit Address Book — How to Add

To add an address to the address book, see “Adding Destinations to the Address Book” under *Destination on page 2-14*.

## Edit Address Book — Edit/View


To edit the name of an address book:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the Address book entry.

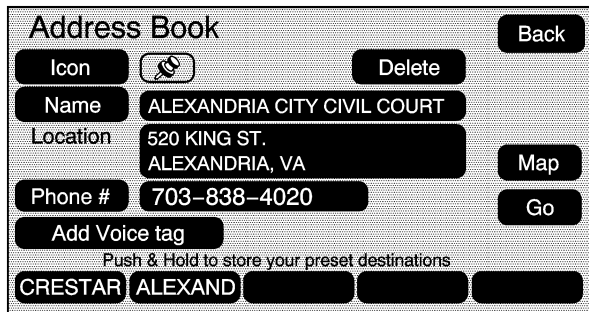


5. Touch the Name screen button and use the alpha keyboard to edit or add the name.
6. Touch the OK screen button to save your changes.

To add or change the phone number of an address book entry:


1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to change.

5. Touch the Phone # screen button and use the numeric keyboard to enter or change the phone number.
6. Touch the OK screen button to save your changes.

To change the map icon of an address book entry:


1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to change.
5. Select the Icon screen button.
6. Select an icon from the list.

To add a voice tag to an address book entry:


1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the Add Voice tag screen button.
5. The system will ask for you to state the name. You will have five seconds to state the name. The system will respond back with the name.




To delete an address book entry:

1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to delete.
5. Press the Delete screen button to delete the address book entry.

To delete the entire address book:


1. Select the MENU hard key.
2. Select the NAV screen button.
3. Select the  Edit/View Address Book screen button.
4. Select the address book entry to delete.
5. Press and hold the Delete screen button until the delete all address book entries pop-up confirmation displays. Select Yes to delete; select No to cancel the operation.

## Map Database Information

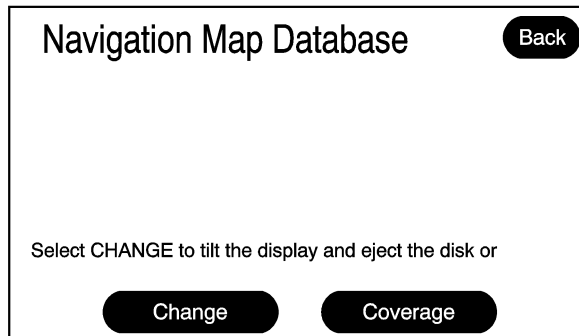

Touch the Map Database Information screen button to change the map DVD and to view the coverage areas of the map DVD.


**Change:** Touch this screen button to eject or change the map DVD. The screen will tilt, exposing the map DVD slot and, if loaded, the map DVD will eject. Pull the map DVD out. Insert the map DVD partway into the slot. The system will pull it in.

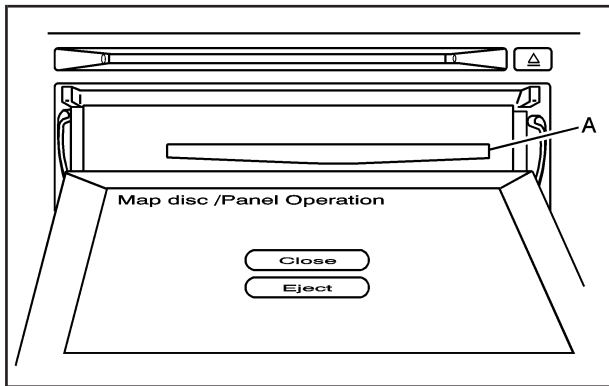

#### A. Map DVD Slot

Once the map DVD is loaded touch the Close screen button. The screen will close.

Once the screen is closed touch the OK screen button to proceed to the navigation system. See *Getting Started on page 1-4* for more information.

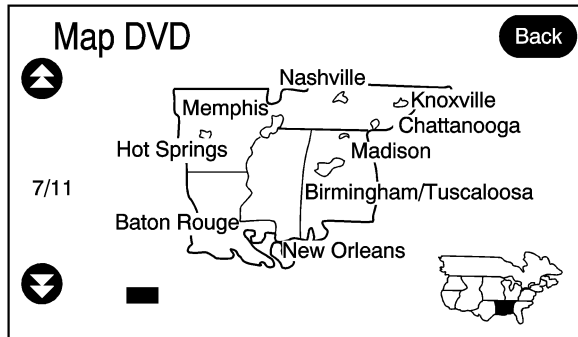


**Coverage:** Touch this screen button to view the areas covered by the map DVD.

Touch the up and down arrow screen buttons to view each region of the map DVD. The screen will display the major cities for the selected region.

## Low Fuel Warning

To turn the Low Fuel Warning on or off, do the following:

1. Press the MENU key.
2. Press the Nav screen button.
3. Press the  Low Fuel Warning ON or OFF screen button. The active button will be highlighted.


When on, a warning will appear on the display when your vehicle's fuel tank is low on fuel. The warning pop-up window will ask if you would like to view gas station POIs on the map display. Once the gas station POIs are displayed you can automatically route to a gas station by touching the gas station POI symbol on the screen and pressing the GO screen button.

To remove the POIs from the screen, see the POI information under *Symbols on page 2-8* for more information.

See "Fuel" in the Index of your vehicle's owner manual.

## Off-Road Mode


To turn the Off-Road Mode on or off, do the following:

1. Press the MENU key.
2. Press the Nav screen button.
3. Press the  Off-Road Mode ON or OFF screen buttons. The active button will be highlighted.

When the off-road mode is turned on, the navigation system will show the path being traveled by the vehicle when not on a marked road. This path will be a simulation since the map database coverage will not have these roads on the DVD. This path will be stored in the navigation system's memory, see "Previous Destination" under *Destination on page 2-14* for more information.

See "Off-Road Driving" in the Index of your vehicle's owner manual for more information about off-road driving.

## Display

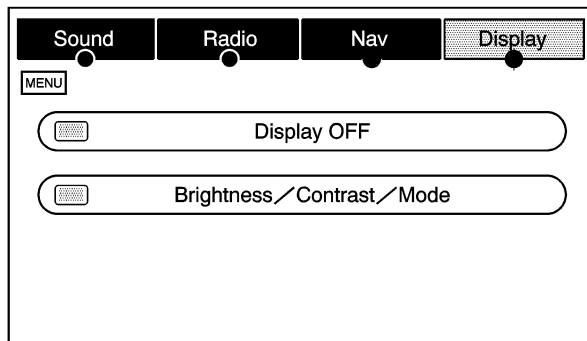


Press the MENU key to enter the Menu options, then press the MENU key repeatedly until Display is selected or touch the Display screen button.


### Display Off


Touch this screen button to turn the display off. Press any hard key to view the display.

## Brightness/Contrast/Mode

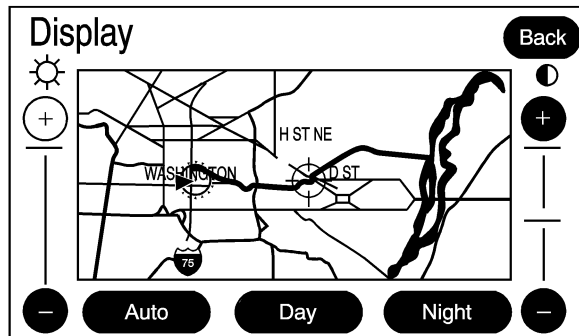

Touch this screen button to change the brightness, contrast, and mode of the display.

 **(Brightness):** Touch the + (plus) or – (minus) screen buttons to increase or decrease the brightness of the screen.

 **(Contrast):** Touch the + (plus) or – (minus) screen buttons to increase or decrease the contrast of the screen.

**Auto (Automatic):** Touch this screen button for the system to automatically adjust the screen background depending on exterior lighting conditions.

**Night:** Touch this screen button and the system will make the map background darker.

**Day:** Touch this screen button and the system will make the map background brighter.

## Global Positioning System (GPS)

The navigation system determines the position of your vehicle by using satellite signals, various vehicle signals, and map data.

At times, other interferences such as the satellite condition, road configuration, the condition of the vehicle and/or other circumstances can interfere with the navigation system's ability to determine the accurate position of the vehicle.

The GPS shows the current position of your vehicle using signals sent by the GPS Satellites of the United States Department of Defense. When your vehicle is not receiving signals from the satellites, a symbol will appear on the map screen. Refer to *Symbols on page 2-8*.

This system may not be available or interferences may occur if any of the following are true:

- Signals are obstructed by tall buildings, trees, large trucks, or a tunnel.
- Objects are located on the rear shelf.
- Satellites are being repaired or improved.
- After-market glass tinting has been applied to the vehicle's rear windshield.

**Notice:** Do not apply after-market glass tinting to the vehicle's windows. Glass tinting will interfere with the system's ability to receive GPS signals and cause the system to malfunction. You might have to replace the window to correct the problem. This would not be covered by your warranty.

For more information if you are experiencing a problem, see *If the System Needs Service on page 2-39* and *Problems with Route Guidance on page 2-39*.

## Vehicle Positioning

At times, the position of the vehicle on the map may be inaccurate due to one or more of the following reasons:

- The road system has changed.
- The vehicle is driving on slippery road surfaces such as in sand, gravel, and/or snow.
- The vehicle is traveling on winding roads.
- The vehicle is on a long straight road.
- The vehicle is approaching a tall building or a large vehicle.
- The surface streets run parallel to a freeway.
- The vehicle has just been transferred by a vehicle carrier or a ferry.
- The current position calibration is set incorrectly.
- The vehicle is traveling at high speed.
- The vehicle changes directions more than once, or when the vehicle is turning on a turn table in a parking lot.
- The vehicle is entering and/or exiting a parking lot, garage, or a lot with a roof.
- The GPS signal is not received.
- A roof carrier is installed on your vehicle.
- The vehicle is being driven with tire chains.
- The tires are replaced.
- The tire pressure for your tires is incorrect.
- The tires are worn.
- The first time the map DVD is inserted.
- The battery is disconnected for several days.
- The vehicle is driving in heavy traffic where driving is at low speeds, and the vehicle is stopped and started repeatedly.

If you experience problems with your system, see your dealer/retailer.

## Problems with Route Guidance

Inappropriate route guidance may occur under one or more of the following conditions:

- You have not turned onto the road indicated.
- Route guidance may not be available when using automatic rerouting for the next right or left turn.
- The route may not be changed when using automatic rerouting.
- There is no route guidance when turning at an intersection.
- Plural names of places may be announced occasionally.
- It may take a long time to operate automatic rerouting during high-speed driving.
- Automatic rerouting may display a route returning to the set waypoint if you are heading for a destination without passing through a set waypoint.

- The route prohibits the entry of a vehicle due to a regulation by time or season or any other regulation which may be given.
- Some routes may not be searched.
- The route to the destination may not be shown if there are new roads, if roads have recently changed, or if certain roads are not listed on the map DVD. See *Ordering Map DVDs on page 2-40*.

To recalibrate the vehicle's position on the map, see your dealer/retailer.

## If the System Needs Service

If your system needs service and you have followed the steps listed here and still are experiencing problems, see your dealer/retailer for assistance.

## Ordering Map DVDs

The map DVD in your vehicle is the most up-to-date information available when your vehicle was produced. The map DVD is updated periodically, provided that the map information has changed.

If you have any questions about the operation of the navigation system or the update process, contact the GM Nav Disc Center toll-free phone number, 1-877-NAV-DISC (1-877-628-3472) or go to the center's website, [www.gmnavdisc.com](http://www.gmnavdisc.com). If you need any updates or a replacement disc, because the current disc is lost, damaged, or needs to be updated, call the GM Nav Disc Center or order a new disc online. To order a disc, have your Vehicle Identification Number (VIN) available. This helps the center make sure you receive the correct and most up-to-date DVD map disc for your vehicle. See "Vehicle Identification Number (VIN)" in the Index of your vehicle's owner manual for more information.

After receiving the updated disc, replace the old disc in the navigation system. See "Installing the DVD Map Disc" and "Ejecting the DVD Map Disc" under *Maps on page 2-4*. Dispose of the old disc to avoid confusion about which disc is the most current.

## Database Coverage Explanations

Coverage areas vary with respect to the level of map detail available for any given area. Some areas will feature greater levels of detail than others. If this happens, it does not mean there is a problem with the system. As the map DVD is updated, more detail may become available for areas which previously had limited detail. See *Ordering Map DVDs on page 2-40*.



## Section 3 Navigation Audio System

---


<b>Navigation Audio System</b> .....	3-2	Rear Seat Entertainment (RSE) System .....	3-23
CD Player .....	3-11	Rear Seat Audio (RSA) .....	3-34
DVD Player .....	3-17	Auxiliary Devices .....	3-36


## Navigation Audio System

**Notice:** Before adding any sound equipment to your vehicle, such as an audio system, CD player, CB radio, mobile telephone, or two-way radio, make sure that it can be added by checking with your dealer/retailer. Also, check federal rules covering mobile radio and telephone units. If sound equipment can be added, it is very important to do it properly. Added sound equipment can interfere with the operation of your vehicle's engine, radio, or other systems, and even damage them. Your vehicle's systems can interfere with the operation of sound equipment that has been added.

**Notice:** The chime signals related to seat belts, parking brake, and other functions of your vehicle operate through the navigation system. If that equipment is replaced or additional equipment is added to your vehicle, the chimes may not work. Make sure that replacement or additional equipment is compatible with your vehicle before installing it. See "Accessories and Modifications" in the Index of your vehicle's owner manual.


## Playing the Radio

 **(Power/Volume):** Press this knob to turn the audio system on and off. Turn the knob to increase or to decrease the volume.

 **(Tuning/Sound Knob):** Turn this knob to go to the next or previous frequency. Press this knob to display the Sound menu. See "Sound Menu" later in this section.


**AUDIO:** Press this key to display the audio screen. Press the key to switch between AM, FM, or XM, if equipped, DISC, or AUX (Auxiliary), if the vehicle has this feature, or touch the screen button. See *CD Player on page 3-11*, or *DVD Player on page 3-17*, and *Auxiliary Devices on page 3-36* for more information.

## Finding a Station

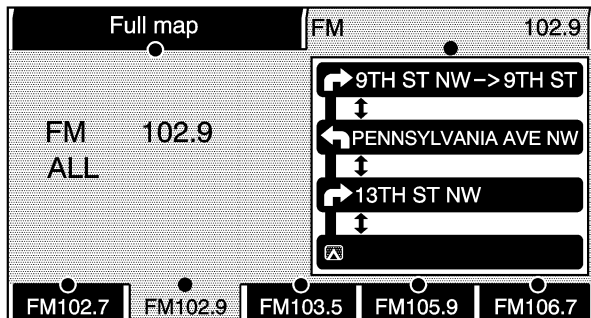

### FM source shown, other sources similar

If viewing a map screen, touch the source screen (AM, FM, XM, CD, etc.) button. The display will split between the audio screen and the map screen. All station-changing functions can be performed from this screen.

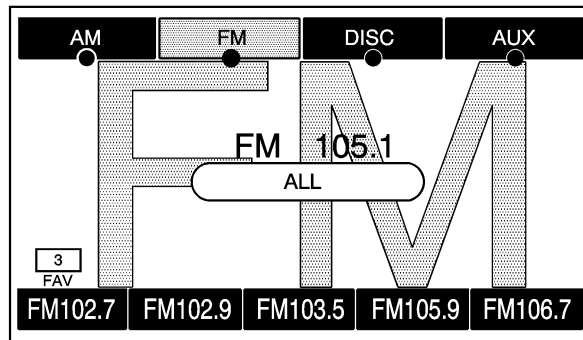

### FM source shown, other sources similar

If you do not want to view a split screen or you are not on a map screen, press the AUDIO hard key.

**AM/FM/XM:** Touch the source (AM, FM, or XM, if equipped) screen button or press the AUDIO key repeatedly until the desired source is highlighted.



**FM source shown, other sources similar**

**Category:** Touch the screen button, located in the middle of the screen, to receive a list of all of the selected band stations in the area. Use the up and down arrow screen buttons to scroll the frequencies. Touch the desired frequency.

XM lists will also contain a category to select and the stations or channels that pertain to the category. For XM, touch the left and right arrow screen buttons to change categories. The station information will appear on the display. See “Radio Menu” later in this section to add and remove XM categories from the category list. When listening to XM stations, you will be able to select all of the categories when using the right and left arrow screen buttons on the main audio screen. The categories, when removed, will not be enabled to select from the category list screen.

FM lists may also contain a category to select if stations in your area support Radio Data Systems (RDS).

**Refresh List:** Touch this screen button to refresh the list of stations.

 
When viewing a map screen, the name of the station or channel will appear on the display.

**SEEK / SEEK:** To seek stations, press the left or right arrow keys to go to the next or previous station.


To scan stations, press and hold either arrow for more than two seconds. The radio will go to a station, play for a few seconds, then go on to the next station. To stop scanning, press either arrow again.


## Storing Radio Station Presets

This feature allows you to store up to 30 preset stations. You can mix AM, FM, and XM (if equipped). To store presets, do the following:

1. Press the  (power) knob to turn the system on.
2. If viewing a map screen, touch the source screen button, press the AUDIO key, or press the FAV (favorite) key.
3. Select the band.
4. Seek, scan, or tune to the desired station, to select the station.
5. Press and hold one of the preset screen buttons for more than two seconds or until you hear a beep.
6. Repeat the steps for each preset.

## Sound Menu

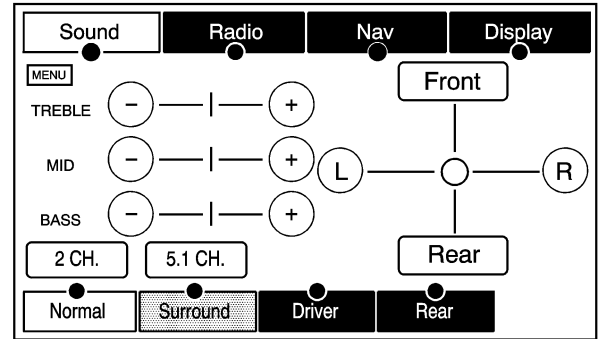

 **(Sound Menu):** Press this knob or press the MENU key to access the Sound menu to adjust the treble, midrange, bass, fade, balance, and equalization or Digital Signal Processing (DSP).

## Setting the Tone

**TREBLE:** Touch the plus (+) or minus (-) sign to increase or decrease the treble. If a station is weak or noisy, decrease the treble.

**MID (Midrange):** Touch the plus (+) or minus (-) sign to increase or decrease the midrange.

**BASS:** Touch the plus (+) or minus (-) sign to increase or decrease the bass.

## Adjusting the Speakers

**L/R (Left/Right) (Balance):** To adjust the balance between the left and the right speakers, touch and hold the L or R screen buttons. To center the balance and the fade, touch the center, where the two lines meet.

**Front/Rear (Fade):** To adjust the fade between the front and the rear speakers, touch and hold the Front or Rear screen buttons. To center the balance and the fade, touch the center, where the two lines meet.

## Digital Signal Processing (DSP)

The Bose® Cabin Surround® Sound System has Digital Signal Processing (DSP). DSP is used to provide a choice of four different listening experiences. DSP can be used while listening to the audio system. The type of DSP selected is displayed on the status line.

Select from the following DSP settings:

**Normal:** Select this screen button to adjust the audio to be in normal mode. This provides the best sound quality or all seating positions.

**Surround:** When listening to stereo sources, select this button to activate the Bose® Centerpoint® signal processing circuitry to create a surround sound listening experience. Centerpoint® signal processing delivers five independent audio channels from conventional stereo recordings. This is not available for AM or FM.

The navigation system can play digital recordings such as Dolby® Digital (AC-3), DTS, or MLP (DVD-A).

**Driver:** When listening to stereo sources, select this screen button to adjust the audio to give the driver the best possible sound quality.

**Rear:** Select this screen button to adjust the audio to give the rear seat occupants the best possible sound quality.


## 5.1 CH and 2 CH Mode

The 2 CH and 5.1 CH screen buttons are available only when a 5.1 CH disk is available and RSA is off.

**5.1 CH (Channel):** Select this screen button, when listening to a DVD, to give a full affect of surround sound listening. The Surround screen button must be selected to select this screen button.

**2 CH (Channel):** If a 5.1 CH disk is playing and 2 CH is selected or RSA is turned on, the system will downmix the audio from 5.1 CH to 2 CH stereo. This feature may not be supported on all DVDs.


## Radio Menu

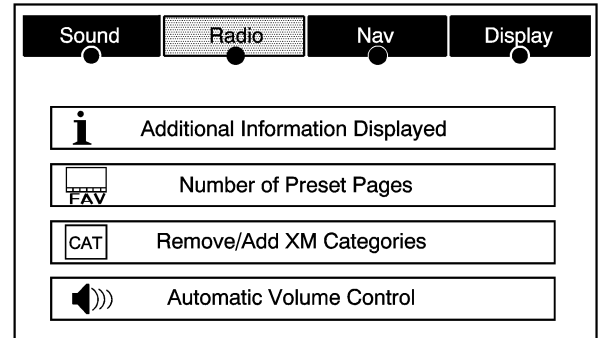

Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button to make changes for radio information displayed or to limit features while driving, number of preset pages, XM categories, Bose® AudioPilot® noise compensation technology.

## Additional Information Displayed

The navigation system may have this feature.

Touch the  Additional Information Displayed screen button to turn station, channel, CD, and MP3 information on or off.

Touch the YES screen button to receive information, when it is available, for the following; FM: RDS category name and radio text, XM: Song Title and Artist Name, CD: CD text, MP3: tag information.

Touch the NO screen button to receive no information.

## Limit Features While Driving

 
The navigation system may have this feature.

Touch the Limit Features While Driving screen button to turn on and off the ability to limit functions while driving. When this screen button is highlighted, the following functions will be limited while driving:


- Music Navigator Scrolling
- Radio Category Scrolling
- Navigation Menu Scrolling and some functions

See “Category” earlier in this section for more information. See “From Map” under *Destination* on page 2-14 for more information.

## Number of Preset Pages

Touch the  Number of Preset Pages screen button to change the number of preset pages, 1 through 6. Each preset page can contain five preset stations. Touch the desired numbered screen button.

## Remove/Add XM Categories


Touch the  Remove/Add XM Categories screen button to remove or add XM categories when selecting XM categories from the category list screen. The list of XM categories will appear on the screen. Use the up and down arrow screen buttons to scroll through the list. The categories to remove will be highlighted and the categories to add will be dark in color. Touch the category that you would like to add or remove. Touch the Restore All Categories screen button to add all categories that have been removed.



## Bose AudioPilot®

**AudioPilot®:** Your vehicle has the Bose® sound system, it includes Bose AudioPilot® noise compensation technology.

To use AudioPilot®:

1. Press the MENU key to enter the menu screen, then press the MENU key repeatedly until Radio is selected or touch the Radio screen button.
2. Press the  Automatic Volume Control screen button to access the AudioPilot® menu.
3. Press the ON screen button.

When on, AudioPilot® continuously adjusts the audio system equalization, to compensate for background noise, so that your music always sounds the same at the set volume level.

This feature is most effective at lower volume settings where background noise can affect how well you hear the music being played through your vehicle's audio system. At higher volume settings, where the music is much louder than the background noise, there may be little or no adjustments by AudioPilot®.

To turn it off, touch the OFF screen button.

For more information on AudioPilot®, visit [www.bose.com/audiopilot](http://www.bose.com/audiopilot).

## Radio Data System (RDS)

The audio system has a Radio Data System (RDS). RDS features are available for use only on FM stations that broadcast RDS information. With RDS, the radio can do the following:

- Seek to stations broadcasting the selected type of programming
- Receive announcements concerning local and national emergencies
- Display messages from radio stations

This system relies on receiving specific information from these stations and will only work when the information is available. In rare cases, a radio station may broadcast incorrect information that will cause the radio features to work improperly. If this happens, contact the radio station.

The RDS system is always on. When information is broadcast from the FM station you are listening to, the station name or call letters will be displayed on the audio screen. RDS may provide a program type (PTY) for current programming and the name of the program being broadcasted.

## **XM™ Satellite Radio Service**

XM™ is a satellite radio service that is based in the 48 contiguous United States and Canada. XM™ offers a large variety of coast-to-coast channels including music, news, sports, talk, traffic/weather (U.S. subscribers), and children's programming. XM™ provides digital quality audio and text information that includes the channel name and number, song title, and artist name. A service fee is required in order to receive the XM™ service. For more information, contact XM™; In the U.S. at [www.xmradio.com](http://www.xmradio.com) or call 1-800-852-XMXX (9696) or in Canada at [www.xmradio.ca](http://www.xmradio.ca) or call 1-877-GET-XMSR (438-9677).

When XM™ is active, the channel name and number, song title, and artist will display on the screen.

## **XM™ Radio Messages**

**XL (Explicit Language Channels):** XL on the radio display, after the channel name, indicates content with explicit language. These channels, or any others, can be blocked at a customer's request by calling 1-800-852-XMXX (9696).

**XM Updating:** The encryption code in the receiver is being updated and no action is required.

**No XM signal:** The vehicle is in a location that is blocking the XM™ signal. When the vehicle is moved into an open area, the signal should return.

**Loading XM:** The audio system is processing audio and text data received. No action is needed.

**Channel Off Air:** This channel is not currently in service.

**Channel Unavail:** This previously assigned channel is no longer assigned.

**No Artist Info:** No artist information is available. The system is working properly.

**No Title Info:** No song title information is available. The system is working properly.

**No CAT Info:** No category information is available. The system is working properly.

**Not Found:** There are no channels available for the selected category. The system is working properly.

**No Information:** No text or informational messages are available. The system is working properly.

**XM Theftlocked:** The XM™ receiver may have previously been in another vehicle. For security purposes, XM™ receivers cannot be swapped between vehicles. If this message is received after having your vehicle serviced, check with your dealer/retailer.

**XM Radio ID:** If tuned to channel 0, this message will alternate with the XM™ Radio eight digit radio ID label. This label is needed to activate the service.

**Unknown:** If this message is received when tuned to channel 0, there may be a receiver fault. Consult with your dealer/retailer.

**Check XM Receiver:** If this message does not clear within a short period of time, the receiver may have a fault. Consult with your dealer/retailer.

## CD Player

The player can be used for CD and MP3. If your vehicle has RSE, the player can be used for CD, MP3, DVD audio, and as a DVD video player. See *DVD Player on page 3-17* for more information about DVD audio and video.

With the ignition on, insert a CD partway into the slot, label side up. The player will pull it in and the CD should begin playing. While playing a CD, the navigation system is available. If you insert a CD with the system off and the ignition on, it will start to play.

When you insert a CD, the CD tab will display.

If you turn off the ignition or radio with a CD in the player, it will stay in the player. When you turn on the ignition or radio, the CD will start playing where it stopped, if it was the last selected audio source.

As each new track starts to play, the track number will appear on the display.

The CD player can play the smaller 3 inch (8cm) single CDs with an adapter ring. Full-size CDs and the smaller CDs are loaded in the same manner.

If playing a CD-R the sound quality may be reduced due to CD-R quality, the method of recording, the quality of the music that has been recorded, and the way the CD-R has been handled. There may be an increase in skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the bottom surface of the CD. If the surface of the CD is damaged, such as cracked, broken, or scratched, the CD will not play properly. If the surface of the CD is soiled, see "Care of Your CDs" in the Index of your vehicle's owner manual.

If there is no apparent damage, try a known good CD.


**Notice:** If a label is added to a CD, or more than one CD is inserted into the slot at a time, or an attempt is made to play scratched or damaged CDs, the CD player could be damaged. While using the CD player, use only CDs in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids, and debris.

Do not add any label to a CD, it could get caught in the CD player. If a CD is recorded on a personal computer and a description label is needed, try labeling the top of the recorded CD with a soft marker instead.

If an error appears on the display, see "CD Messages" later in this section.

If viewing a map screen, touch the CD screen button. The display will split between the audio screen and the map screen. If you do not want to view a split screen or you are not on a map screen, press the AUDIO key then press the AUDIO key until CD is highlighted or touch the CD screen button.

## Playing an Audio CD

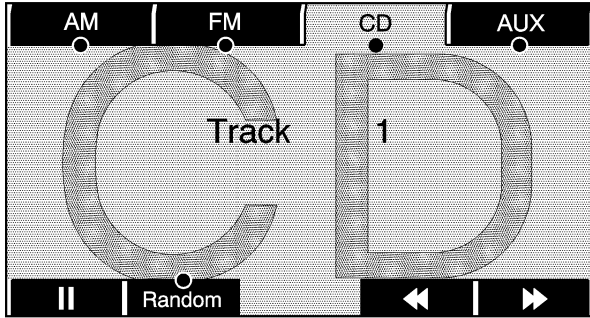

**|| / ▶ (Pause/Play):** Touch this button to pause the CD. This button will then change to the play button. Touch the play button to play the CD.

**RANDOM:** Touch this button to hear the tracks in random, rather than sequential, order. Touch RANDOM again to turn off random play.

**◀ (Rewind):** Touch and hold this button to rewind quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop rewinding. The display will show the elapsed time of the track.

**▶▶ (Forward):** Touch and hold this button to fast forward quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop fast forwarding. The display will show the elapsed time of the track.

**▷ SEEK / ◀ SEEK:** Press the right arrow to go to the next track. Press the left arrow to go to the start of the current track, if more than five seconds have played. If either arrow is pressed more than once, the player will continue moving backward or forward through the CD. The sound will mute while seeking.

When playing an audio CD, if your vehicle has RSE, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the tracks on the CD.

## Using an MP3 CD

### MP3 Format

There are guidelines that must be met, when creating an MP3 disc. If the guidelines are not met when recording a CD-R(W), the CD may not play.

The guidelines are:

- Sampling rate: 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, and 44.1 kHz.
- Bit rates supported: 32, 40, 48, 56, 64, 80, 96, 112, 128, 160, 192, 224, 256, and 320 kbps.
- ID3 tag information is displayed by the radio if it is available. The radio supports ID3 tag information v1.0 or v1.1. The radio will display a filename, song name, artist name, album name, and directory name.
- Maximum 32 characters, including spaces, in a file or folder name.
- Maximum number of folders is 253 with a maximum hierarchy of eight folders.
- Create a folder structure that makes it easy to find songs while driving. Organize songs by albums using one folder for each album. Each folder or album should contain 18 songs or less.
- It is recommended that there is a maximum of 192 files on a disc.

- The files can be recorded on a CD-R or CD-RW with a maximum capacity of 700MB.
- DVD with MP3 are not playable on this system.

### Root Directory

The root directory will be treated as a folder. If the root directory has compressed audio files, the directory will be displayed as ROOT. All files contained directly under the root directory will be accessed prior to any root directory folders. However, playlists (Px) will always be accessed before root folders or files.

### Empty Directory or Folder

If a root directory or a folder exists somewhere in the file structure that contains only folders/subfolders and no compressed files directly beneath them, the player will advance to the next folder in the file structure that contains compressed audio files and the empty folder will not be displayed or numbered.

### No Folder

When the CD contains only compressed files, the files will be located under the root folder. The next and previous folder functions will have no function on a CD that was recorded without folders or playlists. When displaying the name of the folder the radio will display ROOT.

When the CD contains only playlists and compressed audio files, but no folders, all files will be located under the root folder. The left and right arrow buttons will search playlists (Px) first and then go to the root folder. When the radio displays the name of the folder the radio will display ROOT.

## Order of Play

Tracks will be played in the following order:

- Play will begin from the first track in the first playlist and will continue sequentially through all tracks in each playlist. When the last track of the last playlist has been played, play will continue from the first track of the first playlist.
- If the CD does not contain any playlists, then play will begin from the first track under the root directory. When all tracks from the root directory have been played, play will continue from files according to their numerical listing. After playing the last track from the last folder, play will begin again at the first track of the first folder or root directory.

When play enters a new folder, the display will not automatically show the new folder name. The new track name will appear on the display.

## File System and Naming

The song name that will display will be the song name that is contained in the ID3 tag. If the song name is not present in the ID3 tag, then the radio will display the file name without the extension (such as .mp3) as the track name.

Track names longer than 32 characters or four pages will be shortened. The display will not show parts of words on the last page of text and the extension of the filename will not display.

## Preprogrammed Playlists

You can access preprogrammed playlists which were created by WinAmp™, MusicMatch™, or Real Jukebox™ software, however, you will not have editing capability. These playlists will be treated as special folders containing compressed audio song files.

## Playing an MP3

With the ignition on, insert a CD partway into the slot, label side up. The player will pull it in and the CD should begin playing. While playing a CD, the navigation system is available. If you insert a CD with the system off and the ignition on, it will start to play.

When you insert a CD, the CD tab will display.

If you turn off the ignition or radio with a CD in the player, it will stay in the player. When you turn on the ignition or radio, the CD will start playing where it stopped, if it was the last selected audio source.

As each new track starts to play, the track number will appear on the display.

If playing a CD-R the sound quality may be reduced due to CD-R quality, the method of recording, the quality of the music that has been recorded, and the way the CD-R has been handled. There may be an increase in skipping, difficulty in finding tracks, and/or difficulty in loading and ejecting. If these problems occur, check the bottom surface of the CD. If the surface of the CD is damaged, such as cracked, broken, or scratched, the CD will not play properly. If the surface of the CD is soiled, see “Care of Your CDs” in the Index of your vehicle’s owner manual.

If there is no apparent damage, try a known good CD.

**Notice:** If a label is added to a CD, or more than one CD is inserted into the slot at a time, or an attempt is made to play scratched or damaged CDs, the CD player could be damaged. While using the CD player, use only CDs in good condition without any label, load one CD at a time, and keep the CD player and the loading slot free of foreign materials, liquids, and debris.

Do not add any label to a CD, it could get caught in the CD player. If a CD is recorded on a personal computer and a description label is needed, try labeling the top of the recorded CD with a soft marker instead.

If an error appears on the display, see “CD Messages” later in this section.

If viewing a map screen, touch the CD screen button. The display will split between the audio screen and the map screen. If you do not want to view a split screen or you are not on a map screen, press the AUDIO key to enter the audio screen, then press the AUDIO key until CD is highlighted or touch the CD screen button.



**|| / ▶ (Pause/Play):** Touch this button to pause the CD. This button will then change to the play button. Touch the play button to play the CD.

**Random:** Touch this screen button to hear the disc played in random (tracks and folders), rather than sequential, order. Touch Random again to turn off random play.

**◀◀ (Rewind):** Touch and hold this button to rewind quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop rewinding. The display will show the elapsed time of the track.

**▶▶ (Forward):** Touch and hold this button to fast forward quickly through a track selection. You will hear sound at a reduced volume. Release this button to stop fast forwarding. The display will show the elapsed time of the track.

**◀▶ (Folder):** Select the left or right arrow to go to the previous or next folder on the disc.

Press the middle screen button, with the folder name, to sort the MP3 by folder and file name. It may take a few minutes for the system to sort the MP3.

**Sort By:** Touch this screen button to organize the MP3 to enable you to sort the MP3 by artist, album, and genre. It may take a few minutes for the system to sort the MP3.

**▷ SEEK / ◀ SEEK:** Press the right arrow to go to the next track. Press the left arrow to go to the start of the current track, if more than five seconds have played. If either arrow is pressed more than once, the player will continue moving backward or forward through the CD. The sound will mute while seeking.

When playing an MP3, if your vehicle has RSE, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the MP3.



## CD Messages

If Disc Read Error appears on the display and/or the CD comes out, it could be for one of the following reasons:

- If a disc was inserted with an invalid or unknown format.
- If the map DVD disc was installed into the CD slot. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
- It is very hot. When the temperature returns to normal, the CD should play.
- You are driving on a very rough road. When the road becomes smoother, the CD should play.
- The CD is dirty, scratched, wet, or upside down.
- The air is very humid. If so, wait about an hour and try again.
- There may have been a problem while burning the CD.
- The label may be caught in the CD player.

If the CD is not playing correctly, for any other reason, try a known good CD.

If any error occurs repeatedly or if an error cannot be corrected, contact your dealer/retailer.

## DVD Player

The player can be used for CD, MP3, DVD audio, and as a DVD video player.

With the ignition on, insert a DVD partway into the slot, located at the top of the system, label side up. The player will pull it in and the DVD should begin playing. While playing a DVD, the navigation system is available. If you insert a DVD with the system off and the ignition on, it will start to play.

This feature will not operate on the navigation screen unless the vehicle is in PARK (P).

The Rear Seat Entertainment (RSE) video screen will start play of the DVD when a DVD has been inserted into the navigation system. See *Rear Seat Entertainment (RSE) System on page 3-23* for information on operating the rear seat entertainment system.

The DVD player is only compatible with DVDs of the appropriate region code that is printed on the jacket of most DVDs.

The DVD slot is compatible with most audio CDs, CD-R, CD-RW, DVD-Video, DVD-Audio, DVD-R/RW, DVD+R/RW media along with MP3 and un-protected WMA formats.

The navigation system can play digital recordings such as Dolby® Digital (AC-3), DTS, or MLP (DVD-A).

If playing any compatible DVD-R the sound quality may be reduced due to disc quality, the method of recording, the quality of the video that has been recorded, and the way the disc has been handled. There may be an increase in skipping, difficulty in finding chapters, and/or difficulty in loading and ejecting. If these problems occur, check the bottom surface of the DVD. If the surface of the DVD is damaged, such as cracked, broken, or scratched, the DVD will not play properly.

If there is no apparent damage, try a known good DVD.

**Notice:** If you add any label to a DVD, insert more than one DVD into the slot at a time, or attempt to play scratched or damaged DVDs, you could damage the DVD player. When using the DVD player, use only DVDs in good condition without any label, load one DVD at a time, and keep the DVD player and the loading slot free of foreign materials, liquids, and debris.

Do not add any label to a DVD, it could get caught in the DVD player. If a DVD is recorded on a personal computer and a description label is needed, try labeling the top of the recorded DVD with a soft marker instead.


If an error appears on the display, see “DVD Messages” later in this section.

## Playing a DVD

There are three ways to play a DVD:

- Once a DVD is inserted, the system will automatically start play of the DVD.
- If you are on a map screen, touch the DVD screen button.
- Press the AUDIO hard key, then touch the DVD screen button.


When a DVD is playing in the DVD player, the rear seat operator can power on the RSE video screen and use the remote control to navigate through the DVD.

 **(Power/Volume):** Press this knob to turn the system on and off. Turn the knob to increase or decrease the volume of the audio system.

Press and hold this knob for more than two seconds to turn the navigation system, RSE, and RSA off.

## DVD Menu Options

Once a DVD starts to play, the menu options will automatically appear. To display the menu choices while a DVD is playing in full screen, touch anywhere on the screen.

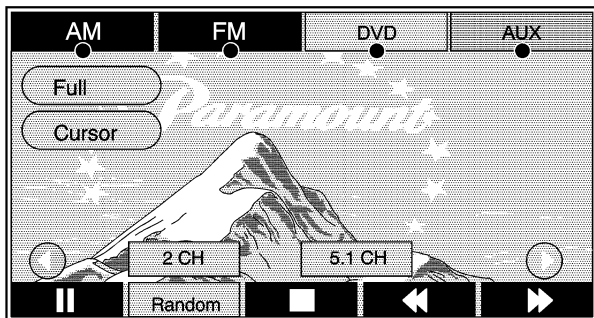

There are three pages of menu options. Press the right and left arrow screen buttons to use all of the menu screen buttons. Menu options are available when they are highlighted. Some menu options are only available when the DVD is not playing.

**Full:** Press this screen button to remove all menu options from the display. Press anywhere on the screen to display the menu options.

**Cursor:** Touch this button to access the cursor menu. The arrows and other cursor options allow you to navigate the DVD menu options. The cursor menu options are only available if a DVD has a menu.

**2 CH (channel) and 5.1 CH (channel):** See "Digital Signal Processing (DSP)" under *Navigation Audio System on page 3-2* for information on these screen buttons.

**◀, ▲, ▶, ▼ (Arrow Buttons):** Use these arrow buttons to move around the DVD menu.

**Enter:** Touch this button to select the highlighted option.

**Return:** Touch this button to go back to the previous DVD menu.

**Back:** Touch this button to go back to the main DVD display screen.

**Move:** Touch this button to move the cursor buttons back and forth from the bottom-right corner to the top-left corner of the screen.

**|| / ▶ (Pause/Play):** Touch this button to pause the DVD. This button will then change to the play button. Touch the play button to play the DVD.

When a DVD movie is inserted in the DVD slot, and the vehicle is started, pressing the play button will start the movie and turn on the rear screen.

**Random:** Touch this screen button to hear the disc played in random, rather than sequential, order. Touch Random again to turn off random play. This button is not available for DVD video.

**■ (Stop):** Touch this button to stop play of the DVD. Press the play button to continue playing the DVD from where the DVD was stopped. Press this button twice to return to the beginning of the DVD.

**◀ (Rewind):** Touch and hold this button to rewind through the scene, chapters, and titles. This button may not work when the DVD is playing the copyright information or the previews.

**▶ (Forward):** Touch and hold this button to advance rapidly through the scene, chapters, and titles. This button may not work when the DVD is playing the copyright information or the previews.

**Top Menu:** Touch this button to display the first menu of the DVD. This is not available on all DVDs.

**Menu:** Touch this button to display the DVD menu of the current area of the DVD that is playing. This button is not available for DVD video.

**Search:** Touch this button to display the title search screen. The keyboard allows you to type in the title number of the title that you would like to watch.

**Setup:** Touch this button to display the DVD Setup screen. This button is only available when the DVD is not playing. The DVD Setup screen allows you to change the brightness, contrast, and mode, change the viewing on the monitor, and to change the initial settings; language, parental level, and aspect.

**☀ (Brightness):** Touch the up or down screen arrows to increase or decrease the brightness of the navigation screen.


**◐ (Contrast):** Touch the up or down screen arrows to increase or decrease the contrast of the navigation screen.


**Auto (Automatic):** Touch this screen button for the system to automatically adjust the navigation screen background depending on exterior lighting conditions.


**Night:** Touch this screen button and the system will make the navigation screen background darken.

**Day:** Touch this screen button and the system will make the navigation screen background brighter.


**Monitor:** From the DVD Setup screen, touch this button to adjust the viewing angle of the DVD on the navigation screen. This is not available on all DVDs.

Touch the  button to close the screen in from the left and right sides.

Touch the  button to fill the screen on the left and right sides.

Touch the  button to fill the screen on the top and bottom.

**Initial Settings:** From the DVD Setup screen, touch this button to change audio, subtitle, and menu languages, parental level, and to view the aspect of the DVD. The movie must be stopped to use this menu. These settings are not available on all DVDs.

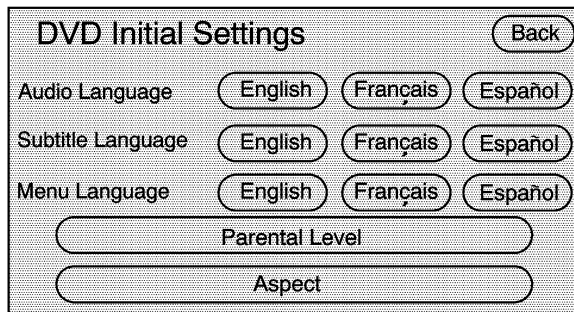

**Audio Language:** Touch English, Francais, or Espanol to change the language that you are listening to.

**Subtitle Language:** Touch English, Francais, or Espanol to change the language of the subtitles.

**Menu Language:** Touch English, Francais, or Espanol to change the language of the menus.

**Parental Level:** Touch this button to change the rating level to only allow the play of DVDs with a certain rating. The rating selection is 1 through 8, with 1 being a G rating. If the 1 is selected, any DVD with a rating above G will not be able to be viewed without entering a password.

When the parental level screen is first entered a keyboard will appear on the display and a four-digit password will need to be created. Type in a password that you will be able to remember. Once the password is created, you can then select a rating level.

If you would like to change the rating level, press the Parental Level button, then press the Password button. Type in the password and then change the rating level.

If you have forgotten your password, contact your dealer/retailer.

This may not be available on all DVDs.

**Aspect:** Touch this button to change the aspect ratio of the DVD. This may not be available on all DVDs.

**Audio:** Press this button to display the audio stream number and to change the language heard. Repeatedly press this button to toggle through the available languages. This may not be available on all DVDs. This button is not available when the DVD is stopped.

**Subtitle:** Touch this button to playback the video with subtitles. Repeatedly press this button to toggle through the available languages. To turn the subtitles off, press this button until Off is selected. This button is not available when the DVD is stopped. This may not be available on all DVDs.

**Angle:** Touch this button to adjust the viewing angle of the DVD. Repeatedly press this button to toggle through the angles. This button is not available when the DVD is stopped. This may not be available on all DVDs.

◀ **Page:** Press this button to go to the previous scene. This button is not available when the DVD is stopped. This button is not available for DVD video.

**Page ▶ :** Press this button to go to the next scene. This button is not available when the DVD is stopped. This button is not available for DVD video.

**SEEK ▷ (Next Track/Chapter):** Press this hard key to go to the next track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

◀ **SEEK (Previous Track/Chapter):** Press this hard key to return to the start of the current track or chapter. Press this button again to go to the previous track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

## DVD Messages

If Disc Read Error appears on the display and/or the DVD comes out, it could be for one of the following reasons:

- If a disc was inserted with an invalid or unknown format.
- If the disc is not from a correct region.
- If the map DVD disc was installed into the DVD audio/video slot. See “Installing the Map DVD” under *Maps on page 2-4* for more information.
- It is very hot. When the temperature returns to normal, the DVD should play.
- You are driving on a very rough road. When the road becomes smoother, the DVD should play.
- The DVD is dirty, scratched, wet, or upside down.
- The air is very humid. If so, wait about an hour and try again.
- There may have been a problem while burning the DVD.
- The label may be caught in the DVD player.

If the DVD is not playing correctly, for any other reason, try a known good DVD.

If any error occurs repeatedly or if an error cannot be corrected, contact your dealer/retailer.

## Rear Seat Entertainment (RSE) System

Your vehicle may have the Digital Versatile Disc (DVD) Rear Seat Entertainment (RSE) system. The RSE system includes a video display screen, two sets of wireless headphones, and a remote control.

See *DVD Player on page 3-17* for all information on inserting a DVD and using the navigation system screens for DVD play.


### Parental Control

See “DVD Menu Options” under *DVD Player on page 3-17* for parental control information.

### Before You Drive

The RSE system is for rear seat passengers only. The driver cannot safely view the video screen while driving and should not try to do so.

## Headphones

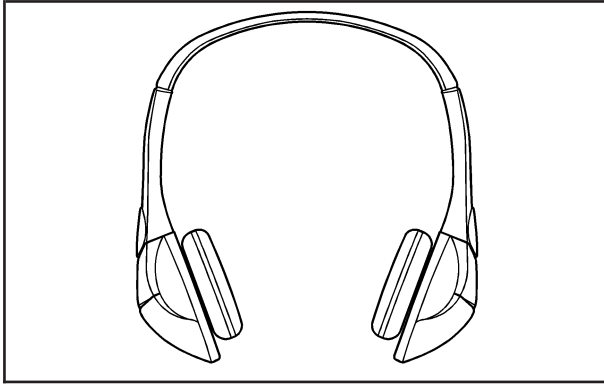

The RSE includes two 2-channel wireless headphones that are dedicated to this system. These headphones are used to listen to media such as CDs, DVDs, MP3s, DVDAs, radio, or any auxiliary source connected to the auxiliary input jack, if your vehicle has this feature or A/V jacks. The wireless headphones have a power On/Off button, channel selector switch (1 or 2), and a volume control.

If your vehicle has a third row video screen display, it will have two additional headphones.

Push the power button to turn on the headphones. An indicator light located on the headphones will come on. If the light does not come on, the batteries may need to be replaced. See “Battery Replacement” later in this section for more information. Switch the headphones to Off when not in use. Channel 1 is dedicated to the video screen, while Channel 2 is dedicated to RSA selections.

The infrared transmitters are located at the rear of the RSE center console. The headphones will shut off automatically to save the battery power if the RSE system and the RSA are shut off or if the headphones are out of range of the transmitters for more than 3 minutes. If you move too far forward or step out of the vehicle, the headphones will lose the audio signal.

The headphones will automatically turn off after four hours of continuous use.

To adjust the volume on the headphones, use the volume control located on the right side.

For optimal audio performance, the headphones must be worn correctly. The symbol L (Left) will appear on the upper left side, above the ear pad and should be positioned on the left ear. The symbol R (Right) will appear on the upper right side, above the ear pad and should be positioned on the right ear.



**Notice:** Do not store the headphones in heat or direct sunlight. This could damage the headphones and repairs will not be covered by your warranty. Storage in extreme cold can weaken the batteries. Keep the headphones stored in a cool, dry place.

The foam ear pads attached to the headphones may become worn or damaged if they are not handled or stored properly. If the foam ear pads do become damaged or worn out, the pads can be replaced separately from the headphone set. It is not necessary to replace the complete headphone set. The headphone replacement foam ear pads can be ordered in pairs. See your dealer/retailer for more information.


## Battery Replacement

To change the batteries, do the following:

1. Turn the screw with a coin or screw driver to loosen, then slide open the battery door located on the left side of the headphones.
2. Replace the two AAA batteries in the compartment. Make sure that they are installed correctly, using the diagram on the inside of the battery compartment.
3. Replace the battery door and tighten the door screw.

If the headphones are to be stored for a long period of time, remove the batteries and keep them in a cool, dry place.

## Audio/Video (A/V) Jacks

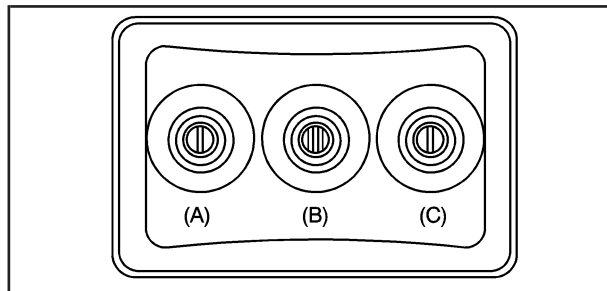

The A/V jacks are located on the rear of the floor console. The A/V jacks allow audio or video signals to be connected from an auxiliary device such as a camcorder or a video game unit to the RSE system. Adapter connectors or cables may be required to connect the auxiliary device to the A/V jacks. Refer to the manufacturer's instructions for proper usage.

The A/V jacks are color coded to match typical home entertainment system equipment. The yellow jack (A) is for the video input. The white jack (B) is for the left audio input. The red jack (C) is for the right audio input.

Power for auxiliary devices is not supplied by the radio system.

To use the auxiliary inputs of the RSE system, connect an external auxiliary device to the color-coded A/V jacks and turn both the auxiliary device and the video screen power on. If the video screen is in the DVD player mode, pressing the AUX button on the remote control will switch the video screen from the DVD player mode to the auxiliary device. The radio will play the audio of the connected auxiliary device by sourcing to auxiliary.

## How to Change the RSE Video Screen Settings

The screen display mode (normal, full, and zoom), screen brightness, and setup menu language can be changed from the on screen setup menu. To change any feature, perform the following:

1. Press the display menu button on the remote control.
2. Use the remote control menu navigation arrows and the enter button to use the setup menu.
3. Press the display menu button again to remove the setup menu from the screen.

## Audio Output

Audio from the DVD player or auxiliary inputs may be heard through the following possible sources:

- Wireless Headphones
- Vehicle Speakers
- Vehicle wired headphone jacks, if your vehicle has this feature.

The RSE system will always transmit the audio signal by infrared to the wireless headphones, if there is audio available. See “Headphones” previously for more information.

The RSE system is capable of outputting audio to the vehicle speakers by using the navigation system. The RSE system may be selected as an audio source on the navigation system if the RSE system power is on. Once the RSE system is selected as an audio source on the navigation system, adjust the speaker volume, if necessary. If the RSE system power is not on, the RSE system will not be an available source on the radio.

The RSE system is capable of outputting audio to the wired headphone jacks (if equipped).

## Video Screen

The video screen is located in the center console.

**Notice:** Avoid directly touching the video screen, as damage may occur. See “Cleaning the Video Screen” later in this section for more information.

To use the video screen, rotate the screen to the desired viewing position.

When the video screen is not in use, rotate it to its closed position.

If a DVD is playing and the screen is rotated to its closed position, the screen will remain on, this is normal, and the DVD will continue to play through the previous audio source. Use the remote control power button or eject the disc to turn off the screen.

The RSE console contains the IR transmitters for the wireless headphones and the IR receivers for the remote control. They are located above the display. If the screen is in the closed position, the signals will not be available for the operation of the headphones or the remote control.


## Remote Control


**Notice:** Storing the remote control in a hot area or in direct sunlight can damage it, and the repairs will not be covered by your warranty. Storage in extreme cold can weaken the batteries. Keep the remote control stored in a cool, dry place.


To use the remote control, aim it at the transmitter window above the video screen and press the desired button. Direct sunlight or very bright light may affect the ability of the RSE transmitter to receive signals from the remote control. If the remote control does not seem to be working, the batteries may need to be replaced. See “Battery Replacement” later in this section. Objects blocking the line of sight may also affect the function of the remote control.


If a CD or DVD is in the DVD slot, the remote control power button can be used to turn on the video screen display and start the disc.


## Remote Control Buttons

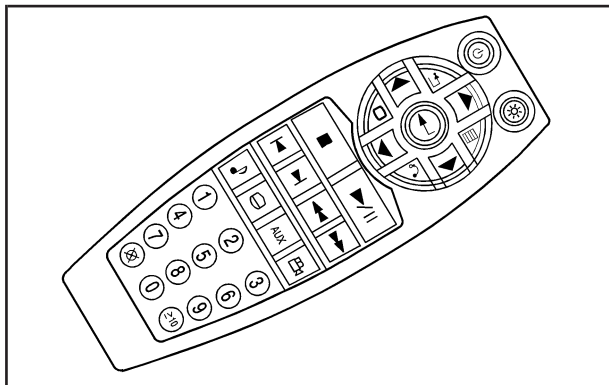



 **(Power):** Press this button to turn the video screen on and off.


 **(Illumination):** Press this button to turn the remote control backlight on. The backlight will automatically time out after 7 to 10 seconds if no other button is pressed while the backlight is on.


 **(Title):** Press this button to return the DVD to the main menu of the DVD. This function may vary for each disc.


 **(Main Menu):** Press this button to access the DVD menu. The DVD menu is different on every DVD. Use the up, down, left, and right arrow buttons to move the cursor around the DVD menu. After making a selection press the enter button. This button only operates when using a DVD.

 **(Menu Navigation Arrows):** Use the arrow buttons to navigate through a menu.

 **(Enter):** Press this button to select the choice that is highlighted in any menu.

 **(Display Menu):** Press this button to adjust the brightness, screen display mode (normal, full, or zoom), and display the language menu.

 **(Return):** Press this button to exit the current active menu and return to the previous menu. This button will operate only when the display menu or a DVD menu is active.

 **(Stop):** Press this button to stop playing, rewinding, or fast forwarding a DVD. Press this button twice to return to the beginning of the DVD.

▶ || **(Play/Pause):** Press this button to start playing a DVD. Press this button while a DVD is playing to pause it. Press it again to continue playing the DVD.

When the DVD is playing, depending on the radio, you may be able to do slow play by pressing the pause button then pressing the fast forward button. The DVD will continue playing in a slow play mode. You may also, depending on the radio, perform reverse slow play by pressing the pause button and then pressing the fast reverse button. To cancel slow play mode, press the play/pause button.

◀ **(Previous Track/Chapter):** Press this button to return to the start of the current track or chapter. Press this button again to go to the previous track or chapter. This button may not work when the DVD is playing the copyright information or the previews.

▶ **(Next Track/Chapter):** Press this button to go to the beginning of the next chapter or track. This button may not work when the DVD is playing the copyright information or the previews.

◀ **(Fast Reverse):** Press this button to fast reverse the DVD or CD. To stop fast reversing a DVD video, press the play button. To stop fast reversing a DVD audio or CD, release the fast reverse button. This button may not work when the DVD is playing the copyright information or the previews.

▶▶ **(Fast Forward):** Press this button to fast forward the DVD or CD. To stop fast forwarding a DVD video, press the play button. To stop fast forwarding a DVD audio or CD, release the fast forward button. This button may not work when the DVD is playing the copyright information or the previews.


🎵 **(Audio):** Press this button to change audio tracks on DVDs that have this feature when the DVD is playing. The format and content of this function will vary for each disc.

☐ **(Subtitles):** Press this button to turn ON/OFF subtitles and to move through subtitle options when a DVD is playing. The format and content of this function will vary for each disc.


**AUX (Auxiliary):** Press this button to switch the system between the DVD player and an auxiliary source.

If your vehicle has a third row video screen, the AUX button will control the source display on the second row video screen, and the third row video screen as described in the table below:

Aux Button Press	Second Row Screen	Third Row Screen
Default State (No Press)	DVD Media	DVD Media
First Press	Aux Video Source	Aux Video Source
Second Press	DVD Media	Aux Video Source
Third Press	Aux Video Source	DVD Media
Fourth Press	Return to Default State	Return to Default State

 **(Camera):** Press this button to change camera angles on DVDs that have this feature when a DVD is playing. The format and content of this function will vary for each disc.

**1 through 0 (Numeric Keypad):** The numeric keypad provides the capability of direct chapter or track number selection.

 **(Clear):** Press this button within three seconds after entering a numeric selection, to clear all numeric inputs.

$\geq$  **10 (Double Digit Entries):** Press this button to select chapter or track numbers greater than 9. Press this button before entering the number.

## Battery Replacement

To change the remote control batteries, do the following:

1. Remove the battery compartment door located on the bottom of the remote control.
2. Replace the two AA batteries in the compartment. Make sure that they are installed correctly, using the diagram on the inside of the battery compartment.
3. Close the battery door securely.

If the remote control is to be stored for a long period of time, remove the batteries and keep them in a cool, dry place.

<b>Problem</b>	<b>Recommended Action</b>
No power.	The ignition might not be in on or accessory. The parental control button might have been turned on. The power indicator light will flash.
Disc will not play.	The system might be off. The parental control button might have been turned on. The power indicator light will flash. The system might be in auxiliary mode. The disc is upside down or is not compatible.
The picture does not fill the screen. There are black borders on the top and bottom or on both sides or it looks stretched out.	Check the display mode settings in the display menu.
The disc was ejected, but it was pulled back into the DVD player.	The disc is being stored in the DVD player. Press the eject button again to eject the disc.

<b>Problem</b>	<b>Recommended Action</b>
In auxiliary mode, the picture moves or scrolls.	Check the auxiliary input connections at both devices. Change the Video Format to PAL or NTSC. See "Stereo RCA Jacks" previously for how to change the video format.
The language in the audio or on the screen is wrong.	Check the audio or language selection in the main DVD menu.
The remote control does not work.	Check to make sure there is no obstruction between the remote control and the transmitter window. Check the batteries to make sure they are not dead or installed incorrectly. The parental control button might have been turned on. The power indicator light will flash.

<b>Problem</b>	<b>Recommended Action</b>
After stopping the player, I push Play but sometimes the DVD starts where I left off and sometimes at the beginning.	If the stop button was pressed one time, the DVD player will resume playing where the DVD was stopped. If the stop button was pressed two times the DVD player will begin to play from the beginning of the DVD.
The auxiliary source is running but there is no picture or sound.	Check that the DVD player is in the auxiliary source mode. Check the auxiliary input connections at both devices.
My disc is stuck in the player. The Load/Eject button does not work.	Turn the DVD power off, then on, then press the load/eject button on the DVD player. Do not attempt to forcibly remove the disc from the DVD player. This could permanently damage the disc and DVD player.

<b>Problem</b>	<b>Recommended Action</b>
Sometimes the wireless headphone audio cuts out or buzzes.	Check for obstructions, low batteries, reception range, and interference from cellular telephone towers or by using your cellular telephone in the vehicle. Check that the headphones are facing the front of the vehicle.
I lost the remote and/or the headphones.	See your dealer/retailer for assistance.
The DVD is playing, but there is no picture or sound.	Check that the DVD player is in DVD mode.
The audio/video skips or jumps.	The DVD or CD could be dirty, scratched, or damaged.
The audio from the radio for the Radio with Six-Disc CD and XM™ has taken over the audio from the DVD or CD when using the wired headphones.	The RSE is working correctly. Use the wireless headphones or have the front seat passengers listen to another audio source.



## DVD Display Error Messages

The DVD display error message depends on which radio you have. The video screen may display one of the following:

**Disc Load/Eject Error:** This message will display when there are disc load or eject problems.

**Disc Format Error:** This message will display, if the disc is inserted with the disc label wrong side up, or if the disc is damaged.

**Disc Region Error:** This message will display, if the disc is not from a correct region.

**No Disc Inserted:** This message will display, if no disc is present when the EJECT button is pressed on the navigation system.

## DVD Distortion

There may be an experience with audio distortion in the wireless headphones and video distortion in the video display when operating cellular phones, scanners, CB radios, Global Positioning Systems (GPS)\*, two-way radios, mobile fax, or walkie talkies.

It may be necessary to turn off the DVD player when operating one of these devices in or near the vehicle.

\* Excludes the OnStar® System.

## Cleaning the Video Screen

When cleaning the video screen, use only a clean cloth dampened with clean water. Use care when directly touching or cleaning the screen, as damage may result.


## Rear Seat Audio (RSA)

This feature allows rear seat passengers to listen to and control any of the music sources: radio, CDs, DVDs, or other auxiliary sources. However, the rear seat passengers can only control the music sources the front seat passengers are not listening to (except on some radios where dual control is allowed). For example, rear seat passengers can listen to and control a CD through the headphones, while the driver listens to the radio through the front speakers. The rear seat passengers have control of the volume for each set of headphones.

You can operate the RSA functions even when the main radio is off.

Audio can be heard through wired headphones (not included) plugged into the jacks on the RSA. If your vehicle has this feature, audio can also be heard on Channel 2 of the wireless headphones.

The audio system mutes the rear speakers when the RSA audio is active through the headphones.

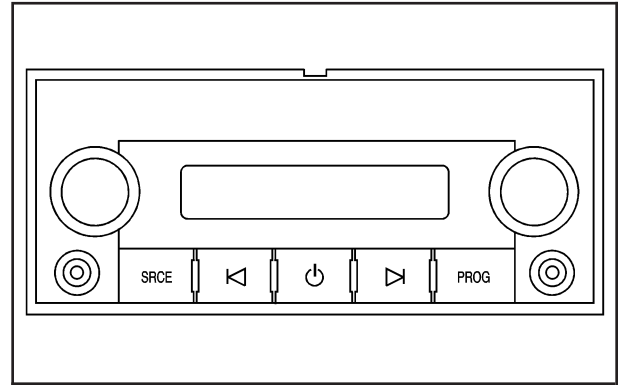

**Power:** Press this button to turn the RSA on or off.

**Volume:** Turn this knob to increase or to decrease the volume of the wired headphones. The left knob controls the left headphones and the right knob controls the right headphones.

**SRCE (Source):** Press this button to switch between the radio (AM/FM), XM (if equipped), CD, and if your vehicle has these features, DVD, front auxiliary, and rear auxiliary.

◀ ▶ **(Seek):** When listening to FM, AM, or XM (if equipped), press the seek up or the seek down arrow to go to the next or the previous station or channels and stay there. This function is inactive, with some radios, if the front seat passengers are listening to the radio.

Press and hold the seek up or seek down arrow until the display flashes, to tune to an individual station. The display will stop flashing after the buttons have not been pushed for more than two seconds. This function is inactive, with some radios, if the front seat passengers are listening to the radio.

While listening to a CD, press the seek up arrow to hear the next track on the CD. Press the seek down arrow to go back to the start of the current track (if more than ten seconds have played). This function is inactive, with some radios, if the front seat passengers are listening to the radio.

When a DVD video menu is being displayed, press the seek up arrow or seek down arrow to perform a cursor up or down on the menu. Hold the seek up arrow or seek down arrow to perform a cursor right or left on the menu.

**PROG (Program):** Press this button to go to the next preset radio station or channel set on the main radio. This function is inactive, with some radios, if the front seat passengers are listening to the radio.

When a CD or DVD audio is playing, press this button to go to the beginning of the CD or DVD audio. This function is inactive, with some radios, if the front seat passengers are listening to the CD or DVD audio.

When a disc audio is playing in the CD or DVD changer, press this button to select the next disc, if multiple discs are loaded. This function is inactive, with some radios, if the front seat passengers are listening to the disc.

When a DVD video menu is being displayed, press the PROG button to perform the menu function, enter.

## Auxiliary Devices

The navigation system has an auxiliary input jack located in the lower right corner of the faceplate. This is not an audio output; do not plug the headphone set into the front auxiliary input jack. You can however, connect an external audio device such as an iPod, laptop computer, MP3 player, CD changer, or cassette tape player, etc. to the auxiliary input jack for use as another source for audio listening.

Drivers are encouraged to set up any auxiliary device while the vehicle is in PARK (P). See “Defensive Driving” in the Index of your vehicles owner manual for more information on driver distraction.

If your vehicle has rear audio/video input jacks, located in the rear of the center console, they can be used as another source for audio/video listening.

To use a portable audio player, connect a 3.5 mm (1/8 inch) cable to the auxiliary input jack. When a device is connected, the system will detect and automatically begin playing audio from the device over the vehicle’s speakers.

If a device is connected and you are listening to another source (FM, CD, MP3, etc.), press the AUDIO key then press the AUDIO key repeatedly until AUX is selected or touch the AUX screen button. An auxiliary device must be connected for the AUX screen button to appear as an option to select or the vehicle must have rear auxiliary jacks. See *Rear Seat Entertainment (RSE) System on page 3-23* for more information on the rear auxiliary jacks.

# Section 4 Voice Recognition

---

Voice Recognition .....4-2

# Voice Recognition

The navigation system's voice recognition allows for hands-free operation of the navigation system, audio system, and OnStar® features. The DVD map disc must be installed in the navigation system for voice recognition to work. See "Installing the DVD Map Disc" under *Maps on page 2-4*. Voice recognition can be used when the ignition is on or when Retained Accessory Power (RAP) is active. See "Retained Accessory Power (RAP)" in the Index of your vehicle's owner manual and for more information.

To use voice recognition, do the following:

1. Push and hold the "☎" (talk) steering wheel control until you hear a beep. The audio system, if on, will mute.
2. Clearly state one of the commands listed on the following pages.

## Helpful Hints for Stating Commands

- When a multiple command is available, choose the command that best works for you.
- Words that are in brackets are optional. For example, for the command Radio [band] [select] FM, stating Radio FM or Radio select FM are both valid commands.
- When the system recognizes the command the system will:
  - either perform the function
  - ask you to confirm your choice by clearly stating "yes or no"
  - issue an error message such as "System does not recognize this command" or direct you to "Please start speaking after the beep"
- If the system is not yet ready, the system may state "System is checking the disc. Please wait."
- To cancel a command or if the system response does not match your verbal command, press and hold the talk symbol button. The system will reply, "System will cancel the voice recognition".

- If you experience difficulty with the system recognizing a command, try saying it more softly, and wait for a few seconds after the beep, or you may just try saying it again.
- Background noise may cause voice commands to be misunderstood, including airflow noise from wind.
- To use the voice recognition system, the map DVD must be loaded.

This system is able to recognize commands in three different languages. The system will only recognize commands based on the language selected from the Driver Information Center (DIC). See “Driver Information Center, DIC Vehicle Personalization” in the Index of your vehicles owner manual.


## Voice Recognition Commands

The following list shows all of the voice commands available for the navigation system with a brief description of each. The commands are listed with the optional words in brackets. To use the voice commands, refer to the instructions listed previously.

## Voice Tag Commands

The following are voice tag commands you can access by clearly stating the commands exactly as they are written. You may have up to 40 voice tag entries for destinations.

**Navigation go to [destination] (voice tag), navigation select [destination] (voice tag):** These commands instruct the system to select a destination saved under the voice tag you have stored.

When a destination is requested using a voice tag, the system will state, “Press or say cancel if not correct”. To cancel this voice tag destination, using voice recognition, push and hold the “ (talk) steering wheel control until you hear a beep, then say “cancel”.

If you are not currently driving on a route, the system will automatically create the voice tag destination as the final destination. If you are currently driving on a route, the system will automatically create the voice tag destination as a waypoint. Up to three waypoints can be created.

## Storing Voice Tags

From the address book entry information page, press the Add Voice tag screen button. The system will respond “Name Please?”.

## Navigation Help

**Navigation Help:** This command instructs the system to assist with navigation commands.

## Display Commands

Use the following display commands to set the display mode.

**Display [set] day [mode]:** Use this command to set the display to daytime mode.

**Display [set] night [mode]:** Use this command to set the display to night mode.

**Display [set] auto [mode]:** Use this command to set the display to automatic mode. The system will change between day and night mode automatically.

**System help:** This command instructs the system to assist with display commands.

## Radio Commands

The following are radio commands you can access by clearly stating the commands exactly as they are written. The commands are only available when you are in one of the following audio modes, AM, FM, or XM™ (if equipped).

**Radio:** This command instructs the system to turn the audio system on.

**Radio [band] [select] AM, radio [band] [select] FM, radio [band] [select] XM, radio [band] [select] satellite:** These commands instruct the system to go to either the AM, FM, or XM (if equipped).

**Radio [select] (frequency) AM, radio [select] (frequency) FM:** These commands instruct the system to go to a specific frequency on either AM or FM.

**Radio [select] (channel) XM, radio [select] (channel) satellite:** These commands instruct the system to go to a specific channel on the XM™ band (if equipped). The channel must be a valid channel or the system will keep the radio at the current station setting. The system will pause while searching for the channel.

**Radio help:** This command instructs the system to assist with radio commands.



## CD Commands

The following are CD, MP3, and DVD commands that can be accessed by clearly stating the commands exactly as they are written.

**CD, DVD, Disc:** Use this command to select a CD, DVD, or disc that is currently loaded.

**CD, DVD, Disc, [select] track (one, two, three, etc.):** This command instructs the system to select a specific track number.

**CD, DVD, Disc select next folder:** Use this command to select the next folder on the MP3 or audio DVD.

**CD, DVD, Disc select previous folder:** Use this command to select the previous folder on the MP3 or audio DVD.

**CD help, DVD help, Disc help:** This command instructs the system to assist with CD and DVD commands.

## Auxiliary Commands

The following auxiliary commands can be accessed by clearly stating the commands exactly as they are written. The commands are available when the auxiliary source is available.

**Aux, Auxiliary:** Use this command to select the auxiliary device, when a device is connected.

## OnStar<sup>®</sup> Command

**OnStar:** This command instructs the system to connect to OnStar<sup>®</sup>. You will enter the OnStar<sup>®</sup> voice recognition system. Refer to your OnStar<sup>®</sup> manual for more information.

## Voice Help

**Voice help:** This command will provide a description of help commands that are available to use.



## A

Adding Destinations to the Address Book .....	2-28
Adding or Changing Preset Destinations .....	2-28
Alpha-Numeric Keyboard .....	2-3
Audio Output .....	3-26
Audio System .....	3-2
Audio/Video (A/V) Jacks .....	3-25
Auto Reroute .....	2-13
Auxiliary Devices .....	3-36

## B

Before You Drive .....	3-23
------------------------	------

## C

Canadian Owners .....	iii
Canceling Guidance .....	1-11
CD	
Player .....	3-11
CD Messages .....	3-17

CD Player .....	3-11
Cleaning the Video Screen .....	1-11, 3-33
Configure Menu .....	2-29

## D

Database Coverage Explanations .....	2-40
Deleting Personal Information .....	1-6
Destination .....	2-14
Detailed Areas .....	2-4
Display .....	2-36
Driving on a Route .....	2-13
DVD	
Player .....	3-17
Rear Seat Entertainment System .....	3-23
DVD Display Error Messages .....	3-33
DVD Distortion .....	3-33
DVD Map Disc Messages .....	2-6
DVD Menu Options .....	3-19
DVD Messages .....	3-23
DVD Player .....	3-17

## **E**

Ejecting the DVD Map Disc ..... 2-6

## **F**

Finding a Station ..... 3-3

## **G**

Getting Started, Navigation ..... 1-4

Getting Started on Your Route ..... 2-25

Global Positioning System (GPS) ..... 2-37

Guidance Volume ..... 1-11

## **H**

Handling the DVD Map Disc ..... 2-6

Hard Keys ..... 2-2

Headphones ..... 3-24

## **I**

Installing the DVD Map Disc ..... 2-5

## **L**

Language — English/Metric ..... 1-6

Limited Guidance Areas ..... 2-4

## **M**

Map Adjustments ..... 2-7

Map Scales ..... 2-7

Maps ..... 2-4

Menu  
    Configure ..... 2-29

## N

Nav (Navigation) .....	2-30
Navigation	
Getting Started .....	1-4
System Overview .....	1-2
Using the System .....	2-2

## O

Ordering	
Map DVDs .....	2-40
Overview, Navigation System .....	1-2
Owners, Canadian .....	iii

## P

Parental Control .....	3-23
Playing a DVD .....	3-18
Playing the Radio .....	3-2
Problems with Route Guidance .....	2-39
Propriétaires Canadiens .....	iii

## R

Radio .....	2-30, 3-2
Radio Data System (RDS) .....	3-9
Radio Menu .....	3-7
Rear Seat Audio (RSA) .....	3-34
Rear Seat Entertainment System .....	3-23
Remote Control .....	3-27

## S

Scrolling the Map .....	2-7
Setting the Search Area, Entering an Address and Point of Interest, and Storing Preset Destinations .....	1-7
Setting the Time .....	1-7
Sound .....	2-30
Sound Menu .....	3-5
Storing Radio Station Presets .....	1-7, 3-5
Symbols .....	2-8
System Needs Service, If .....	2-39

## T

- Touch-Sensitive Screen Buttons ..... 2-3
- Traveling Across Regions ..... 2-14

## U

- Using an MP3 CD ..... 3-13
- Using Your Stored Preset Destinations ..... 1-11

## V

- Vehicle Positioning ..... 2-38
- Video Screen ..... 3-27
- Video Screen, Cleaning ..... 1-11
- Voice Recognition ..... 4-2
- Voice Recognition Commands ..... 4-3

## X

- XM™ Satellite Radio Service ..... 3-10