



'08 EX

Quick Reference
Guide

QUICK REFERENCE GUIDE

Introduction

This easy-to-use Quick Reference Guide will help you to more fully appreciate your vehicle's superior features, unique functions and advanced technology.

- The Quick Reference Guide is intended to provide you with a user-friendly learning experience to quickly acquaint you with your new INFINITI vehicle.
- Refer to the Quick Reference Guide to learn how to personalize your vehicle's controls and equipment to maximize your driving comfort and convenience.

However, it is not intended to replace your vehicle Owner's Manual. For comprehensive vehicle safety information and product details, please refer to your Owner's Manual. It will help you to better understand the operation and proper maintenance of your new INFINITI vehicle.

Both INFINITI and your INFINITI dealer are dedicated to serving all your automotive needs. Your complete satisfaction is our primary concern. It is suggested that you read this Quick Reference Guide and your vehicle Owner's Manual thoroughly before contacting your INFINITI dealer with related questions.



contents

	Page
GETTING STARTED	
Intelligent Key System	1
In-Dash Intelligent Key Port	1
Lock/Unlock Operation – Door Handle Request Switches	1
Outside Buzzer and Lockout Protection	1
Push Button Ignition Switch	1
Intelligent Key	2
Opening the Windows	2
Deactivating /Activating the Horn Beep Feature	2
Automatic Door Lock/Unlock	3
Child Safety Rear Door Locks	4
Opening the Fuel-Filler Lid	4
Opening and Closing the Lift-Gate	4
Vehicle Control Center – Overview	5
INFINITI Controller	5
Center Display Screen	6
Buttons Surrounding the INFINITI Controller	6
Steering Wheel Controls	8
Touch Screen Operation	10
Instrument Panel Layout	11
Front-Passenger Air Bag Status Light	12
Power Seat Adjustment	13
Automatic Drive Positioner Memory System & Entry Exit	14
Seat Synchronization Function	15
DRIVING CONTROLS	
Intelligent Cruise Control (ICC) & Cruise Controls	16
Lane Departure Warning (LDW)	17
Lane Departure Prevention (LDP)	18
Sonar System	18
All-Wheel Drive (AWD)	19
Snow Mode ON/OFF Switch	19
MEDIA CENTER	
Audio System	20
How to Customize Your Radio Presets	23
How to Customize Tone Settings	23
Driver's Audio Stage	23
Music Box	24
CompactFlash (CF) Player	25
INFINITI iPod® Interface System Operation	25
Bluetooth® Hands-Free Phone System	26
COMFORT	
Heater and Air Conditioner (Dual-Zone Automatic Temperature Control)	30
NAVIGATION	
INFINITI Navigation System	33
Storing Your Home Address (and Other Addresses) In Your Address Book	35
Deleting Addresses in Your Address Book	35
Turning Voice Guidance ON/OFF and Adjusting Volume	36
Switching Map Views	36
Storing a Location	36
Programming a Destination – Street Address	37
Programming a Destination – Points of Interest	38
Programming a Destination – Nearby Places	38
Viewing Traffic Information	39
Searching For a Detour Route	39
Resuming a Route	39
CONVENIENCE	
INFINITI Voice Recognition System	40
Alternate Command Mode	42
Rear View Monitor	42
Around-View Monitor	43
Welcome Lighting	44
Adaptive Front Lighting System (AFS)	45
Vehicle Information Display	45
Anti-Glare Inside (Rear View) Mirror with Compass	46
Homelink® Universal Transceiver	46
12-Volt Power Outlet and Auxiliary Input Jacks	46
Seat-Mounted Retractable Jacket Hanger	47
Sun Visor Adjustment	47
Titanium-Finish Alloy Wheels	47



INTELLIGENT KEY SYSTEM

This system allows you to lock and unlock all doors (including the fuel-filler lid), open the lift gate, open the windows, and start and stop the engine without removing the Intelligent Key from your pocket or bag.

Note: When entering/exiting the vehicle and starting/stopping the engine, the Intelligent Key should be on “your person” (in a pocket or bag).

Two Intelligent Keys are provided with your INFINITI vehicle. Several vehicle features can be tied to a specific Intelligent Key.

IN-DASH INTELLIGENT KEY PORT

To start the vehicle if the Intelligent Key battery becomes discharged; insert the Intelligent Key into the In-Dash Port.


Push the Intelligent Key completely into the port until you feel it “engage.”



Notes:

The Intelligent Key port does not charge the Intelligent Key battery.

Remove the Intelligent Key from the Intelligent Key port after the ignition switch is pushed to the OFF position. If you leave the Intelligent Key in the port when the ignition switch is toggled to LOCK (OFF) and the driver’s door is opened:

- the amber indicator on both sides of the port will flash,
- a repetitive beep tone will sound, and
- the Intelligent Key Removal indicator  will illuminate on the dot matrix display between the tachometer and speedometer.

LOCK/UNLOCK OPERATION – DOOR HANDLE REQUEST SWITCHES

To Lock the Doors: Push any door handle request switch **once**.

To Unlock the Doors: Push any door handle request switch **once**. The corresponding door will unlock. Push the door handle Request switch again within 5 seconds to unlock all other doors.



OUTSIDE BUZZER AND LOCKOUT PROTECTION

A rapid beep tone will sound and the doors will not lock if you attempt to exit the vehicle and lock the doors while the Intelligent Key is inside the vehicle.

PUSH BUTTON IGNITION SWITCH

To START AND STOP THE ENGINE:

For **Automatic Transmission** Vehicles

- 1 Put the transmission in **P (PARK)**.
- 2 Push the ignition switch **while depressing the brake**.

To stop the engine, put the transmission in **P (PARK)** and push the ignition switch. The ignition switch **LOCK (OFF)** mode will illuminate.



getting started

To stop the engine, put the transmission in **P (PARK)** and push the ignition switch to the **OFF** position. The ignition switch **LOCK (OFF)** mode will illuminate.


TO CHANGE IGNITION SWITCH MODES: (With the engine stopped and foot off brake)

In **LOCK (OFF)** mode, push the ignition switch:

- **One time** to change to **ACC (Accessory)** mode.
- **Two times** to change to **ON** mode.
- **Three times** to return to **LOCK (OFF)** mode.



INTELLIGENT KEY

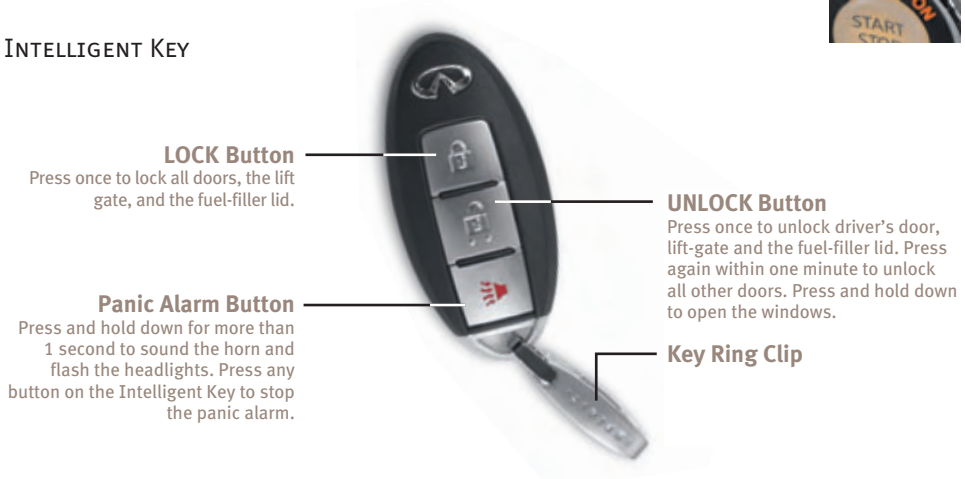

LOCK Button

Press once to lock all doors, the lift gate, and the fuel-filler lid.

UNLOCK Button

Press once to unlock driver's door, lift-gate and the fuel-filler lid. Press again within one minute to unlock all other doors. Press and hold down to open the windows.

Panic Alarm Button

Press and hold down for more than 1 second to sound the horn and flash the headlights. Press any button on the Intelligent Key to stop the panic alarm.

Key Ring Clip

OPENING THE WINDOWS

Press and hold down the **UNLOCK** button for at least 3 seconds, and continue pressing until the windows are completely open. Release the **UNLOCK** button to stop the windows from opening.

DEACTIVATING/ACTIVATING THE HORN BEEP FEATURE

Your vehicle is set to sound the horn when locking the vehicle.

To Deactivate: Press and **hold** down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicators will flash three times to confirm the operation is complete.

To Activate: Press and **hold** down the **LOCK** and **UNLOCK** buttons together for at least 2 seconds. The hazard indicators will flash once and the horn will chirp once to confirm the operation is complete.



AUTOMATIC DOOR LOCK/UNLOCK

All doors (including the lift gate) are set to be locked automatically when the vehicle speed reaches 15 MPH, and will be unlocked automatically when the ignition switch is pushed to the OFF position.

To turn OFF the Automatic Door Lock feature:

- 1 Close all doors.
- 2 Push the ignition switch to the **ON** mode.
- 3 Within 20 seconds, push and **hold** the power **door lock** switch located on the driver's door to the **UNLOCK** position for more than 5 seconds.
- 4 When the automatic door lock is deactivated, the hazard indicator will flash once.



To turn ON the Automatic Door Lock feature:

Follow steps 1-3, when the Automatic Door Lock feature is activated, the hazard indicator will flash twice.

getting started

CHILD SAFETY REAR DOOR LOCK

- The child safety lock levers are located on the inside edge of the rear passenger doors.
- When the lever is moved to the **LOCK** position, the door can be opened only from the outside. If you cannot open a rear passenger door from the inside, check the child safety rear door lock lever.



OPENING THE FUEL-FILLER LID

- 1 Unlock the doors with the Intelligent Key, the Door Handle Request switch, power door lock switch, or Mechanical Key.
- 2 Push in on the left-hand side of the fuel-filler lid to open.

Note: You **MUST** use one of the methods noted above in step 1 to unlock the fuel-filler lid. If the driver or front-passenger uses the inside door lock knob to unlock and exit the vehicle, the fuel-filler lid will remain **LOCKED** and will not open.



OPENING/CLOSING THE LIFT GATE

- 1 Push the **UNLOCK** button on the Intelligent Key once and the driver's door and fuel-filler door will unlock.
- 2 Push the **UNLOCK** button on the Intelligent Key **again** within 60 seconds and all the doors and including the lift gate will unlock.
 - To **open** the lift gate, press the **Lift Gate Request Switch**. Then press the **opener switch** (located under the lift gate finisher above the rear license plate) and pull up to open the lift gate.
 - To **close**, lower and push the lift gate down securely.



Lift-Gate Release Lever

If you cannot open the lift-gate using the Lift-Gate Release switch due to a discharged battery:

- 1 Remove the cover inside the lift gate.
- 2 Pull up on the lift gate release lever to open the lift gate.

FOR VEHICLE VALET HAND-OFF

- 1 Remove the Mechanical Key from the Intelligent Key and use it to lock the glove box.
- 2 Hand the Intelligent Key to the valet. Keep the Mechanical Key on your person.
- 3 When you retrieve your vehicle and Intelligent Key from the valet, unlock the glove box with the Mechanical Key and reinsert the Mechanical Key into the Intelligent Key.





Vehicles with the INFINITI Navigation system



Vehicles without the INFINITI Navigation system

VEHICLE CONTROL CENTER – OVERVIEW

The following buttons and controls are used together to operate most functions displayed on your vehicle's center Display Screen:

- INFINITI Controller
- Buttons and controls surrounding the INFINITI Controller.
- Audio System Controls – refer to page 20
- Heater and Air Conditioning Controls – refer to page 30
- Touch Screen Operation (for Navigation-equipped vehicles ONLY)

Refer to your 2008 INFINITI Navigation System Owner's Manual for more details about Touch Screen operations.

INFINITI CONTROLLER

Buttons located on the INFINITI Controller serve various purposes for navigating around the center Display Screen and choosing options. As you use the vehicle controls, you will find the control combination that best suits your needs.

1 Center Dial

Turn the Center Dial to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen, highlight items for additional information, and to make changes to settings.

2 Main Directional Buttons

Four Main Directional buttons (marked with arrows) on the face of the INFINITI Controller can also be used to perform the same functions as the Center Dial.

3 Additional Directional Buttons (for vehicles with the INFINITI Navigation system)

Four additional buttons (marked with small dashes) are located between the Main Directional buttons. When using the Navigation system for instance, these buttons can be used in different ways to make "fine-tuned" movements around the Navigation Map screen.

4 ENTER Buttons


When you use the Center Dial or Main Directional buttons to highlight a menu item, the text will highlight. Press the ENTER button to select the highlighted item.

5 BACK Button

Press to return to the previous function shown on the center Display Screen, and to delete characters when using the on-screen keyboard.

6 VOICE Button (for vehicles with the INFINITI Navigation system)

Press to repeat the Navigation instruction. Refer to the Navigation section of this guide (beginning on page 33) for more detailed Navigation system information.

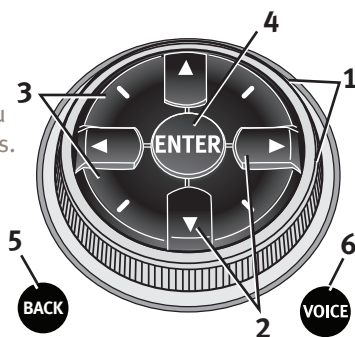

getting started

CENTER DISPLAY SCREEN

Refer to the 2008 INFINITI Navigation System Owner's Manual for more details about this feature.

Vehicle functions are viewed in menus on the center Display Screen. As menu items are highlighted/selected, additional information may display on the screen.



BUTTONS SURROUNDING THE INFINITI CONTROLLER

DEST

DEST Button (for vehicles **with** the INFINITI Navigation system)

Press to set a destination in the Navigation system. Refer to the Navigation section of this guide (beginning on page 33) for more detailed Navigation system information.

RADIO AM•FM

RADIO AM•FM Button (for vehicles **without** the INFINITI Navigation system)

AM•FM•SAT Button (for vehicles **with** the INFINITI Navigation system)

Press to change radio bands (AM, FM) or SAT music channel (requires an active XM® satellite radio subscription).

**AM•FM
SAT**

ROUTE

ROUTE Button (for vehicles **with** the INFINITI Navigation system)

Press to display Route related information and settings.

Refer to the Navigation section of this guide (beginning on page 33) for more detailed Navigation system information.

AUX

AUX Button (for vehicles **without** the INFINITI Navigation system)

While an external device such as a portable DVD or iPod® player is being used to play movies in the vehicle (by connecting to the auxiliary jacks, located in the center console), press this button to switch the movie to the center Display Screen. When Setting is selected on the AUX screen, the display mode can be set to Normal, Wide, or Cinema.

Note: Video will not be displayed unless the vehicle is in P (PARK) and the parking brake is engaged.

MAP

MAP Button (for vehicles **with** the INFINITI Navigation system)

Press to display the Map screen.

DISC

DISC Button (for vehicles **without** the INFINITI Navigation system)

DISC•AUX Button (for vehicles **with** the INFINITI Navigation system)

Press to activate, display and play

- Audio CDs or CDs with MP3/WMA in the in-dash CD player or optional changer (if so equipped)
- CompactFlash (if so equipped, and a CF inserted)
- Music Box (if so equipped, and if songs are stored)
- iPod® (if so equipped, and when connected)
- AUX (if an external device is connected)

**DISC
AUX**

STATUS

STATUS Button (for vehicles with the INFINITI Navigation system)

Press to display different views of vehicle systems information on the center Display Screen.

- Audio
- Audio and Heater/Air Conditioning information.
- Audio and fuel consumption.
- Audio and Navigation information (if equipped with the INFINITI Navigation system and if a destination has been set).

Note: If you are listening to a Satellite Radio channel, when you press the STATUS button you will be able to view information about the music playing, including SAT Channel name/music genre, artist, CD title, and song title.

PHONE

PHONE Button (for vehicles with the INFINITI Navigation system) – if so equipped

Press to display functions of the Bluetooth® Hands-Free Phone system. Refer to the Bluetooth® Hands-Free Phone system introduction (on page 26) and Bluetooth® System for Vehicles with Navigation (beginning on page 27) for more detailed system information.

INFO

INFO Button

Press to view specific vehicle and system information.

SETTING

SETTING Button

Press to display the Settings menu

CAMERA

CAMERA Button (for vehicles with the Around View Monitor system) – if so equipped

Press to operate the Around View Monitor and change views displayed on the right side of the screen.

ZOOM IN

ZOOM OUT Button (for vehicles with the INFINITI Navigation system)

Press to increase the Map view, showing more area.

ZOOM OUT

ZOOM IN Button (for vehicles with the INFINITI Navigation system)

Press to decrease the Map view, showing greater detail.

+

DAY/NIGHT/OFF/BRIGHTNESS Button

- Press to switch the center Display Screen between day view and night view.
- While the adjustment bars appear on the screen, adjust the center Display Screen brightness UP or DOWN by turning the INFINITI Controller Center Dial or pressing the brightness UP (+) or brightness DOWN (-) buttons.
- Press and hold down to turn OFF the display entirely. To resume display, press and hold down again.

☀ / OFF

-

getting started

STEERING WHEEL CONTROLS

For Vehicles with the INFINITI Navigation System

1 SOURCE Select Button

Press the **SOURCE Select Button** to change between:

- radio preset banks (A, B, and C)
- Audio CDs or CDs with MP3/WMA in the in-dash CD player or optional changer (if so equipped)
- CompactFlash (if so equipped, and a CF inserted)
- Music Box (if so equipped, and if songs are stored)
- iPod® (if so equipped, and when connected)
- AUX (if an external device is connected)

2 SCREEN NAVIGATION and ENTER Switch

Push the **ENTER** switch **UP ▲** or **DOWN ▼** to navigate **UP**, **DOWN** and **ACROSS** the center Display Screen. When the desired item is highlighted on the screen, press **ENTER** to select it.

For Radio:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to page through the radio preset stations on the bank (A, B, or C) currently selected.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to seek the previous/next radio station on the band (AM, FM) or music channel (SAT, if Satellite Radio is activated) currently selected.

For Audio CDs and CDs/CompactFlash card with MP3/WMA:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track/folder/file or skip to the next track/folder/file. Push several times to skip **BACKWARD** or **FORWARD** through multiple tracks/folders/files.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to the previous/next CD in the 6-Disc CD Changer (if so equipped) or to the next folder on a CD/CompactFlash card (with MP3/WMA).

For Music Box:

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track or skip to the next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to change to the previous/next playlist.

For iPod (if so equipped):

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to rewind/fast forward search.


3 VOLUME CONTROL Switch

Push the **-** or **+** side of the **VOLUME CONTROL** switch  to decrease or increase the volume of the source currently playing.







4 **BACK Button**

Press the **BACK** button  to return to the previous function shown on the center Display Screen, to cancel a function if it is not complete, and to delete characters when using the on-screen keyboard.

5 **TALK Switch/PHONE Switch:**

- Push the **TALK** switch  to activate the INFINITI Voice Recognition system.
- If a Bluetooth®-enabled cellular phone has been paired to the vehicle and is selected, push the **PHONE** switch  to initiate, answer, or hang up a call.

For Vehicles **without** the INFINITI Navigation System

1 **SOURCE Button**

- Radio presets banks (A, B, and C)
- Audio CDs or CDs with MP3/WMA in the in-dash CD player/changer (if loaded)
- iPod® (if so equipped, and when connected)
- AUX (if an external device is connected)

2 **TUNING Switch**

Use the Tuning Switch as follows:

For Radio:

- Push the switch **UP** ▲ or **DOWN** ▼ for **less than 1.5 seconds** to page through the radio preset stations on the bank (A, B, or C) currently selected.
- Push the switch **UP** ▲ or **DOWN** ▼ for **more than 1.5 seconds** to seek the previous/next radio station on the band currently selected (AM, FM), or music channel (SAT, if Satellite Radio is activated).



getting started

For Audio CDs and CDs with MP3/WMA:

- Push the switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to return to the beginning of the current track/folder/file or skip to the next track/folder/file. Push several times to skip **BACKWARD** or **FORWARD** through multiple tracks/folders/files.
- Push the switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to change to the previous/next CD (for 6-Disc CD changers [if so equipped]) or the next folder on the CD (with MP3/WMA).




For iPod (if so equipped):

- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **less than 1.5 seconds** to skip to the previous/next track.
- Push the **ENTER** switch **UP ▲** or **DOWN ▼** for **more than 1.5 seconds** to rewind/fast forward search.

3 VOLUME CONTROL Switch

Push the **-** or **+** side of the **VOLUME CONTROL** switch  to decrease or increase the volume of the source currently playing.

4 TALK /PHONE & PHONE END Switch – if so equipped

- Push the **TALK/PHONE** switch  to activate the INFINITI Voice Recognition system or to turn off voice guidance.
- If a Bluetooth®-enabled cellular phone has been paired to the vehicle and is selected, push the **TALK/PHONE** switch  to answer and initiate (via Voice Recognition) phone calls.
- Push the **PHONE END** switch  to end phone calls or to cancel an INFINITI Voice recognition session.

CRUISE CONTROL OR INTELLIGENT CRUISE CONTROL (ICC) SWITCHES

(if so equipped)
Refer to Intelligent Cruise Control later in this section for more details about this feature.



TOUCH SCREEN OPERATION

(for vehicles with the INFINITI Navigation system)
Refer to the 2008 INFINITI Navigation System Owner's Manual for more details about this feature. This system allows you to perform the same operations controlled by the INFINITI Controller simply by touching menu items on the center Display Screen.






INSTRUMENT PANEL LAYOUT

- 1 Headlight, Fog Light and Turn Signal Switch
- 2 Steering Wheel Controls – Audio, Phone
- 3 Cruise Control Switches
- 4 Intelligent Cruise Control (ICC) Switches – if so equipped
- 5 Instrument Brightness Control Switches
- 6 Trip Computer Switches
- 7 Trip/Reset Switch for Twin Trip Odometer
- 8 Windshield Wipers and Washer Switch
- 9 Push Button Ignition Switch
- 10 Vehicle Dynamic Control (VDC) OFF Switch
- 11 Sonar System OFF Switch – if so equipped
- 12 Lane Departure Warning (LDW) Switch
- 13 Adaptive Front Lighting System (AFS) ON/OFF Switch – if so equipped
- 14 Steering Wheel Power Tilt/Telescopic Control – if so equipped
- 15 Intelligent Key Port
- 16 Hood-Release Lever
- 17 Manual Telescopic Steering Wheel Lock Lever – if so equipped
- 18 Hazard Warning Switch
- 19 Lane Departure Prevention Switch – if so equipped
- 20 5-Speed Automatic Transmission Shift Lever with Manual Shift Mode and Drive Sport Mode
- 21 Heated Front Seat Switches – if so equipped
- 22 SNOW Mode ON/OFF Switch – if so equipped
- 23 Rear Seat Power Return Switches

getting started

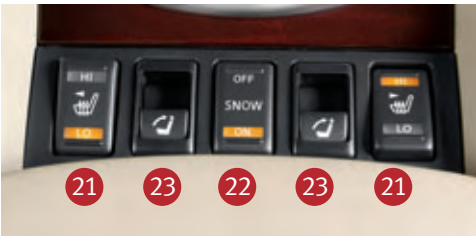



- 5 Instrument Brightness Control Switches
- 6 Trip Computer Switches
- 7 Trip/Reset Switch for Twin Trip Odometer
- 10 Vehicle Dynamic Control (VDC) OFF Switch
- 12 Lane Departure Warning (LDW) Switch if so equipped
- 13 Adaptive Front Lighting System (AFS) ON/OFF Switch – if so equipped
- 15 Intelligent Key Port
- 16 Hood-Release Lever
- 21 Heated Front Seat Switches – if so equipped
- 22 SNOW Mode ON/OFF Switch – if so equipped
- 23 Rear Seat Power Return switches – if so equipped



FRONT-PASSENGER AIR BAG STATUS LIGHT

This vehicle is equipped with the INFINITI Advanced Air Bag System. Under some conditions, depending on pressure detected on the passenger seat and how the seat belt is used, the front-passenger air bag is designed to automatically turn **OFF**. When the front-passenger air bag is **OFF**, the front-passenger air bag status light will illuminate.*

For example:




- When the system detects that the front-passenger's seat is occupied by a small adult, child or child restraint as outlined in the Owner's Manual, the **front-passenger air bag status light**  will illuminate to indicate that the **front-passenger air bag is OFF** and **will not inflate in a crash**.
- When the front-passenger's seat is occupied and the passenger meets the conditions outlined in the Owner's Manual, the **front-passenger air bag status light**  will not illuminate to indicate that the **front-passenger air bag is operational**.

* When the system detects that the front-passenger's seat is unoccupied, the passenger air bag status light will not illuminate even though the front-passenger air bag is OFF.



POWER SEAT ADJUSTMENTS

To Adjust Power Seats:

- 
 Forward and Backward – Move the switch forward or backward to slide the seat forward or backward.
- 
 Seat Lifter – Press the front or rear side of the switch up or down to adjust the angle and height of the seat cushion.
- 
 Seat Back Reclining – Press the top of the switch forward or backward to adjust the seatback to the desired recline or upright angle.






To Adjust Lumbar Support:

- 
 Lumbar Support – Press the front or rear side of the switch forward or backward to adjust the angle and lower back support.

Power Rear Seats (if so equipped):

The rear seats can be folded down for maximum cargo hauling/extra storage space.

- 
 1 Press and hold the front side **DOWN** of the rear seat switch on the right or left side of the luggage compartment. The corresponding rear seatback will fold down automatically.
- 2 To return the seat to an upright position,
 - 
 press and hold the rear side **UP** portion of the corresponding switch.
 - 
 Push and hold a rear seatback return switch located on the center console. The corresponding rear seatback will be returned to its upright position automatically.



Note: A beep will sound once and the rear seatback will rise up. A beep will sound twice when the seatback is fully returned in position.



Manual Folding Rear Seats (if so equipped):

Pull the lever located on the outer side of the seatback. The corresponding seatback will be folded.

To return the seatback to an upright position lift the seatback manually until it securely locks in position.



getting started



AUTOMATIC DRIVE POSITIONER MEMORY SYSTEM – DRIVER'S SEAT, STEERING & OUTSIDE MIRRORS (if so equipped)

When programmed, the Automatic Drive Positioner can adjust the driver's seat, steering column, and outside mirrors to two memorized positions.

To Set Customized Seat, Steering, and Mirror Position Memory:

- 1 Push the ignition switch to **ON** mode. Keep the transmission in **P (PARK)**.
- 2 Adjust the seat, steering wheel, and outside mirrors to the desired positions.
- 3 Press the **SET** button. The indicator lights on both **Memory** buttons **1** and **2** will illuminate.
- 4 **Within 5 seconds**, press **Memory** button **1** or **2** and **hold** down for at least 1 second. The indicator light on the **Memory** button you select will illuminate solid for approximately 5 seconds. Seat/steering/mirror memory is now set to your preference.
- 5 **Link the seat/steering/mirror memory to your Intelligent Key.**
While the indicator light on the **Memory** button is illuminated (see step 4, above), press the **UNLOCK** button on your Intelligent Key. The indicator light on the **Memory** button chosen will blink **ON** and **OFF** approximately 10 times. The memory is now matched to the Intelligent Key. You may set the second seat/steering/mirror memory positions to your other Intelligent Key by repeating the steps above.

Note: After step 5 is performed one time to link the seat/steering/mirror memory to your Intelligent Key, you **DO NOT** need to perform this step again if new seat/steering/mirror memory positions are saved in the future. New memory positions are automatically linked to your Intelligent Key after step 5 is performed one time.


Entry/Exit Function

With the transmission in the **P (PARK)** position, the Memory system can automatically move the driver's seat **BACKWARD** and the steering wheel **UP** to ease entering and exiting the vehicle (Entry/Exit function).

To Turn ON/OFF Entry/Exit functions

- 1 With the ignition switch in **ON** mode, press **ENTER**.
- 2 Select **Comfort & Conv.**

To turn ON/OFF the Entry/Exit functions individually, highlight **Lift Steering Wheel on Exit** or **Slide Driver's Seat Back on Exit**, then press **ENTER**.

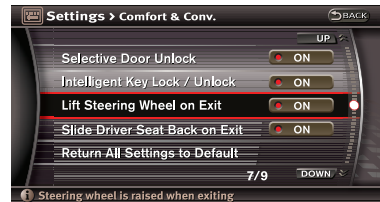

To Cancel or Activate Entry/Exit function

With the selector lever in the **P (Park)** position and the ignition switch in the **LOCK (OFF)** mode, hold the **SET** button down for **more than 10** seconds. The indicator light on the Memory buttons will blink twice to indicate **ON**, and once to indicate **OFF**.

Seat Synchronization Function

When the driver's seat is moved to a new position, the steering column and outside mirrors can be set to automatically adjust "synchronize," along with the seat position.

Notes:

- Synchronization of the steering column and mirrors is set to **OFF** as the **DEFAULT** position in your vehicle at time of delivery.
- If the outside mirrors or the steering wheel reaches its operating limit of range, seat synchronization will suspend operation. Operation can be restored by driving or by pressing the Memory button (If programmed).

To Turn ON or OFF Seat Synchronization: Hold the **SET** button down for **more than 10** seconds with the ignition switch in **LOCK (OFF)** mode. The indicator light on the Memory buttons will blink twice to indicate **ON**, and once to indicate **OFF**.

To Turn OFF Seat Synchronization Functions Using the Center Display Screen

- 1 Push the ignition switch to **ON** (mode).
- 2 Put the selector lever in the **P (PARK)** position.
- 3 Press the **SETTING** button.
- 4 Highlight **Comfort & Conv.**, and then press **ENTER**.
- 5 Highlight **Lift Steering Wheel On Exit** and turn **OFF**, the indicator will not be illuminated when the feature is turned **OFF**. Then press **ENTER**.
- 6 Highlight **Slide Driver's Seat Back On Exit**, then turn it **OFF**. Then press **ENTER**.

driving controls

INTELLIGENT CRUISE CONTROL (ICC) (if so equipped)





Steering Wheel Mounted Cruise Controls

- 1 CANCEL Button
- 2 ACCEL/RES COAST/SET Switch
- 3 CRUISE ON/OFF Button
- 4 Following Distance Button

The ICC system can be set to one of two cruise modes:

- Vehicle-to-vehicle distance-control cruise
- Conventional fixed-speed cruise

To Set Vehicle-to-Vehicle Distance-Control Cruise:


 
- 1 Press the **CRUISE ON/OFF** button for **less than 1.5** seconds. The indicator light  (located in the meter and gauges display) will illuminate. The **set distance** and **set vehicle speed** indicator lights  will also illuminate in **STANDBY** mode.
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **COAST/SET** switch and release it. Cruise Control should be set to the desired speed.
 - When a vehicle **IS NOT** detected ahead of you in the lane, the **set distance**, and **set vehicle speed** indicator lights  will illuminate in **SET** mode.
 - When a vehicle **IS** detected ahead of you in the lane, the **vehicle ahead detection**, **set distance**, and **set vehicle speed** indicator lights  will illuminate in **SET** mode.



Vehicle equipped with Intelligent Cruise Control

CRUISE CONTROL

To Set Conventional Fixed-Speed Cruise:

- 1 While Cruise Control is **OFF**, press the **CRUISE ON/OFF** button and **hold down for more than 1.5** seconds. The  indicator light will illuminate.
- 2 Accelerate to the desired speed.
- 3 Push **DOWN** on the **ACCEL/RES COAST/SET** Switch and release it. The **CRUISE SET** indicator light  will illuminate. Cruise Control should be set to the desired speed.

Note: There are certain conditions under which vehicle-to-vehicle distance-control and/or fixed speed cruise control cannot be set or will automatically cancel. Three such conditions are shown below:

- When rain, snow, or dirt cover the system sensor (located in the front bumper opening).
- When the windshield wiper is operated at low or high speed.
- When strong light shines directly on the front of the vehicle (i.e. during sunrise or sunset).

To Switch Between Two Cruise Control Modes:

When one of the two cruise modes is in use, you must first turn the system **OFF**, and then **ON** again (as instructed above) to select the other Cruise Control mode.



Vehicle equipped with Conventional Cruise Control Only

LANE DEPARTURE WARNING (LDW)

(if so equipped)

When ON and where lane markers are detectable, the Lane Departure Warning (LDW) system generates visual and audible warnings indicating when your vehicle is about to unintentionally move out of its travel lane. LDW operates in one of two modes:

- AUTOMATIC MODE, or
- MANUAL (OFF) MODE

Note: The LDW indicator light and warning tone will not activate if the vehicle turn signal is used when changing lanes.



Automatic Mode

LDW is automatically **ON** whenever you start the vehicle. It then activates at vehicle speeds over 45 mph. The indicator light on the LDW button will illuminate indicating the system is ON.

To Turn OFF LDW for One Drive ONLY:

Press the LDW button. The indicator light on the button will go out.

Manual (OFF) Mode

For your convenience, you may choose to manually override the LDW system so that it doesn't turn **ON** when you start the vehicle. In this Mode, there will be no visible or audible warnings when your vehicle is about to move out of its travel lane.

To Change from LDW Automatic Mode to Manual (OFF) Mode:

- 1 Push the ignition switch to **ON** mode.
- 2 Verify the LDW button indicator light **is still illuminated** after the 5 second self-check.
- 3 Press the LDW button to turn it **OFF**. The indicator light on the button will go out.
- 4 Press and **hold** down the LDW button for approximately **4 seconds** until a chime sounds and the LDW indicator light blinks. The LDW button indicator light will **go out** when the mode change is complete.

To Change from LDW Manual (OFF) Mode to Automatic Mode:


- 1 Push the ignition switch to **ON** mode.
- 2 Verify the LDW button indicator light **is not illuminated** after the 5 second self-check.
- 3 Press and **hold** the LDW button for approximately **4 seconds**. The indicator light on the LDW button **will illuminate** when the mode change is complete.

driving controls

LANE DEPARTURE PREVENTION (LDP) SYSTEM

(if so equipped)


When the Lane Departure Prevention system (LDP) is ON, this feature senses unintentional drift from your traveling lane, it will:

- Generate visual and audible warnings. The Lane Departure Warning indicator light  (located inside the tachometer) will turn orange and blink, and a repetitive tone will sound.
- Automatically, apply selected brakes for a short period of time to help ease your vehicle back between the lines.

Note:

- This system does not override or control and unimpeded lane change. When you apply the turn signal the LDP warning light will not blink and alarm signal will not sound.
- The Lane Departure Warning and Lane Departure Prevention systems operate above approximately 45 mph, and only when lane markings are clearly visible on the road. They will not prevent loss of control.

To Turn ON/OFF Lane Departure Prevention (LDP) system:

- 1 Press the LDP button on the steering wheel. The LDP system indicator light will illuminate green  when Lane Departure Prevention (LDP) is ON.
- 2 Press the LDP button to turn OFF Lane Departure Prevention (LDP). The LDP indicator light will turn OFF.

Note: You can operate the Lane Departure Prevention feature while Lane Departure Warning is in Manual (OFF) mode.



SONAR SYSTEM

(if so equipped)

The sonar is active and automatically turns **ON** when the ignition switch is in the ON position and the transmission is in a D (Drive), N (Neutral), or R (Reverse) position. The system sounds a tone to warn the driver of obstacles near the bumpers.

The sonar is active when the ignition switch is in the **ON** position and the transmission is in the R (REVERSE) position. The system sounds a tone to warn the driver of obstacles up to 3.9 feet from the rear bumper. When the obstacle is less than 11.8 inches away, the tone will sound continuously.

The sonar system can be disabled by pressing the Sonar OFF button. When the system is disabled, the indicator light on the button will illuminate. Press the button again to enable the system. The indicator light will go off. The system will automatically reset the next time the ignition switch is turned to the ON position.

Note: The system may not detect objects at speeds above 6 MPH and may not detect certain angular or moving objects.





ALL-WHEEL DRIVE (AWD)

(if so equipped)


The All-Wheel Drive (AWD) system enhances all-weather performance by supplying driving power to the front wheels (in addition to the rear wheels) in various traction conditions.

SNOW MODE ON/OFF SWITCH

(if so equipped)

Driver-selectable “Snow mode” helps improve low speed traction for slick weather conditions.

- Push the **SNOW** switch **ON** for slick road conditions. By reducing throttle sensitivity, drivability is enhanced. The indicator light on the switch will illuminate when Snow mode is **ON**.
- Push the switch **OFF** for automatic AWD operation.

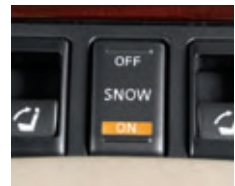

media center

AUDIO SYSTEM AM•FM•SAT RADIO WITH COMPACT DISC (CD) CHANGER

(If so equipped)

Note: No satellite radio reception is available and no SAT-related information will be displayed when the **RADIO AM-FM Button / AM•FM•SAT Button** is pressed unless an XM® satellite radio service subscription is active.



RADIO AM•FM

AM•FM
SAT

AUX

DISC

DISC
AUX

STATUS

RADIO AM•FM Button (for vehicles **without** the INFINITI Navigation system)

AM•FM•SAT Button (for vehicles **with** the INFINITI Navigation system)

Press to change radio bands: AM, FM, and SAT (if Satellite Radio is activated).

AUX Button (for vehicles **without** the INFINITI Navigation system)

While an external device such as a portable DVD player is being used to play movies in the vehicle (by connecting to the auxiliary jacks, located in the center console), press this button to switch the movie to the center Display Screen.

Note: The vehicle must be stopped and the parking brake set. Individual settings for playback can be made by selecting Settings on the center Display Screen.

DISC Button (for vehicles **without** the INFINITI Navigation system)

Press to turn the system on and play a CD if a disc is loaded. If a CD is loaded while an external device such as a portable DVD player or camcorder is playing using the auxiliary jacks, press to switch to toggle back and forth from CD play to Auxiliary play.

DISC•AUX Button (for vehicles **with** the INFINITI Navigation system)

Press to activate, display and play:

- Audio CDs or CDs with MP3/WMA in the in-dash CD player or optional changer (if so equipped)
- CompactFlash (if so equipped, and a CF inserted)
- Music Box (if so equipped, and if songs are stored)
- iPod® (if so equipped, and when connected)
- AUX (if an external device is connected)

STATUS Button

Press to display different views of vehicle systems information on the center Display Screen. For example:

- Audio

Note: If you are listening to a Satellite Radio channel, when you press the STATUS button you will be able to view information about the music playing, including SAT Channel name/music genre, artist, CD title, and song title.

- Audio and Heater/Air Conditioning information.
- Audio and fuel consumption.
- Audio and Navigation information (if equipped with the INFINITI Navigation system and if a destination has been set).



- 1 **VOL (VOLUME)/PUSH ON-OFF Knob**
 - Push to turn the audio system ON/OFF.
 - Turn to adjust volume level.
- 2 **PRESET A•B•C Button** – Press to change between radio preset banks A, B, and C. Use to select your customized preset radio stations.
 Note: Stations can be selected from any band (AM, FM, SAT) and stored in each preset bank.

- 3 **SCAN/RPT Button**
For Radio:
 Press to scan within a band (AM, FM, SAT). The scan stops at each station for 5 seconds. When you find a station that you want to listen to, press the button again to stop at that station.
For Other Media:
 Press the **SCAN/RPT** button multiple times to change the play pattern as shown to right.

CD	CD with MP3/WMA	Compact Flash	iPod®	Music Box
ALL DISC RPT	ALL DISC RPT	1 CF CARD RPT	SHUFFLE OFF RPT OFF	ALL PLAYLIST RPT
1 DISC RPT	1 DISC RPT	1 FOLDER RPT	SHUFFLE OFF 1 TRK RPT	1 PLAYLIST RPT
1 TRK RPT	1 FOLDER RPT	1 TRK RPT	SHUFFLE OFF ALL TRK RPT	1 TRK RPT
ALL DISC MIX	1 TRK RPT	1 CF CARD MIX (RDM)	TRK SHUFFLE RPT OFF	ALL PLAYLIST MIX (RDM)
1 DISC MIX (RDM)	ALL DISC MIX	1 FOLDER MIX (RDM)	TRK SHUFFLE ALL TRK RPT	1 PLAYLIST MIX (RDM)
	1 DISC MIX (RDM)		ALBUM SHUFFLE RPT OFF	
	1 FOLDER MIX (RDM)		ALBUM SHUFFLE ALL TRK RPT	

media center



4 SEEK•CAT Button

Press and release –

- **For AM/FM/SAT:** Seeks **FORWARD**, stopping at the next broadcasting Station/channel.
- **For Audio CDs, CDs/CompactFlash cards with MP3/WMA, iPod®, and Music Box:** The track currently playing will replay from the beginning.

Press and hold down for **more than 1.5 seconds** –

- **For Audio CDs, CDs/CompactFlash cards with MP3/WMA, iPod®, and Music Box:** Rewinds through the track currently playing.



5 TRACK Button

Press and release –

- **For AM/FM/SAT:** Tracks **BACKWARD**, stopping at the previous broadcasting station.
- **For Audio CDs, CDs/CompactFlash cards with MP3/WMA, iPod®, and Music Box:** Skips to the next track.

Press and hold down for **more than 1.5 seconds** –

- **For Audio CDs, CDs/CompactFlash cards with MP3/WMA, iPod®, and Music Box:** Fast-forwards through the track currently playing.

6 Station Preset/Disc Select Buttons (1-6)

Press to select preset radio stations and which CD to play (if equipped with 6-Disc CD changer).



7 CD Eject Button

- Press the button for **less than 1.5 seconds** to eject the CD currently playing.
- Press the button for **more than 1.5 seconds** to eject all CDs stored in the 6-Disc CD changer (if so equipped). The CDs will eject one-by-one.



8 CD Load Button (vehicles equipped with 6-disc CD changer only)

- Press the button for **less than 1.5 seconds** to load a single CD.
- Press the button for **more than 1.5 seconds** to load up to 6 CDs in succession. Choose the loading location by pressing a Disc Select (1-6) button.

9 CD Insert Slot

- Insert a CD into the slot to load it into the player.



10 TUNE/FOLDER•PUSH/AUDIO Knob

- Turn to manually tune radio stations **UP** or **DOWN** (e.g. tune from 105.1 to 105.3).
- Turn to select different Music Box songs by artist, category, etc., or to select MP3/WMA folders if a CD with MP3/WMA is in the CD player.
- Push to display, then turn to adjust: Bass, Treble, Balance, and Fade.

Note: When an iPod® is connected and a track is playing, turn the TUNE/FOLDER•PUSH/AUDIO knob to adjust Bass, Treble, Balance, and Fade.

HOW TO CUSTOMIZE RADIO PRESETS

With the PRESET A-B-C button, you can program up to 18 radio stations (AM, FM, and SAT*) into 3 separate preset memory banks – 6 stations for each PRESET bank.

- 1 Press the **PRESET A-B-C** button to select bank A, B, or C.
Note: The PRESET A, B, or C indicator will illuminate on the center Display Screen to show which bank is activated.
- 2 Press the **RADIO AM•FM** button / **AM•FM•SAT** button to select the AM, FM, or SAT• band.
- 3 Tune to the desired station using the **SEEK•CAT** or **TRACK** buttons, or the **TUNE/FOLDER•PUSH/AUDIO** knob.
- 4 Press and hold down the desired **Station Preset/Disc Select** button (1 through 6) until you hear a “beep” sound.
- 5 Repeat the above steps to program up to 18 stations.

Note: AM, FM, and SAT* stations can be mixed within any of the A, B, or C preset banks.

*Only available if an XM® satellite radio service subscription is active.

HOW TO CUSTOMIZE TONE SETTINGS

Bass, Treble, Balance, Fade

- 1 Push the **TUNE/FOLDER•PUSH AUDIO** knob until the desired mode appears on the center Display Screen.
- 2 Turn the knob to adjust the setting.



Driver's Audio Stage (if so equipped)

When this feature is turned on, the driver can enjoy a more crisp and clear sound that is specialized for the driver's position.

- 1 Push the **SETTING** button.
- 2 Select **AUDIO**.
- 3 Highlight **Driver's Audio Stage**, then press **ENTER** to toggle between ON or OFF.



media center

MUSIC BOX

(for vehicles with the INFINITI Navigation system)

The Music Box hard-disk drive audio system can record and store songs from CDs being played from the in-dash CD player. Refer to **Audio System**, beginning on page 20, and **Steering Wheel Controls**, beginning on page 8, to view audio system button functions applicable to Music Box operation.

Note: Music cannot be recorded to the hard-disk drive from the optional in-trunk CD changer or the CompactFlash player.

To Record a CD to the Hard-Disk Drive:

- 1 Operate the audio system to play a CD.
- 2 Highlight **REC** on the center Display Screen, then press the ENTER button.

To Automatically Record Songs to the Hard-Disk Drive :

If the "Automatic Recording" function is turned ON, recording starts when a CD is inserted and playing in the in-dash CD player.

- 1 Press the **DISC AUX** button until the Music Box mode displays on the center Display Screen.
- 2 Highlight **Menu**, then press ENTER.
- 3 Highlight **Music Box System Info.**, then press ENTER.
- 4 Highlight **Music Box Settings**, then press ENTER.
- 5 Highlight **Automatic Recording**, then press **ENTER** to turn the feature ON/OFF.

To Play Recorded Songs :

Activate the Music Box system by using one of the following methods:

- 1 Push the **Source** select switch on the steering wheel.
- 2 Push the **DISC AUX** button until the Music Box mode displays on the Center Display screen.
- 3 Give the "**Music Box Play**" voice command using the INFINITI Voice Recognition system.

To Stop Playback:

The Music Box system stops playing when:

- 1 Another mode (radio, CD, CompactFlash, or AUX) is selected.
- 2 The audio system is turned off.
- 3 The ignition switch is pushed to the **LOCK (OFF)** mode.
- 4 The **SEEK•CAT** or **TRACK** button is pushed for **more than 1.5** seconds while a track is being played. When the button is released, the track will return to normal play speed.
- 5 The **SEEK•CAT** or **TRACK** button is pushed for **less than 1.5** seconds while a track is being played, (the next track or the beginning of the current track will be played).

To Search for Missing Titles:

If titles of songs recorded to Music Box are not displayed, titles can be acquired using one of the following methods:

- Retrieve from HDD. Search for the title using the Gracenote® database in the hard-disk drive.
- Transfer Missing Titles to CompactFlash. Visit www.INFINITI.com/music-update for complete instructions.



COMPACTFLASH (CF) PLAYER

(for vehicles with the INFINITI Navigation system)

- 1 Push the ignition switch to **ACC** or **ON** mode.
- 2 Remove the CompactFlash player cover and insert a CompactFlash card into the slot.
- 3 Press the **DISC/AUX** button until the CompactFlash mode displays on the center Display Screen.

Refer to **Audio System**, beginning on page 20, and the **Steering Wheel Controls**, beginning on page 8 for audio system button functions applicable to CompactFlash operation.



INFINITI iPod® INTERFACE SYSTEM OPERATION

(if so equipped)

Your vehicle is equipped with a specialized interface cable for connecting an iPod® to the vehicle audio system.

- 1 Push the ignition switch to the **ACC** or **ON** position.
- 2 Connect the vehicle side of the cable to the vehicle connector in the center console first.
- 3 Connect the other end of the cable to your iPod®. The INFINITI logo and “Ok to disconnect” will display on the iPod® screen when the connection is active.
- 4 Use the INFINITI Controller to customize your playlist from the iPod® mode menu shown on the center Display Screen. Choose from menu items such as Playlists, Podcasts, Songs, Albums, Artists, Genres, Composers, Audiobooks. Highlight your selection and press ENTER.



Refer to **Audio System**, beginning on page 20, and the **Steering Wheel Controls**, beginning on page 8 for audio system button functions applicable to iPod® operation.

Notes:

- The iPod® can be operated only through the vehicle audio system and steering wheel controls while the iPod® is connected to the vehicle.
- The battery of your iPod® will charge when the connection is active and the ignition switch is in **ON** or **ACC** mode.
- You can view Videos on the central Display screen by disconnecting the interface cable and connecting an A/V cable from your iPod® to the auxiliary jacks in the center console. The vehicle must be stopped and the parking brake set. Individual settings for playback can be made by selecting Settings on the center Display Screen.
- If the audio system is turned OFF while the iPod® is playing, push the **ON•OFF/VOL** control knob to restart iPod® operation.

media center

BLUETOOTH® HANDS-FREE PHONE SYSTEM

Refer to www.infiniti.com/bluetooth for a compatible phone list and Frequently Asked Questions section.




With an overhead microphone and sound transmitted through the audio system speaker, the Bluetooth® Hands-Free Phone system utilizes Bluetooth® wireless technology and voice recognition to provide hands-free cellular phone communication.

Information on this page is applicable to vehicles **with** and **without** the INFINITI Navigation system. For information specific to the Bluetooth system installed in your vehicle, go to the following pages:

- Bluetooth system for vehicles **with** Navigation – page 27
- Bluetooth system for vehicles **without** Navigation – page 29

System Operating Tips

Close all windows. Surrounding noises may interfere with system operation.

- Push the **TALK** switch  or **TALK/PHONE** switch  (if so equipped) on the steering wheel to initiate an INFINITI Voice Recognition session.
- Wait for the tone before speaking.
- Speak in a clear and natural voice without pausing between words.
- To cancel a INFINITI Voice Recognition session, push the **TALK** switch  for 1 second or say “**Cancel**” or “**Quit**.”
- To go back to the previous command, say “**Go back**” or “**Correction**.”
- To increase or decrease the volume of the voice prompts, press the **Volume Control** buttons on the steering wheel or turn the audio **VOL (Volume)/Push ON-OFF knob** while the system is responding.

Pairing Your Phone

Before you can use the hands-free feature, you will need to set-up, or *pair*, the system to recognize your cellular phone(s). Up to 5 Bluetooth®-enabled phones can be paired to this system. After the initial one-time set-up, the system will automatically connect upon start-up as long as your phone is in range and available. The pairing procedure for cellular phones varies according to each manufacturer. For a list of compatible phones and detailed pairing instructions, please visit www.infiniti.com/bluetooth.



BLUETOOTH® SYSTEM FOR VEHICLES WITH NAVIGATION

SWITCHING TO A DIFFERENT PAIRED PHONE

- 1 Press the **SETTING** button.
- 2 Highlight **Phone**, then press ENTER.
- 3 Highlight **Bluetooth Setup**, then press ENTER.
- 4 Highlight **Paired Phone List**, then press ENTER.
- 5 Highlight the desired phone, then press ENTER.




SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES

Up to 40 phone numbers can be stored in the phonebook.

- 1 Press the **SETTING** button.
- 2 Highlight **Phone**, then press ENTER.
- 3 Highlight **Phonebook**, then press ENTER.
- 4 Highlight **None (Add New)**, then press ENTER.
- 5 Choose one of the following options on the center Display Screen:

Enter Data by Keypad: Manually input names/numbers.

Copy from Downloaded Phonebook: Depending on your cellular phone, you may be able to copy your entire phonebook from your cellular phone to the vehicle's phonebook. If this option is available, "Transfer phonebook from connected phone?" will display on the center Display Screen. Highlight **Yes** and press ENTER if you wish to copy the entire cellular phone phonebook to the vehicle's phonebook.

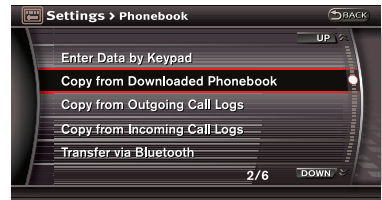

Copy from Outgoing Call Logs: Choose names/numbers from a list of calls you've made.


Copy from Incoming Call Logs: Choose names/numbers from a list of calls you've received.

Transfer via Bluetooth: Activates the Bluetooth® connection. Depending on your cellular phone, you may be able to transfer a person's name and phone number directly from your cellular phonebook to the in-vehicle phonebook via Bluetooth®. This procedure varies according to each manufacturer. Please refer to your cellular phone Owner's Manual for details.


- 6 When the "Add a voicetag?" screen appears, highlight **Yes** and press ENTER to add a voicetag (voice-activated speed dial command used with the INFINITI Voice Recognition system). The system will respond "Please say the name after the tone."
- 7 After the tone, clearly say the name of the contact.

media center

MAKING A PHONE CALL

- 1 Press and hold the **PHONE** switch .
- 2 Highlight **Call (Phonebook)**, then press ENTER.
- 3 Highlight the name of the person you wish to dial, then press ENTER. Dialing will begin.

To initiate a call using **INFINITI Voice Recognition**:

- 1 Press the **TALK** switch .
- 2 After the tone, do one of the following:
 - Say “Phonebook [voicetag].” For example, say “Phonebook **Michelle**.”
 - Say “Phone Dial [phone number].” For best results, say phone numbers as single digits. For example, say “Phone Dial **123 456 7891**.”
 - Say “Phone **Redial**” to dial the previous phone number called by the system.

INCREASING OR DECREASING THE VOLUME OF OUTGOING CALLS

You can increase or decrease the volume of your outgoing calls. If you call someone and are told that the volume on your call is too loud or too soft, perform the following steps to increase or decrease volume:

- 1 Press the **SETTING** button.
- 2 Highlight **Volume and Beeps**, then press ENTER.
- 3 Highlight **Outgoing Call**, then press ENTER.
- 4 Use the steering wheel ENTER button, the INFINITI Controller Dial or the **LEFT/RIGHT** buttons on the INFINITI Controller to increase or decrease the Outgoing Call volume. When the volume is adjusted to your liking, press the ENTER button to set it.


RECEIVING A PHONE CALL

When you receive a phone call, the **Phone** menu screen will display and a ringing tone will sound through your audio system.

- **To Accept the Call:** Push the **PHONE** switch .
- **To Reject the Call:** Highlight **Reject Call** on the center Display Screen, then press ENTER

ENDING A PHONE CALL

To “hang up” your phone at the end of a call or to disconnect during call placement:

- Press the **END/PHONE** switch  on the steering wheel.
OR
- Highlight **Hang up** on the center Display Screen and press ENTER on the INFINITI Controller or the steering wheel.


Refer to www.INFINITI.com/bluetooth for complete Bluetooth® Hands-Free Phone system operation instructions and compatible phone lists.

BLUETOOTH® SYSTEM FOR VEHICLES WITHOUT NAVIGATION


(if so equipped)

SETTING UP YOUR PHONEBOOK – ADDING NEW ENTRIES

Each paired phone has its own dedicated phonebook. Each phonebook can store up to 40 voice tags (voice-activated dialing). Each voice tag can have up to 4 locations/phone numbers: Home, Office, Mobile, and Other.

- 1 Push the **TALK/PHONE** switch .
- 2 Say “**Phonebook**”.
- 3 When prompted, say “**New Entry**.”
- 4 When prompted, say the name you would like to give the new entry. For example, say “**Michelle**.” If the name is too short or too long, or if it sounds too much like a name that is already stored in the phonebook, the system will prompt you to say a name again. Modify the name and say it again.
- 5 When the system accepts the name, you will be asked to confirm it as correct.
- 6 The system will ask for a location (**Home, Office, Mobile, or Other**). Select and say a location. The system will acknowledge the location.
- 7 When prompted, say the phone number. For example, say “**five five five one two one two**.” The system will repeat the number and prompt you for the next command.
- 8 When you have finished entering number, say “**Store**.” The system will confirm the name, location, and phone number.
- 9 The system will then ask if you would like to store another location for the same name. Say “**Yes**” or “**No**.” If you do not respond to the system prompt, the system will end the New Entry session.

MAKING A PHONE CALL

- 1 Push the **TALK/PHONE** switch .
- 2 Say “**Call**.”
- 3 When prompted, do one of the following:
 - Say “**voicetag**.” For example, say “**Michelle Home**.”
 - Say “**phone number**.” For best results, say phone numbers as single digits. For example, say “**123 456 7891**.”
 - Say “**Redial**” to dial the previous phone number called by the system.

RECEIVING A PHONE CALL


When you receive a phone call, a ring tone will sound through the audio system.

To **Accept the Call**, push the **TALK/PHONE** switch .

To **Reject the Call**, push the **PHONE END** switch .

ENDING A PHONE CALL

To “**hang up**” your phone at the end of a call or to disconnect during call placement, push the **PHONE END** switch .

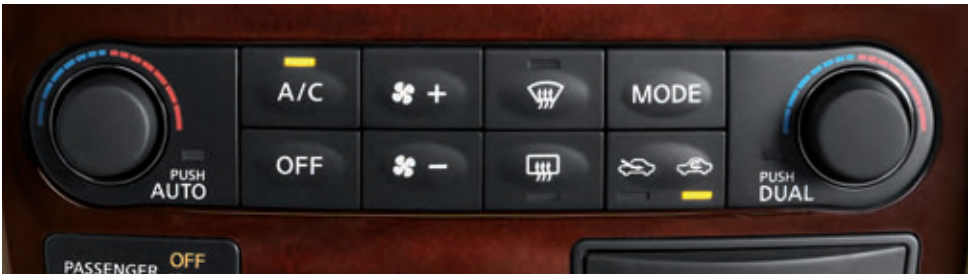

HEATER AND AIR CONDITIONER (DUAL-ZONE AUTOMATIC TEMPERATURE CONTROL)



To Turn ON the Climate Control System:

Push the **PUSH•AUTO** button to turn **ON** the system.

Note: The Climate Control system will activate using the settings last selected.

The Standard **AUTO mode** setting can be used year round. It allows the system to self adjust to constantly maintain a selected temperature (automatic cooling and/or dehumidified heating). Air flow distribution and fan speed are also controlled automatically.

Standard AUTO Mode vs. DUAL Mode (if so equipped)

- **Standard AUTO mode** allows the driver to control temperature for self and passenger.
- **DUAL mode** allows the driver and passenger to control their own cabin temperatures.



Push the **PUSH•DUAL** knob to turn **ON/OFF** DUAL mode. An indicator light next to the **PUSH•DUAL** knob illuminates and the word “DUAL” can be seen on the center Display Screen when DUAL mode is operating. Whenever the **PUSH•DUAL** knob is turned while the system is operating, DUAL mode will also be turned **ON**.



To Change Temperature Settings:

- In **Standard AUTO mode**, turn the **PUSH•AUTO** knob **RIGHT** or **LEFT** to increase or decrease the temperature to set it to the desired level. For normal automatic climate control operation, adjust the temperature to about 75°F.
- In **DUAL mode** (if so equipped), the passenger can turn the **PUSH•DUAL** knob to adjust their temperature setting, while the driver still controls his/her setting using the **PUSH•AUTO** knob.





To Control Fan Speed:

- 1 Press the **Fan Speed Control** buttons, or to manually adjust fan speed **UP** or **DOWN**. The illuminated fan speed indicator on the center Display Screen will change as fan speed is increased/decreased. The mode will change from AUTO to MANUAL mode (“AUTO” no longer appears on the screen).
- 2 Press the **PUSH•AUTO** knob to return to automatic control of fan speed.



To Turn OFF the Climate Control System:

Press the **OFF** button. will briefly display on the center Display Screen.



To Turn ON the Air Conditioning:

Press the **A/C** button until is briefly displayed on the center Display Screen and the indicator light on the **A/C** button turns ON.



To Turn ON the Heat:

- 1 Press the **A/C** button until is briefly displayed on the center Display Screen and the indicator light on the **A/C** button turns **OFF**.
- 2 Turn the **PUSH•AUTO** knob **RIGHT** or **LEFT** (in Standard mode) or the **PUSH•DUAL** knob **RIGHT** or **LEFT** (in DUAL mode) to increase or decrease the cabin temperature.

Note: For optimum system operation, DO NOT set the inside cabin temperature lower than the outside air temperature.



To Choose Fresh or Recirculated Air:

Press the **Fresh Air/Air Recirculation (Intake Air Control)** button to select between:

- **Fresh (outside) air** for cooling/heating/defrosting. The indicator light on the side of the Intake Air Control button will illuminate when fresh air is selected and will briefly display on the center Display Screen when fresh air is selected.
- **Recirculated (inside) air** for maximum A/C cooling performance and to prevent unwanted outside odors from entering the vehicle. The indicator light on the side of the Intake Air Control button will illuminate and will briefly display on the center Display Screen when recirculated air is selected

Notes:

- Recirculated air mode cannot be activated when the system is set to A/C and the Front Defroster is ON.
- Extended use of recirculated air may cause the inside of the windows to fog up.
- While in Standard AUTO mode, intake air is also controlled automatically. To manually control intake air while in Standard AUTO mode, press the Intake Air Control button. To return to Automatic Control mode, press and hold down the Intake Air Control button for approximately 2 seconds. Both indicator lights on the button will flash twice. Intake air will once again be automatically controlled.

comfort



To Manually Change Air Flow:

Press the **MODE** button **repeatedly** to select air flow location.

- Air flows from center and side vents.
- Air flows from center and side vents, **plus** foot outlets.
- Air flows mainly from foot outlets.
- Air flows from the front defroster and foot outlets.

Note: The air flow indicator symbols will illuminate on the center Display Screen.



To Turn ON/OFF the Front Defroster:

- 1 Press the **Front Window Defroster** button to turn it **ON**. The indicator light will illuminate on the Defroster button and the front defrost indicator symbol will illuminate on the center Display Screen.



Note: When you press this button, you may hear a click noise from the engine area. This is normal. The Air Conditioner compressor is being activated. With A/C **ON**, moisture is pulled from the air, helping to defrost the inside of the windows more quickly.



- 2 Turn the **PUSH•AUTO** knob **RIGHT** or **LEFT** to set the desired temperature.
- 3 Press the **+ Fan Speed Control** button to set fan speed to maximum.
- 4 Press the front **Window Defroster** button **again** to turn it **OFF**, or push the **PUSH•AUTO** knob to return to Standard AUTO mode.



To Turn ON/OFF the Rear Defroster:

- 1 Press the **Rear Window Defroster** button to turn it **ON**. The indicator light will illuminate on the Defroster button and **Rear Defrost ON** will briefly display on the center Display Screen.
- 2 Press the button **again** to turn it **OFF**. **Rear Defrost OFF** will briefly display on the center Display Screen. Or, it will turn **OFF** automatically after approximately 15 minutes.



INFINITI NAVIGATION SYSTEM

(if so equipped)

Refer to the 2008 INFINITI Navigation System Owner's Manual for complete Navigation system operation instructions. Note: The Navigation Mapping information currently installed in your vehicle is downloaded to the vehicle's hard drive. Should you wish to upgrade or change your Mapping information, contact your INFINITI dealer. The dealer can then schedule an appointment for you to bring your vehicle in so that the new map update can be uploaded into the vehicle's hard drive by an authorized INFINITI technician.

- 1 **Center Display Screen** – Displays Navigation menus and Map.
- 2 **ZOOM OUT Button** – Increases the Map view, showing more area.
- 3 **ZOOM IN Button** – Decreases the Map view, showing greater detail.
- 4 **DEST (Destination) Button** – Displays the Address Book and alternative ways to program a destination (e.g. Street Address, Previous Destinations, Points of Interest and other destination programming methods).
- 5 **ROUTE Button** – Displays route guidance control functions.
- 6 **MAP Button** – Displays the Navigation Map.
- 7 **ENTER Button** – Press to select menu items highlighted on the center Display Screen.
- 8 **Center Dial** – Turn the dial to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen. When Map is displayed, turn the dial to **ZOOM OUT** and **ZOOM IN**.
- 9 **Main Directional Buttons** – Press to navigate **UP**, **DOWN**, and **ACROSS** the center Display Screen.

navigation

- 10 **Additional Directional Buttons** – Depending on which map is displayed (Plan View or Birdview™), use these buttons to make “fine tuned” movements around the center Display Screen.
- 11 **BACK Button** – Press to return to the previous function shown on the center Display Screen, and to delete characters when using the on-screen keyboard.
- 12 **VOICE Button** – Press to repeat a Navigation instruction.
- 13 **STATUS Button** – Press to display the status of the audio, climate control system, fuel consumption and navigation system (if so equipped).
- 14 **SETTING Button** – Press to set Navigation preferences.
- 15 **INCREASE BRIGHTNESS Button** – Press to increase the center Display Screen brightness.
- 16 **DAY/NIGHT/OFF/BRIGHTNESS Button** –
 - Press to switch the center Display Screen between **day view** and **night view**. Within approximately 5 seconds of pressing, you can adjust the center Display Screen brightness **UP** or **DOWN** by turning the INFINITI Controller Center Dial or pressing the **LEFT/RIGHT** Main Directional buttons.
 - **Press and hold** down to turn the display **OFF** entirely. To resume display, press **again**.
- 17 **DECREASE BRIGHTNESS Button** – Press to decrease the center Display Screen brightness.

SELECTING NAVIGATION SETTINGS

- **Use Voice Commands.** Press the **TALK** switch  on the steering wheel. The system will request that you speak a command. Wait for the tone before speaking.


Note: For a detailed list of Navigation commands, refer to **Voice recognition** in your 2008 INFINITI Navigation System Owner's Manual.

OR

- **Use the Touch Screen Buttons.** Select menu items on the center Display Screen by touching the screen.

OR

- **Use the INFINITI Controller.** Scroll through the highlighted items shown on the center Display Screen and select them by pressing **ENTER**.

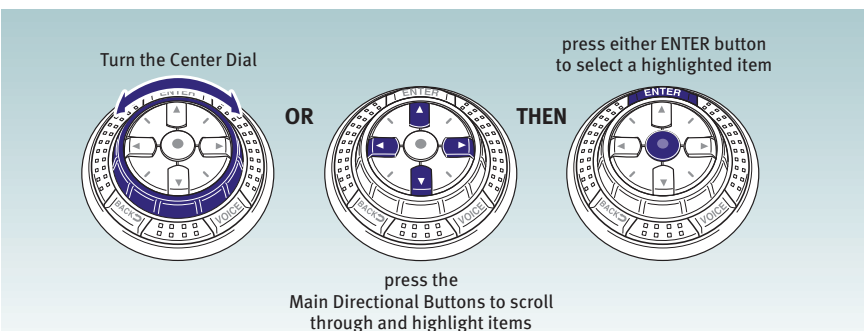

STORING YOUR HOME ADDRESS (AND OTHER ADDRESSES) IN YOUR ADDRESS BOOK

- 1 Press the **DEST** button.
- 2 Highlight **Home (Add New)**, then press ENTER.
- 3 “Home location not stored. Store now?” will appear on the screen. Highlight **Yes**, then press ENTER.
- 4 Highlight **Street Address**, then press ENTER.
- 5 Input the House Number by highlighting each character and pressing ENTER.
- 6 Once complete, highlight **OK**, then press ENTER.
- 7 Input the Street Name by highlighting each character and pressing ENTER. To insert a space, highlight **Space** **␣**, then press ENTER.
- 8 Once complete, highlight **List**, then press ENTER.
- 9 Highlight the **correct street and city** from the list, then press ENTER.
- 10 Press ENTER again. “Home Location Stored” will appear on screen.
- 11 Press the **MAP** button to return to the Map screen.

Notes:

- You can store other addresses using the procedure above. After you press the DEST button, highlight **Address Book**, then press ENTER. Highlight **None (Add New)**, then press ENTER and repeat the rest of the steps above.
- In step 4, you may also choose alternate ways to store an address, including **Map** and **Previous Dest. (Destinations)**.
- A unique sound (e.g. a chime, a dog bark, etc.) can be “attached” to your Home or Other Addresses in your Address Book. If a sound is attached to an Address Book entry, whenever you approach that location, the sound will be heard.

Refer to **Storing a location/route/MINOR ADJUSTMENT OF THE STORED HOME AND LOCATIONS/Sound** in the 2008 INFINITI Navigation System Owner’s Manual for more information.



DELETING ADDRESSES IN YOUR ADDRESS BOOK

- 1 Press the **SETTING** button.
- 2 Highlight **Navigation**, then press ENTER.
- 3 Highlight **Address Book**, then press ENTER.
- 4 Highlight **Delete Stored Items**, then press ENTER.
- 5 Highlight the **location to be deleted**, then press ENTER.
- 6 “Delete stored location?” will appear on screen. Highlight **Yes**, then press ENTER.
- 7 Press the **MAP** button to return to the Map screen.

navigation

TURNING VOICE GUIDANCE ON/OFF AND ADJUSTING VOLUME

- 1 Press the **ROUTE** button.
- 2 Highlight **Guidance Settings**, then press ENTER.
- 3 Highlight **Guidance Voice**.
- 4 Press ENTER to choose **ON** or **OFF**. The indicator light will illuminate **ON** when Voice Guidance is **ON**.



To Adjust Voice Guidance Volume:


- 1 Press the **SETTING** button.
- 2 Highlight **Volume and Beeps**, then press ENTER.
- 3 Highlight **Guidance Voice**, then press ENTER.
- 4 Adjust the voice guidance volume by pressing the directional buttons, then press ENTER.

SWITCHING MAP VIEWS

You can switch between two Navigation Map views: Plan View Map and Birdview Map™.

In addition, you have the choice of two different “Split Views.” “Birdview Map™” or Birdview Split Map™ and “Plan View Map” or “Plan View Split Map”

- 1 While the Map screen is displayed, press ENTER.
- 2 Highlight **Map Settings**, then press ENTER.
- 3 Highlight **Change View**, then press ENTER.
- 4 Highlight your preferred Map, then press ENTER. A red indicator light located inside the Map View chosen will illuminate to show that it has been selected.
- 5 Press the **MAP** button to return to the Map screen.

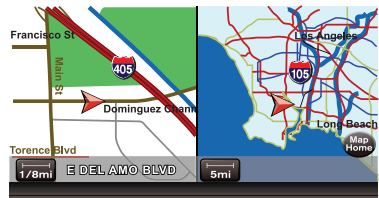

WHERE AM I?

- 1 Press the **INFO** button.
- 2 Highlight **Where am I?**, then press ENTER. The names of the next, current, and previous street will display.



STORE CURRENT LOCATION

You can store the current physical location of your vehicle in your Address Book.

- 1 While the Map screen is displayed, press ENTER.
- 2 Highlight **Store Location**, then press ENTER.
- 3 A confirmation message will appear, confirming that the location has been stored to your Address Book. The location will be stored in the first available position in your Address Book.
- 4 Press the **MAP** button to return to the Map screen.

PROGRAMMING A DESTINATION

There are several methods you can use to program your Navigation system to guide you to a desired destination point. Shown on pages 37-38 are three of the most common destination programming methods.


Refer to **Setting a destination** in the 2008 INFINITI Navigation Owner's Manual for additional available methods.

Note: The vehicle must be stationary before performing destination programming.

PROGRAMMING A DESTINATION – STREET ADDRESS

- 1 Press the **DEST** button.
- 2 Highlight **Street Address**, then press ENTER.
- 3 Input the House Number by highlighting each character and pressing ENTER.
- 4 Once complete, highlight **OK**, then press ENTER.
- 5 Input the Street Name by highlighting each character and pressing ENTER. To insert a space, highlight **Space**, then press ENTER.
- 6 Once complete, highlight **List**, then press ENTER.
- 7 Highlight the **correct street and city** from the list, then press ENTER.
- 8 Highlight **Start**, then press ENTER to set the destination, calculate the route, and begin route guidance.

Note: **Routes Details**, **Move Dest.**, and **Store Dest.** are options available in addition to **Start**. Refer to the 2008 INFINITI Navigation Owner's Manual for additional available methods.

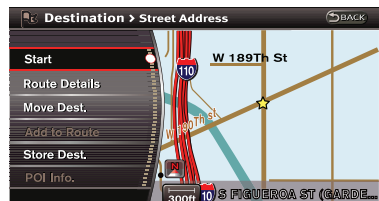

navigation



PROGRAMMING A DESTINATION – POINTS OF INTEREST

- 1 Press the **DEST** button.
- 2 Highlight **Points of Interest**, then press ENTER.
- 3 Highlight a **main category** (e.g. Restaurant, Shopping, Travel, etc.), then press ENTER.

Note: Depending on the category, you may be prompted to make additional selections.

- 4 Highlight **Nearby POI** (Points of Interest), then press ENTER.
- 5 Highlight the **desired selection** from the list, then press ENTER.
- 6 Highlight **Start**, then press ENTER.



Notes:

- In step 3, you can also search for Points of Interest by Name. Refer to the 2008 INFINITI Navigation System Owner's Manual for more information.
- In step 6, Route Details, Move Dest., Store Dest., and POI Info. are options available in addition to Start. Refer to the 2008 INFINITI Navigation System Owner's Manual for more information.
- For a comprehensive Category list, refer to **Setting a destination** in the 2008 INFINITI Navigation System Owner's Manual for more information.

PROGRAMMING A DESTINATION – NEARBY PLACES

- 1 Press the **DEST** button.
- 2 Highlight **Nearby Places**, then press ENTER.
- 3 Highlight a **category** (e.g. Restaurant, Gas Station, Hotel, etc.), then press ENTER.

Note: Depending on the category, you may be prompted to make additional selections.

- 4 Highlight the **desired selection** from the list, then press ENTER.
- 5 Highlight **Start**, then press ENTER.

Note: **More Routes**, **Route Info.**, and **Add Way Pt.**, and **Map Scroll** are options available in addition to Start. Refer to the 2008 INFINITI Navigation System Owner's Manual for more information.

ROUTE GUIDANCE

Route guidance is provided through voice and visual guidance instructions.

VIEWING TRAFFIC INFORMATION

Notes:

- An XM® satellite radio subscription with XM® Traffic has to be activated in order for your vehicle to access XM® Traffic Information. Complete XM® Traffic Information is not available in all areas.
- During Route Guidance you can modify the route conditions. You can use the Traffic Information Settings to display details on the route when driving with Traffic Information taken into consideration.
- Only available in areas covered by XM® Traffic.

- 1 Press the **INFO** button.
- 2 Highlight **Traffic Info.**, then press ENTER.
- 3 Highlight **Info. on Route**, then press ENTER. A list screen will display.
- 4 Select the event that you desire to check, then press ENTER.




SEARCHING FOR A DETOUR ROUTE

When a traffic situation occurs on a route, this feature allows you to calculate a detour route.

- 1 Press the **ROUTE** button.
- 2 Highlight **Traffic Detour**, then press ENTER.
- 3 When a detour search is successful, detailed information about the detour route (left screen) and the comparison screen of the two routes (right screen) will display.
 - **Yellow: Original Route**
 - **Pink: Detour Route**
- 4 If you want to set the detour route as the new route, select **Yes**, then press ENTER.

Resuming a Route

- 1 Press the **ROUTE** button.
- 2 Highlight **Resume Route**, then press ENTER.
- 3 "Resume previous route?" will appear on screen.
- 4 Highlight **Yes**, then press ENTER.

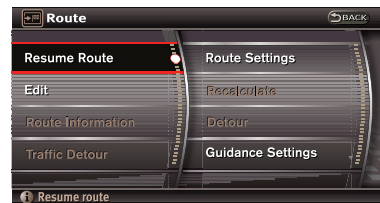

convenience

INFINITI VOICE RECOGNITION SYSTEM

The voice recognition system allows hands-free operation of certain vehicle functions using voice commands. Available commands are announced by the system and shown on the center Display Screen. Simply follow the instructional prompts given by the system to complete the desired operation.





In **Standard Mode** (the default setting), the following systems can be operated using Voice Recognition commands:

- **Phone**
- **Navigation**
- **Vehicle Information**
- **Help**

When the **Alternate Command Mode** is activated, additional systems—**Display, Audio, and Climate Control**—can be operated using voice recognition commands. Refer to “**Alternate Command Mode**” later in this section for more information about this feature.

To Operate the Voice Recognition System:

- 1 Press the **TALK** switch  located on the steering wheel. The system will respond, “Would you like to access Phone, Navigation, Information, or Help?” and the center Display Screen will change to a list of available commands to speak.
- 2 After the tone, say one of the command choices. The system will then proceed to the next step. Continue listening to the prompts and responding with the requested information until the operation is completed. **If you want to repeat a step or if the system incorrectly recognized your command, press the BACK button**  on the steering wheel or on the INFINITI Controller.



For vehicles that do not have a **BACK** button  on the steering wheel, push the **TALK** switch  to repeat a step. **If the system does not recognize your command, repeat the command.** Avoid raising the volume of your voice or slowing down your speech

System Operating Tips

- The interior of the vehicle should be as quiet as possible. Close the windows to eliminate the surrounding noises.
- Wait until the tone sounds before speaking a command.
- Speak in a natural conversational voice with minimal pauses between words.

Speaking Phone Numbers

The system provides two commands for entering and dialing a phone number: “Dial” and “International Call.” The “Dial” command is used for domestic phone numbers up to 11 digits in length (including the long-distance dialing prefix “1”). The “International Call” command is

used when more than 11 digits need to be dialed. When using these two commands, follow the phone digit speaking rules below:

- The system will accept single digits 0 (zero) to 9.
- The long-distance dialing prefix “1” is not required when making a call.
- When saying a phone number like 800-662-6200, the system will accept “eight-hundred” in addition to “eight zero zero” or “eight oh oh.” The 3-3-4 digit grouping is recommended for improved recognition.
- For *, #, and +, say “Star,” “Pound,” or “Plus,” respectively.

Voice Recognition User Guide


A simplified User Guide containing basic instructions for using the Voice Recognition system is available for reference.

- 1 Press the **SETTING** button.
- 2 Highlight **Others**, then press ENTER.
- 3 Highlight **Voice Recognition**, then press ENTER.
- 4 Highlight **User Guide**, then press ENTER.
- 5 Highlight the desired topic, then press ENTER. The tutorial will begin.



VOICE COMMAND USAGE – PHONE SYSTEM

Making a Phone Call

- 1 Press the **TALK** switch  on the steering wheel. The system will respond, “Would you like to access Phone, Navigation, Information, or Help?” and the center Display Screen will change to a list of available commands to speak.
- 2 After the tone, say “**Phone.**” The system will display the four available phone commands and say “Please say **Dial Number, Redial, Phonebook, or International Call.**”
- 3 After the tone, do one of the following:
 - Say “**Dial Number**” to dial a 7, 10, or 11 digit phone number. Follow the prompts to begin saying the phone number, starting with the area code. After the phone number has been recognized, say “**Dial.**” If incorrect, say “**Change Number.**”
 - Say “**Redial**” to hear the last phone number dialed and begin dialing.
 - Say “**Phonebook**” to say a voicetag or a phone number from the displayed list.
 - Say “**International Call**” to dial a phone number that has more than 11 digits.



Receiving/Ending a Phone Call

When you receive a phone call, a ring tone sounds through the audio system (if enabled).


To Accept a Call: Press the **PHONE** switch , or highlight **Answer** on the center Display Screen and press ENTER.

To Reject a Call: Highlight **Reject Call** on the center Display Screen and press ENTER.

To Hang-Up/Disconnect a Call: Push the **PHONE** switch .

convenience

VOICE COMMAND USAGE – NAVIGATION SYSTEM PROGRAMMING A DESTINATION – STREET ADDRESS

- 1 Press the **TALK** switch  on the steering wheel. The system will respond, “Would you like to access Phone, Navigation, Information, or Help?” and the center Display Screen will change to a list of available commands to speak.
- 2 After the tone, say “**Navigation.**” The system will respond, “**Please say Address, Places, Home, or Previous Destinations.**”
- 3 After the tone, say “**Address.**”
- 4 The system will prompt you for additional information, such as the name of the state, city, street, and house number. Follow the prompts given by the system to complete the desired operation.

Notes:

- To improve accuracy of street names, say the entire street name including Boulevard, Way, North, South, Road, etc.
- If you do not know the house number when asked, say “**No House Number,**” and the system will route you to a default location on the street.

ALTERNATE COMMAND MODE

You can change to an Alternate Command Mode that enables advanced operation of the Display, Audio, and Climate Control systems using voice recognition. When this mode is active, the voice command menu prompts are turned OFF and an expanded list of commands can be spoken.

To Turn ON the Alternate Command Mode:

- 1 Press the **SETTING** button.
- 2 Highlight **Others**, then press ENTER.
- 3 Highlight **Voice Recognition**, then press ENTER.
- 4 Highlight **Alternate Command Mode**, then press ENTER.

When the Alternate Command Mode is ON, perform the Speaker Adaptation procedure to train the system to your voice.

Refer to the 2008 INFINITI Navigation System Owner’s Manual for detailed information on Speaker Adaptation and use of the Alternate Command Mode.

REAR VIEW MONITOR

(if so equipped)


When the transmission is in **R (REVERSE)**, the center Display Screen will automatically change to view the area behind the vehicle.

Approximate Distance to Objects:

Green = 7 - 10 feet

Yellow = 3 feet

Red = 1.5 feet

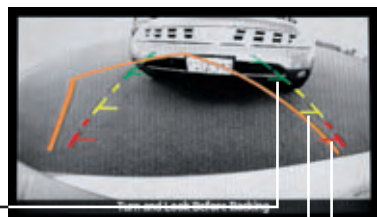



AROUND-VIEW MONITOR (AVM)
(if so equipped)


The Around-View Monitor (AVM) system is intended to help reduce the number of blind spots for the driver when parking the vehicle. This system gives you an overhead 360° view of other cars and objects but should be used only as a secondary means of vision to check areas surrounding the vehicle. Different views from around the vehicle can be shown on the center Display Screen. The Around View Monitor display consists of the left and the right screens.

Operating the Around-View Monitor

To operate the Around-View Monitor, push the ignition switch to in the **ON** mode and then press the **CAMERA** button or move the shift lever into **R (REVERSE)**.

When the shift lever is moved to **R (REVERSE)**, the **Rear View** will display on the Left Side of the screen. When the shift lever is moved out of **R (REVERSE)**, the **Front View** will display.

Note: Front View will not operate when the vehicle is traveling above 6 mph.

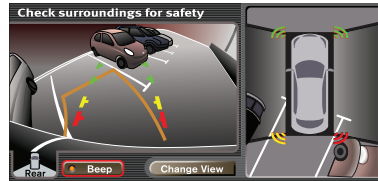


Right Side of the Screen

When the shift lever is moved to **R (REVERSE)**, the **Bird-Eye View** will display on the right side of the screen.

To Switch Views Displayed on the Right Side of the Screen:

With the Around-View Monitor **ON**, press the **CAMERA** button or select **Change View** on the center Display Screen and then press **ENTER**.

- Press the **CAMERA** button to switch to the **Front-Side View**. Press the **CAMERA** button again to switch back to the previous screen.
OR
- Select **Change View** on the center Display Screen to switch between **Bird-Eye View** and **Front-Side View**, then press **ENTER**.

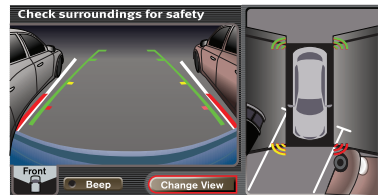


convenience

CUSTOMIZING THE AVM SYSTEM SETTINGS


Predictive Course Lines, Default to Front-Side View, Corner Sonar Sensitivity, Blind-Area Reminder, and Sonar Display:

- 1 With the transmission in **P (PARK)**, apply the parking brake and push the ignition switch to **ACC** or **ON** mode. Do not start the vehicle.
- 2 Press the **SETTING** button.
- 3 Highlight **Others**, then press **ENTER**.
- 4 Highlight **Camera**, then press **ENTER**.
- 5 Highlight the desired function, make the desired adjustments, then press **ENTER**.

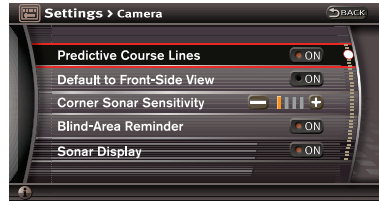

CORNER SONAR FUNCTION

When a corner of the vehicle moves close to an object, and this feature is turned ON, an indicator will display on the Front Side View of the center Display Screen and a tone will sound to warn the driver. As the vehicle moves closer to an object, the indicator color and blinking rate will change and the volume of the tone will increase.

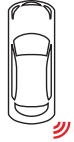

CORNER SONAR SENSITIVITY

Adjust the sensitivity level of the corner sonar on the Center Display screen, press **(-)** for lower or **(+)** for higher, then press **ENTER**.

To Turn OFF the Warning Tone:

With the Around-View Monitor **ON**, select **Beep** on the center Display Screen and then press **ENTER**.

Notes:

- The Around-View Monitor system cannot be adjusted while driving the vehicle.
- To exit the Around-View Monitor screen, press any button surrounding the INFINITI Controller other than the **CAMERA** button.
- Guiding lines and the Bird-Eye View may be affected by the number of vehicle occupants, fuel level, vehicle position, road condition, and road grade.
- Objects that are above the cameras cannot be displayed. In the Bird-Eye View, tall objects near the edge of the vehicle, such as a curb, may be misaligned or not displayed at the seam of the views.
- Do not use the Around-View Monitor while the outside (side view) mirrors are folded inward.
- Keep the sonar sensors (located on the front and rear bumper fascia) free from snow, ice, and accumulations of dirt.

WELCOME LIGHTING

When this feature is activated the exterior and interior lights will illuminate automatically as you approach the vehicle with the intelligent key on your person.

To Turn ON/OFF the Welcome Light Function:

- 1 Push the ignition switch to **ON** mode from the **OFF (Lock)** mode.
- 2 Open the driver's door.
- 3 Within 20 seconds after ignition switch is turned to **ON** mode, press and hold down the Driver's Door Handle Request switch for longer than 5 seconds.
- 4 A chime will sound confirming the operation is complete.



Note: The welcome light function is set to deactivate automatically if it is not operated within a duration of 14 days.


ADAPTIVE FRONT LIGHTING SYSTEM (AFS)

(if so equipped)

As you turn **LEFT** or **RIGHT** or drive along winding roads, the Adaptive Front Lighting system (AFS) moves your lowbeams **LEFT** or **RIGHT**, according to your vehicle's steering pattern and speed. The lowbeams swivel to increase visibility ahead of you and on the sides of the road.



To Turn AFS OFF: Push the bottom of the switch.


- The **AFS OFF** indicator symbol  inside of the speedometer will illuminate when AFS is **OFF**.
- AFS will remain **OFF** until you push the switch back **UP** to the **ON** position.

Note: When the vehicle is stopped or traveling below 16 mph, the left headlight **WILL NOT SWIVEL** when you turn the steering wheel to the **LEFT**.

VEHICLE INFORMATION DISPLAY

Press the **INFO** button to access the following vehicle information:

- Fuel Economy
- Maintenance
- Traffic Info. (vehicles **with** the INFINITI Navigation system)
- Where Am I? (vehicles **with** the INFINITI Navigation system)
- GPS Satellite Info. (vehicles **with** the INFINITI Navigation system)
- Voice Recognition (vehicles **with** the INFINITI Navigation system)
- Navigation Version (vehicles **with** the INFINITI Navigation system)

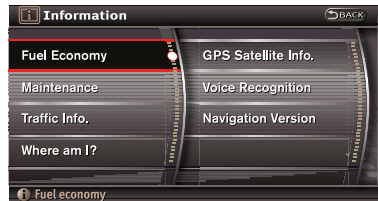

convenience



ANTI-GLARE INSIDE (REAR VIEW) MIRROR WITH COMPASS

The anti-glare feature automatically changes reflection depending on the headlight intensity of the vehicle behind you. This feature is automatically **ON** when the vehicle is started.

To turn this feature OFF: Press the  button on the mirror. The green indicator light will go out when the feature is turned **OFF**. Press the  button to turn the feature back **ON**.




HOMELINK® UNIVERSAL TRANSCEIVER

This feature can memorize up to three unique signals to operate remote devices such as garage door openers.

12-VOLT POWER OUTLET AND AUXILIARY INPUT JACKS

A 12-volt power outlet is located within the center console. This outlet can be used for accessories that **do not exceed** a 12-volt, 120W (10A) power draw.

There are also auxiliary input jacks located within the center console. NTSC compatible devices such as video games, camcorders and portable video players can be connected to the auxiliary jacks.

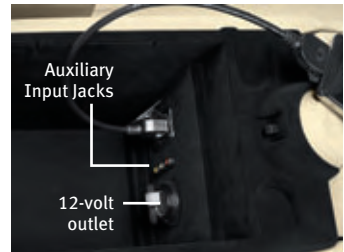

The auxiliary jacks are color coded for identification purposes.

- Yellow – video input
- White – left channel audio input
- Red – right channel audio input

SEAT-MOUNTED RETRACTABLE JACKET HANGER

(if so equipped)

The driver's seat is equipped with head restraint mounted retractable jacket hanger. Pull the hanger out until it locks in place.



SUN VISOR ADJUSTMENT

To adjust the visor to block glare, slide the visor in or out as needed.

TITANIUM-FINISH ALLOY WHEELS

Your vehicle is equipped with titanium finish alloy wheels that should be cleaned regularly with a sponge dampened in a mild soap solution, especially during winter months in areas where road salt is used. Salt could discolor the wheels if not removed. To help prevent damage to your high-end titanium finish alloy wheels:

Important Customer Information

- Do not use a cleaner that uses strong acid or alkali contents to clean the wheels.
- Do not apply wheel cleaners to the wheels when they are hot. The wheel temperature should be the same as the ambient temperature.
- Rinse the wheel to completely remove the cleaner within 15 minutes after the cleaner is applied.

GETTING STARTED

DRIVING CONTROLS

MEDIA CENTER

COMFORT

NAVIGATION

CONVENIENCE



All illustrations, photographs and specifications in this guide are based on the latest product information; some vehicle parts cannot be shown in certain photographs. Some vehicles are shown with optional equipment. See actual vehicles for complete accuracy. INFINITI Division of Nissan North America, Inc. reserves the right to make changes at any time, without notice, in prices, colors, materials, equipment, specifications and models, and to discontinue models or equipment. Availability and delivery time for particular models and equipment combinations may vary. For information on availability, additional options or accessories, contact your INFINITI dealer. All specifications, options and accessories shown in this guide apply to the 49 continental states. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. INFINITI, the INFINITI logo, and INFINITI model names are Nissan trademarks.



Learn more about the promise of design. Visit Infiniti.com/EX

