


2012 Infiniti M

Quick Reference Guide



INFINITI.

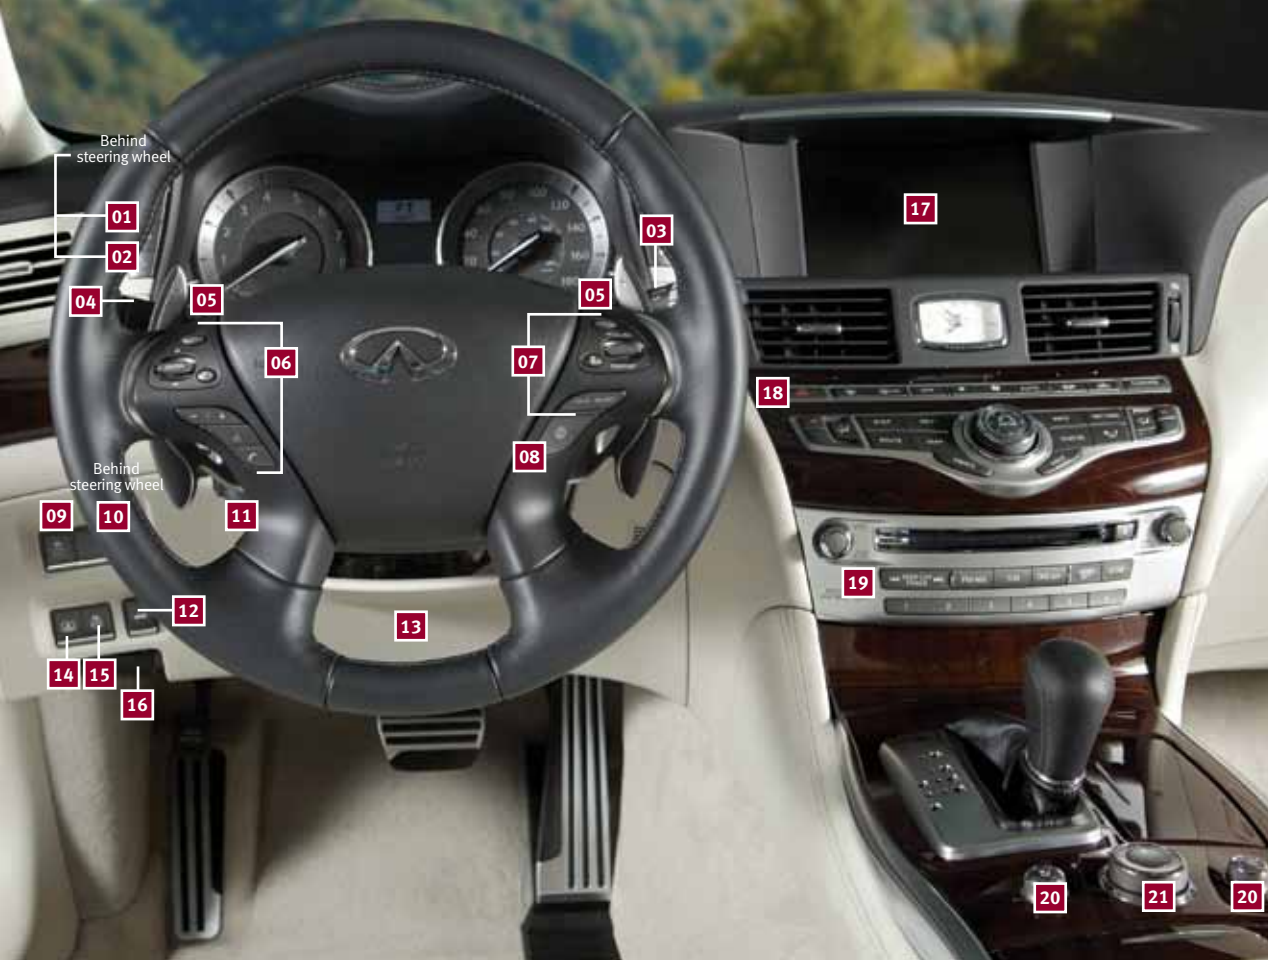

- 01 ADAPTIVE FRONT LIGHTING SYSTEM (AFS) SWITCH*
- 02 INSTRUMENT BRIGHTNESS CONTROL SWITCH*
- 03 WINDSHIELD WIPER AND WASHER SWITCH
- 04 HEADLIGHT AND TURN SIGNAL SWITCH
- 05 PADDLE SHIFTERS*
- 06 STEERING WHEEL SWITCHES FOR AUDIO / BLUETOOTH®
- 07 CRUISE CONTROL
- 08 DYNAMIC DRIVER ASSISTANCE SWITCH*
- 09 VEHICLE DYNAMIC CONTROL (VDC) OFF SWITCH*
- 10 WARNING SYSTEMS SWITCH
- 11 TILT / TELESCOPIC STEERING WHEEL SWITCH*
- 12 TRUNK LID RELEASE SWITCH
- 13 INTELLIGENT BRAKE ASSIST (IBA) SWITCH*
- 14 REAR SUNSHADE SWITCH*
- 15 HEATED STEERING WHEEL SWITCH*
- 16 HOOD RELEASE*
- 17 CONTROL PANEL DISPLAY SCREEN
- 18 CLIMATE CONTROL SYSTEM
- 19 AUDIO SYSTEM
- 20 CLIMATE CONTROLLED SEAT SWITCH*
- 21 INFINITI DRIVE MODE SELECTOR*

*See your Owner's Manual for information.

new system features

Forest Air® System (if so equipped)	2
Blind Spot Warning (BSW) and Blind Spot Intervention™ (BSI) (if so equipped)	2
ECO Pedal System (if so equipped)	2

essential information

Loose Fuel Cap	3
Tire Pressure Monitoring System (TPMS)	3
Warning Systems Switch (if so equipped)	4

first drive features

INFINITI Intelligent Key™ System	5
Trunk Lid Release	5
Seat Adjustments	6
Automatic Drive Positioner	6
Outside Mirror Control Switch	7
Starting/Stopping the Engine	7
Headlight Control Switch	8
Windshield Wiper/Washer Switch	8
Automatic Climate Controls (if so equipped)	9
FM/AM/XM® Satellite Radio with CD/DVD Player (if so equipped)	11
Conventional (Fixed Speed) Cruise Control	12
Intelligent Cruise Control (ICC) System (if so equipped)	12
Fuel-Filler Door	13

system guide

Bluetooth® Hands-free Phone System	14
Navigation System (if so equipped)	17
DVD Player (if so equipped)	18
HomeLink® Universal Transceiver	18



- A cellular telephone should not be used for any purpose while driving so full attention may be given to vehicle operation.
- Always wear your seat belt.
- Supplemental air bags do not replace proper seat belt usage.
- Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the “**Safety — Seats, seat belts and supplemental restraint system (section 1)**”, “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” and “**Starting and driving (section 5)**” of your Owner’s Manual.



new system features

Forest Air® System (if so equipped)

- This system helps keep the air inside your vehicle clean using an automatic air intake and ventilation system that monitors air quality with outside and inside sensors.
- Automatic humidity control prevents over-drying of the passenger compartment and fogging of the windshield. When the system is ON, the defroster may automatically turn on.



For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

Blind Spot Warning (BSW) and Blind Spot Intervention™ (BSI) (if so equipped)

- The Blind Spot Warning (BSW) system alerts the driver when another vehicle moves into the vehicle’s blind spot area.
- An indicator light near the driver’s outside mirror will illuminate if the radar sensors detect a vehicle in the detection zone.
- The Blind Spot Intervention™ (BSI) system can assist the driver in returning the vehicle to the center of the traveling lane by applying individual brake pressure to the left or right wheels for a short period of time.
- The indicator light will first illuminate in orange and then turn green before turning off. This indicates that the Blind Spot Warning (BSW) and Blind Spot Intervention (BSI) systems are operational.



For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

ECO Pedal System (if so equipped)

- With the Infiniti Drive Mode Selector switch **01** in the **ECO** Mode, the ECO pedal system assists the driver in improving fuel economy.
- The ECO pedal system applies force to make the accelerator pedal heavier depending on the accelerator pedal operation.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.



Loose Fuel Cap


- A **LOOSE FUEL CAP** warning message will appear in the dot matrix liquid crystal display **01** when the fuel-filler cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will disappear when the vehicle detects the fuel-filler cap is properly tightened and the reset button **02** is pressed for more than 1 second.
- If the cap is not properly tightened, the Malfunction Indicator Light SERVICE ENGINE SOON may illuminate.

For more information, refer to the “**Instruments and controls (section 2)**” and the “**Pre-driving checks and adjustment (section 3)**” of your Owner’s Manual.



Tire Pressure Monitoring System (TPMS)

- A **CHECK TIRE PRESSURE** warning message will appear in the dot matrix liquid crystal display **01** and the low tire pressure warning light **02** will illuminate when one or more tires are low on pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mile (1.6km) at moderate speeds.
- After tire pressures are adjusted, drive the vehicle at speeds above 16 MPH (25km/h). The **CHECK TIRE PRESSURE** warning message and low tire pressure warning light will disappear.
- When the low tire pressure warning light flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked by an INFINITI retailer.
- Tire pressure rises and falls depending on the heat caused by the vehicle’s operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light to illuminate. If the warning light illuminates in low ambient temperature, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to section 9, “Technical and consumer information”, in your Owner’s Manual for the location of the Tire and Loading Information label.

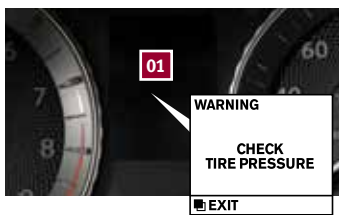

For more information, refer to the “**Instruments and controls (section 2)**”, “**Starting and driving (section 5)**” and the “**Maintenance and do-it-yourself (section 8)**” of your Owner’s Manual.



essential information

Warning Systems Switch (if so equipped)

- The warning systems switch **01** will turn the Lane Departure Warning (LDW), Blind Spot Warning (BSW) and Forward Collision Warning (FCW) systems on or off.
- When the warning systems switch is turned off, the indicator **02** on the switch is off. If the warning systems switch is illuminated, the system is on. The indicator will also be off if all of the warning systems are deactivated using the settings menu.
- To enable or disable these systems, perform the following operation:

1. Press the **SETTING** button **03** on the control panel.
2. Using the INFINITI Controller **04**, highlight the “Driver Assistance” key **05** on the display. Then press the **ENTER** button **06**.
3. Highlight the corresponding warning system key **07**, select ON (enabled) or OFF (disabled) and press the **ENTER** button.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

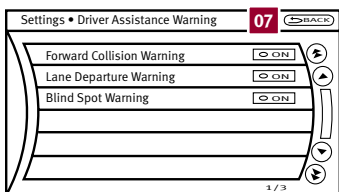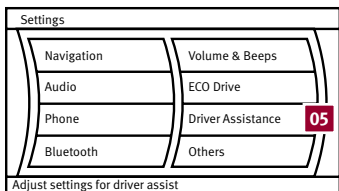






INFINITI Intelligent Key™ System

The INFINITI Intelligent Key™ system allows you to lock or unlock your vehicle, open your trunk and start the engine.

NOTE: It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).



- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch **01** once or press the  button **02** on the keyfob.
- To unlock the vehicle, perform one of the following procedures:
 - Push either door handle request switch **01** once; the corresponding door will unlock. Push the door handle request switch **01** again within 1 minute; all other doors will unlock, or
 - Press the  button **03** on the keyfob to unlock the driver's side door. Press the  button again; all other doors will unlock.
- To open the trunk, press the  button **04** for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the  button **05** for more than 1 second. Once activated, the panic alarm and headlights will stay on for 25 seconds.



INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged, or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:



1. Move the shift lever to the **P (PARK)** position.
2. Firmly apply the foot brake.
3. Touch the ignition switch with the Intelligent Key and a chime will sound.
4. Within 10 seconds after the chime sounds, push the ignition switch while depressing the brake pedal and the engine will start.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", "Starting and driving (section 5)" and the "Maintenance and do-it yourself (section 8)" of your Owner's Manual.


Trunk Lid Release

Use one of the following methods to unlatch the trunk lid, then lift the lid to open the trunk:

- Push the trunk open request switch **01** under the trunk handle while carrying the INFINITI Intelligent Key™ with you.



first drive features

- Press the  button **02** on the Intelligent Key for more than one second.





- From inside the vehicle, push the trunk lid release switch **03**.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.




Seat Adjustments


- To slide the seat forward or backward, push the control switch  **01** forward or backward.
- To recline the seatback, push the switch  **02** forward or backward.



SEAT LIFTER

- To adjust the angle of the front seat cushion or height of the seat, push the front or rear end of the switch  **01** up or down.

LUMBAR SUPPORT (if so equipped)

- To adjust the seat lumbar support, push the front or back end of the switch  **03**.

For more information, refer to the “**Safety — seats, seat belts and supplemental restraint system (section 1)**” of your Owner’s Manual.



Automatic Drive Positioner

- Two positions for the driver’s seat, steering column and outside mirrors can be stored in the automatic drive positioner memory.
- Follow these procedures to set the memory positions:
 - Confirm the shift lever is in the **P (PARK)** position.
 - Push the ignition switch to the **ON** position.
 - Adjust the driver’s seat, steering column and outside mirrors to the desired positions using the adjusting switches for each feature.
 - Push the **SET** switch and within 5 seconds, push the memory switch (**1** or **2**) for at least 1 second.
 - The indicator light on the memory switch you select will illuminate for approximately 5 seconds.
 - The driver’s seat, steering column and outside mirror positions are now set to your preference.
- These memorized positions can also be linked to your INFINITI Intelligent Key™.



For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Outside Mirror Control Switch

- To select the right or left side mirror, move the control switch **01** right or left.
- Adjust each mirror to the desired position using the switch **02**.
- To fold the outside rearview mirrors, push the switch **03** to the  position. To unfold the outside rearview mirrors, push the switch **03** to the  position.



REVERSE TILT-DOWN FEATURE

- When backing up the vehicle, the right or left outside mirror can be selected to automatically turn downward.
 1. Push the ignition switch to the **ON** position.
 2. Move the shift lever to the **R (REVERSE)** position.
 3. Choose the right or left outside mirror by operating the outside mirror control switch **01**.
 4. The outside mirror surfaces move downward.
- When one of the following conditions has occurred, the outside mirror surfaces will return to their original positions.
 - The shift lever is moved to any position other than **R (REVERSE)**.
 - The outside mirror control switch is set to the center “neutral” position.
 - The ignition switch is pushed to the **OFF** position.

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

Starting/Stopping the Engine

- Depress the brake pedal.
- Press the ignition switch **START/STOP** button to start the engine.

NOTE: It is important to make sure the INFINITI Intelligent Key™ is with you (that is, in your pocket or purse).

TURNING THE ENGINE OFF

- Move the shift lever to the **P (PARK)** position and apply the parking brake.
- Press the ignition switch **START/STOP** button to turn the engine off.



EMERGENCY ENGINE SHUT OFF

To shut off the engine in an emergency situation while driving, perform one of the following procedures:

 
 
- Rapidly push the push button ignition switch 3 consecutive times, or
- Push and hold the push button ignition switch for more than 2 seconds.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

first drive features



Headlight Control Switch

HEADLIGHT CONTROL


- Turn the headlight control switch to the  position **01** to turn on the front parking, side marker, tail, license plate and instrument panel lights. Turn the switch to the  position **02** to turn on the headlights.



AUTOLIGHT SYSTEM


- The autolight system will automatically turn the headlights on when it is dark and off when it is light. The system will keep the headlights on for a period of time after you turn the ignition off and all doors are closed.
- To activate the autolight system, turn the headlight control switch to the **AUTO** position **03** then push the ignition switch to ON. To deactivate the autolight system, turn the headlight control switch to the **OFF**,  **01** or  position **02**.

 
HIGH BEAM SELECT

- Push the headlight control switch forward **04** to select the high beam function. The blue indicator light  illuminates in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light goes off.
- Pull and release the headlight control switch **05** to flash the headlight high beams on and off.



FOG LIGHT SWITCH

NOTE: The headlights must be on and the low beams  selected for the fog lights to operate.

- Turn the switch (inside collar) to the  position **06** to turn the fog lights on.
- Turn the switch (inside collar) to the **OFF** position to turn the fog lights off.




For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.


Windshield Wiper/Washer Switch

- The ignition switch must be in the **ON** position to activate the windshield wipers.
- Move the lever to the following positions to operate the windshield wipers:

- 01A** Auto (**AUTO**) – Push the lever down. Wipers operate intermittently and wiper speed is adjusted automatically depending on the rainfall and the vehicle speed. The rain sensor sensitivity level can be further adjusted by twisting the time control ring **01B**.

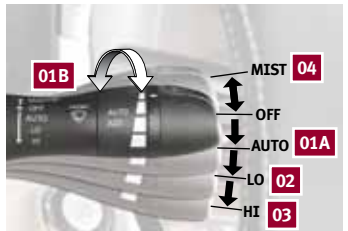

- 02** Low Speed (**LO**) – Push the lever down for continuous low-speed operation of the wipers.
- 03** High Speed (**HI**) – Push the lever down for continuous high-speed operation of the wipers.
- 04** Mist (**MIST**) – Push the lever up for one sweep of the wipers.
- 05** Pull the lever toward you to operate the washer. The wiper will operate several times.

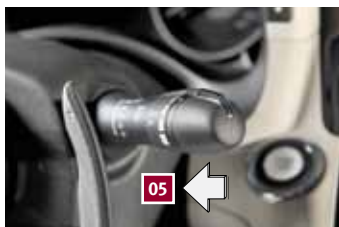

- When the windshield wipers are operated continuously, your headlights will turn on automatically.

For more information, refer to the “**Instruments and controls (section 2)**” of your Owner’s Manual.

Automatic Climate Controls (if so equipped)



01 AUTO BUTTON

- The auto mode may be used year-round. Press the **AUTO** button to turn the system on and the system will automatically control the inside temperature (automatic cooling and/or dehumidified heating), air flow distribution and fan speed.

02 CLIMATE BUTTON





- Press the **CLIMATE** button to adjust your automatic climate controls using the climate settings on the control panel display screen.

03 DRIVER’S SIDE TEMPERATURE CONTROL BUTTONS

- Press the driver’s side temperature control buttons up for warmer air or down for cooler air.

04 DRIVER’S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the driver’s side manual air flow buttons to manually control the driver’s side air flow modes.
- The following air flow indicator modes will display on the control panel display screen:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.

first drive features





05 PASSENGER'S SIDE TEMPERATURE CONTROL BUTTONS

- To manually adjust the passenger's side temperature, press the passenger's side temperature control buttons up for warmer air or down for cooler air.



06 PASSENGER'S SIDE MANUAL AIR FLOW CONTROL BUTTON

- Press the passenger's side manual air flow buttons to manually control the passenger's side air flow modes.


- The following air flow indicator modes will display on the control panel display screen:

-  Air flows from the center and side vents.
-  Air flows from the center, side and foot vents.
-  Air flows mainly from the foot vents.
-  Air flows from the defroster and foot vents.


07 FAN SPEED CONTROL BUTTONS

- Press the left  button to decrease the fan speed or press the right  button to increase the fan speed.


08 DEFROSTING/DEFOGGING FRONT AND SIDE WINDOWS

- Press the defroster control button  to turn the system on. The A/C automatically turns on when the defroster mode is selected. This feature removes humidity from the air.
- Press the driver's side temperature control buttons **03** to set the desired temperature.
- To defrost the front and side windows quickly, set the temperature controls and fan speed controls to their maximum settings.






09 DEFROSTING REAR WINDOW AND OUTSIDE MIRRORS

- Push the rear window defroster switch  REAR to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.

10 FOREST BUTTON

- Press the forest button  to activate the Forest Air® system.
- This system's settings will activate the breeze mode, the outside odor and exhaust gas detection sensor, the inside air quality sensor and the auto humidity control. The fan speed and air flow is automatically set to the auto position.

11 INTAKE AIR CONTROL BUTTON

- Press the intake air control  button to recirculate interior air inside the vehicle. The  indicator light on the button will illuminate. This mode helps to adjust the inside vehicle temperature more effectively.
- The air recirculation mode cannot be activated when the air conditioner is in the front defrost mode .
- Press the intake air control  button again to change the air circulation from the intake air to the outside air. The  indicator light on the button will turn off.

12 OFF BUTTON

- Press the **OFF** button to turn the climate control system off.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FM/AM/XM[®]* Satellite Radio With CD/DVD Player (if so equipped)



01 VOLUME/ON•OFF CONTROL KNOB

- Press the **VOL/ON•OFF** control knob to turn the system on or off. Turn the knob right or left to increase or decrease the volume.

02 TUNE/FOLDER/AUDIO CONTROL KNOB

- To manually tune the radio, turn the **TUNE/FOLDER/AUDIO** knob left or right.

03 SEEK•CAT/TRACK BUTTONS

- To scan quickly and stop at the previous or next broadcast station, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- For XM[®] satellite radio, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button to switch to the first channel of the previous or next category.
- To change tracks on a CD, press the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.
- To fast forward or rewind a track on a CD, press and hold the ◀◀ or ▶▶ end of the **SEEK•CAT/TRACK** button.

04 STATION PRESET BUTTONS

- Twelve stations can be set for the FM band, six for the AM band and eighteen for XM satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the **FM•AM** 05 or **XM** 06 button, then tune to the desired AM, FM or XM satellite radio station.
- Then press and hold the desired station preset button (1-6) until the preset number is updated on the display and the sound is briefly muted. The channel indicator will then display and the sound will resume. Programming is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then press the corresponding station select button (1-6).

*XM[®] Satellite Radio is only available on vehicles equipped with optional XM[®] satellite subscription service.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual.

first drive features

Conventional (Fixed Speed) Cruise Control

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph.
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will illuminate.
- To set cruising speed, accelerate the vehicle to the desired speed, push the **COAST/SET** switch **02** and release. The **CRUISE SET** indicator light in the instrument panel will illuminate. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **03**. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **02**. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **04**.
- To turn off cruise control, push the **ON/OFF** switch **01**. The **CRUISE** indicator light in the instrument panel will turn off.

 
 


For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Intelligent Cruise Control (ICC) System (if so equipped)

VEHICLE-TO-VEHICLE DISTANCE CONTROL MODE

- To set Vehicle-To-Vehicle Distance Control mode, press the **CRUISE ON/OFF** button **01** for less than 1.5 seconds. The **CRUISE** indicator light **02** will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch **03** and release it. Cruise Control will be set to the desired speed.
- Press the distance button **04** repeatedly to change the set distance between long, middle, and short.
- When a vehicle is not detected ahead of you in the lane, the set distance and set vehicle speed indicator lights will illuminate **05** in set mode.
- When a vehicle is detected ahead of you in the lane, the vehicle ahead detection, set distance, and set vehicle speed indicator lights will illuminate **06** in set mode.
- To reset at a faster cruising speed, push and hold the **ACCEL/RES** switch **07**. When the vehicle attains the desired speed, release the switch.



- To reset at a slower cruising speed, push and hold the **COAST/SET** switch **03** . Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the **CANCEL** switch **08** or tap the brake pedal. The set vehicle speed indicator **05** will go out.
- To turn off cruise control, press the **CRUISE ON/OFF** button **01** . The **CRUISE** indicator light **02** , in the instrument panel, will turn off.

To set conventional fixed speed-control cruise mode:

- While Cruise Control is off, press the **CRUISE ON/OFF** button **01** and hold it down for more than 1.5 seconds. The **CRUISE** indicator light will illuminate.
- Accelerate to the desired speed.
- Push down on the **COAST/SET** switch and release it. The **SET** indicator light will illuminate. Cruise Control should be set to the desired speed.

To switch between the two cruise control modes:

- When one of the two cruise modes is in use, you must turn the system off, and then turn it on again to select the other Cruise Control mode.

For more information, refer to the “**Starting and driving (section 5)**” of your Owner’s Manual.

Fuel-Filler Door

The fuel-filler door is located on the right, rear side of the vehicle.

- When the doors of the vehicle are locked or unlocked, the fuel-filler door is automatically locked or unlocked at the same time.
- To open the door, once unlocked, push the upper left side of the door.

 

 

 

For more information, refer to the “**Pre-driving checks and adjustments (section 3)**” of your Owner’s Manual.

 


Bluetooth® Hands-free Phone System

- With an overhead microphone and sound transmitted through the audio system speakers, the Bluetooth® Hands-free Phone System utilizes Bluetooth wireless technology and voice recognition to provide hands-free cellular phone communication.
- A cellular telephone should not be used while driving so full attention may be given to vehicle operation.*

SYSTEM OPERATING TIPS

- Close all windows. Surrounding noises may interfere with system operation and performance.
- Press the  or  button on the steering wheel to activate voice recognition.
- Wait for the tone before speaking.
- Begin speaking a command within 5 seconds of the tone.
- Speak in a clear and natural voice without pausing between words.
- Look straight ahead and avoid speaking too loudly or too softly.
- To go back to the previous command, say “Go back”.
- To cancel a voice recognition session, say “Exit” or press and hold the  or  button.
- To interrupt the system voice and give a command quickly, press the  or  button.
- When speaking Phonebook names, please be aware some phones require the last name to be spoken before the first name. For example, “Michael Smith” may be spoken as “Smith Michael”.
- To increase or decrease the volume of the voice prompts, push the volume control switches — or + on the steering wheel or turn the **VOL/ON•OFF** control knob on the audio system while the system is responding.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Speaker Adaptation Mode. See your Owner’s Manual for detailed information.
- Some commands are not available while the vehicle is in motion.
- The “Help” command can be used to hear a list of available commands at any time.
- Please refer to the cellular phone manufacturer’s Owner’s Manual for detailed information regarding your Bluetooth phone.



Bluetooth® System with Navigation (if so equipped)



CONNECTING PROCEDURE

NOTE: The vehicle must be stationary when connecting the phone.

*Some jurisdictions prohibit the use of cellular telephones while driving.





1. Press the **PHONE** button on the instrument panel or the **☎** button on the steering wheel and select the “Connect Phone” key.
2. Initiate connecting from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
3. When the connecting is complete, the screen will return to the Phone menu display.

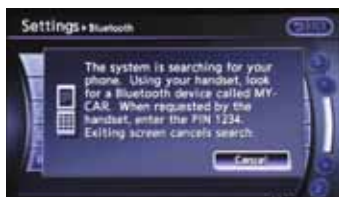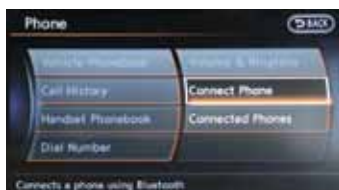

PHONEBOOK SETUP


- Depending on your cell phone, the system may automatically download your cell phone’s entire phonebook to the vehicle’s Bluetooth system.
- If the phonebook does not download automatically, the vehicle phonebook may be set for up to 1,000 entries.
- To manually download entries:
 1. Press the **☎** button and select the “Vehicle Phonebook” key.
 2. Select the “Add New” key at the top of the display. There are different methods to input a phone number. Select one of the following options:
 - “Copy from Call History” to save a number from the Outgoing, Incoming or Missed Calls lists.
 - “Copy from the Handset” to save a number that has been downloaded from your handset to the vehicle.
 - “Enter Number by Keypad” to input the number and name manually.

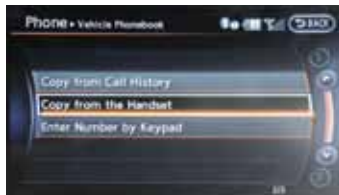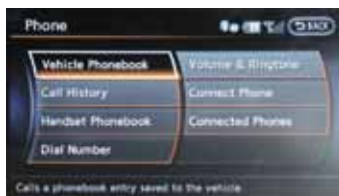



MAKING A CALL

To make a call, follow this procedure:

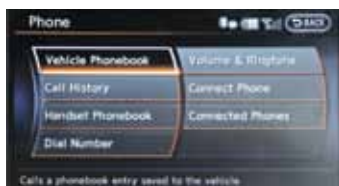1. Press the **☎** button on the steering wheel. The “Phone” menu will appear on the control panel display.
2. Select the “Vehicle Phonebook”, “Call History”, “Handset Phonebook” or “Dial Number” key.
3. Select the desired entry from the list.
4. Select “Call” to start dialing the number.




RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel or touch the “Answer” key. To reject the call, touch the “Reject Call” key.
- To hang-up, press the  button or touch the “Hang-Up” key.



Bluetooth® System without Navigation (if so equipped)

PAIRING PROCEDURE


1. Press the  button on the steering wheel. The system announces the available commands.
2. Say “Connect Phone”. The system acknowledges the command and announces the next set of available commands.
3. Say “Add Phone”. The system acknowledges the command and asks you to initiate connecting from the phone handset.
4. Initiate pairing from the phone.
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible phones, please visit www.InfinitiUSA.com/bluetooth.
 - When prompted for a PIN code, enter “1234” from the handset. (The PIN code is assigned by INFINITI and cannot be changed.)
5. The system asks for a name for the phone. Say “Yes”. The system acknowledges the command and registers the cellular phone.






PHONEBOOK REGISTRATION

- When the cellular phone is connected to the in-vehicle module, the data stored in the cellular phone such as phonebook, outgoing call logs, incoming call logs and missed call logs is automatically transferred and registered to the system.
- The availability of this function depends on each cellular phone. The copying procedure also varies according to each cellular phone. See your cellular phone Owner's Manual for more information.
- Up to 1,000 phone numbers per registered cellular phone can be stored in the phonebook.

MAKING A CALL

1. Push the  button on the steering wheel. A tone will sound.
2. Say “Call”. The system acknowledges the command and announces the next set of available commands.
3. Say the registered person’s name. The system acknowledges the command and announces the next set of available commands.
4. Say “Yes”. The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- To accept the call, press the  button on the steering wheel. To reject the call, press the  button.
- To hang-up, press the  button.

For more information, refer to the “**Monitor, climate, audio, phone and voice recognition systems (section 4)**” of your Owner’s Manual or please visit www.InfinitiUSA.com/bluetooth.

Navigation System (if so equipped)



- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle’s position. If you have deviated from the original route, it will recalculate the route from your current location.
- Press the **INFO** button to access important data such as distance to empty, your tire rotation schedule and other maintenance interval reminders.

For more information, please refer to your Navigation System Owner’s Manual.

DVD Player (if so equipped)

- This system allows you to play video files via a DVD or CD from the front display.
- To view movies on the front display, stop the vehicle in a safe location, move the shift lever to the **P (PARK)** position and apply the parking brake.
- To reduce driver distraction, movies will not be shown on the front display while the vehicle is in any drive position.

For more information, refer to the **"Monitor, climate, audio, phone and voice recognition systems (section 4)"** of your Owner's Manual.



HomeLink® Universal Transceiver

- The HomeLink® system can learn and consolidate the functions of up to three different hand-held transmitters, operating items such as garage doors, property gates, outdoor and indoor lights or alarm systems.



For more information, refer to the **"Instruments and controls (section 2)"** of your Owner's Manual, the HomeLink® website at www.homelink.com or call 1-800-355-3515.



INFINITI.

This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. See your Owner's Manual, which contains important safety warnings and information about the operation and maintenance of your vehicle, for complete details. Nissan North America, Inc. reserves the right to make changes, at anytime, without prior notice, in prices, colors, materials, equipment, specifications, and models and to discontinue models or equipment. Due to continuous product development and other pre- and post-production factors, actual vehicle, materials and specifications may vary. Some vehicles are shown with optional equipment. See the actual vehicle for complete accuracy. Specifications, options and accessories may differ in Hawaii, U.S. territories and other countries. For additional information on availability, options or accessories, see your INFINITI retailer or contact Nissan North America, Inc.