

**2015
Highlander
Quick Reference Guide**

2015 Highlander

INDEX

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Highlander.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Highlander operations. Every Highlander owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

OVERVIEW

Engine maintenance	9
Fuel tank door release and cap	8
Hood release	8
Indicator symbols	5
Instrument cluster	4
Instrument panel	2-3
Keyless entry¹	6
Light control-Instrument panel	9
Smart Key system^{1,2}	7

FEATURES/OPERATIONS

Air Conditioning/Heating	23-25
Audio	21
Auto lock/unlock¹	11
Automatic Transmission	10
Bluetooth® Device Pairing Section	33-42
Clock	25
Cruise control	26
Door locks	10
Door-Power back (rear liftgate)	13
Driver Easy Speak	22
Garage door opener (HomeLink®) ³	26
Lights¹ & turn signals	16
Moonroof	12
Multi-Information Display²	18
Panoramic Moonroof	12
Parking Brake	11
Power outlets-12V DC	17
Power outlet-120V AC	17
Rear seat entertainment system	20
Seat adjustments-Front	14
Seat adjustments-Rear	15
Seats-Head restraints	15
Seats-Returning third row seats	15
Seats-Stowing third row seats	15
Steering lock release	11
Steering wheel controls and Bluetooth®	19-20
Tilt and telescopic steering wheel	12
Traffic	22
USB / AUX port	20
Weather	22
Windows-Power	19
Windshield wipers & washers	16

SAFETY AND EMERGENCY FEATURES

Doors-Child safety locks	28
Floor mat installation	31
Seat belts	27
Seat belts-Shoulder belt anchor	28
Spare tire & tools	29
Star Safety System™	30-31
Third row center seat belt	28
Tire Pressure Monitoring (warning) System	27

¹ Visit your Toyota dealer for information on customizing this feature.

 
² Programmable by customer. Refer to the *Owner's Manual* for instructions and more information.

³ HomeLink® is a registered trademark of Gentex Corporation.


OVERVIEW

Instrument panel


Steering wheel controls (if equipped)

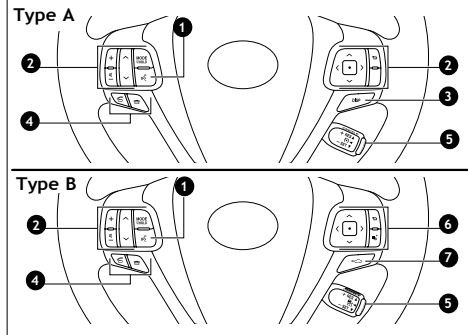


Manual Air Conditioning

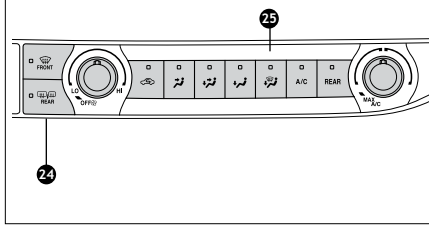 

Automatic Air Conditioning

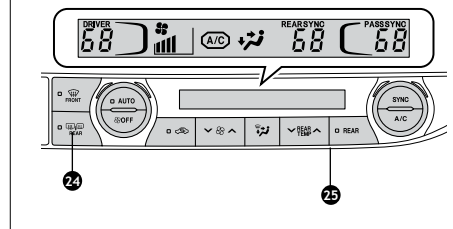 


Vehicles with Entune Audio System


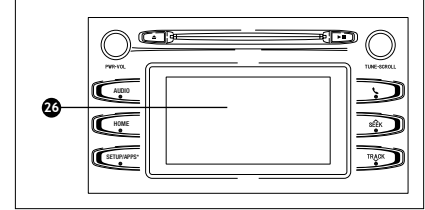 


*LE models have a "SETUP" button, while LE PLUS models have an "APPS" button

 Vehicles with Entune Premium Audio System with Navigation and App Suite

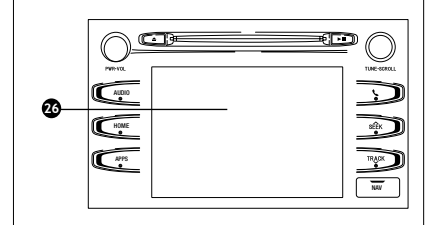

Lower center console switches

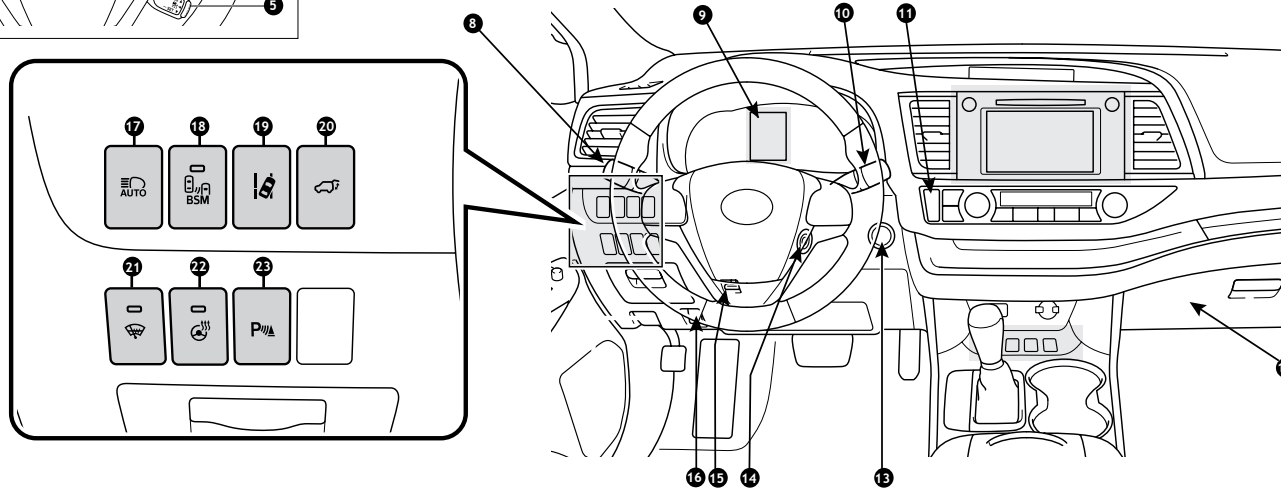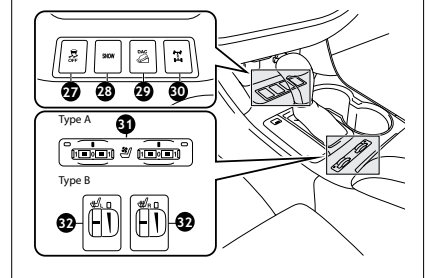  

- 1 Voice command button^{1,2}
- 2 Audio remote control switches¹
- 3 Multi-Information Display button
- 4 Telephone controls¹
- 5 Cruise control switch
- 6 Meter control switches
- 7 Vehicle-to-vehicle distance button²
- 8 Headlight and turn signal controls/Headlight, turn signal and front fog light controls²
- 9 Multi-Information Display
- 10 Wiper and washer controls
- 11 Emergency flasher button
- 12 Power back door main switch (this is inside the glove box)²
- 13 "ENGINE START STOP" button (Smart Key)²
- 14 Ignition (standard key)²
- 15 Tilt and telescopic steering lock release
- 16 Fuel filler door opener
- 17 Automatic High Beam switch²


- 18 BSM (Blind Spot Monitor) switch²
- 19 LDA (Lane Departure Alert) switch²
- 20 Power back door button²
- 21 Windshield wiper de-icer switch
- 22 Heated steering wheel switch²
- 23 Intuitive parking assist switch (rear parking sonar)²
- 24 Outside rearview mirror/Rear window defogger button
- 25 Air Conditioning controls
- 26 Audio System¹
- 27 VSC OFF switch
- 28 "SNOW" button
- 29 "DAC" switch²
- 30 All-wheel drive lock switch²
- 31 Seat heater/ventilator switches²
- 32 Seat heater switches²

¹ Refer to the "Display Audio System Owner's Manual."

² If equipped


Instrument cluster

 Type 1

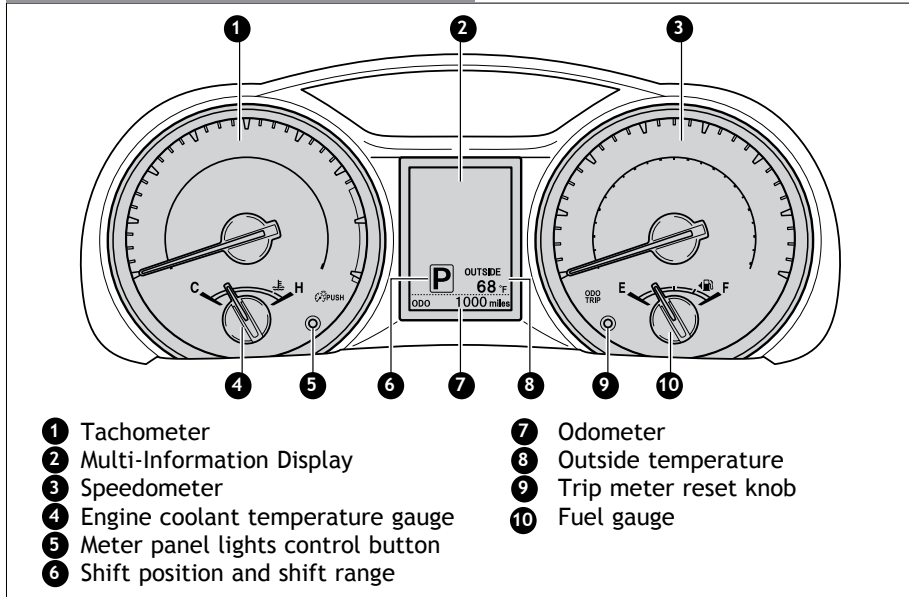

- 1 Tachometer
- 2 Multi-Information Display
- 3 Speedometer
- 4 Engine coolant temperature gauge
- 5 Meter panel lights control button
- 6 Shift position and shift range
- 7 Odometer
- 8 Outside temperature
- 9 Trip meter reset knob
- 10 Fuel gauge

 Type 2

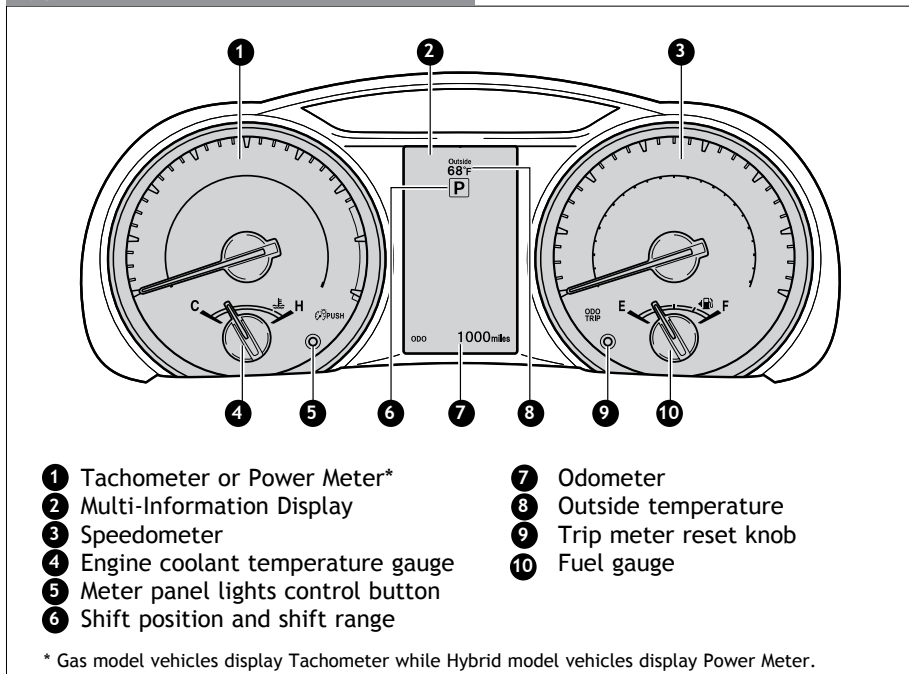

- 1 Tachometer or Power Meter*
- 2 Multi-Information Display
- 3 Speedometer
- 4 Engine coolant temperature gauge
- 5 Meter panel lights control button
- 6 Shift position and shift range
- 7 Odometer
- 8 Outside temperature
- 9 Trip meter reset knob
- 10 Fuel gauge

* Gas model vehicles display Tachometer while Hybrid model vehicles display Power Meter.

Indicator symbols

For details, refer to “Warning lights and indicators,” Section 2, 2014 Owner’s Manual.

- BRAKE Brake system warning¹
- Charging system warning¹
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- Airbag SRS warning¹
- ABS Anti-lock Brake System warning¹
- Electric power steering system warning¹
- PCS Pre-collision warning system indicator¹
- Slip indicator¹
- Open door warning
- Low fuel level warning
- Driver seat belt reminder (alarm will sound if speed is over 12 mph)
- Master warning
- Tire Pressure Warning¹
- Turn signal indicator
- Headlight low/high beam indicator
- Automatic high beam indicator
- Front fog light indicator
- SET Cruise control/Cruise control “SET” indicator²
- LDA (Lane Departure Alert) indicator
- Intuitive parking assist indicator
- Vehicle Stability Control OFF indicator¹
- BRAKE All-wheel drive lock indicator¹
- Downhill Assist Control indicator¹
- BSM (Blind Spot Monitor) outside rear view indicator¹
- Security indicator¹
- ECO Eco driving indicator¹
- SNOW SNOW mode indicator
- Air Bag ON/OFF indicator

¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Cruise control,” Section 4-5, 2015 Owner’s Manual.

 
Keyless entry

Locking operation

Without Smart Key system



With Smart Key system




Push

Unlocking operation

Without Smart Key system



 With Smart Key system

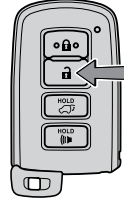


Push ONCE: Driver door
TWICE: All doors


NOTE: If a door is not opened within 60 seconds of unlocking, all doors will relock for safety.

Power liftgate operation

 Without Smart Key system

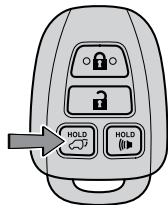


With Smart Key system

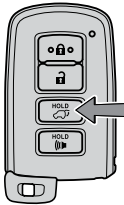 

Push and hold

NOTE: Power back door will not open if glass hatch is open.

 
Panic button

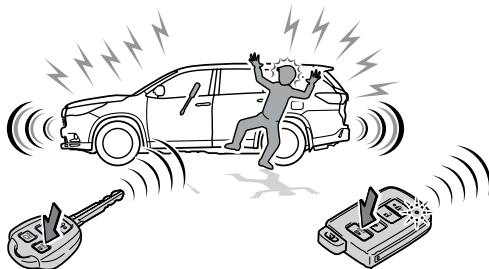

Push and hold

Smart Key system (if equipped)

 Start function

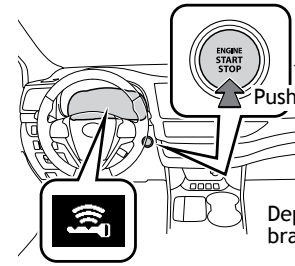

Depress
brake pedal

will be displayed on the multi-information display. If it is not displayed, the engine cannot be started.

NOTE: Parking brake must be set. Shift lever is set to P.

Power (without starting engine)

 
Without depressing the brake pedal, pressing the “ENGINE START STOP” switch will change the operation mode in succession from:

ACC Accessories such as the radio will operate.

ON Power ON; the engine not running.


OFF All systems OFF.

Locking operation

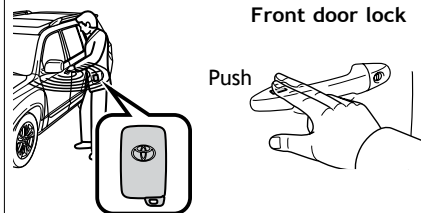


Carry remote to lock

 Unlocking operation

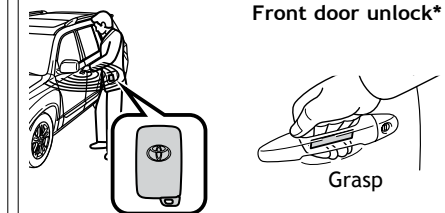


Carry remote to unlock

 Glass hatch unlock

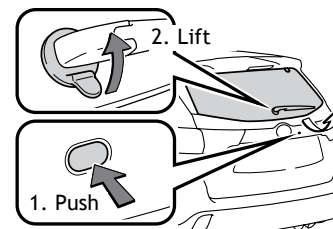

Carry remote to unlock

 Back door lock/unlock


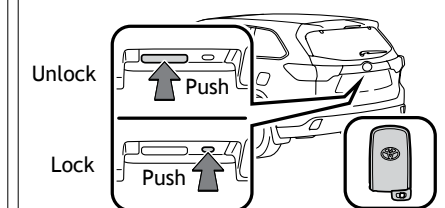


Carry remote to lock/unlock


* Driver door unlocking function can be programmed to unlock driver door only, or all doors. Grasping passenger door handle will unlock all doors.

NOTE: Doors may also be locked/unlocked using remote.

  Fuel tank door release and cap

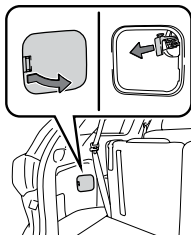
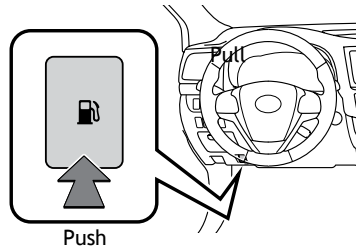


 When the fuel door cannot be opened by pressing the inside switch. Remove the cover inside the luggage compartment and pull the lever.

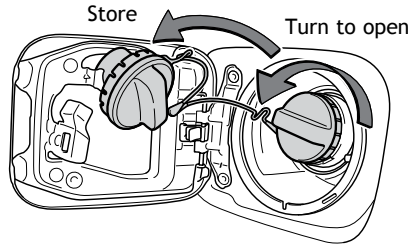


NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine "CHECK" indicator may illuminate.

  Hood release

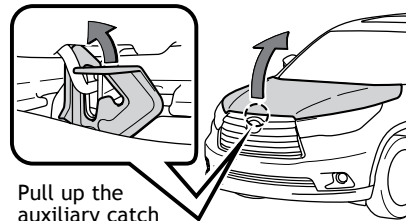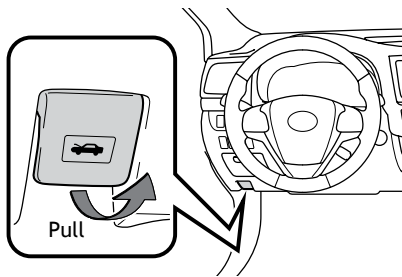


 Pull up the auxiliary catch lever and raise hood

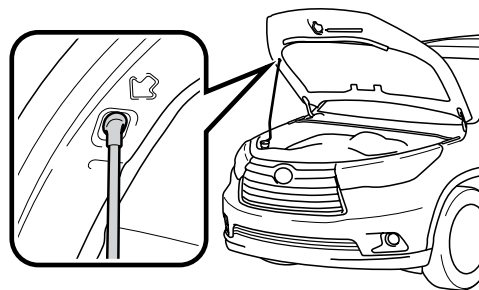

Engage support rod (either position may be used)

 Engine maintenance

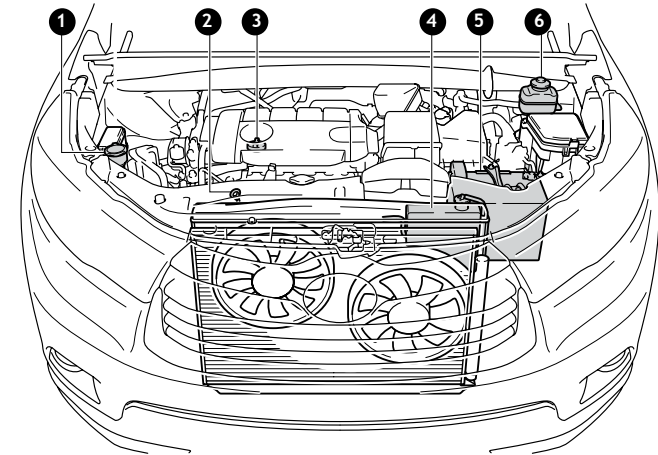


- 1 Windshield washer fluid tank
- 2 Engine oil level dipstick
- 3 Engine oil filler cap
- 4 Engine coolant reservoir
- 5 Battery
- 6 Brake fluid reservoir

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the "Warranty & Maintenance Guide."


Light control-Instrument panel

 The brightness level of the meters when the surroundings are bright (day mode) and dark (night mode) can be adjusted individually. However, when in day mode, adjusting the brightness level will also change the brightness level of night mode.

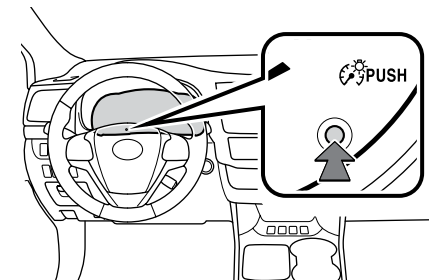

FEATURES/OPERATIONS

 Automatic Transmission

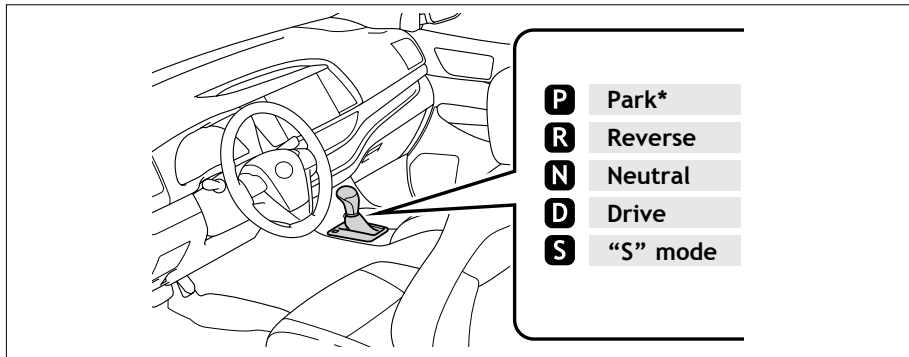

* The "ENGINE START STOP"/ignition switch must be "ON" and the brake pedal depressed to shift from Park.

 
"S" (Sequential) mode

Shift the shift lever to "S" position from "D" position.

- + : Upshift (push and release)
- : Downshift (pull and release)

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

Door locks

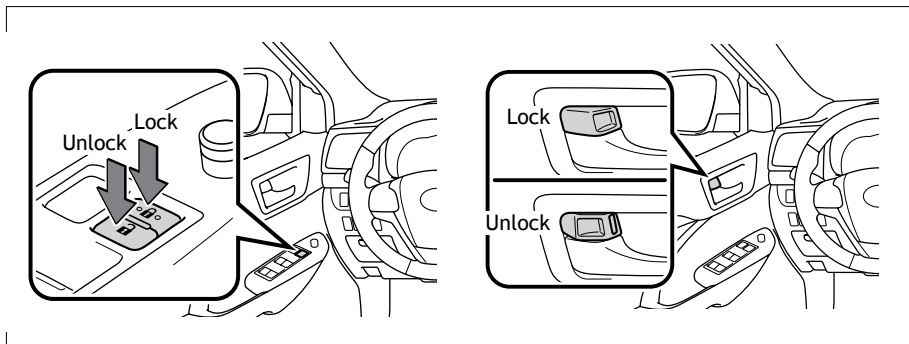

Auto lock/unlock

Automatic door locks can be programmed to operate in two different modes, or turned OFF.

- Doors lock when shifting from Park.
- Doors lock when the vehicle speed goes above approximately 12 mph.
- Doors unlock when shifting into Park.

Vehicles without Smart Key system

 
-Doors unlock when the ignition switch is set from "ON" to "ACC" or "LOCK" and driver's door is opened.

Vehicles with Smart Key system


-Doors unlock when the "ENGINE START STOP" switch is set to OFF and driver's door is opened.

Refer to the *Owner's Manual* for more details.


Steering lock release

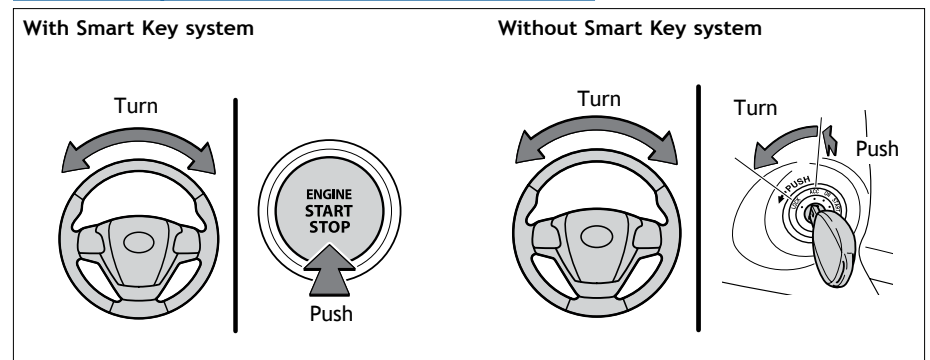

Parking brake

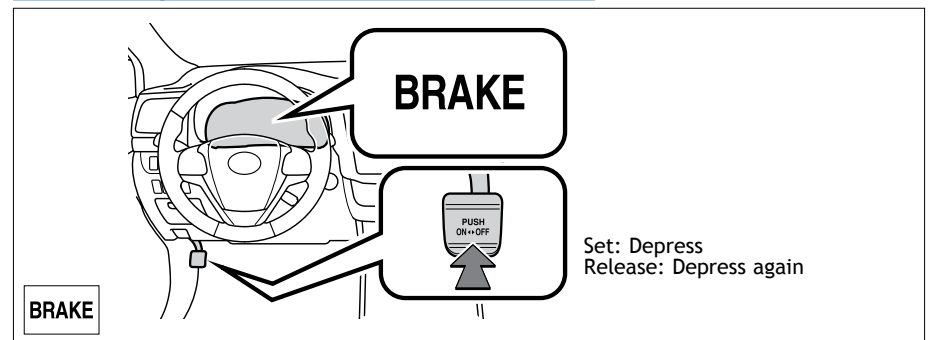 

Tilt and telescopic steering wheel

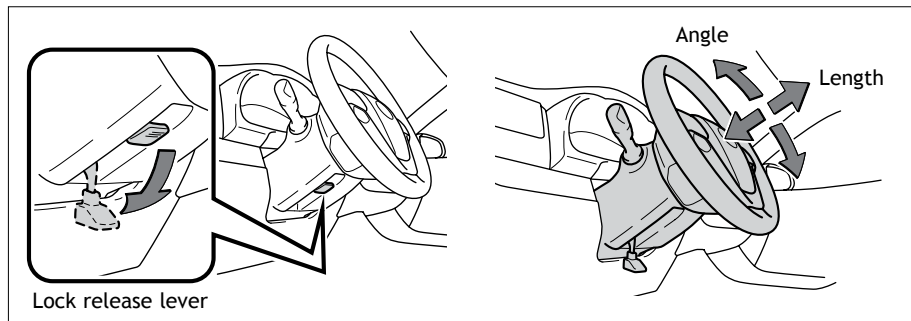 


Hold wheel, push lever down, set angle and length, and return lever.

NOTE: Do not attempt to adjust while the vehicle is in motion.

Moonroof (if equipped)


Sliding operation

 Push once to open partway; again to open completely.

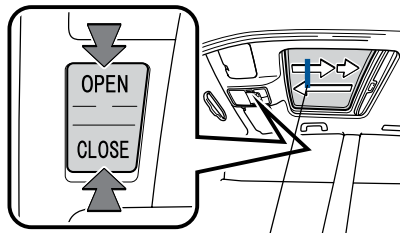

Recommended open position to minimize wind noise.

 
Tilting operation

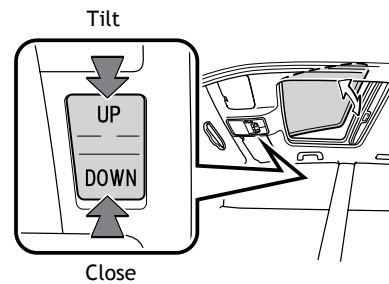


Panoramic Moonroof (if equipped)

Shade operation

 To stop operation partway, quickly slide and release the switch again.

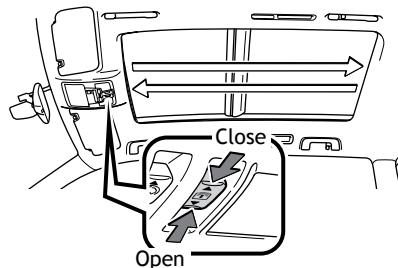


Tilting operation

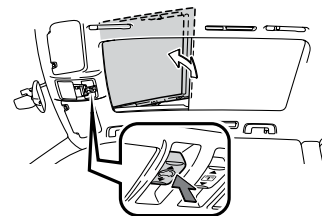 

If the moon roof is open, pressing the switch closes it up to the tilt-up position. If the shade is closed past the half-open position when the switch is pressed, it will open up to the half-open position.


Sliding operation

 The moon roof stops slightly before the fully open position to reduce wind noise and the shade opens fully. Slide the switch again to fully open or close the moon roof.

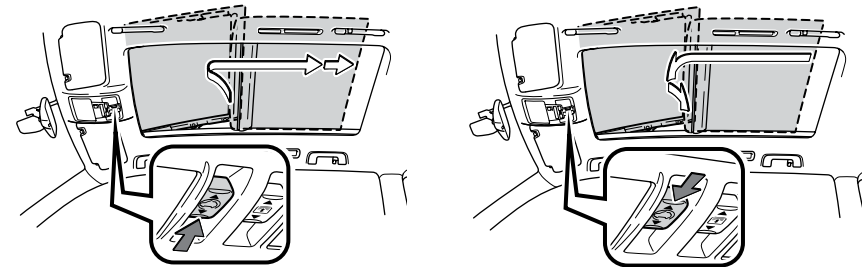


Door-Power back (liftgate) (if equipped)

 Instrument panel

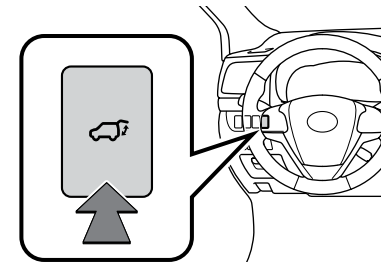


Open: Push and hold
Close: Push and hold again

 Back door (liftgate) (open and close)

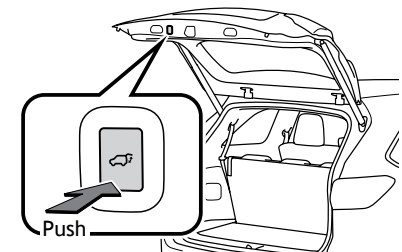

Back door (liftgate) (open only)

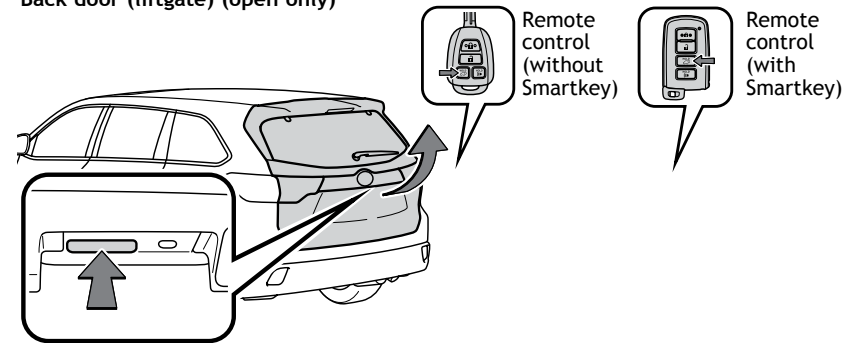 

NOTE: If battery is disconnected, the power back door needs to be reinitialized. Refer to the *Owner's Manual* for more details.

Programmable power liftgate

 
1. When the liftgate reaches the desired height, push the rear liftgate close-button (on the door jam of the liftgate) once. Press and hold the button until it beeps 4 times.
2. To reset the height, with the liftgate open and not moving, press and hold the rear liftgate close-button until it beeps 4 times, and continue to hold until it beeps again -then let go. Push the same button to close the liftgate. When you next open the liftgate it will open to the maximum height.
3. The height can also be set through the "Setup" screen on the audio display. Setup > Vehicle Customization > Other Vehicle Settings > Power Back Door Opening Adjust. Through this screen, there are 5 height options to choose from.

NOTE: If the liftgate has stopped operating, check inside the glove box, on the left side, to ensure the PWR DOOR OFF button has not been pushed.


** For detailed instructions, see Owner's Manual.

Seat adjustments-Front


Manual seat

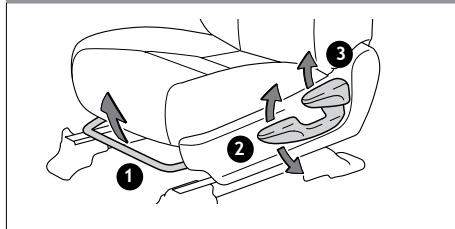

Power seat

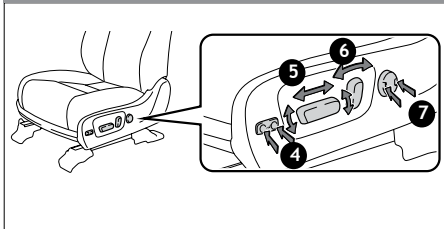 


Driving position memory

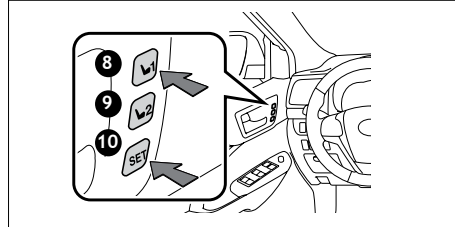 

- | | |
|--|---|
| <ul style="list-style-type: none"> 1 Seat position adjustment lever 2 Vertical seat adjustment lever 3 Seatback angle 4 Seat cushion length adjustment 5 Seat position adjustment switch 6 Seatback angle adjustment | <ul style="list-style-type: none"> 7 Lumbar support adjustment switch 8 Memory position 1 9 Memory position 2 10 Set memory position switch |
|--|---|

 
Seat adjustments-Rear

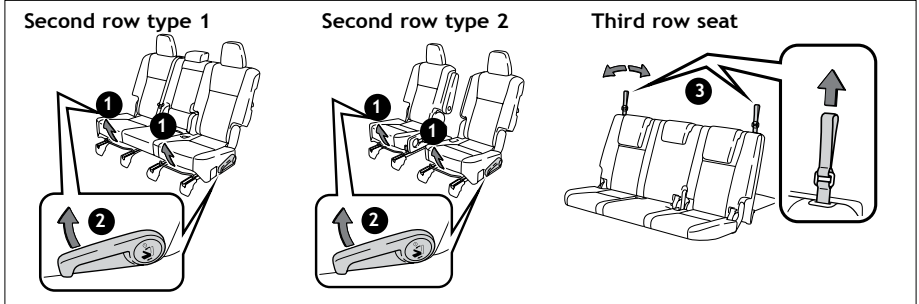


- 1 Seat position (forward/backward)
- 2 Seatback angle
- 3 Seatback angle adjustment straps

Refer to the *Owner's Manual* for more details.

 Seats-Stowing third row seats

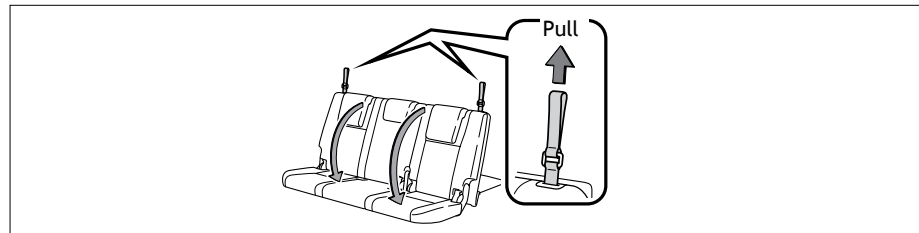


Seats-Returning third row seats

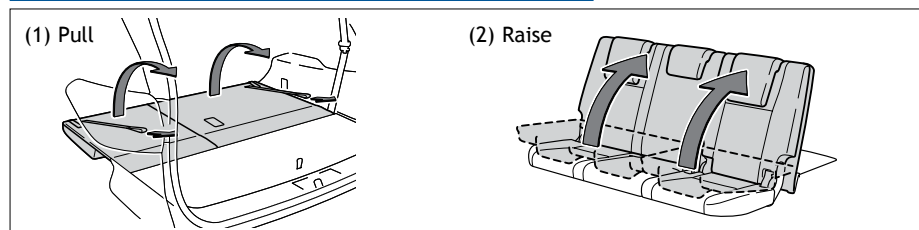 

Refer to the *Owner's Manual* for more details.

 Seats-Head restraints

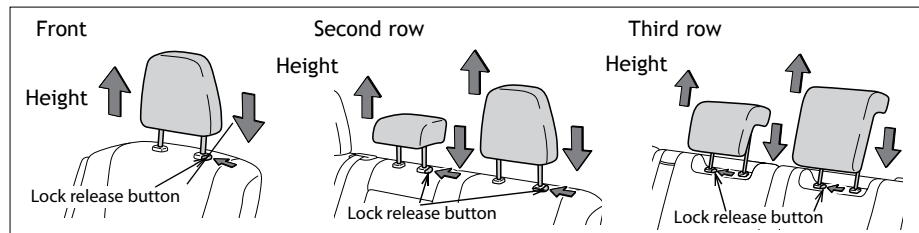

Windshield wipers & washers

Front	Rear
<p>Adjust frequency* Single wipe</p> <p>Interval wipe Slow Fast</p> <p>Pull to wash and wipe</p>	<p>Wash and wipe Wipe Interval wipe</p> <p>Wash and wipe</p>

* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

Lights & turn signals

Front fog lights (if equipped)

Turn

Front fog lights come on only when the headlights are on low beam.

Headlights

With DRL OFF switch

Headlights
Parking lights
Auto
DRL OFF

Low beam
High beam
High beam flasher

-Daytime Running Light system (DRL) (if equipped) Automatically turns on the headlights at a reduced intensity.
-Automatic light cut off system Lights automatically turn off after a delay of 30 seconds, or when lock switch on remote is pushed after all doors are locked.

Turn signals

Right turn
Lane change
Left turn

Power outlets-12V DC

Instrument panel

Center console

Rear of center console compartment

The “ENGINE START STOP”/ignition switch must be in the “ACC” or “ON” position to be used.


Power outlet-120V AC (if equipped)

Rear center console compartment

The “ENGINE START STOP”/ignition switch must be in the “ON” position to be used.

Multi-Information Display

 
Type 1

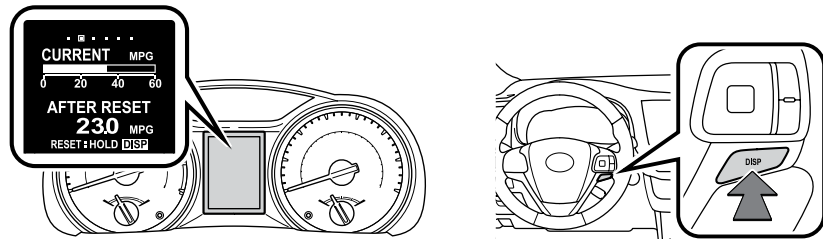

Push “DISP” to change information in the following:

- (1) Current fuel consumption
- (2) Driving range
- (3) Average fuel economy after refill
- (4) Distance driven since last reset
- (6) Eco driving indicator

 Type 2 (with color display)

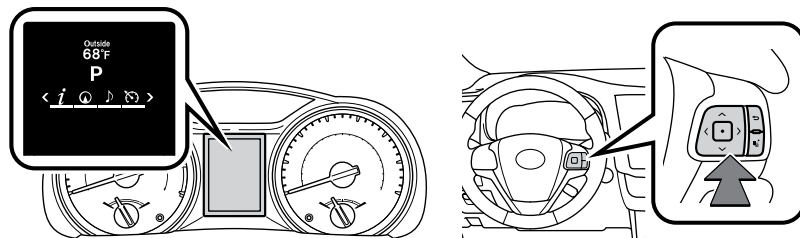


Push “meter control switches” to change information in the following:


- (1) Drive information
- (2) Navigation system linked display
- (3) Audio system linked display
- (4) Dynamic radar cruise control
- (5) LDA (Lane Departure Alert) status
- (6) Warning messages
- (7) Settings display

Windows-Power

 Driver side

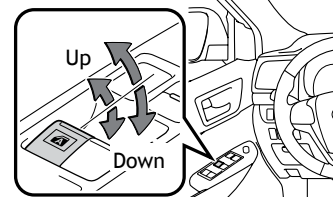

Window lock switch

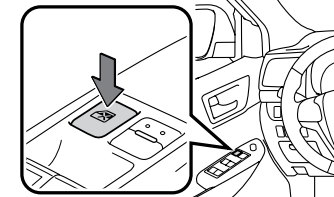 


Automatic operation front row or all-position (if equipped) Push the switch completely down or pull it completely up and release to fully open or close. To stop the window partway, operate the switch in the opposite direction.


Window lock switch Deactivates all passenger windows. Driver’s window remains operable.

Steering wheel switches and Telephone controls (Bluetooth®)*

 Steering wheel telephone controls

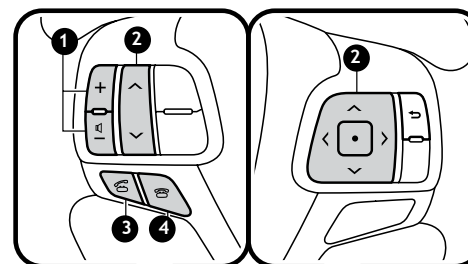

Microphone

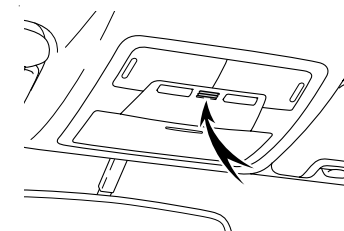 


- 1 Volume control
- 2 “V ▲” Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- 3 Start call
- 4 End call

Bluetooth® technology allows dialing or receipt of calls without taking hands from the steering wheel or using a cable to connect the compatible telephone and the system. Refer to “Bluetooth® audio/phone,” in the *Owner’s Manual*, for more information about phone connections and compatibility.

* Position of buttons may vary on some vehicles, for more details please refer to the *Owner’s Manual*

 
Rear seat entertainment system (if equipped)

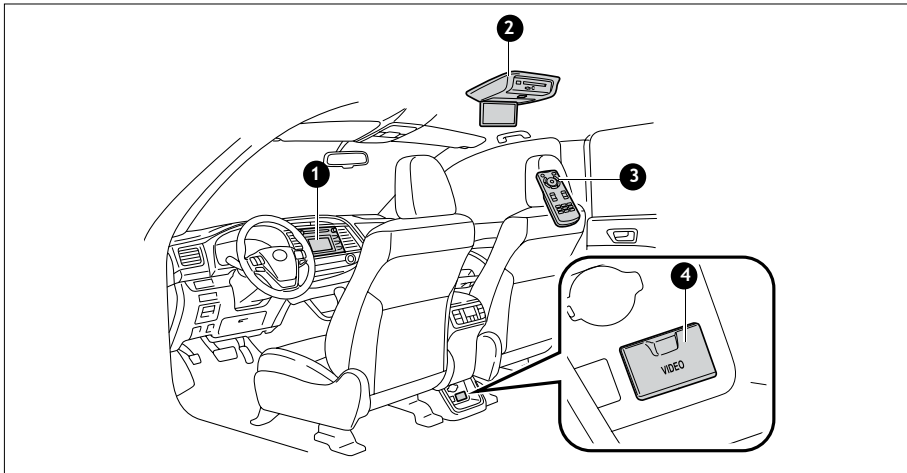

- 1 Audio System
- 2 Rear seat entertainment system (DVD player)
- 3 Remote control
- 4 AV input port

Refer to Section 7-1 of the *Navigation System Owner's Manual* for more information.

 
USB / AUX port

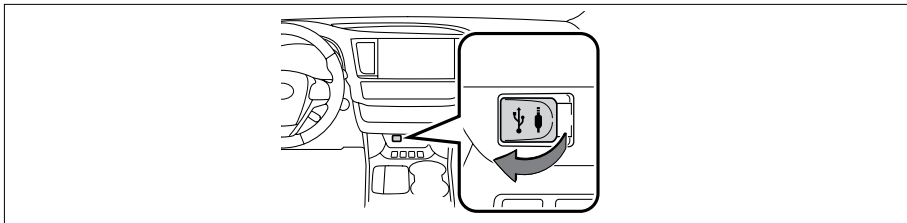

By inserting a mini plug into the USB/AUX port, you can listen to music from a portable audio device through the vehicle's speaker system while in USB/AUX mode.


Audio

 Type 1 - Entune Audio and Entune Audio Plus (LE and LE Plus)*

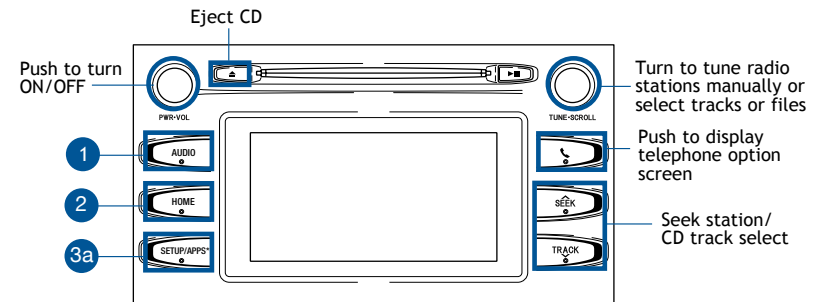

Type 2 - Entune Premium Audio* with Navigation and App Suite (XLE/LTD) (additional functions)

 Limited models may be equipped with the JBL upgrade in this unit.

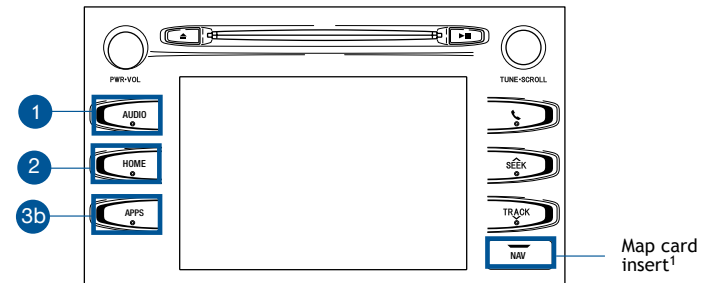

¹ Refer to the "NAVIGATION AND MULTIMEDIA SYSTEM OWNER'S MANUAL".

* The Entune App Suite may not be pre-installed in your vehicle. In order to activate the Entune App Suite, download and launch the Entune app on your smartphone, connect the phone to the vehicle via Bluetooth®, and open the Entune™ App on the phone and sign in. Press the "Apps" button on the audio unit and accept the prompt to update the Apps. The download process will take up to 15 minutes, and when it is complete, follow the on-screen prompts to complete installation. Once the update is complete, the available Apps will be listed on the Apps menu screen.

- 1 AUDIO Button
Access to audio functions.
 - 2 HOME Button
Access to Home screen.
 - 3a SETUP/APPS Button**
Access to traffic and weather
 - 3b APPS Button
Access to Entune® App Suite, sports, stocks, news, traffic, weather and driver easy speak.
- HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

** LE models have "SETUP" button while LE Plus models have "APPS" button.

Driver Easy Speak (XLE and Limited grades)

 
This feature utilizes the vehicle’s built-in microphone to amplify the driver’s voice through the rear speakers. To activate this feature, select “Driver Easy Speak” from the Apps screen on the audio unit. The feature must be turned on every time you enter the vehicle, and automatically turns off when any door (including the liftgate) is opened. There are 7 volume settings.

Traffic*



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use or arrows to scroll the map up or down.

Weather*

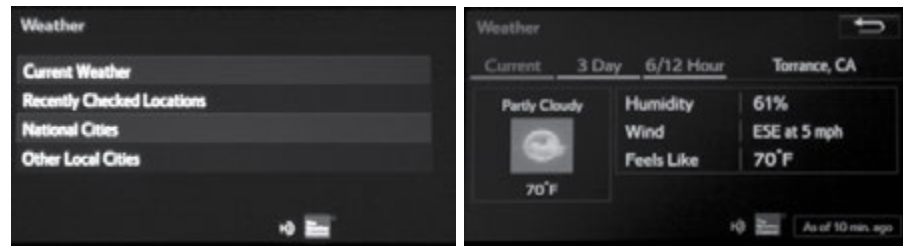

The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.

* Available with Entune Audio Plus only.

 
Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and “Arc” logos are proprietary trademarks of iBiquity Digital Corp.

Air Conditioning/Heating

Front automatic Air Conditioning


- 1 Automatic climate control ON
Adjusting the temperature setting will cause the airflow vents, air intake and fan to adjust automatically.
- 2 Front windshield airflow/defogger
- 3 Rear windshield airflow/defogger and side mirror defogger
- 4 Temperature selector dial
- 5 Recirculate cabin air (fresh air when OFF)
- 6 Fan speed
- 7 Airflow mode selector
- 8 Temperature selector (rear)
- 9 Rear Air Conditioning ON/OFF
- 10 “SYNC” button
Indicator ON: Synchronize temperature settings for driver and all passengers.
Indicator OFF: Separate temperature settings for driver, front passenger and rear passengers.
- 11 Air Conditioning ON/OFF

Front manual Air Conditioning

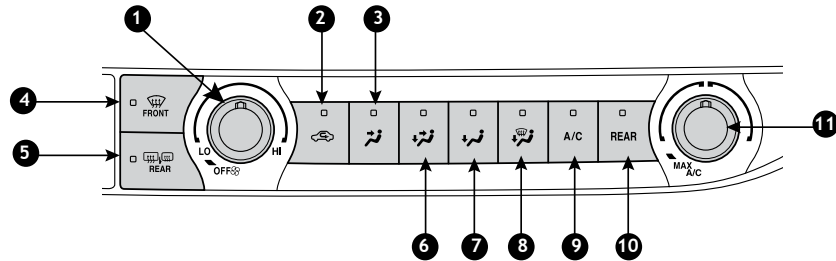


- 1 Fan speed
- 2 Recirculate cabin air (fresh air when OFF)
- 3 Upper airflow mode
- 4 Front windshield airflow/defogger
- 5 Rear windshield airflow/defogger and side mirror defogger
- 6 Dual airflow mode
- 7 Lower airflow mode
- 8 Lower airflow mode and window defogger
- 9 Air conditioning ON/OFF
- 10 Rear air conditioning ON/OFF
- 11 Temperature selector

 Rear Automatic Air Conditioning

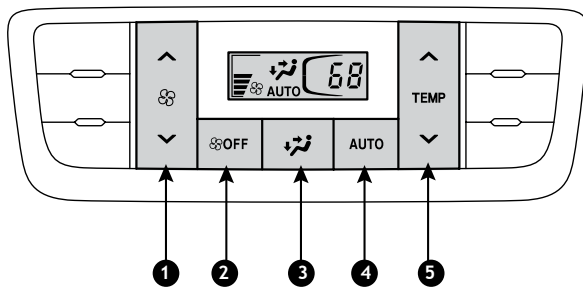


- 1 Fan speed
- 2 Fan OFF
- 3 Airflow mode selector
- 4 Automatic mode selector
- 5 Temperature selector

 Rear Manual Air Conditioning

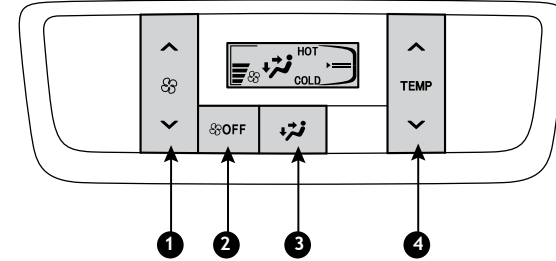


- 1 Fan speed
- 2 Fan OFF
- 3 Airflow mode selector
- 4 Temperature selector

 Second row seat heaters (if equipped)

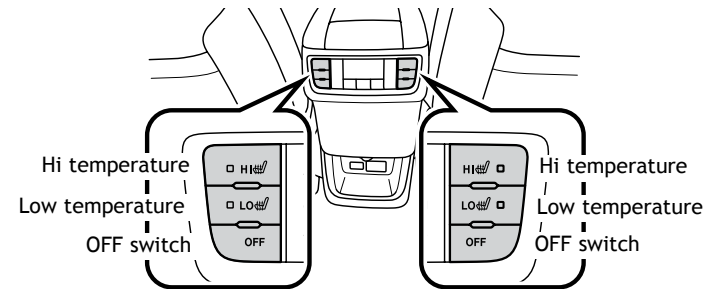


Clock

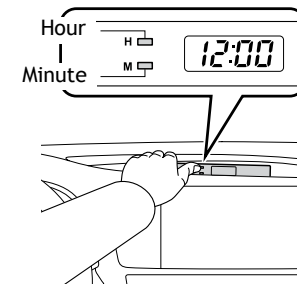 


Press "H" for Hours and "M" for minutes to set or change the time.

Cruise control

 Turning system ON/OFF

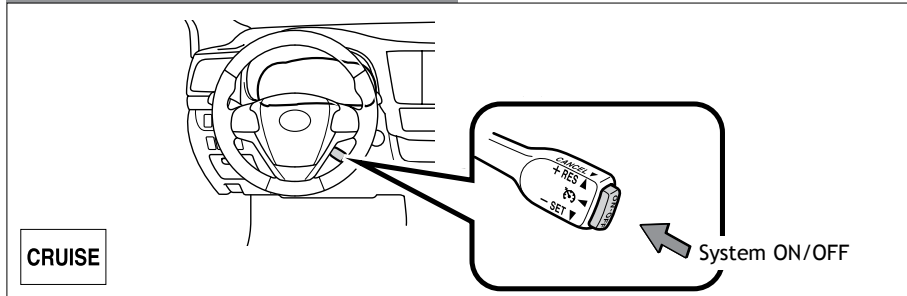


Functions

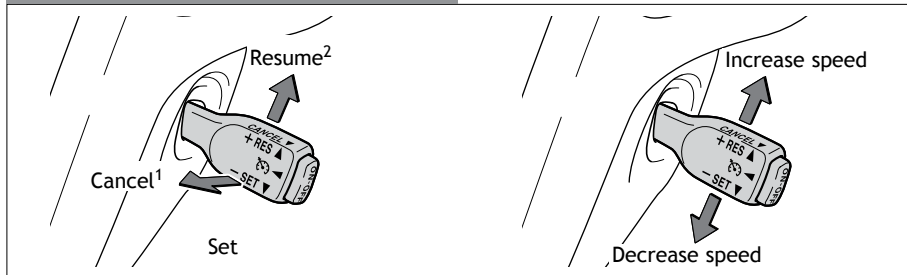 

¹ The set speed may also be cancelled by depressing the brake pedal.

² The set speed may be resumed once vehicle speed exceeds 25 mph.

 Garage door opener (HomeLink®)* (if equipped)

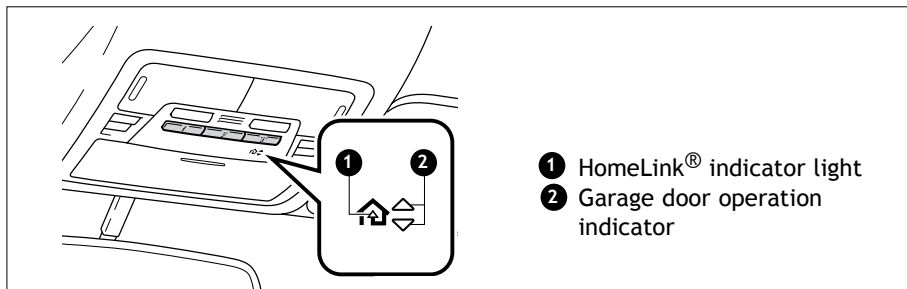

- 1 HomeLink® indicator light
- 2 Garage door operation indicator

 
Garage door openers manufactured under license from HomeLink®* can be programmed to operate garage doors, estate gates, security lighting, etc.

Refer to “Garage door opener,” Section 6-4 in the *Owner’s Manual* for more details.

For programming assistance, contact HomeLink® at 1-800-355-3515, or visit <http://www.homelink.com>.

* HomeLink® is a registered trademark of Gentex Corporation.


Seat belts

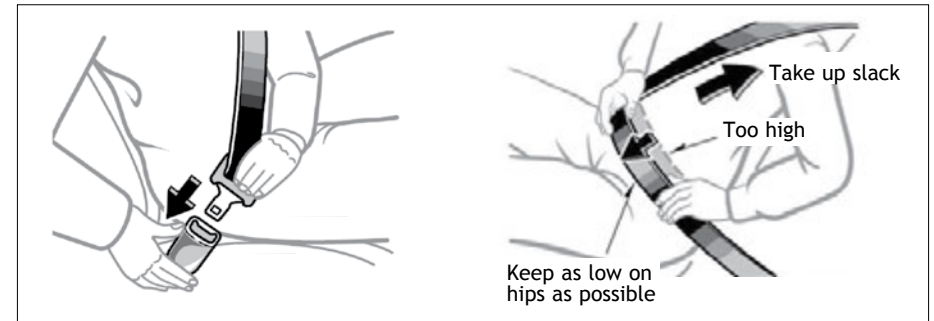

If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner’s Manual*.

 Tire Pressure Monitoring (warning) System

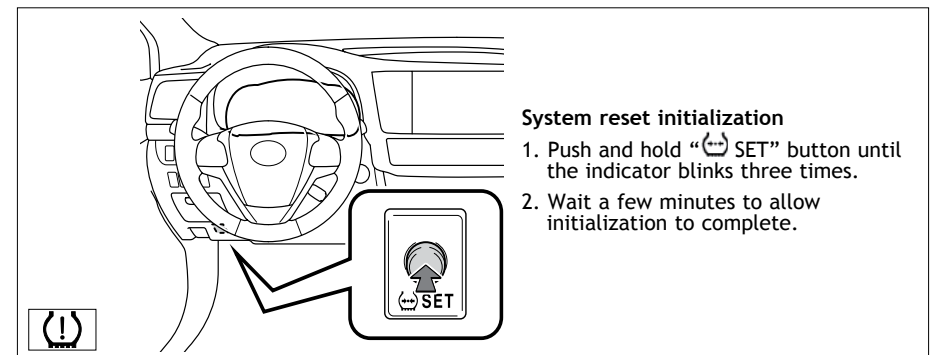

System reset initialization

1. Push and hold “SET” button until the indicator blinks three times.
2. Wait a few minutes to allow initialization to complete.

 
After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to “ON” and press and hold the “SET” button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner’s Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.


NOTE: The warning light may come on due to temperature changes or changes in tire pressure from natural air leakage. If the system has not been initialized recently, setting the tire pressures to factory specifications should turn off the light.

Seat belts-Shoulder belt anchor

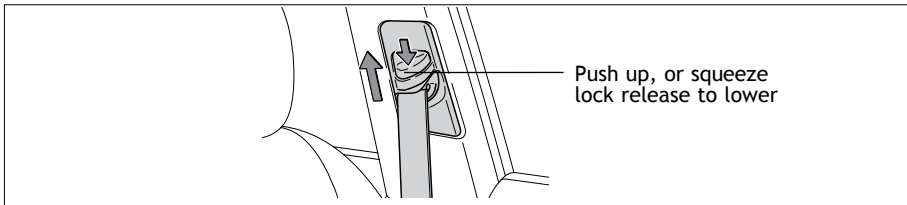


Doors-Child safety locks

 Rear door

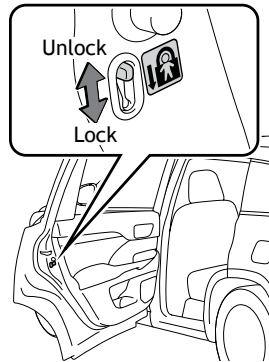

Moving the lever downward will allow the door to be opened only from the outside.

 Third row center seat belt

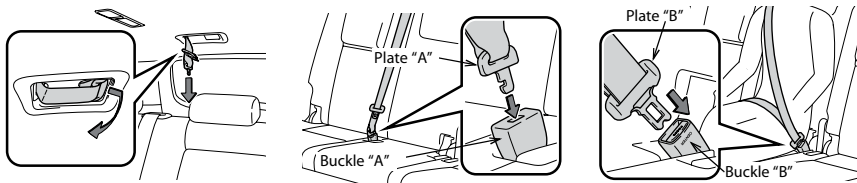


(1) Take the plate out of the holder, and then pull down the seat belt

(2) Push plate "A" into buckle "A" until a click sound is heard.

(3) Push plate "B" into buckle "B" until a click sound is heard.


Spare tire & tools

 Tool location

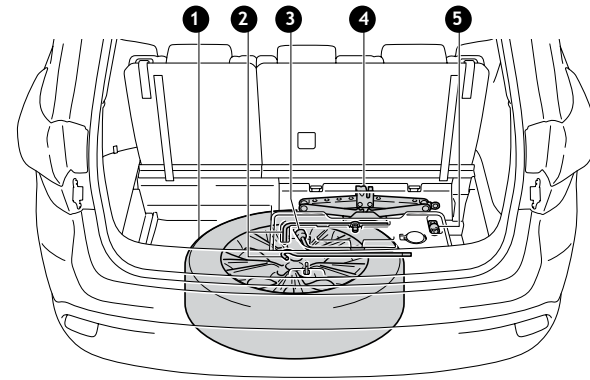

- ① Spare tire
- ② Jack handles
- ③ Wheel nut wrench
- ④ Jack
- ⑤ Adapter socket

 Removing the spare tire

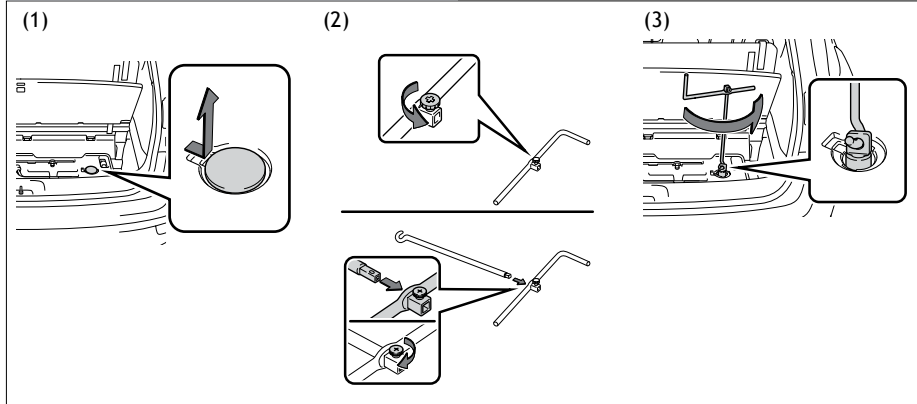

- (1) Remove the cover under the center deck board to find the spare tire clamp bolt.
- (2) Assemble the jack handle.
- (3) Put the socket adapter on the spare tire clamp bolt. Loosen the bolt by turning it counterclockwise with the jack handle.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by "pulsing" brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by "pulsing" each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or "panic" braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

 
SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

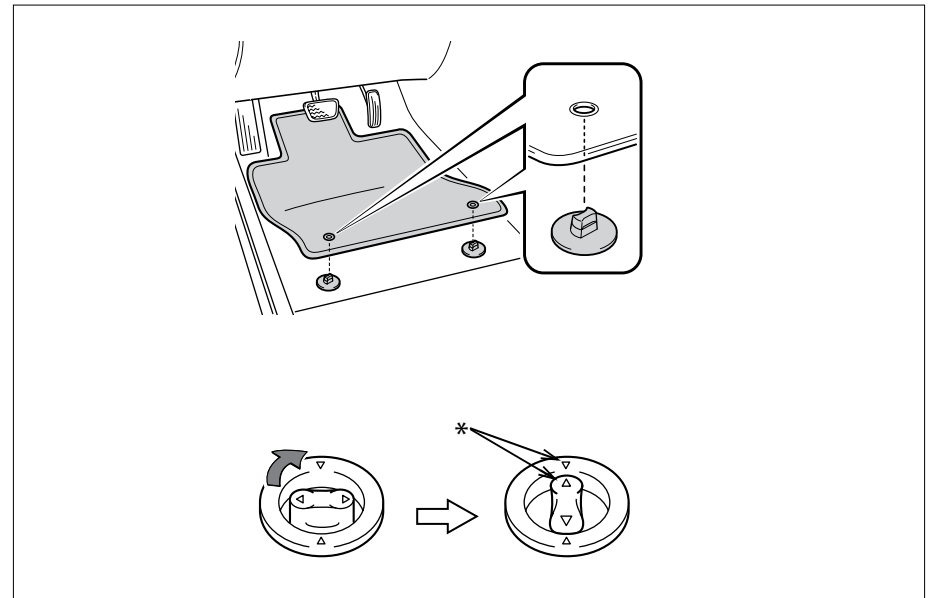


BLUETOOTH® DEVICE PAIRING SECTION

To begin the Bluetooth® Pairing process, press the HOME button on the faceplate of your Toyota Vehicle Entune™ Multimedia Head Unit.¹

Bluetooth® Pairing for Android® phone and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.²

 Initiate Bluetooth® on your Android®

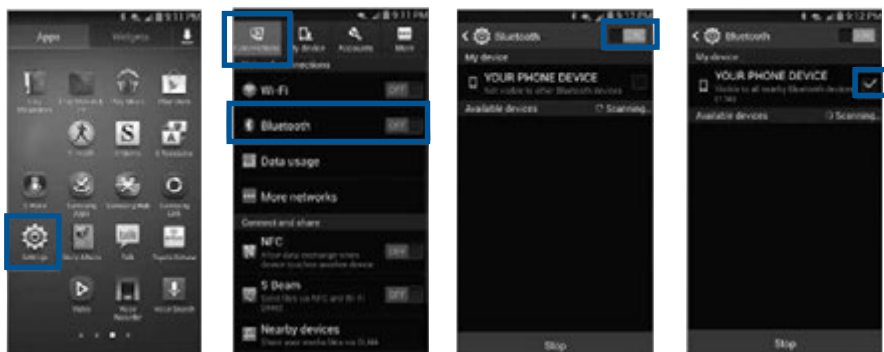

- STEP 1**
From your APPS SCREEN, select SETTINGS
- STEP 2**
Select CONNECTIONS and select BLUETOOTH
- STEP 3**
Ensure BLUETOOTH is ON
- STEP 4**
Select YOUR PHONE DEVICE to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.

 


- STEP 5**
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

¹ To determine which head unit is installed in your vehicle, refer to page 21.
² Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.

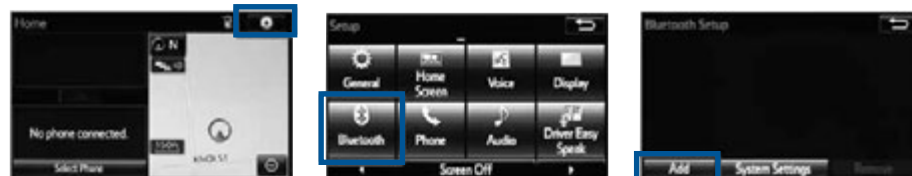


- STEP 6**
On your Toyota Vehicle Entune Multimedia Head Unit, Select SETUP BUTTON on the Home Screen.
- STEP 7**
Select BLUETOOTH
- STEP 8**
Select ADD, to add your phone device



- STEP 9**
Back on your smartphone, you can now select your TOYOTA VEHICLE in Bluetooth Settings.
You may need to enter the provided Bluetooth PIN on your phone.
- STEP 10**
Your smartphone is now paired with Entune.
- STEP 11**
Once paired, Entune will attempt to connect audio and contacts on your phone.

 
Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)

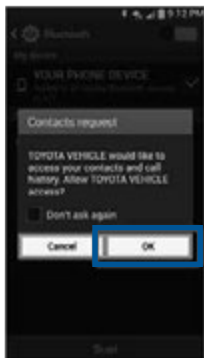

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

 It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

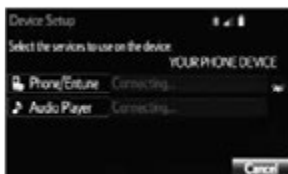

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

Bluetooth® Pairing for iPhone® and Entune™ touch screen system

 
Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all iPhone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your iPhone®



STEP 1

From the HOME SCREEN, select SETTINGS

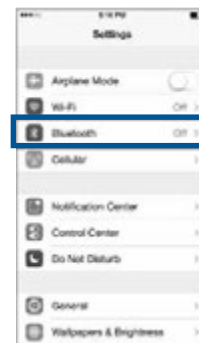

STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

 
Once you have Bluetooth enabled on your phone and ready to pair, you will need to initiate Bluetooth on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



STEP 6
Select **SETUP** BUTTON on the Home Screen.



STEP 7
Select **BLUETOOTH**

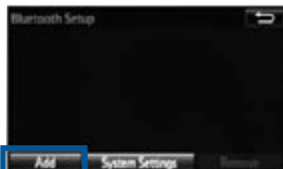

STEP 8
Select **ADD**, to add your phone device

 


STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.


You may need to enter the provided Bluetooth PIN on your phone.




STEP 10
Your smartphone is now paired with Entune.

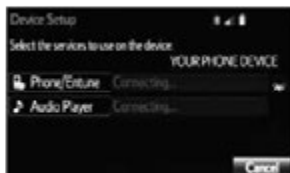

 STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

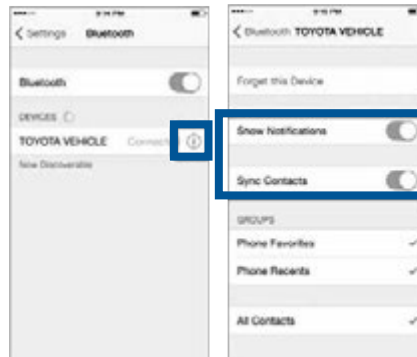

 STEP 12
Using your smartphone, you may need to allow Entune access to your messaging and contacts
Only current iPhone text messages can be viewed on the head unit. iPhone does not allow text message reply.

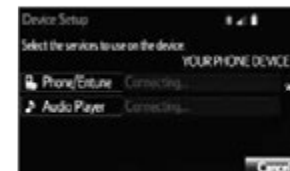

STEP 13
A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
(800) 331-4331

Disclosures

 
This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2015 models.


Bluetooth® Pairing for Windows Phone® and Entune™ touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Windows Phone mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2015 models.

Initiate Bluetooth® on your Windows Phone®

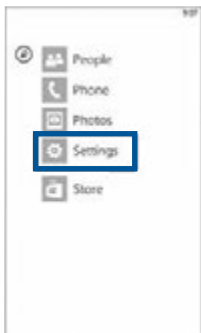

 STEP 1
From your APP LIST, select **SETTINGS**

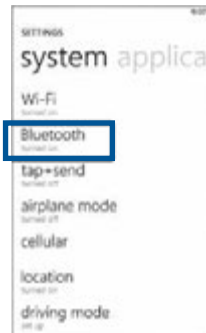

STEP 2
Select **BLUETOOTH**



STEP 3
Ensure **BLUETOOTH** is **ON**



STEP 4
Phone will seek out Bluetooth devices while remaining discoverable



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.
CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth® on your Entune™ Multimedia Head Unit

 
Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen.



STEP 7
Select **BLUETOOTH**

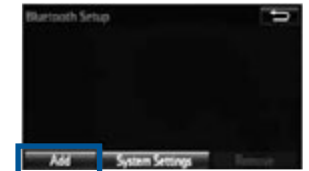

 STEP 8
Select **ADD**, to add your phone device

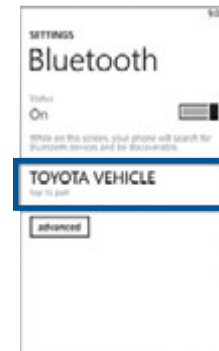


STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.



 STEP 10
Your smartphone is now paired with Entune.

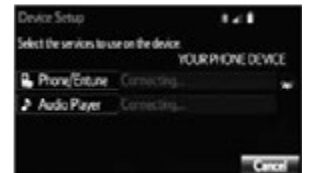

STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth® on your Entune™ Multimedia Head Unit (continued)



STEP 12

Using your smartphone, you may need to allow Entune access to your contacts



STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

- Disclosures
- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2015 models.

