

**2015
Tacoma
Quick Reference Guide**

2015 Tacoma

This *Quick Reference Guide* is a summary of basic vehicle operations. It contains brief descriptions of fundamental operations so you can locate and use the vehicle's main equipment quickly and easily.

The *Quick Reference Guide* is not intended as a substitute for the *Owner's Manual* located in your vehicle's glove box. We strongly encourage you to review the *Owner's Manual* and supplementary manuals so you will have a better understanding of your vehicle's capabilities and limitations.

Your dealership and the entire staff of Toyota Motor Sales, U.S.A., Inc. wish you many years of satisfied driving in your new Tacoma.

A word about safe vehicle operations

This *Quick Reference Guide* is not a full description of Tacoma operations. Every Tacoma owner should review the *Owner's Manual* that accompanies this vehicle.

Pay special attention to the boxed information highlighted in color throughout the *Owner's Manual*. Each box contains safe operating instructions to help you avoid injury or equipment malfunction.

All information in this *Quick Reference Guide* is current at the time of printing. Toyota reserves the right to make changes at any time without notice.

INDEX

OVERVIEW

Engine maintenance	7
Fuel tank door and cap	6
Hood release	6
Indicator symbols	4-5
Instrument cluster	4
Instrument panel	2-3
Keyless entry*	6

FEATURES/OPERATIONS

Air Conditioning/Heating	18
Audio	14-15
Automatic Transmission	8
Bluetooth® Device Pairing Section	27-36
Clock	18
Cruise control	13
Entune™ Audio Plus	16
Four-wheel drive	9
Lights & turn signals	12
Light control-Instrument panel	8
Parking brake	10
Power outlets	19
Rear differential lock	20
Seat adjustments-Front	10
Seats-Folding rear	11
Seats-Head restraints	10
Tilt and telescopic steering wheel	9
Traffic	17
VSC OFF switch	20
Weather	17
Windows-Power	12
Windshield wipers & washers	13

SAFETY AND

 
EMERGENCY FEATURES

Door locks-Power	21
Doors-Child safety locks	22
Floor mat installation	25
Seat belts	21
Seat belts-Shoulder belt anchor	21
Spare tire & tools	23
Star Safety System™	24-25
Tire Pressure Monitoring (warning) System	22

* Visit your Toyota dealer for information on this and other customizable options.

OVERVIEW

Instrument panel

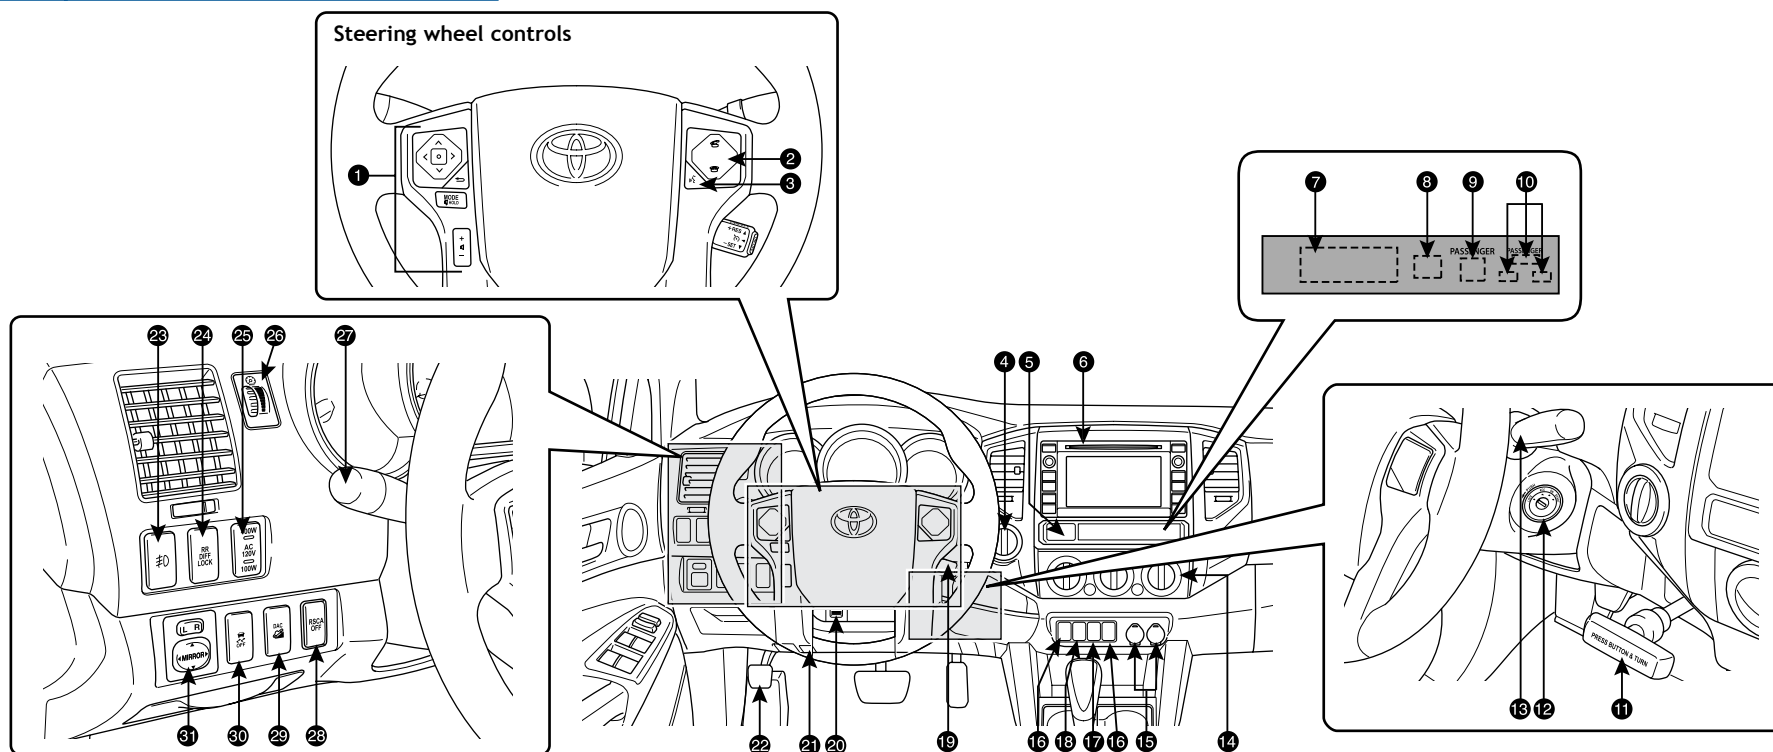

- ❶ Steering wheel audio controls⁴
- ❷ Telephone controls⁴
- ❸ Voice command button⁴
- ❹ Two-wheel/Four-wheel drive selector¹
- ❺ Emergency flasher switch
- ❻ Multimedia system^{1,4}
- ❼ Clock
- ❽ Theft deterrent system/Engine immobilizer indicator¹
- ❾ Front passenger seat belt reminder
- ❿ Front passenger occupant classification indicator or front passenger airbag ON/OFF indicator
- ⓫ Parking brake lever²
- ⓬ Ignition switch
- ⓭ Windshield wiper and washer controls
- ⓮ Air Conditioning controls
- ⓯ 12V DC Power outlets
- ⓰ Seat heater switches¹
- ⓱ AUX/USB port
- ⓲ “A-TRAC” (Active traction control system) switch¹
- ⓳ Cruise control¹
- ⓴ Tilt and telescopic steering lock release lever

- ⓶ Tire Pressure Monitoring (warning) System reset
- ⓷ Parking brake pedal³
- ⓸ Front fog light switch¹
- ⓹ Rear differential lock switch¹
- ⓺ 120V AC Power outlet ON/OFF switch¹
- ⓻ Instrument panel light control
- ⓼ Headlight and turn signal controls
- ⓽ “RSCA OFF” (Roll Sensing Curtain shield Airbags OFF) switch¹
- ⓿ “DAC” (Downhill Assist Control) button¹ or clutch start cancel switch¹
- ⓰ Vehicle Stability Control OFF switch
- ⓱ Power rearview mirror control switches¹

¹ If equipped

 
² Manual Transmission only

³ Automatic Transmission only

⁴ For details, refer to “Navigation System Owner’s Manual.”

NOTE: For vehicles equipped with Entune™, please consult the “Navigation System With Entune Quick Reference Guide” or www.toyota.com/entune.

Instrument cluster

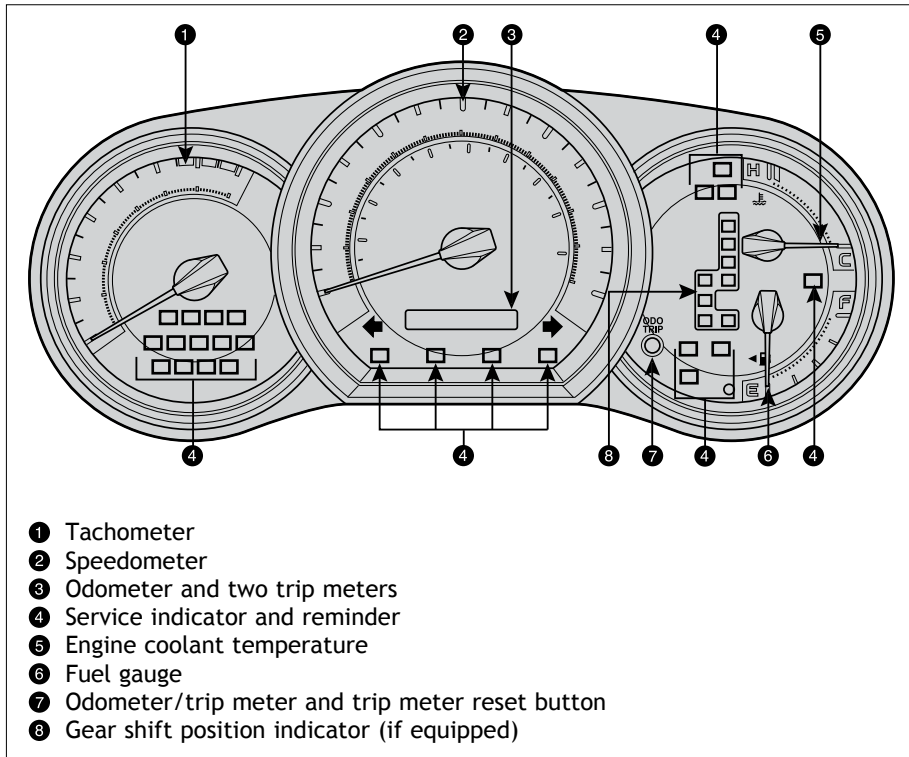

Indicator symbols

For details, refer to “Indicators and warning lights,” Section 2-2, 2014 Owner’s Manual.

- Brake system warning¹
- Driver/Front passenger seat belt reminder
- Charging system warning¹
- Front passenger occupant classification indicator / Front passenger airbag ON/OFF indicator
- Low engine oil pressure warning¹
- Malfunction/Check Engine indicator¹
- Engine oil replacement reminder¹

- Open door warning
- Airbag SRS warning¹
- Automatic Transmission fluid temperature warning¹
- Low Tire Pressure Warning¹
- Theft deterrent/Engine immobilizer system indicator
- Roll Sensing Curtain shield Airbags OFF indicator¹
- Headlight low beam indicator
- Headlight high beam indicator
- Turn signal indicator
- Automatic Transmission indicator (5-speed)/(4-speed)
- Four-wheel drive indicator²
- 4LO Low speed four-wheel drive indicator²
- Rear differential lock indicator^{1,3}
- Slip indicator¹
- Vehicle Stability Control OFF indicator¹
- A-TRAC Active traction control system indicator
- TRAC OFF Traction control OFF indicator¹
- Downhill Assist Control system indicator¹
- AUTO LSD AUTO Limited Slip Differential indicator¹
- CRUISE Cruise control indicator⁴
- Low fuel level warning
- ABS Anti-lock Brake System warning¹



¹ If indicator does not turn off within a few seconds of starting engine, there may be a malfunction. Have vehicle inspected by your Toyota dealer.

² If this light flashes, refer to “Four-wheel drive system,” Section 2-4, 2015 Owner’s Manual.


³ If this light flashes, refer to “Rear differential lock system,” Section 2-4, 2015 Owner’s Manual.

⁴ If this light flashes, refer to “Cruise control,” Section 2-4, 2015 Owner’s Manual.

Keyless entry (if equipped)

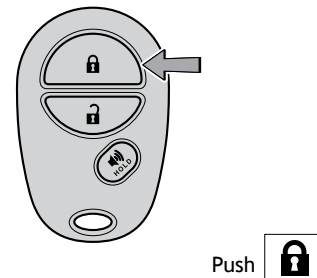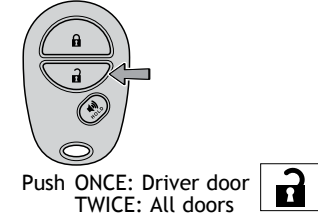
<p>Locking operation</p> 	<p>Unlocking operation</p>  <p>Push ONCE: Driver door TWICE: All doors</p> <p>NOTE: If a door is not opened within 30 seconds of unlocking, all doors will relock for safety.</p>
---	--


Panic button

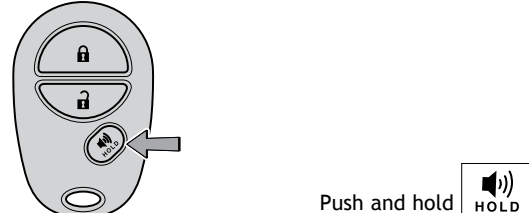


Push and hold **HOLD**

Fuel tank door and cap

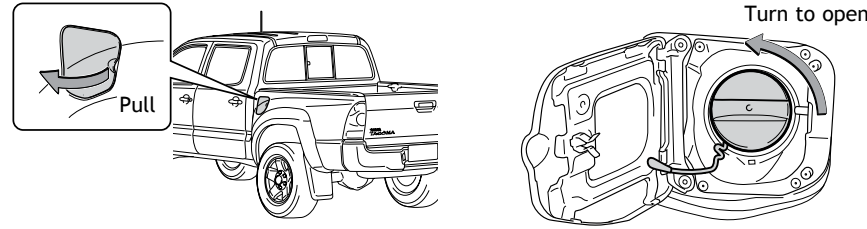

NOTE: Tighten until one click is heard. If the cap is not tightened enough, Check Engine “” indicator may illuminate.


Hood release

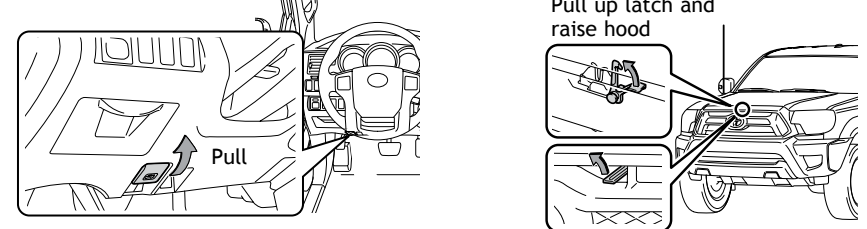


Pull up latch and raise hood

Engine maintenance

4 cylinder (2TR-FE) engine

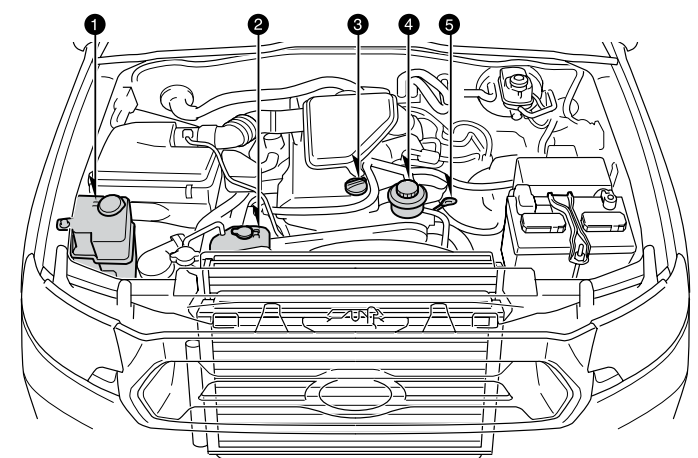

6 cylinder (1GR-FE) engine

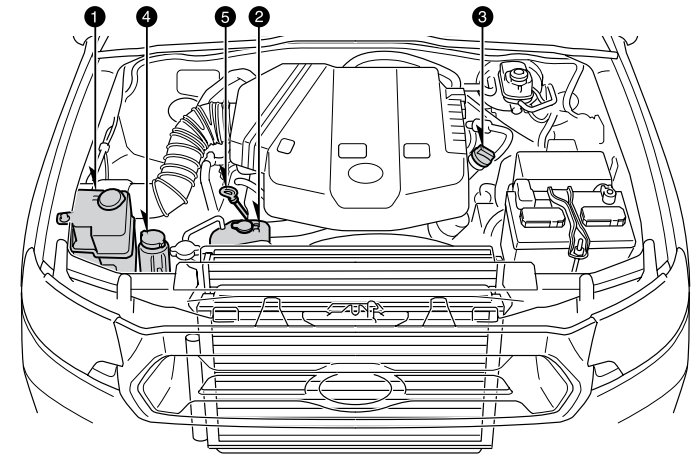


- ① Windshield washer fluid tank
- ② Engine coolant reservoir
- ③ Engine oil filler cap
- ④ Power steering fluid reservoir
- ⑤ Engine oil level dipstick

NOTE: Regularly scheduled maintenance, including oil changes, will help extend the life of your vehicle and maintain performance. Please refer to the “*Warranty & Maintenance Guide.*”


FEATURES/OPERATIONS

Automatic Transmission (if equipped)

 5-speed models

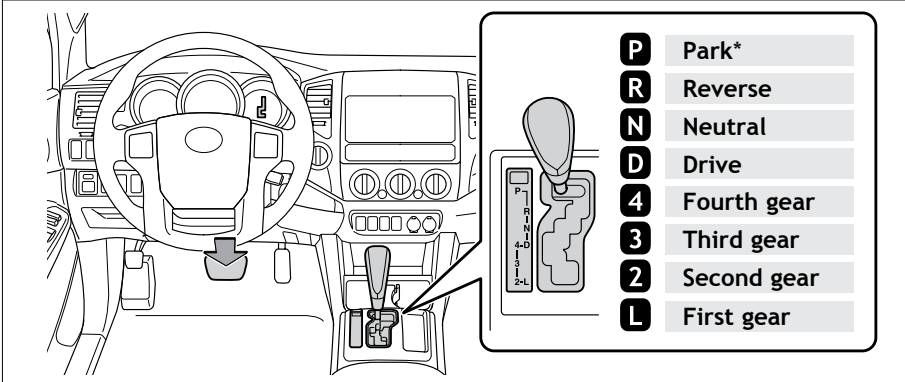


4-speed models

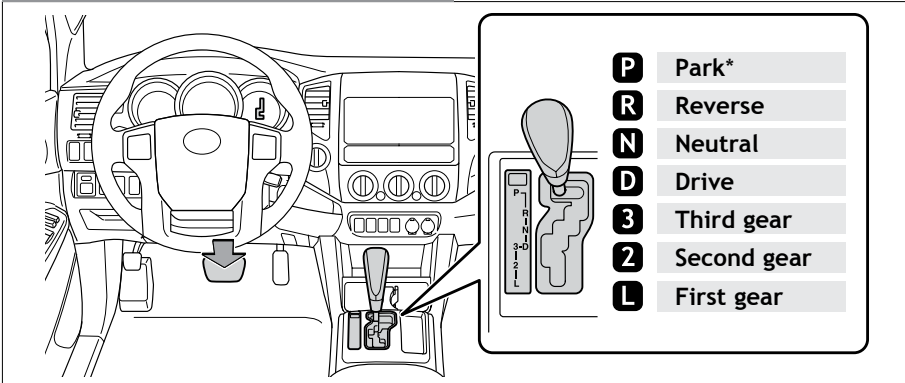 


* The ignition switch must be "ON" and the brake pedal depressed to shift from Park.

Downshifting increases power going uphill, or provides engine braking downhill. For best fuel economy during normal driving conditions, always drive with the shift lever in the "D" position.

 Light control-Instrument panel

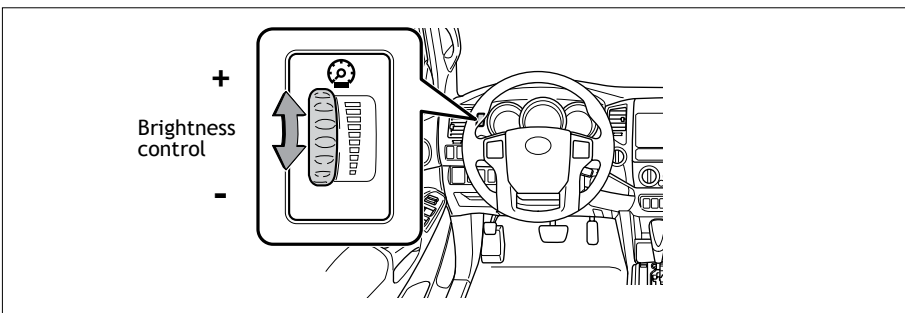


Four-wheel drive (if equipped)

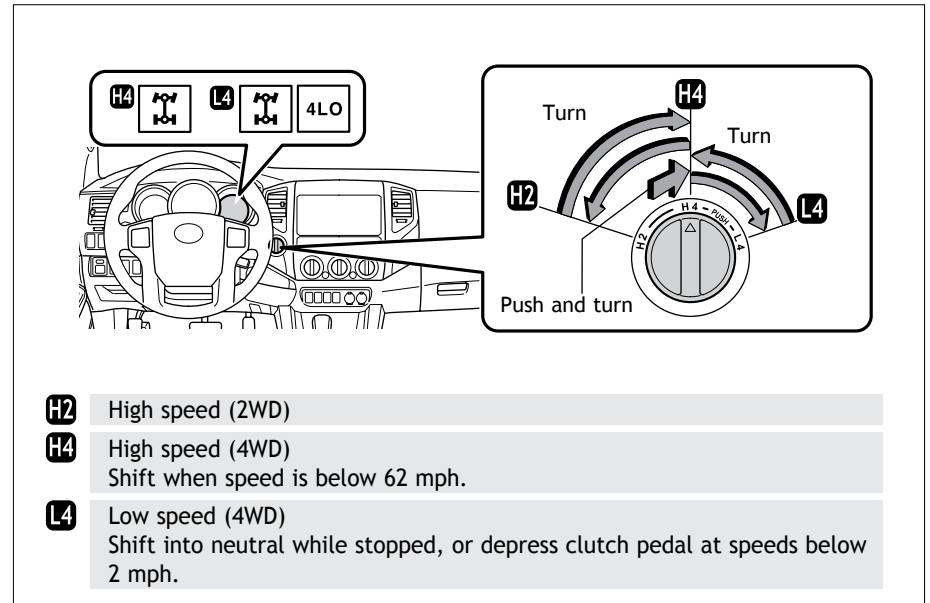 

For best fuel economy and performance under normal driving conditions, keep in "H2" position.

 Tilt and telescopic steering wheel

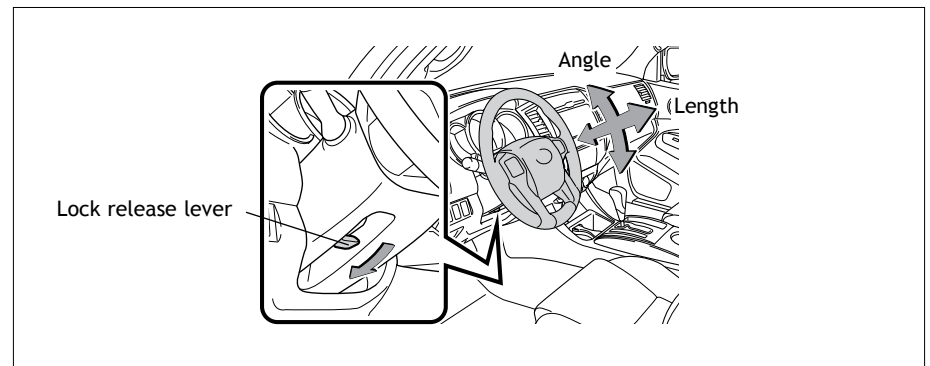


Hold wheel, push lever down, set angle and length, and return lever.


NOTE: Do not attempt to adjust while the vehicle is in motion.

Parking brake

 Automatic Transmission

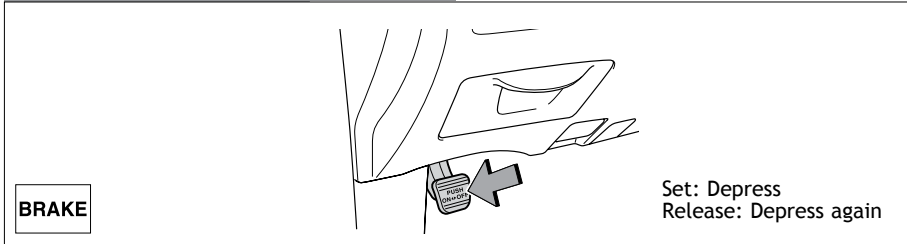


Manual Transmission

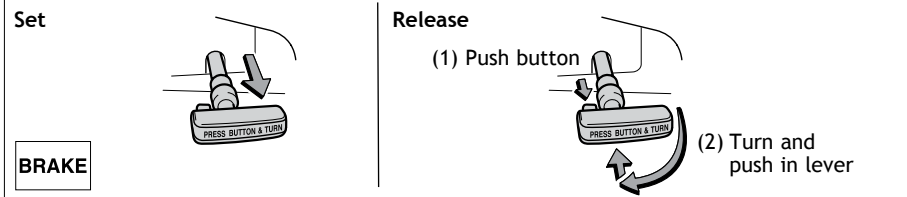 


Seats-Head restraints

 Separate seats-Front

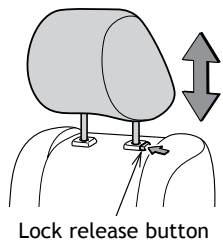


Bench seat-Front

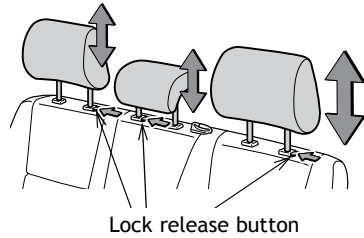 


Seat adjustments-Front

 Separate seat

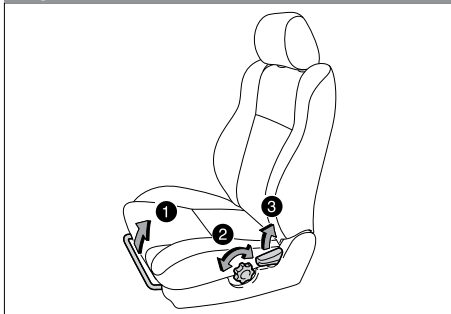


Bench seat

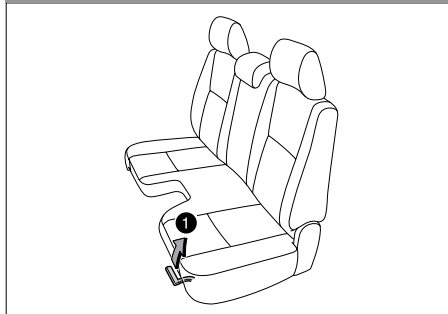 

- ① Seat position (forward/backward)
- ② Driver's seat lumbar support (if equipped)
- ③ Seatback angle


Seats-Folding rear

 Access cab

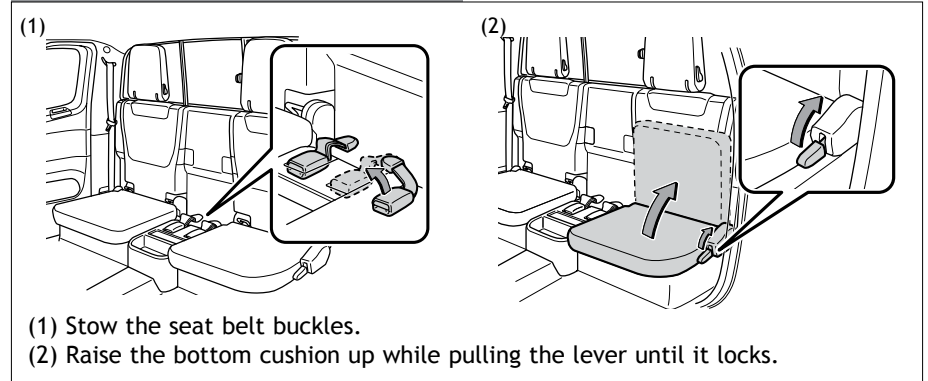

- (1) Stow the seat belt buckles.
- (2) Raise the bottom cushion up while pulling the lever until it locks.

 
Double cab

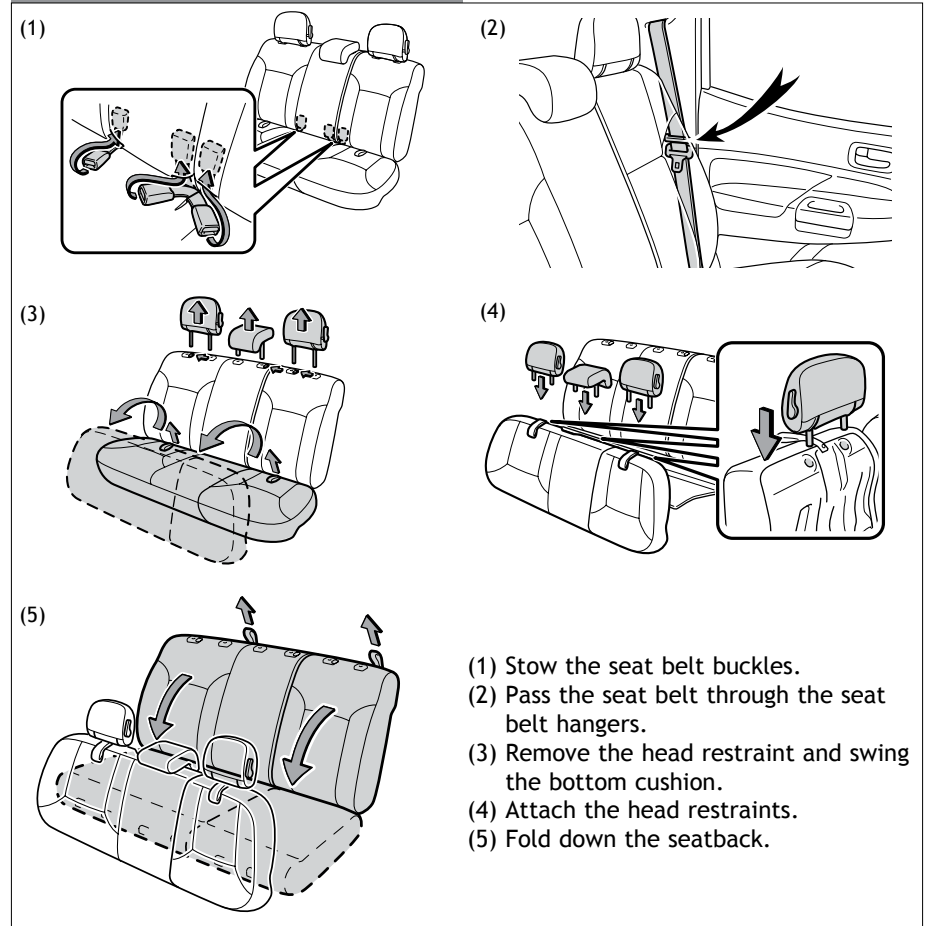

- (1) Stow the seat belt buckles.
- (2) Pass the seat belt through the seat belt hangers.
- (3) Remove the head restraint and swing the bottom cushion.
- (4) Attach the head restraints.
- (5) Fold down the seatback.


Lights & turn signals

 Headlights

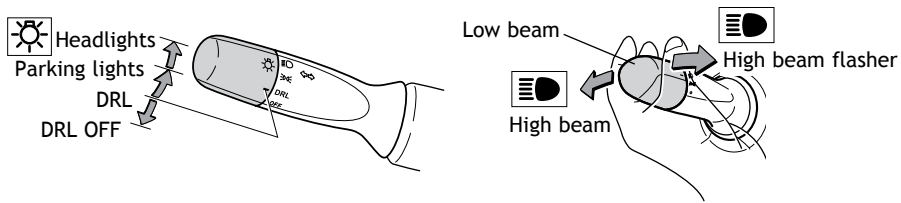


- Daytime Running Light system Automatically turns on the front turn signal lights upon starting engine and releasing parking brake.
- Automatic light cutoff system Automatically turns lights off when driver's door is opened with the ignition switch in the "ACC" or "LOCK" position.

 Front fog lights (if equipped)

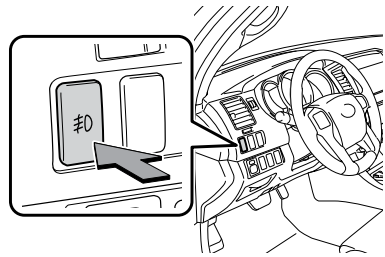


Front fog lights come on only when the headlights are on low beam.

 Turn signals

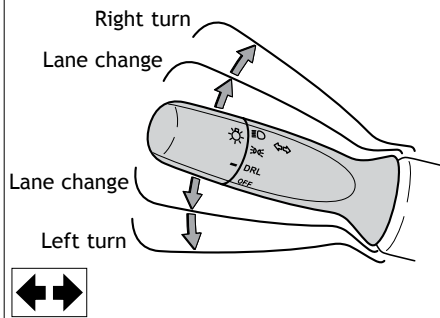


Windows-Power (if equipped)

 Driver side

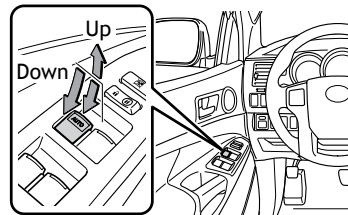

Window lock switch

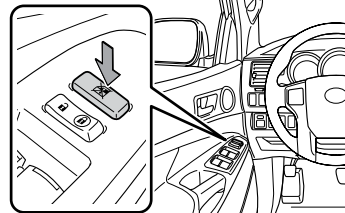 


Automatic down operation (driver side only)

Push the switch completely down and release to fully open. To stop the window partway, operate the switch in the opposite direction.

Window lock switch Deactivates all passenger windows. Driver's window remains operable.


Windshield wipers & washers

 With intermittent wiper

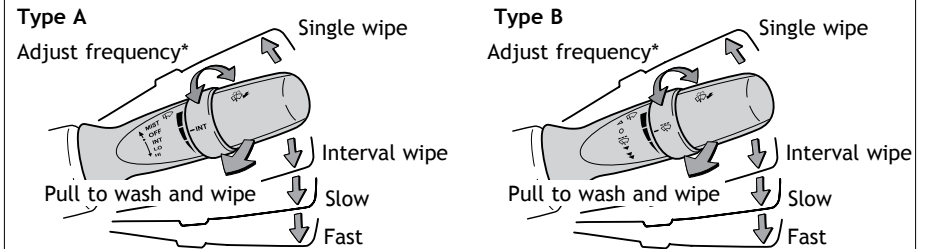


* Intermittent windshield wiper frequency adjustment
Rotate to increase/decrease wipe frequency.

 Without intermittent wiper

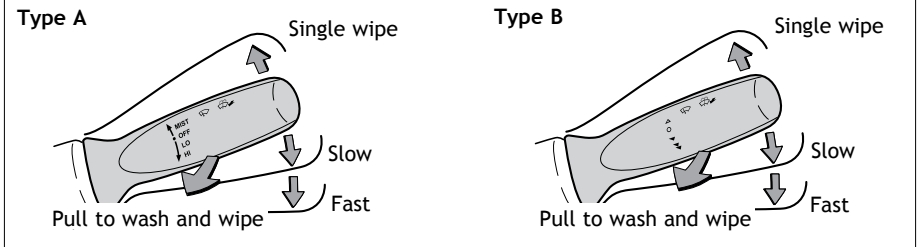


Cruise control (if equipped)

 Turning system ON/OFF

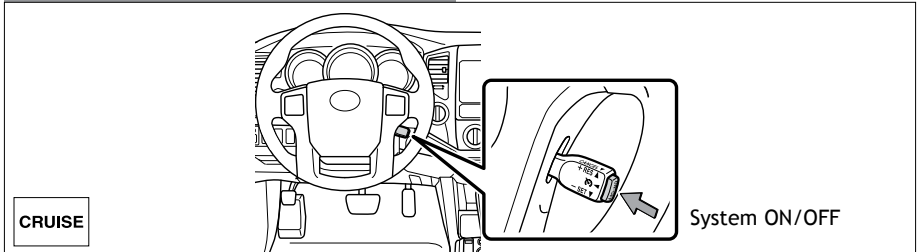


Functions

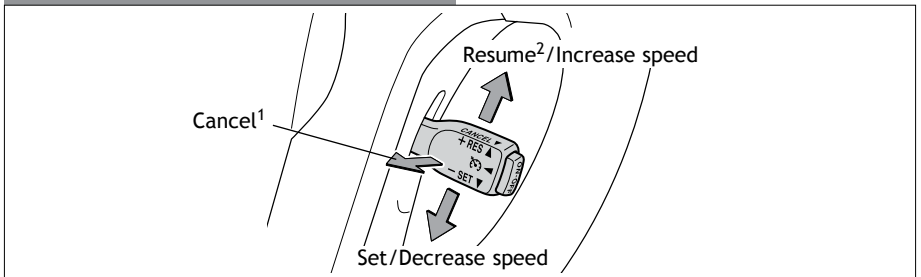 


¹ The set speed may also be cancelled by depressing the brake pedal.
² The set speed may be resumed once vehicle speed exceeds 25 mph.

Audio

 Entune Audio

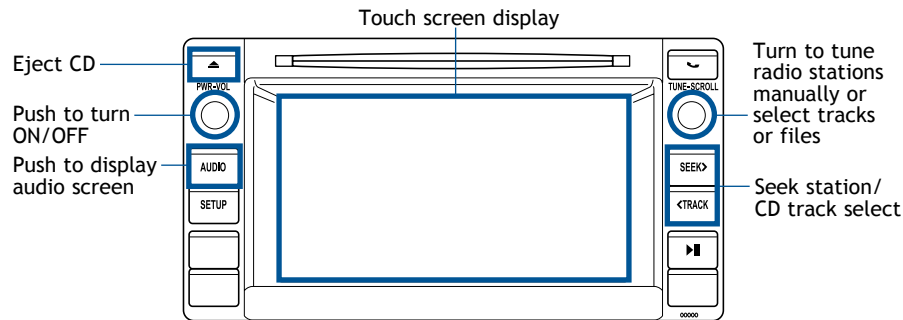


 Entune Audio Plus*¹/Entune Premium Audio*¹

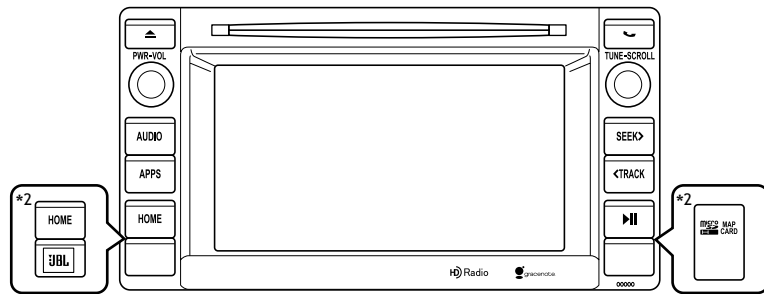


*¹ Refer to the “Entune/Navigation System Owner’s Manual” for instruction.
 *² Entune Premium Audio and Entune Premium JBL Audio

 Steering wheel switches

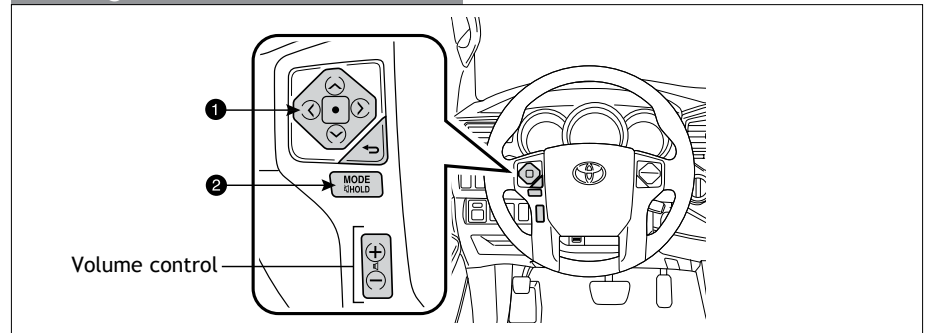

- ① “ $\wedge \vee$ ”
Use to search within the selected audio medium (radio, CD, iPod®, etc.).
- ② “MODE”
Push to turn audio ON and select an audio mode. Push and hold to pause the music or mute.

 iPod®/USB/AUX port

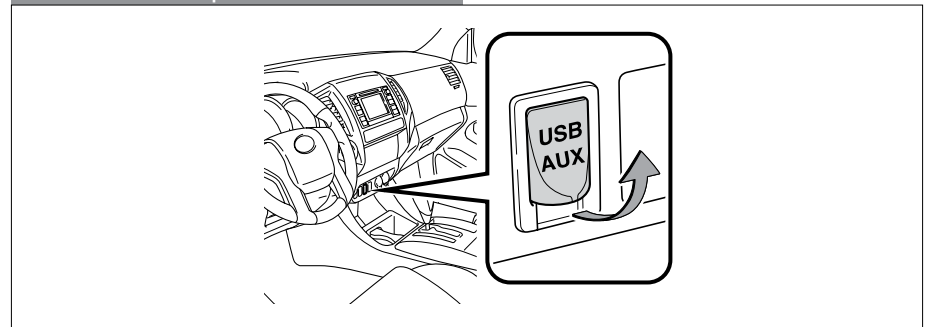

iPod®/USB port

 
By connecting a USB-compatible portable audio device or USB memory to the USB port, you can listen to music from the portable audio device or USB memory through the vehicle’s speaker system.

AUX port

By inserting a mini plug into the AUX port, you can listen to music from a portable audio device through the vehicle’s speaker system while in AUX mode.

Refer to the “Navigation System Owner’s Manual” for instructions and more information.

Entune™ Audio Plus*

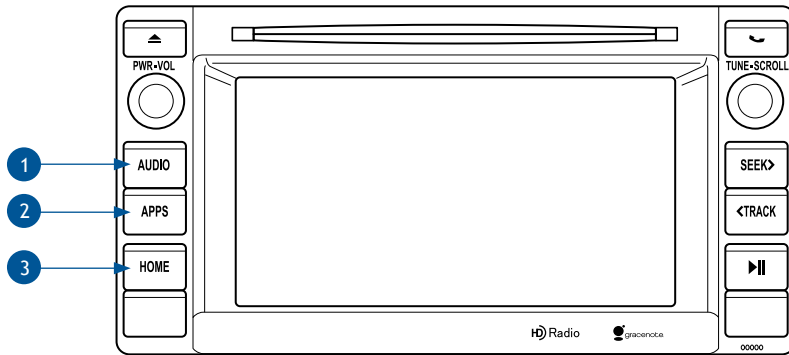



- 1 **AUDIO Button**
Access to audio functions.
- 2 **APPS Button**
Access to features such as fuel consumption, traffic, and weather.
- 3 **HOME Button**
Access to Home screen.

HOME SCREEN - the home screen offers a two panel and a three panel layout. Information and layout will vary depending on selected set up.

 
*NOTE: Console configuration and position of buttons may vary in some vehicles.

Traffic



The Traffic App displays a scrollable map showing local traffic in 3 colors. Traffic conditions are displayed in red, yellow and green for heavy, moderate or light traffic conditions. Use  or  arrows to scroll the map up or down.

Weather

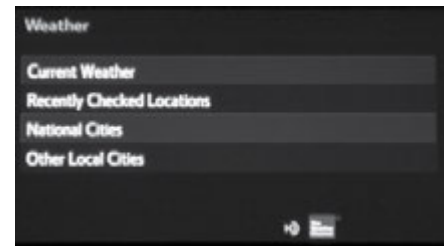


The Weather App options show current weather and recently checked locations weather. You can also search for a weather forecast by national or local cities.


NOTE: Entune™ Audioplus is not available on all models. Please refer to the Entune™ Premium Audio with Navigation and App Suite Reference Guide or Toyota Owner's Manual.

Always drive safely, obey traffic laws & focus on the road while driving. Availability and accuracy of the information provided by HD services is dependent upon many factors. Services not available in every city or roadway. Use common sense when relying on information provided. HD Radio(tm) Technology manufactured under license from iBiquity Digital Corporation U.S. and Foreign Patents. HD Radio(tm) and the HD, HD Radio, and "Arc" logos are proprietary trademarks of iBiquity Digital Corp.

 
Clock

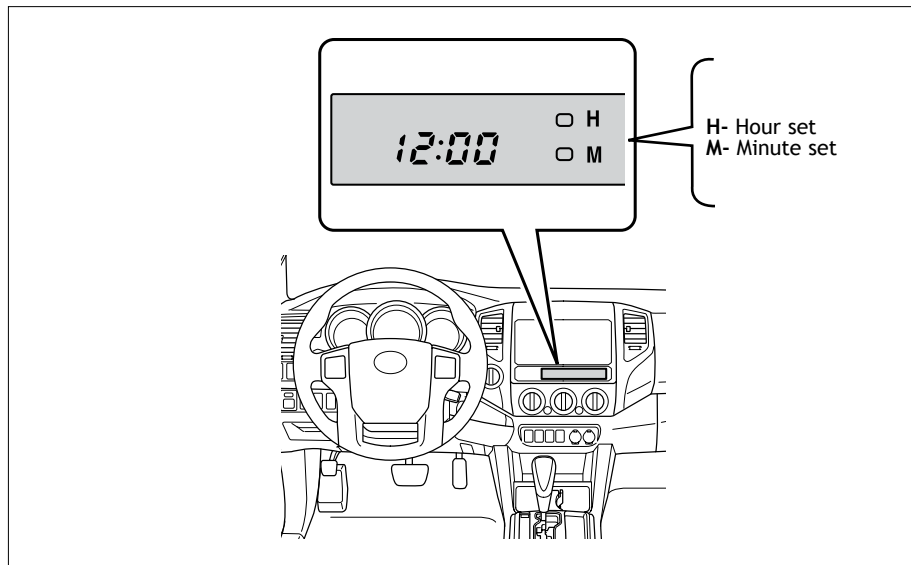

Air Conditioning/Heating

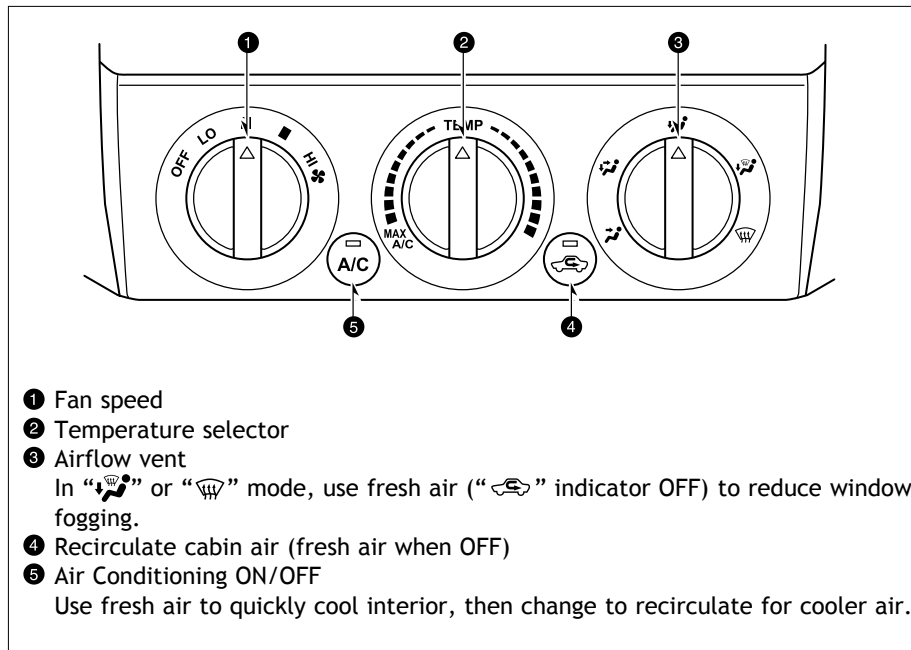 


Power outlets

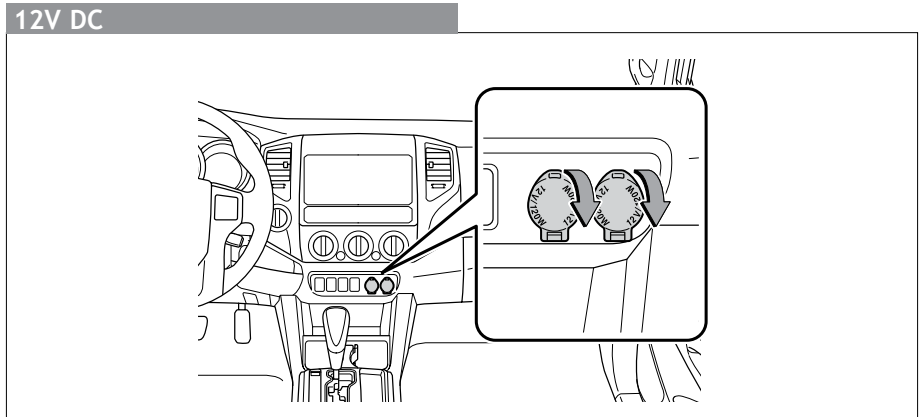 

Key must be in the “ACC” or “ON” position to be used.

 120V AC (if equipped)

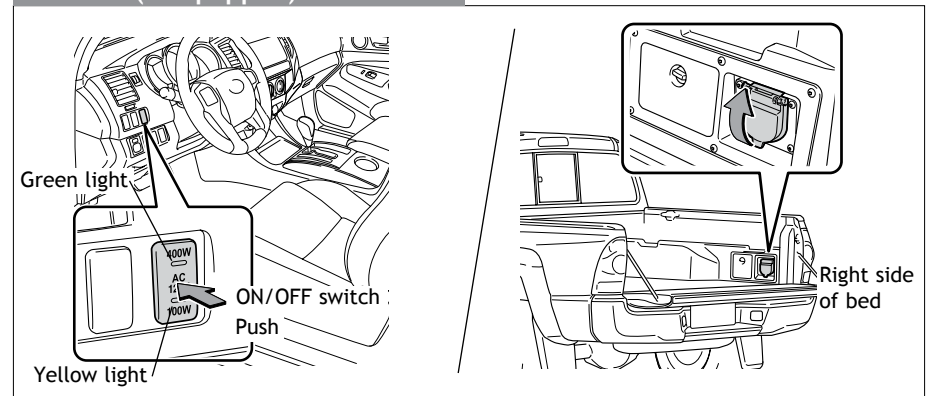


The engine must be running for use.

Yellow Light Only Max Capacity 120V AC/100W
Green & Yellow Lights Max Capacity 120V AC/400W

Refer to the *Owner’s Manual* for more details.

 
Rear differential lock (if equipped)

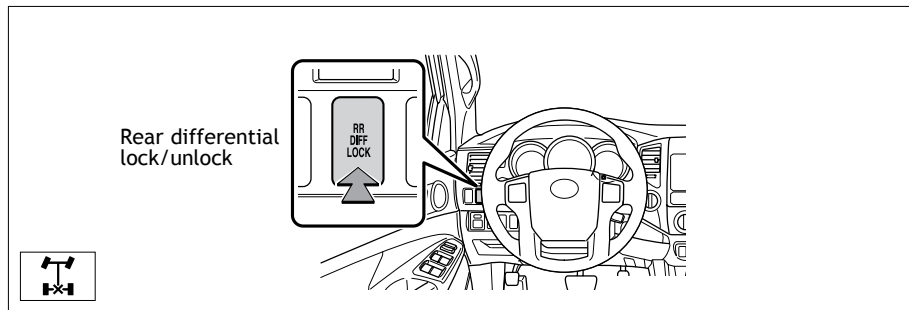

Use **ONLY** when wheel spinning occurs in a ditch, or on slippery or unpaved surfaces. **DO NOT USE THE REAR DIFFERENTIAL LOCK IN CONDITIONS OTHER THAN THOSE SPECIFIED IN THE OWNER'S MANUAL. UNLOCK THE DIFFERENTIAL ONCE THE VEHICLE MOVES OUT OF THE TROUBLE SPOT.**

Refer to your *Owner's Manual* for complete details on this system before attempting to use it.

 
VSC OFF switch

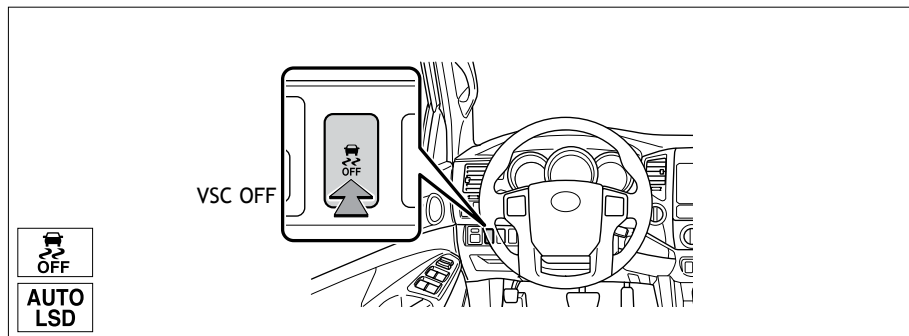

The VSC OFF switch is used to switch between modes related to the TRAC, VSC and Auto LSD functions.

Refer to the *Owner's Manual* for more information.

 
Seat belts

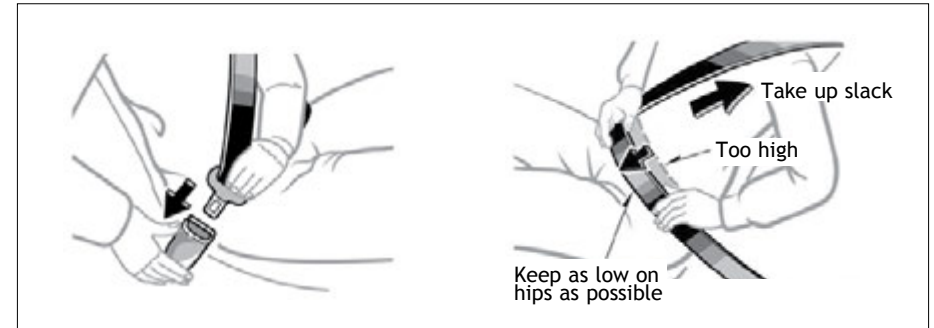


If belt is fully extended, then retracted even slightly, it cannot be re-extended beyond that point, unless fully retracted again. This feature is used to help hold child restraint systems securely.

To find more information about seat belts, and how to install a child restraint system, refer to the *Owner's Manual*.

 
Seat belts-Shoulder belt anchor

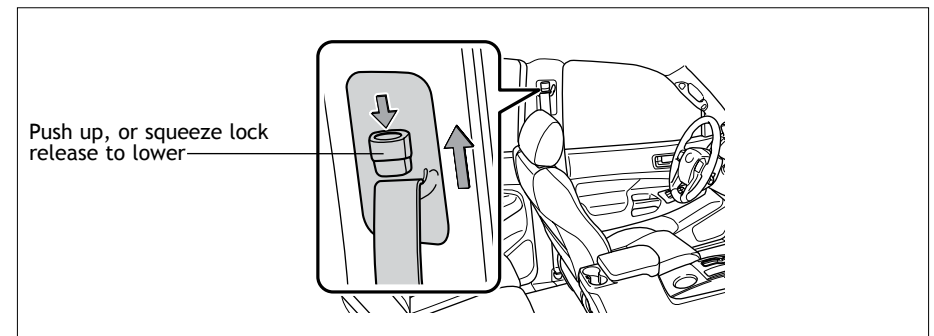

Door locks-Power (if equipped)

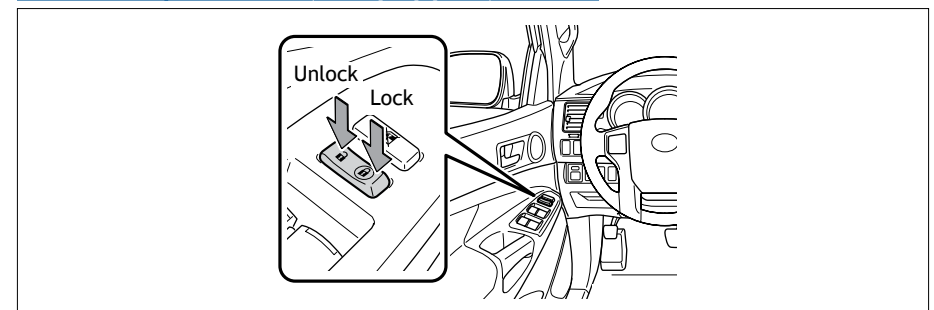 

 Tire Pressure Monitoring (warning) System

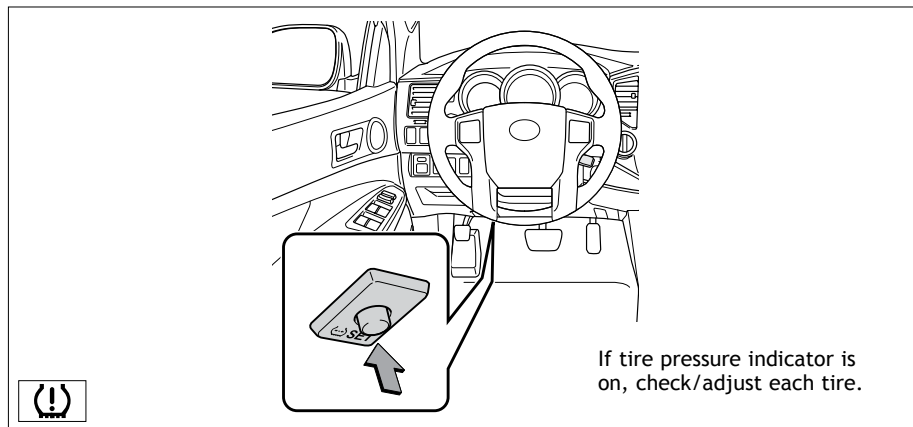


After adjusting tire pressures, or after tires have been rotated or replaced, turn the ignition switch to "ON" and press and hold the "SET" button until indicator blinks three times. Let the vehicle sit for a few minutes to allow initialization to complete.

Refer to the load label on the door jamb or the *Owner's Manual* for tire inflation specifications.

If the tire pressure indicator flashes for more than 60 seconds and then remains on, take the vehicle to your local Toyota dealer.

Doors-Child safety locks (double cab only)

 Rear door

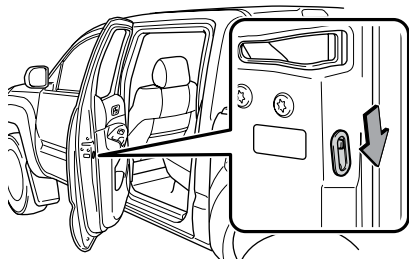


Moving the lever to "LOCK" will allow the door to be opened only from the outside.


Spare tire & tools

Tool location

 
Regular cab models
-behind the seatback

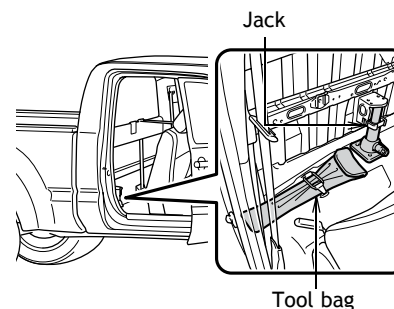


Double cab models
-under the rear seat

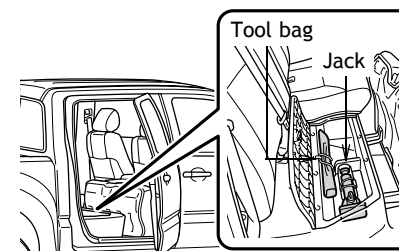 

Access cab models
-under the rear seat

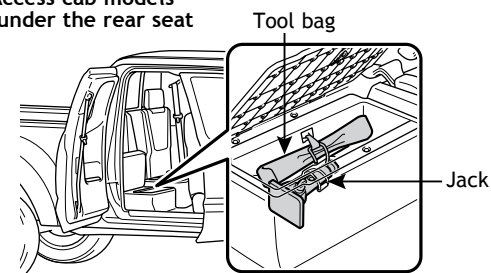 

Removing the spare tire

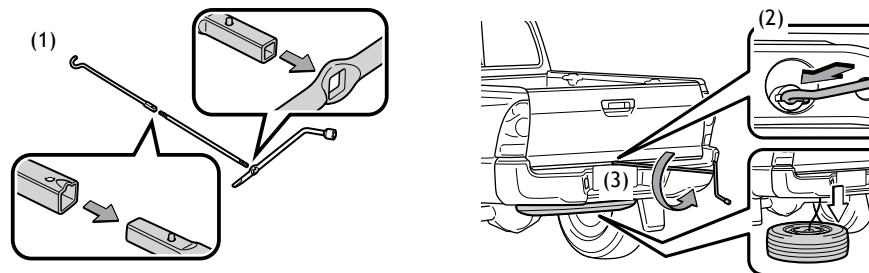 

- (1) Assemble the jack handle.
- (2) Insert the jack handle end into the lowering screw.
- (3) Turn the jack handle counterclockwise.

Refer to the *Owner's Manual* for tire changing and jack positioning procedures.

Star Safety System™

All new Toyota vehicles come standard with the Star Safety System™, which combines Vehicle Stability Control (VSC), Traction Control (TRAC), Anti-lock Braking System (ABS), Electronic Brake-force Distribution (EBD), Brake Assist (BA) and Smart Stop Technology (SST).

Vehicle Stability Control (VSC)

VSC helps prevent loss of traction during cornering by reducing engine power and applying brake force to selected wheels.

Toyota's VSC monitors steering angle and the direction your vehicle is traveling. When it senses that the front or rear wheels begin to lose traction, VSC reduces engine power and applies braking to selected wheels. This helps restore traction and vehicle control.

Traction Control (TRAC)

VSC helps prevent loss of traction during cornering by reducing engine power, and Traction Control helps maintain traction on loose gravel and wet, icy, or uneven surfaces by applying brake force to the spinning wheel(s).

Toyota's TRAC sensors are activated when one of the drive wheels starts to slip. TRAC limits engine output and applies the brakes to the spinning wheel. This transfers power to the wheels that still have traction to help keep you on track.

Anti-Lock Brake System (ABS)

ABS helps prevent brakes from locking up by “pulsing” brake pressure to each wheel. This limits brake lockup and helps provide directional control for the current road conditions.

Toyota's ABS sensors detect which wheels are locking up and limits wheel lockup by “pulsing” each wheel's brakes independently. Pulsing releases brake pressure repeatedly for fractions of a second. This helps the tires attain the traction that current road conditions will allow, helping you to stay in directional control.

Electronic Brake Force Distribution (EBD)

Toyota's ABS technology has Electronic Brake-force Distribution (EBD) to help maintain control and balance when braking. Abrupt stops can cause a vehicle to tilt forward, reducing the braking power of the rear wheels. EBD responds to sudden stops by redistributing brake force to enhance the braking effectiveness of all four wheels.

Brake Assist (BA)

Brake Assist is designed to detect sudden or “panic” braking, and then add braking pressure to help decrease the vehicle's stopping distance. When there's only a split second to react, Brake Assist can add additional brake pressure more quickly than just the driver alone can.

Smart Stop Technology (SST)

Smart Stop Technology automatically reduces engine power when the accelerator and brake pedals are pressed simultaneously under certain conditions.

SST engages when the accelerator is depressed first and the brakes are applied firmly for longer than one-half second at speeds greater than five miles per hour.

 
SST doesn't engage if the brake pedal is depressed before the accelerator pedal, allowing vehicles to start on a steep hill and safely accelerate without rolling backward.

Floor mat installation

There are two types of Toyota floor mats: carpeted and all-weather. Each vehicle has model-specific floor mats. Installation is easy.

To keep your floor mat properly positioned, follow these steps:

- Only use floor mats designed for your specific model.
- Use only one floor mat at a time, using the retaining hooks to keep the mat in place.
- Install floor mats right side up.

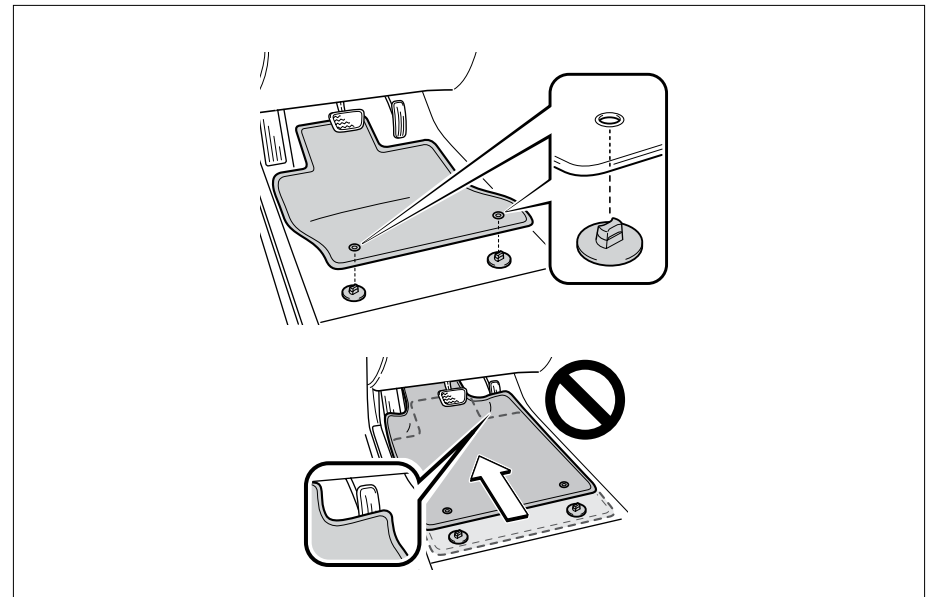

BLUETOOTH® DEVICE PAIRING SECTION

 
BLUETOOTH DEVICE PAIRING

To begin the Bluetooth Pairing process, press the **SETUP** button on the faceplate of your Toyota Vehicle Entune Multimedia Head Unit for vehicles equipped with Entune Audio. For vehicles equipped with Entune Audio Plus, Entune Premium or Entune Premium with JBL, begin by pressing the **HOME** button on the faceplate


Bluetooth Pairing for Android phone and Entune touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth. This pairing process is quick and easy: all Android mobile digital devices have Bluetooth integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection.¹

Initiate Bluetooth on your Android

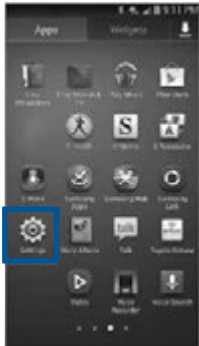

 
STEP 1
From your **APPS SCREEN**, select **SETTINGS**

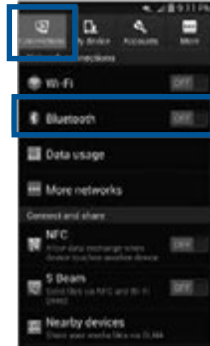

STEP 2
Select **CONNECTIONS** and select **BLUETOOTH**



 STEP 3
Ensure **BLUETOOTH** is **ON**

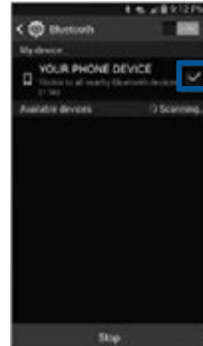

STEP 4
Select **YOUR PHONE DEVICE** to make it discoverable.

Phone will seek out Bluetooth devices while remaining discoverable.



STEP 5
While your Android device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

Initiate Bluetooth on your Entune Multimedia Head Unit

 
Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.




STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP** **BUTTON** on the Home Screen. For models Equipped with Entune Audio, touch **SETUP** on the faceplate to access Home Screen.



STEP 7
Select **BLUETOOTH**

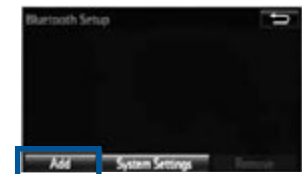

 
STEP 8
Select **ADD**, to add your phone device

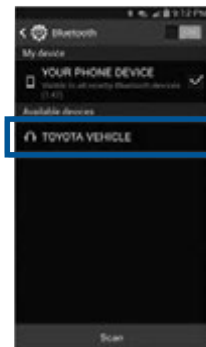

STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.
You may need to enter the provided Bluetooth PIN on your phone.



 
STEP 10
Your smartphone is now paired with Entune.

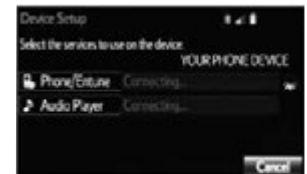

STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

¹ Some Android devices may have slightly different SETTINGS screen layout depending on manufacturer of device and Android OS version.

 
Initiate Bluetooth on your Entune Multimedia Head Unit (continued)

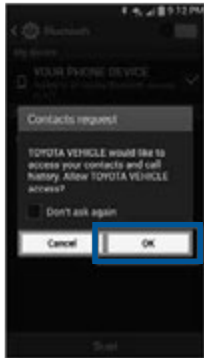

STEP 12

Using your smartphone, you will need to allow Entune access to your messaging and contacts

 It is recommended to check the "Don't ask again" box, so as not to have to press OK every time the phone makes a Bluetooth connection with your Toyota

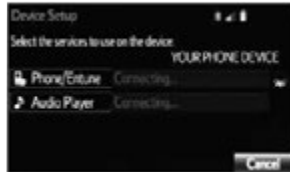

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2014 models.

Bluetooth Pairing for iPhone and Entune touch screen system

 
Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth®. This pairing process is quick and easy: all iPhone® mobile digital devices have Bluetooth® integrated; all you have to do is setup the phone and multimedia system to "talk" to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.

Initiate Bluetooth on your iPhone



STEP 1

From the HOME SCREEN, select SETTINGS

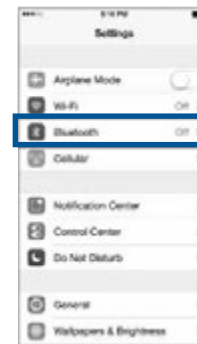

STEP 2

Select BLUETOOTH



STEP 3

Ensure BLUETOOTH is ON



STEP 4

Your iPhone will seek out Bluetooth devices while remaining discoverable



STEP 5

While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.

CONTINUE ON THE NEXT PAGE...

BLUETOOTH DEVICE PAIRING

Initiate Bluetooth on your Entune Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
STEP 6

Select **SETUP** button on the Home Screen. For models Equipped with Entune Audio, touch **SETUP** on the face plate to access Home Screen.



STEP 7

Select **BLUETOOTH**

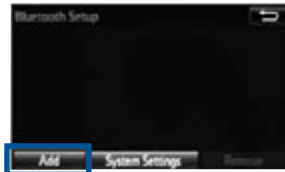

STEP 8

Select **ADD**, to add your phone device



STEP 9

 
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.

You may need to enter the provided Bluetooth PIN on your phone.




STEP 10

Your smartphone is now paired with Entune.

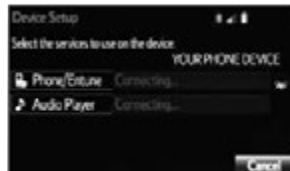


STEP 11

 Once paired, Entune will attempt to connect audio and contacts on your phone.

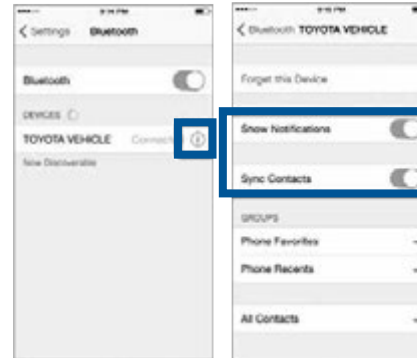

STEP 12

 Using your smartphone, you may need to allow Entune access to your messaging and contacts

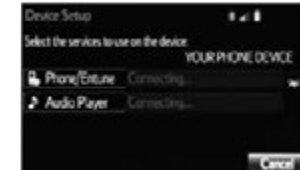

STEP 13

A confirmation will appear once your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer
Experience Center
(800) 331-4331

Disclosures

 
This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.

1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
5. Bluetooth Pairing Guide for select 2014 models.


Bluetooth Pairing for Windows phone and Entune touch screen system

Pairing your phone is the first step in connecting with your Toyota for hands-free calling and for audio streaming via Bluetooth®. This pairing process is quick and easy: all Windows Phone® mobile digital devices have Bluetooth® integrated; all you have to do is setup the phone and multimedia system to “talk” to each other and form a connection. Bluetooth Pairing Guide for select 2014 models.


Initiate Bluetooth on your Windows Phone

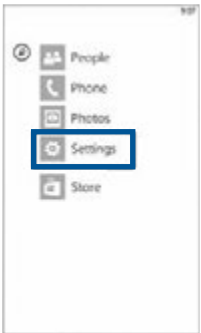

 STEP 1
From your APP LIST, select **SETTINGS**

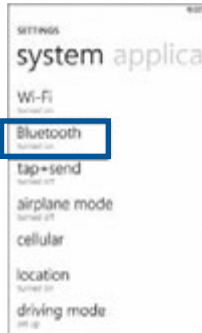

 STEP 2
Select **BLUETOOTH**

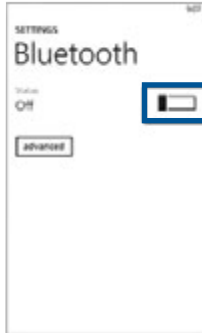

STEP 3
Ensure **BLUETOOTH** is **ON**



STEP 4
Phone will seek out Bluetooth devices while remaining discoverable



STEP 5
While your iPhone device is seeking out Bluetooth devices, proceed to your Entune Multimedia Head Unit on your Toyota vehicle.
CONTINUE ON THE NEXT PAGE...

Initiate Bluetooth on your Entune Multimedia Head Unit

Once you have Bluetooth® enabled on your phone and ready to pair, you will need to initiate Bluetooth® on your Entune head unit. Please follow the instructions below to pair your Bluetooth enabled phone to your Entune system.



 
STEP 6
On your Toyota Vehicle Entune Multimedia Head Unit, Select **SETUP BUTTON** on the Home Screen. For models Equipped with Entune Audio, touch **SETUP** on the face plate to access Home Screen.



STEP 7
Select **BLUETOOTH**




STEP 8
Select **ADD**, to add your phone device

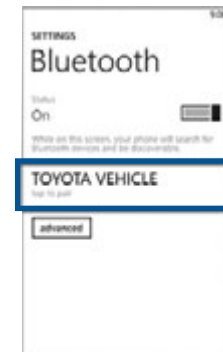

STEP 9
Back on your smartphone, you can now select your **TOYOTA VEHICLE** in Bluetooth Settings.
You may need to enter the provided Bluetooth PIN on your phone.



 STEP 10
Your smartphone is now paired with Entune.

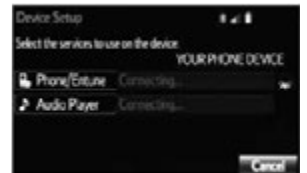


STEP 11
Once paired, Entune will attempt to connect audio and contacts on your phone.

Initiate Bluetooth on your Entune Multimedia Head Unit (continued)



STEP 12

 Using your smartphone, you may need to allow Entune access to your contacts

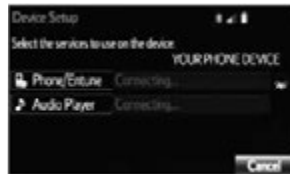

STEP 13

A confirmation will appear that your phone has been paired and connected.

Additional Resources

If you're having trouble pairing your phone, Toyota has you covered. You can get more information from the following sources:

Online Pairing Guide:
www.toyota.com/connect

Your Toyota Owner's Manual
Located in the vehicle glovebox

Toyota Customer Experience Center
 (800) 331-4331

Disclosures

- This brochure is accurate at the time of print; content subject to change based on periodic multimedia software updates.
1. Concentrating on the road should always be your first priority while driving. Do not use the hands-free phone system if it will distract you.
 2. The Bluetooth word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Toyota is under license. A compatible Bluetooth enabled phone must first be paired. Phone performance depends on software, coverage & carrier.
 3. Android is a trademark of Google, Inc. All rights reserved. Google is not a participant in or sponsor of this promotion.
 4. Apps/services vary by phone/carrier; functionality depends on many factors. Select apps use large amounts of data; you are responsible for charges. Apps & services subject to change. See Toyota.com/entune for details.
 5. Bluetooth Pairing Guide for select 2014 models.

NOTES