

Features

Emergency voice/alarm communications provide:

- Alarm/evacuation signal generation with multiple built-in tones
- Standard or customized digital message storage and message generation
- Automatic or manual operation
- Mass Notification operation

Multiple channels are available:

- Analog audio systems provide dual channel operation
- Digital audio systems provide up to eight channels over a single wire pair

Communications features:

- Up to five supervised remote microphone inputs
- Spoken voice coding from the digital message player
- Multiple digitally recorded human voice messages
- Spoken WALKTEST system testing
- Separate evacuation, drill, and optional "All Clear" voice messages and tones
- Ready-to-talk microphone indicator on front panel audio control module
- Local panel speaker for tone/message broadcast verification
- MINIPLEX Voice Transponders are available for distributed audio

Amplifiers are available with analog or digital input:

- Flex-35 (35 W) and Flex-50 (50 W) amplifiers provide a dual channel design with configurable operation modes
- 100 W primary and backup, single channel amplifiers include a built-in power supply
- Amplifiers are available for 25 VRMS or 70.7 VRMS output with on-board, power-limited NACs (only one voltage choice per system)
- Built-in Temporal Pattern horn tone provides default backup signal operation
- Optional modules provide power-limited NAC expansion, convert Class B NACs to Class A operation, and provide Constant Supervision Operation for Non-Alarm Audio (NAA) applications (NAA requires additional hardware, and software revision 11.08 or higher)

Firefighter telephone systems:

- Master telephone can simultaneously talk with up to 6 remote telephones and can be connected as an audio input for broadcast messages
- Ring signal on remote firefighter telephone indicates that a call request is initiated and a hold signal indicates that a connected line has been deselected
- Telephone circuits are supervised for open and short circuits, too many telephones connected, and the master telephone is supervised for cord integrity
- Degraded mode allows remote telephones to remain connected to each other in the event of a communications loss



Figure 1: 4100ES Fire Alarm Control Panel with ES Touch Screen Display and Voice Options

Listings information*

- UL 864, Fire Detection and Control (UOJZ), Smoke Control Service (UUKL), Releasing Device Service (SYZV), Emergency Communication and Relocation Equipment (UOQY)
- UL 1076, Proprietary Alarm Units - Burglar (APOU)
- UL 2017, Process Management Equipment (QVAX), Emergency Alarm System Control Units (FSZI)
- UL 1730, Smoke Detector Monitor (UULH)
- UL 2572, Mass Notification Systems (PGWM)
- CAN/ULC-S527 Control Units for Fire Alarm Systems (UOJZ7), Releasing Device Service (SYZV7)
- CAN/ULC-S559 Central Station Fire Alarm System Units (DAYR7)
- ULC/ORD-C1076 Proprietary Burglar Alarm Units and Systems (APOU7)
- ULC/ORD-C100 Smoke Control System Equipment (UUKL7)

Description

4100ES Audio Systems

4100ES Audio Systems provide voice communication, alarm tones, and/or digitally prerecorded voice messages to alert occupants of fire or other emergency situations. Evacuation signaling may be automatically generated via alarm initiated event programs or by firefighting personnel using the operator controls.

Audio Controller Module Description

The Audio Controller Module provides digitized alarm tones and digitally recorded voice messages and message construction, and manages both microphone inputs and other auxiliary inputs connected to the optional Auxiliary Audio Input Module. Tones and voice messages are digitally recorded and stored in the audio control module's message memory.

* This product has been approved by the California State Fire Marshal (CSFM) pursuant to Section 13144.1 of the California Health and Safety Code. See CSFM Listing 7165-0026:251 for allowable values and/or conditions concerning material presented in this document. Accepted for use – City of New York Department of Buildings – MEA35-93E. Additional listings may be applicable; contact your local Simplex product supplier for the latest status.

Two versions are available: **Analog** and **Digital**. Systems must be either analog or digital, not intermixed. One audio control module controls the entire audio system.

Common audio control board features:

- On-board digital message memory provides up to 2 minutes at normal or 1 minute at high resolution
- Connects to optional 4-input audio input modules (two maximum) for a total of up to 6 microphones and 11 distinct audio inputs
- Memory expansion is available to provide up to 8 minutes or 32 minutes at normal resolution (4 minutes or 16 minutes at high resolution)
- Connections for a Master Microphone and one Remote Microphone, compatible with standard or noise-canceling microphones
- Master telephone to audio interface connection uses the audio bay's Power Distribution Interface Module (PDI)
- Local panel speaker output with on-board volume control
- On-board download port for message loading
- The microphone ready-to-talk LED is located on the front panel audio control module (see p. 4) and requires connection to a 64 LED/64 switch controller
- Audio risers, either digital or analog, may be directly connected to 31 remote nodes; for applications requiring audio risers to more than 31 remote nodes, alternate connection methods are available, contact your Simplex product representative for details

Analog Audio Controller Modules

Analog audio control modules are for systems that require one or two simultaneous channels of audio information per the following feature summary.

- Built-in 10 VRMS riser output eliminates the need for separate riser amplifiers available as Class B or Class A
- Messages can play on one or both risers simultaneously, with the same or a different message
- Analog audio controllers are for connection to analog input audio amplifiers and audio risers only
- On-board status LEDs assist with setup and troubleshooting

Digital Audio Controller Modules

Digital audio control modules are for systems that require more than two simultaneous channels of audio information per the following feature summary.

- Up to 8 channels of information at normal resolution are available (4 channels at high resolution) on one twisted wire pair
- Primary 1 Digital Audio Riser (DAR) output can be either wired Class B or Class X; Primary 2 DAR is an identical, separate output for Class B connections, typically to local MINIPLEX voice transponders
- Digital audio controllers are for connection to digital input audio amplifiers and digital audio risers only

Audio Tone List

The Temporal 3 Pattern is available for compatible tones (1/2 sec on, 1/2 sec off, 1/2 sec on, 1/2 sec off, 1/2 sec on, 1-1/2 sec off) to indicate evacuation. The following is a list of the standard audio tones.

- **Horn**, continuous 520 Hz tone, primarily used for coded systems or general temporal pattern signaling; 520Hz tone is compliant with NFPA 72 Low Frequency Signal Requirements for Sleeping Areas
- **Chime**, a digitally recorded mechanical chime tone, normally used free-running or for coded operation
- **Bell**, a digitally recorded mechanical bell sound, normally used free-running, for coded systems, or general temporal pattern signaling
- **Fast Whoop**, a quickly ascending tone

- **Slow Whoop**, a slowly ascending tone
- **High/Low**, with high frequency of 750 Hz for 100 ms and low frequency of 500 Hz for 400 ms
- **Beep**, 500 Hz tone of 0.7 s on, 0.7 s off
- **Stutter**, 500 Hz tone with on and off times of 100 ms
- **Wail**, ascends, then descends between 600 to 940 Hz
- **GSA Tone**, continuous 2000 Hz tone

Audio Controller Message Description

Zone Coded Signaling is available using tones or spoken numbers. Spoken coded messages can be used in place of conventional pulse tone coding to eliminate counting and interpretation of the zone coded location. For example, a fire alarm zone such as First Floor East, Smoke Detector Room 23 will be Code 1123.

Two possible transmission schemes are:

1. Conventional Zone Coded Signaling where T = Tone:
T...T...TT...TTT...T...T...TT...TTT...
2. Spoken Coded Signaling: *Code, one..one..two..three; Code, one..one..two..three*

The Audio Controller has the ability to precede spoken codes with phrases and alert tones. As an alternative, the previous example could have been preceded with a chime tone. The word "code" could be replaced with the phrase "Doctor Firestone, please dial...".

Preprogrammed Special Messages can be ordered. Up to 32 minutes of special phrases and messages are available to meet specific applications. The standard Evacuation Message is: *"Attention... Attention... Attention...An emergency has been reported.... All occupants walk to the nearest stairway exit and walk down to your assigned re-entry floor or main lobby... Do not use the elevator... Walk to the nearest stairway.... Do not use the elevator.... Walk to the nearest stairway."*

Custom Message Ordering is summarized below:

Table 1: Custom Message Ordering

| Model | Description |
|-----------|---|
| 4100-8804 | Select when Custom Messages are required , choose message types from below as required (minimum quantity of one) |
| 4100-0822 | Custom Messages from Tape |
| 4100-0823 | Custom Messages from Transcript; NOTE: Send transcript in advance to Applications Engineering to verify phrase quantity |
| 4100-0824 | Custom Messages from Archive |
| | CO Relocation Message; Temporal 4 Pattern horn tone with English male voice instruction; identify as "UCSET1393" when ordering |

Audio Amplifiers General Description

4100ES audio amplifiers are available as dual channel models rated for 35 W (Flex-35) or 50 W (Flex-50) and as single channel 100 W models with on-board NACs (notification appliance circuits) for convenient field wiring. Common features are summarized as follows:

- **Analog** input amplifier models are for single or dual channel system operation
- **Digital** input amplifier models are for multi-channel system operation providing up to eight channels over a single twisted wire pair
- Amplifiers are power-limited with models available providing 25 VRMS, or 70.7 VRMS output
- When Non-Alarm Audio (NAA) applications (such as for background music, paging, or for Mass Notification) are required, optional Constant Supervision modules provide continued speaker zone supervision during the page or while background music is playing; due to the NAA supervision requirements, when amplifiers are used for paging or playing background music, output power is derated to 70% of alarm output rating (24.5 W, 35 W, and 70 W); during alarm conditions full amplifier output power is available
- Linear power output stages are traditional Class B designs for low distortion and low EMI
- An on-board 500 Hz temporal pattern horn tone on each amplifier provides a default backup tone
- Supervision actively monitors amplifier gain in real time, comparing output level to input level
- On-board test switches can be activated to test and observe amplifier backup
- On-board overcurrent protection protects against overloads and short circuits
- Each amplifier communicates to the host CPU and allows voltage and current values to be accessed from the fire alarm control panel operator interface

Flex-35 and Flex-50 Amplifiers, General

Flex-35 and Flex-50 amplifiers are a *self-backup dual channel design* that provides a total of 35 W or 50 W of audio power with the following common feature summary:

- Self-backup feature allows NACs connected to a disabled amplifier channel to be routed to the remaining channel with the full 35 W or 50 W providing the single channel as selected by the fire alarm control panel programming; external backup amplifiers are not required
- Three standard on-board audio NACs are each rated for 2 A maximum and are capable of being routed to either desired amplifier channel
- Digital models of the Flex-35 and Flex-50 have a digital decoder module that selects one or two of the input channels as desired
- Selectable reduced output levels of -12 dB or -6 dB are available for non-emergency audio output, selectable per channel

Flex-35 Amplifiers

- Each Flex-35 channel is capable of up to 35 W output with a total of 35 W
- Channels can be divided as 0 W and 35 W; 17.5 W and 17.5 W; 10 W and 25 W; or any combination that totals 35 W or less

Flex-50 Amplifiers

- Each Flex-50 channel is capable of up to 50 W output with a total output of 50 W
- Channels can be divided as 0 W and 50 W; 25 W and 25 W; 10 W and 40 W; or any combination that totals 50 W or less

Dual Flex-35 or Flex-50 Connections

- Two Flex-35 amplifiers, or two Flex-50 amplifiers can connect to a

single ES Power Supply (ES-PS) in the same audio expansion bay (amplifiers must be the same model number); ES-PS output is dedicated to amplifier power

- Mounting for dual Flex-35 or Flex-50 amplifiers is Blocks A & B for amplifier 1, Blocks C & D for the ES-PS, blocks E & F are not used, and Blocks G & H are for amplifier 2 (refer to Table 14)

100 W Audio Amplifiers

100 W amplifiers provide single channel operation per the following feature summary:

- Six standard on-board Class B audio NACs are each rated for 2 A maximum
- 100 W amplifiers include a built-in power supply and use system battery backup
- Amplifier and power supply size requires four continuous blocks of expansion bay size
- A single 100W primary amplifier or both a primary and a backup amplifier can be located on a single expansion bay (refer to Table 14)
- Redundant (backup) amplifiers interconnect directly to minimize wiring connections and their power is routed through the NACs of the primary amplifier
- Redundant amplifier operation can be configured as one-for-one or one-for-many depending on specific requirements
- Digital models of these amplifiers have a digital decoder module that selects the desired input channel per system requirements
- Selectable reduced output levels of -12 dB or -6 dB are available for non-emergency audio output
- Compatible with ES-PS power supply. Power supplies used to power 100W amplifiers can provide power for other compatible equipment within their rated output.

Audio NAC Expansion Modules

- For applications requiring additional NACs, modules are available for on-board expansion and further expansion is available with the chassis mounted 4100-5116 Expansion Signal Module
- 100 W Amplifiers support optional modules that convert the six audio NACs to Class A or to increase the Class B audio NACs to twelve

Note: Adding NAC expansion modules does not increase amplifier power beyond the stated rating.

Audio Bay Reference with Single Channel Audio Control and Firefighter Telephone Modules

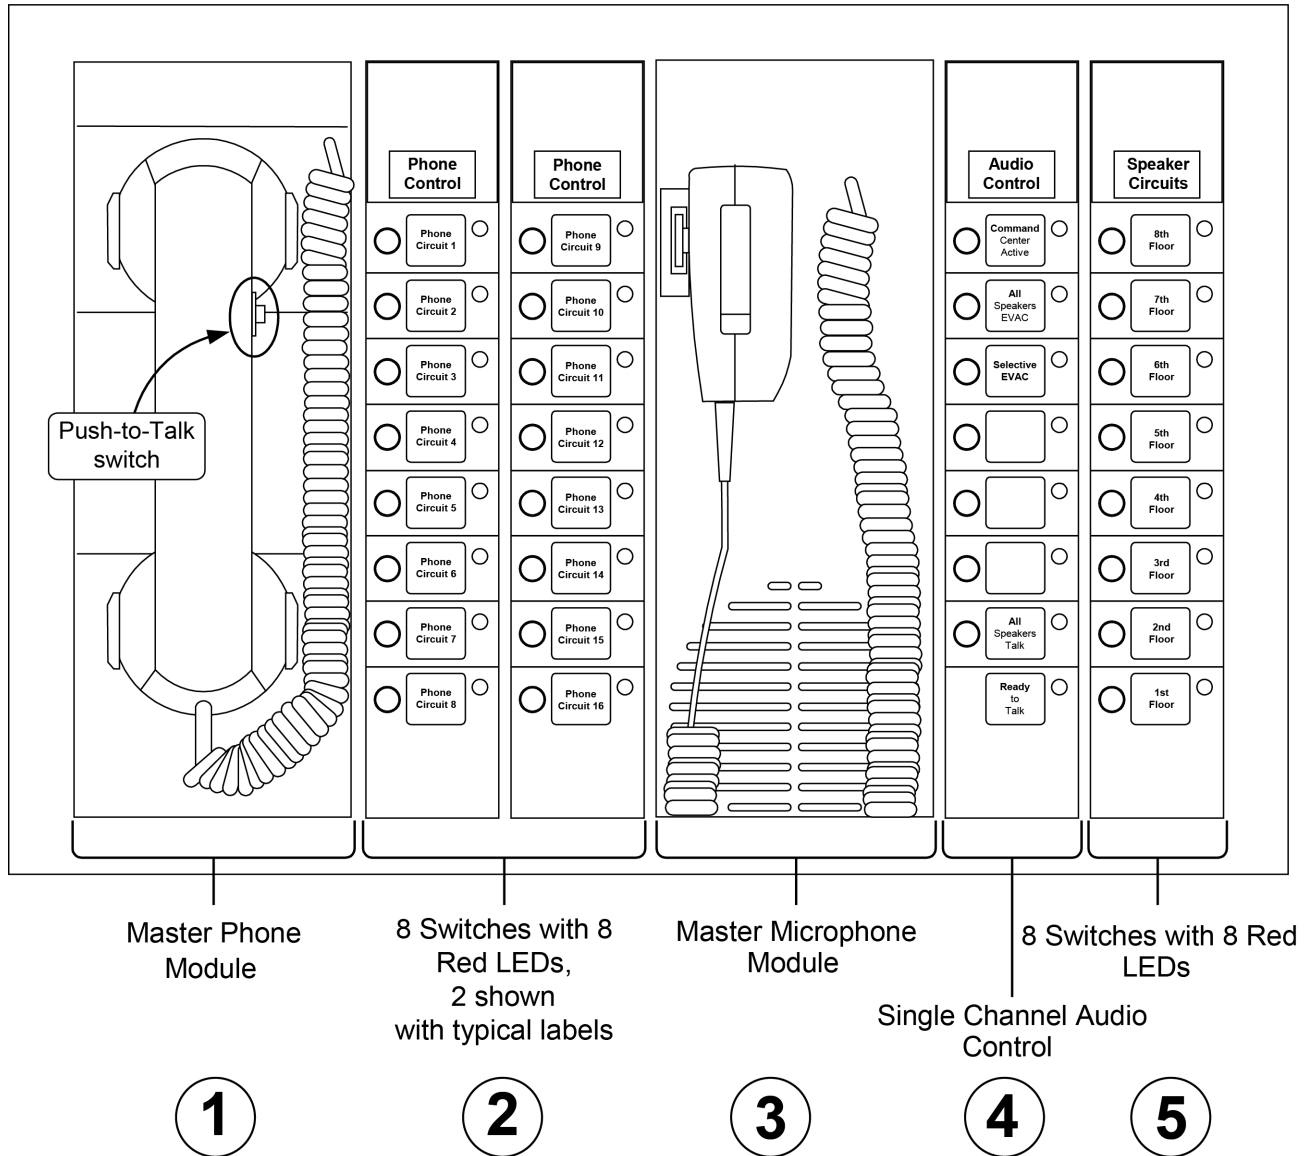 


Figure 2: Audio Bay Reference with Single Channel Audio Control and Firefighter Telephone Modules

Table 2: Audio Bay Parts

| Callout | SKU |
|---------|-----------|
| 1 | 4100-1270 |
| 2 | 4100-1280 |
| 3 | 4100-1243 |
| 4 | 4100-1252 |
| 5 | 4100-1280 |

Audio Control Modules

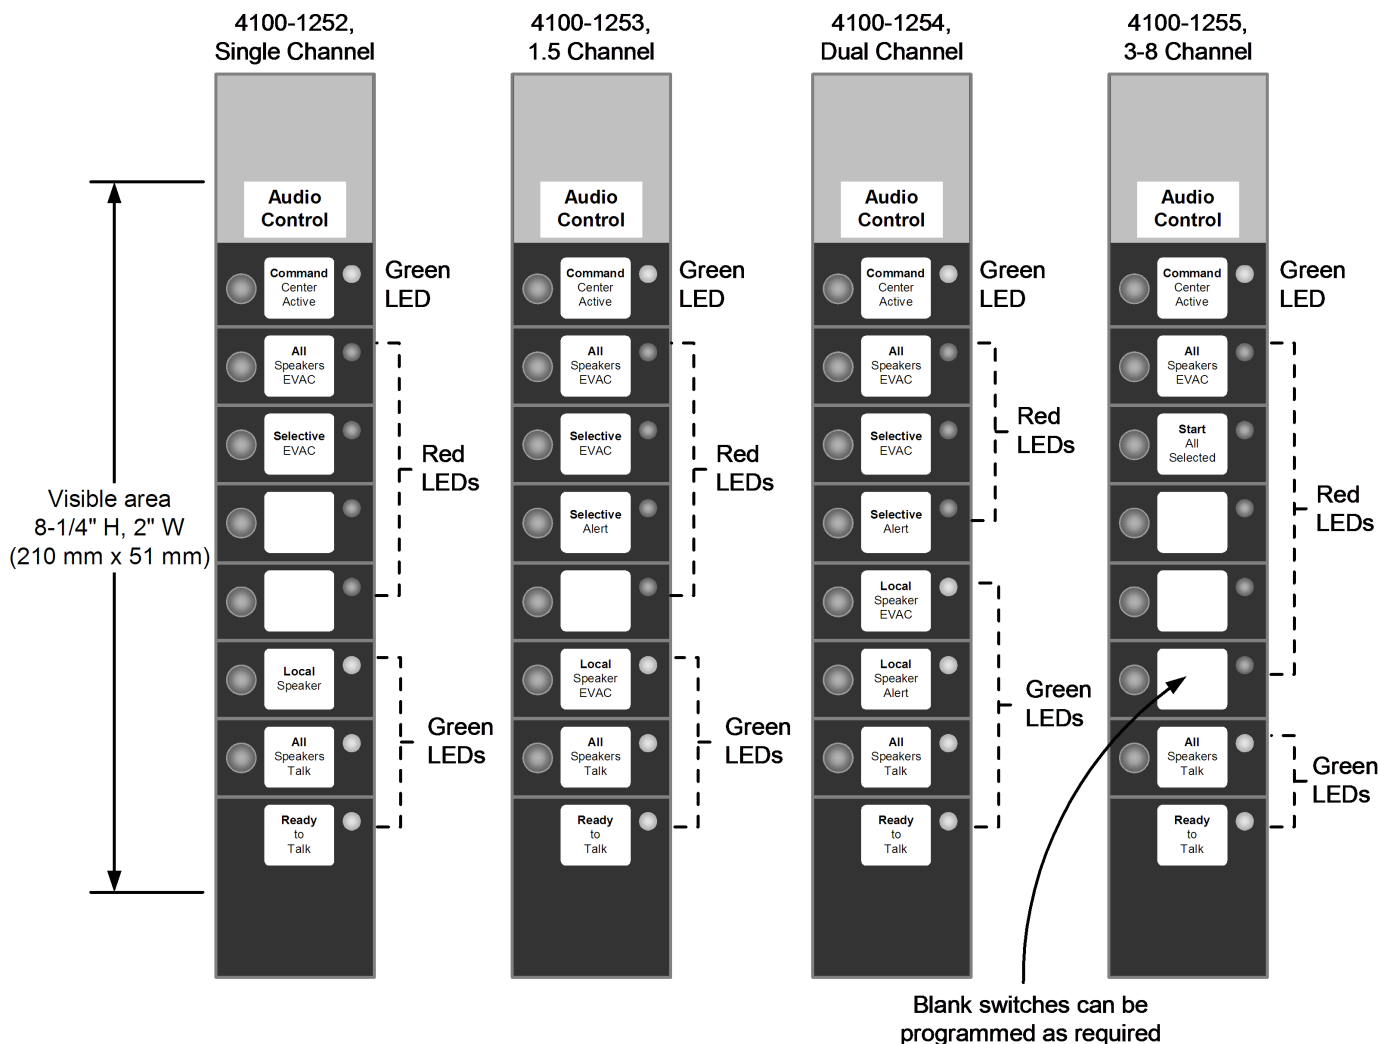 


Table 3:

| Module | SKU |
|----------------|-----------|
| Single Channel | 4100-1252 |
| 1.5 Channel | 4100-1253 |
| Dual Channel | 4100-1254 |
| 3 - 8 Channel | 4100-1255 |

Emergency Voice/Alarm Communications Equipment Product Selection

Note: Select systems as either analog or digital. When amplifiers are used for Non-Alarm Audio paging or background music with Constant Supervision, *output power is derated to 70% of alarm power* (24.5 W, 35 W, and 70 W); full output is available for alarm.

Table 4: Analog Emergency Voice/Alarm Communications Equipment, Constant Supervision Compatible

| Model | Description | Details |
|-----------|--|--|
| 4100-9620 | Basic Analog Audio Operation with microphone, requires dedicated expansion bay | Includes: Expansion Bay, 4100-1210 Analog Controller Board, Microphone Module, and Audio Expansion Bay Kit |
| 4100-1210 | Analog Controller Board only; order expansion bay and audio expansion bay kit separately | Controller board mounts in Blocks A and B |
| 4100-1361 | 25 VRMS output | Flex-35, 35 W Amplifier, constant supervision compatible |
| 4100-1362 | 70.07 VRMS output | |
| 4100-1312 | 25 VRMS output | Flex-50, 50 W Amplifier, constant supervision compatible |
| 4100-1313 | 70.7 VRMS output | |

Note: Refer to data sheet S4100-1031 for power supply details.

Table 5: 100 W Analog Amplifiers with Power Supply, Constant Supervision Compatible

| Model/Output Voltage | | Power Supply Input/Listing | | Description | Details |
|----------------------|-----------|----------------------------|-----|-------------------------|--|
| 25 VRMS | 70.7 VRMS | | | | |
| 4100-1314 | 4100-1315 | 120 VAC, 60 Hz | UL | Primary 100 W Amplifier | Includes six, Class B audio NACs; NAC rating = 100 speakers maximum; 2 A @ 25 VRMS (50 W); 1.414 A @ 70.7 VRMS (100 W) |
| 4100-1316 | 4100-1317 | 120 VAC, 60 Hz | ULC | | |
| 4100-1318 | 4100-1319 | 220/230/240 VAC, 50/60 Hz | UL | | |
| 4100-1320 | 4100-1321 | 120 VAC, 60 Hz | UL | Backup 100 W Amplifier | Uses the six Class B NACs of primary amplifier |
| 4100-1322 | 4100-1323 | 120 VAC, 60 Hz | ULC | | |
| 4100-1324 | 4100-1325 | 220/230/240 VAC, 50/60 Hz | UL | | |

Note: ULC models have low battery dropout circuit.

Table 6: Digital Emergency Voice/Alarm Communications Equipment, Constant Supervision Compatible

| Model | Description | | Details | | |
|------------|--|--|--|----------------------------|---|
| 4100-9621 | Basic Digital Audio Operation with microphone, requires dedicated expansion bay | | Includes: Expansion Bay, 4100-1311 Digital Controller Board, Microphone Module, and Audio Expansion Bay Kit | | |
| 4100-1412* | ES Net basic audio with microphone requires a dedicated expansion bay. | | Includes an expansion bay, the 4100-1411 digital controller board, a microphone module, an Ethernet cable, and an audio expansion bay kit. | | |
| 4100-1311 | Eight Channel Digital Controller Board only; order expansion bay and audio expansion bay kit separately | | Controller board mounts in Blocks A and B | | |
| 4100-1411* | An ES Net eight-channel digital controller board only. Order the expansion bay and audio expansion bay kit separately. | | The controller board mounts in blocks A and B. | | |
| 4100-1363 | 25 VRMS output | Flex-35, 35 W Amplifier, constant supervision compatible | NAC rating = 1.4 A | 35W, or 100W speakers max. | Includes three on-board Class B audio NACs; power is supplied from an ES-PS. Refer to data sheet S4100-1031 for power supply details. |
| 4100-1364 | 70.07 VRMS output | | NAC rating = 0.5 A | | |
| 4100-1326 | 25 VRMS output | Flex-50, 50 W Amplifier, constant supervision compatible | NAC rating = 2 A | 50W, or 100W speakers max. | |
| 4100-1327 | 70.7 VRMS output | | NAC rating = 0.707 A | | |

Note: *The ES Net network does not support Audio over ES Net if any segment of the network uses DSL. Use the previous digital audio controller and connectivity for those applications.

Table 7: 100 W Digital Amplifiers with Power Supply, Constant Supervision Compatible

| Model/Output Voltage | | Power Supply Input/Listing | | Description | Details |
|----------------------|-----------|----------------------------|-----|-------------------------|--|
| 25 VRMS | 70.7 VRMS | | | | |
| 4100-1328 | 4100-1329 | 120 VAC, 60 Hz | UL | Primary 100 W Amplifier | Includes six, Class B audio NACs; NAC rating = 100 speakers maximum; 2 A @ 25 VRMS (50 W); 1.414 A @ 70.7 VRMS (100 W) |
| 4100-1330 | 4100-1331 | 120 VAC, 60 Hz | ULC | | |
| 4100-1332 | 4100-1333 | 220/230/240 VAC, 50/60 Hz | UL | | |
| 4100-1334 | 4100-1335 | 120 VAC, 60 Hz | UL | Backup 100 W Amplifier | Uses the six Class B NACs of primary amplifier |
| 4100-1336 | 4100-1337 | 120 VAC, 60 Hz | ULC | | |
| 4100-1338 | 4100-1339 | 220/230/240 VAC, 50/60 Hz | UL | | |

Note: ULC models have low battery dropout circuit.

Audio Options for use with either Analog or Digital Systems

Table 8: Amplifier and Related Audio Options

| Model | Description | Details and Mounting Reference | |
|-----------|---|---|---|
| 4100-1245 | Flex-35/50 Expansion NAC Module; adds three Class B audio NACs | Choose one per amplifier | Mounts on Flex-35/50 assembly; NAC ratings = 1.5 A, 35/50 W, or 100 speakers maximum; <i>Supv.</i> = 8.4 mA, <i>Alarm</i> = 60 mA |
| 4100-1246 | Flex-35/50 Class A Adapter Module; converts three on-board NACS to Class A operation | | Mounts on Flex-35/50 assembly; NAC ratings = 2 A, 50 W, or 100 speakers maximum; <i>Supv.</i> = 1 mA, <i>Alarm</i> = 30 mA |
| 4100-1248 | 100W Amplifier Expansion NAC Module; NAC ratings = 1.5 A, 50 W, or 100 speakers max. | | Provides six additional Class B audio NACs, mounts on 100 W amplifier assembly; <i>Supv.</i> = 17 mA, <i>Alarm</i> = 60 mA |
| 4100-1249 | 100W Class A Adapter Module; NAC ratings = 2 A, 50 W, or 100 speakers maximum | | Converts six on-board NACs to Class A operation, mounts on 100 W amplifier assembly; <i>Supv.</i> = 1 mA, <i>Alarm</i> = 60 mA |
| 4100-1259 | 25VRMS Output; NAC rating = 2 A, 50 W, or 100 speakers maximum | Constant Supervision Adapter for three NACs; select per amplifier output (not compatible with amplifier NAC expansion modules) | <i>Supv.</i> = 10 mA on batteries; <i>Alarm</i> = 35 mA |
| 4100-1260 | 70.7VRMS Output; NAC rating = 0.707 A, 50 W, or 100 speakers maximum | | <i>Supv.</i> = 38 mA <i>Alarm</i> = 70 mA |
| 4100-5116 | Expansion Signal Module; three, 1.5 A Class B NACs; up to five maximum per amplifier; NAC rating = 1.5 A, 50 W, or 100 speakers maximum | Converts one NAC input to three NAC outputs; selects between two inputs; for Flex-35/50 amplifiers only, two input NACs are required; Single Block module mounts in expansion bay; <i>Supv.</i> = 20 mA; <i>Alarm</i> = 80 mA | |
| 4100-1266 | Expansion Signal Module NAC Expander; NAC rating = 1.5 A, 50 W, or 100 speakers maximum | Expands module capacity to six, Class B NACs; <i>Supv.</i> = 0.84 mA; <i>Alarm</i> = 60 mA | |
| 4100-1267 | Expansion Signal Module Class A Adapter; NAC rating = 1.5 A, 50 W, or 100 speakers maximum | Converts 3 Class B, NACs to Class A; <i>Supv.</i> = 1 mA; <i>Alarm</i> = 30 mA | |
| 4100-1268 | Expansion Signal Module Constant Supervision Adapter for 25 VRMS or 70.7 VRMS; NAC rating = 1.4 A, 50 W, or 100 speakers maximum | Converts 3 Class B NACs to Class B or Class A Constant Supervision NACs; <i>Supv.</i> = 38 mA on batteries (constant supervision deactivated); <i>Alarm</i> = 70 mA | |
| 4081-9018 | End-of-line resistor harness for 70.7 VRMS NACs; 10 k ohm, 1 W | | |
| 4100-2300 | Expansion Bay Hardware; order one for each expansion bay | | |
| 4100-2320 | Audio Bay-to-Bay Interconnection Harness Kit; order one for each audio bay addition | | |
| 4100-0637 | Audio Box Interconnection Harness Kit; order one for each close-nippled audio cabinet | | |

Note: Refer to S4100-1031 for power supply details.

Table 9: Audio Input and Controller Options

| Model | Description | Details and Mounting Reference | |
|-----------|---|---|-----------------------------------|
| 4100-1240 | Auxiliary Audio Input Module; four additional (unsupervised) inputs per module; 2 maximum | Inputs for 10 VRMS, 25 VRMS, 70.7 VRMS, line level (0.707 VRMS), or microphone; 1 Block; <i>current</i> = 10 mA | |
| 4100-1241 | 8 Minute Message Expansion Module | Provides 8 minutes at normal resolution or 4 minutes at high resolution, <i>Supv.</i> = 2 mA; <i>Active</i> = 17 mA | Mounts to audio controller module |
| 4100-1242 | 32 Minute Message Expansion Module | Provides 32 minutes at normal resolution or 16 minutes at high resolution; <i>Supv.</i> = 2 mA; <i>Active</i> = 17 mA | |

Note: See Table 1 for custom message ordering.

Table 10: Operator Interface and Related Options

| Model | Description | Details and Mounting Reference | | |
|-----------|--|--|--|--|
| 4100-1243 | Microphone Module (mike); for Fire Alarm Control Panels | One maximum per audio system; front panel module that requires 2 Slots (4"), locate on expansion bay only; space behind for 4100ES flat modules only | | |
| 4100-1244 | Remote Microphone Module; for Remote Annunciator Panels | Front panel module that requires 2 Slots (4"), locate on expansion bay only; space behind for 4100ES flat modules only; distance limited to 4000 ft (1219 m) | | |
| 4003-9803 | Remote Microphone Module | Mounted on plate with controls, for 2-gang box mount; see data sheet S4100-0053 for details | | |
| 4100-1252 | 1 Channel (audio or mike) | Operator Interface LED/Switch Modules | Single Slot LED/switch modules; connects to a 4100-1288 or 4100-1289 LED/switch controller in the same bay; space behind controller accepts 4100ES flat modules only; current = 24 mA ; Additional adjacent LED/switch modules, are used as required for specific speaker circuit selection (refer to data sheet S4100-0032 for LED/switch module availability) | |
| 4100-1253 | 1.5 Channel (audio + mike) | | | |
| 4100-1254 | 2 Channel (full audio) | | | |
| 4100-1255 | 3-8 Channel (8 channel normal res. messages, 4 channels of high res. messages) | | | |
| 4100-1288 | 64 LED/64 Switch Controller Module with mounting plate | Refer to data sheet S4100-0032 for details | Mounts behind the LED/switch modules; has provisions for one 4100-1289 Controller Module | LED/switch controllers and their connected modules must be in the same bay |
| 4100-1289 | 64 LED/64 Switch Controller Module without mounting plate | | Mounts on extra space of 4100-1288; controls additional 64 LEDs and 64 switches | |

Table 11: Firefighter Telephone System Products

| Model | Description | Details and Mounting Reference |
|-----------|---|---|
| 4100-1270 | Master Telephone with Control Module and three Class B telephone NACs, one maximum per audio system; for use in Fire Alarm Control Panels only; includes one 4100-1272 Module | Front panel module; space behind for 4100ES flat modules only; phone control module included, mounted on bay module mounting plate; for individual telephone circuit control, use LED/switch modules; Supv. = 80 mA; in use = 140 mA + remote phones (refer to Table 14) |
| 4100-1271 | Remote Master Telephone | Mounts in Remote Annunciator Panel only (see S4100-0038) |
| 4100-1272 | Expansion Telephone Control Module with three Class B telephone NACs | Expansion module for additional telephone circuits in main control or transponders; Supv. = 80 mA; in use = 140 mA + remote phones |
| 4100-1273 | Telephone NAC Class A Adapter Module | Mounts to 4100-1270 or 4100-1272; no additional current required |

Table 12: Network and MINIPLEX Transponder Audio Connection Options

| Model | Description | Details |
|-----------|---|--|
| 4100-0623 | Network Audio Riser Controller Module for control of either an analog or digital riser module | Typically for Network nodes without an audio controller, used for NAA applications; mounts in Block A; current = 14 mA |
| 4100-0621 | Dual Channel <i>Analog</i> Audio Riser Module | Select one, mounts in Block B |
| 4100-0622 | 3-8 Channel <i>Digital</i> Audio Riser Module; with NAA input | |
| 4100-1341 | MCC (Multiple Command Center) Digital Audio Riser Interface | Accepts two separate audio signals from host; controlled by Transponder Interface Module; current = 25 mA when active |
| 4100-9854 | 4100/4100+ Legacy bay mounting kit | Receives and decodes digital inputs; up to eight audio channels; current = 70 mA ; NAA input for 25, 70.7, or 0.707 VRMS |
| 4100-1258 | NPU to 4100ES Audio Interconnect Module; mounts in 4100ES Audio cabinet | Use to mount 4100-1341 MCC Digital Audio Riser Interface in legacy panel |
| | | Selects a single digital audio channel and converts it to an analog line level for input to an analog 4100ES/ 4100U/ 4100 Legacy voice panel; current = 70 mA |
| | | Dual terminal block module with harnesses for connecting to the Audio Controller and Telephone Control module (requires 1 Block) |

Firefighter Telephone System Description

Firefighter telephone systems provide two-way communications for facilities where radio communications may not be available or are unreliable. They are typically used during active firefighting conditions, during a fire alarm investigation, or during fire alarm system inspection and test.

System Operation. Connections are made using a common talk line (party line) that includes a Master Telephone and up to six remote telephones. Remote telephones call into the Master by either being taken off-hook or by being plugged into a telephone jack. The Master Telephone location receives a ring-in tone with a visible LED indicator for each telephone circuit. When the call is received, the operator selects the calling telephone circuit using the assigned switch control. The operator at the master location can place the original telephone circuit on hold and connect to additional telephone circuits or add them to the talk line.

Master Telephone Operation. The Master Telephone connects directly into a telephone interface module. A Push-to-Talk (PTT) switch provides the operator with voice input control. Each master telephone uses local LED/switch modules to select telephone circuits and to silence any subsequent call-ins until selected.

Telephone Circuit Control. A call request causes the local call-in tone sounder and assigned telephone circuit LED to pulse quickly. Pushing the calling circuit's switch silences the local sounder and connects that circuit to the talk line. Activating the switch again places that circuit on hold with a hold tone being heard at the remote telephones and causing that circuit's LED to pulse slowly. Subsequent pushes toggles from active to hold. Activating a telephone circuit switch when no call is incoming places a request to pick up on remote telephones equipped with local LEDs. Master telephones can be also be connected as an input to an audio controller module to allow audio system message broadcasting without using a microphone.

Remote Master Telephones mount in Remote Annunciator Cabinets and are wired as the only connection to a telephone circuit. By adding local LED/switch modules, operation is that of the Master Telephone.

Remote telephones are available cabinet mounted or for plugging into a dedicated telephone jack. Each hears a ring tone when a call-in is selected and a hold tone when placed on hold. When on hold, the remote telephones are each separated from the talk line.

The Telephone Interface Module provides three Class B (Class A option is available) telephone circuits, connection for a master telephone, and a telephone riser input. One module is supplied when selecting a Master Telephone. Additional telephone interface modules can be added as required. Telephone circuit outputs can be programmed as remote telephones, as a Remote Master, or for telephone riser operation. Telephone circuits are supervised for opens, shorts, and overload conditions. The Master Telephone is supervised for broken cord or off-hook.

 
Telephone riser operation can be programmed to provide a telephone riser output that is used to interconnect telephone interface modules in different locations. This output type has ring and hold tones disabled.

Degraded Mode. If the telephone interface module loses communications with the host fire alarm control panel, telephone circuits off-hook are automatically connected to the talk line allowing any telephone to talk to another simply by being picked up (or plugged in).

Master Telephone Control Current with Remote Telephones. The following table lists Master Telephone Control current with the addition of remote firefighter telephones.

Table 13: Master telephone control current

| Remote Phones | 0 | 1 | 2 | 3 | 4 | 5 | 6 |
|---------------------|-----|-----|-----|-----|-----|-----|-----|
| Current (mA) | 140 | 180 | 220 | 250 | 276 | 304 | 329 |

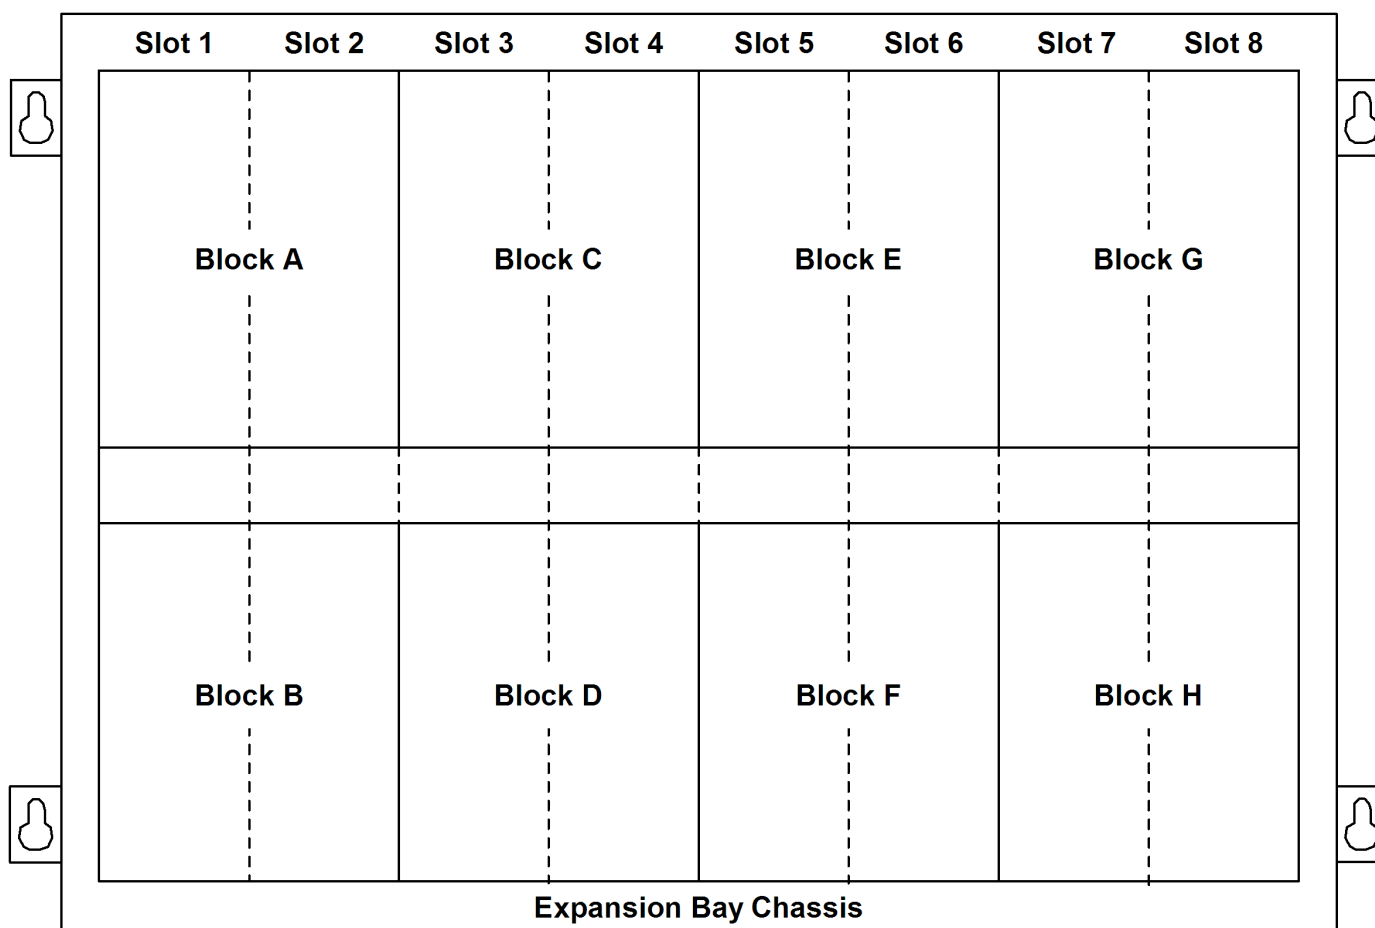Expansion Bay Module Loading Reference

Size Definitions

- Block = 4" W x 5" H (102 mm x 127 mm) card area
- Slot = 2" W x 8" H (51 mm x 203 mm) motherboard with daughter card

Table 14: Expansion Bay Module Loading Reference

| Description | Mounting |
|--|---|
| Audio Controller Modules | Blocks A & B |
| Network Riser Controller Module | Block A |
| Audio Riser Modules | Block B |
| Flex-35 Amplifiers, 2 max /bay* | Blocks E & F; C & D; or A & B |
| Flex-50 Amplifiers, 2 max/bay* | Blocks E & F or C & D |
| 100 W Amplifiers, 1 max/bay | Blocks E, F, G & H |
| 100 W Backup Amplifiers, 1 max. per bay with primary amplifier | Blocks A, B, C & D |
| Master or Remote Phone Module | Blocks A & B |
| Master or Remote Microphone Module | Two vertical Blocks, any location (except next to telephone) |
| Telephone Module | 1 Block |
| Expansion Signal Module | 1 Block |
| Operator LED/Switch Modules | 1 Slot |
| ES-PS* | Blocks G & H in an expansion bay with one flex amplifier, blocks C & D in an expansion bay with two flex amplifiers |
| ES-PS Configured as backup | Blocks E & F ONLY |
| Note: * When mounting dual Flex amplifiers on an expansion bay, special mounting rules apply. | |

General Specifications

Table 15: ES Power Supply Specifications (ES-PS and ES-XPS)

| Specifications | Rating |
|--|--|
| AC Input Power | 120-240 VAC |
| 120 VAC | 3.72 A |
| 220 - 240 VAC | 1.82 A |
| Total DC Output Power Capacity | |
| Without Fan | 9.5 A |
| With 4100-5130 Fan and 4100-5451 IDNAC Module(s) | 9.7 A |
| With 4100-5130 Fan (without 4100-5451 IDNAC Module) | 12.7 A |
| With Regulated 24V Appliance Loads (with or without 4100-5130 Fan) | 5.0 A |
| Special Application Appliance Loads: supports full total DC output power capacity ratings above | Simplex horns, strobes, and combination horn/strobes and speaker/strobes (contact your Simplex product representative for compatible appliances) |
| Regulated 24V Appliances: reduces total DC output power capacity to 5.0 A | Power for other UL listed appliances; use associated external synchronization modules where required |
| Auxiliary Power Tap | 2 A maximum (taken from total output power capacity) |
| NACs Programmed for Auxiliary Power | 3 A maximum per NAC, 5 A maximum total (taken from total output power capacity) |
| Battery Charger (ES-PS only) | Sealed Lead-Acid Batteries |
| Battery Ah Capacity | UL/ULC listed for battery charging of up to 110 Ah (batteries larger than 50 Ah require a remote battery cabinet) |
| Charger characteristics and performance | Temperature compensated, dual rate, recharges depleted batteries within 48 hours per UL/ULC Standards 864 |
| Environmental | |
| Operating Temperature | 32°F to 120°F (0°C to 49°C) |
| Operating Humidity | Up to 93% RH, non-condensing @ 90°F (32°C) maximum |
| Option Card Mounting | 2 vertical blocks are available fore compatible modules; refer to 579-1288 installation instructions for additional details |

Note:

- Battery charger is only available on the ES-PS power supply.
- When an ES-PS is used to power Flex-35 or Flex-50 Amplifiers the ES-PS battery charger is not available.

Table 16: Amplifier Ratings

| Specification | Rating | | |
|--|---|--|---|
| Built-in Tones | 500 Hz horn tone operated at temporal pattern, provided when amplifiers are separated from audio controller | | |
| Flex-35 Amplifiers: 4100-1361, 4100-1362, 4100-1363, 4100-1364 | Input Voltage | 19 to 35 VDC from adjacent power supply | |
| | Supervisory Current | 425 mA with power stage supervised 85 mA in low power mode | |
| | Alarm Current @ full output power | 5.5 A with continuous horn tone | Use this value for power supply loading |
| | | 1.64 A average, with temporal pattern horn | Use this value for battery backup reference |
| Flex-50 Amplifiers: 4100-1312, 4100-1313, 4100-1326, 4100-1327 | Input Voltage | 19 to 35 VDC from adjacent power supply | |
| | Supervisory Current | 425 mA with power stage supervised 85 mA in low power mode | |
| | Alarm Current @ full output power | 5.55 A with continuous horn tone | Use this value for power supply loading |
| | | 2.27 A average, with temporal pattern horn | Use this value for battery backup reference |
| 100 W Amplifiers and Backup Amplifiers: 4100-1314, 4100-1316, 4100-1318, 4100-1320, 4100-1322, 4100-1324; 4100-1328, 4100-1330, 4100-1332, 4100-1334, 4100-1336, 4100-1338 | Input Power | 120 VAC Models | 4 A maximum @ 102 to 132 VAC, 60 Hz |
| | | 220-240 VAC Models | 2 A maximum @ 204 to 264 VAC, 50/60 Hz; with taps for 220/230/240 VAC |
| | Supervisory Current | 400 mA (analog); 220 mA (digital) with power stage supervised 85 mA in low power mode | |
| | Alarm Current @ full output power | 9.6 A with continuous horn tone | |
| 3.8 A average, with temporal pattern horn | | Use this value for battery backup reference | |
| Total Amplifier Power per Cabinet | 300 W maximum | | |

Table 17: Audio Controller Ratings

| Specification | | Rating | |
|---|----------------------|---|---|
| Current Requirements | 4100-9620, 4100-1210 | Analog = 225 mA supervisory | Add for local speaker in alarm: 75 mA min. volume; 190 mA half volume; 333 mA full volume; Add microphone current separately; Supv.= 2.4 mA; Active = 30 mA |
| | 4100-9621, 4100-1311 | Digital = 85 mA supervisory | |
| | 4100-1411, 4100-1412 | 125 mA supervisory | Add for local speaker in alarm: 60 mA min. volume; 160 mA half volume; 250 mA full volume; add microphone current separately; Supv.= 2.4 mA; Active = 20 mA |
| Analog Riser Distance | | Up to 10,000 ft (3048 m) total with 18 AWG (0.82 mm ²) shielded twisted pair (STP) | |
| Digital Riser Distance; 18 AWG unshielded, twisted pair (UTP) required, except as noted; refer to Installation Instructions 574-844* | | Up to 2500 ft (762 m) from 4100-1311 or 4100-1411 Digital Controller to 4100-0622 Digital Audio Riser or 4100-1341 MCC Digital Riser Interface; up to 2500 ft (762 m) between 4100-0622 Digital Audio Riser Modules or 4100-1341 MCC Digital Riser Interfaces (signal is reformatted and repeated); wire runs over 100 ft (30 m) require UTP wire | |

Note: * Wire runs of 100 ft (30 m) or less require shielded twisted pair wire (STP).

Table 18: Firefighter Telephone Distance Ratings

| Specification | Rating |
|---------------|---|
| Distance | 7500 ft (2286 m) distance to farthest phone, 18 AWG shielded twisted pair (STP) |

Table 19: Environmental and Installation Instruction Reference

| Specification | Rating | | | |
|-------------------------------------|--|---------|----------------------------------|---------|
| Operating Temperature Range | 32°F to 120°F (0°C to 49°C) | | | |
| Operating Humidity Range | Up to 93% RH, non-condensing @ 90°F (32°C) maximum | | | |
| Installation Instructions Reference | Flex Amplifiers | 579-173 | Constant Supervision NAC Modules | 579-515 |
| | Digital/Analog Amplifiers | 579-174 | Firefighter Phones | 579-226 |

Additional 4100ES Data Sheet Reference

Table 20: Reference

| Subject | Datasheet |
|--|------------|
| Battery and Battery Cabinet Reference for 4100ES | S2081-0006 |
| 110 Ah Batteries and Cabinets for 4100ES | S2081-0012 |
| 4100ES Basic Panels with ES-PS Power Supplies | S4100-1031 |
| NDU with ES-PS Power Supplies for 4120 Network | S4100-1036 |
| 4100ES Remote Annunciator Panels | S4100-1039 |
| NDU with ES-PS Power Supplies for ES Net | S4100-1077 |