


9m x 3m Party Tent

Instruction Manual

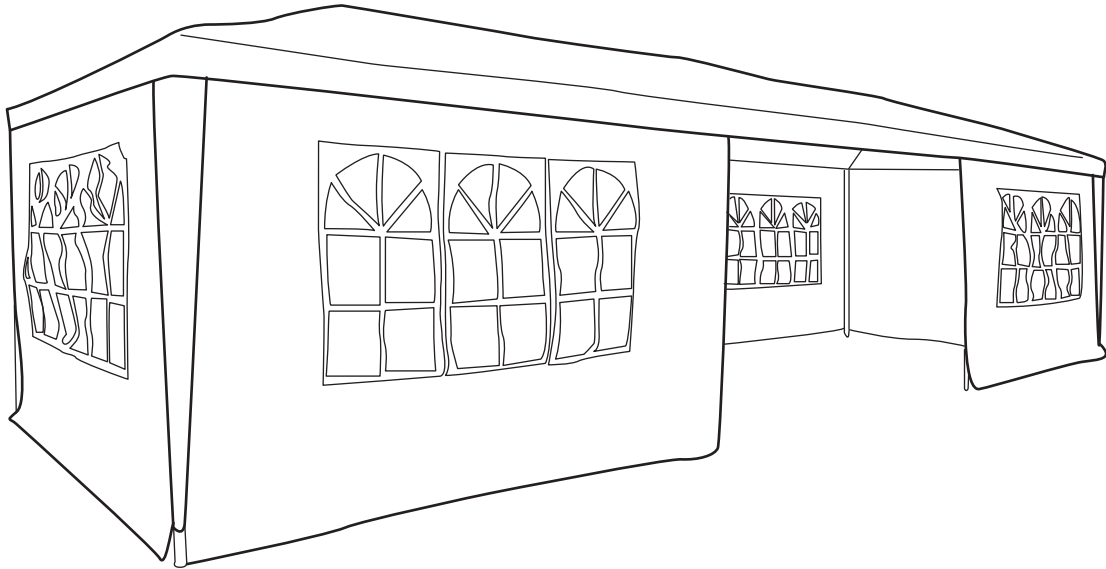

WARNING

Our products are designed for Garden and Leisure activities. We have no control over the weather or ground conditions when this item is setup. Therefore it is the buyers' responsibility to ensure that the assembly and anchoring of this product is sufficient. As with all other products of this nature this item is designed as a temporary structure and should not be left up overnight when heavy rain or winds could cause significant damage. Expressco Direct Ltd cannot be held responsible for any damage incurred in this manner. We are not liable for any damage to contents you place inside the Party Tent or damage to anything in the surrounding area. The 1 year Warranty is on manufacturing faults but this does not apply to damage occurred by misuse or when used against our recommendations or instructions.

PLEASE NOTE

Your Party Tent has been packed with the roof canopy and frame separate.

We advise that for the initial use, the frame should be put up without the cover to familiarise yourself with its operation.


The cover can then be placed over the frame and secured; this can be left on the frame when collapsed and for all subsequent uses thereafter.

Airwave 9 x 3m Party Tent - Windbar included


Easy Assembly instructions

- A. Take the canopy out of the box carefully and place on dry surface (sand, grass or hard surface)
- B. Have at least 4 people helping with the assembly in order to avoid damage to the steel pole.
- C. Secure tent in windy conditions by using the rope that is located on each side of the canopy and hammering stakes into the ground, at a 30 degree angle to balance the sides of tent. If the canopy is placed on a hard surface, secure the 4 sides with bricks or sand bags to weigh the canopy down.
- D. DO NOT ASSEMBLE TENTS IN RAIN, SEVERE WIND OR SNOWY WEATHER CONDITIONS BECAUSE THIS WILL DAMAGE YOUR TENT. It is the owner's responsibility if the tent is set-up and damaged during these conditions.
- E. Store your canopy/tent in a cool dry place when not in use.


1

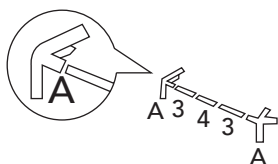


2

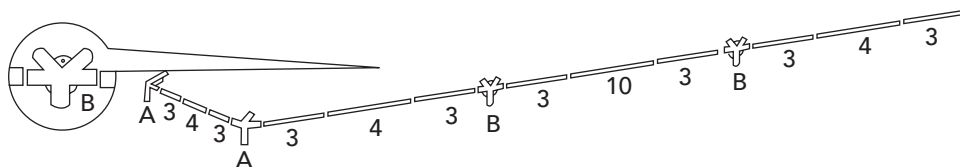


3

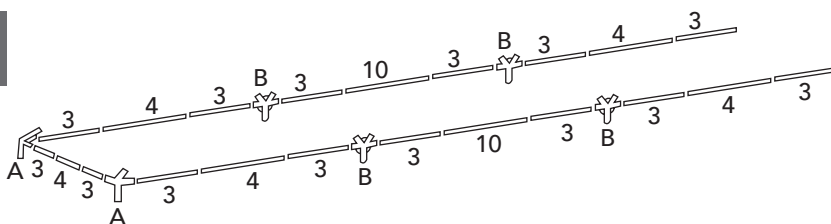

4

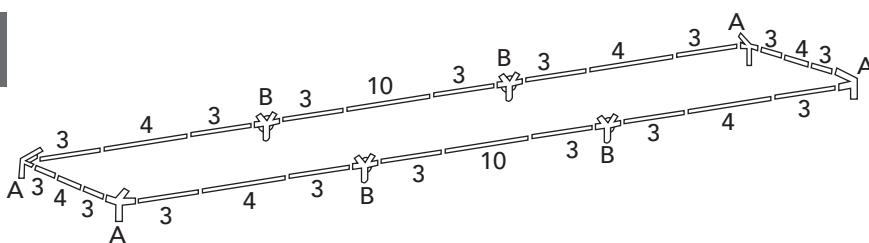


5

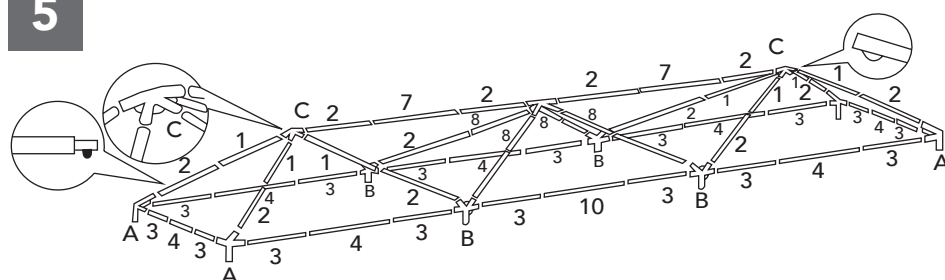


1		x8
2		x16
3		x16
4		x6
5		x8
6		x8
7		x2
8		x2
10		x2
A		x4
B		x2
C		x2
D		x2
E		x8
		x8
		x16
		x1
		x6
		x2
		x6


6

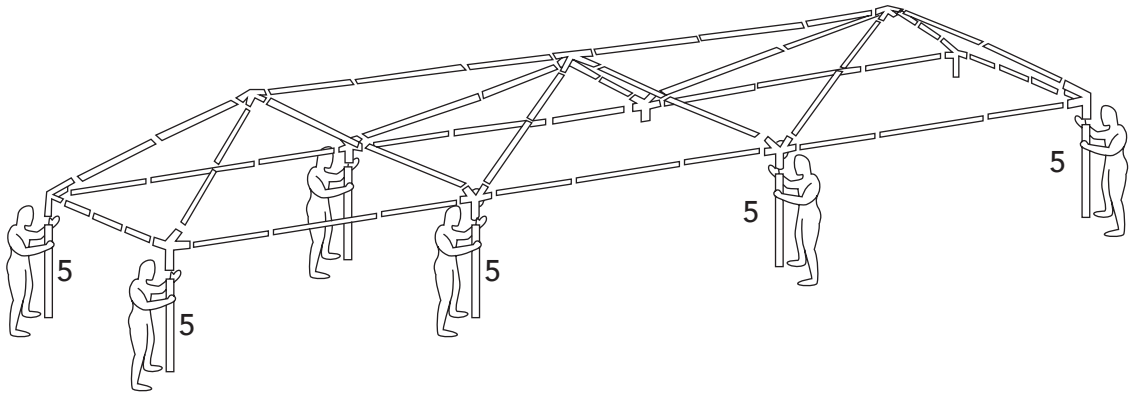


7

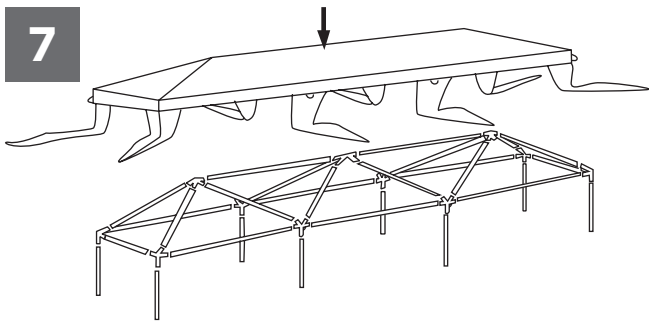


8

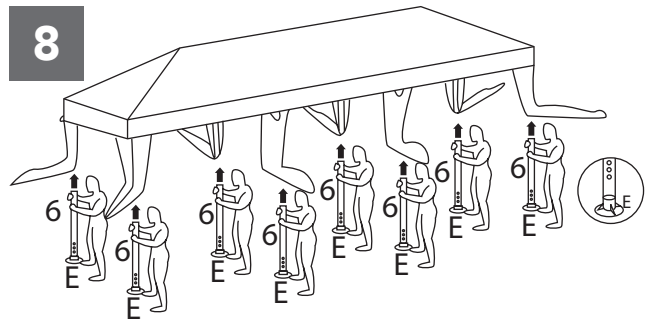


9

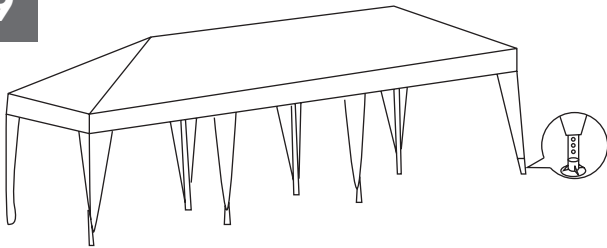

10


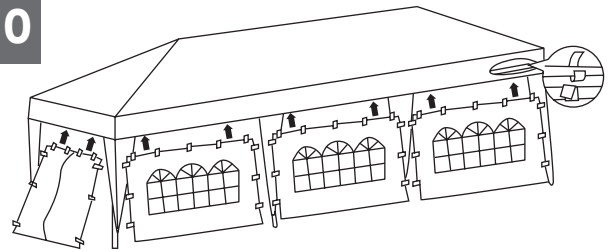


11

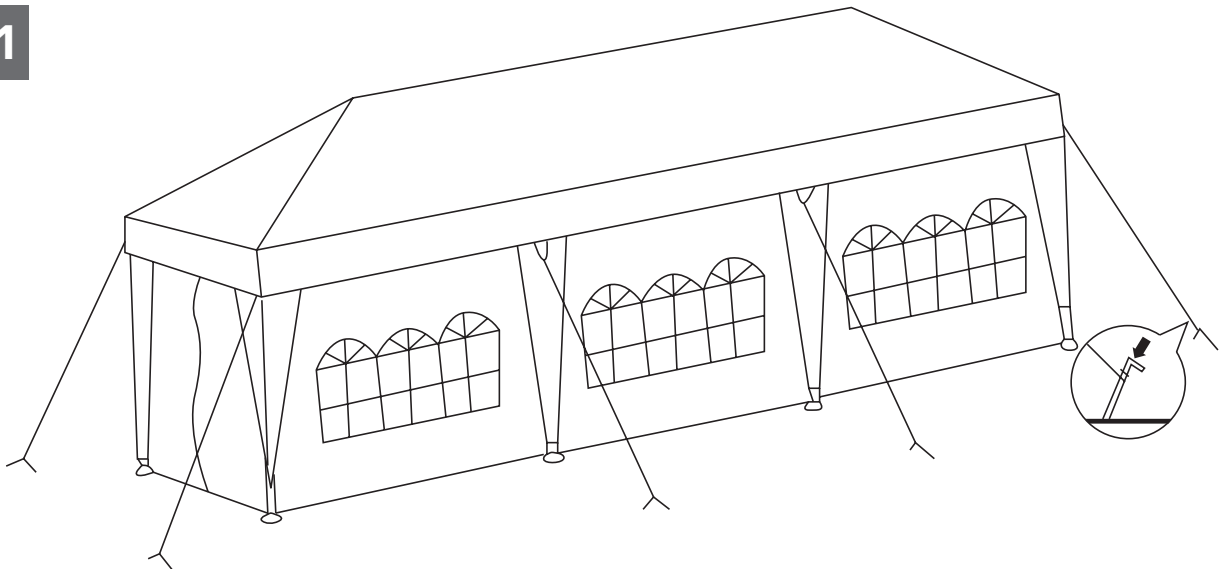


How to attach the sides



Wrap the top Velcro tabs around the top bars of the Party Tent frame.

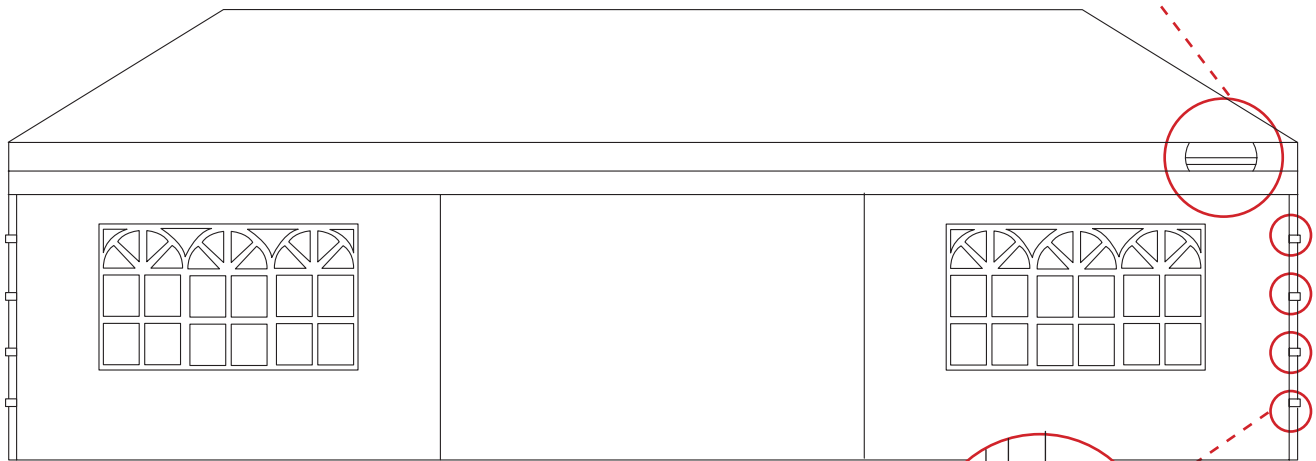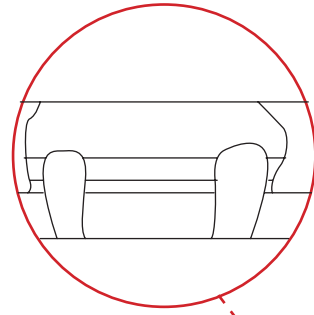

Wrap the top Velcro tabs around the top bars of the Party Tent frame.

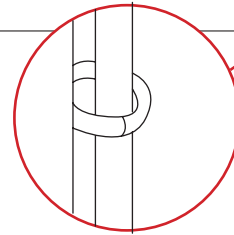


The Party Tent includes 6 removable side walls with clear church windows

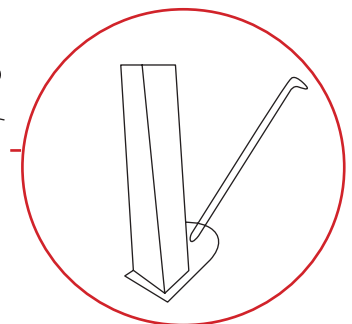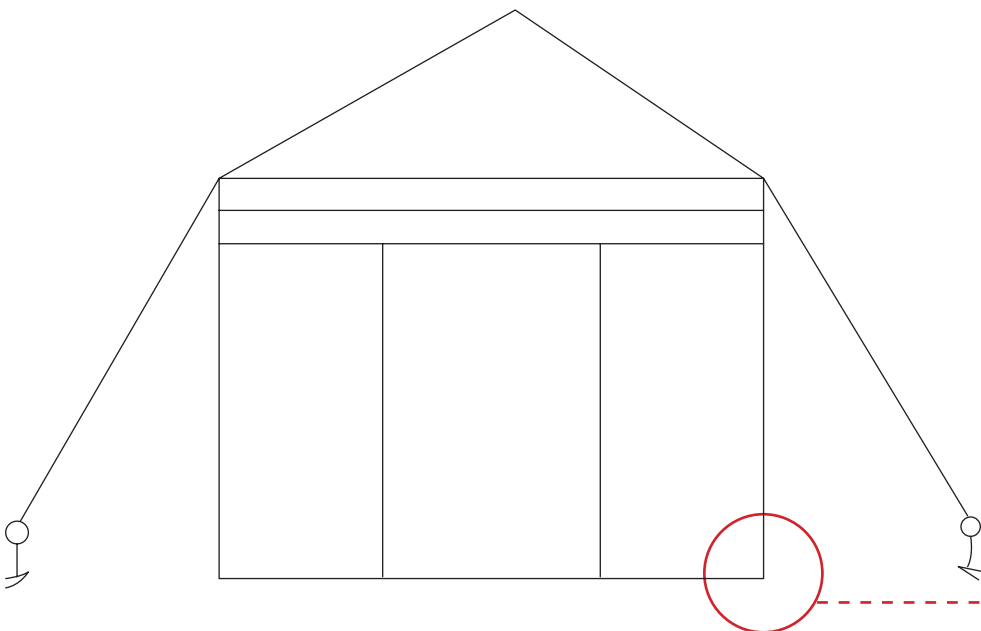

The Party Tent includes 2 removable side walls with zipper

How to use the Windbar


The Windbar consists of 3 separate sections:

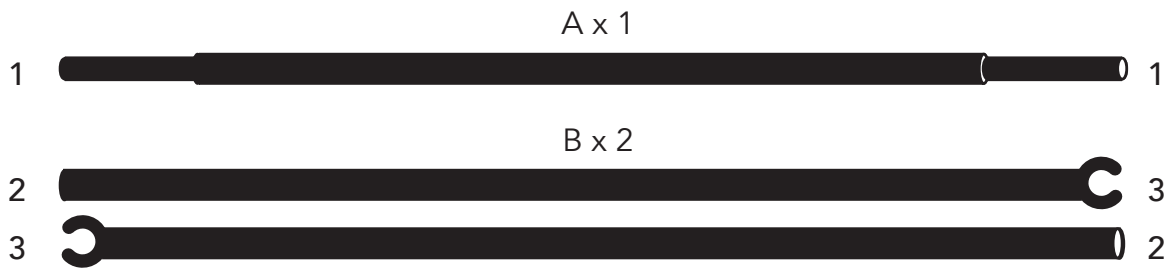


1 Assemble Windbar by inserting each narrowed end (1) of **A** into the open ends (2) of **B**.



2 Attach the hooked ends (3) of the assembled Windbar on to the Party Tent frame.

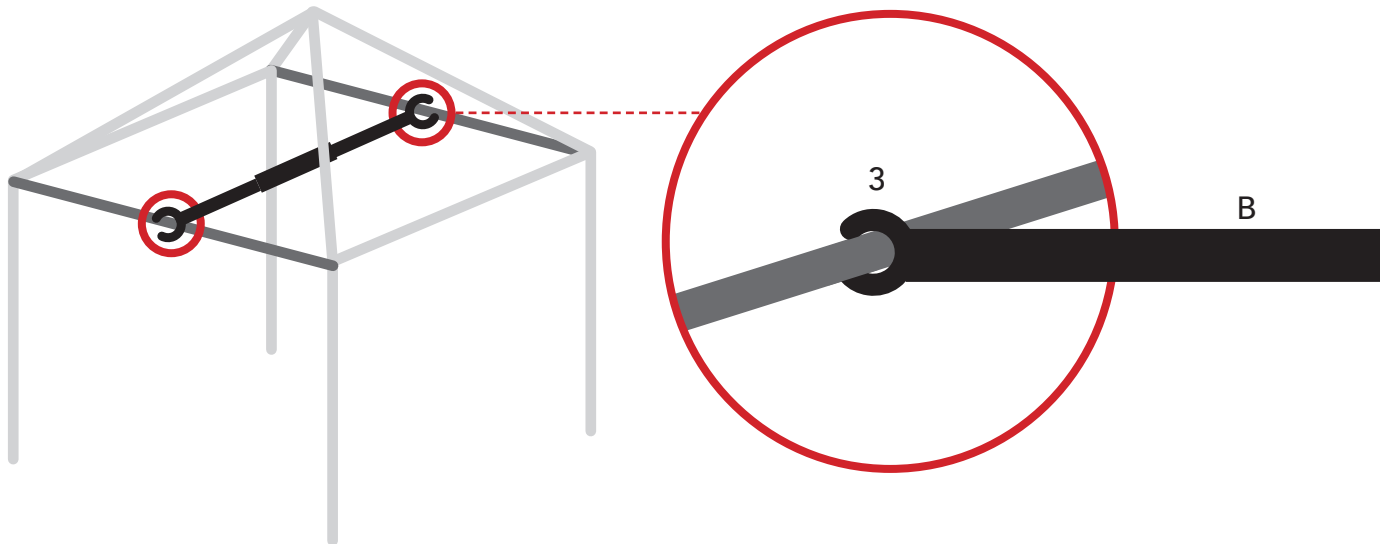

For more stability, position Windbar across centre of frame in the same direction of the wind

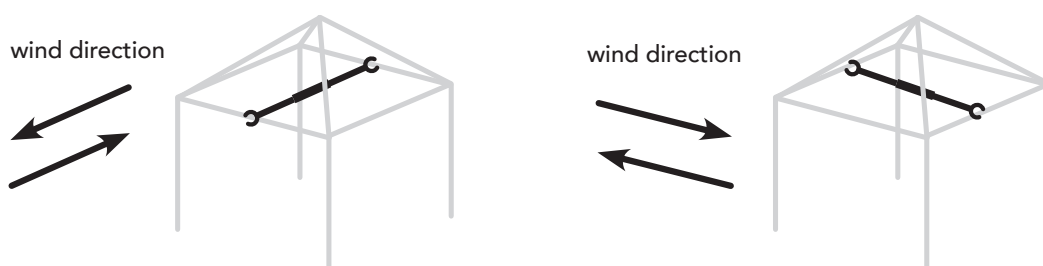

For further
information,
additional parts
and accessories
or other queries:

**SCAN FOR
WEBSITE**

**FOLLOW
US**

expressco
direct

Expressco Direct Ltd 2016 ©
All rights reserved

PHONE

01604 537900

WEBSITE

www.garden-camping.com

E-MAIL

sales@garden-camping.com

ADDRESS

Unit 1, Redbourne Park
Liliput Road
Brackmills Ind. Est.
Northampton
NN4 7DT

