

WINE ENTHUSIAST

All in One


Full Automatic Wine Opener ,Preserver and Aerator

Model: 495 15 10

INSTRUCTION MANUAL

Package includes:

- a) 1 x Wine Opener and preserver
 - b) 1 x Charging base with Aluminum Stand
 - c) 2 x Vacuum Stoppers
 - d) 1 x Wine Aerator
 - e) 1 x Foil Cutter
 - f) 1 x Power Adaptor
 - g) 1 x Aerating Tube
 - h) 1x Reset Tool
- If you find any of the above is missing, please contact your retailer

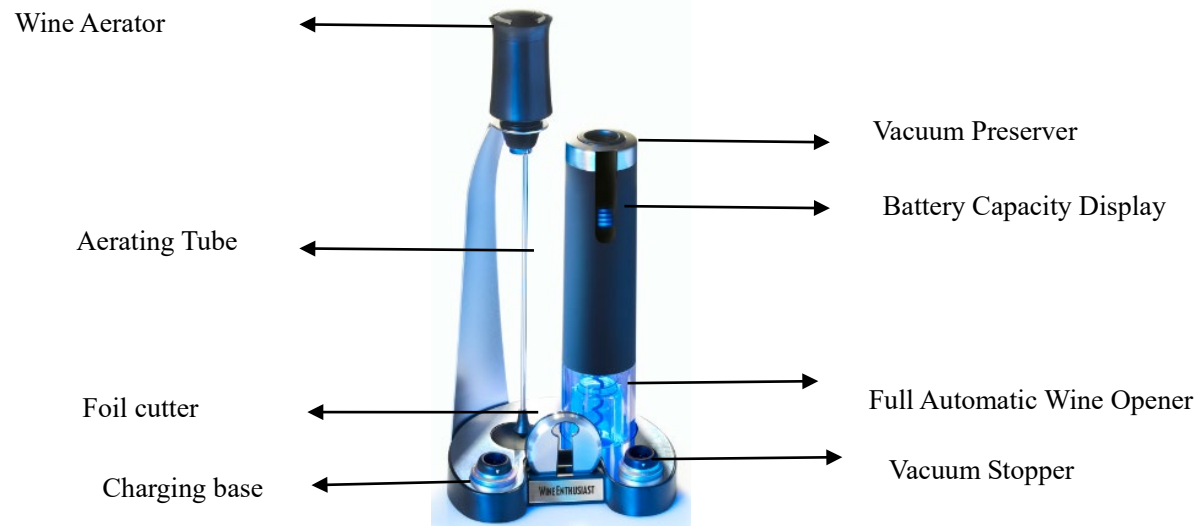

Power adaptor



IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions thoroughly before using the product.

1. This Wine Opener, Preserver and Aerator Set is intended for household use only.
2. This Wine Opener, Preserver and Aerator Set is intended to extract the corks from standard 750ML wine bottles.
3. Do not operate the Wine Opener, Preserver and Aerator Set with a damaged AC/DC Adapter or Charging Base. If the AC/DC Adapter is damaged it must be replaced by the manufacturer.
4. Do not place the appliance near an open flame, cooking or heating appliance, or hot surface.
5. This appliance is not intended for use in wet or damp conditions.
6. Ensure that the power cord is positioned so that it will not get damaged or cause a trip hazard.
7. Use only the AC/DC Adapter and Charging Base supplied with the appliance.
8. Do not immerse the appliance in water or any other liquid.
9. For indoor use only. Do not expose the Wine Opener, Preserver and Aerator Set or Charging Base to rain or other extreme conditions.
10. Never force the Wine Opener, Preserver and Aerator Set onto a bottle or attempt to speed up the mechanism. The Cork Remover will work best when it is operated at its intended speed.
11. Do not touch or adjust the Wine Opener, Preserver and Aerator Set mechanism or the corkscrew spiral. Only hold the Cork Remover by its plastic housing.
12. This appliance contains a re-chargeable battery. Do not dispose of the product on a fire as this may cause an explosion.
13. This appliance is not intended for use by individuals (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
14. To avoid electric shock do not open the casing. There are no user serviceable parts inside.

CAUTION: The corkscrew is sharp. Keep body parts (e.g. fingers) and utensils away from the operating end of the Wine Opener.

OPERATION

1. Charging the Wine Opener and Wine Preserver Unit

It is recommended that the Wine Opener and Wine Preserver unit is charged for at least 12 hours before using it for the first time. Please follow the instructions for charging the unit below:


- Connect the DC Power Plug into the DC Power Socket at the back of the Charging Base.
- Place the Wine Opener and Wine Preserver Unit into the Charging Base. Ensure that the arrows on the Unit and Base align with each other so that the electrical connections are made correctly.
- Insert the AC/DC Adapter into a main socket and switch on the power supply.
- The Charging Indicator will illuminate blue, indicating that the battery is charging. It will take 10 hours to fully charge the battery.
- To stop charging, switch off the supply and remove the AC/DC Adapter from the mains socket. Remove the DC Power Plug from the Charging Base.

The Wine Opener can be used to open up to 30 bottles when fully charged.

Note: This wine opener has intelligent light features and uses:

Battery display is included on the Wine Opener. When the battery is fully charged, 4 bars on the battery display will become solid blue. When the battery is low, only one bar will light blue. When the battery is low, you are advised to place the unit back on the charging base and the bars will blink. Once fully charged again the bars will remain solid blue.

Remark: The action blue led light that shines in the transparent part of the unit will constantly light up when the unit is on the charger. It also lights up when the product is opening a bottle.

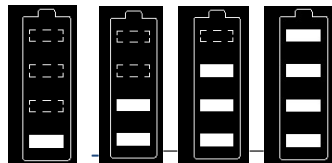

When unit is completely charged , four panels will become solid blue. It will take about 10 hours to fully charge the battery.

2. Opening a Wine Bottle with the Wine Opener

- Before extracting the cork please remove any seal from the bottle using the Foil Cutter provided (see Fig.2)



Fig.2

- Place the Wine Opener on top of the wine bottle making sure that it remains as upright as possible at all times. If you hold the Wine Opener at an angle to the bottle it will not remove the cork properly. (see Fig.3)



Fig.3

- Hold the Wine Opener with one hand and the wine bottle firmly with the other hand. Simply place the corkscrew on top of the bottle in line with the cork. The corkscrew spiral will then automatically activate and turn in a clockwise direction to enter the cork, and then gradually remove it from the bottle. When the Wine Opener mechanism stops, the cork will be visible through the transparent window and the blue indicator will go off.

Note: Dont try to remove the Opener if cork is not released fully.

-
- Lift the Wine Opener away from the bottle. The cork will then automatically release from the bottle, and the spiral will turn in a counter-clockwise direction and release the cork. (see Fig.4)
- Return the Wine Opener to the Charging Base when not in use, so as to protect the mechanism.
- This Wine Opener is designed for use with traditional corks, but it may be used with synthetic corks as well. Synthetic corks are smaller and do not expand like normal cork so sometimes they may stick on the spiral. If this happens, please insert the provided Reset Tool and into the Reset Hole under the Battery Capacity Display. The wine opener will activate for several seconds turning counter-clockwise to allow the worm to be slowly released.



3. Aerate Wine by Automatic Aerator

Power

Twist the cap on the handle of the Aerator counter-clockwise to remove. Insert two AAA Alkaline batteries(Not included) as per the polarity indicators inside the battery compartment. Press down and twist the cap clockwise to secure.

Aerate

Wash the tip of the aerating tube before each use.

Your Aerator comes with a stainless steel aeration stem. Insert the end into the bottom of the handle. Place the tip of the aerator stem in the wine and press the button. The Aerator will run to aerate your wine by pressing the button.



The Aerator will run for 30 seconds to aerate your wine. It will automatically shut off. You may shut it off prior to 30 seconds by pressing the button again. When press the button, blue LED lights up to illuminate the whole aeration. Place the Aerator in its stand to store.

Important! When you aerate wine in a bottle we suggest you wait for a few seconds before pressing the button to avoid splashing and spillage.

Clean

Clean the aerator body only with clean soft and dry cloth.

It is recommended that the aeration tip be soaked in water periodically to prevent clogging of the aeration holes.

Caution

- Dispose of the old batteries properly. Do not dispose of the old batteries in a fire.
- Do not leave the batteries where a child or pet could play with or swallow them. If the batteries are swallowed, contact a physician immediately.
- The batteries may explode if mistreated. Do not attempt to recharge or disassemble the batteries.
- Use only fresh batteries of the required size and type. Do not mix old and new batteries, different types of batteries, or rechargeable batteries of different capacities.

4. Sealing a wine bottle with the Vacuum Preserver

Note: Vacuum Preserver will keep wine fresh for up to 5-7days

Operating Process

- 1).Place the wine bottle on a flat surface.
- 2).Insert a wine stopper into the wine bottle (Fig.1).



Fig.1

- 3). Hold the wine stopper & wine bottle neck securely in one hand and place the non-slip mouth of the Wine Preserver on the wine stopper (Fig.2).

Please use light, steady pressure on the stopper when using the electric wine preserver.



Fig.2

- 4). Keep the Vacuum Preserver as straight as possible and in line with the wine bottle.
- 5). Push down on the wine stopper using light, steady pressure and press the power 'on' button at the same time.
- 6). The Wine Preserver starts to work removing the air from the bottle while making a vacuum noise. The blue vacuum indication light on the top will light up while in use.
- 7). The motor will stop working after 15 seconds. **The beep will sound when the motor stops.**
- 8). Do not remove the unit from the bottle until the motor stops.
- 9). Remove the Wine Preserver and replace on its charging base until it is needed again.

Note: The non-slip mouth may attach itself to the wine stopper. In this case, hold the wine stopper and the neck of the bottle securely in one hand and tilt the Wine Preserver away from the wine stopper to break the suction. This should prevent air from re-entering the bottle. If in doubt, repeat the above operating process.

Suggestion: For more than half a bottle of wine remaining – one session should suffice. For less than half a bottle we suggest you repeat the above process a 2nd time.

Date Indicators

1. Use the “ ▼ ” symbol to indicate the date when the bottle was sealed with your Wine Vacuum Preserver.
2. Gently swivel the silver ring to left or right until the correct date is in line with the “ ▼ ” symbol (Fig.3).



Fig.3

Opening

- Firmly hold the bottle in one hand and gently ease the wine stopper away from the bottle with the other hand.
- Store the wine stoppers in a clean safe place until next required.

After Use

- In order to prolong the battery life , please have your wine opener fully charged at least once every three months in order to ensure your electric corkscrew is available to use at any time.
- Wipe the Wine Opener and Wine Vacuum Preserver Set and Charging Base with a soft, dry cloth.

Battery & Product Disposal Information

- This Wine Set contains rechargeable batteries. Before you dispose of your Wine Opener and Wine Vacuum Preserver ,you should remove the batteries and dispose of them responsibly. To take out the battery pack remove the screws from the rear cover. Dispose of the rechargeable batteries and product responsibly.

Recycling and Disposal

The WEEE directive (Waste Electrical and Electronic Equipment; 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high level environment protection. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Do not mix products bearing the crossed out bin symbol with your general household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.



Specification

Model No: 495 15 10
Voltage: Product :3.6V Adaptor output: 6V DC 150mA
Frequency: Adaptor 100-240V AC50/ 60 Hz
Power: Product 10.8W
Net Weight: 1200g
Dimensions (unit + stand): 6.8×5.58×14.8inch