



# REMOTE CATALOGUE



## INDEX

1. TELEVISION REMOTES
2. UNIVERSAL REMOTES
3. PLASMA/LCD REMOTES
4. DVD REMOTES
5. DSTV REMOTES
6. SUBWOOFER REMOTES
7. CAR CD/MP3 PLAYER REMOTES
8. AIRCON REMOTES

## TELEVISION REMOTES



**RM-AIM20  
ATV-S20 REMOTE**



**RM-AIM21  
AIM ATV14/21  
RC51A**



**RM-DA2052  
DAEWOO 2052/2051  
DMQ1451/1459/2017/2057/2059  
MP1830**



**RM-DAE2057  
DAEWOO DMQ1417/1451  
RC1830 PILOT**



**RM-DA2072  
DAEWOO DMQ-2072**



**RM-DA20Q2  
DAEWOO DTC20Q2/20Q3  
R-28B03**



**RM-DI/3622  
DIAMOND 3622**



**RM-FU/C540  
FUTRONIC C540/C541/C740  
5Z59**



**RM-FU/F20  
FUTRONIC / PANASONIC F-20**



**RM-FU/F29  
FUTRONIC FH21/29  
MTR03**



**RM-FU/T07  
FUTRONIC T07**



**RM-GI/C2012  
GIANT C2012**



**RM-HDE  
HDE**



**RM-HI/SR0041E  
HISENSE TC2175/1421  
TC2100/2180/2181/2900/2960  
HYDFSR-0041E**



**RM-HI/SR0046E**  
**HISENSE TC1420FA/2198**  
**TC2198L/1828/1825D/2195S**  
**HYDFSR-0046E**



**RM-HI/SR0076E**  
**HISENSE TF-2919H/HA**  
**HYDFSR-0076E**



**RM-HI/SR0081**  
**HISENSE TC2588H/M/**  
**TC-2119/2198/2918/1420**  
**HYDFSR-0081**



**RM-HI/TC1828A  
HISENSE TC1205/1828AE**



**RM-HI/TC2108  
HISENSE TC2108D  
EN30505A**



**RM-HI/TC2961  
HISENSE TC2961AM/6121**





**RM-HIF/P6P1**  
**HITACHI/FUJIAN HFC-21P66A**



**RM-HY/R04**  
**HYUNDAI/DAEWOO DCT5420/7410/5440**  
**DTC7425/7440**



**RM-HY/T05**  
**HYUNDAI/DAEWOO DCT7420**  
**T05**



**RM-JVC/C360**  
**JVC AVN2043**  
**AV-K25/AV-K258Z/MX2/MX3**  
**RM-C360**



**RM-JVC/C530**  
**JVC AVG14/AVG21**  
**RM-C530**



**RM-JVC/C547**  
**JVC AV-K21T/R2**  
**RM-C547**



**RM-JVC/C565**  
**JVC AVK21T/AVF21/AVF2143**



**RM-LG/MKJ3202**  
**LG TV/VCR/DVD REM**  
**MKJ32022837**



**RM-LG/V00077Z**  
**LG TV/VCR RT-29FB50VE/70VE**  
**6710V00077Z**



**RM-LG/V00090D**  
**LG CF20S10E/CT25H32H**  
**CF-14J50K/CF-20F94K/CF-20J50K**  
**MC84A**  
**6710V00090D**



**RM-LG/V00124D**  
**LG RT21FB55/29FB55**  
**CT-20F95M**  
**MC049B**  
**6710V00124D**



**RM-LG/V0017E**  
**LG CZ20J50/CZ20F60**  
**CF-20S10E/CFT-25M60E/CT-29Q14PT**  
**MC994A**  
**6710V00017E**



**RM-LG/V0032C**  
**LG TV/VCR KF-14P2S/KF20P30 COMBO**  
**6710V00032C**



**RM-LG105-210A**  
**LG CY14A80/20A80/20A90**  
**MC34/41A**



**RM-LG105-230M**  
**LG CZ B/D/E/F SERIES**  
**MC64A**



**RM-LG36087608**  
**LG TV**  
**AKB36087608**



**RM-LOG/LK74N**  
**LOGIK LK74N**  
**KJ-OM8370-02**



**RM-LOG/RCA07**  
**LOGIK/RINEX/TOPSHOW RX 37/54**  
**RC-A07**



**RM-LOG/RCF77  
LOGIK/RINEX/ROWA  
RC-F77**



**RM-LOG/RCF81  
LOGIK/RINEX/TOPSHOW 37/54 CM TV  
RC-F81**



**RM-LOG/RCF84  
LOGIK/RINEX/TOPSHOW 37/54 CM TV  
RC-F84**



**RM-LOG/RCQ04M  
LOGIK/RINEX  
RC-Q04M-0A**



**RM-LOG/RCQ07  
LOGIK/RINEX LK74  
RC-Q07**



**RM-LOG/RCS20  
LOGIK RC-S20**






**RM-NP/FX74  
PANASONIC FX74/A  
EUR644660**



**RM-NP/SX1  
PANASONIC SX1/2/3/4 SX74  
EUR501310**



**RM-NP/SX4A  
PANASONIC SX4A/FX51/EVO51  
EUR501380**

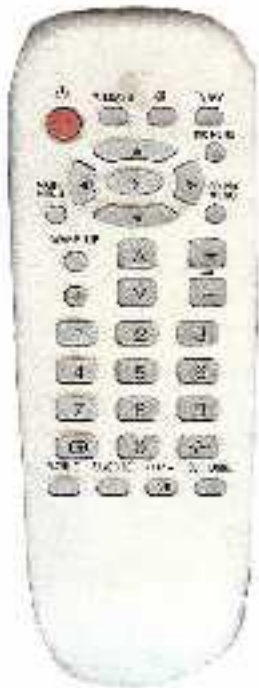

**RM-NP/TC21  
PANASONIC TC21/29FJ/TAU54  
EUR648081**



**RM-NP535  
PANASONIC CN517/518/535/677**



**RM-NU/NTT321B  
NUTEC NTT321B  
K18D-C18 OR K16J-C4**



**RM-NU/NTT814**  
**NUTEC NTT814/820/821**



**RM-PH/NEW21PT**  
**PHILIPS 21PT-2012**  
**21PT**



**RM-PH/RC0764**  
**PHILIPS 20PT118A/14PT132A**



**RM-PH/RC7812  
PHILIPS GR/GX  
RC7812/RC7815**



**RM-PH/RC7954  
PHILIPS 29PT462/25GX1800  
RC7954**



**RM-PH/SAA3010  
PHILIPS CTO/TRIAD  
RC7812 / SAA3010**



**RM-ROW7102**  
**ROWA XT7102/XT5130**



**RM-SANYO**  
**SANYO CM14MX81Z/CM21KF81A**  
**1AVOU10B31200**



**RM-SM/00104M**  
**SAMSUNG CS25A06**  
**AA59-00104M**



**RM-SM/00312A**  
**SAMSUNG CS21K30/21K40MJ**  
**AA59-00312A**



**RM-SM/00397B**  
**SAMSUNG CS-21K9AU**  
**AA59-00397B**



**RM-SM/100081F**  
**SAMSUNG 5038/5085/5073**  
**AA59-100081F**



**RM-SM/CI5015**  
**SAMSUNG CI5025/5015/3352/3357/3361**  
**CI3372/5016/5052**



**RM-SM00107N**  
**CS-20R1**  
**SM00107N**



**RM-SNY/RM849S**  
**SONY KV2167/2187/2585**  
**RM-849S**



**RM-SNY/RM883**  
**SONY KVT29MN3/KVJ29MN**  
**RM-883**



**RM-SNY/RM980**  
**SONY TV**  
**RM-980**



**RM-SNY/RMS755**  
**SONY AUDIO SYSTEM**  
**RM-S755**





**RM-SNY/V181**  
**SONY VCR**  
**RMT-V181L**



**RM-SONIC**  
**SONIC TV**



**RM-SU/RSS142B**  
**SANSUI SV2001I**  
**RS-S142B**



**RM-SU/RSS161**  
**SANSUI 2001/2002I/2102**  
**RS-S161**



**RM-SU/RSS168**  
**SANSUI EC1701/2089/2509/2990**  
**RS-S168**



**RM-SU/SV2102**  
**SANSUI SV2102M**



**RM-SVA  
SVA/ROWA 9320  
RC961**



**RM-TED/RC01U  
TEDELEX/SANSUI SV2918N/3488  
RC01U**



**RM-TED/RC03S  
TEDELEX/SANSUI EC1418/2135/2188  
RC03S**



**RM-TED/RC04D  
TEDELEX EC29208  
RC04D**



**RM-TED/RC08K  
TEDELEX EC-21602PF  
RC08K**



**RM-TED/RC94  
TEDELEX 1458/2098/9427**



**RM-TED/RC95B**  
**TEDELEX T551/T777/G202**



**RM-TED/RC98B**  
**TEDELEX EC1438/2009/2091I**



**RM-TED/RC98D**  
**TEDELEX EC2909I/2509I**



**RM-TK/FB1034  
TELEFUNKEN MR700/701/702/MP514  
FB1034**



**RM-TK/FB1120  
TELEFUNKEN MP/MR SERIES  
FB1120**



**RM-TK/K10-C5  
TELEFUNKEN TTV145  
K10N-C5**



**RM-TK/TTV215  
TELEFUNKEN TTV215  
K12N-C6 / K12I-C4 /K12N-C10**



**RM-TK/TTV21NX  
TELEFUNKEN TTV-14NX/21NX**



**RM-TK/TTV280  
TELEFUNKEN TTV280/285/840  
5Z26A**



**RM-TK/TTV290  
TELEFUNKEN TTV250/290/540**



**RM-TK/TTV293A  
TELEFUNKEN TTV293A NUTEC321D  
THOMSON 29CT74**



**RM-TK/TTV295  
TELEFUNKEN TTV295/2918  
K16-C2**





**RM-TK/TTV295A**  
**TELEFUNKEN TTV295A/2926**  
**50M0**



**RM-TK/TTV29SX**  
**TELEFUNKEN TTV25NX/29SX/TTV745**



**RM-TK/TTV543**  
**TELEFUNKEN TTV543/2126//3426**  
**RS09-M360**



**RM-TK/TX807**  
**TELEFUNKEN MP372/515/516**



**RM-WH/21NJTT**  
**WHAREFDALE WHTV-21NJTT**

## UNIVERSAL TELEVISION REMOTES



**RM-U/CANDI  
UNIVERSAL CANDI SIMPLEX**



**RM-U/CHASS01  
UNIVERSAL 74CM CHASSIS  
5424**



**RM-U/CHASS02  
UNIVERSAL 34/54/74CM CHASSIS  
HY57L**



**RM-U/CHASS03**  
**UNIVERSAL 74CM CHASSIS**  
**55P2/55P9**



**RM-U/CHASS04**  
**UNIVERSAL CHASSIS**  
**55L1**



**RM-CHASS05**  
**UNIVERSAL 74CM CHASSIS**  
**55K9**



**RM-U/EASYTEL  
UNIVERSAL PILOT EASYTEL**



**RM-U/MFY1-1  
UNIVERSAL REMOTE  
PROGRAMMED ON PC**



**RM-U/MINTEL  
UNIVERSAL PILOT MINTEL  
TV/SAT REMOTE**



**RM-U/SUPER5  
UNIVERSAL REMOTE  
5 - TV/VCR/SAT**



**RM-U/URC22  
UNIVERSAL 4 IN 1 REMOTE**



**RM-UNV/KR999  
UNIVERSAL KOREAN REMOTE  
LG/SAMSUNG/DAEWOO**

**PLASMA / LCD REMOTES**



**RM-P/HI31603  
HISENSE PLASMA  
EN-31603A**



**RM-P/HYUNDAI  
HYUNDAI PLASMA**



**RM-P/LG-MJK42  
LG PLASMA  
MJK42519604**



**RM-P/LOG42G  
LOGIK LCD  
LLPM-42G**



**RM-P/LOG42HD  
LOGIK PLASMA  
LLCD-42HD**




**RM-P/PANASONC  
PANASONIC PLASMA**





**RM-P/SAM00507  
SAMSUNG PLASMA  
BN59-00507A**

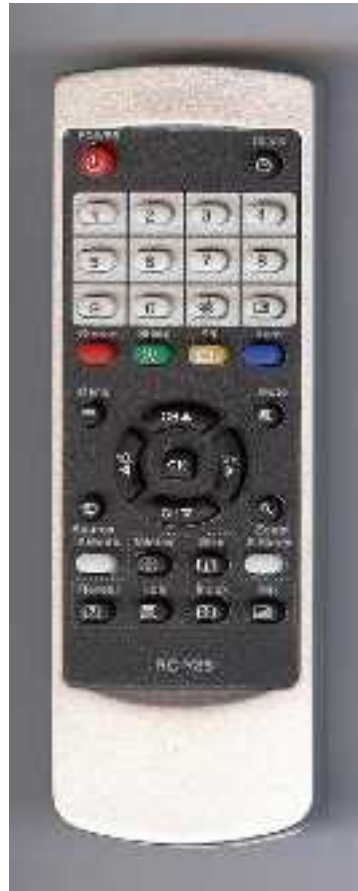

**RM-P/SINY35  
SINOTECH PLASMA  
RC-Y35**



**RM-P/SNY/GA05  
SONY PLASMA  
RM-GA005**



**RM-P/SU4200  
SANSUI SV4200 LCD  
SV-4200LCD**



**RM-P/TED1000  
TEDELEX EC-PD1000 PLASMA**



**RM-P/TED2000  
TEDELEX EC-PD2000 PLASMA**



**RM-P/TED30  
TEDELEX EC-30LCD**



**RM-P/TED3000  
TEDELEX EC-PD3000 PLASMA**



**RM-P/TFK32FHD  
TELEFUNKEN LCD  
32FHDS**



**RM-P/TOS-D007  
TOSHIBA PLASMA  
D007C001**

DVD REMOTES



**RM-D/DAEWOO  
DAEWOO DVD REMOTE**



**RM-D/DIGI2500  
DIGITECH DVD-2500**



**RM-D/DIGITECH  
DIGITECH DVD REMOTE**



**RM-D/DVD1  
TELEFUNKEN TDV8000  
SINOTEC MP600**



**RM-D/DVD3  
SANSUI 638C TEDELEX TE2003 DVD**



**RM-D/E-SONIC  
E-SONIC JX12055E DVD**



**RM-D/ECCO/D09  
ECCO DK-9D SINOTEC MP818 DVD**



**RM-D/HI8200  
HISENSE DV-8200T DVD**



**RM-D/INOTECH  
INOTECH/TELEFUNKEN DVD**



**RM-D/LG-DAT06**  
**LG DVD HOME THEATRE**  
**6710CDAT06**



**RM-D/LG070B**  
**LG DVD**  
**6711R1P070B**



**RM-D/LG320146**  
**LG DVD/HDD**  
**AKB32014603**





**RM-D/LG322036**  
**LG DVD/SURROUND SOUND**  
**AKB32203606**



**RM-D/LG8721**  
**LG DVX173 DV-8721P DVD**



**RM-D/LGAKB370**  
**LG HOME THEATRE**  
**AKB37026826**



**RM-D/LGD6235**  
**LG HT-3602/7652/LH-D6230**



**RM-D/LOG313**  
**LOGIK 313 DVD**



**RM-D/LOG8880**  
**LOGIK DV8880/8870 DVD**



**RM-D/OMEGA  
OMEGA DVD**



**RM-D/SAMS23R  
SAMSUNG 0023R DVD/TV**



**RM-D/SANYO  
SANYO/AIM DVD33/43/63**



**RM-D/SIN3022  
SINOTEC DVD  
3022HDMI**



**RM-D/SIN54  
SINOTEC MP54 DVD**



**RM-D/SIN600  
SINOTECH MP600 DVD**



**RM-D/SIN800  
SINOTECH MP800 DVD**



**RM-D/SM00011B  
SAMSUNG 00011B DVD**



**RM-D/SM00071H  
SAMSUNG 00071H DVD**



**RM-D/SU100  
SANSUI 100T DVD**



**RM-D/SU213  
SANSUI DVD-213/222  
CA-002**



**RM-D/SU3015  
SANSUI RZ2550/3015/3500**



**RM-D/SU3180B  
SANSUI DVD-3180B**



**RM-D/SU5025  
SANSUI/TEDELEX TE5025AVD DVD**



**RM-D/SU9150  
SANSUI RZ9150AVD DVD**



**RM-D/SU9730  
SANSUI RZ9300/9730AVD DVD**



**RM-D/SU9730VT  
SANSUI RZ-9730VT DVD**



**RM-D/SU9780  
SANSUI RZ9780/30501AVD DVD**





**RM-D/TE303AVD  
TEDELEX TE-303AVD DVD**



**RM-D/TE3208  
TEDELEX TE-S3208 DVD**



**RM-D/TE4020AV  
TEDELEX TE-4020/2040 DVD**



**RM-D/TE4208  
TEDELEX TE-4208T DVD**



**RM-D/TE5208  
TEDELEX TE-S5208T DVD**



**RM-D/TK011  
TELEFUNKEN THT-011 DVD**



**RM-D/TK112  
TELEFUNKEN THT112B DVD**



**RM-D/TK125  
TELEFUNKEN THT-125 DVD**



**RM-D/TK160  
TELEFUNKEN THT-160B DVD**



**RM-D/WHARF75  
WHAREF Dale DVD-75USB**

DSTV REMOTES



**RM-MULTI/HD  
MULTICHOICE HD PVR ORIGINAL**



**RM-MULTI/PVR  
MULTICHOICE PVR UNIVERSAL REMOTE  
DSD1110/DUAL/SINGLE/OLD**



**RM-MULTICH/01  
MULTICHOICE DUAL VIEW**



**RM-MULTICH/02  
MULTICHOICE DUAL VIEW  
SWITCH A OR B**



**RM-MULTICH/03  
MULTICHOICE DSD1110 / EXTRA VIEW**



**RM-MULTICHOIC  
MULTICHOICE DSTV REMOTE**

## SUBWOOFER REMOTES



**RM-SU/SHT10  
SANSUI SHT10 SUBWOOFER**



**RM-SU/SHT21  
SANSUI SHT21R/25 SUBWOOFER**

CAR CD/MP3 PLAYER REMOTES



**RM-SNY/X151  
SONY RM-X151 CAR RADIO**



**AIRCON REMOTE**



**RM-AIRCON  
KT-518 AIRCON REMOTE**