 


# ANDERIC RRAV300 AUDIO REMOTE



 
# BUTTON DESCRIPTIONS (Under AMP mode):

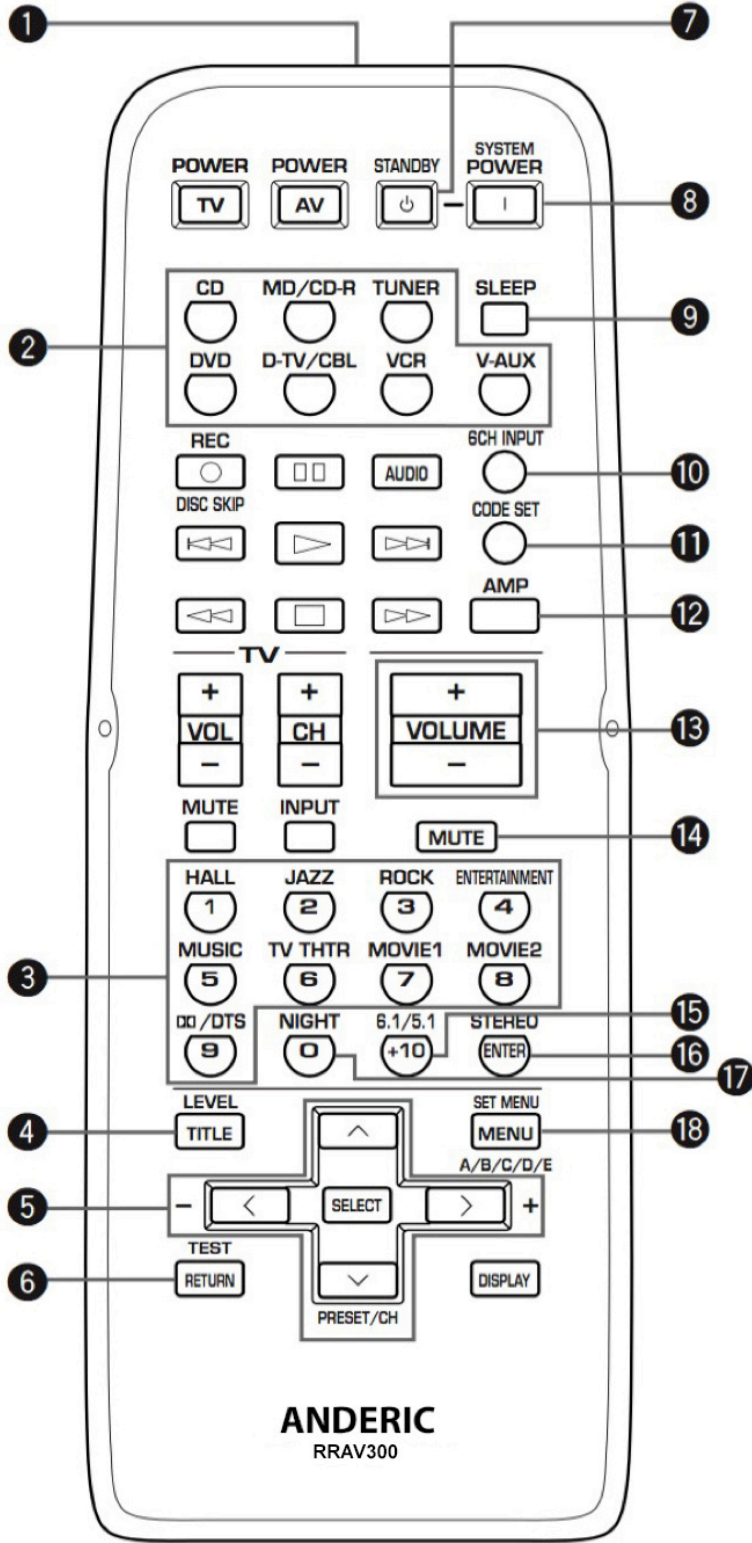

1. Infrared emitter: Outputs infrared control signals. Aim emitter at the component you want to operate.
2. Input selector buttons: Select the input source and change the control area.
3. Sound field program/Numeric buttons: Use to select sound field programs or input numbers.
4. LEVEL: Selects the effect speaker channel to adjust.
5. Cursor buttons ^ / v / < / > / SELECT: Use to select and adjust sound field program parameters or SET MENU items.
6. TEST: Outputs the test tone to adjust the speaker levels.
7. STANDBY: Sets this unit in standby mode.
8. SYSTEM POWER: Turns on the power of the unit.
9. SLEEP: Sets the sleep timer.
10. 6CH INPUT: Selects the audio source connected to the 6CH INPUT jacks.
11. CODE SET: Used to set up manufacturer codes.
12. AMP: Switches control from a previously selected component by using the input selector buttons to this unit.
13. VOLUME +/-: Increase or decreases the volume level.
14. MUTE: Mutes the sound. Press again to restore the audio output to the previous volume level.
15. 6.1/5.1: Switches on or off the Dolby Digital + Matrix 6.1 or DTS + Matrix 6.1 decoder.
16. STEREO: Switches between normal stereo and DSP effect reproduction. When you select STEREO the unit mixes down all Dolby Digital and DTS signals (except the LFE channel) as well as those 2-channel signals without effect sounds, to the front left and right speakers.
17. NIGHT: Sets the unit in night listening mode.
18. SET MENU: Selects the set menu mode.

### **Using the remote control**

The remote control transmits a directional infrared beam. Be sure to aim the remote control directly at the remote control sensor on the main unit during operation.

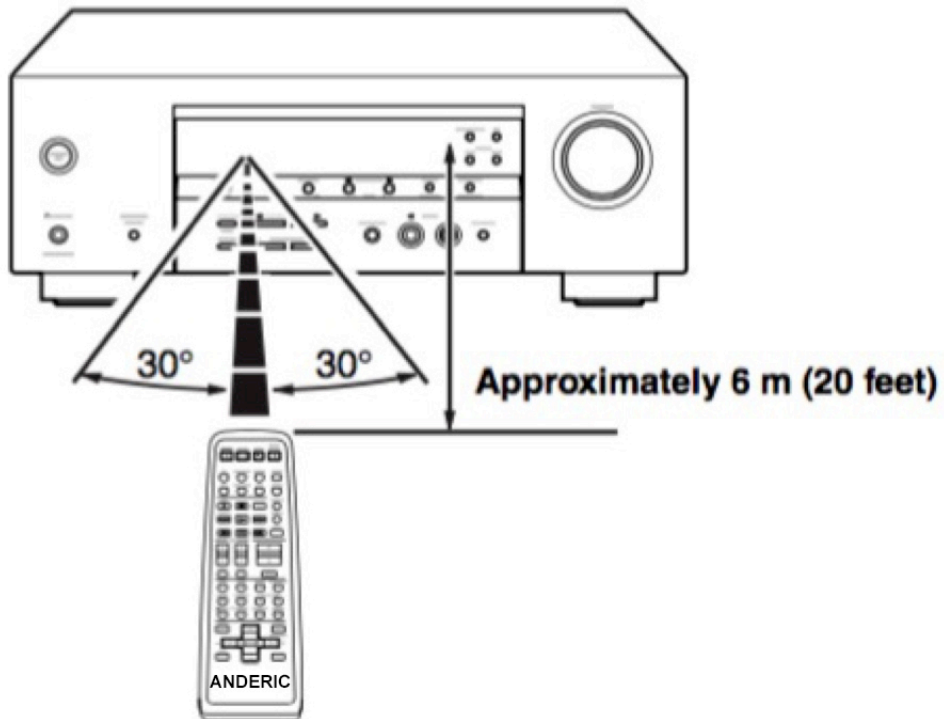


## FEATURES

In addition to controlling this unit, the remote control can also operate other A/V components made by other manufacturers. To control other components, you must set up remote control with the appropriate manufacturer codes.


### Control area

 - Controlling this unit  
The shaded areas below can be used to control this unit when the AMP mode is selected. Press AMP to select the AMP mode.

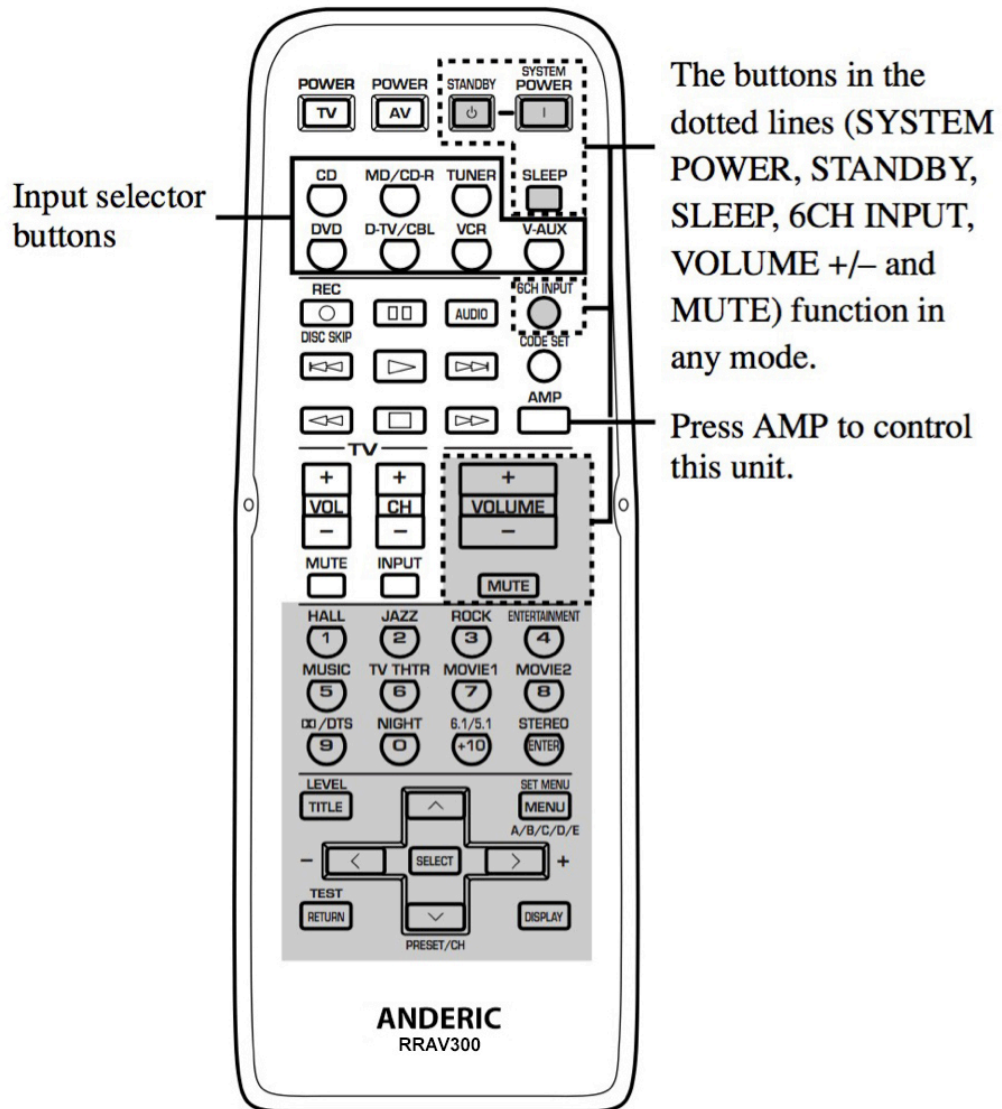

- Controlling other components  
The shaded areas below can be used to control other components. Each button has a different function depending on the selected components. Select the component you want to control by pressing an input selector button.

 Input selector buttons switch the control area for each component.

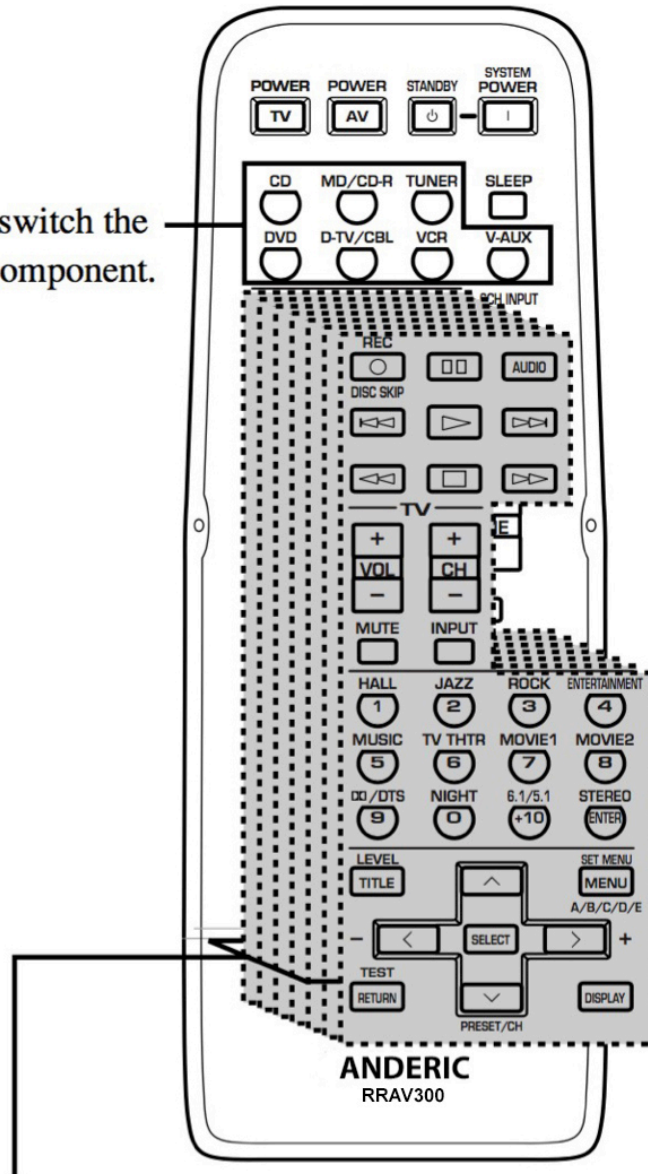

### Component control area

You can control up to 7 different components by setting appropriate manufacturer codes.



## Setting Manufacturer codes

 
You can control other components by setting the appropriate manufacturer codes. Codes can be set up for each input area.

The following table shows the default component and the manufacturer code for each area.

Input area	Component category	Manufacturer	Code
CD	CD Player	YAMAHA	199
MD/CD-R	CD recorder	YAMAHA	499
TUNER	Tuner	YAMAHA	Fixed
DVD	DVD player	YAMAHA	699
D-TV/CBL	-	-	-
V-AUX	-	-	-
VCR	-	-	-


1. Press and hold CODE SET (Throughout entire process).
2. With CODE SET depressed, press and release an input selector button to select the component you want to set up (i.e CD, MD/CD-R, TUNER, DVD, D-TV/CBL, VCR, V-AUX).

Note: for programming TV mode use "D-TV/CBL" mode key.

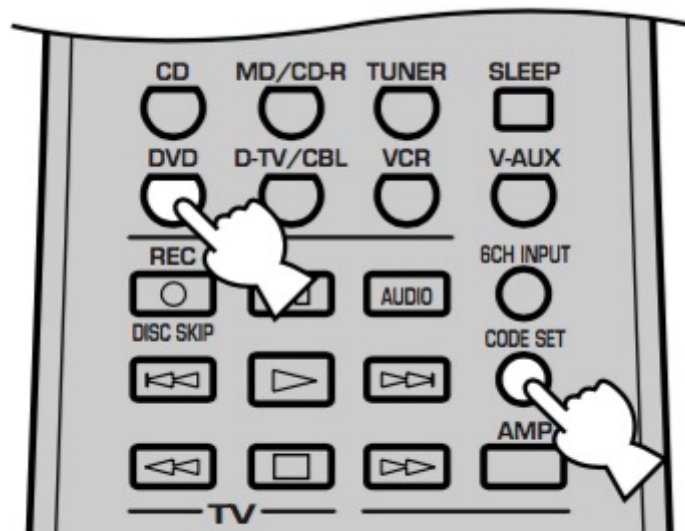

3. With CODE SET still depressed, use the numeric buttons to enter the 3-digit code of your component's manufacturer.
  - Refer to CODE LIST at end of this manual.

 - To reset the code, enter the factory-set code for each component shown in the above table.

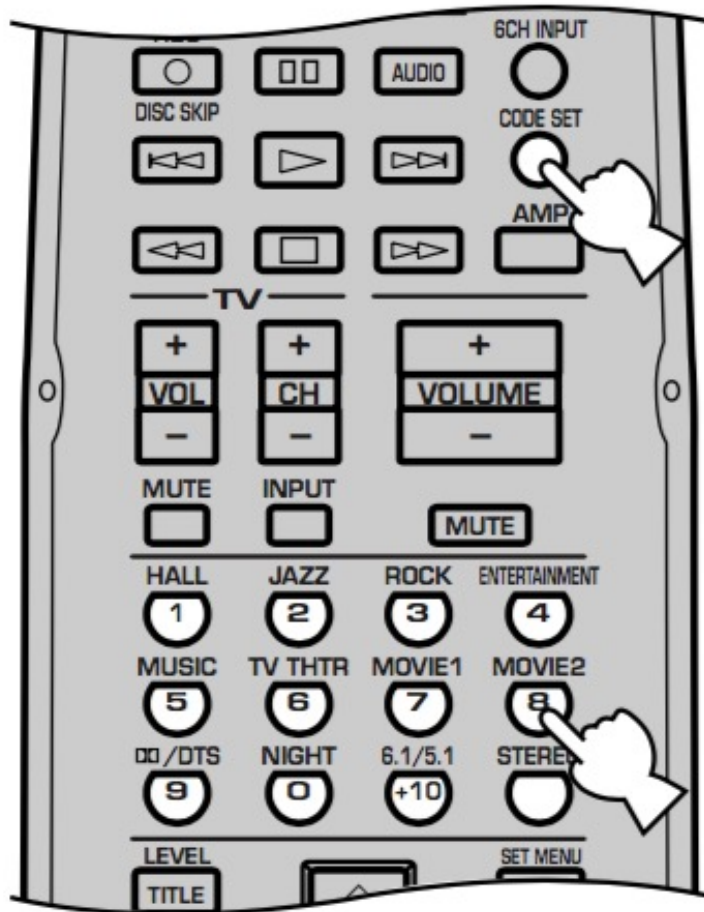

- If the manufacturer of your component has more than one code, try each of them until you find the correct one.
- You can only assign one manufacturer code to each input selector button.

FOR SUPPORT: [www.Anderic.com](http://www.Anderic.com)



## CODE LIST

### TV (program under D-TV/CBL mode)

Yamaha 299 292  
Admiral 292 293  
Aiwa 294 276 283 284  
Akai 295 296  
Alba 296  
AOC 297  
Bell&Howell 292  
Bestar 298  
Blaupunkt 229 222  
Blue sky 298  
Brandt 223  
Brocsonic 297  
Bush 296  
Clatronic 298  
Craig 224  
Croslex 225  
Curtis Mathis 297 226  
Daewoo 297 298 224 227 228  
Daytron 239  
Dual 298  
Emerson 297 224 239 232  
Ferguson 223 265 266  
First line 298  
Funai 277 278  
Fisher 295 233  
Fraba 298  
GE 293 297 234 235 236  
LG/Goldstar 297 298 239 237  
Goodmans 296 298 223  
Grundig 229 238 249  
Hitachi 297 239 242 243 285  
ICE 296  
Irradio 296  
Itt/Nokia 244 245  
JC Penny 293 297 234 237 JVC 296 246 247  
286  
Kendo 298 KTV 297 239  
Loewe 298 248  
LXI 293 297 225 226 233  
Magnavox 297 225 239  
Matsui 295  
Mitsubishi 299 297 259 287 NEC 297 252 282  
Nokia 244 245  
Nokia Oceanic 245  
Nordmende 265 266  
Onwa 296  
Panasonic 234 235 236 253 288 211  
Philco 297 225 239  
Philips 225  
Pioneer 226 235 254 255 268  
Portland 297 256  
Quasar 234 235

Radio Shack 299 293 297  
RCA 293 297 234 256 257 258  
SABA 223 269 265 266  
Samsung 297 239 248 262 275  
Sanyo 295 233 279 272 273 274 212  
Schneider 296  
Scott 297  
Sharp 292 239 232 213  
Siemens 229  
Signature 292  
Sony 263 214  
Sylvania 297 225  
Telefunken 269 264 265 266  
Thomson 223 266  
Toshiba 292 226 267 215  
Videch 297 242  
Wards 297 239 232

### VCR

Yamaha 399 392 393 394  
Admiral 395  
Aiwa 396 397 398 329  
Akai 322 323 324  
Audio Dynamic 392 394  
Bell&Howell 393  
Blaupunkt 325 326  
Brocsonic 327  
Bush 322  
Canon 325 328  
CGM 396 332  
Citizen 396  
Craig 396  
Curtis Mathis 397 328 333  
Daewoo 328 334 335  
DBX 392 394  
Dimensia 333  
Emerson 327 334  
Fisher 393 336  
Funai 397  
GE 328 333 387  
LG/Goldstar 396 388  
Goodmans 334 337  
Grundig 332 338  
Hitachi 325 333 349 342 343  
Instant Replay 325 328  
Itt/Nokia 393  
JC Penny 392 393 394 328 333 349  
JVC 392 394 344 345 346 347  
Kendo 396  
Kenwood 392 394 396  
Loewe 396 337  
Luxor 395  
LXI 393 396 397 336 349  
Magnavox 325 326 328  
Marantz 392 394

Marta 396  
Matsui 396  
Memorex 328 336  
Minolta 333 349  
Mitsubishi 399 344 348 359 352 353  
Multitech 397 348 354  
NEC 392 394 344 383  
Nokia 393 395  
Nokia Oceanic 395  
Okano 323  
Olympic 325 328  
Orion 327  
Panasonic 325 328 355 378 384 385 386  
Pentax 333 349  
Philco 325 328  
Philips 325 326 328 337 356 357  
Phonola 337  
Pioneer 325  
Quasar 325 328  
RCA/Proscan 325 326 328 333 335 349 358 369  
Realistic 393 397 328 336 359 362  
Samsung 354 358 363 364 365 366  
Sansui 394  
Sanyo 393 336 367  
Schneider 337  
Scott 399 335 336 348 359 352 354 358  
Seleco 322  
Sharp 395 362 382  
Siemens 393  
Signature 2000 395 397  
Sony 368 379 372 373 374 375  
Sylvania 397 325 326 328  
Symphonic 397  
Tandberg 334  
Tashiro 396  
Tatung 392 394  
Teac 392 394 397  
Technics 325 328  
Telefunken 376 377  
Thorn 393 396  
Toshiba 335 369 389  
Universum 396 327 376  
W.WHouse 396  
Wards 395 396 336 362

### **DVD Player**

Yamaha 699 622 623 647  
Denon 623 624  
Funai 625  
Hitachi 626  
JVC 627  
Kenwood 628  
Mitsubishi 629  
Onkyo 632 633 634

Panasonic 623 635  
Philips 699 647  
Pioneer 636 637 638  
RCA 639  
Samsung 642  
Sharp 643  
Sony 644  
Toshiba 634  
LG/Goldstar 645  
Thomson 646

### **MD Recorder**

Yamaha 599

### **CD Player**

Yamaha 199

### **CD Recorder**

Yamaha 499