
















# Application List - Land Rover / Version 9.5.0

## Icons Legend

Existing Functionality    

Under Development 

Functionality does not apply 

ABS				
System	DTCs	Parameters	Actuators	Configurations
ABS (Range Rover 98 / Discovery I)				
ABS BOSCH DSC 5.7 (L322)				
<b>Configurations</b>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Steering angle calibration</i>				
ABS TEVES MK 20				
<b>Configurations</b>				
<i>Calibrate G Sensor</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
ABS TEVES MK 25				
ABS WABCO				
<b>Configurations</b>				
<i>Brake Bleeding</i>				
<i>ECU replacement</i>				
ABS WABCO SLABS (DISCOVERY II)				
<b>Configurations</b>				
<i>Brake Bleeding</i>				
<i>Calibrate</i>				
<i>Deflate System</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Suspension</i>				
<i>Transport Mode</i>				
VDM - SYSTEM_A_1				
ACTIVE CORNERING ENHANCEMENT				
System	DTCs	Parameters	Actuators	Configurations
ACE (Active Cornering Enhancement)				
<b>Configurations</b>				
<i>Bleeding</i>				
<i>Calibrate</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
AHCM - AUXILIARY HEATER CONTROL MODULE				
System	DTCs	Parameters	Actuators	Configurations
AHCM - SYSTEM_A_2				
AIRBAG (SRS)				
System	DTCs	Parameters	Actuators	Configurations
AIRBAG AUTOLIV AC4 (Freelander 1998 - 2000)				
<b>Configurations</b>				
<i>Driver's Airbag</i>				
<i>LH Pretensioner</i>				
<i>Passenger's Airbag</i>				
<i>RH Pretensioner</i>				

AIRBAG MRS 4 (L322)				
<b>Configurations</b>				
<i>Replace Electronic Control Unit (ECU)</i>				
AIRBAG SIEMENS SRE Smart AC4				
AIRBAG TRW (SPS)				
AIRBAG TRW (SRS)				
AIRBAG TRX GEN4-SRS				
<b>Configurations</b>				
<i>Driver's Airbag</i>				
<i>LH Pretensioner</i>				
<i>Passenger's Airbag</i>				
<i>RH Pretensioner</i>				
<i>VIN</i>				
RCM - SYSTEM_A_1				
<b>Configurations</b>				
<i>Seat cushion replacement</i>				
<b>ANTI-THEFT ALARM</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
ALARM AS10 MY97				
<b>Configurations</b>				
<i>Programming or Resynchronising Plip</i>				
BCU - SECURITY (L322)				
<b>Configurations</b>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Transport Mode</i>				
BCU VALEO - SECURITY (DISCOVERY II)				
<b>Configurations</b>				
<i>BCU Replacement</i>				
<i>Clear Transit Mode</i>				
<i>EKA Code</i>				
<i>EKA Display</i>				
<i>IP Replacement</i>				
<i>Odometer Reset</i>				
<i>Odometer Update</i>				
<i>Plip Code Display</i>				
<i>Plip Programming</i>				
<i>Plip Tests</i>				
<i>Set Transit Mode</i>				
BeCM - SECURITY (RANGE ROVER 98)				
CCU VT27 - SECURITY (FREELANDER)				
<b>Configurations</b>				
<i>EKA Display</i>				
<i>Hazard Alarm</i>				
<i>Mislock</i>				
<i>Overspeed alert</i>				
<i>Power Wash</i>				
<i>Program Wash</i>				
<i>Programming or Resynchronising Plip</i>				
<i>Single Point Entry</i>				
<i>Sound</i>				
<i>Tail One Shot</i>				
<i>Volumetric</i>				
<b>ARCM - DYNAMIC RESPONSE MODULE</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
ARCM - SYSTEM_A_1				
<b>ATCM - ALL TERRAIN CONTROL MODULE</b>				

System	DTCs	Parameters	Actuators	Configurations
ATCM - SYSTEM_A_1				
<b>AUDIO CONTROL MODULE</b>				
System	DTCs	Parameters	Actuators	Configurations
ACM - SYSTEM_A_1				
<b>AUTOMATIC GEARBOX</b>				
System	DTCs	Parameters	Actuators	Configurations
AUTOMATIC GEAR BOX (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Reset Adaptions</i>				
AUTOMATIC GEARBOX BOSCH GS8.87				
<i>Configurations</i>				
<i>Reset Auto-Adaptive Values</i>				
<i>VIN</i>				
AUTOMATIC GEARBOX ZF ((New Range Rover 95 MY)				
AUTOMATIC GEARBOX ZF ((New Range Rover 98 MY)				
JATCO AUTOMATIC GEARBOX				
TCM - SYSTEM_A_4				
<b>CCM - SPEED CONTROL MODULE</b>				
System	DTCs	Parameters	Actuators	Configurations
CCM - SYSTEM_A_1				
<b>CLIMATRONIC CONTROL</b>				
System	DTCs	Parameters	Actuators	Configurations
AIR CONDITIONING (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
CLIMATRONIC (P38)				
<i>Configurations</i>				
<i>Replace Control Unit</i>				
<i>Servo Self-Tune Procedure</i>				
HVAC - SYSTEM_A_1				
<b>DSP</b>				
System	DTCs	Parameters	Actuators	Configurations
DSP (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<b>ELECTRIC MIRRORS</b>				
System	DTCs	Parameters	Actuators	Configurations
BCU - MIRRORS (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
BeCM - ELECTRIC MIRRORS (RANGE ROVER 98)				
<b>ELECTRIC SEATS</b>				
System	DTCs	Parameters	Actuators	Configurations
BeCM - ELECTRIC SEATS (RANGE ROVER 98)				
SEAT MEMORY (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<b>ELECTRIC WINDOW WINDER</b>				
System	DTCs	Parameters	Actuators	Configurations
BCU - WINDOWS AND SUNROOF (L322)				
<i>Configurations</i>				
<i>Initialise Sunroof</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
BCU VALEO - WINDOWS AND SUNROOF (DISCOVERY II)				
BeCM - ELECTRIC WINDOWS (RANGE ROVER 98)				
<b>ELECTRONIC DASHBOARD</b>				

System	DTCs	Parameters	Actuators	Configurations
BCU VALEO - GAUGES (DISCOVERY II)				
<i>Configurations</i>				
<i>Odometer Update</i>				
BeCM - INSTRUMENT PACK (RANGE ROVER 98)				
<i>Configurations</i>				
<i>EMR Reset</i>				
<i>Odometer Update</i>				
IPC - SYSTEM_A_1 HIGH LINE				
<i>Configurations</i>				
<i>Reset Service Interval</i>				
IPC - SYSTEM_A_1 LOW LINE				
<i>Configurations</i>				
<i>Reset Service Interval</i>				
NSI INSTRUMENT PACK				
<i>Configurations</i>				
<i>ABS 0</i>				
<i>ABS 1</i>				
<i>Air Conditioning</i>				
<i>AIRBAG (SRS)</i>				
<i>Airblast Cooler</i>				
<i>Bodywork</i>				
<i>CCU VT27</i>				
<i>Cruise Control</i>				
<i>Daytime Running Lights</i>				
<i>Driving</i>				
<i>Electric Tail Window</i>				
<i>Electric Windows</i>				
<i>Engine</i>				
<i>Engine Size</i>				
<i>Engine Type</i>				
<i>EOBD</i>				
<i>Facia Dimmer</i>				
<i>Folding Mirrors</i>				
<i>Fuel Burning Heater</i>				
<i>Headlamp Levelling</i>				
<i>Heated Front Screen</i>				
<i>Heated Front Seats</i>				
<i>Hill Descent Control Warning</i>				
<i>Immobiliser</i>				
<i>Immobiliser</i>				
<i>Instrument Panel</i>				
<i>Japan Autobox</i>				
<i>Key Interlock</i>				
<i>Market</i>				
<i>NAS Ambient Air Temperature (AAT) Information</i>				
<i>NAS CANADA Outside Air Temperature Information</i>				
<i>Overspeed alert</i>				
<i>Petrol</i>				
<i>PTC Heater</i>				
<i>Radio</i>				
<i>Reconfigure All ECU 's</i>				
<i>Remote Lock Only</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Seat Belt Alarm</i>				

*Seatbelt Indicator*

*SPE*

*Sunroof*

*Swiss Alarm*

*Thrifed Catalyst*

*Transit Mode*

*Transmission*

*Tune Type*

*Vehicle Model*

*Volumetric Sensors*

VDO INSTRUMENT PACK (L322)



**Configurations**

*ABS*

*Air Conditioning*

*Air Suspension*

*AIRBAG (SRS)*

*Auto Dim Mirrors*

*AutoLights*

*Battery Cutoff Switch*

*Body Computer*

*Bordmonitor*

*CD Autochanger*

*Cold Country*

*Cruise Control*

*Daytime Running Lights*

*Diesel Ebox Fan*

*DSP*

*DSP*

*Electric Front Seats*

*EXTERIOR LIGHTS*

*Folding Mirrors*

*Front Crosslink Valve*

*FUEL BURNING HEATER*

*Fuel Type*

*GM5 Gearbox*

*Headlamp*

*Headlamp Washer*

*Heated Front Seats*

*Heated Rear Seats*

*Heated Steering Wheel*

*Homelink*

*Hot Climate*

*Immobiliser*

*Infrared Glass*

*Infra-Red Transmitter*

*Instrument Pack ECU*

*Japan ID*

*Key Interlock*

*Line Air Conditioning*

*LWR ECU*

*Market*

*Memory Front Seats*

*Memory Mirrors*

Memory Seat  
 Memory Steering Column  
 MIL Disable  
 Multifunction Steering Wheel  
 Navigation  
 Navigation  
 Pack  
 Pack Language  
 Parking Aid  
 Parking Aid  
 Petrol  
 Radio  
 Rain Sensor  
 Reconfigure All ECU's  
 Replace Electronic Control Unit (ECU)  
 Seat Belt Alarm  
 Spare Wheel  
 Steering angle  
 STEERING LOCK  
 Sunroof  
 Tawball  
 TELEPHONE  
 Tilt Volumetric Sensor  
 TV Module  
 Tyre Monitor  
 Tyre Pressure Monitoring  
 US Spec Radio  
 VIDEO  
 Voice Input  
 Xenon Lights

**ELECTRONIC SUSPENSION (EAS)**

System	DTCs	Parameters	Actuators	Configurations
AIR SUSPENSION (L322)				
<b>Configurations</b>				
Production Mode				
Replace Electronic Control Unit (ECU)				
Transport Mode				
AIR SUSPENSION (Range Rover 1995 - 1998)				
<b>Configurations</b>				
Access Height				
Calibrate				
Deflate System				
High Lock Mode				
High Profile				
Low Profile				
Lower Fully				
Rise Fully				
Standard Profile				
Transport Mode				
RLM - SYSTEM_A_1				

**ENGINE ELECTRONICS (PETROL/DIESEL)**

System	DTCs	Parameters	Actuators	Configurations
BOSCH EDC 1.3.1				
<b>Configurations</b>				
Immobilizer Code Learning				
BOSCH ME7.2 V8 (L322)				

**Configurations**

- Air Conditioning OFF in Drive or Reverse
- Air Conditioning OFF NOT in Drive or Reverse
- Air Conditioning ON in Drive or Reverse
- Air Conditioning ON NOT in Drive or Reverse
- DTML Test (NAS)
- Erase Driver Demand Fault
- Idle Speed Adjustment
- Immobilisation Learn
- Reset Adaptions
- VCC Test 1

BOSCH MOTRONIC M5.2.1



**Configurations**

- Immobilisation Learn (Discovery II)
- Immobilisation Learn (Range Rover)
- Reset Adaptions

DIESEL DDE 4.0



**Configurations**

- Immobilisation Learn

ELECTRONIC DIESEL CONTROL (L322)



**Configurations**

- Idle Speed Adjustment
- Immobilisation Learn

EMS 2000 SIEMENS



**Configurations**

- All Adaptions
- Dynamic Trim
- Idle Control
- Knock Sensor
- Mass Air Flow Sensor (MAF)
- Misfire
- Oxygen Sensor
- Stepper Reset
- Throttle Position

GEMS (LUCAS)



**Configurations**

- Replace Electronic Control Unit (ECU)
- Reset Closed Throttle Position
- RESET ECU
- Security Reprogram

MEMS 1.9



**Configurations**

- Immobilizer Code Learning

MEMS 3



**Configurations**

- Immobilisation Learn
- Reset All Adaptions to Defaults for New Engine
- Reset Closed Throttle Position
- Reset Flywheel Adaptions
- Reset Fuelling Adaptions
- Reset Idle Adaptions
- Set Service Ignition Offset

MEMS2J Thunder (TD 5)



**Configurations**

- Enter Injector Codes
- Enter Injectors Calibration Data
- Immobilizer Code Learning
- Security Reprogram
- Security Status

PCM - SYSTEM\_A\_2 NORMALLY ASPIRATED V6



PCM - SYSTEM\_A\_2 NORMALLY ASPIRATED V8



PCM - SYSTEM_A_2 SUPERCHARGED V8				
PCM - SYSTEM_A_3 V6DIESEL				
PCM - SYSTEM_A_7 V8DIESEL				
<b>EXTERIOR LIGHTS</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
BCU VALEO - LIGHTING (DISCOVERY II)				
BeCM - LIGHTING (RANGE ROVER 98)				
CCU VT27 - LIGHTING (FREELANDER)				
EXTERIOR LIGHTING (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
FLM - SYSTEM_A_1				
FLM - SYSTEM_A_2				
<b>FUEL BURNING HEATER</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
FUEL BURNING HEATER (FREELANDER)				
<i>Configurations</i>				
<i>Prime System</i>				
FUEL BURNING HEATER (L322)				
<i>Configurations</i>				
<i>Prime System</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<b>HEADLIGHT WIDENESS CONTROL</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
HEADLAMP LEVELLING (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<b>HEATED SCREENS</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
BCU VALEO - HEATED SCREENS (DISCOVERY II)				
CCU VT27 - HEATED REAR SCREEN (FREELANDER)				
<b>IMMOBILIZER</b>				
<b>System</b>	<b>DTCs</b>	<b>Parameters</b>	<b>Actuators</b>	<b>Configurations</b>
IMMOBILIZER EWS3 (FREELANDER)				
<i>Configurations</i>				
<i>Transponder-Key 1 Status</i>				
<i>Transponder-Key 1 Status</i>				
<i>Transponder-Key 10 Status</i>				
<i>Transponder-Key 10 Status</i>				
<i>Transponder-Key 2 Status</i>				
<i>Transponder-Key 2 Status</i>				
<i>Transponder-Key 3 Status</i>				
<i>Transponder-Key 3 Status</i>				
<i>Transponder-Key 4 Status</i>				
<i>Transponder-Key 4 Status</i>				
<i>Transponder-Key 5 Status</i>				
<i>Transponder-Key 5 Status</i>				
<i>Transponder-Key 6 Status</i>				
<i>Transponder-Key 6 Status</i>				
<i>Transponder-Key 7 Status</i>				
<i>Transponder-Key 7 Status</i>				
<i>Transponder-Key 8 Status</i>				
<i>Transponder-Key 8 Status</i>				
<i>Transponder-Key 9 Status</i>				
<i>Transponder-Key 9 Status</i>				
IMMOBILIZER EWS3 (L322)				
<i>Configurations</i>				
<i>Armoured Vehicle</i>				
<i>Auto Dim Mirrors</i>				
<i>AutoLights</i>				
<i>Battery Cutoff Switch</i>				
<i>Bordmonitor</i>				
<i>CD Autochanger</i>				
<i>Cold Country</i>				



*Cruise Control*  
*Daytime Running Lights*  
*Diesel Ebox Fan*  
  
*Driving*  
  
*DSP*  
  
*Electric Front Seats*  
  
*Engine*  
  
*Folding Mirrors*  
  
*Front Crosslink Valve*  
  
*Fuel Type*  
  
*GM5 Gearbox*  
  
*Headlamp Washer*  
  
*Heated Front Seats*  
  
*Heated Rear Seats*  
  
*Heated Steering Wheel*  
  
*Homelink*  
  
*Hot Climate*  
  
*Immobilisation Learn*  
  
*Infrared Glass*  
  
*Infra-Red Transmitter*  
  
*Japan ID*  
  
*Key Interlock*  
  
*Line Air Conditioning*  
  
*LWR ECU*  
  
*Market*  
  
*Market Programming*  
  
*Memory Front Seats*  
  
*Memory Mirrors*  
  
*Memory Steering Column*  
  
*MIL Disable*  
  
*Multifunction Steering Wheel*  
  
*Navigation*  
  
*Pack*  
  
*Pack Language*  
  
*Parking Aid*  
  
*Petrol*  
  
*Radio*  
  
*Rain Sensor*  
  
*Replace Electronic Control Unit (ECU)*  
  
*Seat Belt Alarm*  
  
*Sound*  
  
*Spare Wheel*  
  
*Sunroof*  
  
*Tawball*  
  
*Telephone*  
  
*Tilt Volumetric Sensor*  
  
*Transponder-Key 1 Status*  
*Transponder-Key 1 Status*  
*Transponder-Key 10 Status*  
*Transponder-Key 10 Status*  
*Transponder-Key 2 Status*  
*Transponder-Key 2 Status*  
*Transponder-Key 3 Status*  
*Transponder-Key 3 Status*  
*Transponder-Key 4 Status*  
*Transponder-Key 4 Status*  
*Transponder-Key 5 Status*  
*Transponder-Key 5 Status*  
*Transponder-Key 6 Status*  
*Transponder-Key 6 Status*  
*Transponder-Key 7 Status*

Transponder-Key 7 Status  
 Transponder-Key 8 Status  
 Transponder-Key 8 Status  
 Transponder-Key 9 Status  
 Transponder-Key 9 Status  
 TV Module  
 Type Air Suspension  
 Tyre Monitor  
 US Spec Radio  
 Voice Input  
 Wheels  
 Xenon Lights

SAWDOC IMMOBILIZER



INTERCONNECTION UNIT

System

DTCs

Parameters

Actuators

Configurations

BCM - SYSTEM\_A\_1



Configurations

Sliding roof module initialisation.  
 Third button configuration  
 Third button configuration (L320)

BCU VALEO



Configurations

Alarm  
 Alarm Disarm  
 Alarm Tamper  
 Bathrobe  
 Courtesy Lamp  
 Deadlocking  
 DRL  
 EKA Code  
 Front Fog Lamp  
 Hazard Warning Light  
 HF Screens  
 Immobiliser  
 Low Battery  
 Market  
 Mislock  
 Passive  
 Sound  
 Speed Locking  
 Unlocking  
 Volumetric  
 Wash / Wipe

BeCM (RANGE ROVER 98)



Configurations

BeCM Initialization  
 Outstations Communications Test  
 Read / Change Configuration

INTERIOR LIGHTS

System

DTCs

Parameters

Actuators

Configurations

BCU - INTERIOR LIGHTS (L322)



Configurations

Replace Electronic Control Unit (ECU)

LEFT HEADLIGHT

System

DTCs

Parameters

Actuators

Configurations

LEFT XENON HEADLIGHT (L322)









Configurations

Replace Electronic Control Unit (ECU)

MULTI INFORMATION DISPLAY				
System	DTCs	Parameters	Actuators	Configurations
MULTI INFORMATION DISPLAY (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
MULTIFUNCTION DISPLAY				
System	DTCs	Parameters	Actuators	Configurations
MULTIFUNCTION DISPLAY (L322)				
<i>Configurations</i>				
<i>Autotest</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
NAVIGATION				
System	DTCs	Parameters	Actuators	Configurations
JAPANESE NAVIGATION (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
NAVIGATION (L322)				
<i>Configurations</i>				
<i>Autotest</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
PARKING ASSISTANCE				
System	DTCs	Parameters	Actuators	Configurations
PAM - SYSTEM_A_5				
PARKING AID (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
PARKING BRAKE				
System	DTCs	Parameters	Actuators	Configurations
PBM - SYSTEM_A_2				
POWER STEERING				
System	DTCs	Parameters	Actuators	Configurations
BCU - POWER STEERING (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
RADIO				
System	DTCs	Parameters	Actuators	Configurations
RADIO (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
RAIN / BRIGHTNESS SENSOR				
System	DTCs	Parameters	Actuators	Configurations
RAIN SENSOR (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Reset Adaptions</i>				
RDCM - REAR DIFFERENTIAL CONTROL MODULE				
System	DTCs	Parameters	Actuators	Configurations
RDCM - SYSTEM_A_1				
RIGHT HEADLIGHT				
System	DTCs	Parameters	Actuators	Configurations
RIGHT XENON HEADLIGHT (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
SPEECH RECOGNITION				
System	DTCs	Parameters	Actuators	Configurations
SPEECH RECOGNITION (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				

STEERING ANGLE SENSOR				
System	DTCs	Parameters	Actuators	Configurations
SASM - SYSTEM_A_1				
STEERING ANGLE SENSOR (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
STEERING LOCK				
System	DTCs	Parameters	Actuators	Configurations
STEERING LOCK (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
SWITCH MODULE AT THE STEERING WHEEL				
System	DTCs	Parameters	Actuators	Configurations
MULTIFUNCTION STEERING WHEEL ECU (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
TAIL DOOR				
System	DTCs	Parameters	Actuators	Configurations
CCU VT27 - TAIL DOOR (FREELANDER)				
TELEPHONE				
System	DTCs	Parameters	Actuators	Configurations
TELEPHONE (L322)				
<i>Configurations</i>				
<i>Deregister</i>				
<i>Language</i>				
<i>Register</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Reset</i>				
TIRE PRESSURE CONTROL				
System	DTCs	Parameters	Actuators	Configurations
TPM - SYSTEM_A_2				
TYRE PRESSURE MONITOR (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
TRANSFER GEARBOX				
System	DTCs	Parameters	Actuators	Configurations
BCU VALEO - TRANSMISSION (DISCOVERY II)				
TCCM - SYSTEM_A_1				
TRANSFER GEARBOX (NEW RANGE ROVER)				
<i>Configurations</i>				
<i>Calibrate</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
VIDEO				
System	DTCs	Parameters	Actuators	Configurations
VIDEO MODULE (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				
<i>Test video</i>				
WARNINGS & SOUNDERS				
System	DTCs	Parameters	Actuators	Configurations
BCU VALEO - WARNINGS & SOUNDERS (DISCOVERY II)				
CCU VT27 - WARNING AND SOUNDER (FREELANDER)				
WASHERS & WIPERS				
System	DTCs	Parameters	Actuators	Configurations
BCU - WASH AND WIPE (L322)				
<i>Configurations</i>				
<i>Replace Electronic Control Unit (ECU)</i>				

BCU VALEO - WASH WIPE (DISCOVERY II)				
BeCM - WASHER AND WIPERS (RANGE ROVER 98)				
CCU VT27 - WASH WIPE (FREELANDER)	