


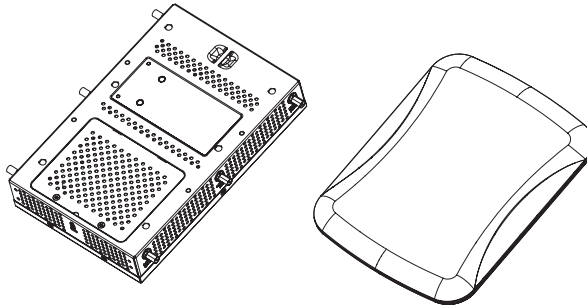

Brocade Mobility 650 Access Point


Installation Guide

Supporting software release 4.3.0.0 and later



BROCADE

53-1001934-01

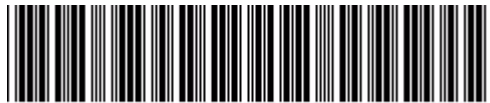

5 3 - 1 0 0 1 9 3 4 - 0 1

Copyright © 2010 Brocade Communications Systems, Inc. All Rights Reserved.

Brocade, the B-wing symbol, BigIron, DCX, Fabric OS, Fastron, IronPoint, IronShield, IronView, IronWare, JetCore, NetIron, SecureIron, ServerIron, StorageX, and TurboIron are registered trademarks, and DCFM, Extraordinary Networks, and SAN Health are trademarks of Brocade Communications Systems, Inc., in the United States and/or in other countries. All other brands, products, or service names are or may be trademarks or service marks of, and are used to identify, products or services of their respective owners.

Notice: This document is for informational purposes only and does not set forth any warranty, expressed or implied, concerning any equipment, equipment feature, or service offered or to be offered by Brocade. Brocade reserves the right to make changes to this document at any time, without notice, and assumes no responsibility for its use. This informational document describes features that may not be currently available. Contact a Brocade sales office for information on feature and product availability. Export of technical data contained in this document may require an export license from the United States government.

The authors and Brocade Communications Systems, Inc. shall have no liability or responsibility to any person or entity with respect to any loss, cost, liability, or damages arising from the information contained in this book or the computer programs that accompany it.

Brocade Communications Systems, Incorporated

Corporate and Latin American Headquarters

Brocade Communications Systems, Inc.
130 Holger Way
San Jose, CA 95134
Tel: 1-408-333-8000
Fax: 1-408-333-8101
E-mail: info@brocade.com

Asia-Pacific Headquarters

Brocade Communications Systems China HK, Ltd.
No. 1 Guanghua Road
Chao Yang District
Units 2718 and 2818
Beijing 100020, China
Tel: +8610 6588 8888
Fax: +8610 6588 9999
E-mail: china-info@brocade.com

European Headquarters

Brocade Communications Switzerland Sàrl
Centre Swissair
Tour B - 4ème étage
29, Route de l'Aéroport
Case Postale 105
CH-1215 Genève 15
Switzerland
Tel: +41 22 799 5640
Fax: +41 22 799 5641
E-mail: emea-info@brocade.com

Asia-Pacific Headquarters

Brocade Communications Systems Co., Ltd. (Shenzhen WFOE)
Citic Plaza
No. 233 Tian He Road North
Unit 1308 - 13th Floor
Guangzhou, China
Tel: +8620 3891 2000
Fax: +8620 3891 2111
E-mail: china-info@brocade.com

Document History

Title	Publication number	Summary of changes	Date
<i>Brocade Mobility 650 Access Point Installation Guide</i>	53-1001934-01	New document	July 2010

1 Introduction	1
Warnings	1
Site preparation	1
Brocade Mobility 650 package contents	2
External antenna model package contents	2
Integrated antenna model package contents	2
Features	2
2 Hardware Installation	5
Installation instructions	5
Precautions	6
Access point placement	6
Integrated antenna model wall mount instructions	6
Wall mount hardware	7
Wall mount procedure	8
Integrated antenna model suspended ceiling T-bar mount instructions	9
Suspended ceiling mount procedure	10
External antenna model wall mount instructions	11
Wall mount hardware	11
Wall mount procedure	12
External antenna model suspended ceiling tile (plenum) mount instructions	13
Suspended ceiling mount hardware	14
Ceiling mount procedure	14
Brocade Mobility 650 external antenna model antenna options	15
LED indicators	16
3 Specifications	17
Brocade Mobility 650 external antenna model electrical characteristics	17
Brocade Mobility 650 external antenna model physical characteristics	17
Brocade Mobility 650 integrated antenna model electrical characteristics	18
Brocade Mobility 650 integrated antenna model physical characteristics	18
Radio characteristics	19
Console cable	20

4 Regulatory Compliance	21
Regulatory overview	21
Wireless device country approvals	21
Country selection – note for AP & wireless controller	22
Frequency of operation – FCC and IC	22
Health and safety recommendations	23
Warnings for the use of wireless devices	23
Potentially hazardous atmospheres – fixed installations	23
Safety in hospitals	23
RF exposure guidelines	24
Safety information	24
International	24
EU	24
US and Canada	25
Power supply	25
Radio frequency interference requirements—FCC	25
Radio frequency interference requirements – Canada	26
Radio transmitters	26
CE Marking and European Economic Area (EEA)	27
Statement of Compliance	27
TURKISH WEEE Statement of Compliance	27
Japan (VCCI) - voluntary control council for interference Class B ITE	27
Korea warning statement for Class B ITE	28
Other countries	28
Australia	28
Brazil	28
Chile	29
Mexico	29
Taiwan	29
Korea	30
5 Waste Electrical and Electronic Equipment (WEEE)	31

About This Document

In this chapter

- Audience i
- Supported hardware and software i
- Document conventions ii
- Contacting Brocade ii
- Warranty coverage iii

Audience

This document is designed for system administrators with a working knowledge of Layer 2 and Layer 3 switching and routing.

If you are using a Brocade Layer 3 Switch, you should be familiar with the following protocols if applicable to your network – IP, RIP, OSPF, BGP, ISIS, IGMP, PIM, DVMRP, and VRRP.

Supported hardware and software

The following hardware platforms are supported by this release of this guide:

- Brocade Mobility 650 Access Point

The following software versions are supported by this release of this guide:

- Software version 4.3.0.0 and later

Document conventions

This section describes text formatting conventions and important notice formats used in this document.

Notes, cautions, and warnings

The following notices and statements are used in this manual. They are listed below in order of increasing severity of potential hazards.

NOTE

A note provides a tip, guidance or advice, emphasizes important information, or provides a reference to related information.



CAUTION

A Caution statement alerts you to situations that can be potentially hazardous to you or cause damage to hardware, firmware, software, or data.



DANGER

A Danger statement indicates conditions or situations that can be potentially lethal or extremely hazardous to you. Safety labels are also attached directly to products to warn of these conditions or situations.

Contacting Brocade

When contacting Brocade support, please provide the following information:

- Serial number of the unit
- Model number or product name
- Software version

Customer Support Web Site

Brocade Support Central Web site, located at www.brocade.com/support provides information and online assistance including developer tools, software downloads, product manuals and online repair requests.

Downloads

<http://www.brocade.com/support/>

Manuals

<http://www.brocade.com/support/>

Because quality is our first concern at Brocade, we have made every effort to ensure the accuracy and completeness of this document. However, if you find an error or an omission, or you think that a topic needs further development, we want to hear from you. Forward your feedback to: documentation@brocade.com.

Provide the title and version number and as much detail as possible about your comment, including the topic heading and page number and your suggestions for improvement.

E-mail and telephone access

Go to <http://www.brocade.com/services-support/index.page> for email and telephone contact information.

Warranty coverage

Contact Brocade Communications Systems using any of the methods listed above for information about the standard and extended warranties.

Introduction

The Brocade Mobility 650 Access Point links wireless 802.11a/b/g/n devices to the controller, enabling growth of your wireless network with a cost-effective alternative to standard access points. The Brocade Mobility 650 provides two placement options: wall and ceiling. Wall mount slots fit onto two screws provided. Arrows on the case guide placement of the screws. For placement above a suspended ceiling, a safety wire tie point on the case provides for a loop of safety wire. The light pipe fits through a hole in the ceiling tile to provide a view of the unit's status lights.

The Brocade Mobility 650 receives all power and transfers data through the same CAT-5 or better Ethernet cable. There is no additional power supply required. An 802.3af Ethernet switch or power injector is required.

Warnings

- Read all installation instructions and site survey reports, and verify correct equipment installation before connecting the Brocade Mobility 650 Access Point.
- Remove jewelry and watches before installing this equipment.
- Verify that the unit is grounded before connecting it to the power source.
- Verify that any device connected to this unit is properly wired and grounded.
- Verify there is adequate ventilation around the device, and that ambient temperatures meet equipment operation specifications.

Site preparation

- Consult your site survey and network analysis reports to determine specific equipment placement, power drops, and so on.
- Assign installation responsibility to the appropriate personnel.
- Identify and document where all installed components are located.
- Ensure adequate, dust-free ventilation to all installed equipment.

1 Brocade Mobility 650 package contents

- Identify and prepare Ethernet and console port connections.
- Verify that cable lengths are within the maximum allowable distances for optimal signal transmission.

Brocade Mobility 650 package contents

The Brocade Mobility 650 Access Point comes in four configurations, two Integrated antenna models and two external antenna models. The contents of the package differ between the integrated antenna model and the external antenna model.

External antenna model package contents

- Brocade Mobility 650 Access Point with external antenna connectors (Plenum Rated)
- Two wall mount screws
- Two wall anchors
- Light pipe
- Badge for light pipe
- *Brocade Mobility 650 Access Point Installation Guide* (This Guide)

Integrated antenna model package contents

- Brocade Mobility 650 with integrated antennas
- Two wall mount screws
- Two wall anchors
- *Brocade Mobility 650 Access Point Installation Guide* (This Guide)

Features

- One RJ-45 connector
- LED indicators
- Safety wire tie point
- Slots for wall mounting

- Clips for mounting on a suspended ceiling T-bar
- Lock port for Kensington® style Security Lock

The Brocade Mobility 650 has one RJ-45 connector supporting an 10/100/1000 Ethernet port and requires 802.3af-compliant power from an external source.

NOTE

When operating in a Gigabit Ethernet environment CAT-5e or CAT-6 cable is required for Gigabit operation.

The Brocade Mobility 650 comes in both single and dual radio versions both supporting 802.11a/b/g/n.

The Brocade Mobility 650 Access Point contains runtime firmware which enables the unit to boot after either a power up or a watchdog reset. The runtime firmware on the access point and the firmware downloaded from the switch can be updated via the Ethernet interface from the Wireless Controller.

1 Brocade Mobility 650 package contents

Hardware Installation

Installation instructions

The Brocade Mobility 650 mounts either on a wall with wide-shoulder screws or on a suspended ceiling T-bar. This unit is not designed for mounting on a desk.

To prepare for installation, perform the following steps:

1. Match the model number on the purchase order with the model numbers in the packing list and on the case of the device shipped.
2. Verify that the contents of the box include the intended Brocade Mobility 650 Access Point and that the included hardware matches the package contents detailed in [“Brocade Mobility 650 package contents”](#) on page 2.

Part number	Description
BR-AP065060010	802.11a/b/g/n single radio integrated antenna configuration
BR-AP065066030	802.11a/b/g/n dual radio integrated antenna configuration
BR-AP065060020	802.11a/b/g/n single radio external antenna configuration
BR-AP065066040	802.11a/b/g/n dual radio external antenna configuration

3. Review site survey and network analysis reports to determine the location and mounting position for the Brocade Mobility 650 Access Point.
4. Connect a CAT-5 or better Ethernet cable to a compatible 802.3af power source and run the cable to the installation site. Ensure that there is sufficient slack on the cable to perform the installation steps.

NOTE

When operating in a Gigabit Ethernet environment CAT-5e or CAT-6 cable is required for Gigabit operation.

Precautions

Before installing a Brocade Mobility 650 Access Point, verify the following:

- Brocade recommends not to install the Brocade Mobility 650 in wet or dusty areas.
- Verify the environment has a continuous temperature range between 0° C to 50° C.

Access point placement

For optimal performance, install the access point away from transformers, heavy-duty motors, fluorescent lights, microwave ovens, refrigerators and other industrial equipment. Signal loss can occur when metal, concrete, walls or floors block transmission. Install the access point in an open area or add access points as needed to improve coverage.

Antenna coverage is analogous to lighting. Users might find an area lit from far away to be not bright enough. An area lit sharply might minimize coverage and create *dark areas*. Uniform antenna placement in an area (like even placement of a light bulb) provides even, efficient coverage.

Place the access point using the following guidelines:

- Install the access point at an ideal height of 10 feet from the ground.
- Orient the access point antennas vertically for best reception.

To maximize the access point's radio coverage area, Brocade recommends conducting a site survey to define and document radio interference obstacles before installing the access point.

Integrated antenna model wall mount instructions

This mounting requires hanging the Brocade Mobility 650 Access Point along its width or length using the two slots on the bottom of the unit. The Brocade Mobility 650 can be mounted onto any plaster, wood, or cement wall surface using the provided wall anchors when necessary. The illustration shows a lengthwise mount.

Wall mount hardware


- Two wide-shoulder Phillips pan head self-tapping screws
- Two wall anchors
- Security cable (optional)

NOTE

In the event that the original mounting screws are lost, the following screws can be used instead: (ANSI Standard) #6-18 X 0.875in. Type A or AB Self-Tapping Screw, or (ANSI Standard Metric) M3.5 X 0.6 X 20mm Type D Self-Tapping Screw.

2 Integrated antenna model wall mount instructions

Wall mount procedure

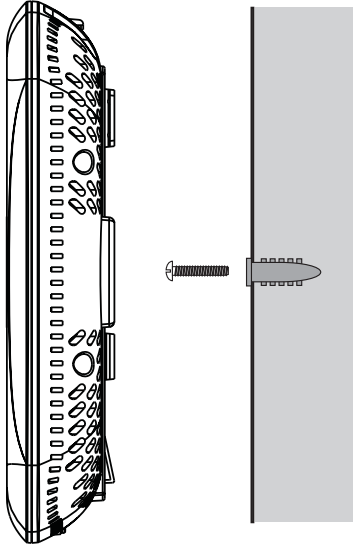

Integrated Antenna Wall Mount

1. Orient the case on the wall by its width or length.



CAUTION

To ensure proper operation of the Brocade Mobility 650 access point ensure that the access point is mounted in the correct orientation with the logo facing up.

2. Using the arrows on one edge of the case as guides, move the edge to the midline of the mounting area and mark points on the midline for the screws
3. At each point, drill a hole in the wall, insert an anchor, screw into the anchor the wall mounting screw and stop when there is 1mm between the screw head and the wall

NOTE

When pre-drilling a hole the recommended hole size is 2.8mm (0.11in.) if the screws are going directly into the wall and 6mm (0.23in.) if the provided wall anchors are being used.

NOTE

If required, install and attach a security cable to the unit's lock port.


4. Attach the Ethernet cable to the unit and to a switch with an 802.3af-compatible power source.
5. Place the middle of each of the case's mount slots over the screw heads.
6. Slide the case down along the mounting surface to hang the mount slots on the screw heads.
7. Verify the unit has power by observing that the LEDs are lit or flashing.

Integrated antenna model suspended ceiling T-bar mount instructions

Ceiling mount requires holding the Brocade Mobility 650 up against a T-bar of a suspended ceiling grid and twisting the case onto the T-bar.

2 Integrated antenna model suspended ceiling T-bar mount instructions

Suspended ceiling mount procedure

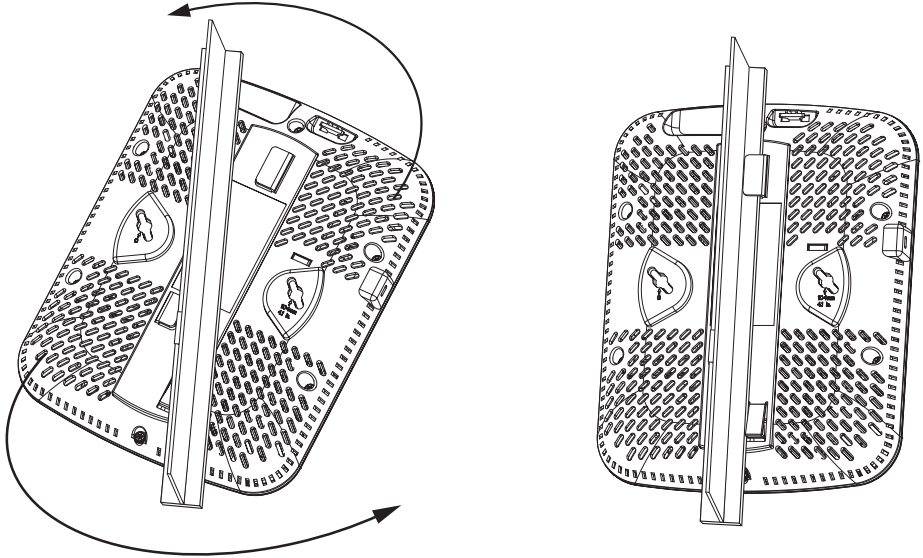

1. If required, install and attach a security cable to the unit's lock port.
2. Plug the Ethernet cable into the unit and to a switch with an 802.3af-compatible power source.
3. Face the bottom of the T-bar with the back of the case.
4. Orient the case by its length and the length of the T-bar.
5. Rotate the case in place 45 degrees clockwise, or about 10 o'clock.
6. Push the back of the case onto the bottom of the T-bar.
7. Rotate the case 45 degrees counter-clockwise. The clips click as they fasten to the T-bar.
8. Verify the unit has power by observing the LEDs.

External antenna model wall mount instructions

Wall mounting requires hanging the Brocade Mobility 650 along its width or length using the pair of slots on the bottom of the unit. Brocade Mobility 650 can be mounted onto any plaster, wood, or cement wall surface using the provided wall anchors when necessary. The illustration shows a lengthwise mount

Wall mount hardware


- Two wide-shoulder Phillips pan head self-tapping screws
- Two wall anchors
- Safety wire (recommended) and security cable (optional)

NOTE

In the event that the original mounting screws are lost, the following screws can be used instead: (ANSI Standard) #6-18 X 0.875in. Type A or AB Self-Tapping Screw, or (ANSI Standard Metric) M3.5 X 0.6 X 20mm Type D Self-Tapping Screw.

2 External antenna model wall mount instructions

Wall mount procedure

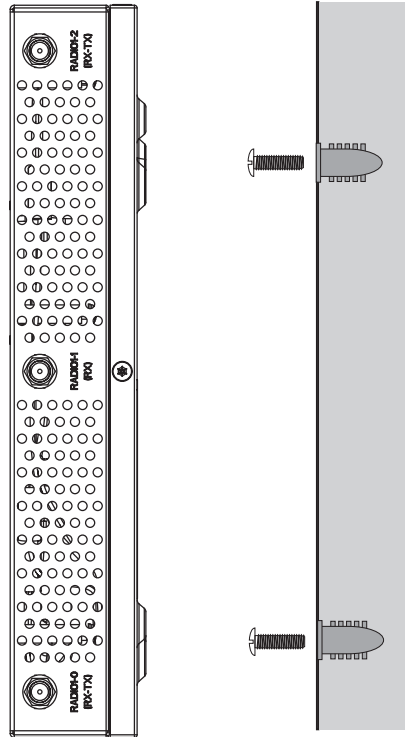

1. Orient the case on the wall by its width or length.
2. Using the arrows on one edge of the case as guides, move the edge to the midline of the mounting area and mark points on the midline for the screws.
3. At each point, drill a hole in the wall, insert an anchor, screw into the anchor the wall mounting screw and stop when there is 1mm between the screw head and the wall.

NOTE

When pre-drilling a hole the recommended hole size is 2.8mm (0.11in.) if the screws are going directly into the wall and 6mm (0.23in.) if the provided wall anchors are being used.

4. If required, loop a safety wire, between 1.5mm (.06in.) and 2.5mm (.10in.) in diameter, around the tie post and secure the loop.
5. If required, install and attach a security cable to the unit's lock port.
6. Place the large corner of each of the case's mount slots over the screw heads.
7. Slide the case down along the mounting surface to hang the mount slots on the screw heads.
8. Attach appropriate antennas to the connectors.
9. Attach the Ethernet cable to the unit and to a switch with an 802.3af compatible power source.
10. Verify the unit has power by observing that the LEDs are lit or flashing.

External antenna model suspended ceiling tile (plenum) mount instructions

Ceiling mount requires placing the Brocade Mobility 650 above a suspended ceiling and installing the provided light pipe for viewing the status lights of the unit.

NOTE

Notes or warnings about suspended ceiling mounts apply to all installations where the unit is placed on suspended ceiling tile. The case has a safety wire tie point for a standard safety wire.



CAUTION

Brocade does not recommend mounting the Brocade Mobility 650 directly to any suspended ceiling tile with a thickness less than 12.7mm (0.5in.) or a suspended ceiling tile with an unsupported span greater than 660mm (26in.). Brocade strongly recommends fitting the Brocade Mobility 650 with a safety wire suitable for the specific installation. The safety wire should be a standard ceiling suspension cable or equivalent steel wire between 1.59mm (.062in.) and 2.5mm (.10in.) in diameter.

2


External antenna model suspended ceiling tile (plenum) mount instructions

This placement requires installation of the provided light pipe for viewing the status lights of the unit.

Suspended ceiling mount hardware

- Light pipe
- Badge for light pipe
- Safety wire (recommended) and security cable (optional)

Ceiling mount procedure

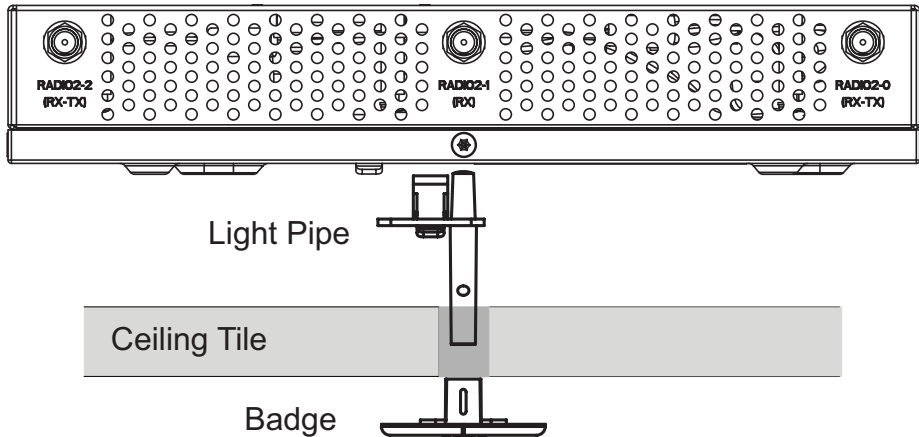

1. If possible, remove the ceiling tile from its frame and place it, finished side down, on a work surface.
2. If required, install a safety wire, between 1.5mm (.06in.) and 2.5mm (.10in.) in diameter, in the ceiling space.
3. If required, install and attach a security cable to the unit's lock port.
4. Mark a point on the upper or unfinished side of the tile.
5. Push the light pipe through the tile at the mark and remove the light pipe. If necessary, use a drill to make a hole in the tile.
6. Attach appropriate antennas to the connectors.
7. Snap the clips of the light pipe into the bottom of the case.

8. Fit the light pipe into hole in the tile from its unfinished side.
9. Attach any safety wire to the safety wire tie point or security cable to the unit's lock port.
10. Bring the tile into the ceiling space.
11. Plug the Ethernet cable into the unit and to a switch with an 802.3af-compatible power source.
12. Verify the unit has power by observing the LEDs.
13. Place the ceiling tile back in its frame.
14. Snap the badge onto the light pipe from the finished side of the tile.

Brocade Mobility 650 external antenna model antenna options

Brocade supports two antenna suites for Brocade Mobility 650 External Antenna models. One antenna suite supporting the 2.4 GHz band and another antenna suite supporting the 5 GHz band. Select an antenna model best suited to the intended operational environment of your access point.

On single radio versions, the R-SMA connectors can support both bands and should be connected to a R-SMA dual-band antenna or an appropriate single band antenna.

The 2.4 GHz antenna suite includes the following models:

Part Number	Antenna Type
ML-2499-HPA3-01R	Omni-Directional Antenna
ML-2499-SD3-01R	Patch Antenna
ML-2452-APA2-01	Dual-Band
ML-2452-PNA5-01R	Panel Antenna
ML-2452-PTA3M3-036	Omni-Directional Antenna

2 LED indicators

The 5 GHz antenna suite includes the following models:

Part Number	Antenna Type
ML-5299-HPA1-01R	Omni-Directional Antenna
ML-5299-PTA1-01R	Patch Antenna
ML-2452-APA2-01	Dual-Band
ML-2452-PNA5-01R	Panel Antenna
ML-2452-PTA3M3-036	Omni-Directional Antenna

For detailed specifications on the antennas available to the Mobility 650, refer to the *Enterprise Wireless LAN Antenna Specification Guide* available at <http://www.brocade.com/support/>.

LED indicators

Both the Integrated Antenna model and the External Antenna model have LED activity indicators on the front of the case for use with wall mount. With the External Antenna model unit mounted above a ceiling, LEDs are at the center of an oval badge on the ceiling; a light pipe enables viewing the back LEDs through the ceiling tile.

The LEDs provide a status display indicating error conditions, transmission, and network activity for the 5 GHz 802.11a/n (amber) radio or the 2.4 GHz 802.11b/g/n (green) radio.

Task	5 GHz Activity LED (Amber)	2.4 GHz Activity LED (Green)
Unadopted	Off	Blinking at 5Hz
Normal Operation	If this radio band is enabled: Blink at 5 second interval If this radio band is disabled: Off If there is activity on this band: Blink at a 1Hz	If this radio band is enabled: Blink at 5 second interval If this radio band is disabled: Off If there is activity on this band: Blink at a 1Hz
Firmware Update	On	Off
Locate AP Mode	Blink at 5Hz (Out of Phase with Activity LED)	Blink at 5Hz (Out of Phase with Activity LED)

Specifications

Brocade Mobility 650 external antenna model electrical characteristics

A Brocade Mobility 650 external antenna model access point has the following electrical characteristics:

Operating current & voltage	180ma- 270ma @ 48VDC
--	----------------------

Brocade Mobility 650 external antenna model physical characteristics

A Brocade Mobility 650 external antenna model access point has the following physical characteristics:

Dimensions	8.50 in. Depth x 5.5 in. Width x 1.5 in. Height 21.59 cm Depth x 13.97 cm Width x 3.81 cm Height
Housing	Metal
Weight	2.5 lbs / 1.13 kg
Operating temperature	32°F to 122°F/0°C to 50°C
Storage temperature	-40°F to 158°F/-40°C to 70°C
Operating humidity	5 to 95% Relative Humidity non-condensing
Storage humidity	85% Relative Humidity non-condensing
Operating altitude (max)	8,000 ft @ 28C
Storage altitude (max)	30,000 ft @ 12C
Electrostatic discharge	+/-15kV Air and +/-8kV Contact @ 50% Relative Humidity

Brocade Mobility 650 integrated antenna model electrical characteristics

A Brocade Mobility 650 Integrated model access point has the following electrical characteristics:

Operating Current & voltage	180ma- 270ma @ 48VDC
--	----------------------

Brocade Mobility 650 integrated antenna model physical characteristics

A Brocade Mobility 650 Integrated Antenna model access point has the following physical characteristics:

Dimensions	9.50 in. Depth x 7.5 in. Width x 1.9 in. Height 24.13 cm Depth x 19.05 cm Width x 4.83 cm Height
Housing	Plastic
Weight	2.0 lbs / 0.91 kg
Operating temperature	32 °F to 122 °F/0 °C to 50 °C
Storage temperature	-40 °F to 158 °F/-40 °C to 70 °C
Operating humidity	5 to 95% Relative Humidity non-condensing
Storage humidity	85% Relative Humidity non-condensing
Operating altitude (max)	8,000 ft @ 28C
Storage altitude (max)	30,000 ft @ 12C
Electrostatic discharge	+/-15kV Air and +/-8kV Contact @ 50% Relative Humidity

Radio characteristics


The Brocade Mobility 650 access points have the following radio characteristics:

Operating channels	All channels from 4920 MHz to 5825 MHz except channel 52 -64 Channels 1-13 (2412-2472 MHz) Channel 14 (2484 MHz) Japan only Actual operating frequencies depend on regulatory approval for the country of use.
Data rates supported	802.11g: 1,2,5,5,11,6,9,12,18,24,36,48, and 54Mbps 802.11a: 6,9,12,18,24,36,48, and 54Mbps 802.11n: MCS 0-15 up to 300Mbps
Wireless medium	Direct Sequence Spread Spectrum (DSSS), Orthogonal Frequency Division Multiplexing (OFDM) Spatial multiplexing (MIMO)
Network standards	802.11a, 802.11b, 802.11g, 802.3, 802.11n (Draft 2.0)
Maximum available transmit power	Maximum available conducted transmit power per chain: 2.4 GHz: 21dBm Maximum available conducted transmit power all chains: 2.4 GHz: 24dBm Maximum available conducted transmit power per chain: 5 GHz: 19dBm Maximum available conducted transmit power all chains: 5 GHz: 22dBm
Transmit power adjustment	1dB increments
Antenna configuration	2x3 MIMO (transmit on two and receive on all three antennas)

3 Console cable

Console cable

A console cable (pictured below) is used to connect the Brocade Brocade Mobility 650 access point 's serial port to an RS-232 (DB-9) serial port on a separate computer.

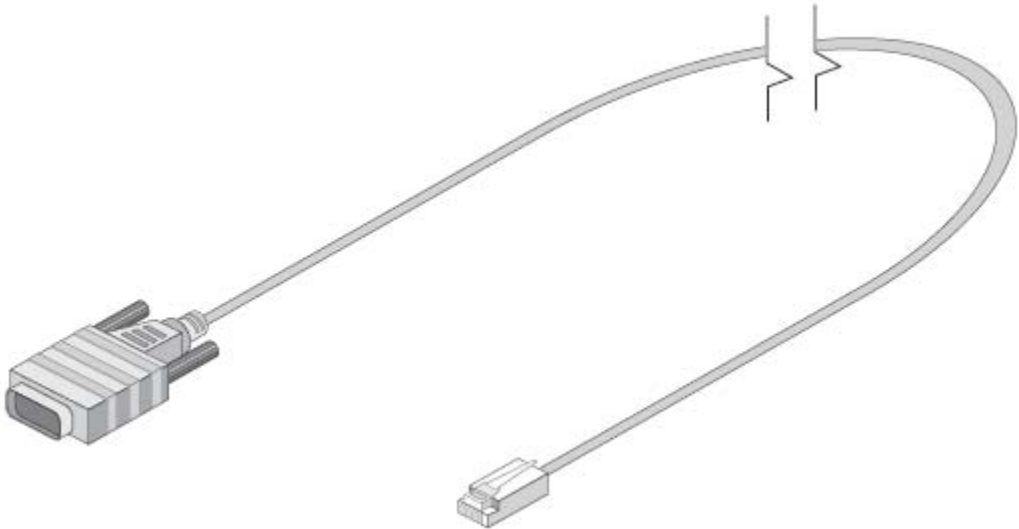

The pinout for the RJ-45 to DB9 cable is shown in the following table.

RJ-45	1	2	3	4,5	6	7	8
DB9	8	6	2	5	3	4	7

Regulatory Compliance

Regulatory overview

All Brocade devices are designed to be compliant with rules and regulations in locations they are sold and will be labeled as required. Any changes or modifications to Brocade equipment, not expressly approved by Brocade, could void the user's authority to operate the equipment.

Brocade access points must be professionally installed and configured so that the Radio Frequency Output Power will not exceed the maximum allowable limit for the country of operation.

Antennas: Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could cause damage and may violate regulations. Use of an unapproved antenna is illegal under FCC regulations subjecting the end user to fines and equipment seizure.

Radio modules

This access point contains approved radio module(s) MB82. These module(s) are identified below.

MB82 – a DFS Master WLAN 802.11 abgn MIMO 2x3 radio module.

Wireless device country approvals

Regulatory markings, subject to certification, are applied to the device signifying the radio(s) is/are approved for use in the following countries: United States, Canada, Japan, China, S. Korea, Australia, and Europe.

Please refer to the Symbol Declaration of Conformity (DoC) for details of other country markings. This is available at <http://www2.symbol.com/doc/>.

4 Wireless device country approvals

NOTE

Note: For 2.4GHz or 5GHz Products: Europe includes, Austria, Belgium, Bulgaria, Czech Republic, Cyprus, Denmark, Estonia, Finland, France, Germany, Greece, Hungary, Iceland, Ireland, Italy, Latvia, Liechtenstein, Lithuania, Luxembourg, Malta, Netherlands, Norway, Poland, Portugal, Romania, Slovak Republic, Slovenia, Spain, Sweden, Switzerland and the United Kingdom.

Operation of the device without regulatory approval is illegal.

Country selection – note for AP & wireless controller

Select only the country in which you are using the device. Any other selection will make the operation of this device illegal. The US version of the access point will only have US listed in the country selection table. The US version will be sold / used in the US protectorates: American Samoa, Guam, Puerto Rico, US Virgin Islands.

Frequency of operation – FCC and IC

5 GHz only

The use on UNII (Unlicensed National Information Infrastructure) Band 1 5150-5250 MHz and Band 3 5470 - 5725 MHz is restricted to indoor use only, any other use will make the operation of this device illegal.

Devices using the 5470 – 5725 MHz band shall not be capable of transmitting in the band 5600 - 5650 MHz in the US, this “Notched” band has been disabled in the US version of the access point.

The available channels for 802.11 b/g operation in the US are Channels 1 to 11. The range of channels is limited by firmware.

2.4 GHz only

The available channels for 802.11 b/g operation in the US are Channels 1 to 11. The range of channels is limited by firmware.

Health and safety recommendations

Warnings for the use of wireless devices

Please observe all warning notices with regard to the usage of wireless devices

Potentially hazardous atmospheres – fixed installations

You are reminded of the need to observe restrictions on the use of radio devices in fuel depots, chemical plants etc. and areas where the air contains chemicals or particles (such as grain, dust, or metal powders).



Safety in hospitals

Wireless devices transmit radio frequency energy and may affect medical electrical equipment. When installed adjacent to other equipment, it is advised to verify that the adjacent equipment is not adversely affected.

Pacemakers

Pacemaker manufacturers recommended that a minimum of 15cm (6 inches) be maintained between a handheld wireless device and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with independent research and recommendations by Wireless Technology Research.

Persons with Pacemakers:

- Should ALWAYS keep the device more than 15cm (6 inches) from their pacemaker when turned ON.
- Should not carry the device in a breast pocket.
- Should use the ear furthest from the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn OFF your device.

4 RF exposure guidelines

Other medical devices

Please consult your physician or the manufacturer of the medical device, to determine if the operation of your wireless product may interfere with the medical device.

RF exposure guidelines

Safety information

Reducing RF exposure—use properly

Only operate the device in accordance with the instructions supplied.

International

The device complies with internationally recognized standards covering human exposure to electromagnetic fields from radio devices. For information on “International” human exposure to electromagnetic fields refer to the Declaration of Conformity (DoC). Please refer to the *Declaration of Conformity* (DoC). This is available at <http://www2.symbol.com/doc/>.

EU

Remote and standalone antenna configurations

To comply with EU RF exposure requirements, antennas that are mounted externally at remote locations or operating near users at stand-alone desktop of similar configurations must operate with a minimum separation distance of 20 cm from all persons.

US and Canada

Co-located statement

To comply with FCC RF exposure compliance requirement, the antennas used for this transmitter must not be co-located or operating in conjunction with any other transmitter/antenna except those already approved in this filing.

Remote and standalone antenna configurations

To comply with FCC RF exposure requirements, antennas that are mounted externally at remote locations or operating near users at stand-alone desktop of similar configurations must operate with a minimum separation distance of 20 cm from all persons.

Power supply

This device is powered from a 802.3af compliant power source which is UL approved and certified by the appropriate agencies.

Radio frequency interference requirements—FCC



This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver

4 Radio frequency interference requirements – Canada

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Radio transmitters (Part 15)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Restricted Band 5.60 – 5.65 GHz

Radio frequency interference requirements – Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Radio transmitters

For RLAN Devices:


The use of 5 GHz RLAN's, for use in Canada, have the following restrictions:

- Restricted Band 5.60 – 5.65 GHz

This device complies with RSS 210 of Industry & Science Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Label Marking: The Term "IC:" before the radio certification only signifies that Industry Canada technical specifications were met.

CE Marking and European Economic Area (EEA)

 The use of 2.4 GHz RLAN's, for use through the EEA, have the following restrictions:

- Maximum radiated transmit power of 100 mW EIRP in the frequency range 2.400 -2.4835 GHz.
- France, outside usage is restricted to 2.4 – 2.454 GHz.
- Italy requires a user license for outside usage.

Statement of Compliance

Brocade hereby, declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. A Declaration of Conformity may be obtained from <http://www2.symbol.com/doc/>.

TURKISH WEEE Statement of Compliance

EEE Yönetmeliğine Uygundur

Japan (VCCI) - voluntary control council for interference Class B ITE

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。取扱説明書に従って正しい取り扱いをして下さい。

This is a Class B product based on the standard of the Voluntary Control Council for Interference from Information Technology Equipment (VCCI). If this is used near a radio or television receiver in a domestic environment, it may cause radio interference. Install and use the equipment according to the instruction manual.

4 Korea warning statement for Class B ITE

Korea warning statement for Class B ITE

기종별	사용자안내문
B급 기기 (가정용 방송통신기기)	이 기기는 가정용 (B급)으로 전자파적합등록을 한 기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.
Class B (Broadcasting Communication Device for Home Use)	This device obtained EMC registration mainly for home use (Class B) and may be used in all areas.

Other countries

Australia

Use of 5 GHz RLAN's in Australia is restricted in the following band 5.50 – 5.65 GHz.

Brazil

Regulatory declarations for AP-650 - BRAZIL

Note: The certification mark applied to the AP-650 is for Restrict Radiation Equipment. This equipment operates on a secondary basis and does not have the right for protection against harmful interference from other users including same equipment types. Also this equipment must not cause interference to systems operating on primary basis.

For more information consult the website <http://www.anatel.gov.br>

Declarações Regulamentares para AP-650 - Brasil

Nota: "A marca de certificação se aplica ao Transceptor, modelo AP-650. Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário."

Para maiores informações sobre ANATEL consulte o site: <http://www.anatel.gov.br>

Chile

"Este equipo cumple con la Resolución No 403 de 2008, de la Subsecretaria de telecomunicaciones, relativa a radiaciones electromagnéticas."

"This device complies with the Resolution Not 403 of 2008, of the Undersecretary of telecommunications, relating to electromagnetic radiation."

Mexico

Restrict Frequency Range to: 2.450 – 2.4835 GHz.

Taiwan

NOTICE!

According to: Administrative Regulations on Low Power Radio Waves Radiated Devices

Article 12

Without permission granted by the DGT, any company, enterprise, or user is not allowed to change frequency, enhance transmitting power or alter original characteristic as well as performance to an approved low power radio-frequency devices.

Article 14

The low power radio-frequency devices shall not influence aircraft security and interfere legal communications; If found, the user shall cease operating immediately until no interference is achieved.

The said legal communications means radio communications is operated in compliance with the Telecommunications Act.

4 Other countries

The low power radio-frequency devices must be susceptible with the interference from legal communications or ISM radio wave radiated devices.

臺灣

低功率電波輻射性電機管理辦法

第十二條

經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條

低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，改善至無干擾時方得繼續使用。

前項合法通信，指依電信規定作業之無線電通信。

低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Wireless device operate in the frequency band of 5.25-5.35 GHz, limited for Indoor use only.

在 5.25~5.35 赫頻帶內操作之無線資訊傳輸設備，限於室內使用。

Korea

For a radio equipment using 2400~2483.5MHz or 5725~5825MHz, the following two expression should be displayed:

1. “This radio equipment can be interfered during operation.”

당해 무선설비는 운용 중 전파혼신 가능성이 있음

2. “This radio equipment cannot provide a service relevant to the human life safety, as it can be crossed” through the user manual etc.

당해 무선설비 는전파혼 신 가능성이 있으므로 인명안전과 관련된 서비스는 할 수 없습니다

Waste Electrical and Electronic Equipment (WEEE) **5**

For information on WEEE, please go to:

<http://www.brocade.com/sites/dotcom/company/corporate-responsibility/corporate-citizenship/product-recycling/weee.page>.

5 Waste Electrical and Electronic Equipment (WEEE)

