

# HELLO!

Welcome to Veer.

We hope you enjoy your journeys as much as we enjoyed dreaming and building this cruiser.  
Let's get started!

Please review these instructions carefully prior to assembly and use and you will be on your way to a fun filled ride.

Happy Cruising!

## Table of Contents

1. Warnings & General Safety Information
2. Cleaning & General Maintenance
3. Overview
4. Veer Cruiser Assembly Guide
5. Veer Cruiser Operation
6. Limited Warranty



# **WARNING:**

## **NEVER LEAVE CHILDREN UNATTENDED. FAILURE TO FOLLOW THESE WARNINGS AND INSTRUCTIONS COULD RESULT IN SERIOUS INJURY OR DEATH:**

- TO PREVENT INJURY, CHILDREN MUST REMAIN SEATED WITH THEIR ARMS AND LEGS INSIDE THE VEER CRUISER WHILE RIDING.
- THIS CRUISER SEATS UP TO TWO PASSENGERS. EACH SEAT IS SUITABLE FROM BIRTH (WITH INFANT CAR SEAT ATTACHED) UP TO 55 LBS (25 KG) AND 45 IN (114 CM).
- MAXIMUM CARRYING CAPACITY OF EACH SIDE POCKET IS 2 LBS (.9 KG).
- MAXIMUM CUP HOLDER WEIGHT IS 2 LBS (.9 KG). EXCESSIVE WEIGHT MAY CAUSE A HAZARDOUS, UNSTABLE CONDITION TO EXIST. DO NOT PLACE HOT LIQUIDS IN HOLDER.
- TOTAL WEIGHT LOAD RECOMMENDED FOR THIS CRUISER IS 118 LBS (54 KG).
- UNIT MAY BECOME UNSTABLE IF MANUFACTURER'S RECOMMENDED LOAD IS EXCEEDED, OR IF PARCEL BAG OR ACCESSORY OTHER THAN THAT RECOMMENDED BY THE MANUFACTURER IS USED OR HUNG FROM THE UNIT.
- NEVER PARK VEER CRUISER ON A HILL WITH CHILDREN INSIDE.
- THE BRAKE MUST BE LOCKED WHILE TAKING THE CHILD OR CHILDREN IN OR OUT OF THE VEER CRUISER.
- ALWAYS MAKE SURE VEER CRUISER IS FULLY OPEN AND LOCKED BEFORE USE.
- VEER CRUISER SHOULD NEVER BE USED WHILE ASCENDING OR DESCENDING STAIRS, OR USING AN ESCALATOR.
- DO NOT MAKE ANY ALTERATIONS OR MODIFICATIONS TO THE VEER CRUISER WITH PRODUCTS NOT SUPPLIED BY THE MANUFACTURER, AS THIS MAY CAUSE INSTABILITY OR STRUCTURAL DAMAGE NOT COVERED UNDER WARRANTY.
- TO AVOID SERIOUS INJURY FROM FALLING OR SLIDING OUT, PASSENGERS MUST ALWAYS BE SEATED WHILE VEER IS IN USE, AND SHOULD ALWAYS USE COMPLETE 3-POINT HARNESS.
- DO NOT USE VEER CRUISER WITHOUT REAR WHEEL SAFETY FENDERS IN PLACE AND ALWAYS KEEP HANDS AWAY FROM MOVING WHEELS.
- ALWAYS KEEP FINGERS AWAY FROM MOVING PARTS WHEN FOLDING, UNFOLDING, OR ADJUSTING THE CRUISER TO PREVENT ENTRAPMENT OR PINCHING.
- DO NOT SIT OR STAND ON THE SIDE WALL PANELS OF THE CRUISER.
- DO NOT SIT OR STAND ON THE FOLDED SEAT BACKS OF THE CRUISER.
- CLIMB CURBS IN PULL MODE. DO NOT ATTEMPT TO PUSH ONTO CURBS.

**THIS PRODUCT IS DESIGNED AND MANUFACTURED TO COMPLY WITH ASTM F833 STANDARD CONSUMER SAFETY PERFORMANCE SPECIFICATION FOR CARRIAGES/BUGGIES AND IS JPMA CERTIFIED.**

### 2. Cleaning & General Maintenance

Store your VEER Cruiser in a location that is out of direct sunlight and environmental elements.

#### **Frame, seats, handle grips, fenders and wheels:**

Wipe with a damp cloth and a mild detergent and dry thoroughly. DO NOT use abrasives.

#### **Soft sided panels:**

Wipe with a damp cloth and a mild detergent and dry thoroughly. DO NOT use abrasives. Panels may also be removed for hand washing in cold water with mild detergent. Dry flat and away from direct sunlight before re-use or storage. DO NOT bleach, iron or dry clean.

#### **Snack tray and cup holders:**

Wash in a sink or with a hose, or wipe with a damp cloth and a mild detergent and dry thoroughly. DO NOT use abrasives.

#### **Harness straps:**

Remove and hand wash in cold water with mild detergent. Dry flat and away from direct sunlight before re-use or storage. DO NOT bleach, iron or dry clean.

- If the VEER Cruiser chassis parts have been exposed to salt water, we recommend that they be rinsed with fresh (tap) water as soon as possible to avoid corrosion.
- If your VEER Cruiser has been exposed to sand, use a soft brush to gently brush sand from Cruiser parts and cycle the components until the sand is ejected and the components cycle freely.
- If your Cruiser is in need of an all over wash, remove accessories and rinse with hose. Allow to completely air dry.
- NEVER use a power washer on your VEER Cruiser.

## Time for a Check-Up

- This VEER Cruiser requires routine user maintenance. Regularly check all connecting hardware (rivets, screws, etc.) for tightness and security. Inspect brake, wheels and tires and replace or repair as necessary.
- Check all safety devices, locks and harnesses for correct and secure operation. NEVER continue to use a product that is structurally unsound.
- Only VEER replacement parts should be used. It may be unsafe to use parts supplied by another manufacturer.
- Contact Customer Service with any repair or maintenance questions at 470-344-3200 or behappy@goveer.com.

### 3. Veer Cruiser Overview

**YOUR VEER HAS BEEN CRAFTED WITH THE FINEST WORKMANSHIP AND HIGHEST QUALITY MATERIALS. EVERY INNOVATIVE DETAIL WAS INTENTIONALLY DESIGNED TO GIVE YOU THE HIGHEST PERFORMANCE, SUPERIOR FUNCTIONALITY AND AN INCREDIBLE RIDE!**

01. High performance rubber handle grips for cushion and control
02. Telescoping handle bar mechanism
03. Removable snack and drink tray
04. One-hand seat fold down
05. Safety fenders
06. Rugged rear wheels
07. Accessory mounts
08. Accessory wells with plugs
09. Foot well and drain
10. Fabric side panels
11. Front swivel wheels
12. Removable cup holder
13. Aluminum frame
14. Handle lock
15. Foot brake
16. 3-point seat harness
17. Removable foot well insert
18. Side storage pockets



# LET'S GET STARTED

---

## 01. Installing Safety Fenders

There is a right and left side fender. They are coded “L” and “R” for ease of installation. Make sure tab at the bottom of the fender locks securely in open slot in rear axle mount.



Fig 1



Fig 2

## 02. Attaching Rear Wheels

Note: Fenders must be attached prior to installing rear wheels. Each fender is labeled L or R. Press button at center of wheel and slide into frame until a “click” is heard.



## 03. Removing Rear Wheels

Press button in center of wheel to release wheel. Slide wheel off.



## 04. Attaching Front Wheels

Slide front wheels onto frame until a “click” is heard.



## 05. Removing Front Wheels

Press button on top of wheel frame to release wheel and slide off.



## 06. Opening Cruiser Frame

First, raise the handle bar by pulling on the handle release. Fold each side panel up (fig 1) then fold front and rear seat backs up until they click into place (fig 2). Depress the foot well.



Fig 1



Fig 2

## 07. Closing Cruiser Frame

Lift release handle on the top of front and back seats.  
Lay seat backs down flat (fig 1). Fold each side panel down until flat (fig 2).



Fig 1



Fig 2

## 08. Installing Removable Cup Holders

Slide the cup holder bracket on to handle bar mount (fig 1) or any of the four accessory mounts located on seat backs.



## 09. Installing Removable Snack & Drink Tray

Tray must be centrally located on the side wall frame. Locate the pin under the frame of the right and left wall (fig 1) at the center of each wall. Rest tray above those pins and push sides of tray to clamp it in place (fig 2).



Fig 1



Fig 2

# OH! THE THINGS YOU CAN DO

---

## 01. Adjusting The Telescopic Handle

Release lock lever around telescoping handle and pull up to adjust handle height (fig 1). Close and lock lever at desired height.



Fig 1

## 02. Setting & Releasing Foot Brake

To set brake, gently depress brake pedal until it clicks (fig 1).  
To release brake, gently kick toe plate (fig 2).



Fig 1



Fig 2



Fig 1



Fig 2

### 03.

## Brake Adjustment

Inspect brake pin extension/retraction. Brake pin should be flush to wheel mount when unlocked and extend 8-11mm (0.3-0.4 inches) when brake pedal is in the locked position. If required, rotate brake adjuster on bottom of Cruiser near brake pin as required (fig 2).



Fig 1



Fig 2

### 04.

## Operating Restraint Buckles

To attach buckle, slide clips into center until you hear a “click”. To release buckle, press center button to disengage.



### 05.

## Operating On Push & Push-Along Modes

Release handle bar by wrapping fingers around both sides of release mechanism and pulling up (fig 1). Push handle bar up until it clicks into locked vertical position and push or push-along (fig 2 and 3).



Fig 1



Fig 2



Fig 3



## 06.

### Operating On Pull Mode

Release handle bar by wrapping fingers around both sides of release mechanism and pulling up (fig 1). Handle bar will drop into “pull” mode (fig 2).



Fig 1

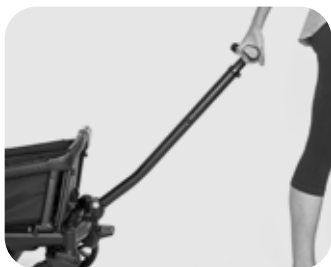


Fig 2

## 07.

### Folding Cruiser For Storage & Transport

Remove any accessories. Lift release handle on the top of front and back seats. Depress seat releases at top rear of each seat back and fold seat backs down flat. Fold each side panel down until it lays flat. Lay handle down until it locks (fig 1). Remove wheels for ultimate compactability. Cruiser can be lifted and carried by holding its frame, or by holding the handle when in the down and locked position (fig 2).



Fig 1



Fig 2

## 08.

### Upright Storage

Once your Veer Cruiser is folded, it can easily sit upright on rear wheels for easy storage in garage, etc.



## 6. Limited Warranty

# WE'VE GOT YOU COVERED!

---

We stand behind every cruiser we make.

Your VEER Cruiser is warranted to be free from any manufacturing defects for a period of **2 years** from the date of purchase under normal use and in compliance with the operating instructions.

This warranty is not transferable and extends only to the original retail purchaser and is only valid when supplied with proof of purchase. **PLEASE RETAIN PROOF OF PURCHASE FOR THIS LIMITED WARRANTY.**

The warranty is valid only in the original country of purchase. This warranty is subject to the conditions set forth by country in which the items were purchased. Conditions may vary. VEER will not ship replacement or repair parts out of the country of purchase.

VEER will provide replacement parts or conduct repairs as determined fitting by the company. VEER reserves the right to exchange item with a replacement part. Some parts may be replaced with newer model parts as the cruiser is improved over time.

---

Please note that a repair issue will NOT be covered by this warranty if:

- The issue is caused by misuse or improper/poor maintenance. Please refer to this instruction booklet for guidance on the VEER Cruiser use and maintenance.
- Damage is caused by improper installation of VEER parts and/or accessories. Please refer to this instruction booklet for guidance on VEER Cruiser assembly and use.
- Damage is corrosion, mold or rust caused by lack of maintenance or service.
- Damage is due to general wear and tear, which is the result of everyday use or negligence.
- Damage is caused by sun intensity, sweat, detergents, damp storage or frequent washings.
- Repairs or modifications are carried out by a third party.
- VEER Cruiser is purchased from an unauthorized retailer. Approved retailers are listed on our website at [goveer.com](http://goveer.com).
- VEER Cruiser is second-hand.
- VEER Cruiser is damaged as a result of an accident, airline or freight damage.

VEER reserves the right to determine if warranty terms and conditions have been met. Please contact VEER you have any questions regarding warranty.

**1 Year Warranty Extension Bonus - Register Your Veer and get a 1 year warranty bonus, for a total of 3 years. Simply register at [goveer.com/register](http://goveer.com/register) or complete and mail your registration card or register at [goveer.com/register](http://goveer.com/register).**

Veer Gear, LLC  
Customer Service  
3423 Piedmont Rd. NE  
Atlanta, GA 30305  
1 470 344 3200

[goveer.com](http://goveer.com)

