



# Daikin ENVi Thermostat User Manual

# SAFETY CONSIDERATIONS

Read these SAFETY CONSIDERATIONS carefully before operating the Daikin ENVI thermostat.

- Contact your dealer for repair and maintenance. Improper repair and maintenance may result in electric shock or fire. Only use accessories made by Daikin that are specifically designed for use with the thermostat and have them installed by a professional.
- Contact your dealer to move and reinstall the thermostat. Incomplete installation may result in electric shock or fire.
- Never let the thermostat get wet. Water can cause an electric shock or a fire.
- Never use flammable spray such as hair spray, lacquer, or paint near the unit. Flammable spray may cause a fire.
- Never inspect or service the unit by yourself. Contact a qualified service person to perform this work.
- Never touch the internal parts of the thermostat. To check and adjust internal parts, contact your dealer.
- Turn off all electrical power before doing any maintenance to avoid the risk of serious electric shock; never sprinkle or spill water or liquids on the unit.
- Do not touch the switch with wet fingers. Touching a switch with wet fingers can cause an electric shock.
- Before cleaning the thermostat, turn off the power, otherwise this may cause an electric shock.
- Do not wipe the thermostat operation panel with benzene, thinner, chemical dust cloth, etc. The panel may get discolored or the coating can peel off. If it is heavily dirty, soak a cloth in water-diluted neutral detergent, squeeze it well and wipe the panel clean. Then wipe it with another dry cloth.
- Consult with the installation contractor for cleaning. Incorrect cleaning of the inside of the thermostat could break the plastic parts and cause electric shock.
- Do not allow children to play with the unit to prevent injury.
- Never pull or twist the electric wire of the thermostat. It may cause the unit to malfunction.
- Do not expose the thermostat to direct sunlight. The LCD display can become discolored and may fail to display the data.
- Disposal of the thermostat and additional parts should be done in accordance with the relevant local, state and national regulations.

# CONTENTS

<b>GETTING STARTED</b>	<b>1</b>
<b>DAIKIN ENVi THERMOSTAT BASICS</b>	<b>2</b>
What's on the Home Screen?	2
Using the Navigation Buttons	4
Idle Screen	5
About Your Daikin ENVi Thermostat	6
<b>CONNECTING TO THE INTERNET</b>	<b>6</b>
Setting Up WiFi and Obtaining a Registration Code	7
Configuring a Web Portal Account	8
Re-registering the Daikin ENVi Thermostat	10
<b>USING YOUR DAIKIN ENVi THERMOSTAT</b>	<b>11</b>
System Mode	12
Fan	12
Weather Forecast	14
Resetting the Daikin ENVi Thermostat	15
Rebooting the Daikin ENVi Thermostat	15
Cleaning the Daikin ENVi Thermostat	16
What To Do If You Move	16
<b>CONFIGURING YOUR DAIKIN ENVi THERMOSTAT</b>	<b>17</b>
Configuring Personal Preferences	18
Utility CPP Setting	23
Set Up Reminders and Alerts	25
Configure Alerts	25
WiFi	27
Creating Your Weekly Schedule	28
Using the Weekly Schedule Editor	29
Scheduling a Vacation	30
Sensors	32
<b>UNDERSTANDING ALERTS</b>	<b>33</b>
List of Alerts	33
<b>ONE-YEAR LIMITED WARRANTY</b>	<b>35</b>
<b>END USER SOFTWARE LICENSE AGREEMENT</b>	<b>37</b>

 


# GETTING STARTED

## Welcome

The Daikin HVAC equipment and ENVi thermostat help homeowners conserve energy, save money and reduce their environmental impact. Our products automate energy conservation, making it comfortable when you are home and saving money when you are not.

For more information, visit us at [DaikinAC.com](http://DaikinAC.com) and [DaikinENVi.com](http://DaikinENVi.com).

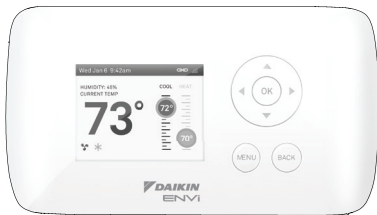

## Key features of the Daikin ENVi thermostat:

- Color display
- Precision +/- 1°F (0.5°C) temperature control
- Remote access via the Internet, tablet or smartphone
- Vacation programming
- Seven-day programming
- Humidity sensing
- Intelligent algorithms that adapt to your home and preferences
- Fan control

Daikin ENVi Thermostat

 
# DAIKIN ENVi THERMOSTAT BASICS

*The wireless remote controller should not be used in conjunction with the Daikin ENVi thermostat.*

The Daikin ENVi thermostat has an easy-to-read color screen that displays all the information you need to set and manage your Daikin ENVi thermostat. Use the navigation buttons on the right to quickly change the temperature, access features, and configure your settings.

## ***What's on the Home Screen?***

Whenever you press a button, the Home screen is displayed.

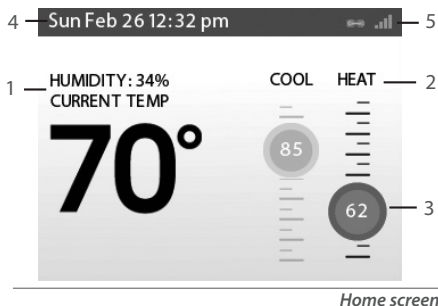

### **1. Current Temperature and Humidity**

The current (actual) temperature and humidity in the room where the Daikin ENVi thermostat is installed. You can set the Daikin ENVi thermostat to display Celsius or Fahrenheit. See Temperature Display on page 19.

## 2. System Mode

The current method of temperature control: heat, cool, or both (auto). See System Mode on page 12.

## 3. Current Set Point

The temperature at which the system is programmed to maintain at a particular point in time.

Press ▲(up) or ▼(down) to adjust it manually by increments of 1°F (0.5°C). If the system is set to Auto, press ◀(left) or ▶(right) to switch between heat and cool set points.

When you manually adjust the set temperature, you put the system into a Hold mode. See Hold Action on page 19. To return back to the pre-programmed temperature, press **OK**.

For maximum savings you should program your Daikin ENVi thermostat to control the temperature automatically. See Creating Your Weekly Schedule on page 28.

## 4. Current Time/Date

Displays the current date and time for your time zone.

## 5. Internet Access

Indicates the WiFi signal strength to the Daikin ENVi thermostat. The more bars, the stronger the signal. A chain link indicates communication with the Daikin ENVi web servers.

## Using the Navigation Buttons

The navigation buttons located on the right of the Daikin ENVi thermostat let you select options and control the Daikin ENVi thermostat.



- **▲ (up)** On the Home screen, press ▲ to increase the temperature set point by 1°F (0.5°C). For menus, press ▲ to move up.
- **▼ (down)** On the Home screen, press ▼ to decrease the temperature set point by 1°F (0.5°C). For menus, press ▼ to move down.
- **◀ (left)** On the Home screen, if Auto mode is enabled, press ◀ to switch between heat and cool set points. For menus, press ◀ to go back to the previous screen.
- **▶ (right)** On the Home screen, if Auto mode is enabled, press ▶ to switch between heat and cool set points. For menus, press ▶ to choose the currently highlighted option.
- **OK** On a menu screen, press **OK** to choose the currently highlighted option. If a configuration option is selected, pressing **OK** will keep its new value and return back to the previous screen.



- **MENU** Pressing **MENU** displays a list of all available options. If a menu is currently displayed, pressing **MENU** will cancel any unsaved changes and return to the Home screen.



- **BACK** On a menu screen, press **BACK** to go back to the previous screen.



## On-Screen Keyboard

 
If you need to type in any information, an on-screen keyboard will appear. To enter a letter or number, press the arrow keys to move to a character and then press **OK** to select it.

Select **Caps** to enter capital letters; select **&@#** to enter commonly used symbols. If you make a mistake, press **X** to delete the text .

To keep your changes, select **Save**. To cancel your changes, press the **BACK** button.

## Idle Screen

When you are not actively using your Daikin ENVi thermostat, the screen will dim and display the idle screen.

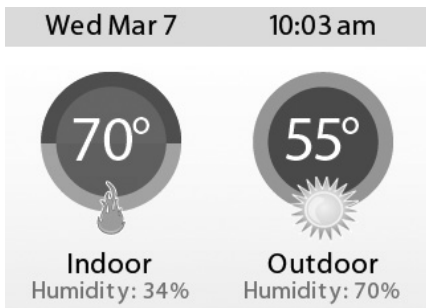

*Idle screen*

The Idle screen can show the temperature, time and date, humidity, weather conditions, and operating mode (red for heat, blue for cool). Snowflake and flame icons indicate if cooling or heating is currently active.

### ***To customize the content of the idle screen:***

From the Home screen, press **MENU**.

Select **Settings** ► **Preferences** ► **Idle Screen**

From here you can enable/disable the idle screen, the temperature bubbles, and date/time display.

## **About Your Daikin ENVi Thermostat**

### **To view information about your Daikin ENVi thermostat:**

From the Home screen, press **MENU**.

Select **About**.

The **About** menu displays useful information about your Daikin ENVi thermostat, its serial number, and optional information about the contractor who installed it. You may need this information if you are having difficulties or need technical support.

The About page also displays information about your current WiFi configuration. You can use these settings to help troubleshoot Internet connectivity issues.

## **CONNECTING TO THE INTERNET**

Connect your Daikin ENVi thermostat to the Internet so you can control it from your own personalized, secure Daikin Web Portal, smartphone, or tablet.

From the Web Portal, you can:

- Program, configure and control your Daikin ENVi thermostat.
- Control your Daikin ENVi thermostat from anywhere you have Internet access (including smartphones and tablets).
- Use local weather data to maximize energy savings.
- Receive important alerts and reminders about your heating and cooling system.

*Note: To connect your system to your personalized Web Portal you must have a broadband Internet connection and a wireless 802.11 b/g/n (WiFi) home network.*

## Setting Up WiFi and Obtaining a Registration Code

The Daikin ENVi thermostat uses your home WiFi network to connect to the Internet. First, enable WiFi on the Daikin ENVi thermostat (see instructions to the right).

The Daikin ENVi thermostat will display a list of available networks, along with an indication of the signal strength (the more bars, the better) and whether encryption is used.

If your home network is not listed, or if the signal strength is very low, try adjusting the antenna on your wireless router. If that doesn't improve the signal, try moving your router closer to the Daikin ENVi thermostat.

Once your network has been detected, select it from the list. If the network is encrypted, you will be asked to enter a password for that network. This is the password you created when the wireless router was first set up.

After you provide the password, your Daikin ENVi thermostat will automatically connect to the Internet. A chain link on the screen indicates you have established a connection with the Daikin ENVi web servers.

**Write down the registration code as you will need it when configuring your Web Portal account.** You can leave the code displayed on the screen while you continue with the next step.

*Note that you need to connect your Daikin ENVi thermostat to the Internet for the outdoor temperature, outdoor humidity, and weather indicators to function.*

### **To set up WiFi:**

From the Home screen, press **MENU**.

Select **Register Thermostat**.

Select **Continue**.

Select **WiFi Settings**.

Select **WiFi Radio ► Enabled**.

Select your network from the list.

If prompted, enter your network password.

The Daikin ENVi thermostat will automatically connect to the Internet and display a registration code.

Write down the registration code; you will need it in the next step.

 
## Having Trouble?

If you are having trouble connecting to the Internet or finding your WiFi network, you may need to configure your network parameters manually. See WiFi on page 27.

## Configuring a Web Portal Account

After setting up WiFi on your Daikin ENVi thermostat and obtaining the registration code, you need to configure your Web Portal account.

1. From a web browser on a PC, visit **www.DaikinENVi.com** and click on the **LOGIN** link.
2. Click **REGISTER THERMOSTAT**.
3. Click the **Daikin ENVi thermostat**.

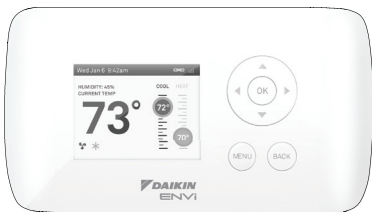

4. Click **Create a new account**.

(If you already have a Web Portal, click **Register to an existing account**, enter your email address and password, and proceed to step 6).

Create a new account	Sign into an existing account
Create a new account	Register to an existing account

5. Enter your email address and password. Click **Create Web Portal**.

**Create your personal Web Portal**

Email Address

Password

Re-Type Password



6. Enter the registration code displayed on the Daikin ENVi thermostat. Click **Register**.

**Add your Daikin ENVi thermostat to your Web Portal**

 
Select the "Register Thermostat" menu on your thermostat to get your 4-digit registration code. Enter it here to link it to your Web Portal.

Registration Code



*Note: If you forgot the registration code, select Register Thermostat again from the Daikin ENVi thermostat menu and obtain a new registration code.*

7. Return back to your Daikin ENVi thermostat and select **Yes** to confirm your email address and complete the registration process. If you made a mistake with your email address, select **No** and repeat the registration process.

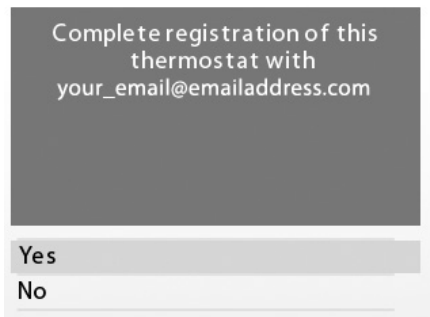

Your Daikin ENVi thermostat is now registered. You can now monitor and control your Daikin ENVi thermostat from the Web Portal or from your smartphone or tablet.

## ***Re-registering the Daikin ENVi Thermostat***

### ***To reset your registration:***

From the Home screen, press **MENU**.

Select **Settings** ► **Reset**.

Select **Reset Registration**.

Confirm the reset by selecting **Yes**.

There are times when you may need to re-register your Daikin ENVi thermostat. For example, if you are a new homeowner who has just moved to a home with an existing Daikin ENVi thermostat. To re-register your Daikin ENVi thermostat, reset the registration and redo the registration process.

# USING YOUR DAIKIN ENVI THERMOSTAT

The bright, easy-to-read screen on your Daikin ENVi thermostat makes it simple to review and adjust the settings any time you want.

## *Adjusting the Temperature*

You can easily adjust the temperature without changing the Daikin ENVi thermostat's programming by pressing the arrow keys when the Home screen is displayed.

- Press ▲ to increase the temperature set point by 1°F (0.5°C).
- Press ▼ to decrease the temperature set point by 1°F (0.5°C).
- If the Daikin ENVi thermostat is set to Auto mode, press ◀ to select the Cool setting.
- If the Daikin ENVi thermostat is set to Auto mode, press ▶ to select the Heat setting.

Once you've adjusted the temperature, the screen indicates that you are currently holding the set temperature rather than running a program.

The Daikin ENVi thermostat will hold the new temperature for the duration you specified in the Hold Action option during the initial setup (see Hold Action on page 19) or until you press **OK**.

If you are using Auto mode, note that there is a minimum difference allowed between heat and cool set temperatures. The system will prevent you from setting the temperatures

to within these limits. See the Daikin ENVi Thermostat Installation Manual for information about configuring the minimum temperature difference settings.

## System Mode

### **To change system mode:**

From the Home screen, press **MENU**.

Select **System**.

Select your temperature mode: **Heat, Cool, Auto** or **Off**.

This menu sets your system to use heat, cool, or auto mode:

- **Cool** The system will turn on in cooling mode when the current temperature rises above the set temperature.
- **Heat** The system will turn on in heat mode when the current temperature drops below the set temperature.
- **Auto** The system is in Auto-changeover mode and will activate the heating or cooling mode to keep your home within the desired range of set temperatures.
- **Auxiliary Heat Only** The system will only use the auxiliary or back-up heat source to maintain the heat set point temperature (only appears if auxiliary heat is configured).
- **Off** The system is off and will only display the current temperature.

## Fan

### **To change fan settings:**

From the Home screen, press **MENU**.

Select **Fan**.

Configure your fan settings.

This menu displays the current Indoor Unit fan setting:

- **On** Forces the fan to run continuously, regardless of the weekly schedule programming. The fan will also run if the system mode is Off.



- **Auto** Turns on the fan when the system is heating or cooling your home, or to satisfy the minimum fan “on” time.

When you switch between **Auto** and **ON** in fan control, the Daikin ENVi thermostat will prompt you with the following:

**Hold 2 hours** The fan will switch to this setting but revert back to weekly schedule after 2 hours.

**Hold 4 hours** The fan will switch to this setting but revert back to weekly schedule after 4 hours.

**Indefinite** The fan will switch to this setting and will only revert back if you do so manually .

**Until Next Transition** The fan will switch to this setting but will revert back when the program switches to the next period.

**Update Schedule** This will update the current schedule with the new fan setting.

- **Minimum “On” Time** Sets a minimum amount of time per hour that the Indoor Unit fan will run. This improves air circulation and results in a more consistent temperature than with the Auto setting while being more cost-effective than the On setting.
- **Fan Speed** Sets the Indoor Unit fan speed to Low, Medium, High, or Optimized. In Optimized, the fan will slow down when the room temperature is approaching the set temperature.
- **Louver** Sets the movement of the Indoor Unit’s louver to Oscillating or Stopped.  
*Only available if Indoor Unit is equipped with louvers.*

## Weather Forecast

### To view the weather forecast:

From the Home screen, press **MENU**.

Select **Weather Forecast**.

Press **OK** to switch between the 4-day and 24-hour forecast.

Displays the current outdoor temperature and weather conditions for your registered location.

Note that when you register, it's important to select your location accurately, as Daikin ENVi will use your local weather data to optimize your heating and cooling. You must register your Daikin ENVi thermostat for this feature to operate.



*Weather Forecast screen*

## ***Resetting the Daikin ENVi Thermostat***

At some point during the life of the Daikin ENVi thermostat you may want to quickly reconfigure it or restore it to the default state.

- **Reset Registration** Resets the connection between the Daikin ENVi thermostat and the your personalized Web Portal.
- **Preferences and Schedule** Resets all preferences, reminders, alerts and programming back to the default state.
- **HVAC Equipment Settings** Resets the configuration of the Indoor Unit and/or auxiliary heat equipment.
- **All Settings** Resets the Daikin ENVi thermostat back to its default factory settings.

### ***To reset your Daikin ENVi thermostat:***

 
From the Home screen, press **MENU**.

Select **Settings** ► **Reset**.

Choose the reset option that suits your needs.

## ***Rebooting the Daikin ENVi Thermostat***

You can reboot the Daikin ENVi thermostat by pressing the physical hardware reset button, located through an opening in the bottom left corner of the Daikin ENVi thermostat. Rebooting will not alter programming or configuration options.



*Reset button*

## ***Cleaning the Daikin ENVi Thermostat***

You can clean the Daikin ENVi thermostat's screen by spraying water or any mild, non-abrasive household cleaner on to a clean cloth. Wipe the surface of the screen with the dampened cloth.

*Note: Do not spray any liquids directly onto your Daikin ENVi thermostat.*

## ***What To Do If You Move***

If you move there a few things to consider about your Daikin ENVi thermostat:

If you did not activate your personalized Web Portal, you can simply take the Daikin ENVi thermostat with you or leave it in the house.

If you already have registered your Daikin ENVi thermostat with DaikinENVi.com, you need to update your Web Portal to reflect your new address.

## **Leaving It Behind**

If you're moving and are not taking your Daikin ENVi thermostat with you, log onto the Web Portal and select **Reset** under the **Settings** tab. Select **Reset Registration**. This terminates the association between your Daikin ENVi thermostat and your personalized Web Portal (you can also accomplish the same thing by choosing **Reset Registration** on the Daikin ENVi thermostat itself).

You can always add another device for your new home with the same account.

The new homeowners will need to register the Daikin ENVi thermostat and set up their own Web Portal.

## Taking It With You

If you're moving and want to take the Daikin ENVi thermostat with you, you'll need to re-connect it to the Internet and update your location and house information (select **My House** under the **Settings** tab) .

# CONFIGURING YOUR DAIKIN ENVi THERMOSTAT

This section describes how to configure the personal preferences, temperature settings, and operation of your Daikin ENVi thermostat. There are four key steps:

- Configure Personal Preferences
- Set up Reminders and Alerts
- Configure WiFi settings
- Create your Weekly Schedule

*Note: You can also configure your Daikin ENVi thermostat from your personalized Web Portal. Simply open a web browser, go to [DaikinENVi.com](http://DaikinENVi.com), and log in.*

## Configuring Personal Preferences

### *To configure personal Preferences:*

From the Home screen, press **MENU**.

Select **Settings ▶ Preferences**.

Adjust each option to your personal preferences.

The Preferences menu has settings for personalizing your Daikin ENVi thermostat.

### **Name**

You can customize the name of your Daikin ENVi thermostat to suit your needs (i.e. Main Floor). This is useful if you have multiple systems or zones. You can view and edit your Daikin ENVi thermostat name in the About menu on your Daikin ENVi thermostat and also in your online Web Portal.

### **Date and Time**

Select **Date & Time** to:

- Set the current time and date.
- Select a 12-hour or 24-hour time format.
- Select your time zone.
- Enable or disable daylight savings.

If you are connected to the Internet, the time and date are programmed automatically.

### **Brightness**

The color screen has adjustable backlight brightness. You can control the intensity when the screen is active (i.e., when you are pushing buttons) and when the display is in standby mode (see "Idle Screen" on page 5).

Select **Brightness** to:

- Set the Active brightness intensity.
- Set the Standby brightness intensity (see “Idle Screen” on page 5).
- Set the minimum time the Daikin ENVi thermostat will stay in active brightness before switching to standby brightness.

## Hold Action

Whenever you manually adjust the set temperature, the Daikin ENVi thermostat will indicate you are in a “Hold” mode. You can select how long the Daikin ENVi thermostat will hold the new temperature before reverting back to the regular program:

- **Hold 2 hours**
- **Hold 4 hours**
- **Until next transition** Thermostat will hold temperature until the next program period.
- **Indefinite** Thermostat will hold temperature until you press **OK**.
- **Update Schedule** When you adjust the set temperature, the system will update the temperature in the Weekly Schedule for the current period.
- **Ask Me** Every time you adjust the set temperature you will be asked which of the options you would like to choose.

## Temperature Display

Select **Temperature Display** to select Fahrenheit (°F) or Celsius (°C).


## Quick Save Settings

In Quick Save mode, your system will automatically increase (in cool mode) or decrease (in heat mode) the temperature set point by the pre-configured amount.

Quick Save mode can only be activated from the Web Portal or from the Daikin ENVi smartphone/tablet application.

## Access Control

You can protect your Daikin ENVi thermostat so that certain features will require the user to enter a 4-digit access code. Use the arrow keys to highlight a number and then press **OK**. When you are done, select **Save**. The access control will be required once the idle screen is displayed.

To disable this feature, delete the number by selecting  multiple times.

You can also configure the level of access control:

- **Restrict All Access** Unauthorized users will only be able to view the home screen and the weather information.
- **Restrict System/Fan Access** The code is required to access the system mode and fan menus.
- **Restrict Program Access** The code is required to view and modify the Daikin ENVi thermostat's Weekly Schedule.
- **Restrict Vacation Access** The code is required to view and create a Vacation.

In all cases, once the code is enabled, it will be required to access any of the items in the Settings, Reminders and Alerts, and Sensor



menus. The About screen is still accessible. Once a valid code has been entered on the Daikin ENVi thermostat, access to restricted features will be allowed until the Daikin ENVi thermostat backlight timer has expired.

## Temperature Range

You can configure the Daikin ENVi thermostat so only a specific heat and/or cool set point range is permitted.

- **Heat Temp Range** Press ▲ or ▼ select the maximum or minimum heat set points then press **OK**. Users will not be able to set the Daikin ENVi thermostat to a temperature above this limit.

Heat Min Temp: 45 to 68 °F (7 to 20 °C)

Heat Max Temp: 57 to 80 °F (14 to 26.5 °C)

- **Cool Temp Range** Press ▲ or ▼ to select the maximum and minimum cool set points and then press **OK**. Users will not be able to set the Daikin ENVi thermostat to a temperature below this limit.
  - Cool Min Temp: 65 to 83 °F (18.5 to 28.5 °C)
  - Cool Max Temp: 77 to 95 °F (25 to 35 °C)

## Intelligent Eye

Some models of the Indoor Unit include an intelligent eye, an infrared sensor that detects room occupancy. It adjust the set point by 3.6°F (2°C) if no movement is detected in order to save energy (+3.6°F/+2°C if cooling, -3.6°F/-2°C if heating).

To use intelligent eye, you must enable this option in the Daikin ENVi thermostat and

then enable it with the Daikin wireless remote controller. If enabled, the thermostat's Smart Recovery and Temp Alert functions are not available.

By default, intelligent eye is disabled on the thermostat.

*Do NOT enable the intelligent eye with the Daikin wireless remote controller when it is disabled on the thermostat as this may cause suboptimal operation and result in invalid recovery and alert messages. Also, if an auxiliary heater is configured, enabling intelligent eye may energize the auxiliary heater more often than would normally be required.*

## Recovery Options

Recovery options allow the Daikin ENVi thermostat to learn how your heating and cooling system works, taking into account infrastructure, weather and historical operating performance so that your home is a comfortable temperature as soon as you walk in the door.

- **Smart Recovery Heat** The Daikin ENVi thermostat will start heating at the optimum time to ensure the set point is reached at the programmed time.
- **Smart Recovery Cool** The Daikin ENVi thermostat will start cooling at the optimum time to ensure the set point is reached at the programmed time.
- **Random Start Heat** Programming a time in this section will produce a random delay when there is call for heat. In applications with multiple heating systems, this prevents all the systems from activating at the same time (thus creating a peak power demand).

Press ▲ or ▼ to select a delay time and then press **OK**.

- **Random Start Cool** Programming a time in this section will produce a random delay when there is call for cooling. In applications with multiple cooling systems, this prevents all systems from activating at the same time, (thus creating a peak power demand). Press ▲ or ▼ to select a delay time and then press **OK**.

## ***Utility CPP Setting***

This section is only applicable if your utility company is running a Critical Peak Pricing program that you have agreed to be a part of. Contact your local electrical utility company for information about programs in your area.

### **CPP Response**

Your utility may send voluntary events to your Daikin ENVi thermostat. You can choose to **Always Accept** these events. In which case, you would just be notified that an event is in progress. Or if you choose **Ask Me**, when the Utility issues an event, you will be asked if you want to participate.

If you do not acknowledge the event prior to the start, the system will default to yes.

### **Preferred Strategy**

During a Critical Peak Pricing event the Utility may select an energy saving strategy, or allow you to use your preferred strategy. Select from one of the options as your preferred energy saving strategy to be used during Critical Peak Pricing events.

- **Absolute Temperature** Set a specific heat and cool set point to be used when an event is initiated by the Utility company. If the set point at the time of the event is more favorable (lower in heat mode or higher in cool mode) than what you have programmed, the Daikin ENVi thermostat will use the more favorable set point for the duration of the event.
- **Relative Temperature** Program a temperature set back (heat) or set forward (cool) from your existing set point. For example, if you program a 4 °F set forward, and your current cool set point is 76 °F, during an event your Daikin ENVi thermostat set point will change to 80 °F until the event has expired.
- **System Off** If this option is selected, the Daikin ENVi thermostat will turn off heating and cooling for the duration of this event.
- **Duty Cycle** This option allows you to program the maximum amount of time the system will run during a 1 hour period. For example, if you select 30%, the air conditioner will run for a maximum of 18 (0.3 x 60) minutes regardless of whether the set point has been met. 0% essentially turns the system off, whereas 100% runs the system at full capacity.

## Set Up Reminders and Alerts

Your Daikin ENVi thermostat can be programmed to remind you of required filter changes and regular maintenance.

*If you are not sure about what equipment you have installed or whether you need to replace rather than clean your filters, please contact your heating and cooling contractor, or consult your original equipment manuals for the recommended maintenance procedures.*

### View Past Alerts

Displays a list of previously generated alerts. To view the full message, select the alert and press **OK**.

To delete the alerts from the list, select **Clear All Alerts**.

### System Service

The system service (maintenance) alert is displayed on the screen when regularly scheduled maintenance is required. It will also show your contractor's contact information (if programmed by the contractor).

Select this item to turn the reminder on or off, show the date of the last service, and select a reminder interval.

## Configure Alerts

The Daikin ENVi thermostat can generate alerts when the temperature in the home reaches a pre-programmed temperature. This protects your home from damage due to freezing or excessive heat.

### To set up Reminders:

From the Home screen, press **MENU**.

Select **Reminders and Alerts**.

Adjust each option to your personal preferences.

### To set up Alerts:

From the Home screen, press **MENU**.

Select **Reminders and Alerts**.

Adjust each option to your personal preferences.

If this alert has been set up, you will see the alert on the Daikin ENVi thermostat's screen. If you've configured your personal Web Portal, you will also receive an email alert.

### **Low Temp Limit**

Select this item to set the temperature at which the Daikin ENVi thermostat will generate a Low Temperature Limit alert:

- Disabled – No alert will be generated.
- Enabled – Set temperature range of 35 to 68 °F (1.5 to 20 °C).

### **High Temp Limit**

Select this item to set the temperature at which the Daikin ENVi thermostat will generate a High Temperature Limit alert:

- Disabled – No alert will be generated.
- Enabled – Set temperature range of 60 to 104 °F (15.5 to 40°C).

### **Aux Heat Runtime Alert** (optional)

If you have a heat pump with auxiliary heat configuration, you can program the Daikin ENVi thermostat to generate an alert if the auxiliary heat runs for more than this programmed amount of time during a 24-hour period.

### **Aux Outdoor Temp Alert** (optional)

If you have a heat pump with auxiliary heat configuration, you can also program the Daikin ENVi thermostat to generate an alert if the auxiliary heat is called for when the outdoor temperature exceeds this programmed set point. (This feature requires an Internet connection to function properly.)

## Display Alerts on Thermostat

Select No if you do not want any of the alerts to be displayed on the screen. Alerts will continue to be displayed on the Web Portal and sent via email.

## Enable Heating/Cooling Alerts

Select No if you do not want the Daikin ENVi thermostat to generate an alert if a system is not responding to a call for heat or cool. If disabled, these alerts will not be shown on the Daikin ENVi thermostat or Web Portal and no emails will be sent.

## WiFi

The Daikin ENVi thermostat supports WiFi 802.11 b/g/n. Use the Advanced Configuration option in the WiFi menu to configure your network parameters. Choose the network from the list or manually add a new one (i.e. if your network does not broadcast its SSID).

You will then be able to view and configure the following network parameters:

- DHCP (select Disabled to use a static IP Address; if unsure, leave DHCP Enabled)
- SSID
- Encryption (WEP, WEP128, WPA, or WPA2)
- Password (if encryption is used)
- WiFi Channel
- IP Address and IP Subnet
- Gateway
- Primary and Secondary DNS

### ***To configure WiFi manually:***

From the Home screen, press **MENU**.

Select **WiFi**.

Adjust the network options for your home network.

If you need to specify your Daikin ENVi thermostat's MAC address in your router's configuration, you can obtain it from the **About** menu.

### **To view your weekly schedule:**

From the Home screen, press **MENU**.

Select **Weekly Schedule**.

Your weekly schedule is shown on the screen.

### **To edit your weekly schedule:**

Display your **Weekly Schedule**.

Press **OK**.

Select the **Day**.

Select the **Time, Heat or Cool Setting**.

Press ▲ or ▼ to adjust the the value. Press ◀ or ▶ to toggle between columns.

Press **OK**.

Select **Save and Continue**.

Select any other days of the week that will also use the new settings. Use the navigation keys to switch between days and press **OK** to select a day.

 
Select **Continue**. The new schedule is displayed on the screen.

## **Creating Your Weekly Schedule**

Your heating and cooling needs change depending on the time of day and day of the week. For example, if there's no one in the house during the workday you might want to let the temperature go up in the summer, to reduce cooling energy, and down in the winter, to reduce heating energy.

By default, the Daikin ENVi thermostat includes four configurable periods:

- **Awake** The start time of this period typically represents when you get up in the morning.
- **Work** This represents when you leave to go to work.
- **Home** This represents when you get home from work in the evening.
- **Sleep** This represents is when you go to bed at night.

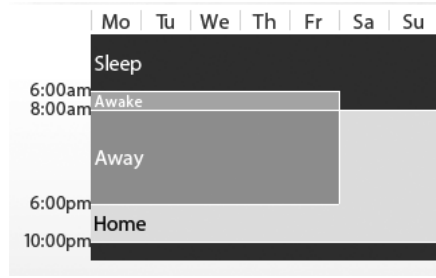

*Weekly Schedule*



The Daikin ENVi thermostat learns how your home and system performs. Intelligent algorithms combine weather data, your system run times and occupancy schedules to optimize performance and maximize energy savings. This means you can be comfortable when you are home and save money when you are not.

If your schedule changes, you can quickly and easily update the Daikin ENVi thermostat settings on the device itself or online through your Web Portal.

## ***Using the Weekly Schedule Editor***

<b>Monday</b>			
	<b>Time</b>	<b>Heat</b>	<b>Cool</b>
<b>Awake at</b>	<b>6:00 am</b>	<b>70°</b>	<b>78°</b>
<b>Away at</b>	<b>8:00 am</b>	<b>62°</b>	<b>85°</b>
<b>Home at</b>	<b>6:00 pm</b>	<b>70°</b>	<b>78°</b>
<b>Sleep at</b>	<b>10:00 pm</b>	<b>62°</b>	<b>82°</b>

---

**Add New**

---

**Save and Continue**

---

*Schedule Editor*

The Weekly Schedule editor lets you to set specific times, temperatures and Indoor Unit fan settings for each day of the week.

If your system is enabled for auto-changeover mode, the heat and cool set temperatures will automatically be adjusted to ensure a minimum difference.

### ***To add a new period:***

Display the schedule for a day and select **Add New**.

Select **Create New Item**.

Enter a name for the new period and select **Save**.

If your house is in-use during this period, select **Yes**; otherwise select **No**.

Select **Enable**.

Select the new time and press **OK**.

The new period is added.

### ***To schedule a vacation:***

From the Home screen, press **MENU**.

Select **Vacation**.

Select **Add Vacation**.

Enter a **Name**.

Enter the **Start** and **End** dates and times of your vacation.

## **Adding New Periods**

To accommodate for your varying schedule you can add additional program periods in your week. For example if you come home for lunch during the week or want different settings for the weekend, you would simply add one of the existing periods at the allocated time and day or create a completely new one.

## **Disable a Period**

To disable a period entirely, select the period's **Time** and then select **Disable**.

## ***Scheduling a Vacation***

The Daikin ENVi thermostat's Vacation feature helps you conserve energy while you are away for extended periods of time. It also ensures your home is comfortable when you return.

A vacation event includes a name, start date and time, as well as the end date and time. You can enter any number of uniquely named vacations. Other vacation features to choose from include:

## **System Optimize**

Select **Yes** to have the Daikin ENVi thermostat automatically set your Heat Temperature, Cool Temperature, System Mode and Indoor Unit Fan settings to maximize energy conservation while you are away.

Select **No** to manually configure Heat Temperature, Cool Temperature and Fan settings. These settings will be remembered the next time you create a vacation event.

## Heat Temperature

Programs the set temperature when the system is in Heat mode. Set a lower temperature to save energy.

## Cool Temperature

Programs the set temperature when the system is in Cool mode. Set a higher temperature to save energy. You can also choose to turn off your system while you are away to save more energy.

## Fan

Toggles the fan setting between ON and Auto.

- **ON** The fan runs all the time regardless of programming or if there is a call for heat or cool. The fan will also run if the System Mode is OFF.
- **Auto** This option turns the Indoor Unit fan on but only when the system is heating or cooling your home, or to satisfy the minimum fan run time as programmed.
- **Fan Min On Time** This feature allows you to determine a minimum time per hour that the Indoor Unit fan will run. This improves air circulation and provides a more consistent temperature within the home. It is more cost-effective than choosing the ON fan setting.

In either mode, the Daikin ENVi thermostat will ensure that when your vacation ends, the Daikin ENVi thermostat will revert to the regular settings.

*Note: If you were running your regular program prior to the start of your vacation, on your return, the Daikin ENVi thermostat will restore your home*

*to those settings. If you were in Hold mode prior to the start of your vacation, the Daikin ENVi thermostat will restore the home to whatever the set temperature was just prior to your vacation.*

## Delete Vacation

You can delete individual or all vacation events:

- To remove an individual vacation event, display the details about the vacation event, then select **Delete Vacation ► Yes**.
- To remove all vacation events, display the **Vacation** menu and select **Delete All ► Yes**.

## Sensors

By default, the Daikin ENVi thermostat's Internal Sensor is used for an accurate indication of the room temperature (recommended setting).

The Indoor Unit is also equipped with a room temperature sensor which you can use instead. You can also enable both sensors to provide an average sensing temperature. However, the Indoor Unit sensor and averaging methods are not recommended because the Indoor Unit sensor, especially wall-mounted models, can be affected by certain operations such as starting up and defrosting in a short time which may cause improper control of the indoor unit by the ENVi Thermostat.

### **To configure the temperature sensors:**

From the Home screen, press **MENU**.

Select **Sensors ► Configure**.

Enable or disable each sensor by selecting **Internal Sensor** or **Indoor Unit** and then selecting **Yes** or **No**.

# UNDERSTANDING ALERTS

From time to time your system will display an alert — a reminder to perform regular maintenance, for example.

If you have connected your Daikin ENVi thermostat to the Internet, these alerts can also be sent to you via email.

When an alert displays, you can dismiss it or ask to be reminded later.

For example, if you receive a regular maintenance alerts and choose Remind me later, the alert will clear and display again 3 days later. If you choose OK when the alert displays, it will reset the reminder.

## ***List of Alerts***

Your Daikin ENVi thermostat can generate the following alert messages. Depending on your configuration, some of these may not apply.

Low Temp Limit	Temperature in the home is too low.
High Temp Limit	Temperature in the home is too high.
Heat Not Responding	The system has failed to heat the home.
Cool Not Responding	The system has failed to cool the home.
System Service	HVAC system due for regular maintenance.
Auxiliary Heat Run Time	Auxiliary heat source is running too often.
Auxiliary Outdoor Temperature	Your auxiliary heat has been called to run when the outdoor temperature exceeds the programmed set point.
System error, service required	<p>A system error occurred.</p> <p>If the Indoor Unit's status LED is blinking after the error has been corrected, select <b>Settings ► Installation Settings ► Force System Off</b> to reset the latched error status and turn off the blinking LED.</p>
Lost communication	<p>Communication with the Indoor Unit has been lost. Check the wiring connections between the DPCA, ENVi thermostat and Indoor Unit. The green LED on DPCA should be on and solid.</p> <p>Upon initial power up of the system communication, this alert may be generated. Wait up 10 minutes for system to initialize before troubleshooting. The alert will be removed automatically once communication has been established.</p>

# ONE-YEAR LIMITED WARRANTY

Daikin AC (Americas), Inc., (“Daikin AC”) warrants that for a period of one (1) year from the date of purchase by the end-user (“Customer”), the Daikin ENVi thermostat (the “Product”) shall be free of defects in materials and workmanship under normal use and service. During the limited warranty period, Daikin AC shall, at its option, repair or replace any defective Products, at no charge. Any replacement and/or repaired device are warranted for the remainder of the original limited warranty or ninety (90) days, whichever is longer.

## NO LABOR WARRANTY

This limited warranty will apply with respect to parts only and not labor. Accordingly, subject to the conditions and limitations set forth herein, the limited warranty entitles the Customer to receive, at the option of Daikin AC only, a repaired or replacement part.

If the Product is defective, please call the third party contractor (“Installing Contractor”). After consulting with the Installing Contractor, Daikin AC will make the determination whether a replacement Product can be sent to you or whether the Product should be returned to the following address: Daikin AC (Americas), Inc. 1645 Wallace Drive, Suite 110, Carrollton, TX 75006. In the event of a failure of a Product, Customer may:

- contact the Installing Contractor from whom the Product was purchased to obtain an equivalent replacement product, provided the Installing Contractor determines that the returned Product is defective and Customer is otherwise eligible to receive a replacement product

This limited warranty does not cover removal, freight or reinstallation costs and shall not apply if the damages were found to be caused by something other than defects in materials or workmanship. The limited warranty will be void and of no effect, and Daikin AC will have no liability to Customer or anyone, including without limitation, if the Product:

- was operated/stored in abnormal use or maintenance conditions not prescribed in the User Manual;
- is repaired, modified or altered by any source other than Daikin AC, its agents or a licensed Heating Ventilating and Air Conditioning (HVAC) contractor and Daikin AC expressly authorizes such repair;
- the Product was subjected to misuse, abuse, negligence, electrical fault, improper handling or improper or inadequate maintenance accident or acts of nature;
- the Product is not operated or maintained and serviced in compliance with the printed instructions and recommendations of Daikin AC;
- the serial number of the Product has been altered, defaced, or removed;
- the Product is mishandled by Customer or any third party;
- lightning, fluctuations in electrical power or acts of God have occurred;
- problems arise from normal wear and tear;
- the Product has not been purchased from an authorized Daikin AC distributor or sales representative (an “Authorized Seller”) or from a party or contractor who has purchased the Product from an Authorized Seller;
- was not installed by a licensed Heating Ventilating and Air Conditioning (HVAC) contractor or was installed improperly.

The limited warranty is for repair or replacement of parts or Product only. Except to that limited extent, Daikin AC will not under any circumstances be liable for any loss, cost, damage, or expense of any kind arising out of a breach of this limited warranty or otherwise. Without intending to limit the foregoing sentence, it is specifically provided as follows: DAIKIN AC SHALL NOT BE LIABLE FOR ANY INDIRECT, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, SPECIAL, OR PUNITIVE DAMAGES, OR FOR ANY LOSS OF REVENUE, PROFIT OR USE, ARISING OUT OF A BREACH OF THIS LIMITED WARRANTY (INCLUDING BUT NOT LIMITED TO DAMAGE RESULTING FROM MOLD OR OTHER CONTAMINATES) OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OPERATION, SERVICING OR REPAIR OF ANY DAIKIN AC PRODUCT. IN NO EVENT WILL DAIKIN AC BE LIABLE FOR ANY AMOUNT GREATER THAN THE PURCHASE PRICE OF A DEFECTIVE PRODUCT.

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY FOR DAIKIN AC PRODUCT, AND IS IN LIEU OF ALL OTHER WARRANTIES EXPRESS OR IMPLIED, IN LAW OR IN FACT. DAIKIN AC SPECIFICALLY DISCLAIMS ALL OTHER WARRANTIES EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND OF FITNESS FOR A PARTICULAR USE OR PURPOSE OR OF NON-INFRINGEMENT, OR ANY IMPLIED WARRANTY ARISING OUT OF A COURSE OF DEALING OR OF PERFORMANCE OR USAGE OF TRADE. NO PERSON OR ENTITY IS AUTHORIZED TO BIND DAIKIN AC TO ANY OTHER WARRANTY, OBLIGATION OR LIABILITY FOR ANY DAIKIN AC PRODUCT. ACCEPTANCE, INSTALLATION, OPERATION OR USE OF THE DAIKIN AC PRODUCT FOR WHICH THIS WARRANTY IS ISSUED WILL CONSTITUTE ACCEPTANCE OF THE TERMS HEREOF.

SOME JURISDICTIONS MAY NOT ALLOW THE EXCLUSION OR LIMITATION OF INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR OF ANY EXPRESS OR IMPLIED WARRANTIES, SO TO SUCH EXTENT THE ABOVE EXCLUSIONS MAY NOT APPLY TO CERTAIN CUSTOMERS. THIS LIMITED WARRANTY PROVIDED BY DAIKIN AC GIVES CUSTOMERS SPECIFIC LEGAL RIGHTS, AND CUSTOMERS MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. The disclaimers of liability included in this limited warranty shall remain in effect and shall continue to be enforceable in the event that any remedy herein shall fail of its essential purpose

No one is authorized by Daikin AC to modify this limited warranty in any respect or to create for Daikin AC any other obligation or liability in connection with the Product unless done so in a written agreement bearing the handwritten signature of the President of Daikin AC. Customer agrees that any purported change by Daikin AC shall be null and void unless the President of Daikin AC shall have expressly so agreed to such change.

This limited warranty gives you specific rights, and you may also have other rights which vary from jurisdiction to jurisdiction. If you have any questions regarding this limited warranty, please write Daikin AC (Americas), Inc., 1645 Wallace Drive, Suite 110, Carrollton, TX 75006.



# END USER SOFTWARE LICENSE AGREEMENT

The software for your thermostat device is provided to Daikin AC (Americas), Inc. ("Daikin") under license from ecobee, Inc., and your use is governed by the following terms:

Please read the following carefully, as this end user software license agreement ("EULA") is a legal agreement between ecobee Inc., having its place of business at 477 Richmond Street West, Suite 210, Toronto, ON, M5V 3E7 Canada, ("ecobee"), Daikin, having its place of business at 1645 Wallace Drive, Suite 110, Carrollton, TX, 75006 United States, and you (either an individual or the entity that you represent and referred to in this agreement as "licensee"), the original purchaser of Daikin product (The "Product" or "Products") embedded with ecobee proprietary software (the "Software") concerning licensee's limited access to and use of the Software. By using the Product (including the Software embedded in the Product), you are indicating your acceptance of, and you agree to be bound by the terms and conditions of this EULA which shall govern your access and use of the Software. If you do not agree with the terms and conditions of this EULA, your access to and use of the Software will not be permitted and you may, within fourteen days of the date of your purchase of the Product, return the Software together with the Product in its original packaging and sale condition to: (a) Daikin if you have purchased the Product directly from Daikin or; (b) to a Daikin authorized reseller or distributor if you have purchased the Product from such entities, and Daikin or its authorized reseller or distributor as applicable shall provide a refund of the purchase price paid within fourteen days of its receipt of the return. In consideration of the license fees paid by LICENSEE as part of the purchase price of the Product and the mutual covenants contained herein and for other good and valuable consideration, the receipt and sufficiency of which are hereby acknowledged, ecobee, Daikin and LICENSEE agree as follows:

1. Definitions: For the purpose of this EULA, the following terms shall have the meanings hereinafter provided: "Web Portal" means the web site portal operated by ecobee to provide certain services and functionality to registered users of Products. "Error" means any program defect, error, bug or other failure of all or part of the Software that results in the Software not conforming to, or performing in accordance with, its published specifications. "Software" means ecobee's computer software program, which enables data upload and download to and from the Web Portal using a product, including any Software Updates. "User Manual" means the Daikin User Manual provided together with the Product and Software. "Software Updates" means updates or patches to the Software, including updates intended to correct Errors and which may include enhancements and/or additional features to the Software, as may be provided or released by ecobee from time to time to all of its customers at no charge.

2. Ownership of Software: LICENSEE acknowledges and agrees that, save and except for the Software license explicitly granted by the EULA, all right, title and interest in and to the Software and the User Manual is the sole and exclusive property of ecobee and/or its licensors), as the case may be. ecobee reserves all rights not expressly granted to LICENSEE hereunder, and for greater certainty, ecobee shall retain all intellectual property and other proprietary rights in and to the Software and the User Manual as provided by ecobee. Nothing in this EULA shall, or shall be deemed or construed to, assign, transfer or convey to LICENSEE any title, rights or interest in or to any intellectual property, including in or to the Software or User Manual, other than the licenses specifically and expressly granted herein.

3. Grant of Limited License: Upon LICENSEE's use of the Product (and corresponding acceptance of the terms and conditions of this EULA), ecobee hereby grants to LICENSEE a limited, nonexclusive, personal, perpetual, non-transferable and revocable license to use the Software embedded in the Product as and to the extent described in this EULA for as long as LICENSEE complies with the terms and condition of this EULA. ecobee reserves all rights not expressly granted to LICENSEE. For certainty, this EULA does not apply to or govern LICENSEE's use of or access to the Web Portal or the

Product, which are each governed by and subject to separate terms and conditions.

4. Permitted Use: Pursuant to the Software license granted to LICENSEE under this EULA, LICENSEE shall be permitted to: (a) use the Software embedded in the Product for the purposes of using the Product only as intended and contemplated by the User Manual, provided that the Software may only be used for its personal and private use in connection with the use of the Product; and (b) use the User Manual provided by ecobee and Daikin solely as is necessary to operate and use the Software and product as and to the extent permitted thereunder and under this EULA.

5. License Transferable: This EULA shall be binding upon and shall inure to the benefit of and be enforceable by each of the parties, their respective successors and permitted assigns. LICENSEE may assign this EULA without the prior consent of ecobee. ecobee may assign this EULA without the consent of LICENSEE at any time.

6. Copy Restrictions: Unauthorized copying or distribution of Software or the User Manual is expressly prohibited. LICENSEE may make a reasonable number of copies of the User Manual to the extent reasonably required for its use of the Software and Product as permitted by this EULA; provided that LICENSEE may not use the User Manual separately from the Product or Software or for any purpose other than as contemplated herein.

7. Use Restrictions: LICENSEE may not: (a) modify, adapt or otherwise change the Software or in any way remove the Software from the Product for any reason or use the Software separately from the Product for any reason or purpose; (b) to the maximum extent permitted to be restricted by applicable law, reverse engineer, decompile, disassemble, or otherwise in any manner deconstruct all or any part of the Software; (c) create derivative works based on the Software or the User Manual; (d) except as expressly permitted by the EULA, provide, disclose, sublicense, distribute, transfer, assign or otherwise permit any third party to access, use, read or otherwise gain access to the Software or User Manual (the Software and User Manual being the confidential information of ecobee); or (e) use Software to access or in conjunction with any other thermostat monitoring services or products of any ecobee competitor.

8. Support: Daikin or its agents will provide technical support for the Product. ecobee may in its discretion, without any obligation to do so and subject to the limitations of this EULA, provide LICENSEE with help-desk telephone support concerning LICENSEE's use of the SOFTWARE to the extent provided for in the Product Terms of Sale in connection with purchase and sale of the Product and the Terms of Service entered into by you and ecobee, if any, in connection with the thermostat monitoring and data management services provided by ecobee in connection with the Product. Refer to the Product Terms of Sale and/or the Terms of Service associated with the Product and related services for further details on Software and Product support.

9. Relief: LICENSEE agrees that damages would not be an adequate remedy for any breach of this EULA affecting or related to a breach or misappropriation of ecobee' (or its or its third party licensors') intellectual property rights in and to the Software and User Manual. LICENSEE, and nothing in this EULA, shall interfere with, delay, obstruct, or prevent ecobee from taking, or require ecobee to take, any steps prior to taking action to seek an interim and interlocutory equitable remedy on notice or ex parte to enforce any provision herein to protect its rights concerning the Software or other intellectual or proprietary rights. LICENSEE agrees not to contest, object to, or otherwise oppose an application for equitable relief by ecobee in such circumstances and LICENSEE waives any and all immunities from any equitable relief to which it may be entitled. Any such relief or remedy shall not be exclusive, but shall be in addition to all other available legal or equitable remedies. LICENSEE agrees that the provisions of this Section are fair and reasonable and are necessary to protect ecobee' intellectual property rights.

10. Termination: This EULA is effective until and unless terminated. Subject to Section 13, this EULA will terminate automatically if LICENSEE fails to comply with any provision of the License. If LICENSEE is a business entity or other entity, any failure to comply with the terms and condition of this EULA by any individual employed or engaged by such entity will be deemed a failure to comply by LICENSEE.

Upon any termination, LICENSEE shall destroy all copies of Software and User Manual.

11. Warranty: (a) Daikin shall provide its standard Product and Software limited warranty statement ("Customer Warranty"), which equally applies to the Software embedded in the Product, and which is incorporated by reference herein, with the Product for your benefit only. In the event of an Error in connection with the Software, refer to the Customer Warranty and Terms of Sale provided with the Product for further detail. (b) EXCEPT FOR THE REPRESENTATIONS, WARRANTIES, AND COVENANTS EXPRESSLY CONTAINED IN THIS EULA, THE PRODUCT TERMS OF SALE AND THE PRODUCT WARRANTY, THE SOFTWARE AND SOFTWARE DOCUMENTATION AND ANY SUPPORT IS PROVIDED ON AN "AS IS" BASIS, AND THERE ARE NO OTHER REPRESENTATIONS, WARRANTIES, COVENANTS, OR CONDITIONS, EXPRESS OR IMPLIED (INCLUDING ANY IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY QUALITY OR FITNESS FOR A PARTICULAR PURPOSE AND THOSE ARISING BY STATUTE OR OTHERWISE IN LAW OR FROM A COURSE OF DEALING OR USAGE OF TRADE), INCLUDING, BUT NOT LIMITED TO, NON-INFRINGEMENT, CORRECTNESS, FUNCTIONALITY, RELIABILITY, ACCURACY, CURRENTNESS, OPERATION, USE OR THE RESULTS OF THE USE BY LICENSEE, THAT THE OPERATION OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE (OR THAT ALL ERRORS CAN OR WILL BE CORRECTED) OR THAT THE SOFTWARE OR SOFTWARE DOCUMENTATION WILL MEET LICENSEE'S REQUIREMENTS, ALL OF WHICH ARE EXPRESSLY DENIED AND DISCLAIMED TO THE MAXIMUM EXTENT PERMITTED BY LAW. SOME JURISDICTIONS DO NOT PERMIT LIMITATIONS ON OR EXCLUSIONS OF CERTAIN IMPLIED WARRANTIES, OR THE EXCLUSION OR LIMITATION OF CERTAIN DAMAGES; THEREFORE THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU IN CERTAIN CIRCUMSTANCES. DAIKIN AND ECOBEE DISCLAIM AND SHALL HAVE NO LIABILITY TO LICENSEE FOR ANY AND ALL ACTS OF THIRD PARTIES. NO OTHER PERSON IS AUTHORIZED TO EXTEND, VARY OR TRANSFER ANY PROVIDED WARRANTY ON BEHALF OF ECOBEE OR DAIKIN. THE ENTIRE RISK AS TO THE RESULTS AND PERFORMANCE AND USE OF THE SOFTWARE, SOFTWARE DOCUMENTATION AND ANY PROVIDED SUPPORT IS ASSUMED BY LICENSEE.

12. Limitation: IN NO EVENT AND TO THE MAXIMUM EXTENT PERMITTED UNDER APPLICABLE LAW SHALL ECOBEE OR DAIKIN, THEIR SHARE-HOLDERS, AFFILIATES, CONTRACTORS, SUPPLIERS AND AGENTS AND THEIR RESPECTIVE DIRECTORS, OFFICERS AND EMPLOYEES (COLLECTIVELY THE "ECOBEE AND DAIKIN PARTIES") BE LIABLE TO LICENSEE OR ANY THIRD PARTY FOR ANY INDIRECT, INCIDENTAL, EXEMPLARY, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (INCLUDING WITH RESPECT TO LOSS OF, OR DAMAGE TO, DATA OR COMPUTER SYSTEMS OR RELIANCE ON ANY DATA DERIVED FROM LICENSEE'S USE OF THE SOFTWARE, OR LOSS OF REVENUE OR PROFIT OR OTHER ECONOMIC LOSS) OF ANY KIND OR NATURE WHATSOEVER SUFFERED BY LICENSEE OR ANY THIRD PARTY HOWSOEVER CAUSED AND WHETHER RESULTING FROM THE USE OF OR INABILITY TO USE THE SOFTWARE OR OTHERWISE (INCLUDING AS A RESULT OF OR DUE TO USE OF OR RELIANCE ON THE SOFTWARE AND/OR Web Portal) AND REGARDLESS OF THE FORM OR CAUSE OF ACTION, EVEN IF SUCH DAMAGES ARE FORESEEABLE OR ECOBEE AND DAIKIN HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. ECOBEE AND DAIKIN PARTIES' TOTAL LIABILITY AND OBLIGATION TO LICENSEE, IN THE AGGREGATE FOR ANY AND ALL CLAIMS ARISING OUT OF OR IN ANY CONNECTION WITH THIS EULA, THE TERMS OF SALE IN CONNECTION WITH YOUR PURCHASE OF THE PRODUCT AND YOUR USE OF THE SOFTWARE AND PRODUCT, WITH RESPECT TO ANY EXPENSE, DAMAGE, LOSS, INJURY, OR LIABILITY OF ANY KIND, REGARDLESS OF THE FORM OF ACTION OR THEORY OF LIABILITY (INCLUDING FOR BREACH OF CONTRACT, TORT, NEGLIGENCE, BY STATUTE OR OTHERWISE) SHALL BE LIMITED TO THE ACTUAL DIRECT DAMAGES SUFFERED AND SHALL NOT EXCEED AN AMOUNT THAT IS EQUIVALENT TO THE PURCHASE PRICE OF THE PRODUCT ACTUALLY PAID BY LICENSEE. THIS SECTION SHALL SURVIVE A FUNDAMENTAL BREACH OR BREACHES AND/OR FAILURE OF THE ESSENTIAL PURPOSE OF THE AGREEMENT.

13. Survival: The parties acknowledge and agree that the provisions of Sections 2, 6, 7, 9, 11(b), 12, 13, 14, 15, 16 and 17 shall survive any termination of this EULA for any reason.

14. English Language: The parties declare that they have required that this agreement and all documents related hereto, either present or future, be drawn up in the English language only. Les parties déclarent par les présentes qu'elles exigent que cette entente et tous les documents y

afférents, soit pour le présent ou le futur, soient rédigés en langue anglaise seulement.

15. Jurisdiction: This EULA shall be exclusively governed by, construed and interpreted in accordance with the substantive laws of the United States and the state of Texas.. For the purpose of all legal proceedings this EULA shall be deemed to have been performed in the state of Texas and the parties expressly confirm that the laws of the United States and Texas are the proper laws. If Customer is located in a jurisdiction other than the USA or Canada, the parties agree that neither the United Nations Convention of the International Sale of Goods or the (U.S.) Uniform Computer Information Transactions Act shall apply to this EULA. The parties irrevocably agree to be bound to the nonexclusive jurisdiction by the state and federal courts of Texas in respect of all matters and disputes arising hereunder. The parties waive all right to trial by jury in any action, proceeding or counterclaim (whether based upon contract, tort or otherwise) related to arising out of EULA or the relationship of LICENSEE to Daikin and ecobee.

16. Export Law Assurances: LICENSEE acknowledges that the Software may be subject to export and import control laws, and agrees to comply fully with those laws in connection with the Software.

17. General Provisions: No delay or omission by ecobee to exercise any right or power it has under this EULA or to object to the failure of any covenant of LICENSEE to be performed in a timely and complete manner, shall impair any such right or power or be construed as a waiver of any succeeding breach or any other covenant. Any waivers by ecobee must be in writing and signed by an authorized representative of ecobee. If any provision of this EULA is held by a court of competent jurisdiction to be invalid or unenforceable in any respect, then the remaining provisions of this EULA, or the application of such provisions to persons or circumstances other than those as to which it is invalid or unenforceable shall not be affected thereby, and each such provision of this EULA shall be valid and enforceable to the extent granted by law. The EULA constitutes the entire agreement between the parties as it relates to the license and use of the Software and User Manual and the subject matter of this EULA and supersedes all prior or contemporaneous agreements, negotiations, representations and proposals, written or oral between ecobee and LICENSEE. The EULA may only be amended or supplemented by written agreement executed by each of the parties.



[www.DaikinENVi.com](http://www.DaikinENVi.com)

Daikin AC (Americas), Inc.  
1645 Wallace Drive, Suite 110  
Carrollton, TX 75006 USA

OM-TS1-1-1305