



Dearborn Protocol Adapter 5 Series

DGDPA5MA – Multi-Application Drivers

Installation and User Manual

CE

Document Revision Revision 7.0
Document Date: 8/27/2015
© 2010-2015 Dearborn Group, Inc.

Permission is granted to copy any or all portions of this manual, provided that such copies are for use with the DPA product and that "© 2010-2014 Dearborn Group, Inc.", (herein referred to as "Dearborn Group", "DG Technologies", or "DG"), remains on all copies.

The accompanying software, provided for use with the DPA 5, is also copyrighted. Permission is granted to copy this software for back-up purposes only.

IMPORTANT

To ensure your success with this product, it is essential that you read this document carefully before using the hardware. Damage caused by misuse of the hardware is not covered under product warranty.

When using this manual, please remember the following:

- ❑ This manual may be changed, in whole or in part, without notice.
- ❑ DG assumes no responsibility for any damage resulting from the use of this hardware and software.
- ❑ Specifications presented herein are provided for illustration purposes only and may not accurately represent the latest revisions of hardware, software or cabling.
- ❑ No license is granted, by implication or otherwise, for any patents or other rights of DG or of any third party.

DPA® and the **DG®** logo are registered trademarks of Dearborn Group, Inc. Other products that may be referenced in this manual are trademarks of their respective manufacturers.

The DPA Product line and the products supporting the DPA have been awarded the following U.S. Patents:

Patent #	Date	Patent Overview
6,772,248	08-03-04	Protocol adapter for in-vehicle networks.
7,152,133	12-19-06	Expanded functionality protocol adapter for in-vehicle networks.
7,337,245	02-26-08	Passing diagnostic messages between a vehicle network and a computer.
7,725,630	05-25-10	Passing diagnostic messages between a vehicle network and a computer using J1939 or J1708.
8,032,668	10-04-11	Passing diagnostic messages between a vehicle network and a computer using J1939 or J1708.
8,152,557	04-10-12	Positive locking mechanism for USB connected devices.
7,984,225	07-19-11	ASCII gateway to in-vehicle networks.
7,660,934	02-09-10	ASCII gateway to in-vehicle networks.

DG Technologies
33604 West Eight Mile Road
Farmington Hills, MI 48335
Phone (248) 888-2000
Fax (248) 888-9977
www.dgtech.com
sales@dgtech.com
techsupp@dgtech.com

TABLE OF CONTENTS

TABLE OF CONTENTS	3
1. SAFETY FIRST.....	6
2. INTRODUCING THE DPA 5.....	7
2.1. RP1210 OEM AND COMPONENT SOFTWARE COMPATIBILITY	8
2.1. J2534 OEM AND COMPONENT SOFTWARE COMPATIBILITY	8
2.2. STANDARDS AND PROTOCOLS SUPPORTED	9
2.3. SYSTEM REQUIREMENTS.....	10
3. GETTING STARTED WITH THE DPA.....	11
3.1. DRIVER INSTALLATION.....	11
3.2. WINDOWS SECURITY SCREEN	12
3.3. CONNECT USB CABLE TO THE DPA AND THEN TO PC	12
3.1. CONNECT VEHICLE-SIDE CABLE TO THE DPA	12
3.2. CONNECT VEHICLE-SIDE CABLE TO THE VEHICLE.....	12
3.3. FINALIZE PC INSTALL.....	13
3.4. AUTOMATIC FIRMWARE UPDATE	13
4. TROUBLESHOOTING / VALIDATING YOUR DPA WITH ADAPTER VALIDATION TOOL (AVT).....	14
4.1. ADAPTER VALIDATION TOOL “STARTUP” PROGRAM	14
4.2. RULE OF THUMB FOR SELECTING A VEHICLE PROTOCOL FOR TESTING	15
4.3. ADAPTER VALIDATION TOOL FOR HEAVY AND MEDIUM-DUTY VEHICLES, AVT (MD/HD)	16
4.4. ADAPTER VALIDATION TOOL FOR LIGHT AND MEDIUM-DUTY VEHICLES, AVT (OBDII)	21
5. SETTING UP YOUR RP1210-COMPLIANT OEM DIAGNOSTIC APPLICATIONS	24
5.1. NOTES ON SELECTING AN RP1210 COMPLIANT ADAPTER.....	24
5.2. CONFIGURING APPLICATIONS TO USE THE DPA 5.....	24
5.3. ALLISON DOC	25
5.4. BENDIX ABS DIAGNOSTICS	25
5.5. CATERPILLAR ELECTRONIC TECHNICIAN (CAT ET).....	25
5.6. CUMMINS INSITE.....	26
5.7. CUMMINS POWERSPEC (5.5 OR NEWER)	26
5.8. DETROIT DIESEL DIAGNOSTIC LINK V7	26
5.9. DETROIT DIESEL DIAGNOSTIC LINK VERSION 6.47	27
5.10. DANA DIAGNOSTIC TOOL 2.x.x.....	27
5.11. EATON SERVICERANGER 3.x.....	27
5.12. FREIGHTLINER SERVICELINK (INCLUDING CASCADIA MODEL – DUAL CAN CHANNELS)	27
5.13. INTERNATIONAL TRUCK AND ENGINE.....	28
5.14. MERITOR-WABCO TOOLBOX	28
5.15. VOLVO/MACK VCADS PRO	29
5.16. VOLVO/MACK PREMIUM TECH TOOL (PTT) – VERSION 2.X	30
5.17. VOLVO/MACK PREMIUM TECH TOOL (PTT) – VERSION 1.X	30
6. SETTING UP YOUR J2534-COMPLIANT OEM APPLICATIONS AND DPA 5.....	31
7. EXPLAINING MULTI-APPLICATION AND SINGLE-APPLICATION DRIVERS.....	32
7.1. WHY TWO OEM APPLICATIONS MAY NOT WORK WHEN SHARING THE DPA.....	32
8. RP1210 OPTIONS PROGRAM	33
8.1. RP1210 OPTIONS NOTES; RP1210 DPA DRIVER SETS	33
8.2. SET OPTIONS FOR DPA DEVICE/API	34

8.3.	J1939 FAST TRANSPORT LAYER (FAST_TRANSPORT OPTION)	34
8.4.	DEBUG LOGGING LEVEL (RP1210 INI OPTION DEBUGLEVEL).....	34
8.5.	DEBUG FILE NAME (RP1210 INI OPTION DEBUGFILE)	34
8.6.	DEBUG FILE SIZE (RP1210 INI OPTION DEBUGFILESIZE).....	34
8.7.	DEBUG FILE MODE (RP1210 INI OPTION DEBUGMODE).....	35
8.8.	AUTOMATIC FIRMWARE UPDATE	35
8.9.	DPA 5 BLUETOOTH CONFIGURATION UTILITY	36
8.10.	ADD SA DRIVERS TO RP121032.INI BUTTON.....	36
9.	RUNNING THE DPA 5 BLUETOOTH CONFIGURATION UTILITY	37
9.1.	CREATING A NEW RP1210 DEVICEID FROM A NEWLY PAIRED DPA 5	38
9.2.	DELETING AN RP1210 DEVICEID.....	38
10.	PRODUCT SPECIFICATIONS	39
10.1.	DPA 5 PHYSICAL AND ELECTRICAL.....	39
10.2.	DPA 5 PINOUTS	39
11.	DG UPDATE – PROGRAM OVERVIEW	40
11.1.	DG DRIVER UPDATE – INTERNET CONNECTION REQUIRED	40
11.2.	DG DRIVER UPDATE – INITIAL SCREEN	40
11.3.	DG DRIVER UPDATE – MAIN UPDATE SCREEN.....	41
11.4.	ADVANCED SETTINGS – SETTING DEFAULT TIME FOR CHECK FOR UPDATES	43
12.	TECHNICAL SUPPORT AND RETURN MERCHANDISE AUTHORIZATION (RMA).....	44
12.1.	TECHNICAL SUPPORT	44
12.2.	RETURN MERCHANDISE AUTHORIZATION (RMA).....	44
13.	WARRANTY INFORMATION AND LIMITATION STATEMENTS.....	45
13.1.	WARRANTY INFORMATION	45
13.2.	LIMITATION STATEMENTS	45
14.	APPENDIX A – DPA 5 MANUAL FIRMWARE UPDATE.....	46
14.1.	LAUNCH THE DPA FIRMWARE UPDATER PROGRAM.....	47
15.	APPENDIX B – SOFTWARE DEVELOPER/INTEGRATOR NOTES	48
15.1.	BUNDLING THE DPA WITH YOUR OEM INSTALLATION – SILENT INSTALL	48
16.	APPENDIX C – FCC AND CERTIFICATION INDUSTRY CANADA INFORMATION	49
16.1.	INDUSTRY CANADA.....	49
17.	APPENDIX D – WINDOWS VISTA AND WINDOWS 7/8 SUPPORT NOTES	50
17.1.	UAC AND THE TMC RP1210 STANDARD	50
17.2.	UAC AND THE DEARBORN GROUP ADAPTER VALIDATION TOOL (AVT)	50
17.3.	UAC REQUIREMENTS FOR ALL DPA UTILITY PROGRAMS	50
17.4.	MORE INFORMATION ON UAC	50
18.	APPENDIX E – LIST OF ACRONYMS USED IN THIS DOCUMENT	51
19.	APPENDIX F – TROUBLESHOOTING A CAN/J1939 NETWORK.....	52
19.1.	J1939 NETWORK TYPES.....	52
19.2.	CAN/J1939 TERMINATION RESISTOR	52
19.3.	PROPERLY TERMINATED J1939 NETWORK (TERM RESISTORS AT LOGICAL END POINTS)	53
19.4.	AFTERMARKET ADDITIONS IMPROPERLY INSTALLED.....	53
19.5.	J1939 NETWORK TESTING STEP 1 (CORRECT TERMINATION RESISTANCE)	54
19.6.	J1939 NETWORK TESTING STEP 2 (SHORTS TO GROUND)	54
19.7.	J1939 NETWORK TESTING STEP 3 (SHORTS TO POWER).....	55

19.8.	J1939 NETWORK TESTING STEP 4 (DEVICE GOING BUS_OFF).....	56
20.	APPENDIX G – COMMONLY REQUESTED CABLE DRAWINGS.....	57
20.1.	DPA 5 TO DPA 5 “BACK-TO-BACK” CABLE	57
21.	APPENDIX H – VOLVO/MACK 2013 (AND NEWER VEHICLES) AND THE DPA 5.....	58
21.1.	DG-DPA5-9OBDII-CABLE – FOR VOLVO PTT AND OTHER OBDII APPLICATIONS	59
21.2.	DG-V13-XOVER-CABLE – FOR COMPONENT APPLICATIONS (I.E. ALLISON, EATON)	59
21.3.	USING AVT TO TEST THIS VEHICLE PLATFORM – J1708 PROTOCOL	60
21.4.	USING AVT TO TEST THIS VEHICLE PLATFORM – ISO15765.....	60
21.5.	USING AVT TO TEST THIS VEHICLE PLATFORM – J1939.....	60
22.	APPENDIX I – NOTES ON USING WINDOWS 8.....	61
22.1.	USING THE WINDOWS DESKTOP AND CLASSIC START 8	61
22.2.	USING WINDOWS 8 LIFE TILES	61
23.	APPENDIX J – WINDOWS XP INSTALLATION ISSUES (USB DRIVERS FAIL TO REGISTER).....	62
23.1.	VERIFY THE ADAPTER IS NOT RECOGNIZED.....	62
23.2.	RUN THE HARDWARE UPDATE WIZARD	63
24.	APPENDIX K – WIN XP INSTALLATION ISSUES (DRIVERS LOCK-UP THE PC).....	65
25.	APPENDIX L – SAMPLE SOURCE CODE FOR SOFTWARE ENGINEERS.....	66
25.1.	RP1210 SAMPLE SOURCE CODE	66
25.2.	J2534 SAMPLE SOURCE CODE	66

1. SAFETY FIRST

It is essential that the user read this document carefully before using the hardware.

The DPA devices are to be used by those trained in the troubleshooting and diagnostics of light-duty through heavy-duty vehicles. The user is assumed to have a very good understanding of the electronic systems contained on the vehicles and the potential hazards related to working in a shop-floor environment.

DG understands that there are numerous safety hazards that cannot be foreseen, so we recommend that the user read and follow all safety messages in this manual, on all of your shop equipment, from your vehicle manuals, as well as internal shop documents and operating procedures.




- ❑ Always block drive, steer, and trailer wheels both front and back when testing.
- ❑ Use extreme caution when working around electricity. When diagnosing any vehicle, there is the risk of electric shock both from battery-level voltage, vehicle voltages, and from building voltage.
- ❑ Do not smoke or allow sparks or open flames near any part of the vehicle fueling system or vehicle batteries.
- ❑ Always work in an adequately ventilated area, and route vehicle exhaust outdoors.
- ❑ Do not use this product in an environment where fuel, fuel vapor, exhaust fumes, or other potentially hazardous liquids, solids, or gas/vapors could collect and/or possibly ignite, such as in an unventilated area or other confined space, including below-ground areas.


2. INTRODUCING THE DPA 5

The DPA 5 products are used to connect vehicle and equipment communication networks to personal computers (PCs). This allows programs written for the PC to retrieve pertinent information such as fault codes, component information, as well as perform component level diagnostics, tests, and component reprogramming. The DPA 5 communicates with the PC using either a USB cable or via Bluetooth (Class I or Class II), and comes standard with Technology and Maintenance Council (TMC) Recommended Practice (RP) RP1210C-compliant drivers, as well as Society of Automotive Engineers (SAE) J2534-compliant drivers.

If you are attempting to use a DPA 5 with a 2013 or newer Volvo/Mack chassis with a Volvo engine and an SAE J1969 (OBDII) connector, please see Addendum I for more information on this specific vehicle platform. This addendum addresses the specific requirements for using the DPA 5 product on this vehicle and also covers troubleshooting and specific cables that are required.

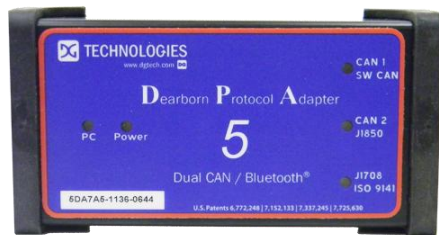


DPA 5 with Dual CAN Channels with Bluetooth Communications

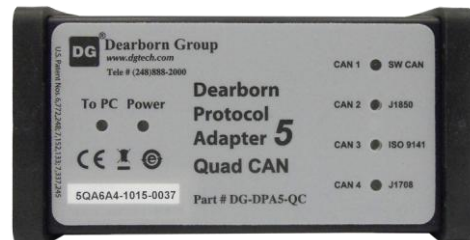

DPA 5 with Quad CAN Channels No Bluetooth Communications

The DPA 5 Dual-CAN / Bluetooth device is the most commonly sold DG DPA 5 product. This manual is geared more to this product; however, the concepts also apply to the DPA 5 Quad-CAN. Distinctions will be made as appropriate.

 <p>DPA 5 Dual-CAN Bluetooth/USB</p>	<p>Before switching communications modes from USB to Bluetooth and vice-versa, the DPA 5 Dual-CAN / Bluetooth must be powered off and then back on.</p>
---	--

2.1. RP1210 OEM AND COMPONENT SOFTWARE COMPATIBILITY

The adapter you have purchased is provided with a Technology and Maintenance Council (TMC) RP1210C compliant (backwards compatible with RP1210B and RP1210A) interface and has been validated against the following OEM and component applications:

- | | |
|--|---|
| <input type="checkbox"/> Allison DOC™ | <input type="checkbox"/> International® Diamond Logic Builder |
| <input type="checkbox"/> Bendix® ACOM | <input type="checkbox"/> International® InTune |
| <input type="checkbox"/> Caterpillar® Electronic Technician | <input type="checkbox"/> International® Master Diagnostics |
| <input type="checkbox"/> Cummins® Insite™ | <input type="checkbox"/> International® ServiceMaxx |
| <input type="checkbox"/> Cummins PowerSpec (Version 5.5 & Newer) | <input type="checkbox"/> International® NETS |
| <input type="checkbox"/> Dana Diagnostic Tool™ | <input type="checkbox"/> International® Auto Upgrade (AU) |
| <input type="checkbox"/> Detroit Diesel Diagnostic Link™ | <input type="checkbox"/> Mack and Volvo VCADS/PTT |
| <input type="checkbox"/> Detroit Diesel Reprogramming Station™ | <input type="checkbox"/> Meritor-WABCO Toolbox |
| <input type="checkbox"/> Eaton ServiceRanger | <input type="checkbox"/> Vansco VMMS |
| <input type="checkbox"/> Freightliner ServiceLink | <input type="checkbox"/> ZF-Meritor TransSoft |

Any application claiming RP1210A, RP1210B, or RP1210C compliance should work if the application and adapter both support the same protocol(s) and operating system(s).

2.1. J2534 OEM AND COMPONENT SOFTWARE COMPATIBILITY

The adapter you have purchased is provided with an SAE J2534-compliant interface (an SAE standard for electronic module reprogramming – sometimes call the “Pass Thru Programming” standard). The DPA 5 should be able to reprogram all CAN/ISO15765 vehicles, GM vehicles using the J1850 Variable Pulse Width (VPW) protocol, or other vehicles using the ISO9141 or ISO14230 protocols. **The DPA 5 is not compatible with the Ford J1850PWM protocol commonly found on Ford vehicles prior to 2005.**

The DPA 5 has been validated against the following OEM and component applications:

- | | |
|--|---|
| <input type="checkbox"/> General Motors TIS2Web | <input type="checkbox"/> Kia J2534 KMA |
| <input type="checkbox"/> Chrysler J2534 Application | <input type="checkbox"/> Hyundai 2534 HMA |
| <input type="checkbox"/> Toyota TIS (Technical Information System) | <input type="checkbox"/> Volkswagen Erwin |
| <input type="checkbox"/> Honda Service Express | <input type="checkbox"/> Audi Erwin |
| <input type="checkbox"/> Mazda Module Programming (MMP) | <input type="checkbox"/> Nissan J2534 ECU Reprogramming Software (NERS) |

All J2534 reprogramming and diagnostic software packages that are J2534-1 and J2534-2 compliant and use a protocol supported by the DPA 5 should work as long as the operating system is supported by the application. Note that not all OEMs have released J2534-2 compliant software.

2.2. STANDARDS AND PROTOCOLS SUPPORTED

The adapter you have purchased provides more protocol and standards support than any other commercially available diagnostic adapter.

2.2.1. Operating Systems and Standards Supported

- ❑ Operating Systems
 - Windows Vista® 32-bit and 64-bit Versions
 - Windows 7® 32-bit and 64-bit Versions
 - Windows 8® 32-bit and 64-bit Versions
- ❑ TMC RP1210C, TMC RP1210B, TMC RP1210A
- ❑ SAE J2534-1
- ❑ CE Certification
- ❑ Vehicle Electronic Programming Station (VEPS) J2214/J2461

2.2.2. RP1210 Defined Protocols Supported

- ❑ J1939
 - J1939@250k – Standard J1939
 - J1939@500k – Per J1939/14
 - Automatic Baud Rate Detection Capable
- ❑ CAN (ISO11898)
 - Automatic Baud Rate Detection Capable
- ❑ CAN@500k/J2284/GMLAN
 - The IESCAN protocol name is also CAN@500k.
 - Automatic Baud Rate Detection Capable
- ❑ J1708/J1587
- ❑ J1850 GM (Class 2) – J1850VPW
 - The following protocol names are supported: J1850, J1850_416K, J1850_104K. The send and read message format was changed from RP1210A to RP1210B for this protocol. We support both formats. The J1850 protocol name indicates the RP1210A format for sending and reading data. The J1850_416K, J1850_104K names indicate the RP1210B format.
- ❑ ISO9141-2
- ❑ ISO14230 (KWP2000)

2.2.3. RP1210_ClientConnect() Modifiers Supported (CAN Automatic Baud Rate Detection, Channel)

The DPA 5 supports automatic CAN baud rate detection as required by RP1210C in preparation for J1939 moving from a speed of 250k to 500k. To support this, the DPA 5 API supports this through an application issuing a modifier to the RP1210_ClientConnect() function call (for any CAN protocol):

- RP1210_ClientConnect("J1939:Baud=Auto")
- RP1210_ClientConnect("CAN:Baud=Auto")
- RP1210_ClientConnect("ISO15765:Baud=Auto")
- RP1210_ClientConnect("J2284:Baud=Auto")

If the application wants to know what speed they connected at, they can issue the command:

- RP1210_SendCommand(RP1210_Get_Protocol_Connection_Speed)

The DPA 5 supports 2 (Dual CAN) or 4 (Quad CAN) CAN (J1939/ISO15765/J2284) channels. To access these channels, the DPA 5 API supports this through an application issuing a modifier to the RP1210_ClientConnect() function call:

- RP1210_ClientConnect("J1939:Channel=X")

These two modifiers can be combined. For example, "J1939:Baud=Auto;Channel=2".

2.2.4. J2534 Defined Protocols Supported

- ❑ CAN (Raw CAN)
- ❑ J1850VPW (GM Class II)
- ❑ ISO15765
- ❑ GMLAN (HSCAN, SWCAN)
- ❑ ISO14230 (KWP2000)
- ❑ ISO9141-2
- ❑ J1708/J1587
- ❑ J1939

2.2.5. Additional Protocols Supported by Native Drivers

- ❑ J2411 (GM SWCAN)
- ❑ ALDL

2.3. SYSTEM REQUIREMENTS

If you are not familiar with selecting a PC for your diagnostic applications, we recommend starting with a computer compatible with the latest version of the TMC RP1208 (PC Selection Guidelines for Service Tool Applications). In addition to the aforementioned document, the following items are recommended or required.

Item	Requirement
PC	IBM-Compatible
Processor	1GHz or Faster
RAM	256MB (512MB Preferred)
USB Port	USB Version 1.1 or Higher
Operating System	Windows Vista (32-bit or 64-bit) Windows 7 (32-bit or 64-bit) Windows 8 (32-bit or 64-bit)

3. GETTING STARTED WITH THE DPA

If you ordered the DPA 5 as part of a kit, it should include the following items:

- ✓ DPA 5 Diagnostic Tool
- ✓ 6-pin/9-pin Deutsch Connector “Y” Cable, for vehicle-side connection
 - The cable supports two CAN channels and is configured for the Freightliner Cascadia.
- ✓ USB Cable with screw-in ears to secure the cable to the DPA 5 case
- ✓ DPA 5 Installation Disc
- ✓ Printed Quick Start Sheet
- ✓ Bluetooth PC dongle (if a Bluetooth kit was purchased)

Please note that DG Technologies does customize our kits, so what you receive may vary.

3.1. DRIVER INSTALLATION

Attention!


- ✓ Install DPA drivers from CD before connecting DPA to your PC.
- ✓ To install drivers you must be logged into the administrator account or have administrator privileges.
- ✓ If you run into problems installing the drivers or the DPA, please do not hesitate to contact technical support at (248) 888-2000.

Attention!

The DPA drivers provided on the installation CD are installed by inserting the disc into your PC's CD-ROM drive. The latest drivers and firmware are always available at www.dgtech.com/download.php. If you have any questions about the install, please contact our technical support staff.

If setup does not begin automatically, use the following sequence:

Start → All Programs → Accessories → Run → [CD_Drive_Letter]:\DPA5Install.exe and click **OK**

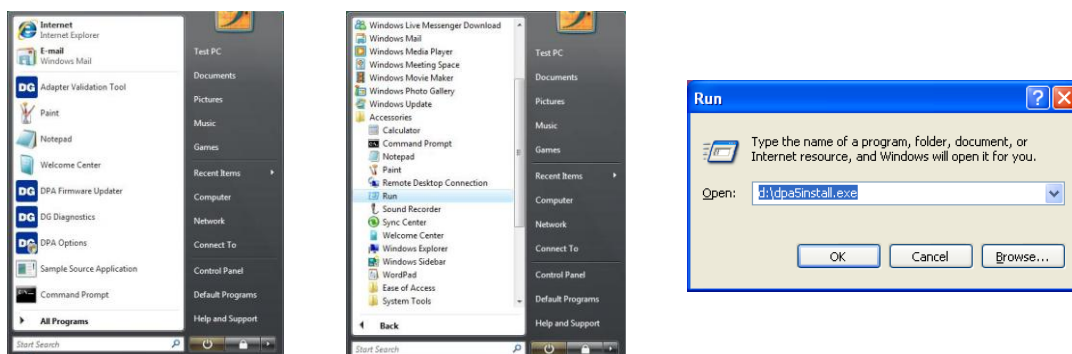

After the drivers are installed, restart your computer. While rebooting, continue following the next instructions.

3.2. WINDOWS SECURITY SCREEN

If you receive this Windows Security screen, check the **Always trust software from “DG Technologies”** and press the **Install** button. Otherwise, the driver installation will fail.



3.3. CONNECT USB CABLE TO THE DPA AND THEN TO PC

Connect the USB cable to the DPA and PC. The USB cable that comes with the DPA 5 has ears that allow the cable to be screwed into standoff screws on the DPA 5 frame, greatly reducing the chance of breaking the USB connector on the DPA circuit board.

PC-side USB Cable



3.1. CONNECT VEHICLE-SIDE CABLE TO THE DPA



WARNING!

Connect the vehicle-side cable to your DPA. **Do not connect to vehicle first! Pins 6 and 8 on the DB25 connector are power and ground and can arc if not careful, potentially blowing a fuse on the vehicle!**




Vehicle-Side 6-pin/9-pin Deutsch “Y” Cable (Heavy-Duty)

3.2. CONNECT VEHICLE-SIDE CABLE TO THE VEHICLE


Now, connect the DPA to the vehicle, verifying that the DPA **Power** LED is lit.

3.3. FINALIZE PC INSTALL

Plug the DPA 5 into the PC via the USB cable with the DPA 5 powered on. The following screen will display in the lower right corner for about five seconds.

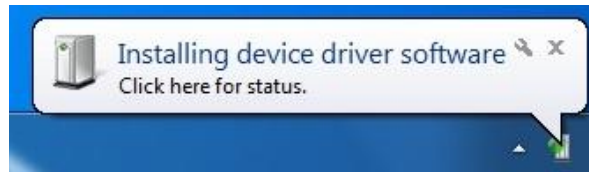

That screen will be followed by this screen. Your DPA 5 is now ready for use.

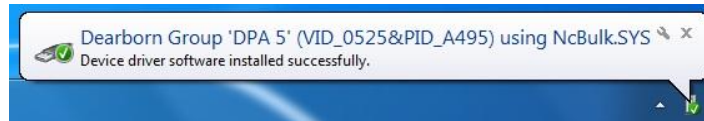

3.4. AUTOMATIC FIRMWARE UPDATE

When a DPA drivers release is made, a specific set of DPA firmware is validated with that release. In this release the firmware that was validated can be found on the cover page of this manual.

After you have finished installing the Windows device drivers you can begin using your DPA. If the **Automatic Firmware Update** option is on (by default, it is), every time you connect to the DPA, the drivers check to see if a newer version of firmware is available on the hard drive. If a newer version is available the user will be prompted (see Figure 5.1) to upgrade to that version. Press **Yes** and the upgrade process begins automatically. After the firmware update, restart your application.

DO NOT DISCONNECT POWER FROM THE DPA 5 DURING A FIRMWARE UPDATE!!! ALLOW THE UPDATE TO FINISH OR YOU WILL HAVE TO MANUALLY UPDATE THE FIRMWARE!

The following is the dialog box that will be displayed if out-of-date firmware is detected. Press **Yes** to update.

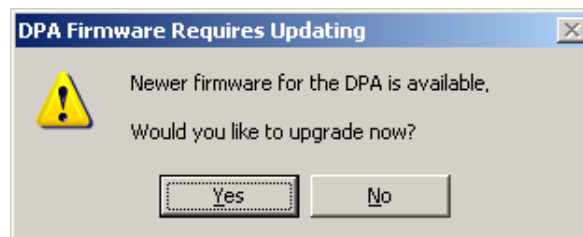


Figure 5.1. DPA Firmware Out of Date Dialog Box

Automatic Firmware Update is an option that is most likely turned **On** in your installation. Some customers receive special drivers where this is not the case, however this paragraph assumes that this option is turned on, and set to a value of 1. To learn more about this option, see the chapter entitled **Modifying DPA Settings – RP1210 Options Program**.

4. TROUBLESHOOTING / VALIDATING YOUR DPA WITH ADAPTER VALIDATION TOOL (AVT)

If your OEM application is having trouble using the DPA after following the instructions in this manual for configuring that application, you can use the Adapter Validation Tool (AVT) to troubleshoot the DPA and validate that the DPA drivers are installed properly, the PC can communicate with the DPA, and the DPA can see messages on the data bus.


- ❑ Most DPA technical support calls about OEM applications not working come from users who have not configured that OEM application to use the DPA, or who have selected the incorrect protocol.

After you have followed the instructions to install the DPA drivers, connect the DPA to the vehicle and ensure the **Power LED** is on. Then connect it to the PC and listen for the familiar da-ding “USB device found” sound. If you cannot hear this sound, the PC cannot communicate with the DPA and you will not be able to get AVT to be successful. Try another USB port until you hear that sound.

- ❑ **If you plug in a DPA (or any other USB device) and get the New Hardware Found wizard, do not click Cancel. Go through the wizard completely! IF YOU CLICK Cancel, THE DPA WILL NOT WORK!**


4.1. ADAPTER VALIDATION TOOL “STARTUP” PROGRAM

The light and medium-duty world is different in the standards used to write software than the medium and heavy-duty world. For the most part (other than the new Volvo platform), it is based on the diagnostics connector. Due to the difference, DG has changed the startup of the Adapter Validation Tool (AVT) application. Now, when you click AVT on the desktop or from the start menu, a screen will be displayed asking the user what version of AVT to run.

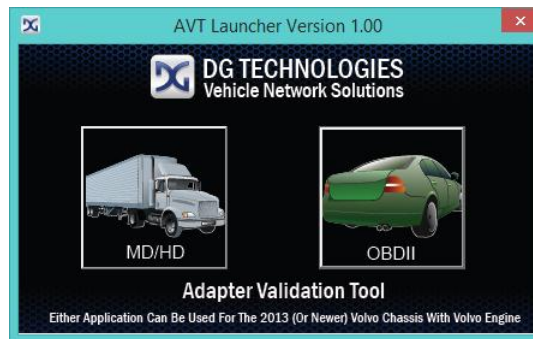


- ✚ Click on the MD/HD truck button if you have a 6 or 9-pin Deutsch connector. This is most typically found on medium and heavy-duty vehicles and J1708/J1587 and J1939 are the most common protocols.
- ✚ Click on the OBDII car button if you have an OBDII connector. This is most typically found on light and medium-duty vehicles and CAN/ISO15765, J1850, ISO9141, and ISO14230 are the most common protocols.
- ✚ You can use either program for the 2013 (or newer) Volvo chassis with Volvo engine that has the OBDII connector. See Appendix I for more information on testing this platform using the MD/HD version of AVT.

4.2. RULE OF THUMB FOR SELECTING A VEHICLE PROTOCOL FOR TESTING

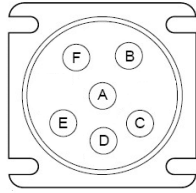


J1708 Connector (6-pin Deutsch)

This connector only has the J1708/J1587 protocol.

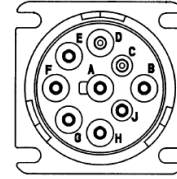

J1939 Connector (9-pin Deutsch)

OEMs switched to this connector when they moved to J1939. J1708 may not be available.

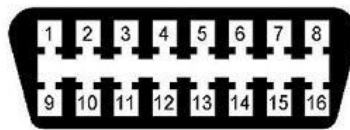


OBDII Connector

OBDII protocols are J1850VPW (GM/Chrysler), J1850PWM (Ford), ISO9141 (Euro/Asian), KWP2000 (Euro/Asian) as well as the ISO15765 (11-bit/29-bit CANID) protocol mandated for all vehicles since 2008.

AVT (OBDII) allows the user to select “OBDII” as a protocol and AVT will cycle through all OBDII protocols to see what protocol the vehicle supports.

The DPA 5 supports all OBDII protocols except the J1850PWM protocol. This protocol was prominent on Ford vehicles prior to 2005 when Ford switched to ISO15765.

4.3. ADAPTER VALIDATION TOOL FOR HEAVY AND MEDIUM-DUTY VEHICLES, AVT (MD/HD)

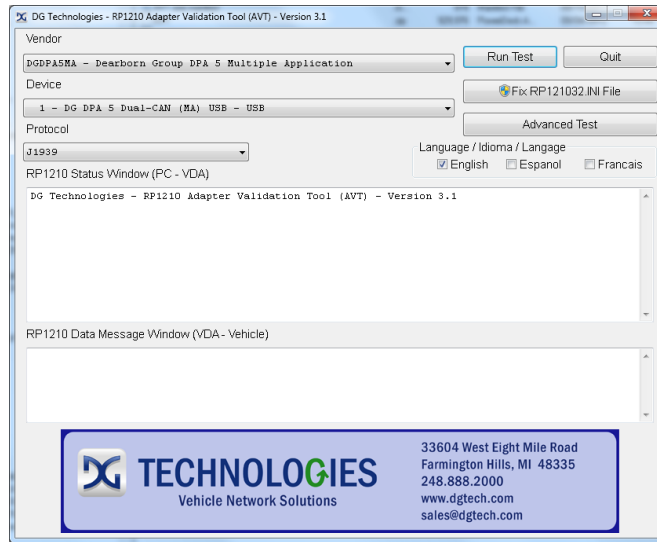

Select the DPA 5 Dual-CAN / Bluetooth device (or DPA 5 Quad-CAN):

- Vendor** DGDPA5MA - Dearborn Group DPA 5 Multi Application
- Device** 1 – DG DPA 5 Dual-CAN USB – USB
 2 – DG DPA 5 Quad-CAN USB – USB
- Protocol** J1708 or J1939 (depending on your application)

Then click the **Run Test** button. Depending on the results of the test, both the **RP1210 Status Window** and **RP1210 Data Message Window** will turn **green** (pass) or **red** (fail).

4.3.1. AVT Test Outcomes

If the **RP1210 Status Window** turns **red**, then there is a problem causing the PC not to communicate with the DPA. This may be something as simple as having power to the DPA or a USB issue. Disconnect the DPA from the vehicle and PC; then reconnect them, this time connecting to another USB port on the PC.


If the **RP1210 Status Window** turns **green** and the **RP1210 Data Message Window** turns **red**, then the PC is seeing the DPA, but not seeing messages from the data bus. Check the vehicle ignition switch and vehicle to adapter cabling. Disconnect the DPA from the vehicle and PC; then reconnect them.

*If you see data in the **RP1210 Data Message Window**, your DPA is installed and functioning properly! Refer to the chapter on how to configure your OEM application to use the DPA.*

Read the **Test Results Discussion and Next Steps** screen carefully and follow those directions to help diagnose where the issue may be. If, after reading and following those instructions, you cannot get the DPA working, please contact DG technical support.

- Many DPA technical support calls could have been avoided by following the instructions on the **Test Results Discussion and Next Steps** screen.

4.3.4. Bad Connection (PC to DPA), Not Able To Read Data (DPA to Vehicle) – Red/Red

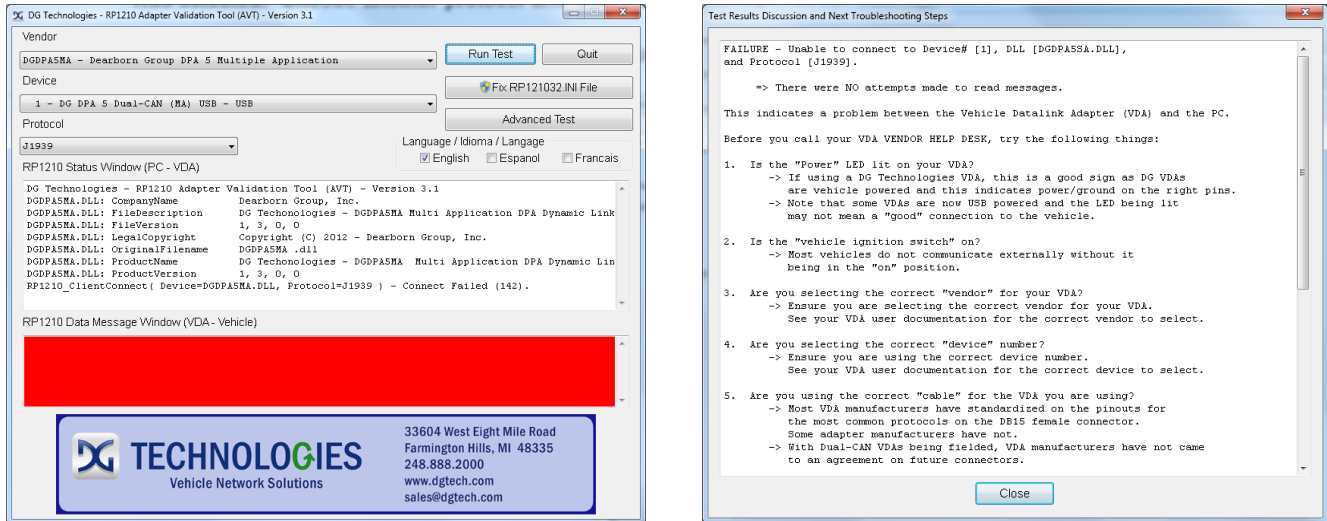

The above screen snapshots show the PC not connecting to the DPA (RP1210 Status Window).


- ❑ A Red/Red result indicates the PC is not seeing the DPA. Unplug DPA from vehicle and PC and reconnect to both using a different USB port. Ensure that you hear the da-ding “USB Device Found” sound. If you cannot hear the sound, reboot the PC and run AVT again.

4.3.5. Not Seeing DPA in OEM Application VDA Selection List

If you have installed the DPA drivers and can get AVT to a Green/Green outcome, you should be able to configure your diagnostic application to use the DPA. If your diagnostic application does not display **DG DPA 5 Dual-CAN, USB** in their VDA selection dialog box, this could indicate one of three things:

1. The application is not RP1210 compliant and does not work with the DPA.
 - a. Some applications require a specific, proprietary adapter.
2. Application is RP1210 compliant, but DPA does not support the protocol needed.
3. Problem with the main RP121032 INI file.
 - a. Some VDAs create issues with the RP121032 INI file when they install/uninstall.
 - b. Many OEM diagnostic applications are aware of this issue and can read through the errors.


When the AVT software is launched, you will be told if a problem exists in the main RP121032 INI file. If you wish to fix this issue (**very highly recommended**), press the **Fix/Change RP121032.INI File** button on the main screen. If your PC is running Windows Vista or Windows 7, you will be prompted for administrator privileges. The following is the dialog box that will appear when AVT is launched and a problem is found in the main RP121032 INI file.

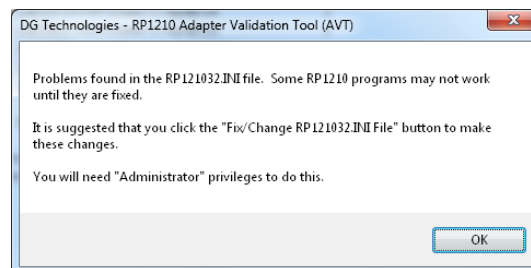


When you press the **Fix/Change RP121032.INI File** button, AVT will bring up a separate program called **Fix INI** that will allow you to view and fix the RP121032 INI file if there are errors detected. You can also change the VDA that appears first in the list of the OEM diagnostic software applications.

In the example below, a bad INI file was detected (depicted by a yellow background). Note the multiple commas and spaces between entries.

Click the **Make Changes** button and the INI file problem will be corrected. If you wish to make a specific adapter first in the list, you can select that vendor in the **Vendor to Make First in List** before pressing the **Make Changes** button.

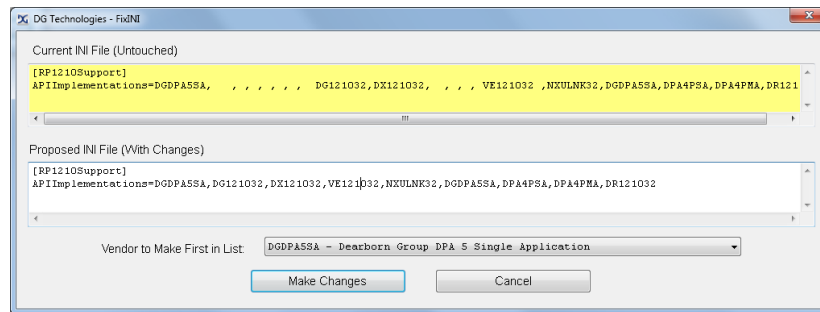

The next picture shows the dialog box indicating that the INI file was fixed.

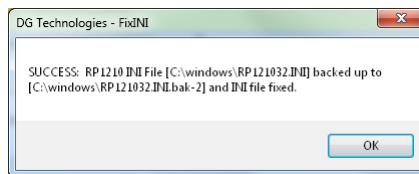


4.3.6. Advanced Testing Dialog

With the J1939 data bus moving to 500k, there is a lot of RP1210 and J1939 committee focus on VDA vendors doing J1939 automatic baud detection to detect either a 250k or 500k J1939 data bus without creating issues. There is also a growing need for advanced testing on vehicles that have a second CAN data bus.

The DPA 5 API Supports the following commonly used RP1210_ClientConnect() modifications:

- Protocol:Baud=Auto
- Protocol:Baud=XXX
- Protocol:Channel=X
- Protocol:Baud=Auto;Channel=X
- Protocol:Baud=XXX;Channel=X

Pressing the **Advanced Test** button brings up the dialog box shown below.

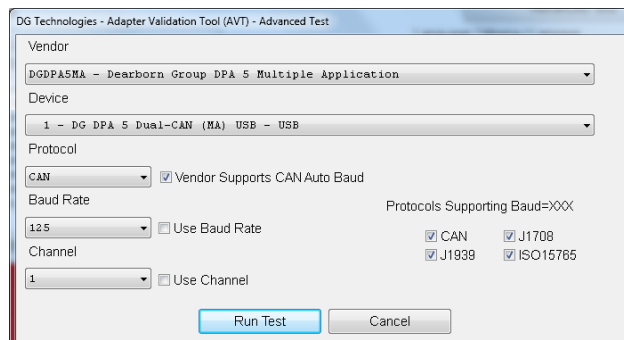

4.3.7. Vendor, Device, Protocol

Vendor, **Device** and **Protocol** fields are the same as described in normal testing above.

4.3.8. Baud Rate Drop Down List Box

The **Baud Rate** drop down list box allows the user to select one of the supported protocol speeds for the selected protocol. The entries in this list box come from the VDA vendor's INI file. Click the **Use Baud Rate** checkbox to activate a "Protocol:Baud=XXX" connection. If both the **Use Baud Rate** and **Use Channel** checkboxes are checked, then AVT will initiate a "Protocol:Baud=XXX;Channel=X" connection.

4.3.9. Channel Drop Down List Box

The **Channel** drop down list box allows the user to select one of the supported channels for the selected device. The entries in this list box come from the VDA vendor's INI file. Click the **Use Channel** checkbox to activate a "Protocol:Channel=X" connection. If both the **Use Baud Rate** and **Use Channel** checkboxes are checked, then AVT will initiate a "Protocol:Baud=XXX;Channel=X" connection.

4.3.10. Vendor Supports CAN Auto Baud Checkbox

This checkbox indicates whether or not the API supports CAN (CAN, J1939, ISO15765) automatic baud detection. Even though this variable may be set to TRUE, the next four fields indicate whether the API supports Baud=XXX connect formats for CAN, J1939, and ISO15765. This field is just an informational field, and not all VDA vendors will support this feature.


4.3.11. Protocols Supporting Baud=XXX

These checkboxes indicate whether or not the API supports setting a specific baud rate (or automatic baud detection) for a specific protocol. These entries come from the VDA vendor's INI file. These fields are just for informational purposes. Not all VDA vendors will support this feature.

4.3.12. Advanced Testing Commands – No Error Checking

When using this dialog box to initiate an advanced test, there is no error checking done to prevent the user from initiating a "Baud=XXX" or "Channel=X" connection to a VDA even if the vendor does not support that connection format.

4.4. ADAPTER VALIDATION TOOL FOR LIGHT AND MEDIUM-DUTY VEHICLES, AVT (OBDII)

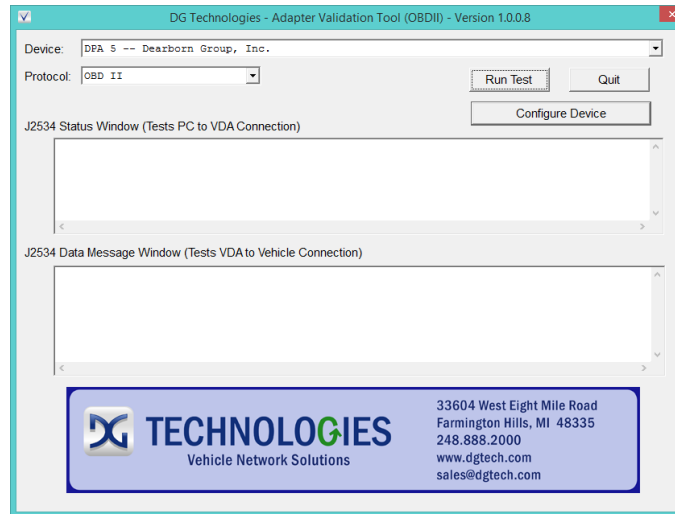

Select the correct Device:

- ❑ **Device** DPA 5 – Dearborn Group, Inc.
- ❑ **Protocol** OBD II
 - Using the **OBD II** protocol selection means that AVT will attempt to connect using all OBDII protocols that the selected adapter supports (i.e. J1850VPW, ISO9141, ISO14230, ISO15765, etc) and with all OBDII options and OBDII speeds for that protocol (i.e. CAN 1Mb 11-bit, CAN 1Mb 29-bit, CAN 500Kb 11-bit, CAN 500Kb 29-bit, etc). DG recommends using the OBDII protocol setting initially since all vehicles after 1996 have to support an OBDII protocol.
 - You can also use a specific protocol and AVT will connect using all speeds and options for that individual protocol.
 - **The DPA 5 supports all OBDII protocols except the J1850 PWM protocol. This protocol was prominent on Ford vehicles prior to 2005.**

Then click the **Run Test** button. Depending on the results of the test, both the **J2534 Status Window** and **J2534 Data Message Window** will turn **green** (pass) or **red** (fail).

4.4.1. AVT Test Outcomes


If the **J2534 Status Window** turns red, then there is a problem causing the PC not to communicate with the adapter. This may be something as simple as having power to the adapter or having a USB cabling issue. Disconnect the adapter from the vehicle and PC; then reconnect them, this time connecting to another USB port on the PC.

If the **J2534 Status Window** turns green and the **J2534 Data Message Window** turns red, then the PC is seeing the adapter, but not seeing messages from the vehicle. Check the vehicle ignition switch and vehicle to adapter cabling; disconnect the adapter from the vehicle and PC; then reconnect them.

If you see data in the **J2534 Data Message Window**, then the adapter is installed and functioning properly.


If after following the **Test Results Discussion and Next Steps** screen, you cannot get the adapter to read data, contact DG technical support.

4.4.2. Good Connection (PC to DPA), Good Read of Data (DPA to Vehicle) – Green/Green

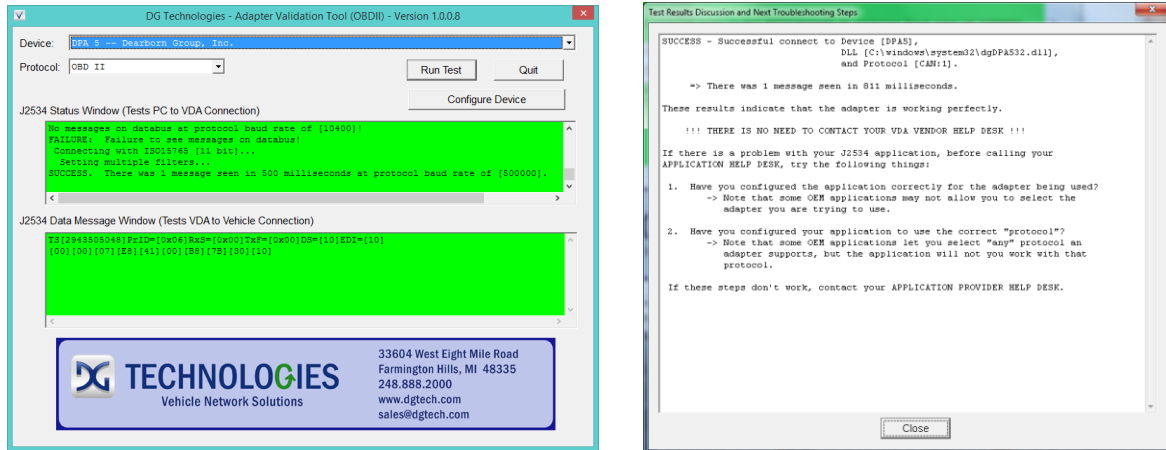


The above screen snapshots show the PC successfully connecting to the DPA and the successful reading of data bus data from the CAN data bus. Once the test is complete, the application will display an informational screen (image on the right) listing steps to potentially correct the issue.

4.4.3. Good Connection (PC to DPA), Not Able To Read Data (DPA to Vehicle) – Green/Red

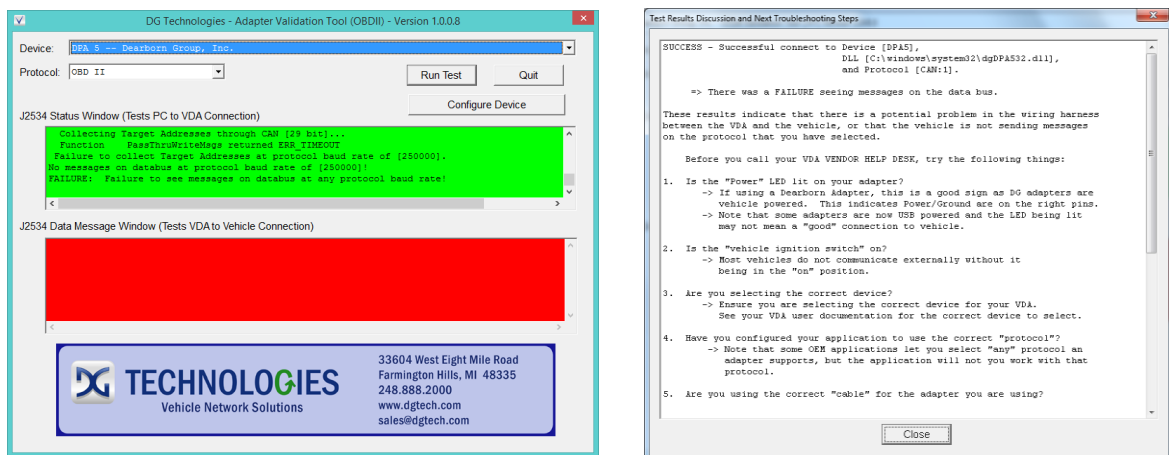

The above screen snapshots show the PC successfully connecting to the DPA but the application is not able to read data bus data from the data bus selected (CAN). Once the test is complete, the application will display an informational screen (image on the right) listing steps to potentially correct the issue.

4.4.4. Bad Connection (PC to DPA), Not Able To Read Data (DPA to Vehicle) – Red/Red

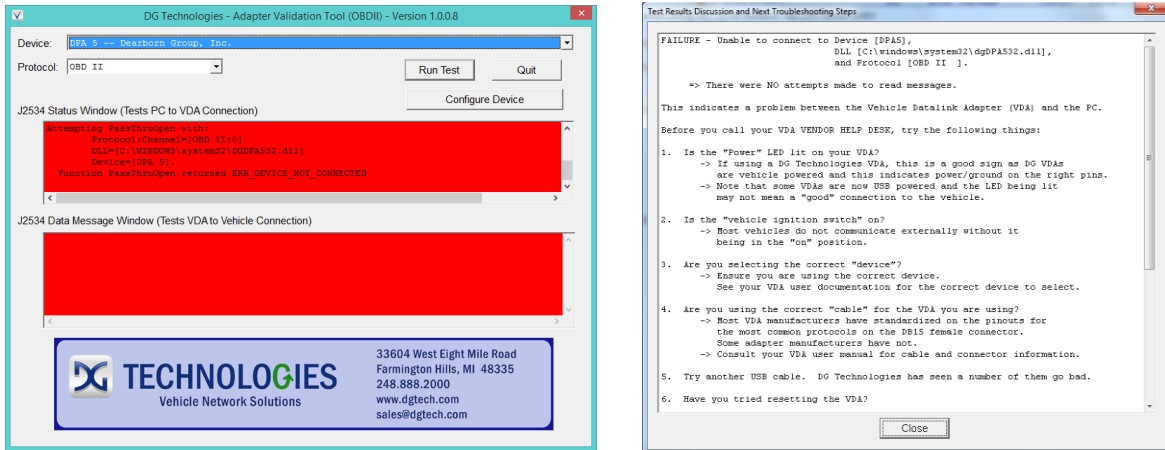

The above screen snapshots show the PC not able to connect to the DPA at all. Once the test is complete, the application will display an informational screen (image on the right) listing steps to potentially correct the issue.

5. SETTING UP YOUR RP1210-COMPLIANT OEM DIAGNOSTIC APPLICATIONS

The DPA works with all RP1210C, RP1210B, and RP1210A compliant applications that support J1708/J1587, CAN/J1939, J1850 VPW (GM Class II) and the ISO15765 protocols. The DPA also works with applications that were specifically written to use the DG non-RP1210-compliant *native drivers* for other protocols, such as GM UART and ISO9141. This section shows how to configure the most common RP1210-compliant diagnostic applications to work with the DPA 5.

5.1. NOTES ON SELECTING AN RP1210 COMPLIANT ADAPTER

Selecting an RP1210 adapter, commonly referred to as a Vehicle Datalink Adapter (VDA) varies widely from application to application; however, the terminology remains pretty much the same. The following table helps to introduce you to the terminology and helps you to make the correct selections the first time.

- ✚ You must set up every application (in their own individual way) to use the DPA!
- ✚ Not all OEM applications save the adapter configuration! Some make the user select the adapter to be used every time the application is opened.

If You See These Terms	Select This
Vendor API DLL Manufacturer Adapter Manufacturer	Dearborn Group DPA 5 Multi Application Or DGDPA5MA
Device Name Adapter Name	DG DPA 5 Dual-CAN (MA) USB, USB Or DPA 5 #[DPA 5 Bluetooth ID] (MA) Bluetooth, Wireless
Device Number DeviceID	1 Or Bluetooth Wireless DeviceID
Protocol (Depends on Application)	Most Commonly Encountered: <ul style="list-style-type: none"> ✓ J1708 (J1708/J1587) ✓ J1939 ✓ ISO15765 ✓ CAN

5.2. CONFIGURING APPLICATIONS TO USE THE DPA 5

The following examples show how to select your DPA 5 device using the USB cabling method. Bluetooth device entries are based on the DPA 5 Bluetooth ID (see Bluetooth appendix).

5.3. ALLISON DOC

1. Start program.
2. Click **Connect to Vehicle**.
3. Select the Correct Transmission Type.
4. Uncheck **Smart Connect**.
5. Click **Connect**.
6. Click **Advanced Setup**.
7. Select vendor of **Dearborn Group DPA 5 Multi Application**.
8. Select protocol of **J1939** or **J1708**.
9. Select correct device of **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
10. Click **OK**.

5.4. BENDIX ABS DIAGNOSTICS

NOTE: DO NOT RUN Bendix ABS Diagnostics until you have done the following:

1. Start program.
2. If *Diagnostic Interface Selection* dialog box does not appear, click on **Vehicle Interface Adapter** icon.
 - a. Select **RP1210A Device Using J1708 Line: DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
3. Click **OK**.

5.5. CATERPILLAR ELECTRONIC TECHNICIAN (CAT ET)

1. Start Program.
2. Click Utilities → Preferences → Communications from the menu bar.
3. Click on **Communication Interface Device** dropdown box.
4. Select **RP1210 Compliant Device**.
5. Click **Advanced**
6. Select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)** in the RP1210 Communication Adapter Device box.
7. Click **OK**
8. Check **Enable Dual Data Link Service**
9. Click **OK**.

CAT ET Notes:

- ✚ Enable Dual Data Link. This checkbox should be “checked” in most cases. However, on some older J1708 (ATA) only vehicles, ET will not work with this checkbox checked. If ET does not connect, try “un-checking”, or “checking” this button.
- ✚ The DPA product line does not support the CAT Data Link (CDL) protocol that is still common among certain CAT off-highway vehicles and industrial stationary equipment. CDL is a **proprietary protocol** and there are no generic adapters on the market that support this protocol. If you must connect to a CDL network, you must go to your local CAT distributor and purchase a CAT adapter.
 - To find out if your vehicle/equipment is CDL or a standard protocol (J1708/ATA, J1939), you should look at the diagnostic connector for that equipment in the service manual.

5.6. CUMMINS INSITE

1. Start Program.
2. Click on File → Connections → Add New Connection.
3. Click **Next**.
4. Click radio button for **RP1210 Adapters** and click **Next**.
5. Select correct vendor, device, and protocol:
 - a. **Dearborn Group DPA 5 Multi Application**
 - b. **DG DPA 5 Dual-CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**
 - c. **Auto Detect.**
 - i. **If you are on an older vehicle and it does not connect, choose J1708.**
6. Click **Next** and a Connection Name screen appears.
7. Click **Next** and a screen prompts you to indicate whether you want to make this connection active or set up another connection.
8. Click on ***make this connection active***.
9. Click **Finish**.

5.7. CUMMINS POWERSPEC (5.5 OR NEWER)

- + Start Program.
- + Click on **Advanced**.
- + Click **Settings** button.
- + Datalink Adapter:
 - a. **Dearborn Group DPA 5 Multi Application**
- + **Device List:**
 - a. **DG DPA 5 Dual-CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**
- + **Datalink Protocol:**
 - a. **Auto Detect (or choose protocol for your engine).**
- + Click **Save** button.

PowerSpec Notes:

- + PowerSpec Version 5.5 is required to use the DPA 5. Older versions of PowerSpec were not completely RP1210-compliant.

5.8. DETROIT DIESEL DIAGNOSTIC LINK V7

5.8.1. From Windows Start Menu

1. Start → Programs → Detroit Diesel → Diagnostic Link → SID configure
2. Select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
3. Click **OK**.

5.8.2. From Inside DDDL

1. Tools → Options → Connections Tab → SID Configure.
2. Select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
3. Click **OK**.

5.9. DETROIT DIESEL DIAGNOSTIC LINK VERSION 6.47

There are two ways to open v6.47, depending on your installation.

A. If you have the Detroit Diesel Electronic Tool Suite on your desktop:

1. Select Detroit Diesel Electronic Tool Suite icon from desktop.
2. Select Configure button.
3. Select DG DPA 5 Dual-CAN (MA) USB, USB, select OK button.
4. Select Refresh button.
5. Click on highlighted DDDL 6 item.
6. Select Look at active and inactive faults.

B. If you have the Diagnostic Link icon on your desktop:

1. Select Diagnostic Link icon from desktop.
2. Select Look at active and inactive faults.
3. To change the adapter, select Tools | Options | Interface
4. Select DG DPA 5 Dual-CAN (MA) USB, USB from Local Communication Interface drop-down list.
5. Select OK button.

5.10. DANA DIAGNOSTIC TOOL 2.X.X

1. Start program
2. Under **Adapter Selection**, choose **Dearborn Group RP1210A:DG DPA 4/4 Plus USB, USB**
3. Select **Connect J1708** or **Connect J1939** or **Connect PLC** as appropriate for your controller.

5.11. EATON SERVICERANGER 3.X

1. Start Program
2. Click Tools → Settings → Connection.
3. Under **Driver** choose **Dearborn Group DPA 5 Multi Application**
4. Select **DPA 5 Dual CAN USB** (or **DPA 5 #[DPA 5 Bluetooth ID] Bluetooth**) for both the J1708 and J1939 device.
5. Click **OK**.

5.12. FREIGHTLINER SERVICELINK (INCLUDING CASCADIA MODEL – DUAL CAN CHANNELS)

1. Start program.
2. From the top menu bar, choose **Admin**.
3. Click on **Show All Devices**.
4. Vendor = **Dearborn Group DPA 5 Multi Application**
5. J1708 Device = **DG DPA 5 Dual-CAN (MA) USB, USB**
6. J1939 Device = **DG DPA 5 Dual-CAN (MA) USB, USB**
7. CAN Device
 - a. Click **Configure**
 - b. Select **DG DPA 5 Dual-CAN (MA) USB, USB**
8. Click **Save Settings**.

5.13. INTERNATIONAL TRUCK AND ENGINE

5.13.1. Master Diagnostics (MD Fleet)

1. Start program.
2. Choose File → MD Settings → COM Device → Window with general VDA selection
3. Select *Dearborn Group DPA 5 Multi Application* → Window with specific port **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.

5.13.2. Navistar Hydraulic ABS

1. Start program.
2. Choose File → Hydraulic ABS Settings → COM Device → Window with general VDA selection
3. Select *Dearborn Group DPA 5 Multi Application* → Window with specific port **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.

5.13.3. Navistar IPC

1. Start program.
2. Choose File → Settings → COM Device → Window with general VDA selection
3. Select *Dearborn Group DPA 5 Multi Application* → Window with specific port **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.

5.13.4. Diamond Logic Builder (DLB)

1. Start program.
2. Choose Tools → Select Com Link → Listing of adapters
3. Select *Dearborn Group DPA 5 Multi Application* → Listing of ports **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.

5.13.5. Service Assistant (The new MD Fleet)

1. Start program.
2. Press third button from the top along the left side (has an icon that looks like a miniature interface cable.)
 - a. A window comes up that says Communication Device Selection and has two drop down boxes.
 - b. Select *Dearborn Group DPA 5 Multi Application* → **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.

5.13.6. ServiceMaxx:

1. Select ServiceMaxx icon from desktop
2. Enter username and password (if required)
3. Select Tools → Select COM Link → Dearborn Group DPA 5 Multi Application → DG DPA 5 Dual-CAN (MA) USB, USB → select J1708 or J1939 depending on engine type.
4. "Searching for Engine" appears
5. Select engine type when prompted and click OK button.

5.14. MERITOR-WABCO TOOLBOX

1. Start Program.
2. Click **System Setup**; then select **COM Port**.
3. Select **Dearborn Group DPA 5 Multi Application**; the protocol to use is J1939 or J1708.
4. Select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)** and click **OK**.

5.15. VOLVO/MACK VCADS PRO

5.15.1. From Initial VCADS Setup

1. When prompted to configure a Communication Unit select **RP1210A adapter**.
2. When prompted for the adapter, select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
3. Select **USB** for the Port.
4. Select **J1708** for the protocol.
5. When prompted for the Electrical Systems.
 - a. Click **Volvo Trucks – VERSION2** and select **RP1210A Adapter**
 - b. Click **Volvo Trucks – Vehicle electronics '98** and select **RP1210A Adapter**
 - c. Click **Mack Trucks – V-MAC I/II/III, ITC** and select **RP1210A Adapter**
 - d. Click **Volvo Trucks – V-MAC IV** and select **RP1210A Adapter**
6. Continue with installation.

5.15.2. From Inside VCADS

1. Start Program.
2. Click the **Tools** menu and choose **Options**.
3. Select the **Comm. Unit Configuration** tab.
4. Select **RP1210A Adapter** and then select **DPA 5 Dual CAN USB (or DPA 5 #[DPA 5 Bluetooth ID] Bluetooth)**.
5. Select **USB** for the Port.
6. Select **J1708** for the protocol.
7. Go to the **Comm. Unit Selection** tab.
 - a. Click **Volvo Trucks – VERSION2** and select **RP1210A Adapter**
 - b. Click **Volvo Trucks – Vehicle electronics '98** and select **RP1210A Adapter**
 - c. Click **Mack Trucks – V-MAC I/II/III, ITC** and select **RP1210A Adapter**
 - d. Click **Volvo Trucks – V-MAC IV** and select **RP1210A Adapter**
8. Click **Ok**.

5.16. VOLVO/MACK PREMIUM TECH TOOL (PTT) – VERSION 2.X

1. Start Program.
2. Select Settings from the PTT menu.
3. Go to the Communication Unit tab:
4. Highlight RP1210 Dearborn Group DPA 5 Single Application USB.
5. Select Activate (green circle with checkmark).
6. In a few seconds, under the Status column, Activated will appear next to RP1210 Dearborn Group DPA 5 Single Application USB.
7. Select the OK Button.
 - Wait a few minutes to establish connection. If connection doesn't occur, re-boot the PC.
 - Do not select **Connect** immediately after PTT opens. Reading product data.... will appear after a little bit of time while the connection is being established.


5.17. VOLVO/MACK PREMIUM TECH TOOL (PTT) – VERSION 1.X

1. Start Program.
2. Select Settings from the PTT menu.
3. Go to the Communication Unit configuration tab:
 - a. It is here that you select the settings for each adapter that you may use. For example, if you have an RP1210A adapter, it is here that you select which adapter, port, and protocol.
 - b. NOTE: This identifies the settings for each adapter. It does not select which adapter the PTT application will use to communicate with the vehicle.
4. Go to the Comm unit selection tab:
 - a. It is here that you identify which adapter is to be used by the PTT application to communicate with the vehicle. You may have to change this selection depending upon the vehicle.
 - b. For example, if you typically use an 88890020 adapter in direct mode, when you need to communicate with an older vehicle you will need to change to RP1210A adapter or the 9998555 adapters, depending upon the vehicle.

6. SETTING UP YOUR J2534-COMPLIANT OEM APPLICATIONS AND DPA 5

Setting up and reflashing of a component using a J2534-compliant OEM application is a very lengthy process and is out of the scope of this manual. For more information, you can refer to the OEM application documentation or you can download the OEM application reflashing guide from the Dearborn Group VSI-2534 device downloads page.

In general, there will be a screen that will appear at some point that allows a user to select a J2534-compliant **Vendor** and **Device** for the reflashing event. When you see this type of screen, choose **Dearborn Group, Inc.** and/or the **DPA 5**.

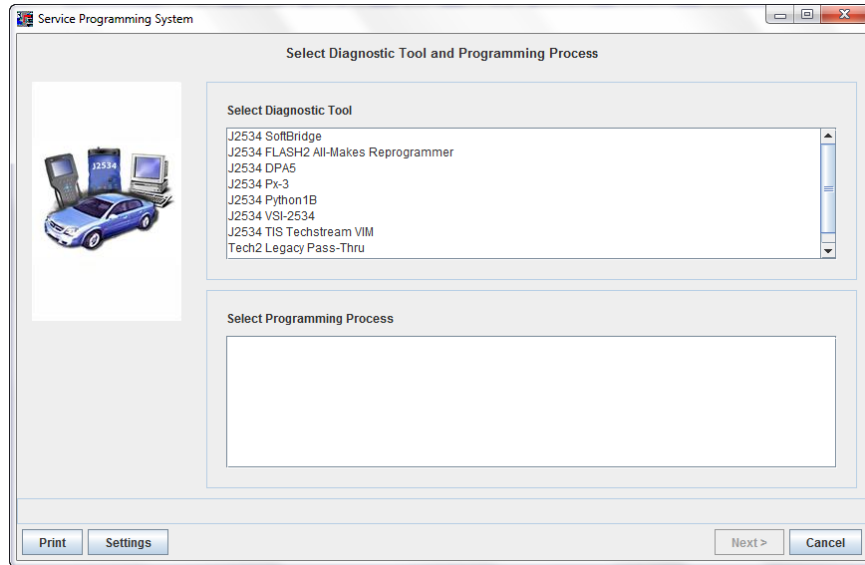

The General Motors TIS2Web - J2534 Application VDA selection screen.

7. EXPLAINING MULTI-APPLICATION AND SINGLE-APPLICATION DRIVERS

This release of the DPA drivers supports Multi Applications running simultaneously (i.e. sharing the DPA) through the DGDPA5MA drivers. For example, there may be a time where you need to run an engine and transmission application at the same time or there may be a need to run a data logging application alongside your engine diagnostics. It has been DG's experience that when several OEM applications are running simultaneously, especially on a crowded J1939 data bus, they sometimes miss critical timing events and messages and do not behave as they would normally.

7.1. WHY TWO OEM APPLICATIONS MAY NOT WORK WHEN SHARING THE DPA

Running two or more OEM applications that were not designed to **share** an adapter in a situation where they are in fact **sharing the adapter** is a hit-or-miss scenario. They might work well together and they may not. The two big reasons some work well together and others don't is **J1939 addressing** and **timing related**.

7.1.1. J1939 Addressing Issues

Per SAE J1939, every ECM or application using a VDA must go through a process to **claim** a J1939 address. According to J1939, before an ECM or application can send or receive long messages (greater than the standard 8-byte CAN messages); an address must be claimed. These **long** messages are sent using what is called the J1939 Transport Protocol (TP). Long messages are used for data such as make, model, serial number, VIN, and for reprogramming and calibration (very common in OEM diagnostic applications).

The past RP1210 specifications (RP1210-0, RP1210A, and RP1210B) implied that a Vehicle Diagnostic Adapter (VDA) should have only 1 J1939 address. This means the VDA will handshake for TP messages to/from 1 specific J1939 address. This meant that if one application claims 249 and another application connected while **sharing the VDA** (i.e. Multi-Application mode) and claimed address 250; one address will get dropped. This means that only one of those applications will be capable of sending and receiving long TP messages. If the application that had its address get dropped depends on these long TP messages, it may not behave properly.

Another problem is that some OEM applications don't handle the RP1210 return value "ERR_ADDRESS_LOST" when they lose their **claimed** J1939 address. The application may keep running oblivious to the fact they are not going to get any long messages; no matter how many times they request them.

The DPA 5 multi-application (MA) drivers behave in a **semi-shared-addressing** scenario. If the first application claims an address like 249, and the second application claims 249, then both apps will get TP messages destined for 249. If the second application were to claim 250, it would be denied.

7.1.2. Timing Related Issues

The second most common reason that two OEM applications don't work well together is timing. OEM applications expect to send a message out and read a response back from a controller in "X" amount of time. When two or more applications are sharing the VDA, messages are stacked for sending in some sort of a transmit buffer and received messages are also stacked in a receive buffer (commonly called a **queue**). When you stack message requests and responses, this slows down the send/receive process and many applications **timeout** because of it. The more applications sharing the VDA, the more potential there is for a delay or timeout scenario.

7.1.3. OEM Applications are NOT Tested in a Shared VDA Scenario


NO OEM APPLICATIONS CLAIM TO BE MULTI-APPLICATION CAPABLE!

None of them test with another OEM application running. They assume that they are the only application running on that PC through the VDA they are using.

This is why if you want to run multiple apps at the same time, some apps have to be started first before the second application. Sometimes, they just won't work no matter what you do!

8. RP1210 OPTIONS PROGRAM

The RP1210 Options program allows you to set and configure various aspects of the DPA 5. The following sections describe the roles of the variables. The DPA 5 Bluetooth Configuration Utility is discussed later.

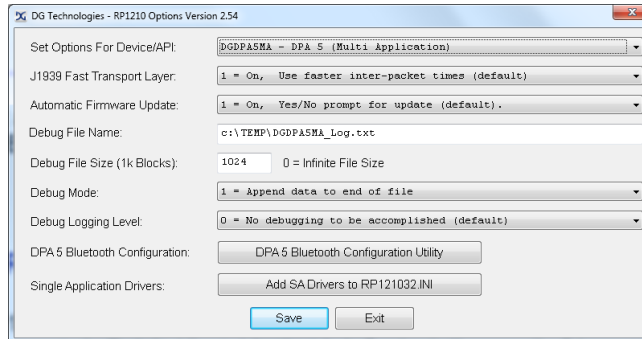

8.1. RP1210 Options Notes; RP1210 DPA Driver Sets

Version 2.0 (and higher versions) of the RP1210 Options program adds the capability of modifying the settings for all DPA driver sets that are installed on your computer. Version 2.53 (and higher) added support for the DG d-briDGe product and DG Netbridge products. Below is a table that briefly describes each driver.


Driver Set	Description
DG121032	DPA 4, 4 Plus and Prior DPAs (Single Application) Allows only one RP1210 application to run at a time. Products supported by this driver include DPA 4, DPA RF, DPA III Plus, and the DPA 4 Plus.
DPA4PSA	DPA 4 Plus Variants (Single Application) Allows only one RP1210 application to run at a time.
DPA4PMA	DPA 4 Plus Variants (Multi Application) Allows more than one RP1210 application to run at a time.
DGDPA5MA	DPA 5 Variants (Multi Application) Allows more than one RP1210 application to run at a time.
DGDPA5SA	DPA 5 Variants (Single Application) Allows only one RP1210 application to run at a time.
DBRIDGEM	d-briDGe Variants (Multi Application) Allows more than one RP1210 application to run at a time.
DBRIDGES	d-briDGe Variants (Single Application) Allows only one RP1210 application to run at a time.
NBRIDGEM	Netbridge Variants (Multi Application) Allows more than one RP1210 application to run at a time.
NBRIDGES	Netbridge Variants (Single Application) Allows only one RP1210 application to run at a time.

The **DPA 5 Bluetooth Configuration Utility** button will only be available if a DPA 5 API is selected.

8.2. Set Options for DPA Device/API

When selecting **RP1210 Options** from the program menu of an installed DPA driver set, the program should default this field to that particular DPA driver set. Note that you can only modify driver sets that have been installed.

If you want to modify an option for any DPA driver set, you select that DPA driver set with this field.

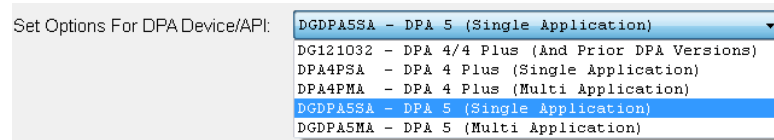

8.3. J1939 Fast Transport Layer (FAST_TRANSPORT Option)

When this option is in the **On (Default)** position, it significantly decreases reprogramming and reflashing times over the J1939 data bus by reducing the amount of time between J1939 transport protocol (TP) packets (used to break large messages into CAN 8-byte packets for transmitting on the data bus). With this option turned on, however, some PC applications and vehicle controllers may not be able to keep up with the DPA.

This option has long existed, and many OEM and component manufacturers using the DPA for end of line (EOL) programming stations have used it successfully. If you encounter a diagnostic or reprogramming/reflashing application that is having problems with the DPA using the J1939 protocol, we recommend setting this parameter temporarily to the **Off** position and then retrying the application.

This parameter makes little, if any, difference during standard diagnostic sessions.

8.4. Debug Logging Level (RP1210 INI Option DebugLevel)

This is an RP1210B introduced INI file option designed to record vehicle data bus data and other pertinent driver data to a text file. Chances are you will never need to use this, **DebugFile**, **DebugFileSize**, and **DebugMode** options unless you are directed by an OEM or DG to investigate possible software issues. Potential values for this option are:

- 0 = No Debugging to be Accomplished (Default).
- 1 = Only Connect/Disconnect/Error Messages.
- 2 = Add RP1210_SendCommand Calls.
- 3 = Add all Sent Messages (with Filtering).
- 4 = Add all Received Messages (with Filtering).

Changing this value to something besides 0 (the default) will cause the DPA drivers to start logging DPA driver and vehicle data bus data to the **DebugFile** based on the selected value.

8.5. Debug File Name (RP1210 INI Option DebugFile)

When **DebugLevel** is on (1-4), this is the file that will receive the data logging output in text format. This file is in ASCII and can be read using a text editor. The default value for this option is in the Windows temporary directory, with a filename appropriate for the driver set.

8.6. Debug File Size (RP1210 INI Option DebugFileSize)

When **DebugLevel** is on (1-4), this is how large the **DebugFile** can grow in bytes. The formula is (**DebugFileSize** * 1024), so if you want to allow the **DebugFileName** the ability to grow to 2 megabytes, you would set this value to 2048. The default value for this parameter is 1024, or 1 megabyte.




8.7. Debug File Mode (RP1210 INI Option DebugMode)

When **DebugLevel** is on (1-4) and this option is in the 1 (Default) position, the DPA drivers will append data to **DebugFile** (which could have data from previous logging) until it reaches the end of the file (1024 * **DebugFileSize**). When reaching the end of the file, the DPA drivers will erase **DebugFile** and start writing new data to the file.

When **DebugLevel** is on and this option is in the 0 (Overwrite File Contents) position, the DPA drivers will erase **DebugFile** and begin writing data to the file until it reaches the end of the file (1024 * **DebugFileSize**). When reaching the end of the file, the DPA drivers will erase **DebugFile** and start writing new data to the file.


8.8. Automatic Firmware Update

Setting the variable **Automatic Firmware Update** to the **Value** causes the drivers to exhibit the behavior in the **Action** column.

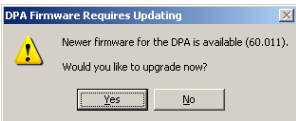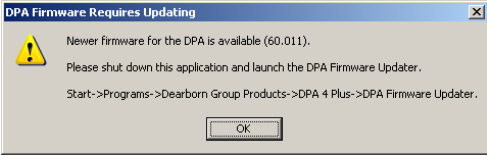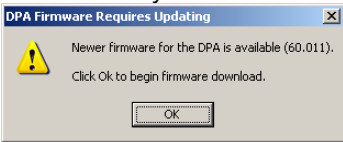
Value	Action
0	Automatic firmware update is turned off. No automatic checking for new firmware.
1	Automatic firmware update is turned on. The user has a choice as to whether or not to upgrade.  If the user selects Yes , the firmware is automatically updated. If the user chooses No , then the drivers connect the application to the vehicle. This is the default.
2	Automatic firmware checking is turned on. The user is only told that there is new firmware available and told they should run the DPA Firmware Updater.  When the user chooses OK , then the drivers connect the application to the vehicle. The user can then update the DPA at their convenience.
3	Automatic firmware update is turned on. The user is told there is new firmware and the firmware is downloaded automatically as soon as they press the OK button.  When the user selects OK , the firmware is automatically updated.
4	Automatic firmware update is turned on. The user is not prompted and the download begins automatically.

8.8.1. When the Drivers Call the DPA Firmware Updater

In the event that the automatic update is chosen, the DPA drivers launch the DPA Firmware Updater, which handles the downloading of new firmware. **Once the firmware has started downloading, the user should not stop it. Aborting a firmware download may cause the device to become unresponsive and require the hardware to be shipped back to the manufacture for repair.** The following is the dialog box showing the DPA Firmware Updater during an automatic update:

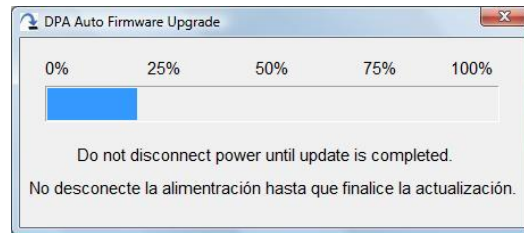

When the update is complete, the following dialog box is displayed and the DPA drivers attempt to let the application that was suspended continue executing. Most applications can handle the interruption; however there is a possibility that the user may have to restart their application.

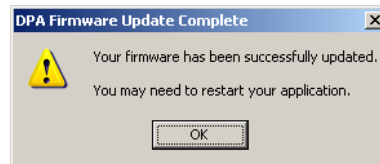

8.9. DPA 5 Bluetooth Configuration Utility

This button opens the DPA 5 Bluetooth Configuration Utility. This allows the user to create RP1210 DeviceID entries from DPA 5 Bluetooth Pairings. This utility has its own help file.

8.10. Add SA Drivers to RP121032.INI Button

This button is used to add the “Single Application” version of a driver to the RP121032.INI file. By default, only the “Multi-Application” driver entry is written to the RP121032.INI file, but there are times under the direction of a DG technical support representative that you may be asked to press this button.

9. RUNNING THE DPA 5 BLUETOOTH CONFIGURATION UTILITY


DPA Bluetooth configuration is a somewhat tedious process. DG recommends first reading and following the instructions in the DPA 5 Series Bluetooth Configuration Manual available from:

- ❑ Start → Programs → Dearborn Group Products → DPA 5 → Documentation → Bluetooth Configuration Manual

That document includes the following section, however details how to pair your DPA 5 to your PC are too detailed to include in this document. This document only includes how to create the DeviceID required in order to use the DPA 5 in Bluetooth mode with your diagnostic application.

After you have successfully paired your DPA 5 with the Bluetooth dongle and have created the Virtual COM Port, run the Bluetooth Configuration Utility to create an RP1210 DeviceID entry that can be seen by OEM software applications:

- ❑ Start → Programs → Dearborn Group Products → DPA 5 → DPA 5 Bluetooth Configuration Utility

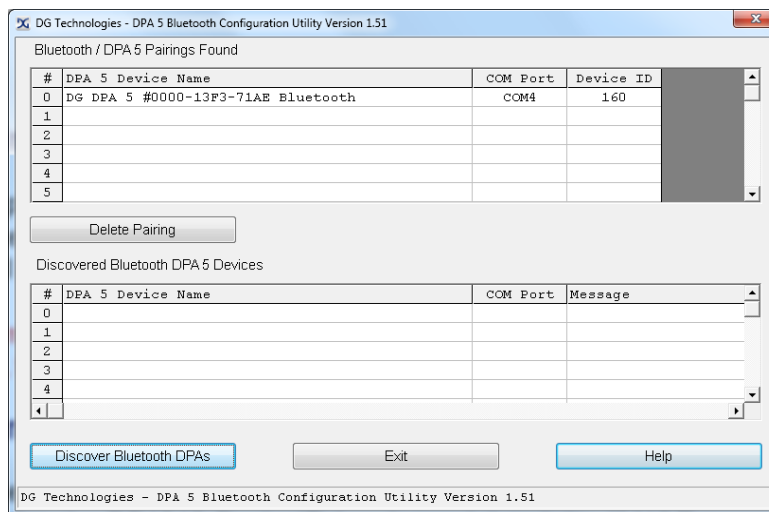

- ❑ Disconnect power from the DPA 5.
- ❑ Disconnect the USB cable (if attached) from the DPA 5 and the PC.
- ❑ Connect power to the DPA 5.
- ❑ Ensure the Bluetooth dongle is connected to the PC and that the DPA 5 has power

You must go through this configuration utility to create RP1210 DeviceID entries. If you do not, the DPA 5 in Bluetooth mode will not work with your OEM applications!

What the DG Bluetooth Configuration Utility does is:

- ✓ Display existing DPA 5 Bluetooth RP1210 DeviceID pairings that are found in the DG DPA5MA.INI file, allowing you to delete an RP1210 DeviceID pairing if you wish.
- ✓ Discover DPA 5 Bluetooth devices on Virtual COM Ports and create a new RP1210 DeviceID pairing that can be used by OEM software applications.

Note: The DPA 5 must have power in order to create the Virtual COM Port and RP1210 DeviceID pairing.

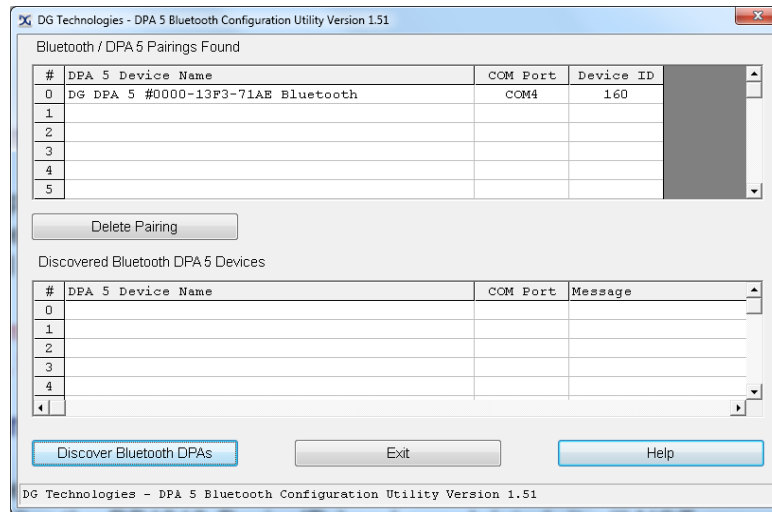


Image showing a DPA 5 Bluetooth Entry (DeviceID=160)

9.1. CREATING A NEW RP1210 DeviceID FROM A NEWLY PAIRED DPA 5

After you have paired a DPA 5 with you PC and created a Virtual COM Port click the **Discover Bluetooth DPAs** button. Any Bluetooth DPAs that you have paired with will be automatically added to the DG DPA5MA.INI file. OEM applications will now be able to see and use that particular DPA 5 as RP1210 DeviceID=160.

NOTE: Sometimes the detection process through the virtual COM port does not see the DPA on the first attempt. If this is the case, try the discovery process again.

9.2. DELETING AN RP1210 DeviceID

If you want to delete an RP1210 DeviceID, simply select that entry and click **Delete Pairing**. Note that after the RP1210 DeviceID has been deleted, it will NOT appear in OEM software applications for selection. For information on Bluetooth (including FCC and IC identification), see the Bluetooth Configuration Manual. It can be found in the Windows Start Menu.

10. PRODUCT SPECIFICATIONS

10.1. DPA 5 PHYSICAL AND ELECTRICAL

Feature	Data
Dimensions	6.1 x 2.5 x 1.2 inches
Voltage Requirements	9 – 32 Volts DC
Current Requirements	250mA maximum through voltage range
Operating Temperature Range	-40 to +85C
Wired PC Communications Type	USB Version 1.1 or Higher
Wired Connection	USB Cable (up to 15 feet)
Wireless Connection	Bluetooth (DPA 5 Dual-CAN is equipped with Class 1 radio)
Vehicle-Side Connector	DB25 Female
PC-Side Connector	Standard B-Type USB Jack
PC Device Drivers	TMC RP1210C (RP1210B, RP1210A) Compliant Drivers DG Native Drivers

10.2. DPA 5 PINOUTS

Signal	DPA 5 Dual CAN/BT	DPA 5 Quad CAN
Ground	6	6
Power (9-32vdc)	8	8
J1708-	14	14
J1708+	15	15
CAN1 Shield	7	7
CAN1 Lo	12	12
CAN1 Hi	13	13
CAN1 Term 1	3	3
CAN1 Term 2	4	4
SW CAN	10	10
ALDL/GM UART	16	16
9141 K Line	1	1
9141 L Line	11	11
J1850 Hi	5	5
CAN2 Term 1	20	20
CAN2 Term 2	21	21
CAN2 Shield	23	23
CAN2 Lo	22	22
CAN2 Hi	24	24
CAN3 Lo		2
CAN3 Hi		17
CAN3 Shield		18
CAN4 Lo		19
CAN4 Hi		9
CAN4 Shield		25

* Shunting these two pins (Term1/Term2) applies a 120-Ohm terminating resistor to the CAN/J1939 network.

* Pins that are not mentioned are reserved and should not have anything attached to them.

11. DG UPDATE – PROGRAM OVERVIEW

DG Update is an application that is installed with your DPA drivers. It will run (by default) once every 30 days, and will keep you up-to-date with the latest versions of drivers for all your DPA, DG Diagnostics, and VSI-2534 products. With this application running regularly and Automatic Firmware Update (see DPA user manual) turned on, this will keep your DPAs up-to-date with drivers and firmware. DG recommends our customers keep up-to-date so that your OEM and component manufacturer diagnostic applications run smoothly.

The utility will run once every 30 days as a user logs on. This value is configurable, but defaults to 30 days. It can also be invoked manually from the Windows Start Menu:

Start → Programs → Dearborn Group Products → DPA 5 → DG Update

11.1. DG DRIVER UPDATE – INTERNET CONNECTION REQUIRED

The DG Driver Update utility depends on successfully connecting to the Internet (to one of DG's servers) to retrieve the latest version information and to download the latest drivers and applications if necessary.

Many companies install firewalls and virus protection and these may block the DG server queries and responses. If you are connected to the Internet and have issues running DG Update (getting "Unable to connect to the internet to check for updates." messages), ensure that your firewall or virus protection will allow a connection to the following Internet host/site and port: **fh.dgtech.com, port 8888**. There are too many firewall and virus programs on the market to cover in this manual, however if you contact your network administrator and give them the host and port number, they should be able to configure your PC to allow the communication. You may also consult the Windows help system and/or the documentation for your firewall and/or virus protection software.


11.2. DG DRIVER UPDATE – INITIAL SCREEN

When the utility runs as a user logs on, the following screen will appear in the lower right hand corner of the screen. If you want to check for updates, ensure that your PC is connected to the Internet and click **Continue**. Clicking **Cancel** will cause DG Update to wait until the next time it is scheduled to run. Clicking **Continue** will bring up the main update screen.



11.3. DG DRIVER UPDATE – MAIN UPDATE SCREEN

The main screen appears looking like this. Depending on which products are installed on your PC, the grid will display pertinent information about them. When selecting DG Update from the Windows Start Menu, this is the first screen to appear.

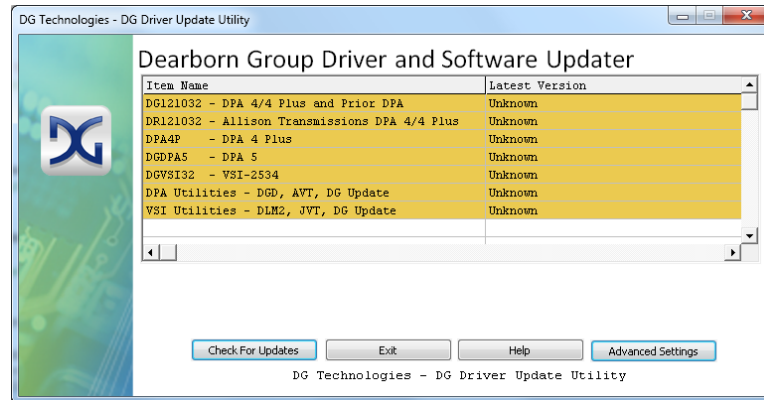


Connect your PC to the Internet and click the **Check For Updates** button. Due to the nature of TCP/IP communications, errors connecting or sending/receiving of data are slow to appear, however the user will eventually be notified if there was a problem.

If the check for updates was successful, the second column of the grid will display information returned from the DG server showing the most current versions and the **Install Status** row will change to red, green or blue.


Color	Description
Green	Drivers up-to-date. No update necessary.
Red	Drivers are outdated. Update recommended.
Blue	Drivers on your PC are newer than current version. This usually indicates you are running a beta copy of the DPA drivers.

11.3.1. Successful Connect – No Updates Available

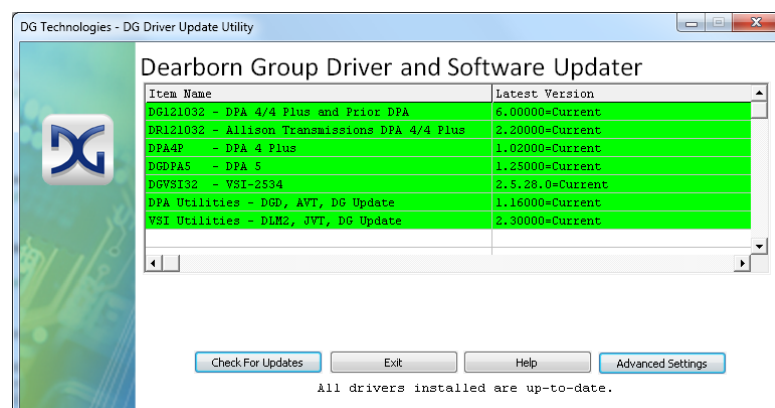


In this case, all drivers are current (green), and the **Download** button and progress bar do not display (see next paragraph). Clicking **Exit** will exit the program.

11.3.2. Successful Connect – Updates Available

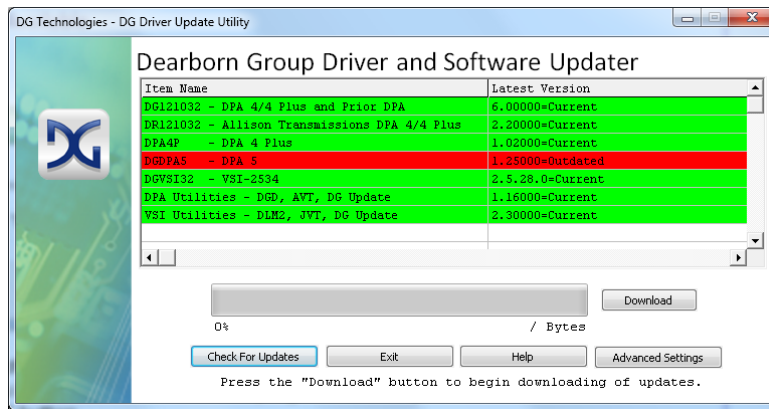


In this case, the DPA 5 drivers are out of date (red), and the **Download** button and progress bar show up on the screen. The progress bar will keep you informed of the download progress should you choose to download the latest drivers by clicking the **Download** button.

When you click the **Download** button, you will be prompted to confirm starting of the download.

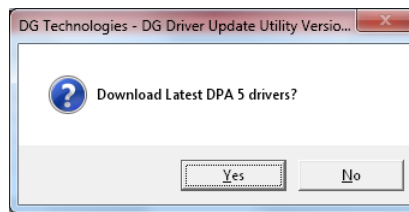

Note: The DG Update application can only download and install one item at a time. The user will be prompted for whichever one they want to update first. The reason that only one can be downloaded at a time is that after the drivers are unzipped the installation program begins automatically. The DG Update program must exit because the installation program may have a newer version of the DG Driver Update utility to install.

After choosing **Yes**, the program will download the drivers and update the progress bar while doing so. Once the drivers have been downloaded, the application will unzip them and start the installation process. The dialog box will go away after the install has been started.

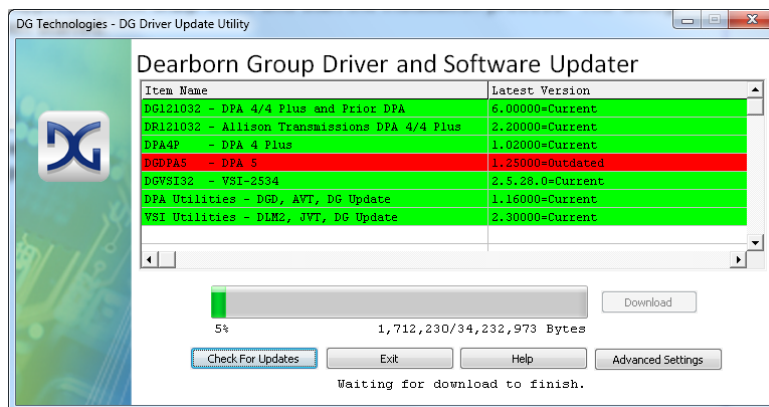


After the drivers have been downloaded (to the Windows temp directory – if you wish to save them for other machines), they will be unzipped and the program will exit right after starting the new driver installation. Follow the installation instructions in the appropriate User Manual.

11.4. ADVANCED SETTINGS – SETTING DEFAULT TIME FOR CHECK FOR UPDATES

If you want to turn off, or alter the timeout period where the user is prompted to check for updates (the dialog below), press the **Advanced Settings** button.



The following dialog box will be displayed. To turn off the checking prompt, set the value to zero. Otherwise, you can set the number of days between checks.

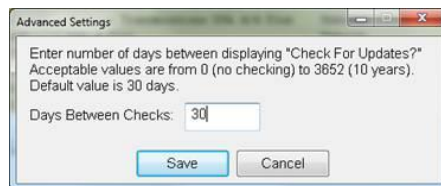

12. TECHNICAL SUPPORT AND RETURN MERCHANDISE AUTHORIZATION (RMA)

12.1. TECHNICAL SUPPORT

After reading and following the troubleshooting and validation procedures in this document and not being able to resolve an issue, please feel free to contact DG technical support. For users in the United States, technical support is available from 9 a.m. to 5 p.m. Eastern Time. You may also fax or e-mail your questions to us. For prompt assistance, please include your voice telephone number.

Users not residing in the United States should contact your local DG representative.



DG Technologies Technical Support

Phone: (248) 888-2000
Fax: (248) 888-1188
E-mail: techsupp@dgtech.com
Web site: www.dgtech.com

12.2. RETURN MERCHANDISE AUTHORIZATION (RMA)

If technical support has deemed that there may be a physical problem with your DPA, you will be issued you an RMA number. You would then return the product along with any documentation of ownership you have (proof of purchase/price) to the following address:



Product Service/Repairs
Attn: RMA# xxxxxxx
DG Technologies
33604 West 8 Mile Road
Farmington Hills, MI 48335

13. WARRANTY INFORMATION AND LIMITATION STATEMENTS

13.1. WARRANTY INFORMATION

The Dearborn Group, Inc. DPA 5 is warranted against defects in materials and workmanship for two (2) years following date of shipment. Cables (both USB and vehicle) are warranted for 90 days.

Dearborn Group, Inc. will, at its option, repair or replace, at no cost to the customer, products which prove to be defective during the warranty period, provided the defect or failure is not due to misuse, abuse, or alteration of the product. The customer is responsible for shipment of the defective product to DG. This warranty does not cover damage to any item that Dearborn Group, Inc. determines has been damaged by the customer's abuse, misuse, negligence, improper assembly, modification, or operation of the product.

A Return Merchandise Authorization (RMA) number must be issued to the customer by our Technical Support Department at (248) 888-2000 and must be included with the product being returned (for more details, see section *Return Merchandise Authorization (RMA)*). A DPA is warranted for 90 days after a warranty repair, or to end of the original factory warranty period, whichever is longer.

13.2. LIMITATION STATEMENTS

13.2.1. General Limitation and Risk Assignment

To the maximum extent permitted by applicable law, Dearborn Group, Inc. and its suppliers provide support services on an "as-is" basis and disclaim all other warranties and conditions not specifically stated herein, whether express, implied or statutory, including, but not limited to, any warranties of merchantability or fitness for a particular purpose, lack of viruses, accuracy or completeness of responses, results, lack of negligence or lack of workmanlike effort, and correspondence to description. The user assumes the entire risk arising out of the use or performance of the device, its operating system components, and any support services.

13.2.2. Exclusion of Incidental, Consequential and Certain Other Damages

To the maximum extent permitted by applicable law, in no event shall Dearborn Group, Inc. or its suppliers be liable for any special, incidental, indirect or consequential damages whatsoever, including but not limited to: damages for loss of profit, loss of confidential or other information; business interruption; personal injury; loss of privacy, failure to meet any duty (including good faith or of reasonable care); negligence; and any other pecuniary or other loss related to the use of or the inability to use the device, components or support services or the provision of or failure to provide support services or otherwise in connection with any provision, even if Dearborn Group, Inc. or any supplier has been advised of the possibility of such damages.

13.2.3. Limitation of Liability and Remedies

Notwithstanding any damages that you might incur for any reason whatsoever (including, without limitation, all damages referenced above and all direct or general damages), in no event shall the liability of Dearborn Group, Inc. and any of its suppliers exceed the price paid for the device. The user assumes the entire risk and liability from the use of this device.

13.2.4. Right to Revise or Update without Notice

Dearborn Group, Inc. reserves the right to revise or update its products, software and/or any or all documentation without obligation to notify any individual or entity.

13.2.5. Governance

The user agrees to be governed by the laws of the State of Michigan, USA, and consents to the jurisdiction of the state court of Michigan in all disputes arising out of or relating to the use of this device.

13.2.6. Contact


Please direct all inquiries to:

Dearborn Group, Inc.
33604 West 8 Mile Road
Farmington Hills, MI 48335
Phone (248) 888-2000
Fax (248) 888-1188

14. APPENDIX A – DPA 5 MANUAL FIRMWARE UPDATE

Even though automatic firmware update comes defaulted to on, there may be a time you need to update your DPA firmware manually. The first step in a manual firmware update is to find which version of firmware you have. You can use the AVT utility after connecting the DPA to a power source.


Start → Programs → Dearborn Group Products → DPA 5 → Adapter Validation Tool

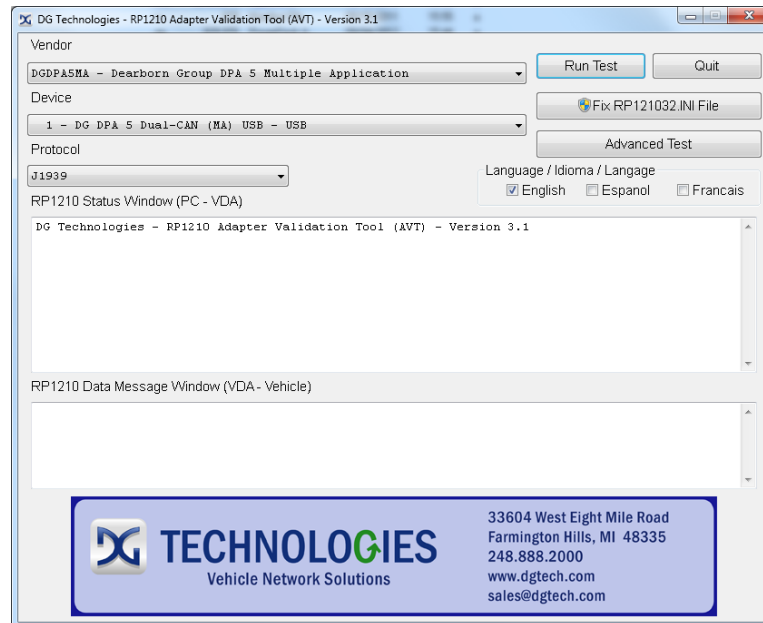

Select the correct DPA adapter:

- Vendor** DGDPA5MA – Dearborn Group DPA 5 Multi Application
- Device** 1 – DG DPA 5 Dual-CAN USB - USB
- Protocol** J1708 (any protocol works)


Then click the **Run Test** button. When the test has finished running, go to the **RP1210 Status Window** and scroll down to the line that reads [RP1210_ReadDetailedVersion] and look for the entry “FW=”. The last numbers on the line indicates which version of firmware you have (note the yellow circle). If you are not at the correct level (see manual cover page for which version you should be at), then you need to run the DPA Firmware Updater outlined in the following steps.

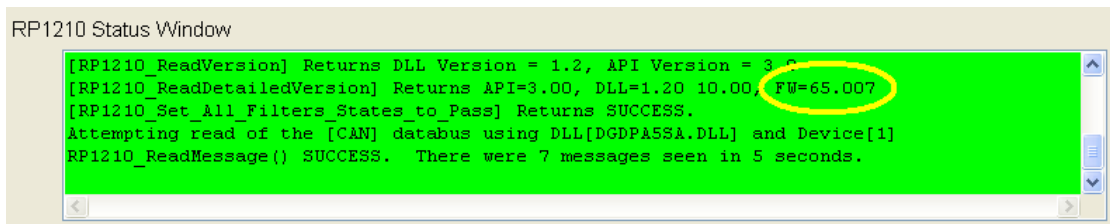

14.1. LAUNCH THE DPA FIRMWARE UPDATER PROGRAM

1. Stop all applications that are using the DPA 5 (if any).
2. Start the DPA Firmware Updater program:

Start → Programs → Dearborn Group Products → DPA 5 → DPA Firmware Updater

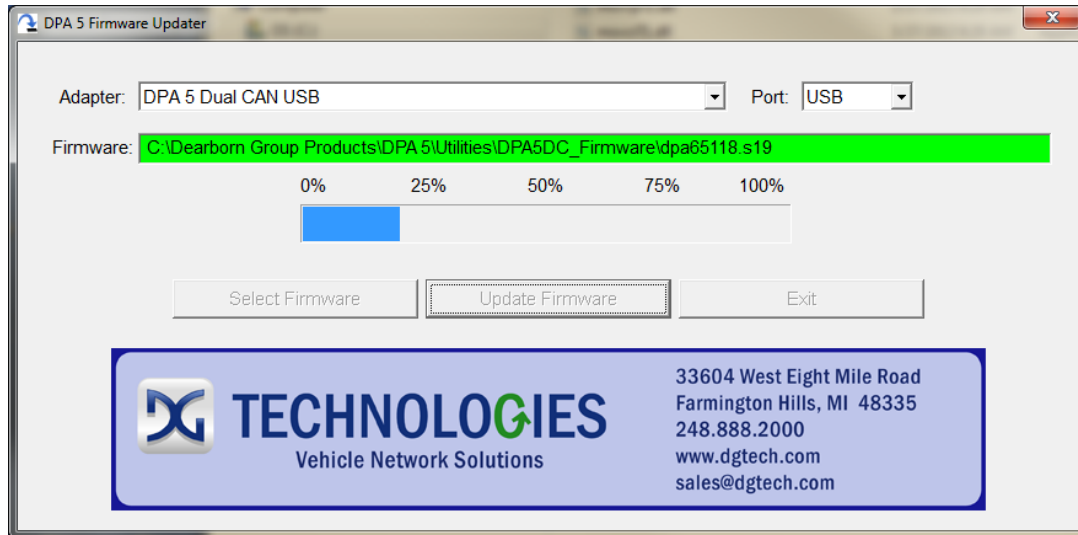

3. Select the correct firmware file (the latest version is already selected by default). If the firmware file exists, the Firmware box will turn **green**.
 - a. NOTE: Firmware files are located in separate sub-directories under the Utilities directory where the DPA drivers are installed, typically:
C:\Program Files\Dearborn Group Products\DPA 5\Utilities\DPA5_Firmware\
4. Click on the **Update Firmware** button and select **Yes** if you receive a warning dialog.
5. After the download is finished, disconnect power from the DPA, wait 5 seconds and then reconnect power.

15. APPENDIX B – SOFTWARE DEVELOPER/INTEGRATOR NOTES

This section is relevant only to software development engineers and systems integrators.

15.1. BUNDLING THE DPA WITH YOUR OEM INSTALLATION – SILENT INSTALL

DG has introduced a silent installation that software installation engineers can call that will install all DPA files that would normally be installed by running the installation interactively.

- ❑ The silent installation does not prompt the user or display a screen at any point.
- ❑ After the install, a reboot of the PC is necessary.

15.1.1. Silent Install Command Line

DPA5Install.exe /s /d_SILENT_[components to install]

The [components to install] can be any combination of the following:

- A = DG DPA 5 Dual CAN USB drivers and associated files
- B = DPA 5 Bluetooth drivers and associated files
- C = DG DPA 5 Quad CAN USB drivers and associated files

Examples:

Silently install DPA 5 drivers with Bluetooth Option:
DPA5Install.exe /s /d_SILENT_=AB

NOTE: Please test and ensure that the command line you provide is correct. Otherwise, only the baseline components will be installed, but the RP1210 API will not be functional.

15.1.2. Controlling Automatic Firmware Update Variable on Silent Install

If you are a software development engineer or system integrator and wish to use the silent installation, but you want to change the **Automatic Firmware Update** setting to a value other than “1” (default), you can do so by changing the registry value of the following variable during a post-installation event.

DPA 4 Plus (DG121032)

HKEY_LOCAL_MACHINE\SOFTWARE\Dearborn Group Products\FirmwareUpdater\UpdateFirmware

DPA 4P (DPA4PMA, DPA4PSA)

HKEY_LOCAL_MACHINE\SOFTWARE\Dearborn Group Products\FirmwareUpdaterDPA4P\UpdateFirmware

DPA 5 (DGPA5MA, DGPA5SA)

HKEY_LOCAL_MACHINE\SOFTWARE\Dearborn Group Products\FirmwareUpdaterDPA5\UpdateFirmware

This variable is of the REG_SZ data type, however only the first character ('0','1','2','3') is used by the RP1210 Options program and the DPA drivers.

If you are on 64-bit installation, the registry entries would have a prefix of:

HKEY_LOCAL_MACHINE\SOFTWARE\Wow6432Node\

Instead of

HKEY_LOCAL_MACHINE\SOFTWARE\Dearborn Group Products\

16. APPENDIX C – FCC AND CERTIFICATION INDUSTRY CANADA INFORMATION

The DPA 5 has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules (see the back of the DPA 5 for FCC and IC specific identifications). These limits are designed to provide reasonable protection against harmful interference in a residential installation. The DPA 5 uses and generates radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio communications. If the DPA 5 does cause harmful interference to radio or television reception, which can be determined by turning the affected equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving and/or sending antennas.
- Increase the separation between the DPA 5 and the affected receiving equipment.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


This product complies with FCC OET Bulletin 65 radiation exposure limits set forth for an uncontrolled environment.

16.1. INDUSTRY CANADA

Operation of the DPA 5 is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.


Changes not expressly approved by Dearborn Group, Inc. to the DPA 5 could void the user's authority to operate the DPA 5. The following is a sample rear label from the DPA 5 depicting the FCC and IC identifiers.

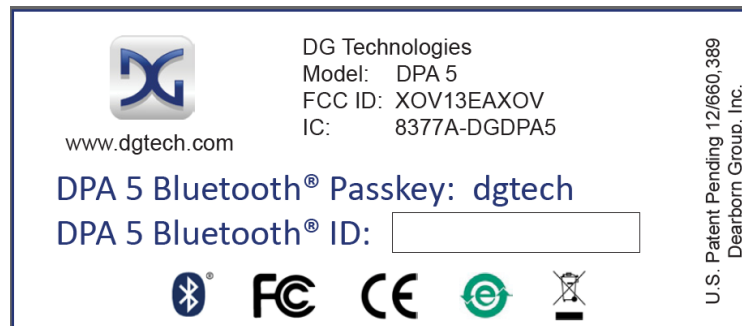

The following are the DPA 5 Bluetooth details as required to be published by the FCC.

Operating Frequency	2.4GHz
Power Output Maximum	< 4.4dBi
Contains Transmitter Module FCC ID:	QOQWT11
Transmitter Bluetooth QDID	B012647

17. APPENDIX D – WINDOWS VISTA AND WINDOWS 7/8 SUPPORT NOTES

 
Microsoft® has made great strides in updating their operating systems to protect against malicious software. With Windows Vista, Microsoft introduced User Account Control (UAC). UAC strictly enforces the differences between an administrator and a standard user account. When an action that could potentially compromise the PC such as writing files to the C:\Windows directory or registry is requested, the user is prompted for an administrator name and password. If the user is already an administrator, they are still prompted to confirm the action. Generally speaking, whenever you see the Microsoft security shield  icon on a button, you will need an administrator's password to perform that operation.

17.1. UAC AND THE TMC RP1210 STANDARD

Before Windows Vista, it was common for applications to put INI and other types of configuration files in the default Windows directory, typically C:\Windows. The RP1210A standard requires that the RP121032.INI file be located in this directory, along with all of the vendor INI files. On Windows Vista, this means that a standard user cannot make changes to the main RP121032.INI file, nor can they make changes to the vendor INI files when UAC is enabled.

17.2. UAC AND THE DEARBORN GROUP ADAPTER VALIDATION TOOL (AVT)

A standard user will be able to run the AVT program and troubleshoot the PC-DPA-vehicle connection, but will not be able to fix a problem in the RP121032.INI file without an administrator password (see the section on troubleshooting in this document). The graphic below is from the Adapter Validation Tool (AVT), showing the Microsoft security shield on the **Fix/Change RP121032.INI File** button.



17.3. UAC REQUIREMENTS FOR ALL DPA UTILITY PROGRAMS

The DPA utility programs (listed below) have been modified to conform to UAC. The following list shows these programs and privileges required to run them:

Program	Privileges Required	Notes
Adapter Validation Tool (MD/HD)	Standard User	Administrator needed for Fix/Change RP121032.INI File .
Adapter Validation Tool (OBDII)	Standard User	
Adapter Validation Tool Launcher	Standard User	
DG Diagnostics Launcher	Standard User	
RP1210 Options	Administrator	
DG Diagnostics (MD/HD)	Standard User	Cannot save/record data bus files to a protected directory.
DG Diagnostics (OBDII)	Standard User	Cannot save/record data bus files to a protected directory.
DPA Firmware Updater	Standard User	
Sample Source Code	Standard User	
Bluetooth Configuration	Administrator	
DG Update	Standard User	Standard user can use program but install of new drivers will prompt the user for the administrator password.

17.4. MORE INFORMATION ON UAC

For more detailed information on UAC, there is a helpful article at <http://www.wikipedia.org> or you can go directly to the Microsoft website <http://www.microsoft.com> and search for "UAC".

18. APPENDIX E – LIST OF ACRONYMS USED IN THIS DOCUMENT

Various acronyms have been used throughout this document.

Acronym	Description
API	Application Programming Interface
AVT	Adapter Validation Tool
CAN	Controller Area Network
CD	Compact Disk
CD-ROM	Compact Disk - Read Only Memory
DG	Dearborn Group
DPA	Dearborn Protocol Adapter
DTC	Diagnostic Trouble Codes
ID	Identification
ISO	International Standards Organization
AVT	Adapter Validation Tool
LED	Light Emitting Diode
OBD	On Board Diagnostics
OEM	Original Equipment Manufacturer
PC	Personal Computer
RAM	Random Access Memory
RP	Recommended Practice (see TMC)
SAE	Society of Automotive Engineers
TMC	Technology and Maintenance Council
UAC	User Account Control
USB	Universal Serial Bus
VDA	Vehicle Datalink Adapter

19. APPENDIX F – TROUBLESHOOTING A CAN/J1939 NETWORK

19.1.J1939 NETWORK TYPES

There are two standards that OEMs follow when designing their CAN/J1939 network, J1939-11 and J1939-15.

19.1.1. J1939-11

The J1939-11 standard calls for twisted-pair wire **with** a shield. The shield is typically grounded at the engine ECM or negative battery post and must only be grounded at one spot on the vehicle. This standard is not commonly implemented because of the added cost of the shielding. The main issues with this network are too many, or too few, termination resistors (see Figure G2) or breaks in wire and insulation due to kinks, and vibration. This standard calls for the external termination resistors shown in Figure G2.

19.1.2. J1939-15

The J1939-15 standard calls for twisted-pair wire **without** a shield and is the most widely adopted. The main issues with this network are breaks in the wire and insulation due to kinks, vibration and rubbing, wire and connector corrosion, and too many, or too few, termination resistors. In the J1939-15 specification, termination resistors are commonly found inside of ECMs which are easily “activated” by shunting several pins at that ECMs connection to the vehicle wiring harness. This configuration makes it very easy to have a termination resistor problem and is much more difficult to diagnose.

19.2. CAN/J1939 TERMINATION RESISTOR

The following image shows a picture of a 120 Ohm resistor typically found within vehicle ECMs and an image of a J1939 termination resistor that is commonly found on J1939-11 networks.




Figure G1
Image of a 120 Ohm resistor.
Brown, Red, Brown with +/- 5% tolerance (Gold)



Figure G2
Image of J1939 Terminating Resistor on J1939-11 Network (Twisted Shielded Pair)


By design, there are two terminating resistors on a CAN/J1939 network, one at both logical ends of the J1939 backbone (see images in the two paragraphs below). Oftentimes, many technicians or aftermarket add-on accessories add a third or fourth terminating resistor to the bus, causing issues with databus communications. The remaining sections of this chapter cover testing for the correct number of terminating resistors, as well as shorts to ground and power (also very commonplace).

19.3. PROPERLY TERMINATED J1939 NETWORK (TERM RESISTORS AT LOGICAL END POINTS)

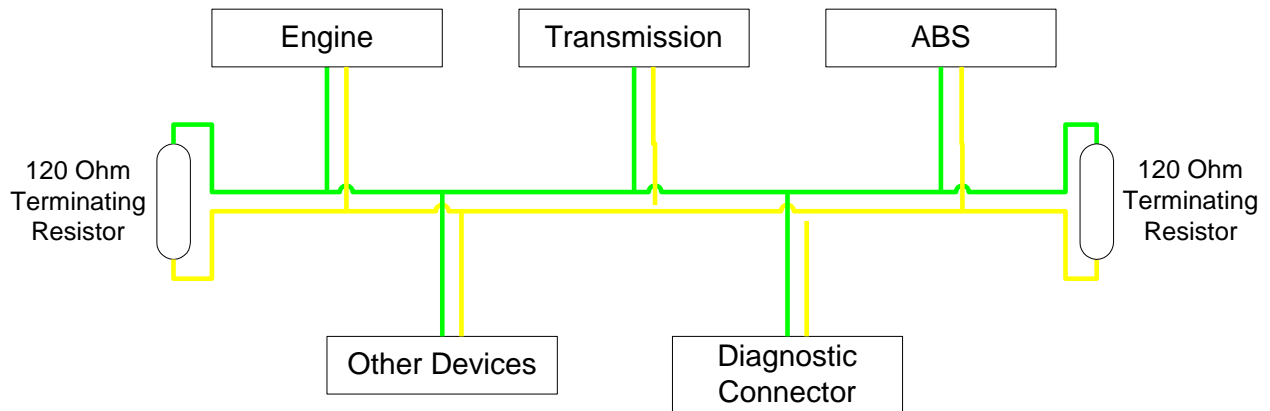

19.4. AFTERMARKET ADDITIONS IMPROPERLY INSTALLED


Aftermarket add-ons can cause J1939 network issues by over-terminating the J1939 databus.

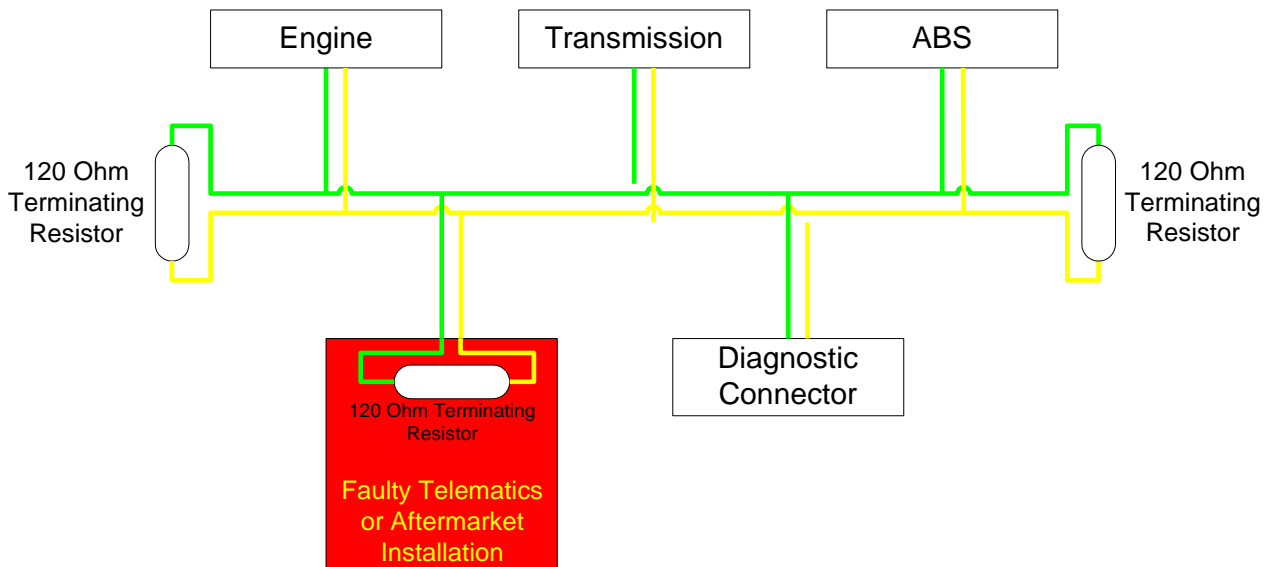

19.5. J1939 NETWORK TESTING STEP 1 (CORRECT TERMINATION RESISTANCE)

To test for proper CAN/J1939 network termination requires a standard Volt/Ohm meter. Follow these steps:

1. Completely power down the vehicle by removing the positive terminal from the battery.
 - a. **This step cannot be bypassed as invalid values will affect the test outcome!**
2. With Volt/Ohm meter set to read resistance (Ohms/ Ω setting), place the red lead on pin C (CAN/J1939 High) and the black lead on pin D (CAN/J1939 Low) of the 9-pin diagnostic connector and note the value.

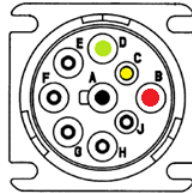


A = Ground (Black)
 B = Power (Red)
 C = CAN/J1939+ (Yellow)
 D = CAN/J1939- (Green)

Value Obtained	Issue	Resolution
Between 54-66 Ohms	Properly terminated network.	Resistance Ok, try Step 2.
Greater than 120 Ohms	Open circuit or missing a terminating resistor.	Install a terminating resistor at the network end. See OEM literature for terminating resistor location and for further troubleshooting information.
Less than 44 Ohms	More than two terminating resistors or J1939 wires are shorted together somewhere.	Remove extraneous terminating resistors by reading OEM literature for where the two terminating resistors should have been installed.

19.6. J1939 NETWORK TESTING STEP 2 (SHORTS TO GROUND)

To test for CAN/J1939 shorts to ground requires a standard Volt/Ohm meter. Follow these steps:

1. Completely power down the vehicle by removing the positive terminal from the battery.
 - a. **This step cannot be bypassed as invalid values will affect the test outcome!**
2. With Volt/Ohm meter set to read resistance (Ohms/ Ω setting), place the red lead on pin C (CAN/J1939 High) and the black lead on pin A (Ground) of the 9-pin diagnostic connector and note the value.
3. With Volt/Ohm meter set to read resistance (Ohms/ Ω setting), place the red lead on pin D (CAN/J1939 Low) and the black lead on pin A (Ground) of the 9-pin diagnostic connector and note the value.

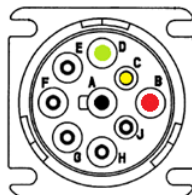


A = Ground (Black)
 B = Power (Red)
 C = CAN/J1939+ (Yellow)
 D = CAN/J1939- (Green)

Value Obtained	Issue	Resolution
10k Ohms or Greater	No shorts to ground.	Try Step 3.
Less than 10k Ohms	Wire shorted to ground.	Repair or replace J1939 harness. See OEM literature for further testing of individual data bus wiring, and potential replacement of databus segments.

19.7. J1939 NETWORK TESTING STEP 3 (SHORTS TO POWER)

To test for CAN/J1939 shorts to power requires a standard Volt/Ohm meter. Follow these steps:

1. Reconnect the vehicle battery, ensure ignition is in the ON position, and diagnostic connector has power.
 - a. With Volt/Ohm meter set to read DC voltages (Volts/V setting), place the red lead on pin B (Power) and the black lead on pin A (Ground) and ensure the diagnostic connector has roughly 12 Volts.
2. With Volt/Ohm meter set to read DC voltages (Volts/V setting), place the red lead on pin B (Power) and the black lead on pin C (CAN/J1939 High) of the 9-pin diagnostic connector and note the value.
3. With Volt/Ohm meter set to read DC voltages (Volts/V setting), place the red lead on pin B (Power) and the black lead on pin D (CAN/J1939 Low) of the 9-pin diagnostic connector and note the value.

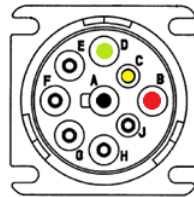


A = Ground (Black)
 B = Power (Red)
 C = CAN/J1939+ (Yellow)
 D = CAN/J1939- (Green)

Value Obtained	Issue	Resolution
0 VDC	Shorted to Power	Repair or replace J1939 harness. See OEM literature for further testing of individual data bus wiring, and potential replacement of databus segments.
12 VDC	Shorted to Ground	Repair or replace J1939 harness. See OEM literature for further testing of individual data bus wiring, and potential replacement of databus segments.
Other Values	Not Shorted to Power/Ground	Try Step 4.

19.8. J1939 NETWORK TESTING STEP 4 (DEVICE GOING BUS_OFF)

To test for controllers transmitting on the databus (commonly called **Roll Call**) and potentially leaving the databus because of an error condition (called CAN BUS_OFF) requires a Dearborn Group DPA device, a personal computer (PC) with drivers for that DPA device installed, and a copy of DG Diagnostics software (free with purchase of a DPA device).


1. Reconnect the vehicle battery, ensure ignition is in the ON position, and diagnostic connector has power.
 - a. With Volt/Ohm meter set to read DC voltages (Volts/V setting), place the red lead on pin B (Power) and the black lead on pin A (Ground) and ensure the diagnostic connector has roughly 12 Volts.
2. Connect DPA device to the vehicle/equipment diagnostic connector and to the PC.
3. Start **DG Diagnostics** by using the shortcut icon on the desktop (select the **MD/HD Truck** icon). On the **Home** tab, select the correct DPA and Device and click the **Connect** button.
4. Go to the **Components** tab (see image below). Wait for 30 seconds to ensure all ECUs transmitting are listed (top arrow). Make note of all the ECUs in the list.
 - a. If all ECUs are not transmitting refer to the OEM literature on how to diagnose that component.
5. Press the **Reset Lists** button and wait another 30 seconds. Make note of all the ECUs in the list. If an ECU has disappeared, then that controller has went into a **BUS_OFF** state indicating something is wrong with that ECUs ability to transmit on the CAN/J1939 data bus. Refer to the OEM literature on how to fully diagnose that component.

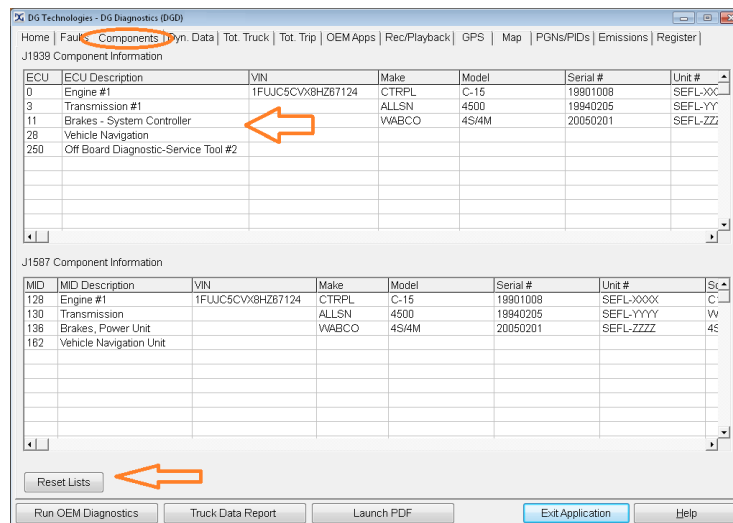

20. APPENDIX G – COMMONLY REQUESTED CABLE DRAWINGS

20.1. DPA 5 TO DPA 5 “BACK-TO-BACK” CABLE

This cable is for use with a second PC running a simulator or other software.

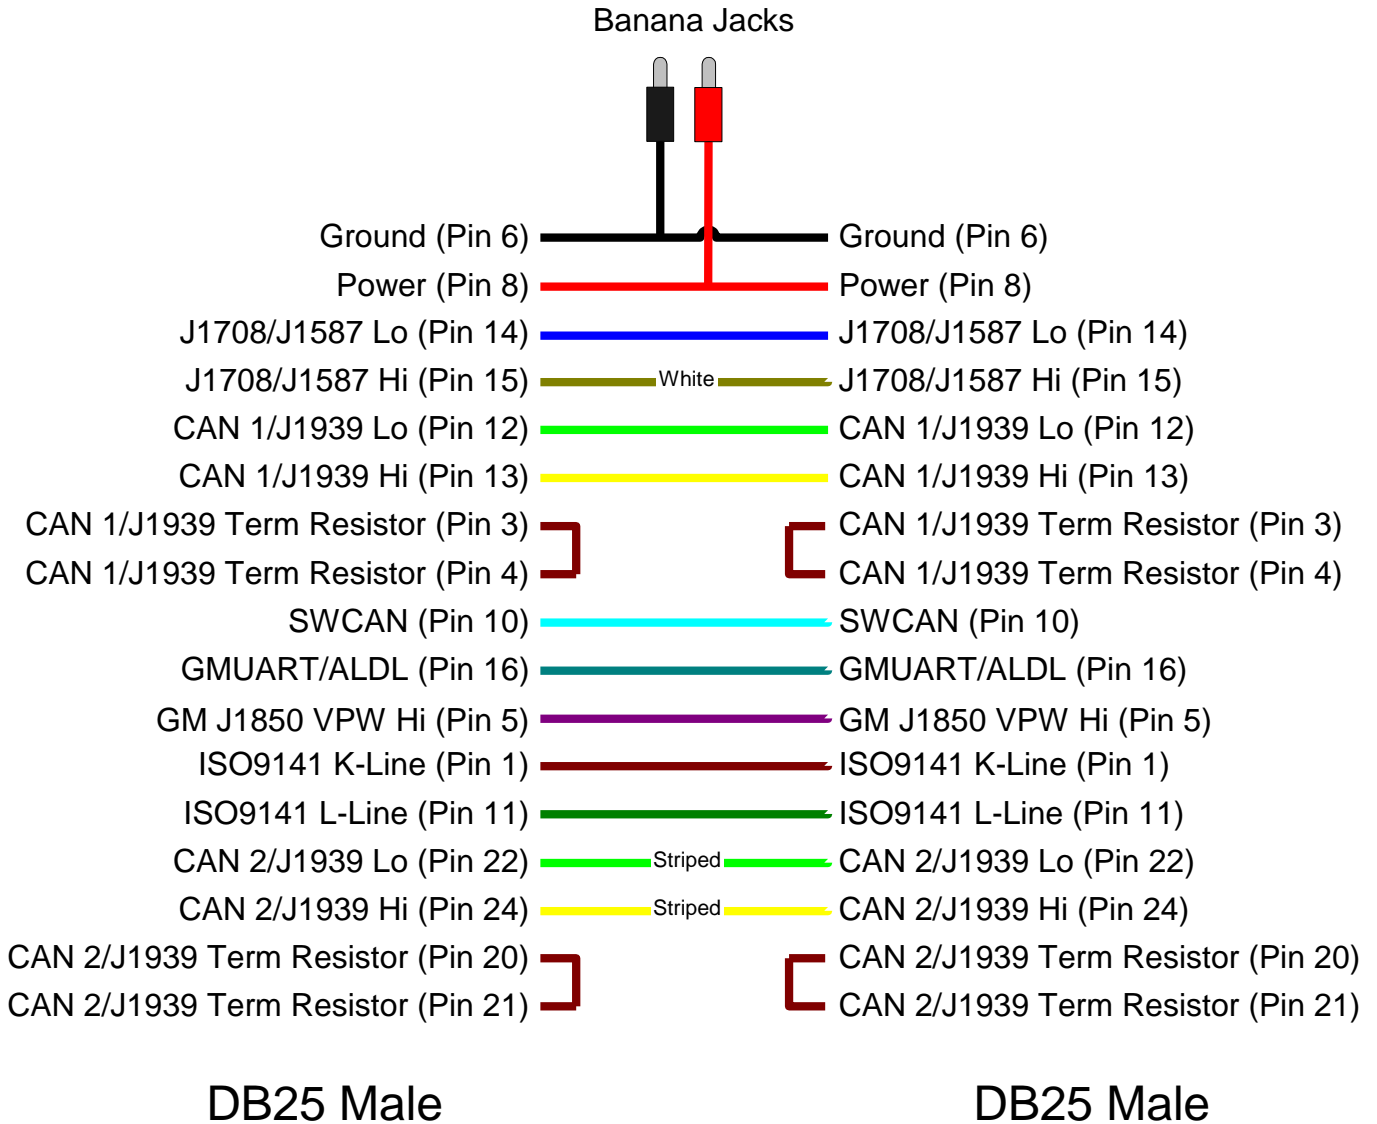


21. APPENDIX H – VOLVO/MACK 2013 (AND NEWER VEHICLES) AND THE DPA 5

NOTE: This section applies to the 2013 and newer Volvo/Mack chassis with Volvo engines and does not apply to the Volvo/Mack chassis with a Cummins engine.

Beginning in 2013, Volvo has introduced a new diagnostic connector for a Volvo/Mack chassis with a Volvo engine. It is based “*in part*” on the SAE standard J1962 connector (see image below). It will have two separate CAN channels with the ISO15765 protocol on CAN Channel 1 and J1939 on CAN channel 2. It will also have J1708 in the connector as well.

 Since there is a second CAN channel and a J1708 channel that are not part of the J1962 OBDII standard, this has required every diagnostic adapter vendor to develop a new cable (or set of cables) for this specific platform. The following diagram shows the pinouts of this connector:



Pin	CAN Channel	Function
3	CAN 2 +	J1939 +
5		GND
6	CAN 1 +	ISO15765 +
11	CAN 2 -	J1939 -
12		J1708 +
13		J1708 -
14	CAN 1-	ISO15765 -
16		BAT (+12V)

The following sections explain what cables to use, and how to run the Adapter Validation Tool (AVT) to troubleshoot the DPA 5 connectivity to this platform.

21.1. DG-DPA5-9OBDII-CABLE – FOR VOLVO PTT AND OTHER OBDII APPLICATIONS



The DG-DPA5-9OBDII-CABLE has an OBDII connector that meets the needs of Volvo PTT on this vehicle platform as well as light-duty, medium-duty, and heavy-duty OBDII vehicles using the following protocols:

- ISO15765 (mandated in all 2008 and newer vehicles)
- J1850 VPW (General Motors/Chrysler)
- J1850 PWM (Ford)
- ISO9141 and ISO14230 (mainly European vehicles)
- **Note that the DPA 5 does not support the J1850 PWM protocol.**

This cable only works for **Volvo PTT, DG Diagnostics (OBDII)**, or third-party applications like **Palmer ScanXL, PocketFleet Diagnostics** or RA Consulting **Silver Scan Tool**. **A user cannot connect to a component application like Allison, Eaton, Meritor-WABCO or Bendix through this cable!!!**

This cable also has a standard J1939 Type II (250k and 500k) connector. This keeps the user from having to switch cables between an OBDII vehicle and a standard Deutsch 9-pin vehicle using J1939 and/or J1708/J1587.

21.2. DG-V13-XOVER-CABLE – FOR COMPONENT APPLICATIONS (I.E. ALLISON, EATON)



The DG-V13-XOVER-CABLE has a special purpose, it crosses over CAN Channel 2 to CAN Channel 1 (and vice versa). It also passes through J1708. This cable is used in conjunction with the DG-DPA5-9OBDII-CABLE.

This special connector cable only works for component applications like Eaton, Allison, Meritor-WABCO, Bendix, etc. **A user cannot connect to PTT with this adapter cable in place!!!**

When a component application connects to J1939, it expects it to be on CAN Channel 1. Since J1939 on this platform is on CAN Channel 2, a special OBDII connector cable was needed.

21.3. USING AVT TO TEST THIS VEHICLE PLATFORM – J1708 PROTOCOL


1. Connect the DG-DPA5-9OBDII-CABLE (only) to the DPA 5 and the vehicle OBDII connector.
2. Run AVT.
3. Select
 - i. Vendor: DGDP5MA - Dearborn Group DPA 5 Multi Application
 - ii. Device: 1 – DG DPA 5 Dual-CAN (MA) USB – USB
 - iii. Protocol: J1708
4. Press the **Run Test** button.
 - i. See the section on troubleshooting for test results. Green/green indicates J1708 is working.

21.4. USING AVT TO TEST THIS VEHICLE PLATFORM – ISO15765

1. Connect the DG-DPA5-9OBDII-CABLE (only) to the DPA 5 and the vehicle OBDII connector.
2. Run AVT.
3. Select
 - i. Vendor: DGDP5MA - Dearborn Group DPA 5 Multi Application
 - ii. Device: 1 – DG DPA 5 Dual-CAN (MA) USB – USB
 - iii. Protocol: ISO15765
4. Press the **Run Test** button.
5. See the section on troubleshooting for test results. Green/green indicates ISO15765 is working.

21.5. USING AVT TO TEST THIS VEHICLE PLATFORM – J1939

1. Connect the DG-DPA5-9OBDII-CABLE (only) to the DPA 5 and the vehicle OBDII connector.
2. Run AVT.
3. Press the **Advanced Test** button to get the Advanced Test dialog box.
4. Select
 - i. Vendor: DGDP5MA - Dearborn Group DPA 5 Multi Application
 - ii. Device: 1 – DG DPA 5 Dual-CAN (MA) USB – USB
 - iii. Protocol: J1939
 - iv. Baud Rate: 250
 1. Check **Use Baud Rate** checkbox.
 - v. Channel: 2
 1. Check **Use Channel** checkbox.

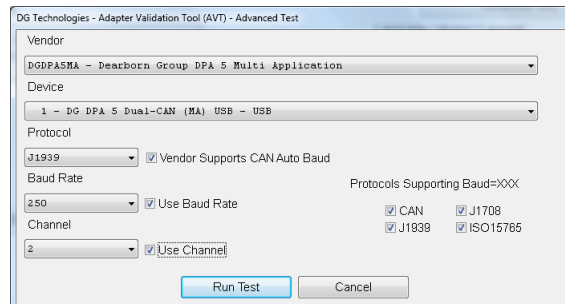

5. Press the **Run Test** button.
6. See the section on troubleshooting for test results. Green/green indicates J1939 on CAN Channel 2 is working properly.


22. APPENDIX I – NOTES ON USING WINDOWS 8

Windows 8 is the newest Microsoft Operating System. The Graphical User Interface (GUI) is very different from previous versions of Windows. If you have not used Windows 8 before, you can get to your DG Applications in two different ways.


22.1. USING THE WINDOWS DESKTOP AND CLASSIC START 8

This is what DG recommends. Classic Start 8 is a free Windows 8 app that makes it look like Windows 7. Classic Start 8 provides a “Start” menu so that all of the instructions here in this manual (Start -> Programs -> Dearborn Group Products -> etc.) still apply. It can be obtained from the following website <http://www.classicstart8.com/>

After installing Classic Start 8, rebooting, and then logging in, click your desktop icon (left photo) and then click the Start button (right photo). Classic Start 8 provides the “Start Menu” functionality.

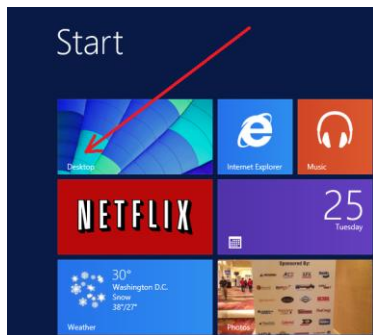

Windows 8 Default User Interface Showing The “Desktop” Life Tile.

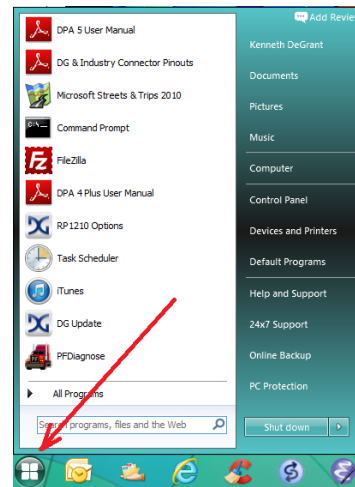


Classic Start 8 Application Providing Classic “Windows Start Menu” Functionality.

22.2. USING WINDOWS 8 LIFE TILES

You can use the Life Tiles to get to DG applications; however this does not provide quick access to the DG user manuals. Therefore, the best option is using Classic Start 8 (discussed above).

To use the Life Tiles, you can use the scrollbar at the bottom of the screen or you can use the arrow keys to scroll to the right until you find the DG applications (DG icons). Clicking on an icon runs that application.

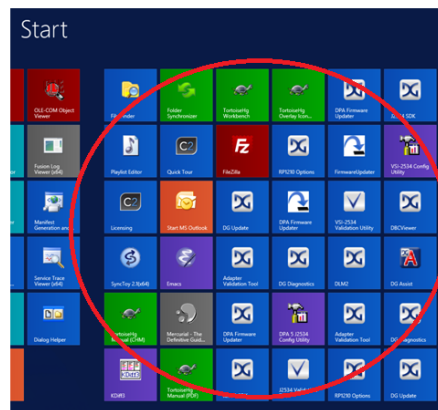

23. APPENDIX J – WINDOWS XP INSTALLATION ISSUES (USB DRIVERS FAIL TO REGISTER)


Windows XP is no longer supported by Microsoft or DG, but this section remains because certain Windows XP machines with Service Pack 3 (SP3) installed has issues. The Netchip USB drivers used in DG adapters may not be recognized. When plugging in a DG adapter product, typically you will hear the familiar positive “da-ding” Windows sound showing the device was recognized by the USB host controller and the drivers for it were registered successfully by the operating system. In some circumstances when you plug in the adapter you may hear nothing, or you will hear a negative set of tones “duh duh dump”. In this case the device drivers are not recognized and the adapter will be inoperable. Follow these steps to manually install and register the device drivers for the operating system.

23.1. VERIFY THE ADAPTER IS NOT RECOGNIZED

The following example shows a DPA 4 Plus, however the process is the same for all DG adapter products. Press the Windows **Start** button, find the **My Computer** entry and then right click on **Properties**. Select the **Hardware** tab and press the **Device Manager** button.




Find the **USB Tools (Dearborn Group)** entry. Notice the yellow exclamation point. This means the drivers are not registering properly. Select the entry, right click and select **Update Driver**.

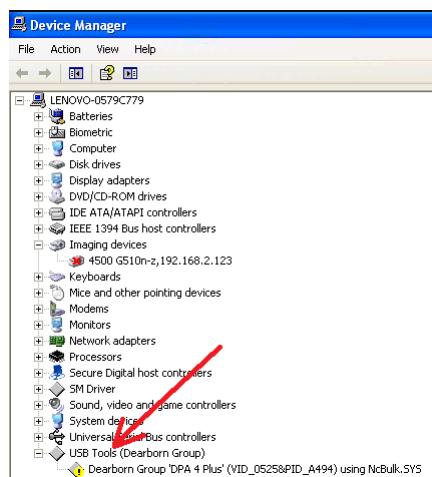


23.2. RUN THE HARDWARE UPDATE WIZARD

The following screen will appear. Select **Install from a list or specific location (Advanced)** and then press the **Next** button.

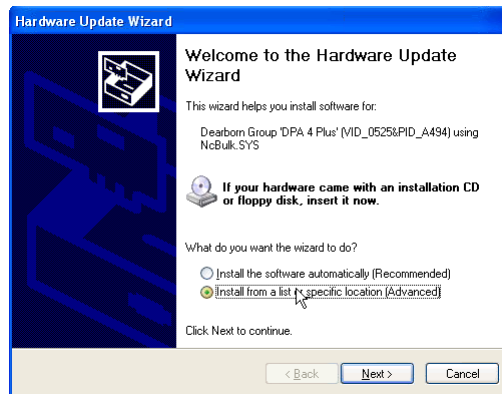


Select the **Search for the best driver in these locations** radio button. Then check the **Include this location in the search:** checkbox, then press the **Browse** button.

You must now locate the correct directory for the USB device drivers. The typical install base directory for DG products is **C:\Dearborn Group Products** however the user can change this at install time. Go to the base directory, press the [+] plus sign and choose the correct product subdirectory (this example shows the **DPA 4 Plus** directory). Then press the [+] plus sign on the **USBDeviceDrivers** folder and select the **32Bit** subfolder and press **Ok**.

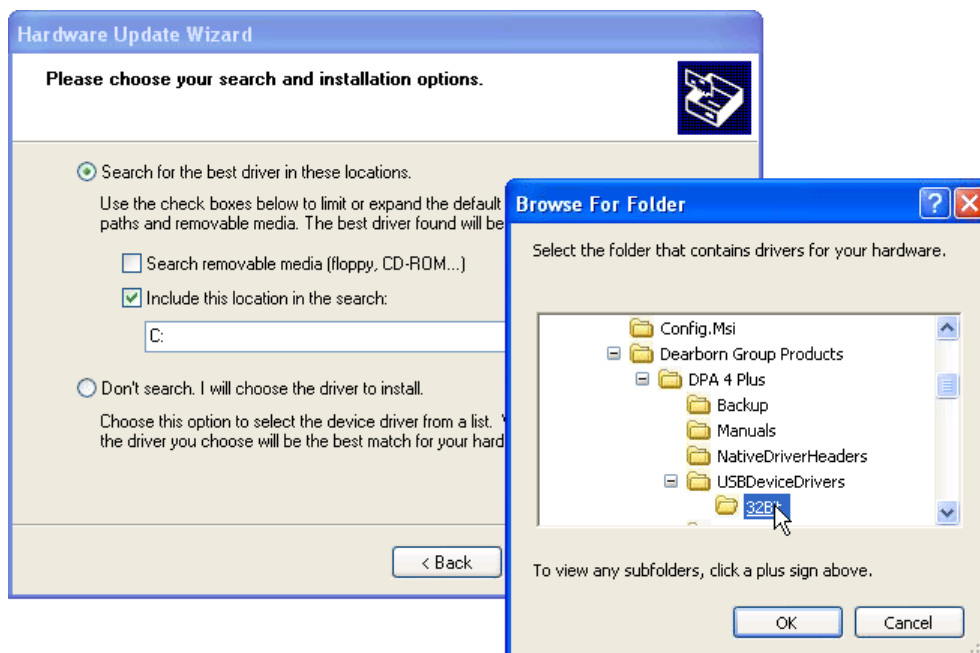

This screen will then appear showing progress as the USB device drivers are registered. On an even smaller number of machines with Windows XP SP3, this process will hang and the computer will freeze (usually on the file NCGen.sys or NCPnP.sys file). In this case, see the next section.

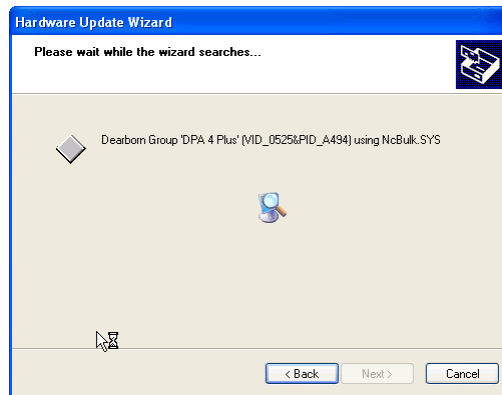

After the device is successfully registered, this screen will appear and you will then be able to use your adapter.




24. APPENDIX K – WIN XP INSTALLATION ISSUES (DRIVERS LOCK-UP THE PC)

Windows XP is no longer supported by Microsoft or DG, but this section remains because on a very small number of machines with Windows XP SP3 installed, when you plug in the DPA, it will lock up the PC while the device drivers are being installed (usually on the file NCGen.sys or NCPnP.sys file).

If this screen (below) is displayed for more than 5 minutes, try to start any other program to see if the PC is frozen.

If the PC is frozen:

1. Unplug the adapter.
2. Reboot the PC.
3. Press **F8** repeatedly as machine boots. When the **Safe Mode Menu** appears, choose the **Safe Mode** entry.
4. After the PC boots into **Safe Mode**, plug in the adapter to every USB port and run the New Hardware Wizard.
5. Reboot the PC and then you will be able to use the adapter.

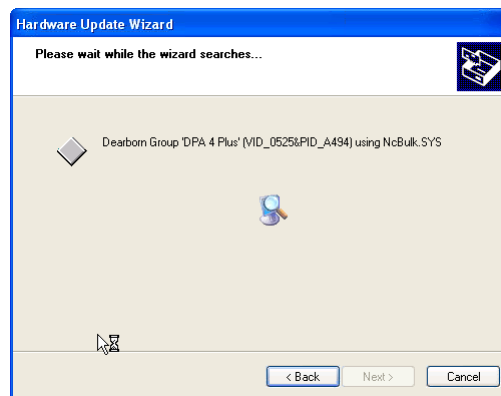

25. APPENDIX L – SAMPLE SOURCE CODE FOR SOFTWARE ENGINEERS

DG Technologies provides the most complete and comprehensive set of RP1210 and J2534 sample source code for software engineers looking to read data from vehicle and equipment data buses. These files show all software engineering concepts for using either the RP1210 or J2534 API, including:

- ✚ Declaring RP1210 and J2534 Function Headers and Function Pointers
- ✚ Loading the RP1210 and J2534 Dynamic Link Library (DLL) and Assigning Function Pointers
- ✚ (Open) Connecting to a Data Bus Protocol and Setting Filters for Communications
- ✚ (Read) Reading Messages, Printing Read Messages, and Decoding Message Data into Engineering Units
- ✚ (Write) Sending Messages, Printing Transmitted Messages, and Encoding Data to be Sent
- ✚ (Close) Disconnecting from the Data Bus and Freeing the DLL and Resources

These files typically reside in the following directory:

C:\Dearborn Group Products\RP1210 Utilities\SampleSource

25.1. RP1210 SAMPLE SOURCE CODE

Language/Environment	File Name(s)
C/C++	SampleSource.c
C#	RP1210SampleCodeCSharp.cs
Python	SampleSource.py
VB.Net	VBRP1210SampleSource.vb
Matlab	For a future release.
Labview	For a future release.

25.2. J2534 SAMPLE SOURCE CODE

Language/Environment	File Name(s)
C/C++	J2534SampleSourceISO15765.cpp
C#	J2534SampleCodeCSharp.cs
Python	For a future release.
VB.Net	VBJ2534SampleSource.vb
Matlab	DPA5End.m DPA5Start.m DPA5_PassThruReadMsgs.m DPA5_PassThruWriteMsgs.m libfunctionsview.pdf MatLab_J2534_Syntax.ppt
LabView	For a future release.