



# Digital Photo Frame User's Manual



## Questions? Need Some Help?

This manual should help you understand your new product.

If you still have questions, call our help line found on the insert with this icon:



or visit  
[www.polaroid.com/support](http://www.polaroid.com/support).

20080527

# Important Safety Instructions

**CAUTION!** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

**Note:** Do not touch the color TFT LCD screen.

## Proper Handling of the Digital Photo Picture Frame

Always handle the Digital Photo Picture Frame carefully. Avoid touching the LCD screen as natural skin oils are very difficult to remove.

Always position the Digital Photo Picture Frame on a stable and level surface. Unstable surfaces can cause the Digital Photo Picture Frame to topple and fall, resulting in possible damage or injury.

Avoid exposing the Digital Photo Picture Frame to direct sunlight or high temperatures, which can damage or shorten its life. Do not place the unit near heat sources such as radiators, heat registers, or other appliances that generate heat. Orient the Digital Photo Picture Frame away from direct sunlight to reduce glare.

Avoid exposing the Digital Photo Picture Frame to rain, water, moisture or high humidity. Do not place it in a bathroom or kitchen near a sink or where it may come in contact with water.

Never place heavy or sharp objects on the LCD panel, frame, or power cord.

## Overloading Outlets

Do not overload electrical power sources when using the Digital Photo Picture Frame. Overloading wall outlets, circuits, or extension cords can result in overheating, fire, or electric shock. Use only grounded or polarized outlets.

## Power Cord Protection

To minimize wear on the power supply cord, the power supply cord should be routed away from foot traffic and contact with other objects. Do not route the power cord under rugs or carpeting. The cord should never be severely bent, pinched, or twisted. Periodically inspect the power cord and each end of the cord for wear or damage. Unplug and replace the cord if it is damaged.

## Ventilation

 
Slots and openings on the Digital Photo Picture Frame are provided for ventilation purposes. To ensure proper ventilation and reliable operation of the product do not place Digital Photo Picture Frame on a bed, sofa, rug or similar surface. Do not place it in an enclosed space such as a bookcase, unless proper ventilation is provided.

# Introduction and Controls

**CONGRATULATIONS** on your purchase of your Polaroid Digital Photo Picture Frame. Please read carefully and follow all instructions in the manual and those marked on the product before first use. Failing to follow these warnings could result in personal injury or damage to the device. Remember to keep this User's Manual in a convenient location for future reference.

**Important:** Save the original box and all packing material for future shipping needs.

 
## Controls

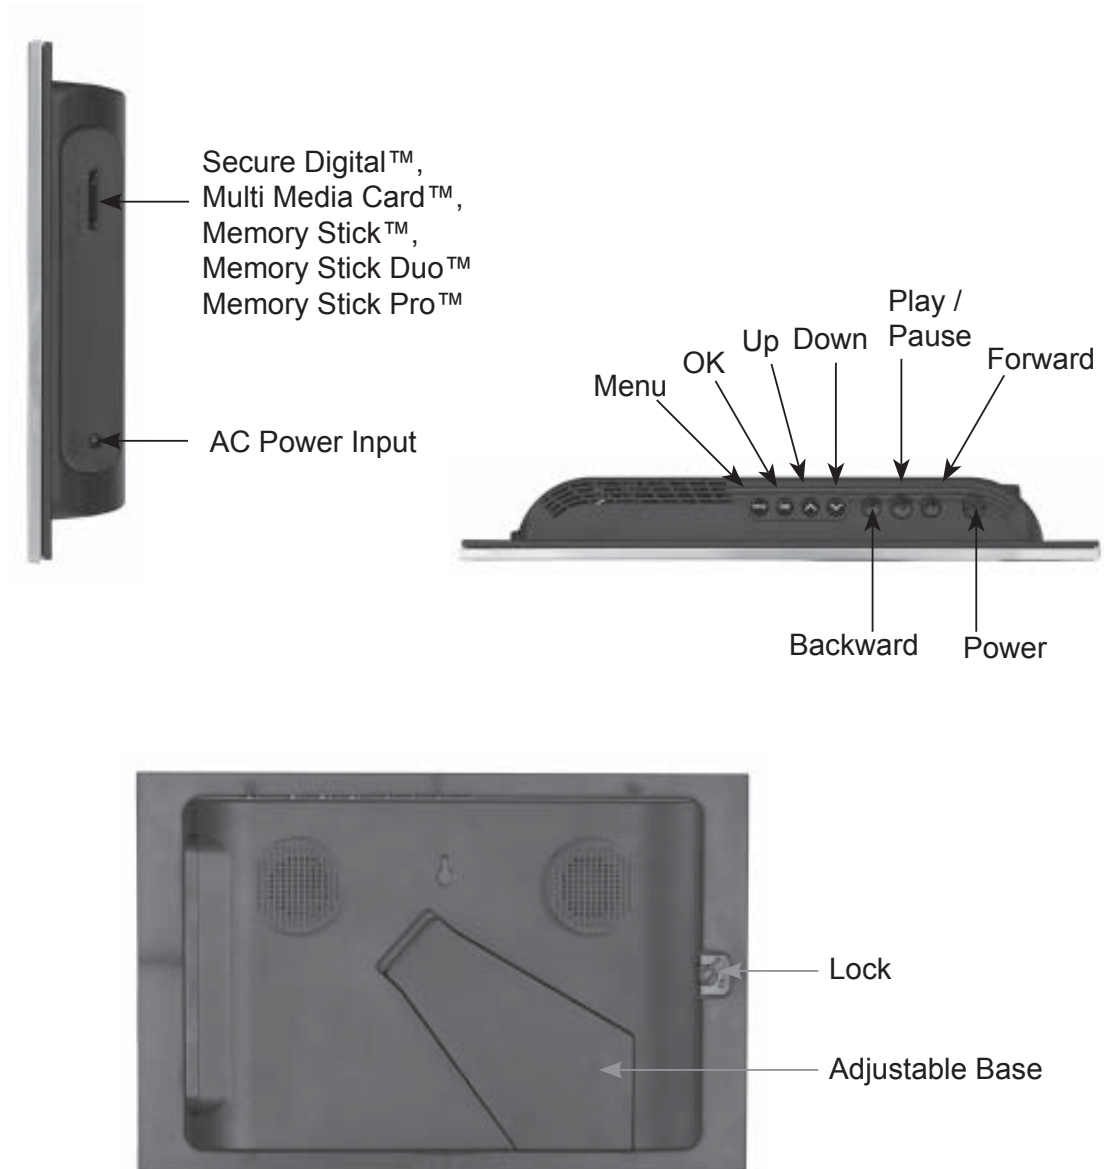







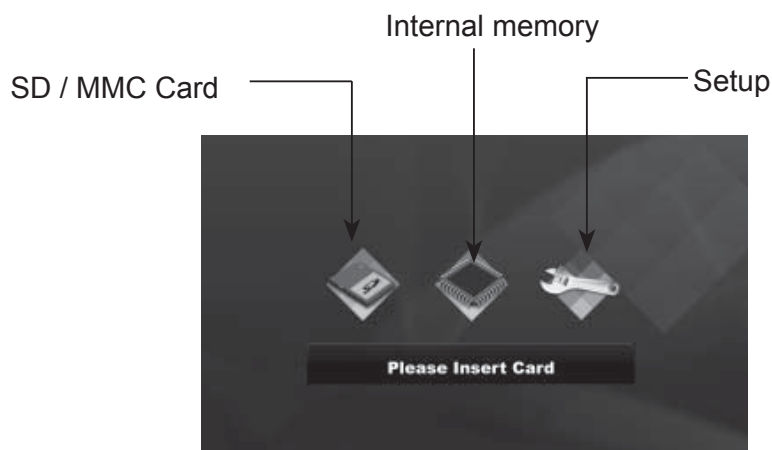




 

 
 

 
 


 












# Quick Start Instructions

## Using the Control Buttons on Digital Picture Frame:

1. Plug the AC adapter into the Digital Photo Picture Frame and plug it into a wall outlet.
2. Press POWER button to power on the device. The unit will enter the Main Menu page.



3. Insert a memory card into the slot.  
Memory Card Slot: Secure Digital™, MultiMedia Card™, Memory Stick™, Memory Stick Duo™ and Memory Stick Pro™
4. The unit will play the memory card type automatically.
5. Press the  button to enter photo mode. The unit will display up to 15 thumbnail pictures at a time on LCD screen. Press the MENU button to exit.
6. In Photo Mode, press the , ,  or  button to select a picture. Press the  button to view it in full screen. Press the Menu button to return to thumbnail display. Press the  button to go to the next picture or press the  button to go back to the previous picture.
7. When viewing a picture, press the  button again to enlarge the current picture. With the picture zoomed, press the , ,  or  button to move the picture around. Press the MENU button to exit zoom function.
8. When viewing a picture in full screen, press the  or  button to rotate the current picture. Press  button to rotate counterclockwise. Press the  button to rotate clockwise. Press the Menu button to return to thumbnail display.
9. With a thumbnail or full screen image, press and hold OK button for 3 seconds to start slideshow.
10. In Photo mode, press  button to mark the selected file(s), press and hold the MENU button to access COPY / Delete / Transcoding. Press the  or  button to select different items, press the  button to enter. Press the  or  button to choose an option and press the  button to confirm your choice.
11. In Main Menu page, press the  or  button to select Setup mode and press the  button to enter.
12. To change the language: In Setup mode, press the  or  button to choose "LANGUAGE". Press the  button to enter. Press the  or  button to select a language you prefer and press the  button to confirm your choice. Press the Menu button to exit without confirmation.

# Menus

## Control Button Functions

All function settings for your Digital Photo Picture Frame can be achieved in the setup menu by navigating with the buttons located on the top of the device.

<b>OSD Menus</b>	<b>Sub-Menus</b>	<b>Description</b>
<i>Full Screen</i>	<i>On</i> <i>Off</i>	<i>Pictures display in full screen or not</i>
<i>Slide Show Effect</i>	<i>Off</i> <i>Random</i> <i>Pan and zoom</i> <i>Fade</i> <i>Shutter</i> <i>Cross Comb</i> <i>Mask</i> <i>Brick</i> <i>Dissolve</i> <i>Bar</i>	<i>Select style of transition</i>
<i>Slide Show Speed</i>	<i>Fast</i> <i>Normal</i> <i>Slow</i>	<i>Speed of slide show</i>
<i>Slide Show Shuffle</i>	<i>On</i> <i>Off</i>	
<i>Reset Settings</i>	<i>Are you sure?</i> <i>Yes</i> <i>No</i>	<i>Reset to default settings</i>
<i>Language</i>	<i>English</i> <i>Italian</i> <i>German</i> <i>French</i> <i>Spanish</i>	<i>Multiple languages</i>
<i>Brightness</i>		<i>Adjusting picture brightness</i>
<i>Contrast</i>		<i>Adjusting picture contrast</i>
<i>Auto Slide Set</i>	<i>Off</i> <i>30 Seconds</i> <i>60 Seconds</i> <i>5 Minutes</i> <i>15 Minutes</i>	<i>The slide show will run automatically after the time is selected.</i>

# Controls and Basic Instructions

## Control Button Functions - continued (OSD Functions)

### How to access to the Setup Mode

Button	Command
^	Up
v	Down
⊞	Enter or Confirm

### Viewing Pictures Individually

Button	Command
⊞	Previous Picture
⊞	Zoom in the Select Picture
⊞	Next Picture

### Main Menu Page

Button	Command
⊞	Left
⊞	Select
⊞	Right

## Demo Slide Show

Pictures have been pre-loaded into the Digital Photo Picture Frame. These pictures can be viewed without inserting any memory cards. Power on the Digital Photo Picture Frame, wait for a while, the demo slide show will run automatically.

## Auto Slide Show

The unit has auto slide show function, it allows you to view your pictures at any time. Power on the Digital Photo Picture Frame and insert a memory card, no matter what state the unit is, wait for a while, the slide show will run automatically.

## Setting a Favorite Slide Show

In Photo Mode, press the the ►, ◀, ^ or v button to select a favorite picture and press the OK button to mark it as a favorite. Press the OK button again to cancel your choice. When you have selected all your favorite images for your custom slideshow, wait for a while, your favorite slide show will start automatically.

# Frequently Asked Questions

## Frequently Asked Questions(FAQ)

**Q :** What other media formats can the Digital Photo Picture Frame support? Why will it not play all images?

**A :** The Digital Photo Picture Frame will support JPEGs taken from a digital camera. The Digital Photo Picture Frame may not read all images.

**Q :** I have a memory card in the Digital Photo Picture Frame, but it's not reading the card. What should I do?

**A :** First, make sure that you are using a memory card that is supported by the Digital Photo Picture Frame. Second, ensure that the memory card is inserted all the way into the correct slot. Third, press the EXIT button until you reach the "Select Card" page. If the memory card is properly inserted into the slot, that memory card icon will be highlighted.

Note: Some digital cameras save images into non-standard formats. Please refer to your camera's operating manual for specifics.

**Q :** Why do some pictures load faster than others?

**A :** Higher resolution pictures load slower. Using a lower resolution when taking pictures speeds loading time.

# Technical Specifications and Recycling

## Technical Specifications

 
Product:	10.2" LCD Screen Digital Photo Picture Frame
Resolution:	1024 x 600 pixels
Input Formats:	Secure Digital™, Multi Media Card™, Memory Stick™, Memory Stick Duo™, Memory Stick Pro™
Contrast Ratio:	400:1
Horizontal viewing angle:	120 degrees
Vertical viewing angle:	110 degrees

### Questions? Need some help?

This manual should help you understand your new product. If you have questions, please call our toll-free number found on the insert with this icon:



Or visit [www.polaroid.com](http://www.polaroid.com).

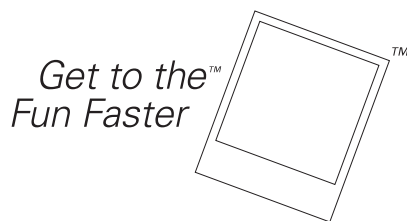

© 2008 by  **Polaroid** All rights reserved

### WEEE:

This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to [www.polaroid.com](http://www.polaroid.com) and click on “Company” or call the customer service number for your country listed in the instruction manual.



**RoHS**

“Polaroid” and “Polaroid and Pixel” are trademarks of Polaroid Corporation. For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com).



Part No.:OM6114US001  
Printed in China





