February 2006

Dual Input Dissolved Oxygen/pH Analyzer

Model Options 1055-25-32 and 1055-25

For additional information, please refer to the Instruction Manuals CD shipped with this product, or visit our website at www.emersonprocess.com/raihome/liquid/.

ESSENTIAL INSTRUCTIONS

READ THIS PAGE BEFORE PROCEEDING!

Your purchase from Rosemount Analytical, Inc. has resulted in one of the finest instruments available for your particular application. These instruments have been designed, and tested to meet many national and international standards. Experience indicates that its performance is directly related to the quality of the installation and knowledge of the user in operating and maintaining the instrument. To ensure their continued operation to the design specifications, personnel should read this manual thoroughly before proceeding with installation, commissioning, operation, and maintenance of this instrument. If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.

- •Failure to follow the proper instructions may cause any one of the following situations to occur: Loss of life; personal injury; property damage; damage to this instrument; and warranty invalidation.
- •Ensure that you have received the correct model and options from your purchase order. Verify that this manual covers your model and options. If not, call 800-854-8257 or 949-757-8500 to request correct manual.
- •For clarification of instructions, contact your Rosemount representative.
- •Follow all warnings, cautions, and instructions marked on and supplied with the product.
- •Use only qualified personnel to install, operate, update, program and maintain the product.
- •Educate your personnel in the proper installation, operation, and maintenance of the product.
- •Install equipment as specified in the Installation section of this manual. Follow appropriate local and national codes. Only connect the product to electrical and pressure sources specified in this manual.
- •Use only factory documented components for repair. Tampering or unauthorized substitution of parts and procedures can affect the performance and cause unsafe operation of your process.
- •All equipment doors must be closed and protective covers must be in place unless qualified personnel are performing maintenance.
- •If this equipment is used in a manner not specified by the manufacturer, the protection provided by it against hazards may be impaired.



WARNINGS

RISK OF ELECTRICAL SHOCK

- Equipment protected throughout by double insulation.
- Installation of cable connections and servicing of this product require access to shock hazard voltage levels.
- Main power and relay contacts wired to separate power source must be disconnected before servicing.
- Do not operate or energize instrument with case open!
- Signal wiring connected in this box must be rated at least 240 V.
- Non-metallic cable strain reliefs do not provide grounding between conduit connections! Use grounding type bushings and jumper wires.
- Unused cable conduit entries must be securely sealed by non-flammable closures to provide enclosure integrity in compliance with personal safety and environmental protection requirements.
 Unused conduit openings must be sealed with NEMA 4X or IP65 conduit plugs to maintain the ingress protection rating (NEMA 4X).
- Electrical installation must be in accordance with the National Electrical Code (ANSI/NFPA-70) and/or any other applicable national or local codes.
- Operate only with front and rear panels fastened and in place over terminal area.
- Safety and performance require that this instrument be connected and properly grounded through a three-wire power source.
- Proper relay use and configuration is the responsibility of the user.

CAUTION

This product generates, uses, and can radiate radio frequency energy and thus can cause radio communication interference. Improper installation, or operation, may increase such interference. As temporarily permitted by regulation, this unit has not been tested for compliance within the limits of Class A computing devices, pursuant to Subpart J of Part 15, of FCC Rules, which are designed to provide reasonable protection against such interference. Operation of this equipment in a residential area may cause interference, in which case the user at his own expense, will be required to take whatever measures may be required to correct the interference.

WARNING

This product is not intended for use in the light industrial, residential or commercial environments per the instrument's certification to EN50081-2.

MODEL SOLU COMP II SPECIFICATIONS

SPECIFICATIONS - General

Case: ABS (panel mount), polycarbonate (surface/pipe mount). All versions are NEMA 4X/CSA 4 (IP65).

Dimensions

Panel (code -10): 6.10 x 6.10 x 3.72 in. (155 x 155 x 94.5 mm)

Surface/Pipe (code -11): 6.23 x 6.23 x 3.23 in. (158 x 158 x 82 mm); see page 5 for dimensions of pipe mounting bracket.

Conduit openings: Accepts PG13.5 or 1/2 in. conduit fittings

Display: Two line, 16-character, back-lit display. Character height: 4.8 mm. Display can be customized to meet individual requirements. Depending on number of sensors, as many as 14 display screens are available.


Ambient temperature and humidity: 0 to 50°C, (32 to 122°F) RH 5 to 95% (non-condensing)

Note: The analyzer is operable from -20 to 60°C (-4 to 140°F) with some degradation in display performance.

Power:

Code -01: 115/230 Vac ±15%, 50/60 Hz ±6%, 8.0W Code -02*: 24 Vdc ±15%, 6.0W Installation Category II

^{*} For +24Vdc Power Supply use only devices meeting NEC Class II or UL recognized (UL 1950).

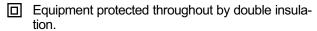

Hazardous Location:



Class I, Division 2, Groups A, B, C, & D



POLLUTION DEGREE 4: Extended Environment Outdoor use where conductive contamination such as rain, snow, or dust may be present. (Hazardous Location only)

Ordinary Location: (-68 only)



12RN

POLLUTION DEGREE 2: Normally only non-conductive pollution occurs. Occasionally, however, a temporary conductivity caused by condensation must be expected.

RFI/EMI: EN-61326 **LVD**: EN-61010-1

Input: Choice of single or dual sensor input with measurement choices of pH/ORP, conductivity/ resistivity, toroidal conductivity, flow, chlorine, dissolved oxygen, and dissolved ozone. Field-commissioned units allow user to change measurements on either or both inputs. See combination guide for valid combinations. For contacting conductivity measurements, temperature element must be a Pt 1000 RTD. For other measurements, use either a Pt100 RTD, Pt1000 RTD, or 22k NTC (D.O. only).

Outputs: Two 4-20 mA or 0-20 mA isolated outputs. Continuously adjustable. Linear or logarithmic. Maximum load 500 ohms. Output dampening with time constant of 5 sec is user-selectable.

Alarms: Three alarm relays for process measurement(s) or temperature. Alarm 3 can be configured as a fault alarm, instead of a process alarm. Each relay can be configured independently. Alarm logic (high or low activation or USP*) and deadband are user-programmable. The USP* alarm can be programmed to activate when the conductivity is within a user-selectable percentage of the limit.

*conductivity/resistivity measurement only

Relays: Form C, single pole double throw, epoxy sealed



	Resistive	Inductive
28 Vdc	5.0 A	3.0 A
115 Vac	5.0 A	3.0 A
230 Vac	5.0 A	1.5 A


Terminal Connections Rating: 26-14 AWG wire size
Weight/Shipping weight (rounded up to nearest lb or nearest 0.5 kg): 3 lb (1.5 kg)/4 lb (2.0 kg)


QUICK START GUIDE


FOR MODEL SOLU COMP II DISSOLVED OXYGEN/pH ANALYZER


(Model Options 1055-25-32 and 1055-25)

- 1. Refer to page 6 for installation instructions.
- 2. Make alarm, output, and power connections as shown below.

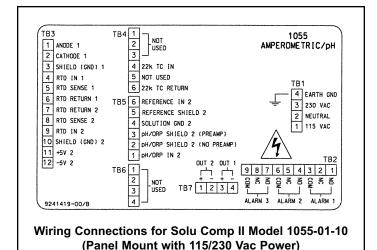

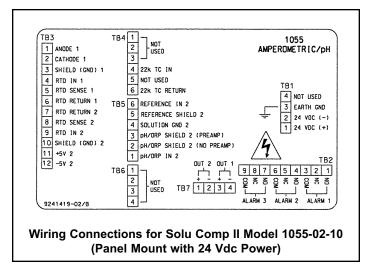

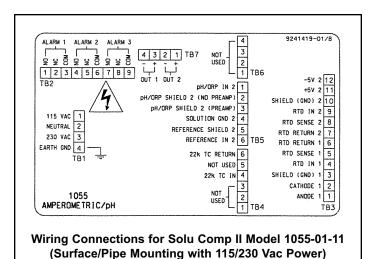


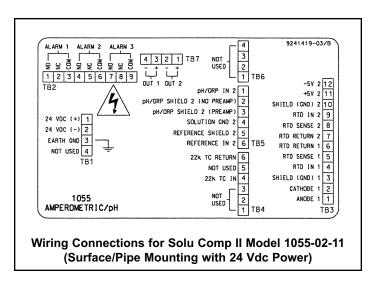


CONTINUED ON THE FOLLOWING PAGE


3. Wire the sensor to the analyzer

Sensor Wiring (499ADO and 499ATrDO sensors).

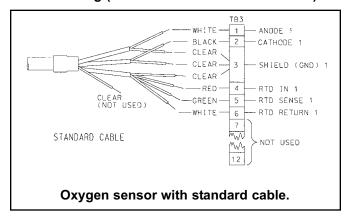

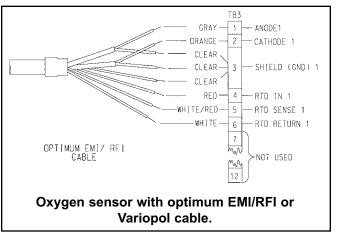

Sensor Wiring (Hx438 and Gx448 sensors).

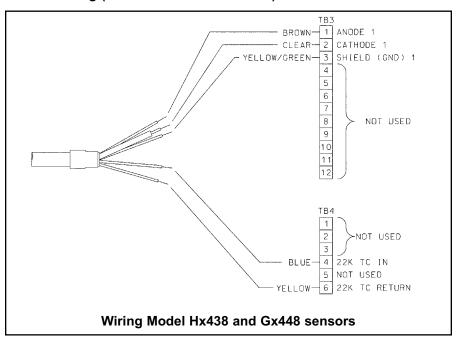

4. Once connections are secured and verified, apply power to the analyzer.

CONTINUED ON THE FOLLOWING PAGE

- 5. When the analyzer is powered up for the first time, Quick Start screens appear. Using Quick Start is easy.
 - a. A blinking field shows the position of the cursor.
 - b. Use the ◀ or ▶ key to move the cursor left or right. Use the ▲ or ▼ key to move the cursor up or down or to increase or decrease the value of a digit. Use the ▲ or ▼ key to move the decimal point.
 - c. Press ENTER to store a setting. Press EXIT to leave without storing changes. Pressing EXIT also returns the display to the previous screen.




6. Choose the desired language. Select >> to show more choices.




7. Choose the number of sensors wired to the analyzer.

NOTE


If **One** sensor is chosen, <u>only **S1** (dissolved oxygen) will be available</u>. **S2** (pH/ORP) cannot be chosen for single measurement.

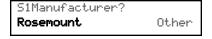


8. For Sensor 1 (DO), identify the manufacturer of the sensor, Rosemount Analytical or other.

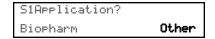


9. Identify the application. **Biopharm** is biopharmaceutical manufacturing. **Other** is aeration basins, boiler feedwater, etc.

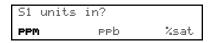

10. Select the desired units. The screen at left appears only if **Rosemount** and **Other** were selected in steps 7 and 8, respectively. Otherwise, the choice ppb does not appear. Choose ppb if the sensor is the 499A TrDO.

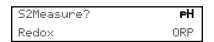


11. Choose pH, redox, or ORP for sensor 2. This screen does not appear if the analyzer is configured for a single sensor (DO).

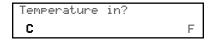

- 12. Choose temperature units.
- 13. The main display appears. The outputs and alarms are assigned to default values.
- 14. To change outputs, alarms, and temperature-related settings, go to the main menu and choose **Program**. Follow the prompts. For a guide to the Program menu, see the menu tree on the following page.
- 15. To return the analyzer to the default settings, choose **Reset Analyzer** in the Program menu.

QUICK REFERENCE GUIDE

MENU TREE FOR DISSOLVED OXYGEN/pH MEASUREMENTS

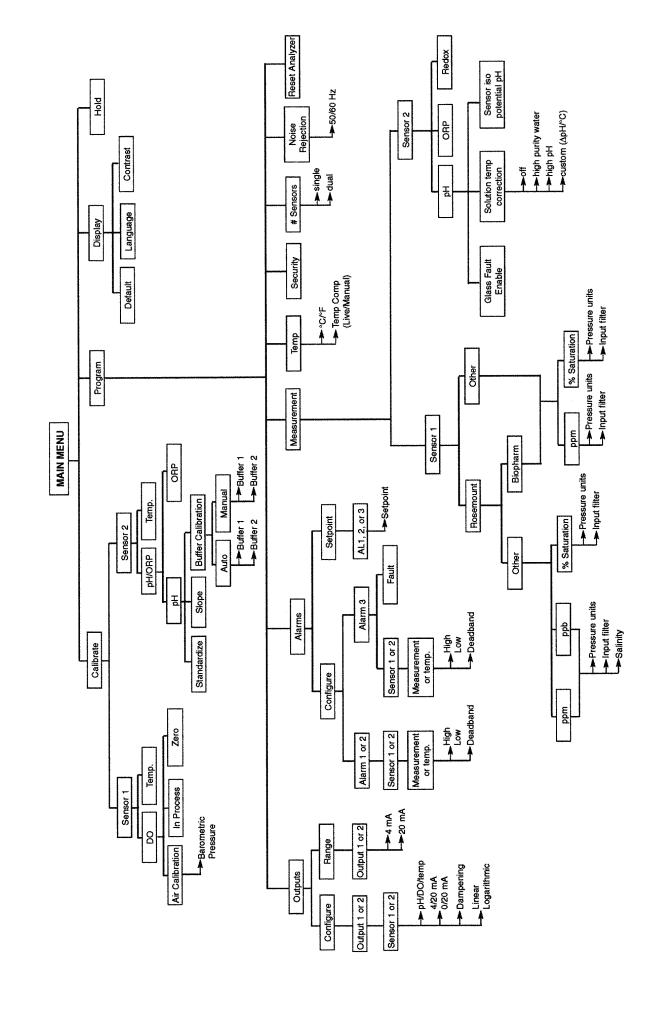

MODEL SOLU COMP II INSTALLTION

INSTALLATION

UNPACKING AND INSPECTION.


Inspect the shipping container. If it is damaged, contact the shipper immediately for instructions. Save the box. If there is no apparent damage, unpack the container. Be sure all items shown on the packing list are present. If items are missing, notify Rosemount Analytical immediately.

INSTALLATION

- Although the analyzer is suitable for outdoor use, do not install it in direct sunlight or in areas of extreme temperatures.
- Install the analyzer in an area where vibrations and electromagnetic and radio frequency interference are minimized or absent.


- Keep the analyzer and sensor wiring at least one foot from high voltage conductors. Be sure there is easy access to the analyzer.
- 4. AC power and relay wiring should not enter via top conduit openings and should be kept separated from other wiring in the analyzer after installation.
- To reduce the likelihood of stress on wiring connections, the hinged front panel (-11 models) shall not be removed from the base during wiring installation, and there shall be sufficient wire leads to avoid stress on conductors.
- For UL-approved models (-68), the clear wiring shield must be installed prior to operation.

PANEL MOUNTING

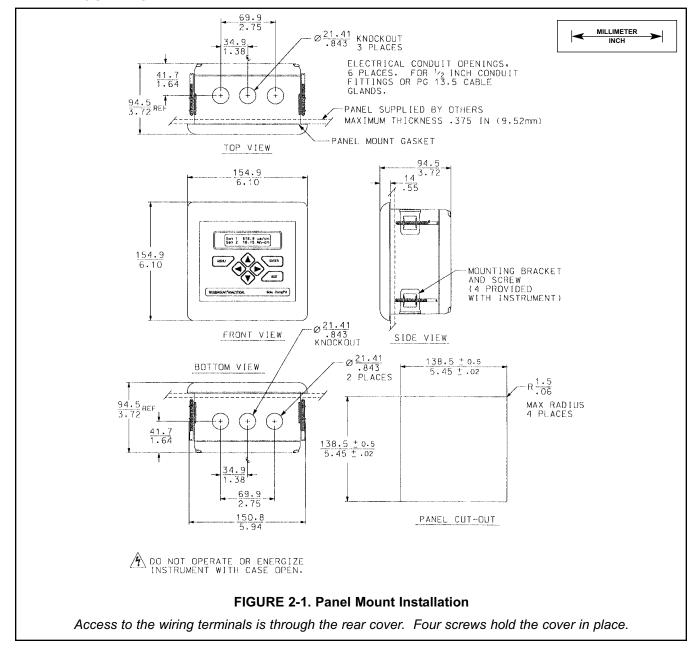


MODEL SOLU COMP II INSTALLATION

PIPE MOUNTING

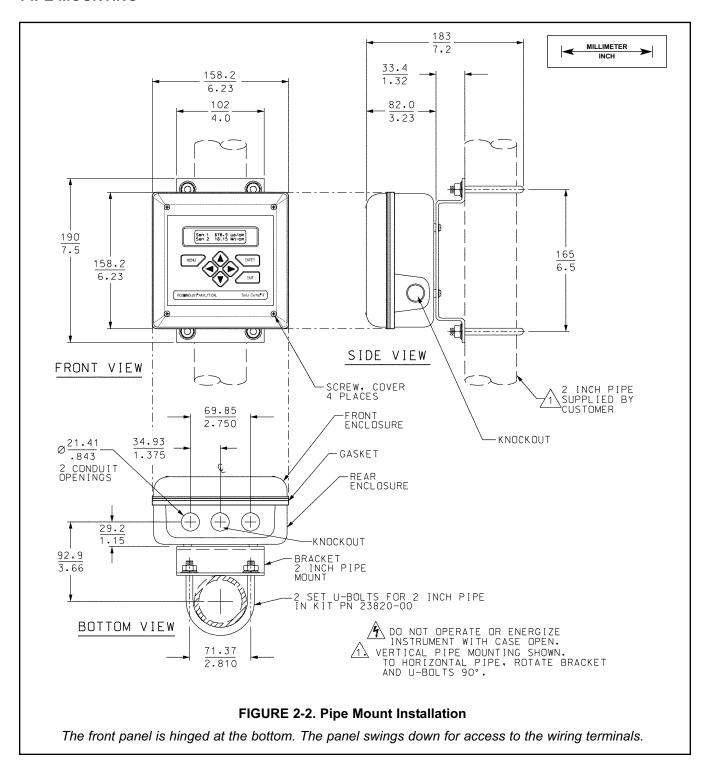

MODEL SOLU COMP II INSTALLATION

SURFACE MOUNTING

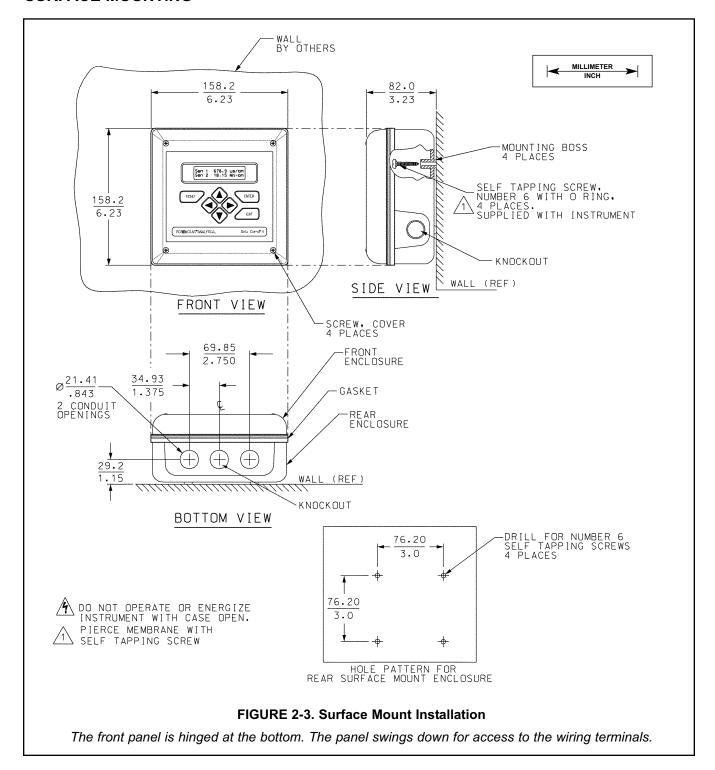

MODEL SOLU COMP II CALIBRATION

CALIBRATION

Calibration—Zero

1. Place the sensor in the zero solution. Use either 5% sodium sulfite in water or 99.999% nitrogen. Keep the sensor in the zero solution for AT LEAST TWO HOURS before zeroing.

NOTE

The 499ATrDO (trace dissolved oxygen) sensor does not normally require zeroing.

- 2. From the main display, press MENU.
- 3. Choose Calibrate.
- Choose Sensor1.
- 5. Choose Measurement.
- 6. Choose Zero.
- 7. Once the sensor current is stable, the analyzer will accept the zero value.
- 8. Press MENU then EXIT.

Air Calibration

- 1. Remove the sensor from the process stream. Dry the membrane with a soft tissue. **The membrane must** be dry during air calibration.
- 2. Place some water in a container and suspend the sensor about 0.5 cm over the surface.
- 3. Once readings are stable, do the following steps.
- 4. From the main display, press MENU.
- 5. Choose Calibrate.
- Choose Sensor1.
- Choose Measurement.
- 8. Choose Aircal.
- The screen shows the barometric pressure currently being measured by the analyzer. Press ENTER.
- 10. The analyzer verifies readings are stable, then completes the calibration. The number in the display is the equilibrium solubility of atmospheric oxygen in water at the prevailing temperature and pressure.
- 11. Press MENU then EXIT.

MODEL SOLU COMP II CALIBRATION


Calibration against a standard instrument.

1. Immerse the standard sensor in the process liquid as close to the process sensor as possible.

- 2. Let the standard instrument reading stabilize.
- 3. From the main display, press MENU.
- 4. Choose Calibrate.
- Choose Sensor1.
- 6. Choose Measurement.
- 7. Choose InProcess.
- 8. Use the arrow keys to change the display to match the reading from the standard instrument. Press ENTER.
- 9. Press MENU then EXIT.

Calibration—pH

- 1. The analyzer will perform an automatic two-point calibration.
- 2. Obtain two buffer solutions. Ideally, the buffer pH should bracket the expected pH of the sample.
- 3. From the main display, press MENU.
- 4. Choose Calibrate.
- 5. Choose Sensor2.
- 6. Choose Measurement.
- Choose BufferCal.
- 8. Choose Auto.
- 9. Choose Buffer1.
- 10. Place the sensor in the first buffer. Once **Wait** disappears, the analyzer displays the buffer pH. If the displayed value is not correct use to scroll through the list of standard buffer values. Press ENTER to save.
- 11. Place the sensor in the second buffer. Choose **Buffer2**. Once **Wait** disappears, the analyzer displays the buffer pH. If the displayed value is not correct use to scroll through the list of standard buffer values. Press ENTER to save.
- 12. If the calibration was successful, the analyzer will display the slope and offset.
- 13. Press MENU then EXIT.

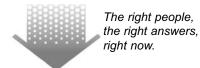

ROSEMOUNT ANALYTICAL
CUSTOMER SUPPORT CENTER
1-800-854-8257



PlantWeb



ON-LINE ORDERING NOW AVAILABLE ON OUR WEB SITE http://www.raihome.com

Specifications subject to change without notice.









Emerson Process Management

Liquid Division 2400 Barranca Parkway Irvine, CA 92606 USA Tel: (949) 757-8500 Fax: (949) 474-7250

http://www.raihome.com

