

© KANNAD: This document is the property of KANNAD and contains proprietary and confidential information. The document is loaned on the express condition that neither the document itself nor the information contained therein shall be disclosed without the express consent of KANNAD and that the information shall not be used by the recipient without prior written acceptance by KANNAD. Furthermore, the document shall be returned immediately to KANNAD upon request.

Emergency Locator Transmitters

A Company of the Orolia Group

OPERATION MANUAL



AP INTEGRA / AP-H INTEGRA ELT With built-in GPS & Additional Integral Antenna

Revision 01

TP PAGE : 1

First issue: OCT 20/2010

Date of rev.: MAY 09/2011

**Users are kindly requested to notify KANNAD of any discrepancy,
omission or error found in this manual.
Please report to our customer support:
E-mail: support.sar@kannad.orolia.com
Tel.: +33 (0)2 97 02 49 00**

RECORD OF REVISIONS

REV. Nb	REVISION DATE	INSERTION DATE	BY
00	OCT 20/2010	OCT 20/2010	J.S.
01	MAY 09/2011	MAY 09/2011	J.S.

RECORD OF REVISIONS

PAGE INTENTIONALLY LEFT BLANK

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
Title Page		
TP	1	MAY/09/2011
Record of Revisions		
ROR	1	MAY/09/2011
ROR	2	MAY/09/2011
List of Effective Pages		
LEP	1	MAY/09/2011
LEP	2	MAY/09/2011
LEP	3	MAY/09/2011
LEP	4	MAY/09/2011
Table of Contents		
TOC	1	MAY/09/2011
TOC	2	MAY/09/2011
Introduction		
INTRO	1	MAY/09/2011
INTRO	2	MAY/09/2011
System Overview		
	1	MAY/09/2011
	2	MAY/09/2011
	3	MAY/09/2011
	4	MAY/09/2011
	5	MAY/09/2011
	6	MAY/09/2011
System Functional Description and Operation		
	101	MAY/09/2011
	102	MAY/09/2011

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE	
Installation / Removal	103	MAY/09/2011	
	104	MAY/09/2011	
	105	MAY/09/2011	
	106	MAY/09/2011	
	107	MAY/09/2011	
	108	MAY/09/2011	
	109	MAY/09/2011	
	110	MAY/09/2011	
	111	MAY/09/2011	
	112	MAY/09/2011	
	Check	201	MAY/09/2011
		202	MAY/09/2011
203		MAY/09/2011	
204		MAY/09/2011	
205		MAY/09/2011	
206		MAY/09/2011	
207		MAY/09/2011	
208		MAY/09/2011	
Troubleshooting	301	MAY/09/2011	
	302	MAY/09/2011	
	303	MAY/09/2011	
	304	MAY/09/2011	
	401	MAY/09/2011	

LIST OF EFFECTIVE PAGES

SUBJECT	PAGE	DATE
	402	MAY/09/2011
Schematics and Diagrams	501	MAY/09/2011
	502	MAY/09/2011
	503	MAY/09/2011
	504	MAY/09/2011
Servicing	601	MAY/09/2011
	602	MAY/09/2011

LIST OF EFFECTIVE PAGES

PAGE INTENTIONALLY LEFT BLANK

TABLE OF CONTENTS

INTRODUCTION	1
WARRANTY	2
Scope	2
Exclusion	2
SYSTEM OVERVIEW	1
COSPAS-SARSAT System	1
Description	1
World coverage with the COSPAS-SARSAT system	2
Operation	2
Environmental improvements of ELTs	2
KANNAD 406 ELT System Presentation	3
LINE REPLACEABLE UNITS	5
Transmitter	5
Bracket	6
External antenna	6
SYSTEM FUNCTIONAL DESCRIPTION AND OPERATION	101
Transmitter Functional Description	101
Transmission	101
Controls & Connectors	101
Working mode information	102
Off	102
Self-Test	102
Armed	103
On	103
VSWR Switch function (External / Integral antenna)	104
GPS Strategy	104
Autonomy	105
Electrical interfaces	106
Transmitter Technical Specifications	107
Equipment limitations	108
Activation	108
Standby mode for automatic activation	108
Manual activation as Fixed ELT	108
Manual activation as Portable ELT	109
Off	110
Self-Test	110
Compatibility list	111
Mounting brackets	111
Remote control panels (RCP)	111
Outside buzzer	111
DIN-12 connector or programming dongles	111
External antennas	112
INSTALLATION / REMOVAL	201

TABLE OF CONTENTS

Registration	201
General	201
Registration in USA	201
Registration in Canada	202
Programming	203
"Pin programming" option	203
ELT transmitter installation procedure	204
ELT transmitter Connection	206
First power up	206
Removal	207
CHECK	301
Self-test	301
Periodicity	301
Self-test procedure	301
Operational tests	302
ELT operational tests	302
Test of transmitted signals	302
406 MHz Transmission tests	302
121.5 MHz Transmission tests	303
TROUBLESHOOTING	401
General	401
Faults on Self-test	401
Visual Indicator	401
3+1 flashes	401
3+2 flashes	401
3+3 flashes	401
3+4 flashes	401
3+5 flashes	401
3+6 flashes	401
SCHEMATICS & DIAGRAMS 501	
Outline dimensions and weight with mounting bracket AF-COMPACT	501
Outline dimensions and weight with universal mounting bracket	502
AP INTEGRA / AP INTEGRA (ER), axis of installation	503
AP-H INTEGRA / AP-H INTEGRA (ER), axis of installation	504
SERVICING	601
Maintenance Schedule	601
Periodic inspection	601
Battery replacement	601
Battery replacement requirements	602

INTRODUCTION

INTEGRA ELTs are an extension of the range of KANNAD ELTs. The development of this type of ELTs is based on the improvement of safety of flights either for light aircraft, business aircraft or commercial aviation.

The safety of flights is strengthened thanks to a **built-in GPS** giving a more accurate position transmitted within minutes following the distress and an **Integral Antenna** which may replace the main antenna in case on unavailability of this last one.

AP⁽¹⁾ and AP-H INTEGRA are ELTs of Automatic Portable type intended to be rigidly attached to the aircraft before the crash but readily removable from the aircraft after a crash. They function as automatic ELTs (AF) during the crash. The external antenna may be disconnected and an auxiliary antenna (stowed to the ELT's housing) attached to the ELT.

AP INTEGRA is designed for fixed wing aircraft or helicopters, AP-H INTEGRA is designed for flat installation on board helicopters only.

The AP INTEGRA (ER) and AP-H INTEGRA (ER) ELTs are evolutions of AP INTEGRA and AP-H INTEGRA ELTs. The main evolution consists in the extension to -40°C of temperature range.

The instructions in this manual provide the information necessary for the installation and the operation of AP INTEGRA, AP-H INTEGRA, AP INTEGRA (ER) and AP-H INTEGRA (ER) ELTs.

Servicing instructions of ELT are normally performed by shop personnel. For detailed instructions , refer to Service & Support section of Kannad Website.

For the initial installation, please refer to Initial Installation Manual supplied with AP INTEGRA, AP-H INTEGRA, AP INTEGRA (ER) and AP-H INTEGRA (ER) ELTs.

FOR REGULATORY REQUIREMENTS, PLEASE CONSULT YOUR NATIONAL AVIATION AUTHORITY.

NOTE: (1) AP for Automatic Portable.

WARRANTY**1. Scope**

The equipment is warranted against all material or manufacturing defect for a period of two years from the date of installation on the aircraft or thirty months from the date of shipment from KANNAD S.A.S. facilities whichever occur first. Work carried out under the warranty shall not have the effect of extending the warranty period.

In respect of this warranty, after a defect has been noted by our services, the sole obligation incumbent upon us shall be the repair of the equipment or the element identified as being defective by our services or possibly its replacement free of charge, to the exclusion of all compensation or damages. This warranty covers the cost of parts and labour in our factories.

The cost of transportation of the equipment replaced or repaired are the purchaser's exclusive responsibility.

The risks shall be borne by the purchaser.

2. Exclusion

Defects and deterioration caused by natural wear of the product or by external accident (poor maintenance, abnormal conditions of use, etc.) or by modification of the equipment and tools not recommended nor specified by our company, are excluded from the warranty.

Also the warranty shall not cover visible defects which the purchaser wouldn't have formally notified KANNAD within 48 hours of receipt of the equipment.

SYSTEM OVERVIEW

1. COSPAS-SARSAT System

A. Description

Launched in the early eighties by the four founder countries (Canada, France, Russia, USA), the COSPAS-SARSAT system provides satellite aid to search and rescue (SAR) operations for maritime, aeronautical and terrestrial vehicles anywhere in the world.

It uses distress beacons fitted on mobiles and a constellation of LEO and GEO satellites which relay and process the 406 MHz signal to ground stations (LUT) where the beacon positions are determined with a precision of less than 2 NM with the Doppler effect..

Several types of beacons are designed to match the various applications of the COSPAS-SARSAT system:

- EPIRB (Emergency Position Indicating Radio Beacon) for maritime applications.
- ELT (Emergency Locator Transmitter) for aeronautical applications.
- PLB (Personal Locator Beacon) for land expeditions.

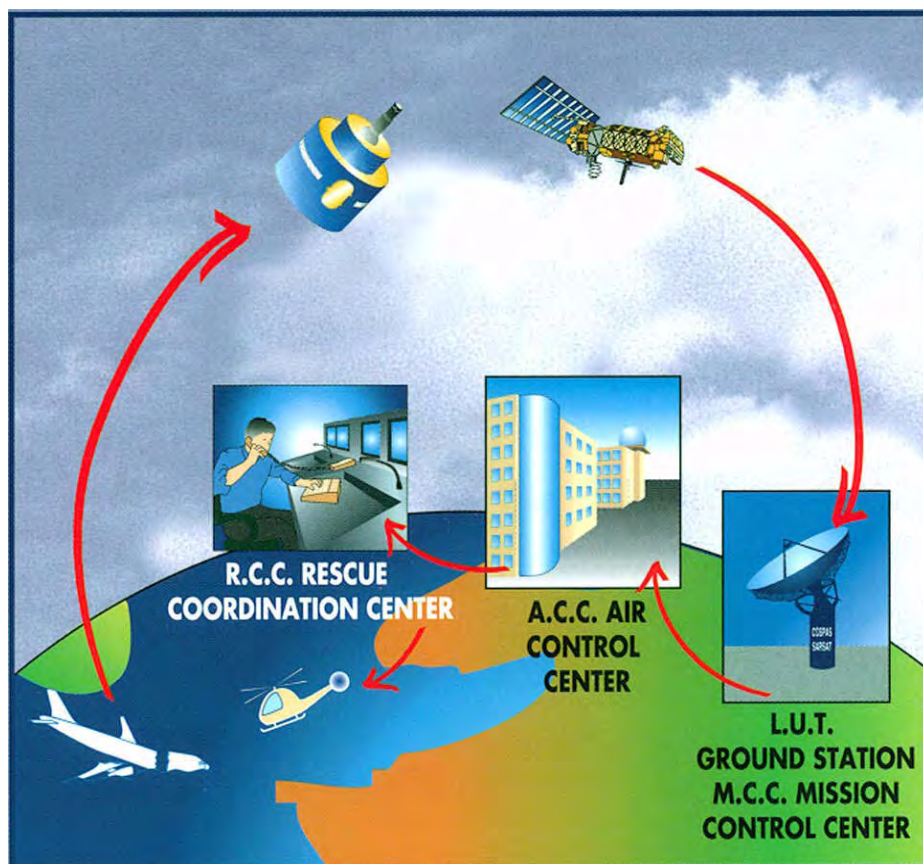


Figure 1: COSPAS-SARSAT System

B. World coverage with the COSPAS-SARSAT system

The major improvement is the use of the COSPAS-SARSAT system for processing aeronautical emergencies.

The 406 MHz transmission carries digital data which enable the identification of the aircraft in distress and facilitate SAR operation (type of the aircraft, number of passengers, type of emergency).

The 406 MHz message is transmitted to the COSPAS-SARSAT satellites. This message is downloaded to one of the 64 ground stations (44 LEOLUTs and 20 GEOLUTS).

The aircraft is located by Doppler effect by the LEO satellites with a precision better than 2 NM (4 km) at any point of the earth.

Thanks to the built-in GPS receiver, the position (accuracy typically about 60 meters) will be transmitted by the ELT within minutes following the distress.

The 121.5 MHz frequency is no more processed by COSPAS-SARSAT system but is still used by SAR services for homing in the final stage of rescue operations.

C. Operation

In the event of a crash, the ELT activates automatically and transmits a sweep tone on 121.5 MHz and the 406 MHz signal.

In a crash, a G-Switch (shock detector) turns the ELT "ON" when the ELT is subjected to an important change of velocity (or deceleration).

Activation may also be accomplished by means of a Remote Control Panel (RCP) from the cockpit or directly from a switch of the ELT's front panel.

In the event the external antenna is unavailable due to the crash, the integral antenna will replace it to transmit the 406 MHz signal to the Cospas-Sarsat satellites.

Note: The integral antenna has not been tested and approved by Cospas-Sarsat.

D. Environmental improvements of ELTs

The certification of an ELT includes a range of severe mechanical tests:

- resistance to flame;
- impact and crush tests;
- resistance up to 500 G shocks;
- watertightness;
- anti-deflagration;
- extreme temperatures .

2. KANNAD 406 ELT System Presentation

AP INTEGRA and AP-H INTEGRA belong to the AP type of ELTs which are permanently attached to an aircraft. AP INTEGRA and AP-INTEGRA (ER) are designed to be installed on fixed wing aircraft or helicopters. AP-H INTEGRA and AP-H INTEGRA (ER) are designed for flat installation on board helicopters only.

The INTEGRA ELT system ([Refer to Section Figure 2: ELT system description page 4](#)) is composed of:

1. the ELT transmitter:
 - P/N S1850501-01 for AP INTEGRA (ER) or,
 - P/N S1850501-02 for AP INTEGRA or,
 - P/N S1854501-01 for AP-H INTEGRA (ER) or,
 - P/N S1854501-02 for AP-H INTEGRA
2. a mounting bracket (P/N S1840502-01 or S1840502-02);
3. an external whip, rod or blade antenna;
4. an auxiliary whip antenna;
5. a remote control panel⁽¹⁾;
6. a DIN-12 connector or programming dongle when the optional RCP is connected.

Note: (1) **The RCP is optional only if the commands and controls of the ELT are reachable and visible from the pilot seated position.**


(RTCA DO-204A):

*"Equipment control and indicator installed for in-flight use **shall** be readily accessible from the cockpit crew position. The cockpit crew **shall** have an unobstructed view of visual indicator when in the normal seated position."*

For details of approved part number of INTEGRA ELT system, [Refer to Section 6. Compatibility list page 111.](#)

The transmitter and bracket are installed in the aircraft near the tail. The external antenna is mounted on the fuselage near the tail. The remote control panel is installed in the cockpit and connected to the ELT with a DIN-12 connector or a programming dongle and a 2, 3, or 4-wire bundle (not supplied).

Figure 2: ELT system description

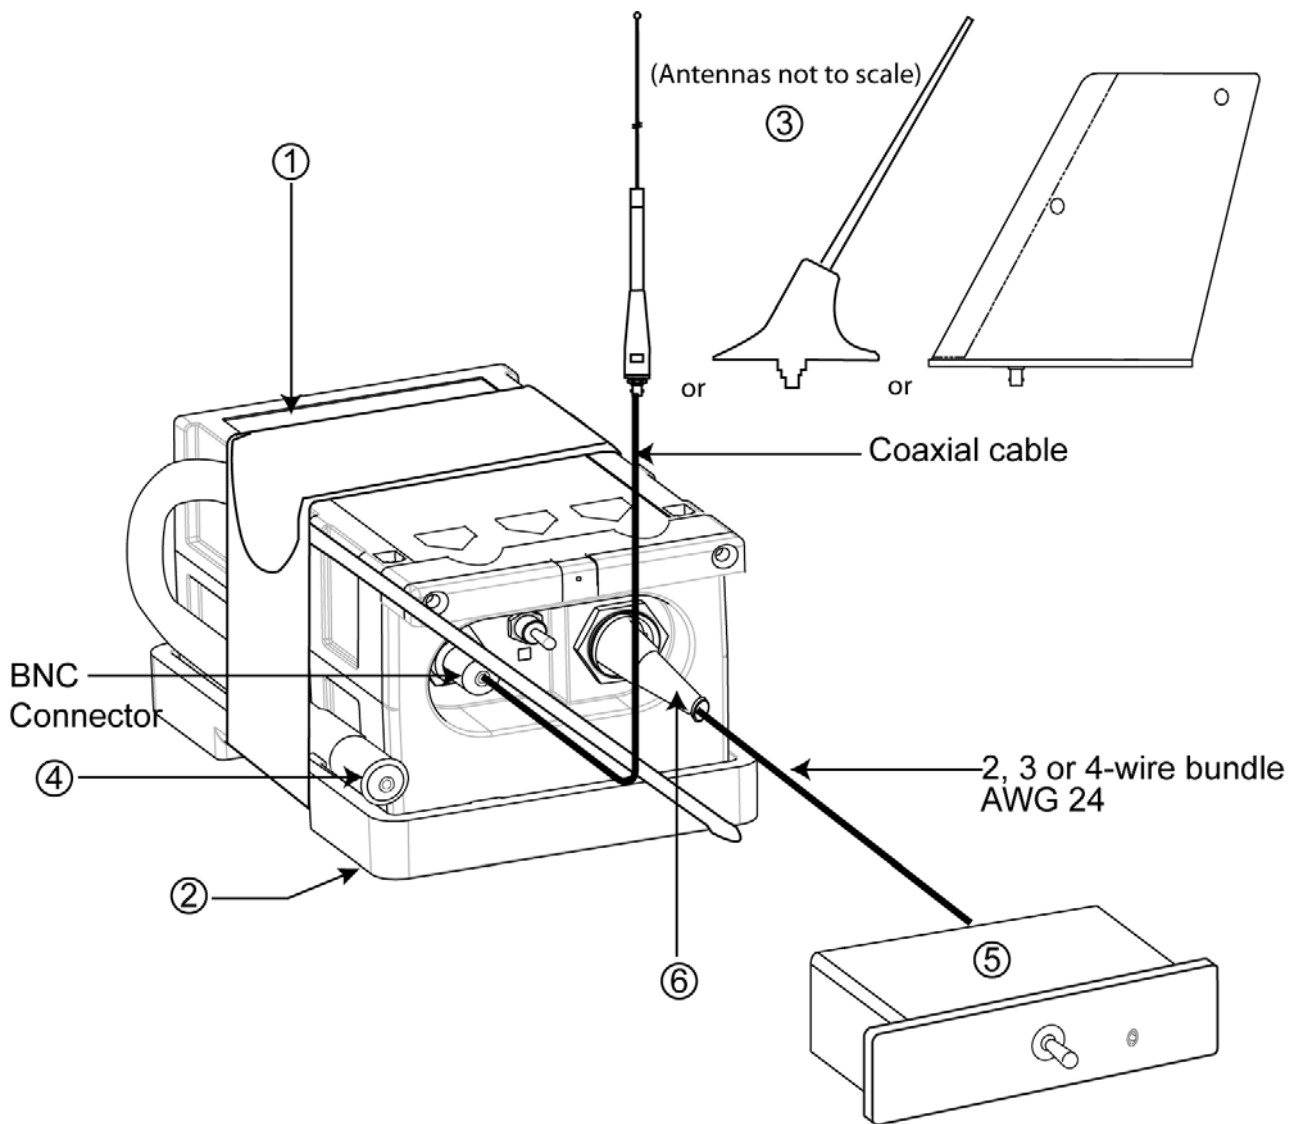

3. LINE REPLACEABLE UNITS

A. Transmitter

The AP INTEGRA and AP-H INTEGRA are ELTs designed to be installed onboard aircraft to transmit a distress signal on frequencies:

- 406 MHz (COSPAS-SARSAT frequency) for precise pinpointing and identification of the aircraft in distress.
- 121.5 MHz used for homing in the final stages of the rescue operations.

The AP INTEGRA and AP-H INTEGRA are certified as Automatic Portable (AP) ELTs with the approved outside antennas.

The housing of AP INTEGRA and AP-H INTEGRA transmitters are made of molded plastic with excellent mechanical resistance.

The ELT housing is designed with no sharp edges.



Figure 3: ELT Transmitter

B. Bracket

The bracket installed near the tail is designed to fix the ELT with a Velcro® strap. This enables quick removal of the ELT for maintenance or exchange.

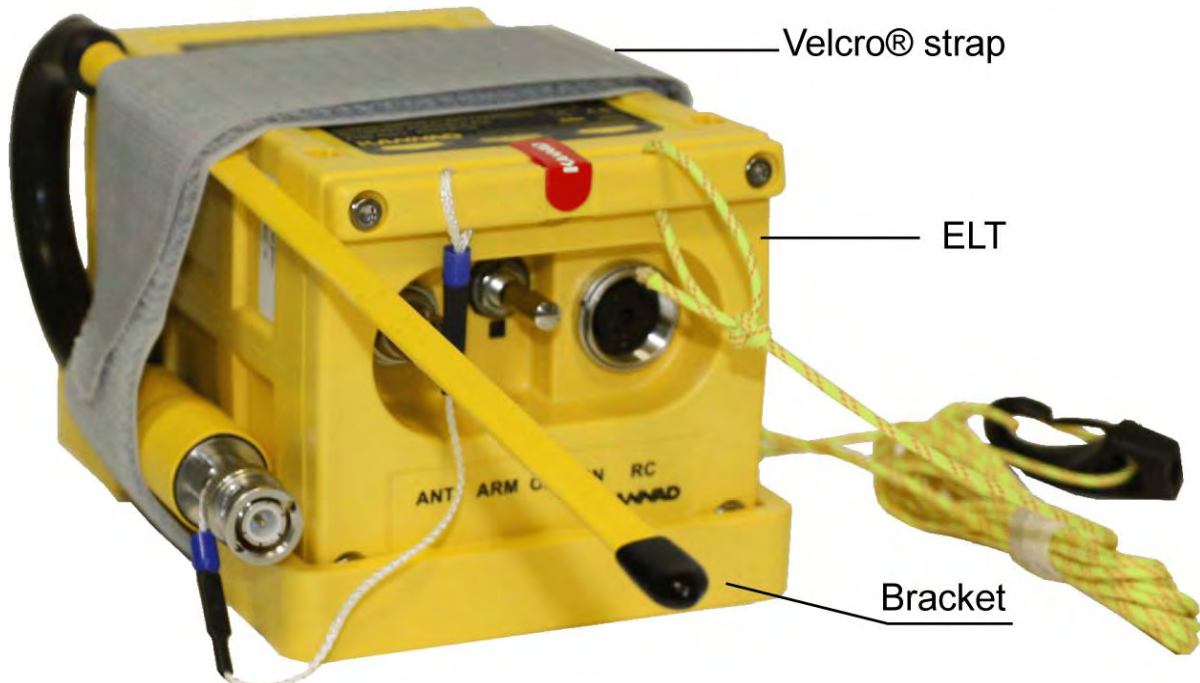


Figure 4: ELT Transmitter with Mounting Bracket

The transmitter may be installed on its standard mounting bracket (P/N S1840502-01) or on an Universal Mounting Bracket (P/N S1840502-02) to re-use existing drilling for retrofit (Refer to DOC09082, Initial Installation Manual for drilling masks and outline dimensions of these brackets).

C. External antenna

Only approved antennas may be installed (Refer to Section 6. Compatibility list page 111).

Connection to the ELT will be carried out with a 50 Ohm coaxial cable (RG58 for example) ended with a male BNC connector.

IMPORTANT NOTICE: KANNAD recommends a cable with radio electric properties similar or better to those of a RG58 cable.

Note: the 50 Ohm coaxial and the male BNC connector are not supplied

SYSTEM FUNCTIONAL DESCRIPTION AND OPERATION

1. Transmitter Functional Description

A. Transmission

The transmitter can be activated either automatically when the crash occurs (thanks to a shock sensor) or manually (thanks to a switch on the transmitter itself or on a RCP).

The transmitter is designed to transmit on two frequencies (121.5 and 406 MHz). The 121.5 Mhz is mainly used for homing in the final stages of the rescue operations. The 406 MHz frequency is used by the COSPAS-SARSAT satellites for precise pinpointing and identification of the aircraft in distress.

Once activated, the transmitter operates continuously on 121.5 MHz.

During operations, a digital message is transmitted on 406.037 MHz every 50 seconds.

B. Controls & Connectors

The following controls are to be found on the ELT front panel (from left to right):

1. 3-position switch ARM/OFF/ON;
2. Visual indicator (red);
3. DIN 12 socket for connection to an optional Remote Control Panel, a programming dongle or a programming equipment;
4. BNC connector for the external or auxiliary antenna.

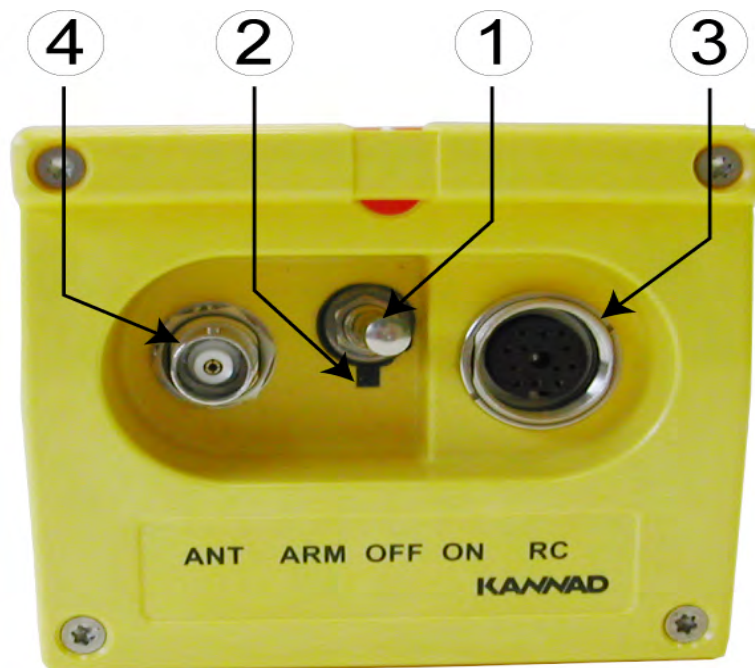


Figure 101: Front Panel

The red light gives an indication on the working mode of the beacon:

- after the self test:
 - a series of short flashes indicates the self test failed;
 - one long flash indicates a correct self test;
- in operating mode:
 - periodic flashes during 121.5 transmission;
 - long flash during 406 transmission.

A buzzer gives audio information on the beacon working:

- continuous tone during self test;
- 1 beep every 0.7 second during 121.5 transmission;
- silence during 406 transmission.

C. Working mode information

The ELT has 4 different modes:

- Off.
- Self-test (temporary mode).
- Armed (standby mode to enable automatic activation by the shock sensor or by an optional remote control panel).
- On (transmission).

Transmission is effective if the beacon is activated (either manually on the ELT control panel, automatically by the shock sensor, or remotely by the "ON" switch of an optional remote control panel when connected).

(1) Off

The ELT is off when the switch is in position "OFF", no part of the ELT is energized.

This mode must **only** be selected when the ELT is removed from the aircraft or when the aircraft is parked for a long period or for maintenance.

(2) Self-Test

The self-test mode is a temporary mode (max duration 15 sec) in which the ELT checks the main characteristics of the transmitter (Battery voltage, Programming...) and enables digital communication with programming and test equipment.

This mode is selected:

- when switching from "OFF" to "ARM";
- when switching to "RESET / TEST" on an optional Remote Control Panel (provided that the switch of the ELT is in position "ARM");
- when switching to "ON" prior to transmission.

The buzzer operates during the self-test procedure.

After about 10 seconds, the test result is displayed on the visual indicator as follows:

- One long flash indicates valid test.
- A series of short flashes indicates false test result.

The number of flashes indicates the type of failure:

- 3 + 1 = LOW BATTERY VOLTAGE.
- 3 + 2 = LOW TRANSMISSION POWER.
- 3 + 3 = FAULTY VCO LOCKING (FAULTY FREQUENCY).
- 3 + 4 = NO IDENTIFICATION PROGRAMMED.
- 3 + 5 = FAULTY VSWR (LINK TO EXTERNAL ANTENNA).
- 3 + 6 = GPS SERIAL LINK.

It is recommended to test the ELT regularly in order to detect any possible failure ([Refer to A. Periodicity, page 301](#)).

The number of self-tests carried out is recorded. This information is available when the ELT is connected to a programming and test equipment (PR600).

(3) Armed

In order to enable activation by the G-Switch or with an optional Remote Control Panel, the ELT must be in standby mode with the switch in the "ARM" position.

This mode is mandatory during flight. The ELT should remain in the "ARM" position except when the aircraft is parked for a long period or for maintenance.

(4) On

This mode is selected:

- manually by switching the ELT to "ON";
- by switching an optional Remote Control Panel switch to "ON" (provided that the ELT switch is in the "ARM" position);
- automatically when a crash occurs (provided that the ELT switch is in the "ARM" position).

When this mode is selected, the ELT starts transmitting:

- after 50 seconds on 406 MHz (one 406 MHz burst every 50 seconds) to the external antenna;
- after the GPS lock on 121.5 MHz (continuous transmission between each 406 MHz burst). If GPS lock does not occur within 5 minutes, the 121.5 MHz will be activated.

The red visual indicator on the ELT (and on an optional remote control panel when connected) flashes and the buzzer operates.

- Red visual indicator:
 - 1 short flash during ELT transmission on 121.5 MHz (every 0.7 seconds);
 - 1 long flash during ELT transmission on 406 MHz (every 50 seconds).
- Buzzer:
 - 1.5 Hz pulse signal (recurrence 0.7 s) during ELT transmission on 121.5 MHz [except if the ELT has switched to internal antenna: [Refer to D. VSWR Switch function \(External / Integral antenna\)](#)].

In case of accidental activation, the ELT can be reset either by switching it to "OFF" or by switching to "RESET" on an optional Remote Control Panel when connected.

The number of 406 MHz bursts transmitted is recorded. This information is available when the ELT is connected to a programming and test equipment (PR600).

D. VSWR Switch function (External / Integral antenna)

During the 406 MHz burst, the Voltage Standing Wave Ratio (VSWR) is measured. After 5 bursts with wrong VSWR measurements, the ELT switches from the external to the internal antenna in order to optimize transmitted signal.

In ON mode, after 36 bursts, the ELT decides to re-switch or not according to the result of 2 new VSWR measurements.

NOTE: when shifting from the external to the integral antenna the pulse signal of the buzzer shifts from one beep every 0.7 second to 2 beeps every 0.7 second.

Note: The integral antenna has not been tested and approved by Cospas-Sarsat.

E. GPS Strategy

To avoid consumption, the GPS receiver is not power supplied in ARM mode. After a crash (automatic activation) or manual activation, the GPS will try to acquire a position in continuous mode during one hour and by different sequences up to 24 hours of 406 MHz transmission. If the GPS receiver acquires a valid position, then the message will contain the true position in the next 406 MHz burst. If the GPS receiver does not acquire a valid position, then the message will contain the default value (GPS position not valid).

According to § 4.5.5.2 of Cospas Sarsat C/S T001, if, after providing valid data,

the navigation input fails or is not available, the beacon message retains the last valid position for 4 hours (± 5 min) after the last valid position data input. After 4 hours the encoded position is set to the default values.

F. Autonomy

The energy is provided by a battery pack composed of a LiMnO_2 two-element battery (See pages 107 & 602 for Kit battery reference).

Lithium cells, lithium batteries and equipment containing such batteries are subjected to regulations and classified under class 9 as from 1st of January 2003.

Battery shall be replaced according to the expiry date indicated on the ELT.

NOTE: ELT Battery useful life: 6 years in service life (ETSO/TSO/COSPAS-SARSAT margins included).

IMPORTANT: If the ELT has been activated for more than 1 hour, the battery shall be replaced (See page 602 section 2, Battery replacement requirements).

With new batteries, the duration of the 121.5 transmission is over 48 hours at -20°C for INTEGRA ELTs and over 48 hours at -40°C for INTEGRA (ER) ELTs.

As it is therefore preferable to keep the battery power for 121.5 MHz homing frequency transmission for the rescue operations, in compliance with COSPAS-SARSAT specifications, the 406 MHz transmission is deliberately stopped after 24 hours to extend the 121.5 MHz transmission for as long as possible.

G. Electrical interfaces

J1

DIN 12 socket J1 is dedicated for connection to an optional Remote Control Panel, to a Programming or Maintenance Dongles or to a programming equipment (PR600).

IMPORTANT: Shielded cables are recommended. The required wires are AWG24.

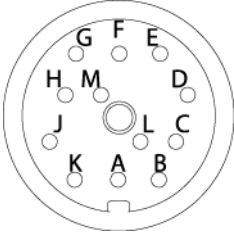
J1	PIN	Signal Name	Destination	Direction
<p>Viewed from Front Face</p> 	J1-A	RCP RESET	RCP	IN
	J1-B	DONGLE RX	SMM / PGM	IN
	J1-C	DONGLE CS	SMM	OUT
	J1-D	DONGLE SK	SMM	OUT
	J1-E	DONGLE TX	SMM / PGM	OUT
	J1-F	DONGLE ALE2P	SMM	OUT
	J1-G	RCP COMMON	RCP	OUT
	J1-H	RCP BUZZER	RCP	OUT
	J1-J	RCP LED	RCP	OUT
	J1-K	RCP ON	RCP	OUT
	J1-L	DONGLE GND	SMM / PGM	OUT
	J1-M	RCP 2W COMMON	RCP	OUT

Table 1: J1 connector pin-out

J2

BNC female connector J2 is used to connect either the external antenna through a 50 Ω coaxial cable or the auxiliary antenna.

IMPORTANT NOTICE:

The use of a low attenuation coaxial cable is recommended. The maximum permitted attenuation in the coaxial is 2db@400 MHz.

H. Transmitter Technical Specifications

TYPE

- Two-frequency ELT (121.5 / 406.037 MHz)
- Automatic Portable
- COSPAS-SARSAT Class
- INTEGRA AP (ER)/AP-H (ER):**
Class I, -40°C to +55°C.
- INTEGRA AP/AP-H:**
Class II, -20°C to +55°C.

406 MHz TRANSMISSION

- Frequency: 406.037 MHz +/- 1 kHz
- Output power: 5W (37 dBm +/- 2 dB)
- Modulation type: 16K0G1D (Biphase L encoding)
- Transmission duration: 520ms (long message) every 50 s.
- Autonomy
INTEGRA (ER): 24 Hours @ -40°C
INTEGRA: 24 Hours @ -20°C

121.5 MHz TRANSMISSION

- Frequency: 121.5 MHz +/- 6 kHz
- Output power: 50 to 400 mW (17dBm to 26 dBm), typical 100 mW
- Modulation type: 3K20A3X
- Modulation rate: > 85 %
- Frequency of modulation signal: 1600 Hz to 300 Hz with decreasing sweep
- Autonomy
INTEGRA (ER):
over 48 hours @ -40°C
INTEGRA:
over 48 hours @ -20°C.

G-SWITCH SENSOR

Mechanical G-switch sensor compliant with EUROCAE ED62 specifications.

RF Field strength limits

INTEGRA (ER): 0.471 V/m
INTEGRA: 0.474 V/m

CONTROLS

- ARM / OFF / ON switch
- DIN12 socket for RCP and pin programming option.
- Bright red visual indicator
- Buzzer
- BNC antenna connector

BATTERY

KIT BAT200, P/N: S1840510-01
LiMnO₂ two-element battery for transmitter power supply

Battery expiry date: 7 years from date of cell manufacturing

HOUSING

Material: Polycarbonate
Color: Yellow (color compounded)
Transmitter dimensions:
137 x 86 x 75.4 mm
(5.393 x 3.385 x 2.968 inches)

Weight:

- AP: typical 878 g. (1.94 lb)
- AP-H: Typical 883 g. (1.95 lb)

Tightness: O-ring

ENVIRONMENTAL CONDITIONS

RTCA DO-160F / EUROCAE ED14F
Section 4 to 26:

INTEGRA AP / AP (ER)

[ED62A]X[ED62A]A[ED62A][R(C&C1)]X
WXXXSZXXXZ[ED62]AB[XXG33]XXA
[ED62A]

INTEGRA AP-H / AP-H (ER)

[ED62A]X[ED62A]A[ED62A][U(G)]XWXXX
XSZXXXZ [ED62A]B[XXG33]XXA
[ED62A]

QUALIFICATIONS

ETSO-2C91a & ETSO-2C126 / TSO-C126a.

FOR USE OUTSIDE OF THE USA OR EASA RULES, CONTACT YOUR LOCAL CIVIL AVIATION AUTHORITY.

2. Equipment limitations

Antenna - ELT cable with maximum permitted attenuation: 2db@400 MHz.

WARNING: ELTs are radio transmitters which emit radio frequency radiation when activated. When transmitting, the user's minimum distance of exposure is 0.20 meter.

For RF Field strength limits, please [Refer to H. Transmitter Technical Specifications, page 107](#). RF Field strength limits have been calculated according to Canadian RSS-102 Standard "Radio Frequency (RF) Exposure Compliance of Radiocommunication Apparatus (All Frequency Bands)".

For Canadian user, any information and/or contact on Radiofrequency (RF) Energy and Health may be found on:

<http://www.ic.gc.ca/eic/site/smt-gst.nsf/eng/sf08792.html>.

3. Activation

A. Standby mode for automatic activation

In order to be automatically activated by the crash sensor, the ELT must be in standby mode. This mode is mandatory during the flight. We recommend to switch off the ELT only when removed from the aircraft or when the aircraft is parked for a long period or for a maintenance operation.

- Check that the antenna is correctly connected.
- Switch to " ARM".


To operate the ELT with an optional Remote Control Panel, ensure that:

- The ELT switch is the "ARM" position .

B. Manual activation as Fixed ELT

- Check that the main antenna is correctly connected.
- Switch to " ON " (either on the ELT or on an optional Remote Control Panel when connected):
 - The ELT starts with the self-test sequence then, after 50 sec., transmits on:
 - 406 MHz (one 406 MHz burst every 50 seconds);
 - 121.5 MHz (continuous transmission between each 406 MHz burst after the GPS lock) ..
 - During transmission, the buzzer operates and the red visual indicator flashes.

C. Manual activation as Portable ELT

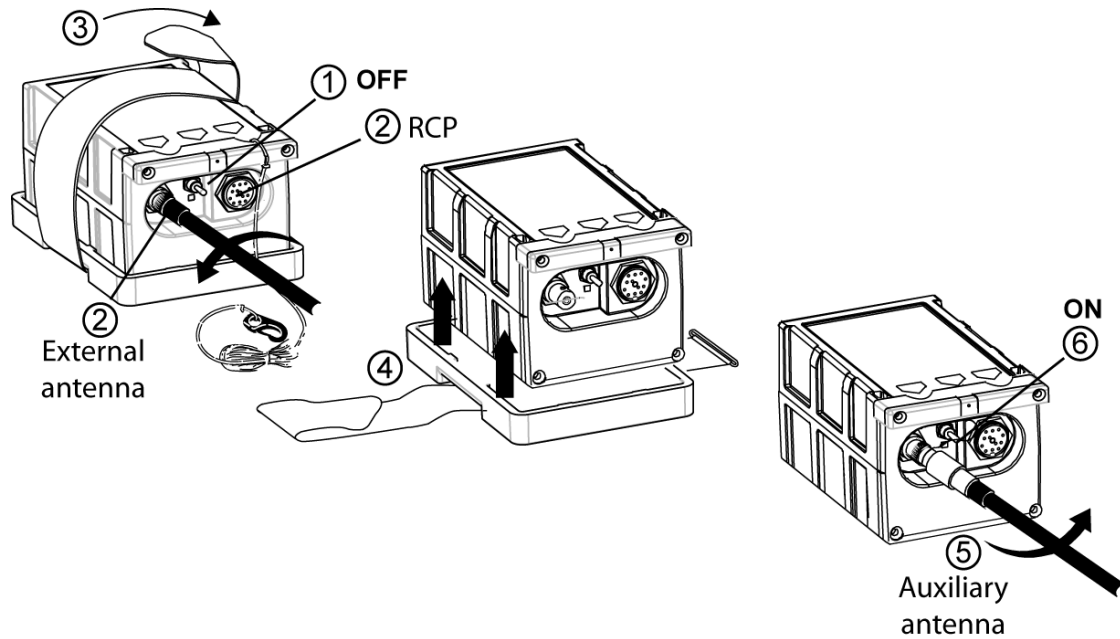

The AP or AP-H INTEGRA ELT can be used outside the aircraft in portable version. A tether is used to fix the transmitter to a liferaft in case of ditching.

1. Switch to "OFF".
2. Disconnect the external antenna (ANT) and the Remote Control Panel (RC).
3. Unfasten the Velcro® strap.
4. Remove the transmitter and the auxiliary antenna from the bracket.
5. Connect the auxiliary antenna (ANT).
6. Switch to "ON":

Important: Put the antenna in a vertical position.

- The ELT starts with the self-test sequence then, after 50 sec., transmits on:
 - 406 MHz (one 406 MHz burst every 50 seconds).
 - 121.5 MHz (continous transmission between each 406 MHz burst after the GPS lock).
- During transmission, buzzer operates and visual indicator flashes periodically.



4. Off

It is possible to stop the ELT in case of unintentional activation:

- Switch to " OFF ".

Regulations state that no transmission must be interrupted unless every means are used to contact and inform the Air Traffic Controller of this action.

Important notice: As 406 MHz transmission is effective 50 seconds after the ELT activation, if it is switched off within this delay, no further radio contact will be necessary.

5. Self-Test

[Refer to 1. Self-test, page 301](#)

6. Compatibility list**A. Mounting brackets**

Designation	Part Number
COMPACT MOUNTING BRACKET KIT	S1840502-01
COMPACT UNIVERSAL MOUNTING BRACKET KIT	S1840502-02

B. Remote control panels (RCP)

KANNAD Designation	Part Number
RC100 KIT	S1820513-03
RC102 KIT	S1820513-21
RC200	S1820513-11
RC300	S1820513-09
RC300-NVG	S1820513-10
RC600 NVG (Y)	S1820513-12
RC600-NVG (W)	S1820513-13

C. Outside buzzer

KANNAD Designation	Part Number
OUTSIDE BUZZER KIT	S1820515-06

D. DIN-12 connector or programming dongles

Designation	Part Number
DIN-12 connector	S1820514-03
Programming dongle	S1820514-01
Programming A320	S1820514-04
Programming dongle A330-A340	S1820514-05
Programming dongle Assy	S1820514-06

E. External antennas

KANNAD Designation	Manufacturer	KANNAD Part Number
ANT100 ^(see not below)	PROCOM	0124206
ANT300	CHELTON 1327-82	0124220
WHIP ANT AV200	RAMI AV-200	0146150
ROD ANT AV300	RAMI AV-300	0146151
BLADE ANT500	SENSOR SYSTEMS S65-8282-406	0124222
BLADE ANT560	DAYTON GRANGER ELT10-696-1	0145787
BLADE ANT650	CHELTON 2624-82	0124251
N/A	CHELTON 21-41	N/A

NOTE: ANT100 can be only used as auxiliary antenna when the ELT is used as portable equipment.

INSTALLATION / REMOVAL**1. Registration*****A. General***

The ELT must be registered prior to installation onboard.

When a 406 MHz ELT is installed in an aircraft, it is imperative that the aircraft owner register the ELT. Each 406 MHz ELT contains a unique identification code that is transmitted to the satellite. This helps the "Rescue Coordination Center" (RCC) to determine whether an emergency has actually occurred. The unique identification permits accessing a data base.

The registration card available from the local registration authority must be completed and returned to this authority.

Any change of ownership shall also be declared and registered with the local registration authority.

B. Registration in USA

Mail or Fax your registration form to:

NOAA/SARSAT
NSOF, E/SP3
4231 Suitland Road
Suitland, MD 20746

or Save Time! Register your beacon online at:

www.beaconregistration.noaa.gov

All online registrations will be entered into the National 406 MHz Beacon Registration Database on the same day of entry. Registration forms received via postal mail will be entered within 2 business days of receipt. For online registrations, a confirmation letter with your completed registration information form will be sent immediately via e-mail or fax (if provided). Confirmation letters sent via postal mail should arrive within two weeks. Once your registration confirmation is received, please review all information. Any changes or updates to your registration information can be done via the internet, fax, e-mail or postal mail. If you do not receive your registration confirmation from NOAA on the same day you submit it over the internet or within two weeks if you submit it by postal mail, please call NOAA toll-free at: 1-888-212-SAVE (7283) or 301-817-4515 for assistance.

After initial registration (or re-registration) you will receive a NOAA Proof of Registration Decal by postal mail. This decal is to be affixed to the beacon and should be placed in such a way that it is clearly visible. If for some reason you

do not receive the registration decal within two weeks, please call NOAA toll-free at: 1-888-212-SAVE (7283) or 301-817-4515.

Failure to register, re-register (as required every two years), or to notify NOAA of any changes to the status of your 406 MHz beacon could result in penalties and/or fines being issued under Federal Law. The owner or user of the beacon is required to notify NOAA of any changes to the registration information at any time. By submitting this registration the owner, operator, or legally authorized agent declares under penalty of law that all information in the registration information is true, accurate, and complete. Providing information that is knowingly false or inaccurate may be punishable under Federal Statutes. Solicitation of this information is authorized by Title 47 - Parts 80, 87, and 95 of the U.S. Code of Federal Regulations (CFR). Additional registration forms can be found on the NOAA-SARSAT website at:

www.sarsat.noaa.gov or at: www.beaconregistration.noaa.gov

C. Registration in Canada

Beacon information is held in the Canadian Beacon Registry maintained by the National Search and Rescue Secretariat for use in search and rescue operations. Online access to the Registry is available for all beacon owners to register new beacons or to update their beacon information. You can add or update your beacon information by accessing the registry directly, sending in a completed registration form or by talking to one of our beacon registry representatives.

You can access the registry:

- online: www.canadianbeaconregistry.com
- by email: CBR@Sarnet.dnd.ca
- by fax: 1-613-996-3746
- by telephone: 1-800-727-9414 or 1-613-996-1616

The registration information must be updated when the aircraft ownership changes as per the Canadian Airworthiness Notice AN B029 (refer to following link):

http://www.nss.gc.ca/site/Emergency_Beacons/canadian_beacon_registry_e.asp

Additional information and registration forms can be found on the Canadian NSS website at:

http://www.nss.gc.ca/site/cospas-sarsat/INTRO_e.asp

2. Programming

A. "Pin programming" option

The INTEGRA family offers pin-programming capabilities to facilitate maintenance operations especially in the case of removals and/or replacement.

A special DIN 12 connector with a Serial Memory Module (called "Programming Dongle") is connected to the ELT when installed onboard. This Programming Dongle contains the identification information of the aircraft and remains onboard the aircraft. When an unprogrammed ELT is installed and connected to this Programming Dongle and the "ELT" is switched to "ARM", it automatically updates its own memory with the identification data contained in the Programming Dongle memory.

When the ELT is removed from the aircraft, it keeps its identification data.

For maintenance purposes, it is possible to delete the identification information of the ELT by connecting a "Maintenance Dongle" to the ELT. Any accidental transmission with this "maintenance dongle" will not involve SAR operation as the identification code transmitted is recognised by COSPAS-SARSAT as "not onboard".

When a maintenance dongle is connected:

- Country code is **227** (France).
- Protocol is **Test**.
- Identification number is **K + 6 digits** (the 6 digits of the CSN number).

If the pin programming option is selected by the owner, the following equipment are required:

- a "Programming Dongle" on each aircraft;
- a "Maintenance Dongle" on each ELT spare.



Figure 201: Maintenance Dongle


3. ELT transmitter installation procedure

Refer to [Figure 202: Installing the transmitter on the bracket, page 205](#)

NOTE: Initial installation (bracket installation and first wiring) is described in Initial installation manual, DOC09082 also supplied with the transmitter.

1. Mount the transmitter on the bracket
 - For AP INTEGRA or AP INTEGRA (ER), "Flight direction" arrow of the ELT pointed towards the front of the aircraft according to [Section 3. AP INTEGRA / AP INTEGRA \(ER\), axis of installation page 503](#). For AP-H INTEGRA or AP-H INTEGRA (ER), "Flight direction" arrow of the ELT pointed towards the front or downwards the helicopter according to [Section 4. AP-H INTEGRA / AP-H INTEGRA \(ER\), axis of installation page 504](#).
2. Slide the self-stripping strap through the buckle. **Ensure the buckle is correctly positioned regarding the horizontal center line of ELT as shown Detail A.**
3. Fold the antenna and slide it under the Velcro® strap.
4. Fasten the self-stripping strap tightly.

Figure 202: Installing the transmitter on the bracket

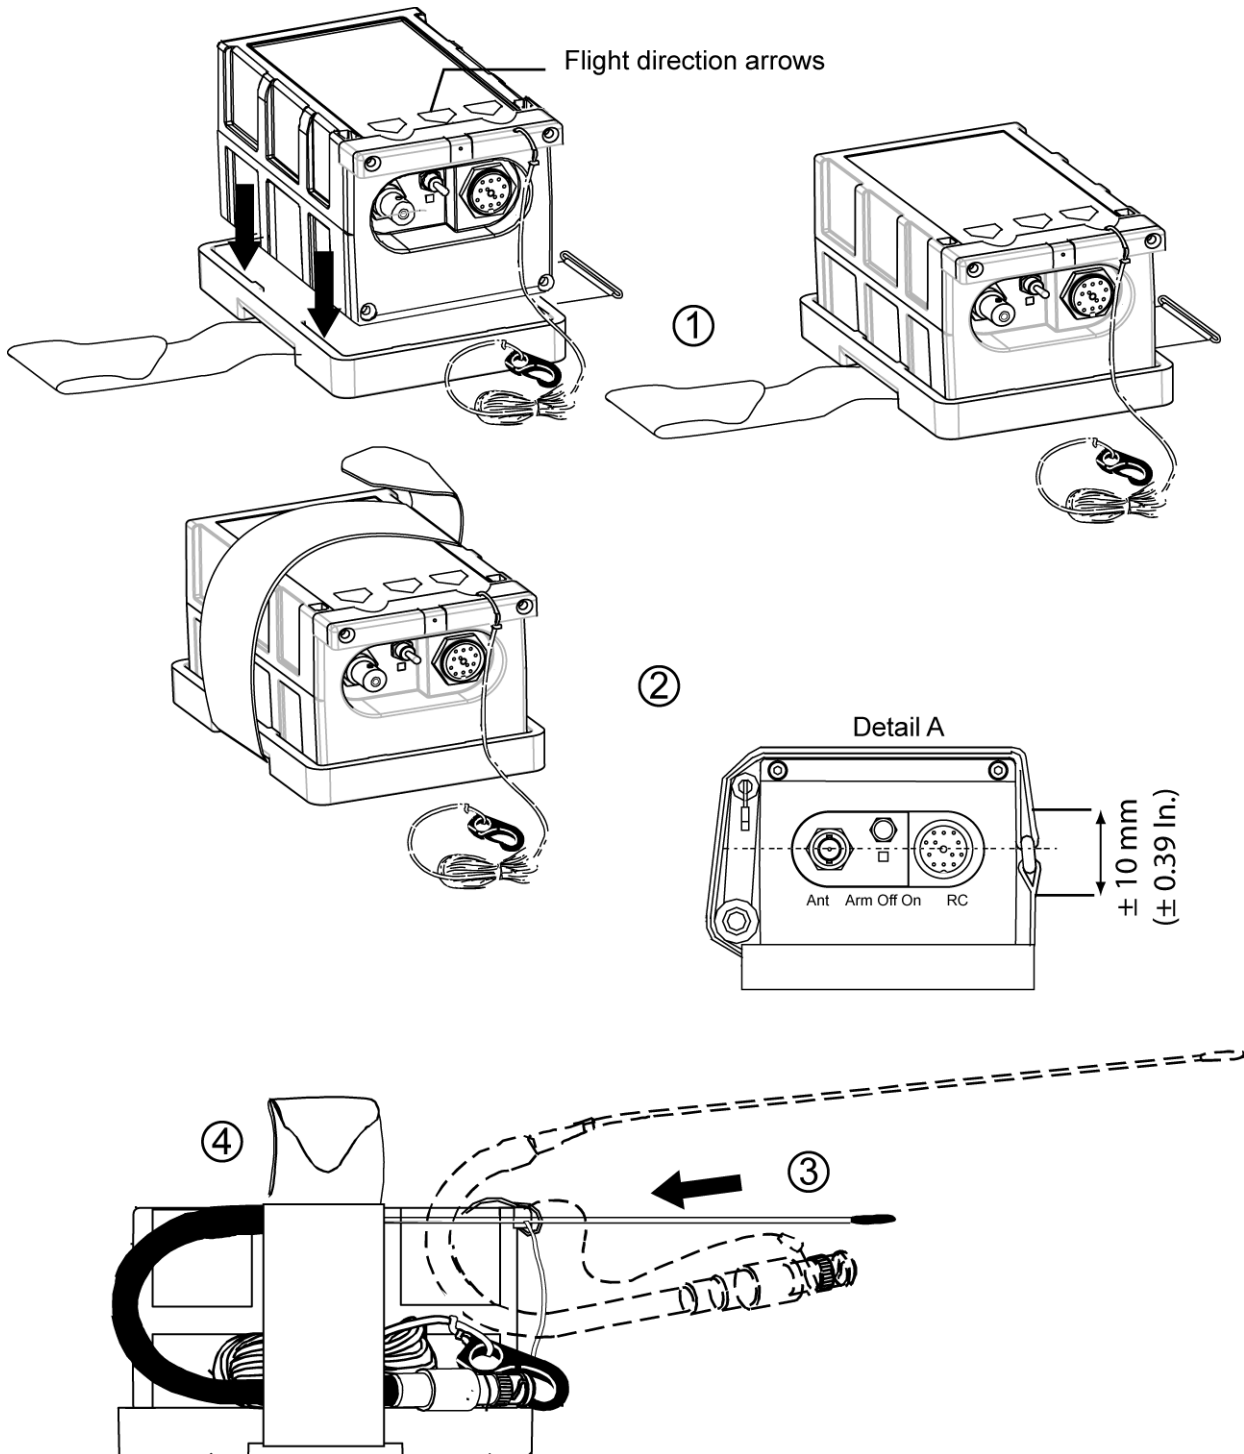

4. ELT transmitter Connection

1. Connect the cable of the outside antenna to the BNC connector of the front panel.
2. Set the 3-position switch of the front panel to ARM.

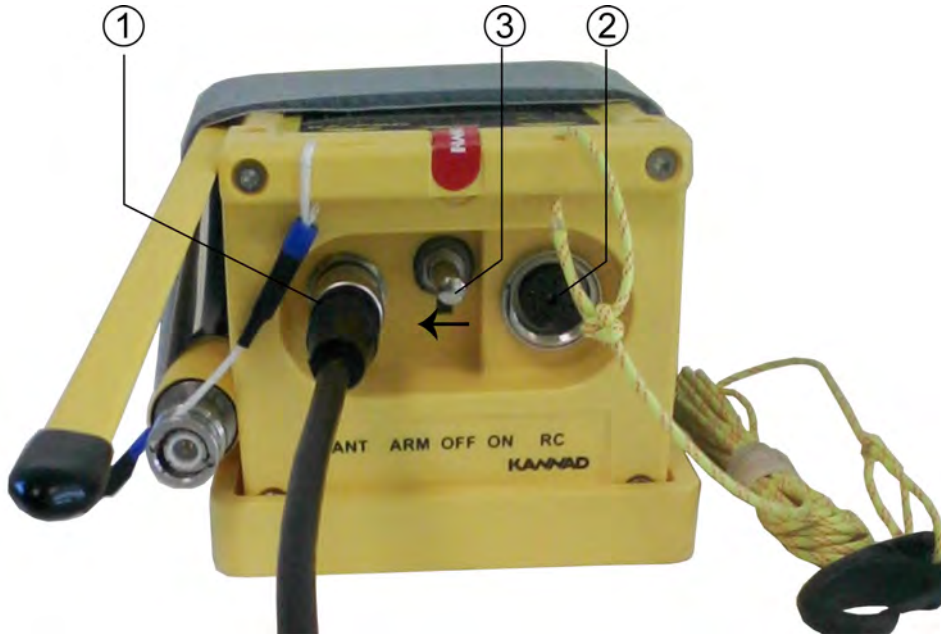


Figure 203: Installation, controls and connectors

- Perform the first power up procedure (see below).

5. First power up

Perform the following tests:

1. ELT operational tests:
 - connect the external antenna to J2;
 - switch the ELT from OFF to ARM;
 - check that the Self-Test result is OK (one long flash).
2. 406 & 121.5 MHz transmission tests (optional):
[Refer to B. Test of transmitted signals, page 302.](#)

At the end of the first power up procedure, switch the ELT to ARM.

The ELT is now in stand by mode and ready to be activated:

- either automatically by G-Switch sensor if a crash occurs;
- or manually by an optional Remote Control Panel (when connected).

Note : switching to ON directly on the ELT front panel will also activate the ELT.

6. Removal

1. Switch the ELT to OFF.
2. Disconnect the external antenna from the BNC connector of the ELT.
3. If connected, disconnect the DIN 12 Connector of Remote Control Panel bundle from the DIN12 socket of the ELT.
4. Unfasten the self-stripping strap.
5. Remove the auxiliary antenna.
6. Remove the transmitter from the bracket.

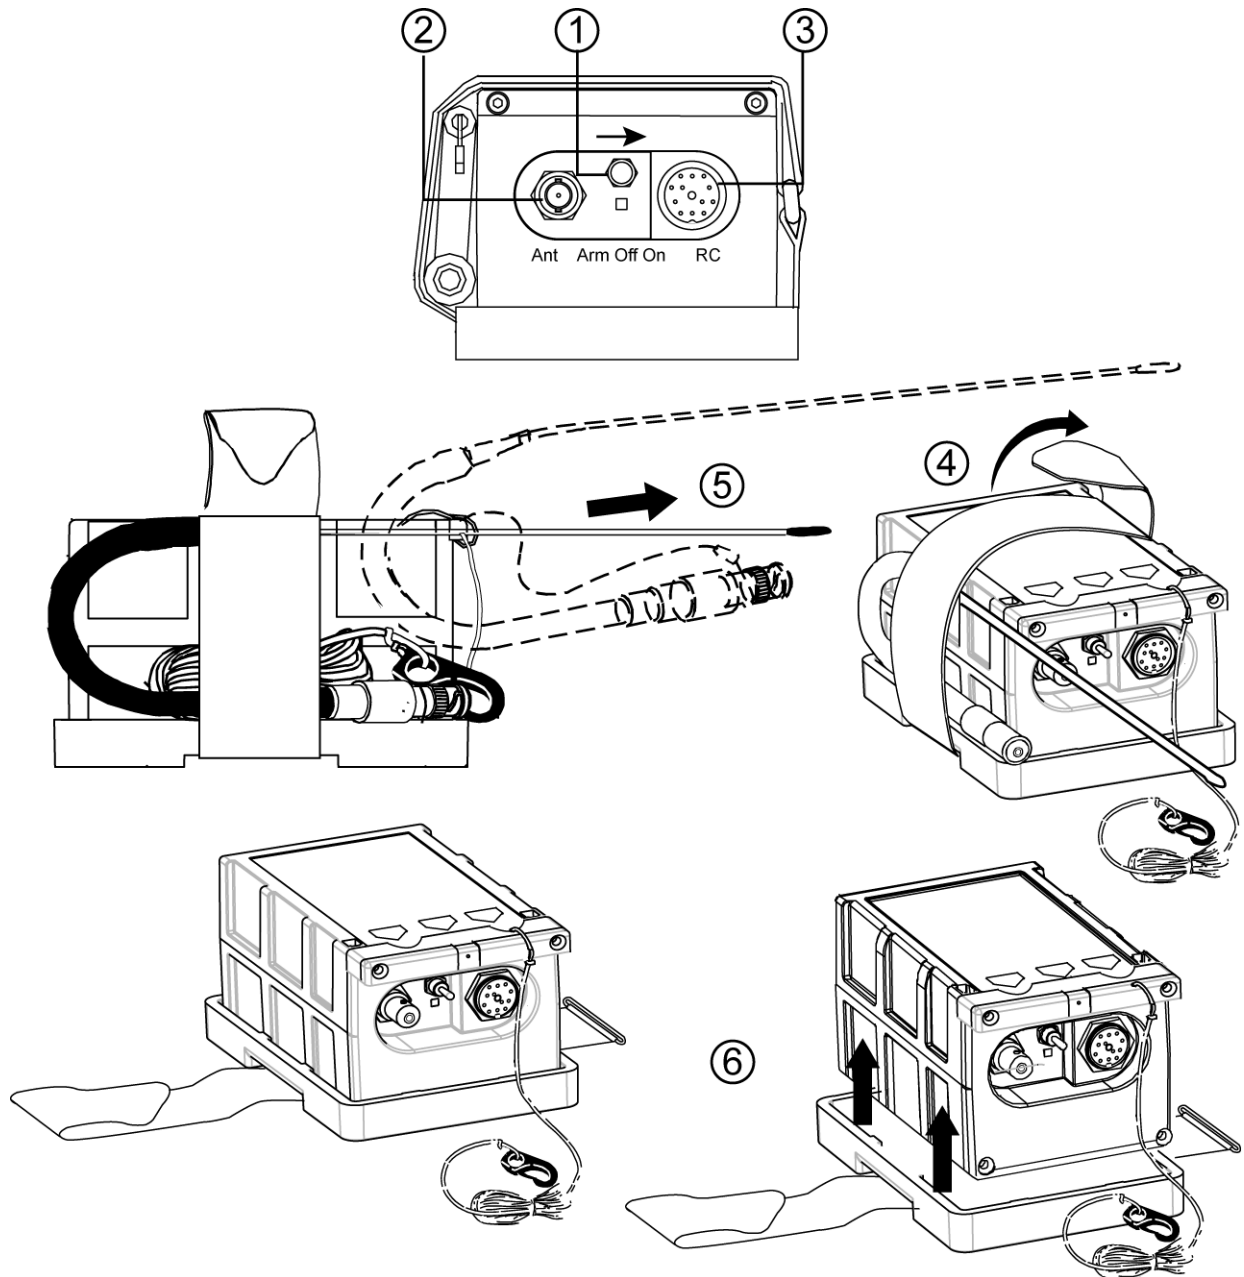


Figure 204: Removing the transmitter

PAGE INTENTIONALLY LEFT BLANK

CHECK

1. Self-test

A. Periodicity

EUROCAE ED-62A Recommendations

§ 2.8.9 : "The battery source shall provide sufficient capacity for a self-test to be conducted according to the period specified by the manufacturer or at least once a month according to Cospas-Sarsat requirement."

§ 7.5 : "Check the self-test function according to manufacturer's recommendation and that such a test shall occur at least once every six months."

Manufacturer Recommendations

It is recommended by the manufacturer to test the ELT to detect any possible failure.

Operational check must be performed regularly by a pilot or maintenance personnel from the cockpit (Remote Control Panel). It is recommended to perform a self-test at least once every six months but it **should not be done more than once a month**.

Each self-test consumes energy from the battery. Should self-tests be carried out more often than the maximum allowed, the battery life-time might be shorter than specified.

B. Self-test procedure

- Check that the antenna is correctly connected
Do not perform self-test without antenna connected.
- Tune aircraft radio to 121.5 MHz and ensure you can hear it.
- Switch from position "OFF" to position "ARM" or press RESET & TEST on the Remote Control Panel (ensure that the ELT switch is in position "ARM").
- Listen for the buzzer - it operates during the whole Self-test procedure. Close to the end of self-test a short (3 sweeps) 121.5 transmission is made - confirm this on the aircraft radio.
- After a few seconds, the test result is displayed with the red visual indicator and the buzzer will sound:
 - One long flash indicates that the system is operational and that no error conditions were found.
 - A series of short flashes indicates the test has failed.

Remark: The number of flashes gives an indication of the faulty parameter detected during the self-test.

3+1	LOW BATTERY VOLTAGE
3+2	LOW RF POWER
3+3	FAULTY VCO LOCKING (FAULTY FREQUENCY)
3+4	NO IDENTIFICATION PROGRAMMED
3+5	FAULTY VSWR (EXT. ANTENNA)
3+6	GPS SERIAL LINK

If self-test fails, contact the distributor as soon as possible. Unless a waiver is granted, flight should be cancelled (refer to National Aviation Authorities).

2. Operational tests

These tests must be performed by maintenance personnel when performing the first power up procedure or to check the transmitter ([Refer to B. Test of transmitted signals](#)).

A. ELT operational tests

NOTE: ELT operational tests only provide the aircraft operator with an indication that the ELT is transmitting; however, a positive result cannot be interpreted as meaning that the ELT meets all operational parameters.

- connect the outside antenna to J2;
- switch the ELT from OFF to ARM;
- check that the Self-Test result is OK (one long flash).

B. Test of transmitted signals

(1) 406 MHz Transmission tests

This test should be carried out with a COSPAS-SARSAT decoder.

Note: If a COSPAS-SARSAT decoder is not available, the coding sheet supplied by the programmer for the beacon (or dongle) with the corresponding CSN proves that the beacon (or dongle) is correctly programmed. Skip to § (2) 121.5 MHz

- Perform self-test (switch ELT from OFF to ARM).
- Check with the COSPAS-SARSAT decoder that, except for the 5th and the 6th digits, the decoded message is identical to the programmed message.

NOTE: The message transmitted during self-test sequence always begins with FF FE D0 whereas a programmed message begins with FF FE 2F.

Example of message programmed in ELT:

FF FE 2F 96 E3 AF 0F 0F 7F DF FF 62 60 B7 83 E0 F6 6C

Example of same message decoded by Cospas-Sarsat Decoder:

FF FE D0 96 E3 AF 0F 0F 7F DF FF 62 60 B7 83 E0 F6 6C

NOTE: for location protocol beacons, the content of the encoded position data field of the self-test message shall be the default values (extract from C/S T001 Cospas Sarsat.

(2) 121.5 MHz Transmission tests

This check shall only be conducted during the first five minutes of any UTC, (co-ordinated universal time) hour, and restricted in duration to not more than five seconds. Be sure to notify any nearby control tower of your intentions.

This test must be carried out with a VHF receiver either with the aircraft VHF receiver or with a not on-board VHF receiver.

IMPORTANT: Aircraft VHF receiver may be used only if 406 MHz test was carried out with a Cospas-Sarsat decoder, otherwise check 121.5 MHz using a VHF receiver (not the on-board VHF receiver) several dozens meters away from the antenna. This ensures to validate the antenna.

- Tune VHF receiver to 121.5 MHz;
- Start transmission:
 - Switch ELT to ON.
- Only 2 "sweep tones" are heard after 5 seconds, then the 121.5 MHz stops.
- Stop transmission:
 - Switch to OFF;
 - continue to listen to 121.5 MHz for a few seconds to ensure that the ELT does not continue to transmit after the test is terminated.

IMPORTANT: If the ELT operates for approximately 50 seconds, a 406 MHz signal is transmitted and is considered valid by the satellite system.

- Switch ELT to ARM.

PAGE INTENTIONALLY LEFT BLANK

TROUBLESHOOTING**1. General**

Procedure for fault isolation onboard uses the indicator light (red visual indicator) of the ELT's front panel. This indicator light is activated by a self-test capability within the ELT.

2. Faults on Self-test**A. Visual Indicator**

When the self-test is carried out, the number of flashes on ELT or RCP's visual indicator gives an indication of the faulty parameter detected during the self-test.

(1) 3+1 flashes

- Low battery voltage:
Replace battery: refer to relevant CMM for tests and repair.

(2) 3+2 flashes

- Low RF power:
Check 406 MHz power: refer to relevant CMM for tests and repair.

(3) 3+3 flashes

- Faulty VCO locking (faulty frequency):
Check frequencies: refer to relevant CMM for tests and repair.

(4) 3+4 flashes

- No identification programmed
Check programming: refer to relevant CMM for tests and repair.

(5) 3+5 flashes

- VSWR Fault
Check correct connection of antenna
Perform a VSWR measurement

(6) 3+6 flashes



- GPS serial link fault
Check GPS receiver: refer to relevant CMM for tests and repair.

Note: for CMM download and other servicing instructions, refer to Service & Support section of Kannad website.

PAGE INTENTIONALLY LEFT BLANK

SCHEMATICS & DIAGRAMS



1. Outline dimensions and weight with mounting bracket AF-COMPACT

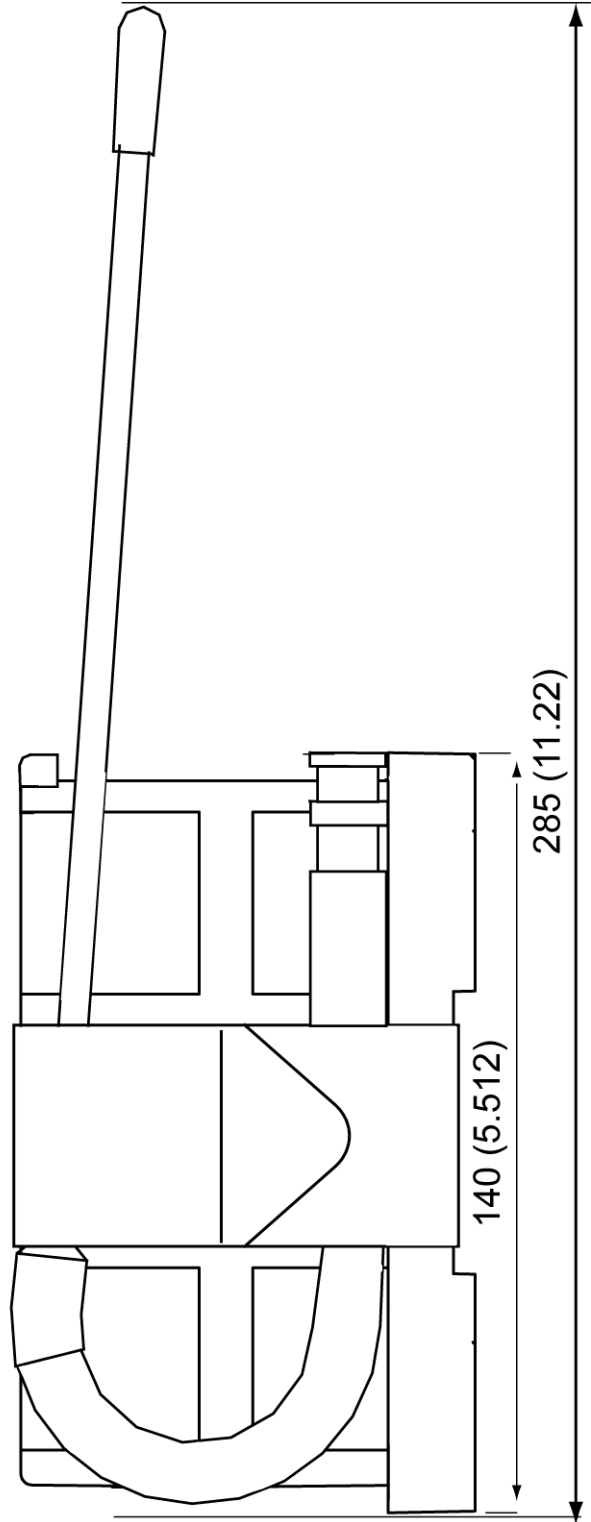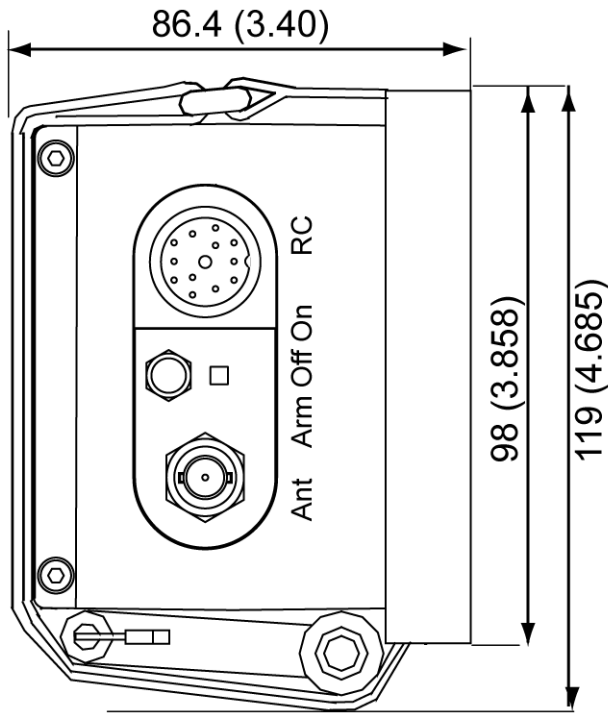

Note: all dimensions are in millimeters
(inches in brackets)

Typical weight with mounting bracket:
Weight in grams (pounds in brackets)
AP INTEGRA: 1035 (2.28)
AP-H INTEGRA: 1040 (2.29)

2. Outline dimensions and weight with universal mounting bracket

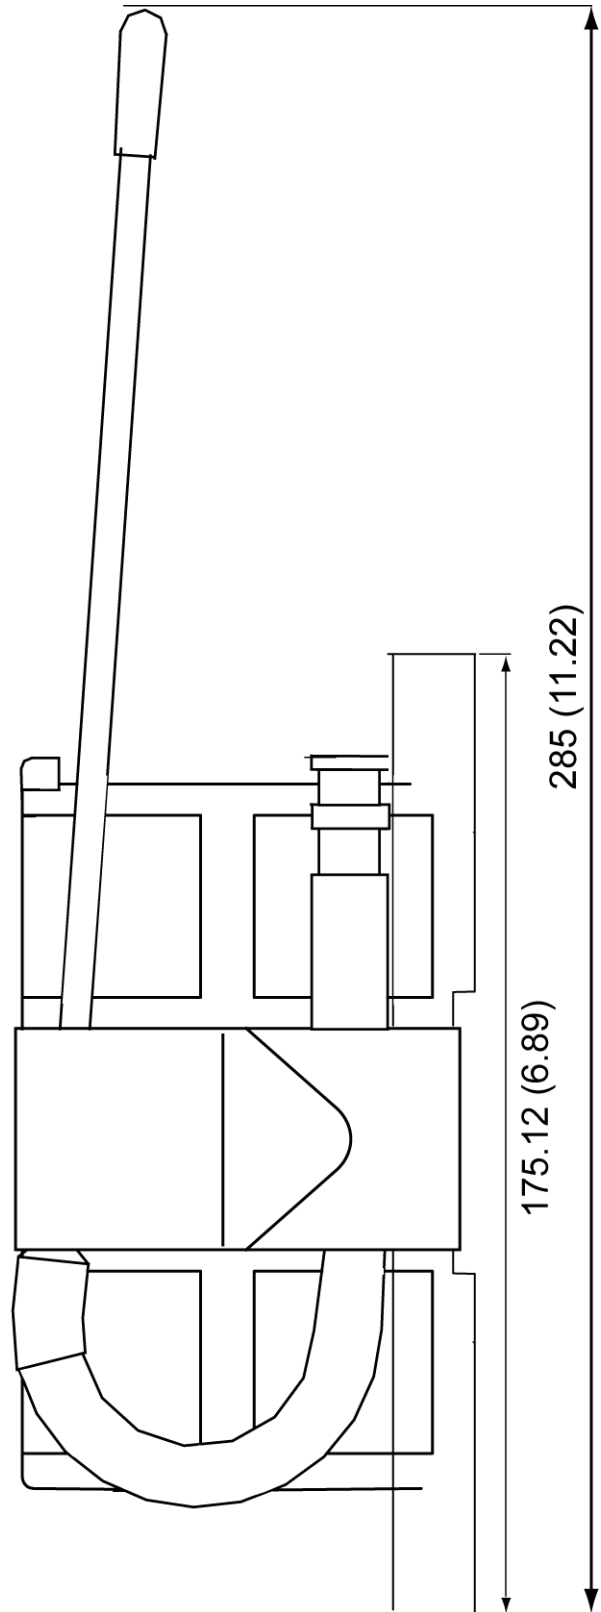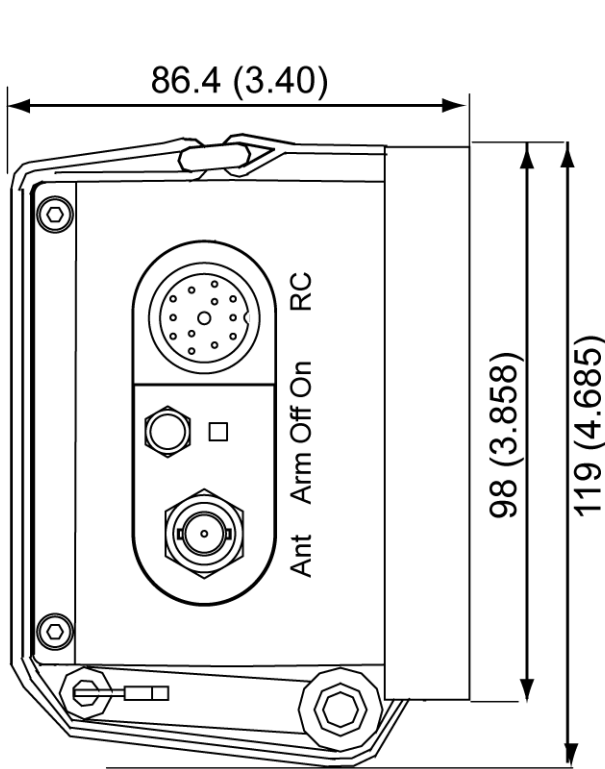

Note: all dimensions are in millimeters
(inches in brackets)


Typical weight with mounting bracket:
Weight in grams (pounds in brackets)
AP INTEGRA: 1060 (2.34)
AP-H INTEGRA: 1065 (2.35)

3. AP INTEGRA / AP INTEGRA (ER), axis of installation



YAW Axis

Front face connectors

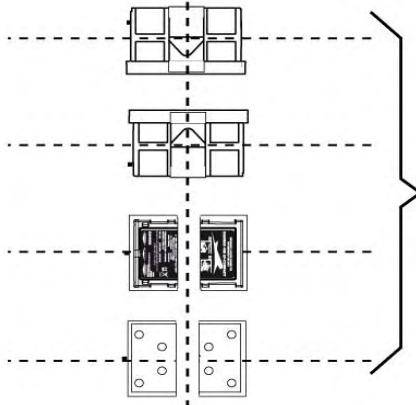


Roll Axis



YAW Axis

Front face connectors

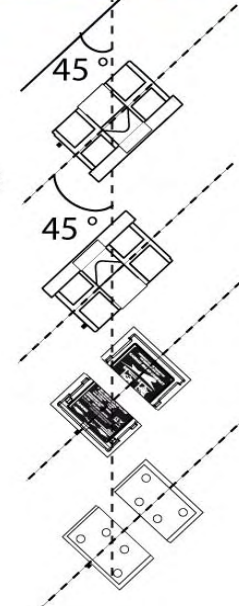


= "Direction of Flight" Arrow



4. AP-H INTEGRA / AP-H INTEGRA (ER), axis of installation



 = "Direction of Flight" Arrow

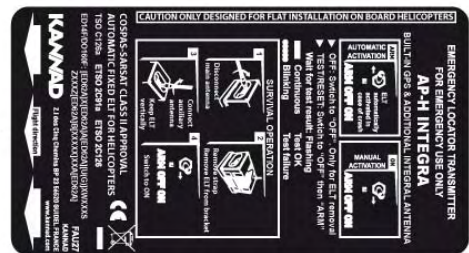

SERVICING**1. Maintenance Schedule****Battery replacement:**

carried out by an accredited PART 145 or FAR 145 (or equivalent) maintenance station.

Periodic inspection:

depending if the ELT is opened or not, PART 145 or FAR 145 (or equivalent) may be required. Refer to local regulations

A. Periodic inspection

Note: (if required by the relevant Civil Aviation Authority).

Some Civil Aviation Authorities may require the ELT be tested periodically.

In this case, refer to Service Letter SL S1840501-25-05 "Guidelines for periodic inspection" available on the Service & Support section of Kannad Website.

B. Battery replacement

Testing of various elements and parameters of the ELT is mandatory when the battery is replaced.

- For battery replacement interval, [Refer to § 2. Battery replacement requirements, page 602.](#)
- The testing procedure associated with the battery replacement is described in the relevant CMM

For CMM download and other servicing instructions, refer to Service & Support section of Kannad Website.

2. Battery replacement requirements

Battery replacement is mandatory:

- after more than 1 hour of real transmission (cumulated duration);
- before or on the battery expiration date;
- after use in an emergency;
- after an inadvertant activation of unknown duration.

Only original and approved battery pack included in battery KIT BAT200 (P/N S1840510-01) supplied by KANNAD can be installed. [SAFT-FRIWO , Lithium Manganese Dioxide, 2 x M20 (D-type) cells]

PLEASE CONTACT YOUR LOCAL DISTRIBUTOR

KANNAD refuse all responsibility and invalidate all warranty should other packs be installed.

Battery available from any KANNAD distributor or dealer.

List of distributor available on our Web site: <http://www.kannad.com>

KANNAD

Z.I. des Cinq Chemins BP23

56520 GUIDEL - FRANCE

Telephone: +33 (0)2 97 02 49 49 Fax: +33 (0)2 97 65 00 20

Web: <http://www.kannad.com> - E-mail: contact.aviation@kannad.com

Support: support.sar@kannad.com Tel.: +33 (0)2 97 02 49 00

Distributed by

Manufactured by

KANNAD
aviation

KANNAD

Z.I. des Cinq Chemins BP23

56520 GUIDEL - FRANCE

Tél. / Phone : +33 (0) 2 97 02 49 49

Fax : +33 (0) 2 97 65 00 20

A Company of the Orolia Group

DOC09079B

Ref: 0146258B