

Quick Installation Guide

1. Remove all parts from the box. You should have main unit, extension handle, remote handle, two sets of mop heads, and beaker to load unit with liquid.



2. Insert the adjustable height shaft into the main unit. You will hear a clicking sound and the metal ball should be visible if it is inserted correctly.



3. Open the battery cover located on the back of the handle, insert two AAA batteries and close cover. Connect handle with the telescopic pipe until you hear a clicking sound. Metal ball should be visible in the hole. After connecting, pull tightly to ensure proper installation.



HOW TO START

Main unit must be powered on FIRST before operation. To do so, press the GRAY power button located on the main unit. LED indicators should light up once it is powered on. If no power, charge with AC adapter.

After inserting two AAA batteries, and powering up the main unit, you are now ready to turn on the unit with the buttons on the handle. Use the power button to activate the Dual Spin Mop. Use the Spray button to dispense liquid from the water tank.



Press and hold spray button for 20 seconds if solution does not spray.



Elicto

ES-530[®]
CORDLESS

USER GUIDE

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR ES-530 CORDLESS.

When using an electrical appliance, basic precautions should be observed, including the following:

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Do not use outdoors.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not charge with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle charger, including charger plug and charger terminals with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging appliance.
- » Use extra care when cleaning on stairs.
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Use only water based cleaning products intended for use with this appliance to prevent internal component damage.
- » Do not immerse. Use only on hard floor surfaces moistened by the cleaning process.
- » Keep appliance on a level surface.
- » Do not carry the appliance while in use.
- » Do not charge the unit outdoors.
- » Use only the charger supplied by the manufacturer to recharge.
- » Do not incinerate the appliance even if it is severely damaged. The batteries can explode in a fire.
- » Battery cell leaks can occur under extreme conditions. If battery cell contents comes in contact with the skin or eyes: immediately flush with water for 15 minutes. Seek medical attention if irritation persists.

- » Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specific range may damage the battery and increase the risk of fire.
- » Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130 (degrees) C or 265 (degrees) F may cause explosion.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

WARNING

Risk Of Injury. Mop Pads May Start Unexpectedly. Unplug Before Cleaning or Servicing.

SAVE THESE INSTRUCTIONS

This model is for household use only.

! WARNING

 
- » Plastic film can be dangerous. To avoid danger of suffocation, keep away from children.
- » To reduce the risk of electrical shock, turn power switch off and disconnect charger plug from electrical outlet BEFORE performing maintenance or troubleshooting checks.

Thanks for buying a ELICTO ES-530 Cordless

We love to clean and we're excited to share one of our innovative products with you. We want to make sure your hard surface floor cleaner works as well as it does today for years to come, so this guide has tips on using, maintaining, and if there is a problem, troubleshooting

Á

What's In The Box?

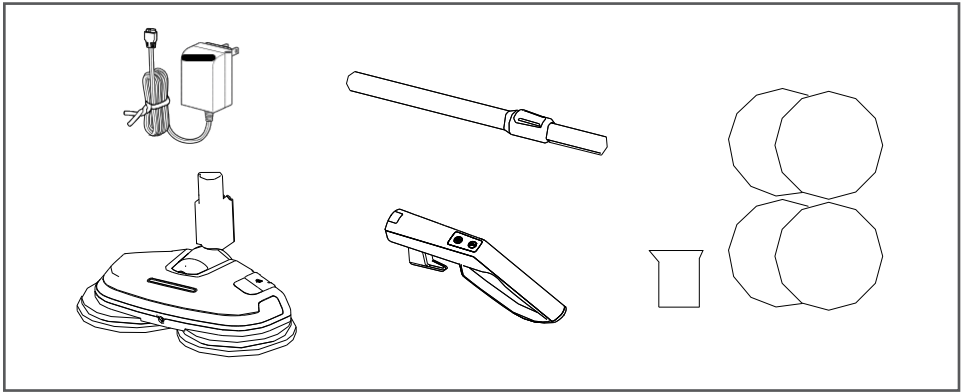

NOTE: Standard accessories may vary by model. To identify what should be included with your purchase, please refer to the "Carton Contents" list located on the carton top flap.

Safety Instructions 2

Troubleshooting F€

Product View Í

Warranty FF

 
Assembly  È .5

Service FF

Operations Ì-ì


Maintenance & Care È. 

Get to Know Your ES-530® Cordless

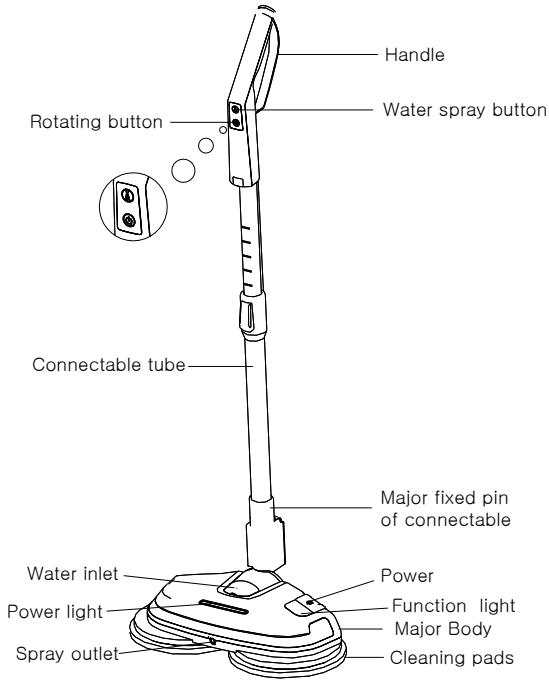


Assembly

 Insert the adjustable height shaft into the main unit. You will hear a clicking sound and the metal ball should be visible if it is inserted correctly.

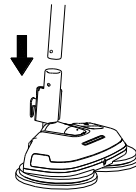

- Open the battery cover located on the back of the handle, insert two AAA batteries and close cover.

 Connect handle with the telescopic pipe until you hear a clicking sound. Metal ball should be visible in the hole. After connecting, pull tightly to ensure proper installation.



Safety Precautions

In order to avoid injury and damage, please read the precautions carefully.

- Please use the product as described in the manual.
- This product is intended for inside cleaning-Do not use this product outdoors.

Warning

 
Failure to follow instructions can lead to injury or death.

Please read carefully to avoid any danger.

Do not use if the power cord is damaged.




Please check whether the power cord and plug is damaged or burnt.
(May cause electric shock or fire)

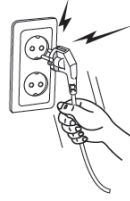


When plugging or out, do not pull the power cord. Grip the two sides of plug tightly and pull it out.
(May cause electric shock or fire)



 
Don't touch the plug or switch with wet hands.
(May cause electric shock)

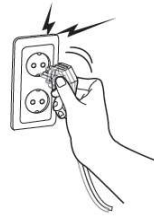

 Loose socket will generate heat, which may cause electric leakage and cause the plug and cord to melt.
(may cause electric shock or fire)

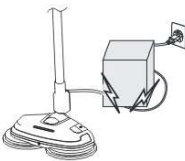

 It not recommend to press or touch the power cord with heavy objects or sharp points.
(May cause electric shock or fire)

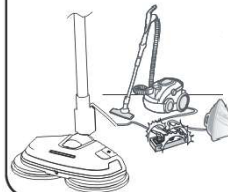

Please don't use the socket with other items.
(May cause abnormality or fire)

In Use LED Display

⚠ WARNING

Overcharging may cause battery damage, fire, or explosion.

Your ELICTO ES-530 Cordless machine has an LED light display that will turn on when the power key is pushed to show the battery life status. All LED color is blue.

TIP: Be sure to charge unit when there is less than 10% power left, one LED flashing blue.




BATTERY STATUS	LIGHT STATUS
100% to 67%	
66% to 33%	
32% to 10%	
> 10%	
0%	

NOTE: Keep the temperature range between 40-104 °F when charging the battery, storing unit or during use.


Correct Installation of Mop Head

 - Mop heads and the rotating plate must be attached correctly.
- The center of pads and rotating plate should match up correctly.

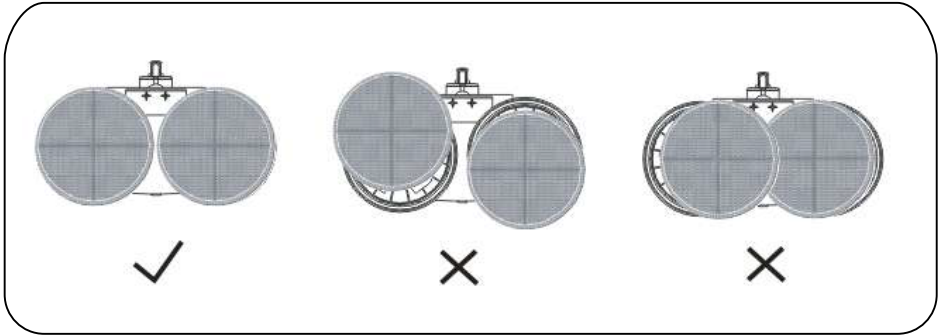

Washing Your Mop Head

 - 1 When machine washing, please let it absorb some detergent before washing.

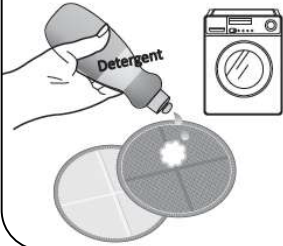


- After soaking in 40°C water, put in moderate detergent and wash.



- 1 After wash, let the mop heads dry.



 - When washing, please remove any foreign objects left on the pads to avoid damage against the floor.

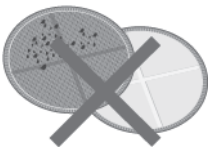

- When washing, considering the absorption of water, sanitation and pad structure, suggested to wash alone.



 
- Don't use the bleaching agent, softener, etc




Using Your ES-530

➤ Please follow the instructions below.


1. When cleaning, let the mop heads absorb water and ring it out completely.

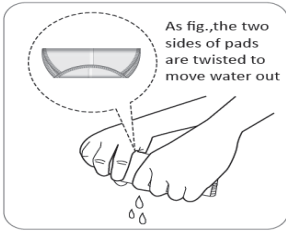

 
3. Make sure to align the center of the mop heads with the center of the rotating plates correctly.

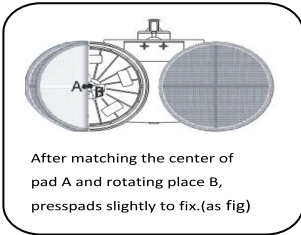

 5. Push the GRAY button located on the main unit to power on. LED light should light up.

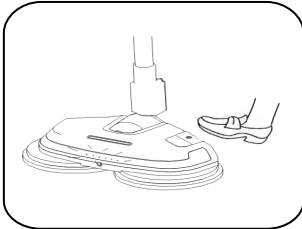


 7. You can fill the water tank with your desired choice of any water based solutions and spray as you clean.

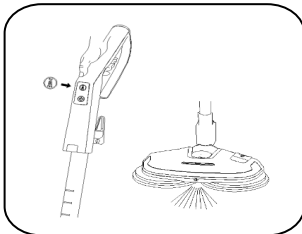


9. Please use the original AC adapter that came with this unit.
Full charge should take about three hours.
When complete, LED indicators will show all three bars.

 
2. Fix the clothe pads on rotating plates.

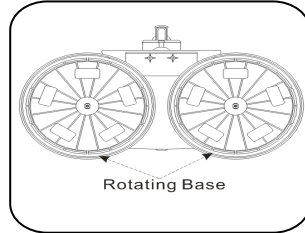

 
4. Before cleaning, make sure there are no small objects on the floor that can cause damage to the machine and floors.

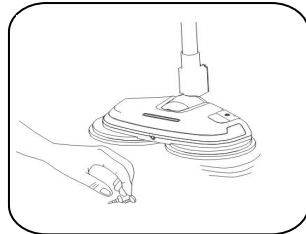

 6. Hold the Handle, press the button (The battery must be inserted into the handle)

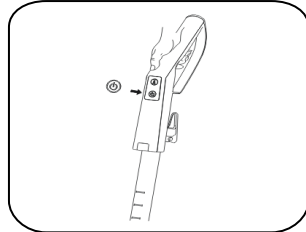

 8. If the solution runs out, please power off before refilling.

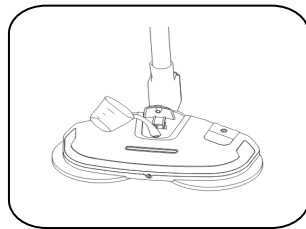

Cleaning Your ES-530 Cordless

 
⚠ WARNING

Do not set the machine on carpet, rug, or other fabric surface when mop pad is removed as hook and loop material on foot may damage them.

⚠ WARNING


Do not store machine on wet mop pads as they may damage wood or other delicate floors.

1

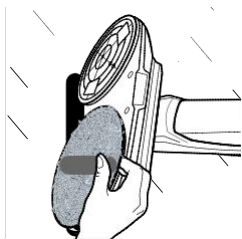


To remove mop pads, simply pull pads off the hook and loop material on the bottom of the machine.

 2

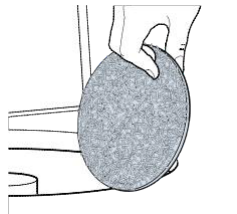

Machine wash separately in warm water. Use only liquid detergents. Do not use bleach or fabric softener. Tumble dry on low. Do not iron. Do not dryclean.

 3



Store upright in storage tray in a dry protected area until the next use. Since this product uses water, it must not be stored where there is danger of freezing. Freezing will damage internal components and may void the warranty.

Store with dry mop pads. Wet mop pads may damage wood and other delicate, sealed hard floors.

NOTE: Any solution remaining in the clean water tank should be emptied prior to machine storage.

NOTE: Store cleaner in a protected, dry area. Since this product uses water, it must not be stored where there is danger of freezing. Freezing may damage internal components and void the warranty.

Troubleshooting

⚠ WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Unit is vibrating/wobbling	Mop pads are not aligned with foot.	Realign the mop pads on the foot.
Reduced spray OR no spray	Clean water tank may be empty.	Refill tank.
	Clean water tank may not be seated completely.	Turn power OFF; Remove and reseal tank.
	System isn't completely primed.	Hold trigger for 10 to 15 seconds to make sure the solution has flowed to the spray tips.
	Not holding trigger to spray solution.	Hold trigger continuously while using the machine.
	Spray tips on foot clogged.	Turn power OFF; Use a pin to clean the spray tip located front and center of the machine.
Spin plates are not turning or are wobbling	Mop pads are not installed properly.	Turn Power OFF and follow instructions on page 6 for replacing mop pads.
	Machine is standing upright.	Recline machine.
Machine is leaking	Cap of clean water tank is not closed properly.	Remove the clean water tank and re-apply the cap.
Unit will not charge	Charger plug/cord not connected.	Make sure charger plus is completely plugged into wall outlet and charging cord is completely plugged into port on the back of unit.
	Not the correct charger.	Use only the charger that comes with machine.
All three (3) LED lights flashing	Pads forced to stop spinning potentially due to stuck debris, compressed under furniture, or was briefly stepped on.	Turn the unit off or wait 10 seconds for the lights and machine to turn off. Then, press the ON/OFF to start the unit again.
	Heavy and extended usage may cause internal temperature of machine to warm up slightly past the typical operating temperature.	Press power button on handle one time and wait for unit to cool down and reset.
Two (2) LED lights flashing	Functional issue with machine.	Contact us for additional assistance.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact ELICTO Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One-Year Warranty Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product ELICTO will repair or replace (with new or remanufactured components or products), at ELICTO's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your ELICTO product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

ELICTO IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. ELICTO'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

***EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY** THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your ELICTO product should require service:

Contact ELICTO Consumer Care to locate a ELICTO Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact ELICTO Consumer Care.

Website:

www.myelicto.com

E-mail: service@elicto.com

Call:

ELICTO Consumer Care

1-800-213-4936

Monday – Friday 8am - 10pm ET

Saturday closed

Sunday closed

Please do not return this product to the store.

Other maintenance or service not included in the manual should be performed by an authorized service representative.

For any questions or concerns, ELICTO is happy to be of service. Contact us directly at 1-800-213-4936.