# Escalator Specific: Inspection, Maintenance, and Repair with OEM References

# **Participant Guide**

Transit Elevator/Escalator Maintenance Training Consortium
COURSE 303

### **REVISION INDEX**

Any additions, deletions, or revisions are to be listed below.

| Revision No. | Date        | Section | Description of Change   | Revision Author |
|--------------|-------------|---------|---|-----------------|
| 1            | 12-Feb-2015 |         | Using Course 212, this new course includes hyperlinks to OEM manuals. Manuals are downloaded from www.transportcenter.org | Amri Joyner     |
|              |             |         |   |                 |
|              |             |         |   |                 |
|              |             |         |   |                 |
|              |             |         |   |                 |
|              |             |         |   |                 |

**Disclaimer**: This module is intended to educate employees of transit agencies that have agreed to voluntarily participate in the Transit Elevator/Escalator Maintenance Consortium. It is intended only as informal guidance on the matters addressed, and should not be relied upon as legal advice. Anyone using this document or information provided in the associated training program should rely on his or her own independent judgment or, as appropriate, seek the advice of a competent professional in determining the exercise of care in any given circumstances. The Transit Elevator/Escalator Consortium, it's participating agencies and labor unions, as well as the Transportation Learning Center, make no guaranty or warranty as to the accuracy or completeness of any information provided herein. The Transit Elevator/Escalator Consortium, its participating agencies and labor unions, as well as the Transportation Learning Center, disclaims liability for any injury or other damages of any nature whatsoever, directly or indirectly, resulting from the use of or reliance on this document or the associated training program.

# Appendix A

## **KONE EcoMod 3000 Online Manuals**

The **Kone EcoMod 3000<sup>TM</sup>** comes with two manuals: one for **Maintenance** and one for **Repair**. In the following table, the hyperlinked text shows the page numbers in the relevant manual.





| Maintenance Manual   | Page Number          |
|--|----------------------|
| Safety Precautions   | 6                    |
| Preventative Maintenance Guidelines  | 14                   |
| Basic Maintenance Schedule   | 21                   |
| Brake Maintenance  | 32                   |
| Cleaning   | 74                   |
| Combplate Maintenance  | 37                   |
| Drive Maintenance  | 46                   |
| Guide Maintenance  | 49                   |
| Handrail Maintenance   | 68                   |
| Minor Repairs  | 75                   |
| Step Chain Maintenance   | 62                   |
| Repair Manual  | Page Number          |
| Recommended Tools  | 5                    |
|  |                      |
| Complete Motor Incline Clean Down  | 42                   |
| Complete Motor Incline Clean Down  Balustrade Panels Replacement   | 42<br>37             |
| <del>-</del>   |                      |
| Balustrade Panels Replacement  | 37                   |
| Balustrade Panels Replacement  Drive Motor Replacement   | 37<br>23             |
| Balustrade Panels Replacement  Drive Motor Replacement  Drive Station Bearings Replacement                             | 37<br>23<br>41       |
| Balustrade Panels Replacement  Drive Motor Replacement  Drive Station Bearings Replacement  Gear Box Seals Replacement | 37<br>23<br>41<br>35 |

# Appendix B

# Fujitec Online Manual

The **Fujitec 1200**<sup>TM</sup> **manual** used here is courtesy of BART and there are references to some of their transit locations. There is a separate document for OEM recommended preventative maintenance guidelines.





| Maintenance and Repair Manual                                     | Page Number |
|---|-------------|
| Safety Precautions  | 4-2         |
| Preventative Maintenance Guidelines                               | 6-1         |
| Lubricant Schedule  | 4-130       |
| Brake Maintenance   | 4-81        |
| Floorplate Maintenance and Adjustment                             | 4-3         |
| Floorplate Removal and Replacement                                | 4-7         |
| Step Maintenance and Adjustment                                   | 4-11        |
| Step Removal and Replacement                                      | 4-12        |
| Drive Motor Maintenance and<br>Adjustments                        | 4-50        |
| Drive Motor Removal and Replacement                               | 4-69        |
| Track Maintenance and Adjustment                                  | 4-42        |
| Track Removal and Replacement                                     | 4-45        |
| Step Chain Maintenance and Adjustment                             | 4-15        |
| Step Chain Removal and Replacement                                | 4-16        |
| Handrail Maintenance and Adjustments                              | 4-25        |
| Handrail and Handrail Drive Components<br>Removal and Replacement | 4-34        |
| Balustrade Panels Maintenance and<br>Adjustment                   | 4-20        |
| Balustrade Panels Removal and Replacement                         | 4-21        |

# Appendix C

# Schindler 9700 Online Manual

The Schindler 9700<sup>TM</sup> manual used here is courtesy of WMATA.

|                             | Maintenance Manual                   | Page Number |
|-----------------------------|--------------------------------------|-------------|
|                             | Safety Precautions                   | 6-4         |
| Schindler<br>Schindler 9700 | OEM Recommended Maintenance Schedule | 6-11        |
|                             | General Cleaning Instructions        | 6-7         |
|                             | Brake Maintenance                    | 7-6         |
| 300 No. 100                 | Tracks Maintenance                   | 8-1         |
|                             | Skirt Panels Maintenance             | 8-14        |
| THE PROPERTY OF             | Combplate Maintenance                | 9-1         |
|                             | Step Chain Maintenance               | 10-10       |
|                             | Handrail Maintenance                 | 11-1        |
|                             | Drive Maintenance                    | 7-1         |
|                             | Drive Chain Maintenance              | 7-13        |