



MANUAL – INSTALLATION + SERVICE

Fan Filter Unit

FFU Series

v100 – Issue Date: 07/10/20

© 2018 Price Industries Limited. All rights reserved.

PRICE[®]

FAN FILTER UNIT

TABLE OF CONTENTS

Product Overview

Read and Save These Instructions.....	1
Before You Start	1
Introduction	2

Installation Instructions

Module Installation	3
Speed Controller Installation & Operation	4
PSCSC/WK.....	4
ECMSC	5
BACnet Flow Controller (BFC).....	6
Filter Installation	12
Room Side Replaceable Filter (RSR).....	12
Bench Top Replaceable Filter (BTR)).....	12
Accessories	13
Aerosol Sample Static Pressure Port (ASSP)	13
Optional Aerosol Injection Port (INJ).....	13
Filter/Motor Indicator LED (ML/FL) - PSC Units.....	14
Filter/Motor Indicator LED (ML/FL) - ECM Units.....	18
Integrated LED Lighting (UFFU)	18

Balancing

Balancing: Technical Note: Design with VAV/Constant Flow Boxes and Ducted Applications.....	19
Balancing Un-ducted Supply Units	20
Balancing Ducted Supply – Pressure Independent and Dependent Airflow Control	21
Balancing Ducted Supply – Pressure Independent and Dependent Airflow Control	23

Service Instructions

Pre-Filter Cleaning	24
Motor Change	25
Top Access Motor/Blower Assembly	25
Room Side Accessible Motor/Blower Assembly	27
Room Side Accessible Controls.....	30

Troubleshooting

Troubleshooting – Changing Motor Programs	33
Troubleshooting Tips.....	34

Replacement Parts

BTR Unit Replacement Parts	35
RSR Unit Replacement Parts.....	36

FAN FILTER UNIT

PRODUCT OVERVIEW

Read and Save These Instructions

Warning! To reduce the risk of fire, electrical shock, or injury to persons, observe the following:

- A. Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- B. When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- C. Use this unit only in the manner intended by the manufacturer. If you have any questions, contact the manufacturer:

In the United States

2975 Shawnee Ridge Court

Suwanee, Georgia USA 30024

Ph: 770.623.8050

Fax: 770.623.6404

In Canada / International Export Sales Office

638 Raleigh Street

Winnipeg, Manitoba Canada R2K 3Z9

Ph: 204.669.4220

Fax: 204.663.2715

- D. Disconnect the unit from the electrical power source before attempting any service. Electrical service should be performed by a licensed electrician or authorized service technician.
- E. When performing any type of maintenance on the FFU, be careful to reduce as much as possible the potential for introducing the internals of the unit to dirt, dust, and debris that may be present in the unit's external environment.
- F. To reduce the risk of injury to persons, install the unit at least 7ft above grade or in ceiling.

Before You Start

Shipping Information

Inspect all cartons and boxes for flaws and shipping damages. If anything is discovered to be damaged, contact the shipping company and file a freight claim.

Filter Information

Ensure that all HEPA/ULPA filters are stored in a clean, dry location in a vertical position, as labeled on the carton. Do not open the HEPA/ULPA filters until they are ready to be installed in the FFU units. All construction in the space should be complete, the site and upstream air should be clean so as not to unnecessarily load the filter.

Ensure ductwork is balanced to scheduled flow and that both the space and ductwork is clean, free of debris, and ready for operation prior to installation of filter. To ensure fan filter units are properly balanced, read **Technical Note: Design with VAV/Constant Flow Boxes and Ducted Applications** prior to starting installation.

A minimum of two (2) people will be required to install the filters.

NOTE: Extreme caution should be taken to avoid contact with filter media. Touching filter media may result in filter failure. Damaged filters can occur during installation or during leak qualification testing. The filters supplied by Price have been 100% tested and certified by the manufacturer to be free of defects and leaks. Price cannot accept responsibility for damage that occurs after shipment, whether through transit, handling or installation, and will not replace filters under Price standard warranty.


FAN FILTER UNIT

PRODUCT OVERVIEW

Introduction

Price Fan Filter Units (FFU) are ceiling module diffusers consisting of a fan/motor assembly and Roomside Removable (RSR), or Bench Top Replaceable (BTR) filters. The module is designed to provide unidirectional vertical airflow of filtered, clean air over a cleanroom space.

Fan Filter Units (FFU) models will have three (3) stickers located on the back of the plenum. For ease of troubleshooting assistance, replacement parts, and general factory assistance, it is recommended that the order number, and model line string be used as reference. This information can be found on the Factory Label.

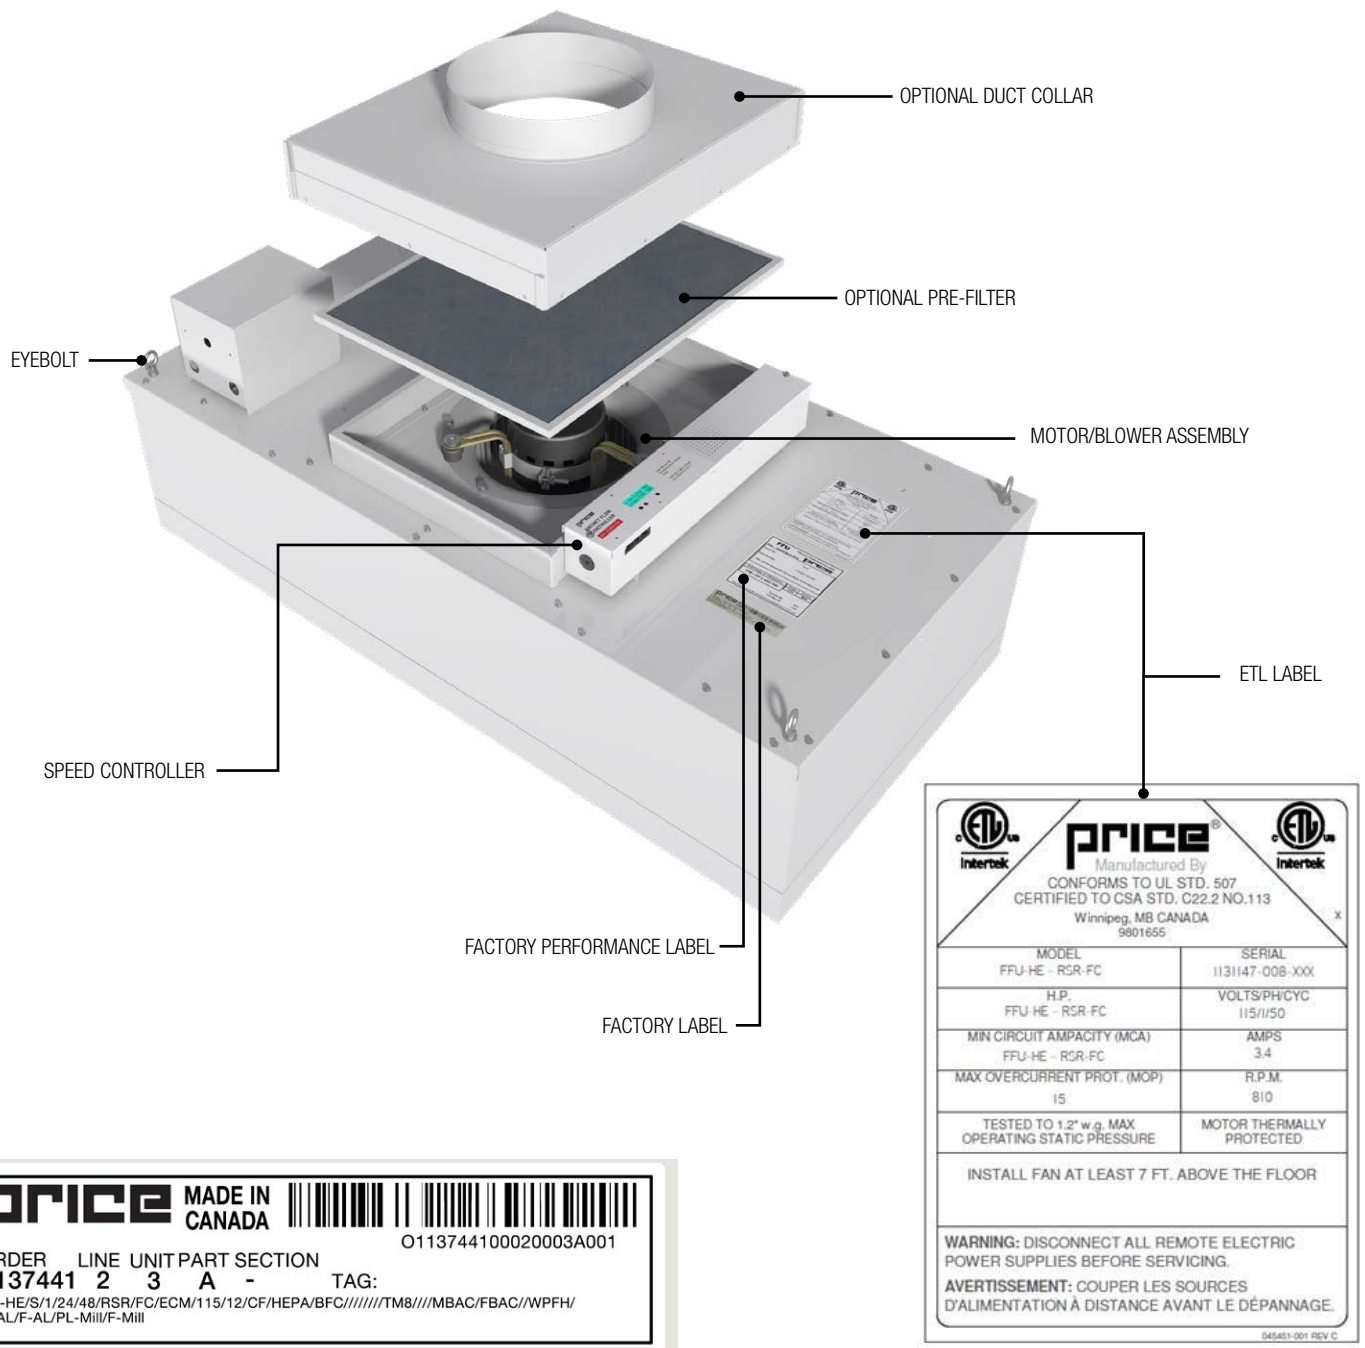

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Module Installation

The Price FFU will come completely assembled from the factory with the exception of the HEPA/ULPA filters, which will ship in its own carton, and the speed controller wall kits (if selected).

Sample line string for Room Side Replaceable filter:

FFU-1-4//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/FL+ML+BACnet/BFC/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12

Step 1: Remove FFU from shipping carton and inspect for any damage.

Step 2: If unit is Bench Top Replaceable (BTR) install the filter, refer to the filter installation section of this manual for instructions. If unit is Room Side Replaceable (RSR), proceed directly to next step.

Sample line string for Bench Top Replaceable filter:

FFU-1-X//SUPPLY/24/48//BTR/HEPA/FC/ECM/115/CF/TMB//ECMSC/TC/DSW-115//ASSP//WPF/PL-AL/F-EM/PL-WM/F-EM

Step 3: Raise the unit through the ceiling grid at an angle until entire unit is above the grid

Step 4: Lower unit onto the backside of the tees.

Step 5: Secure the unit to the overhead structure using the eyebolts located on the back of the unit.

UNIT EYEBOLTS FOR MOUNTING ▼



Step 6: Adjust and level the unit so that it rests on the tees and there is adequate compression on the gasket to warrant a tight seal.

Ensure that ceiling grid is properly gasket/sealed to prevent infiltration of unfiltered air from the ceiling plenum into the room side.

Above steps are manufacturer's suggested hanging techniques, always make sure to follow all local building codes, including seismic where applicable.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Speed Controller Installation & Operation

Refer to Factory Label to determine which speed controller is on the unit and use the following table to find the appropriate installation instructions.

Sample line string: *FFU-1-4//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/FL+ML+BACnet/BFC/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Speed Controller	Page Reference
PSCSC/WK	4
ECMSC	5
BFC	9

PSCSC/WK

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/PSC/115//R+TMB/FL+ML/PSC-WK/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

PSC SPEED CONTROLLER WITH WALL KIT OPTION ▼



If unit does not have the wall kit (WK) option, proceed to step 4.

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/PSC/115//R+TMB/FL+ML/PSCSC/TC/DSW-115/PC-115/ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Step 1: Locate pre-installed electric box for wall-mounted speed controller.

Step 2: Wire speed controller according to wiring diagram. Wall-mounted speed controller will be wired in series with the motor.

Step 3: Attach the wall-mounted controls faceplate to the electrical box using the screws provided.

Step 4: Wire the unit according to appropriate wiring diagram. If Power Cord (PC) option is selected, simply insert plug end into electrical socket.

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/PSC/115//R+TMB/FL+ML/PSCSC/TC/DSW-115/PC-115/ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Step 5: If the unit has an RSR filter install the filter now, refer to the filter installation section of this manual for instructions.

Step 6: Ensure proper voltage is hooked up to the unit.

Step 7: Proceed to the balancing section of this manual.

NOTE: Clockwise rotation will increase airflow, counter-clockwise rotation will decrease airflow.

NOTE: If unit is ducted, refer to **Technical Note: Balancing Ducted Units**.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

ECMSC

Installation

Sample line string: *FFU-HE/24/48/RSR/BC/ECM/115/10//CT//HEPA//ECMSC// WK /DSW/PC/TMB/ATS/ML/FL/WPF/PL-AL/F-AL/PL-B12/F-B12*

ECMSC ▼



If FFUCS-WMSC-30 was not provided, proceed to Step 4.

Step 1: Wire the unit according to appropriate wiring diagram. If Power Cord (PC) option is selected, simply insert plug end into electrical socket.

Sample line string:

FFU-1-X//SUPPLY/24/48//BTR/HEPA/FC/ECM/115/CF/TMB//ECMSC/TC/DSW-115/PC-115/ASSP//WPF/PL-AL/F-EM/PL-WM/F-EM

Step 2: If ECMSC is to be controlled using analog voltage signal from BAS (others) or Price WMSC, please remove ECMSC from control box. Connect 0-10VDC & COMMON to BAS SIGNAL & BAS COMMON on back of ECMSC (make sure to feed wires through grommet on control box). Re-fasten ECMSC to control box.

Step 3: If the unit has an RSR filter install the filter now, refer to the filter installation section of this manual for instructions.

Step 4: Ensure proper Voltage is hooked up to the unit.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

BACnet Flow Controller (BFC)

Installation


Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Step 1: Wire unit according to appropriate wiring diagram. If Power Cord (PC) option is selected, simply insert plug end into electrical socket.

NOTE: Polarity is important and must be observed. It is also vital that the 24 VAC common side of the transformer be Earth grounded.

Step 2: Hook up applicable BACnet, and/or local Building Automation System (BAS) according to wiring diagram. Multiple units can be daisy chained together using optional RJ45 cables. If using BAS or Local Set point, reference the airflow setpoint section on the next page.

DAISY CHAINED FFU UNITS ▼

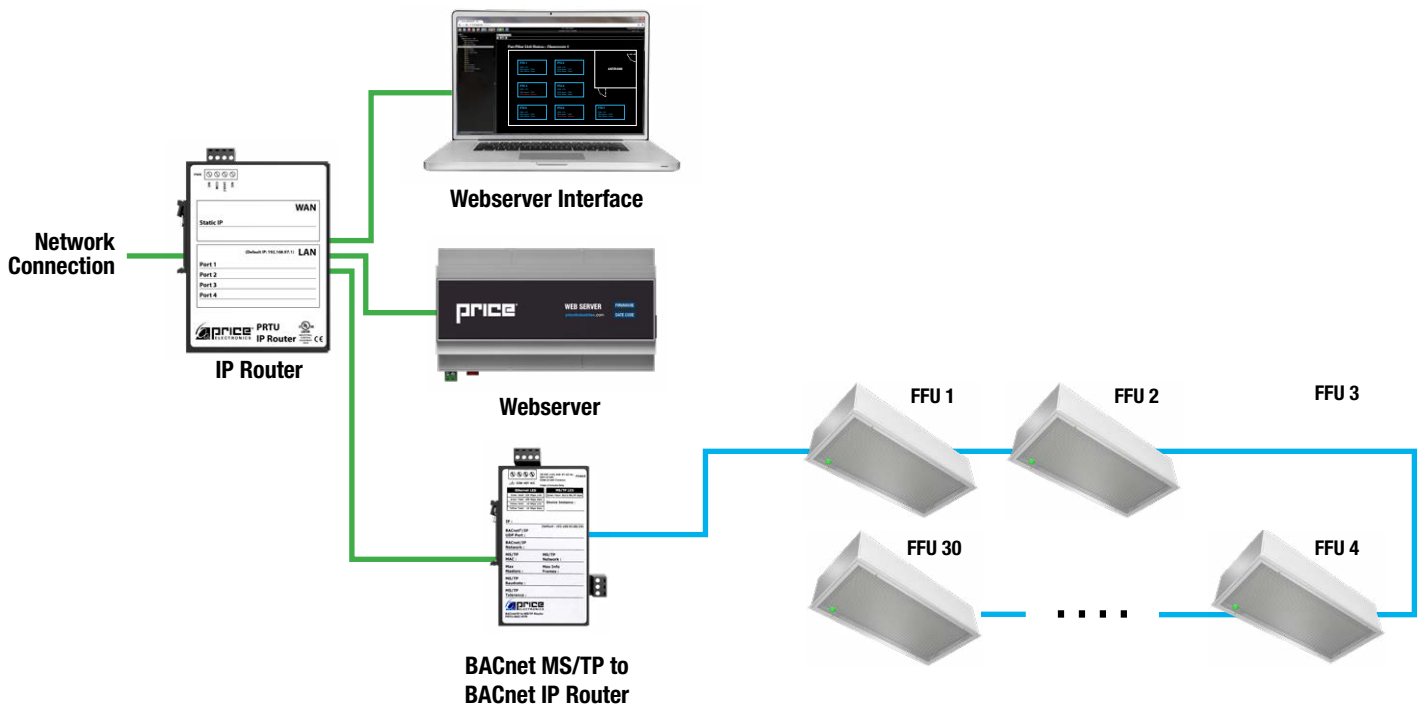

Step 3: Wire the unit according to the appropriate wiring diagram. If power cord option is selected, simply insert the plug end into the electric socket.

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115/PC-115/ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Step 4: If the unit has an RSR filter install the filter now, refer to the filter installation section of this manual for instructions.

Step 5: Ensure proper Voltage is hooked up to the unit.

For additional information on BACnet, and the BFC controller, refer to the [BACnet Wiring Guidelines](#), and [BFC Manual](#) available on priceindustries.com


FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Airflow Setpoint

For setting the airflow setpoint on the FFU, please locate the section for the correct controller below (either ECMSC or BFC).

ECMSC SPEED CONTROLLER ▼

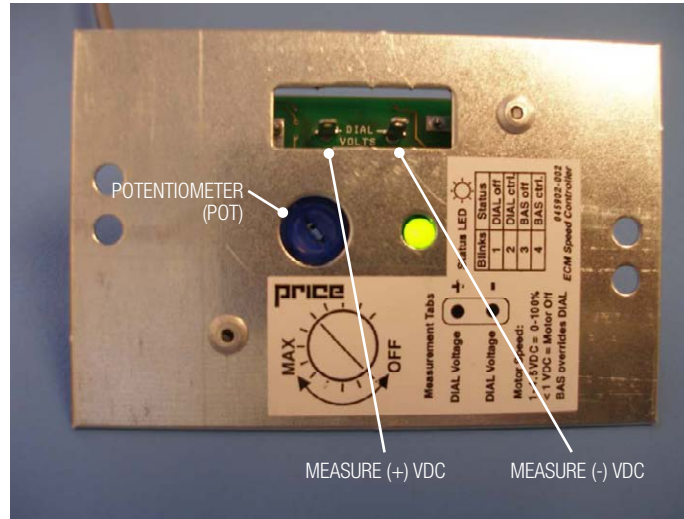

Step 1: Determine test point voltage (VDC) from the formula based on the desired airflow using the appropriate chart below.

Supply - Constant Flow – Clean Filters (Forward Curved)

Voltage	Velocity	24x24		24x36		24x48	
Volt	FPM	BTR - FC	RSR - FC	BTR - FC	RSR - FC	BTR - FC	RSR - FC
115	45-135	$VDC = \frac{CFM-50}{96}$	$VDC = \frac{CFM-39}{67}$	$VDC = \frac{CFM-78}{144}$	$VDC = \frac{CFM-35}{118}$	$VDC = \frac{CFM-91}{198}$	$VDC = \frac{CFM-72}{155}$
240	45-135	$VDC = \frac{CFM-45}{97}$	$VDC = \frac{CFM-39}{67}$	$VDC = \frac{CFM-76}{145}$	$VDC = \frac{CFM-39}{116}$	$VDC = \frac{CFM-88}{198}$	$VDC = \frac{CFM-64}{156}$
277	45-135	$VDC = \frac{CFM-48}{95}$	$VDC = \frac{CFM-31}{67}$	$VDC = \frac{CFM-71}{145}$	$VDC = \frac{CFM-31}{118}$	$VDC = \frac{CFM-85}{199}$	$VDC = \frac{CFM-63}{153}$

Supply - Constant Torque – Clean Filters (Backwards Curved)

Voltage	Velocity	24x36		24x48	
Volt	FPM	BTR - BC	RSR - BC	BTR - BC	RSR - BC
115	45-135	$VDC = \frac{CFM + 233}{449}$	$VDC = \frac{CFM + 267}{437}$	$VDC = \frac{CFM + 226}{486}$	$VDC = \frac{CFM + 302}{517}$
240	45-135	$VDC = \frac{CFM + 240}{450}$	$VDC = \frac{CFM + 193}{393}$	$VDC = \frac{CFM + 185}{459}$	$VDC = \frac{CFM + 313}{522}$
277	45-135	$VDC = \frac{CFM + 233}{444}$	$VDC = \frac{CFM + 208}{399}$	$VDC = \frac{CFM + 165}{448}$	$VDC = \frac{CFM + 307}{512}$

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Supply - Constant Torque – Clean Filters (Forward Curved)

Voltage	Velocity	24x24		24x36		24x48	
Volt	FPM	BTR/FC	RSR/FC	BTR/FC	RSR/FC	BTR/FC	RSR/FC
115	45-90	$VDC = \frac{CFM + 179}{310}$	$VDC = \frac{CFM + 188}{292}$	$VDC = \frac{CFM + 156}{312}$	$VDC = \frac{CFM + 155}{306}$	$VDC = \frac{CFM + 142}{338}$	$VDC = \frac{CFM + 212}{367}$
	90-135	$VDC = \frac{CFM + 20}{207}$	$VDC = \frac{CFM + 87}{220}$	$VDC = \frac{CFM - 81}{193}$	$VDC = \frac{CFM + 35}{232}$	$VDC = \frac{CFM - 138}{212}$	$VDC = \frac{CFM - 59}{223}$
240	45-90	$VDC = \frac{CFM + 174}{309}$	$VDC = \frac{CFM + 233}{322}$	$VDC = \frac{CFM + 177}{322}$	$VDC = \frac{CFM + 195}{330}$	$VDC = \frac{CFM + 139}{336}$	$VDC = \frac{CFM + 207}{363}$
	90-135	$VDC = \frac{CFM + 19}{207}$	$VDC = \frac{CFM + 93}{224}$	$VDC = \frac{CFM - 70}{197}$	$VDC = \frac{CFM + 63}{250}$	$VDC = \frac{CFM - 138}{212}$	$VDC = \frac{CFM - 55}{224}$
277	45-90	$VDC = \frac{CFM + 140}{283}$	$VDC = \frac{CFM + 194}{295}$	$VDC = \frac{CFM + 147}{314}$	$VDC = \frac{CFM + 170}{317}$	$VDC = \frac{CFM + 140}{335}$	$VDC = \frac{CFM + 216}{365}$
	90-135	$VDC = \frac{CFM + 22}{207}$	$VDC = \frac{CFM + 88}{220}$	$VDC = \frac{CFM - 33}{221}$	$VDC = \frac{CFM + 24}{226}$	$VDC = \frac{CFM - 142}{209}$	$VDC = \frac{CFM - 64}{365}$

Exhaust - Constant Flow – Clean Filters (Forward Curved)

Voltage	Velocity	24 x 48
Volt	FPM	RSR - FC
115	45-135	$VDC = \frac{CFM - 76}{218}$
240	45-135	$VDC = \frac{CFM - 80}{218}$
277	45-135	$VDC = \frac{CFM - 76}{218}$

Exhaust - Constant Torque – Clean Filters (Forward Curved)

Voltage	Velocity	24 x 48
Volt	FPM	RSR - FC
115	45-90	$VDC = \frac{CFM - 290}{374}$
	90-135	$VDC = \frac{CFM - 12}{222}$
240	45-90	$VDC = \frac{CFM - 299}{380}$
	90-135	$VDC = \frac{CFM - 16}{221}$
277	45-90	$VDC = \frac{CFM - 289}{374}$
	90-135	$VDC = \frac{CFM - 20}{218}$

Example: 24" x 48", FC Wheel, 115V @ 450cfm $VDC = (CFM - 72)/155$

$VDC = (450 - 72)/155$ $VDC = 2.44V$

NOTE: The calculated VDC value is intended as a starting point; actual VDC value may differ slightly depending on field variables.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Step 2: If using potentiometer/manual adjustment, rotate the potentiometer (POT/DIAL) dial on the outside of the box with a screwdriver until the test point voltage is achieved.

NOTE: ECM Speed Controllers have 2 modes: manual adjust and BAS (Building Automation System). Standard manual control outputs are shown below:

Measurement Tab Voltage	Motor Control
0 - 1 VDC	Off
1 - 4.5 VDC	0-100%
4.5 - 5 VDC	100%

The speed controller will automatically ignore the potentiometer (POT/DIAL) when a BAS signal is detected (BAS Input Signal >1). VDC equations are for potentiometer (POT/DIAL) manual adjustment only (0-1 BAS input signal). The VDC equations are based on a 1-5 Volt scale. The BAS input voltage is a 2-10 VDC scale, and therefore VDC calculated for a given CFM using the equation must be doubled to achieve that CFM using the BAS input.

BAS Voltage	Response	Notes
0 - 1 VDC	Local control mode using push buttons	Local setpoint can be adjusted from 0 - 100% using push buttons
1 - 2 VDC	Motor Off	Recommended sending a 1.5 VDC signal to command motor off
2 - 10 VDC	Modulating Control	2 - 10 VDC modulates motor in accordance with VDC equations

Example: If using a BAS signal, to calculate appropriate starting voltage, first calculate the VDC (as shown in above example)

$$\text{VDC} = 2.44 \text{ V}$$


Then double this value

$$\text{BAS Input Voltage} = \text{VDC} * 2$$

$$\text{BAS Input Voltage} = 2.44 * 2$$

$$\text{BAS Input Voltage} = \mathbf{4.88\text{V}}$$

SPEED CONTROLLER ADJUSTMENT ▼

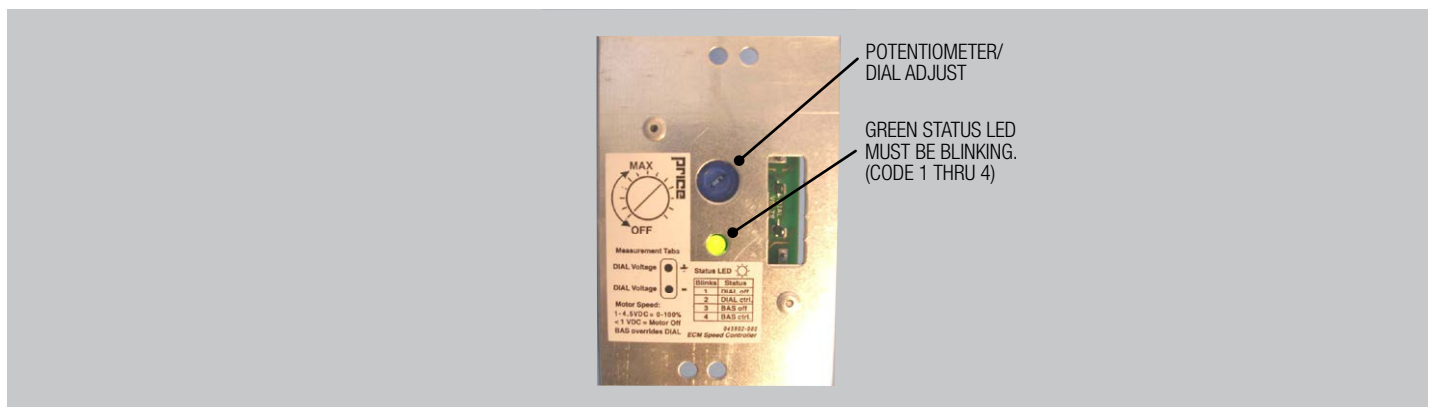

Step 3: Wait a few seconds for the ECM motor to adjust its speed and then verify fan airflow with measurements at the unit face using a flow hood. Adjust the POT/DIAL, or BAS input signal to reach desired airflow as required.

Step 4: Proceed to balancing section of this manual.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Airflow Setpoint BFC

Step 1: Determine if BFC will be controlled using local control, BAS analog voltage signal, or BACnet. The control mode can be confirmed by observing the cycling status readout on the LCD.

NOTE: The control hierarchy is BACnet > BAS > Local. The control mode is based on the highest level of control provided.

Step 2: For Local or BACnet control, determine the setpoint from the appropriate airflow formula for your model in the tables below.

If BFC is being controlled by BAS analog voltage signal, refer to "ECMSC Airflow Setpoint" section for proper input voltage (Note this will be 2X the VDC value shown in the tables).

Set-point (ECM%) ranges from 0% - 100%

Supply - Constant Flow – Clean Filters (Forward Curved)

Voltage	Velocity	24x24		24x36	
Volt	FPM	BTR - FC	RSR - FC	BTR - FC	RSR - FC
115	45-135	ECM% = (CFM/3.35) - 44	ECM% = (CFM/2.33) - 46	ECM% = (CFM/5.03) - 44	ECM% = (CFM/4.13) - 38
240	45-135	ECM% = (CFM/3.38) - 42	ECM% = (CFM/2.33) - 46	ECM% = (CFM/5.06) - 44	ECM% = (CFM/4.06) - 39
277	45-135	ECM% = (CFM/3.31) - 43	ECM% = (CFM/2.35) - 42	ECM% = (CFM/5.08) - 43	ECM% = (CFM/4.12) - 37

Voltage	Velocity	24x48	
Volt	FPM	BTR - FC	RSR - FC
115	45-135	ECM% = (CFM/6.94) - 42	ECM% = (CFM/5.42) - 42
240	45-135	ECM% = (CFM/6.91) - 42	ECM% = (CFM/5.45) - 41
277	45-135	ECM% = (CFM/6.97) - 41	ECM% = (CFM/5.37) - 41

Supply - Constant Torque – Clean Filters (Backwards Curved)

Voltage	Velocity	24x36		24x48	
Volt	FPM	BTR - BC	RSR - BC	BTR - BC	RSR - BC
115	45-135	ECM% = (CFM/15.74) - 14	ECM% = (CFM/15.29) - 12	ECM% = (CFM/17.03) - 16	ECM% = (CFM/18.1) - 12
240	45-135	ECM% = (CFM/15.78) - 14	ECM% = (CFM/13.76) - 15	ECM% = (CFM/16.09) - 18	ECM% = (CFM/18.28) - 12
277	45-135	ECM% = (CFM/15.56) - 14	ECM% = (CFM/13.99) - 14	ECM% = (CFM/15.68) - 19	ECM% = (CFM/17.92) - 12

Supply - Constant Torque – Clean Filters (Forward Curved)

Voltage	Velocity	24x24		24x36	
Volt	FPM	BTR/FC	RSR/FC	BTR/FC	RSR/FC
115	45-90	ECM% = (CFM/10.87) - 13	ECM% = (CFM/10.23) - 11	ECM% = (CFM/10.93) - 15	ECM% = (CFM/10.73) - 15
	90-135	ECM% = (CFM/7.26) - 26	ECM% = (CFM/7.72) - 18	ECM% = (CFM/6.78) - 41	ECM% = (CFM/8.12) - 25
240	45-90	ECM% = (CFM/10.82) - 13	ECM% = (CFM/11.28) - 8	ECM% = (CFM/11.3) - 13	ECM% = (CFM/11.58) - 12
	90-135	ECM% = (CFM/7.27) - 26	ECM% = (CFM/7.84) - 17	ECM% = (CFM/6.92) - 39	ECM% = (CFM/8.75) - 22
277	45-90	ECM% = (CFM/9.93) - 15	ECM% = (CFM/10.32) - 10	ECM% = (CFM/11.02) - 16	ECM% = (CFM/11.12) - 14
	90-135	ECM% = (CFM/7.26) - 26	ECM% = (CFM/7.71) - 18	ECM% = (CFM/7.74) - 33	ECM% = (CFM/7.92) - 26

Voltage	Velocity	24x48	
Volt	FPM	BTR/FC	RSR/FC
115	45-90	ECM% = (CFM/11.84) - 17	ECM% = (CFM/12.86) - 13
	90-135	ECM% = (CFM/7.43) - 48	ECM% = (CFM/7.82) - 37
240	45-90	ECM% = (CFM/11.78) - 17	ECM% = (CFM/12.72) - 13
	90-135	ECM% = (CFM/7.42) - 48	ECM% = (CFM/7.86) - 36
277	45-90	ECM% = (CFM/11.74) - 17	ECM% = (CFM/12.79) - 12
	90-135	ECM% = (CFM/7.33) - 49	ECM% = (CFM/7.67) - 38

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Exhaust - Constant Flow – Clean Filters (Forward Curved)

Voltage	Velocity	24 x 48
Volt	FPM	RSR - FC
115	45-135	ECM% = (CFM/7.63) - 18
240	45-135	ECM% = (CFM/7.63) - 18
277	45-135	ECM% = (CFM/7.53) - 18

Exhaust - Constant Torque – Clean Filters (Forward Curved)

Voltage	Velocity	24 x 48
Volt	FPM	RSR - FC
115	45-90	ECM% = (CFM/13.09) - 6
	90-135	ECM% = (CFM/7.77) - 30
240	45-90	ECM% = (CFM/13.3) - 6
	90-135	ECM% = (CFM/7.74) - 30
277	45-90	ECM% = (CFM/13.09) - 6
	90-135	ECM% = (CFM/7.63) - 31

Step 2: For local control, adjust at the speed controller using the up and down arrows. For BACnet control, adjust point "AO3 - ECM Setpoint" on Front End System.

Step 3: For BAS analog voltage control, ensure correct voltage is applied to AI1 & COM based on the VDC equations provided in the tables. Also refer to table below for BAS control responses.

BAS Voltage	Response	Notes
0 - 1 VDC	Local control mode using push buttons	Local setpoint can be adjusted from 0 - 100% using push buttons
1 - 2 VDC	Motor Off	Recommended sending a 1.5 VDC signal to command motor off
2 - 10 VDC	Modulating Control	2 - 10 VDC modulates motor in accordance with VDC equations

The VDC equations are based on a 1-5 Volt scale. The BAS input voltage is a 2-10 VDC scale, and therefore VDC calculated for a given CFM using the equations must be doubled to achieve that CFM using the BAS input.

NOTE: The calculated ECM setpoint is a starting point; actual value may differ slightly depending on field variables.

NOTE: The BAS signal will override the local setpoint using a remote 0 – 10 VDC signal. If the BAS signal drops below 1 VDC local control (via the up/down buttons) is restored.

Step 4: Wait a few seconds for the ECM motor to adjust its speed and then verify fan airflow with measurements at the supply outlets using a flow hood. Adjust voltage to reach desired airflow as required.

Step 5: Proceed to *Balancing* section of this manual.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS


Filter Installation

Room Side Replaceable Filter (RSR)

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

Please refer to the [FTR Room-side Replaceable Filter \(RSR\) Quick Start Guide](#).

RSR ▼

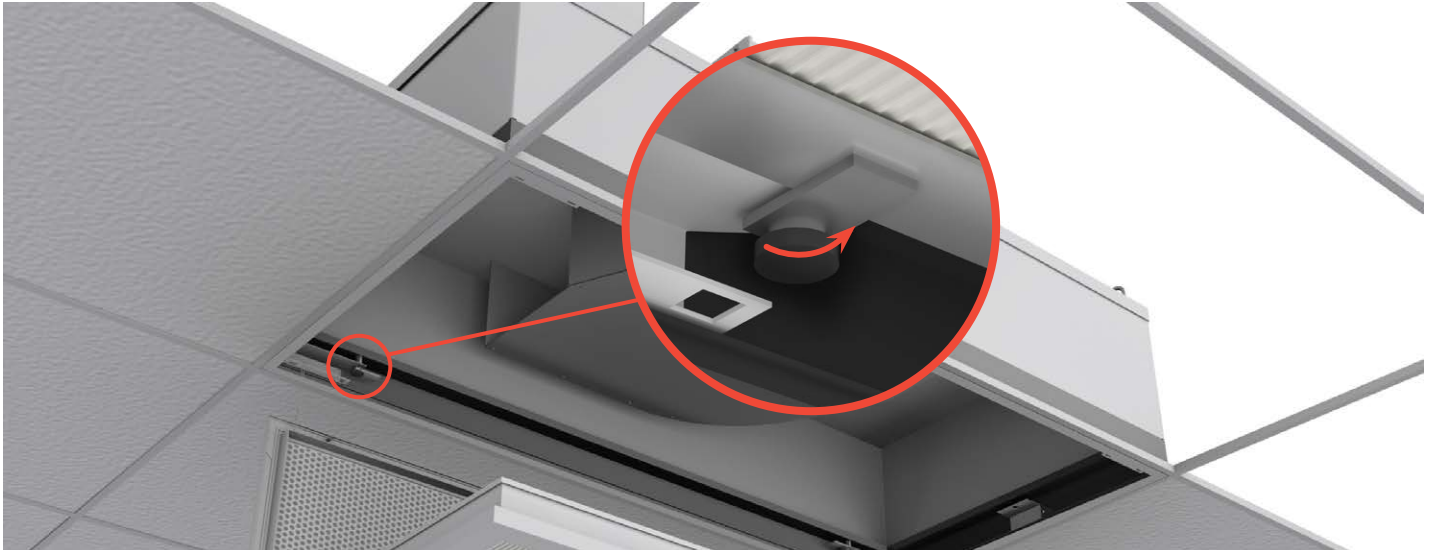


Bench Top Replaceable Filter (BTR)

Sample line string: *FFU-1-1///24/48/BTR/FC/ECM/115/10//CF//HEPA/BFC///DSW-115//PC-115//TMB/ASSP///FL+ML+BACnet///WPFH/PL-AL///PL-B12/*

Please refer to the [FTR Room-side Replaceable Filter \(BTR\) Quick Start Guide](#).

BTR ▼

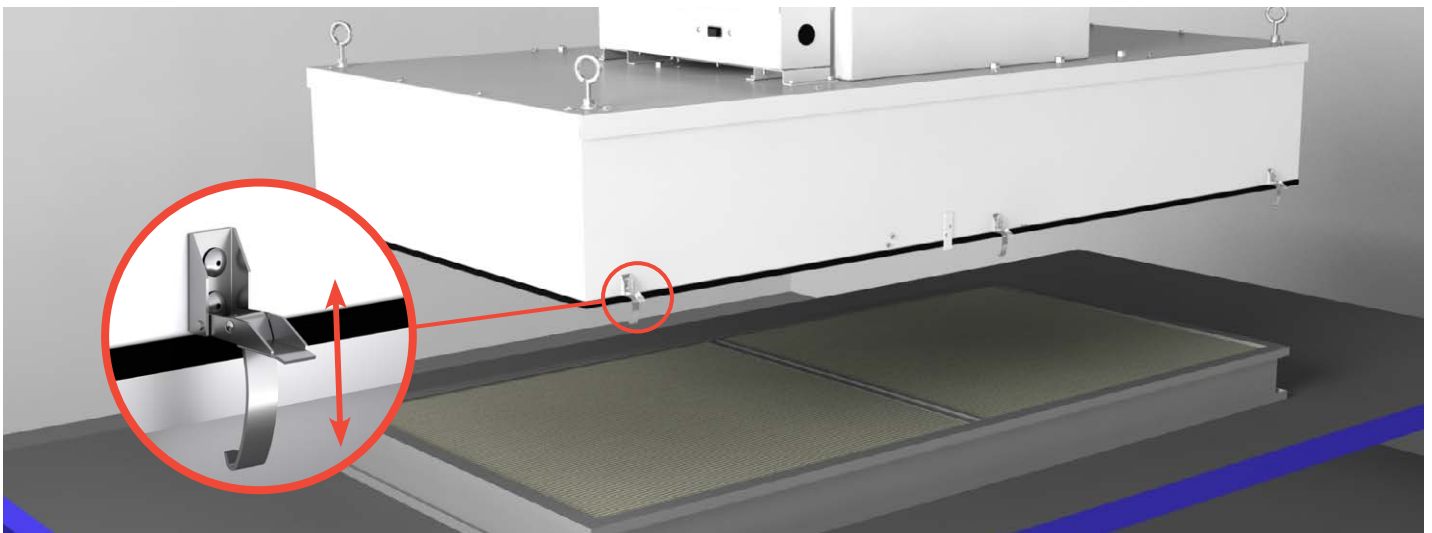

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Accessories

Aerosol Sample Static Pressure Port (ASSP)

Sample line string: FFU-1-X//I/SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115/PC-115/**ASSP**/INJ//WPF/PL-AL/F-AL/PL-B12/F-B12

Every FFU from Price is supplied with an aerosol sample/static pressure port.

The ASSP is a 1/4" port used for measuring plenum static pressure as well as sampling aerosol concentrations above the filter.

On the FFU with BTR filter there are two ports on the center strip of the filter than can function as the ASSP, however if the LED indicator option has been selected, one port will be used for the LED installation.

Optional Aerosol Injection Port (INJ)

Sample line string: FFU-1-X//I/SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115/PC-115/**ASSP**/**INJ**//WPF/PL-AL/F-AL/PL-B12/F-B12

The FFU with RSR filter can be ordered with an optional aerosol injection port for easier commissioning.

The INJ is a 3/8" Female NPT port, used to inject aerosol above the filter for aerosol testing.

For instructions on use of the ASSP and INJ, please refer to the [INJ Aerosol Injection Port User Manual](#).

ASSP ON BTR UNIT ▼



ASSP & INJ RSR UNIT ▼



FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Filter/Motor Indicator LED (ML/FL) - PSC Units

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/PSC/115//R+TMB/FL+ML/PSC-WK/TC/DSW-115//ASSP//WPF/PL-AL/F-AL/PL-B12/F-B12*

LED Installation (BTR Units only)

Step 1: Take LED cable assembly out of FFU-1-X Plenum.

Step 2: Remove well nut in center port of BTR filter.

CABLE ASSEMBLY ▼



STATIC PRESSURE PORT ▼




Step 3: Remove threaded standoff and lock washer from LED cable assembly.

Step 4: Thread cable through static pressure port on face of BTR filter.

NOTE: It is recommended to rest the filter frame on 2x4 lumber to protect the LED light from breaking.

LED THREADED STANDOFF ▼

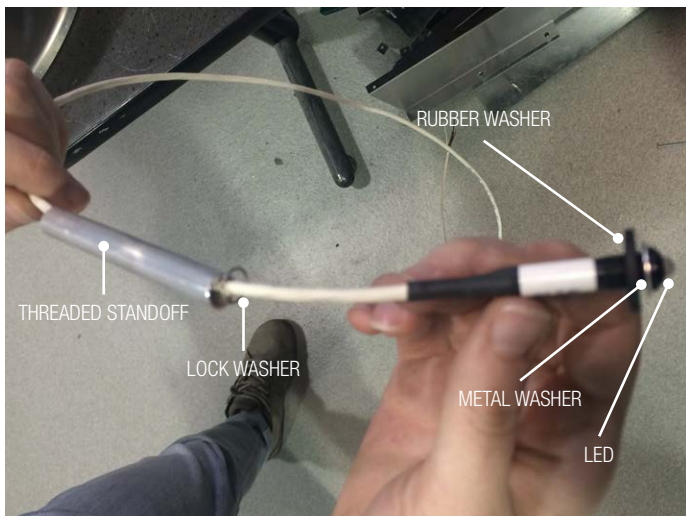

FILTER POSITION FOR LED INSTALLATION ▼



FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Step 5: Put lock washer and threaded standoff back on cable and tighten to LED.

BTR FACE INSTALLED LED ▼



THREADED STANDOFF THROUGH FILTER CHANNEL ▼



Step 6: With two (2) people holding the unit, pull cable back through plenum until plenum can rest on top of filter.

CABLE ASSEMBLY ▼



Step 7: Install the filter, refer to the filter installation section of this manual.

Step 8: Refer to wiring diagram (located in control box) to connect LED leads to terminal block.

NOTE: If unit has BFC speed controller, LED leads will need to be connected to the BFC controller instead of the terminal block.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

LED Operation

Option	Code	LED Color	Action	Notes
Filter LED	FL	Green	None	Indicates normal operation until filter pressure drop exceeds calibrated pressure drop (factory set at 1.5x clean filter pressure).
		Yellow	Change Filter	Indicates filter pressure drop has exceeded calibrated setting (factory set at 1.5x clean filter pressure).
Motor LED	ML	Green	None	Indicates normal motor operation when the static pressure is above 0.1" w.g.
		Red	Troubleshoot Motor	Indicates motor is not in operation, and that unit static pressure is below 0.1" w.g.


Calibration

Filter LED will come factory set to activate at the pressure drops listed in the Table below.

Pressure @ 90fpm [in w.g.]	1.5x Clean Filter [in w.g.]
0.4	0.6

If different set points are desired, they can be adjusted as follows:

PRESSURE SWITCH ADJUSTMENT SCREW ▼

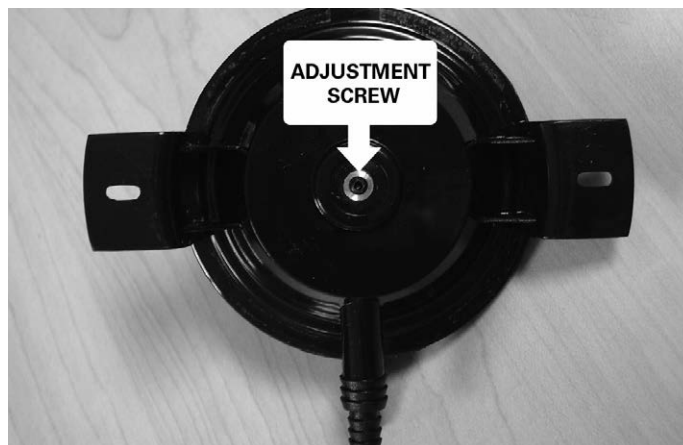


Step 1: Remove Loctite from adjustment screw hole.

FAN FILTER UNIT

INSTALLATION INSTRUCTIONS

Step 2: Calculate number of turns required based on difference between factory set point and desired set point using the following chart.

RSR FILTER LED SET POINT ADJUSTMENT ▼

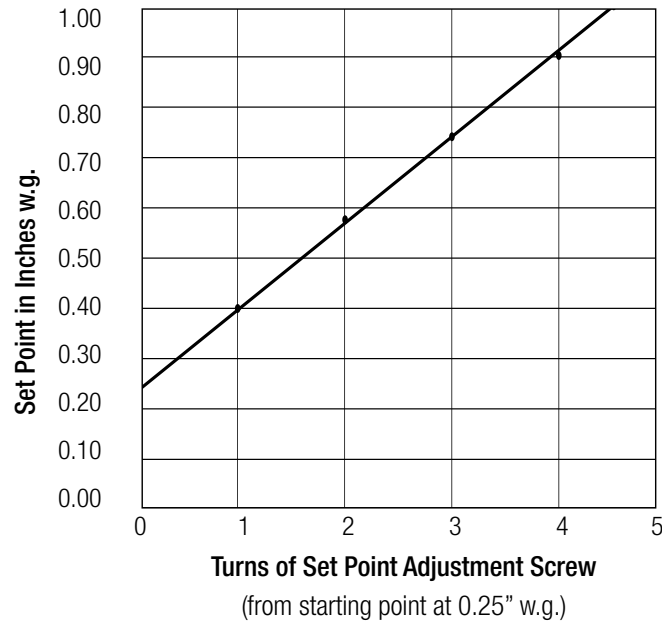

Example:

HEPA filter with desired set point of 0.9 in w.g.

Number of turns at 0.9 in w.g. = 4

Number of turns at factory set point of 0.6 in w.g. = 2.2

Number of turns to field set = $4 - 2.2 = 1.8$ (approximately)

NOTE: Maximum available pressure setting is 1.0" w.g. Do not exceed 4 ½ turns (total).

Step 3: Turn screw clockwise the number of turns calculated above. You will need a 1.5mm hex Allen wrench

Step 4: To check filter pressure set point and/or to fine tune, insert Magnehelic gauge into the static pressure port (located along knife edge of diffuser – diffuser face must be removed to access).

Step 5: Using an obstruction (piece of cardboard or equivalent), slowly increasing pressure on the unit by blocking off more and more of the diffuser face until the LED turns from green to yellow.

Step 6: Take pressure measurement at point the LED changed color and rotate the adjustment screw until desired pressure set point is reached.

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Filter/Motor Indicator LED (ML/FL) - ECM Units

Sample line string: FFU-1-X/I/SUPPLY/24/48//RSR/HEPA/FC/**ECM**/115//R+TMB/**FL+ML+BACnet**/BFC/TC/DSW-115//ASSP///WPF/PL-AL/F-AL/PL-B12/F-B12

LED Operation

LED Color	Unit Status*	Action	Notes
Green	Normal	None	Indicates normal operation until pressure drop exceeds calibrated pressure drop (factory set a 1.5x clean filter pressure).
Yellow	Ftr Loaded	Change or calibrate filter	Indicates filter pressure drop has exceeded calibrated setting (factory set at 1.5x the clean filter pressure).
Red	Off	Adjust setpoint / check control mode	Indicates motor setpoint is 0%. If alternate setpoint is expected please check control mode.
Blinking Red	Low Pressure	Troubleshoot motor	Indicates unit pressure is below 0.1 in. w.g. and motor setpoint is above 0%. Please contact Applications (criticalenvironments@priceindustries.com).

*Unit status is shown on BFC LCD screen or as BACnet point: "MV1 - Unit Status"

Integrated LED Lighting (UFFU)

For details on installation and wiring please refer to the [URDC Ultra Remote Driver Cabinet Manual](#) on priceindustries.com.

UFFU ▼



FAN FILTER UNIT

BALANCING

Balancing: Technical Note: Design with VAV/Constant Flow Boxes and Ducted Applications

In applications where the fan filter unit will be ducted with upstream VAV, constant flow boxes, valves, or other airflow devices that may have varying airflows, or modes, a constant flow program is not recommended.

In systems where two controllers are trying to compensate to adjust to a constant airflow, the system will be unable to stabilize. This results in constant adjustment of both controllers until the FFU motor shuts off. The ECM with constant torque motor program or PSC motor is suggested for this type of application.

The FFU is designed to overcome the pressure drop of the filter only. The motor is not intended to pull air down supply ductwork, nor to experience a positive static pressure at the inlet forcing air through the fan. Fan filter units should be installed in a system where the inlet static will be neutral or slightly negative.

In ducted applications, it is critical that primary air be balanced prior to installing the FFU. The primary air controls should be locked in position post balancing, and the FFU is installed and running. Similarly, the FFU should be bench-set by using a flow hood and adjusting the speed controller, as required, to the same balanced, primary airflow rate before the FFU is mated with the duct. Alternatively, the Technical Note: Design with VAV/Constant Flow Boxes and Ducted Applications can also be followed.

To prevent a high static pressure build up at the FFU during start up, the FFU's should be energized prior to the system. This helps to prevent the possibility of backwards rotations of the blower wheel, which will eventually lead to the motor shutting off.


For any additional information, or troubleshooting assistance on systems and design with fan filter units used in sequence with a variable upstream air source, contact Price Industries Fan Filter help at criticalenvironments@priceindustries.com, or dial (204) 654- 5613 option 5.

FAN FILTER UNIT

BALANCING

Balancing Un-ducted Supply Units

UN-DUCTED SUPPLY UNITS, NEGATIVE PRESSURE PLENUM ▼

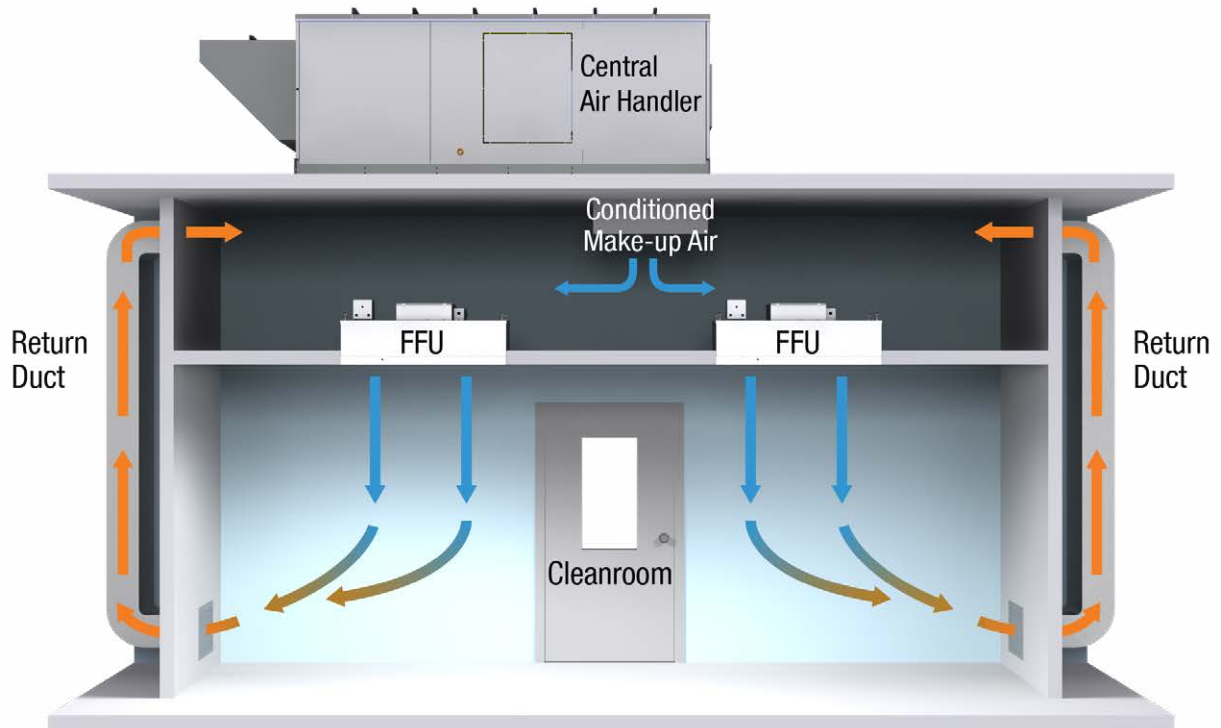

Step 1: Ensure the unit and filter is properly installed.

Step 2: Turn on FFU and set to desired airflow. See *Airflow Setpoint* section to determine initial setpoint.



Step 3: Measure airflow using flow hood and compare against scheduled flow. Adjust speed controller as necessary to achieve design airflow.

FAN FILTER UNIT

BALANCING

Balancing Ducted Supply – Pressure Independent and Dependent Airflow Control

NOTE: If there is a pressure independent device upstream of the FFU then PSC or ECM with constant torque motors should be used.

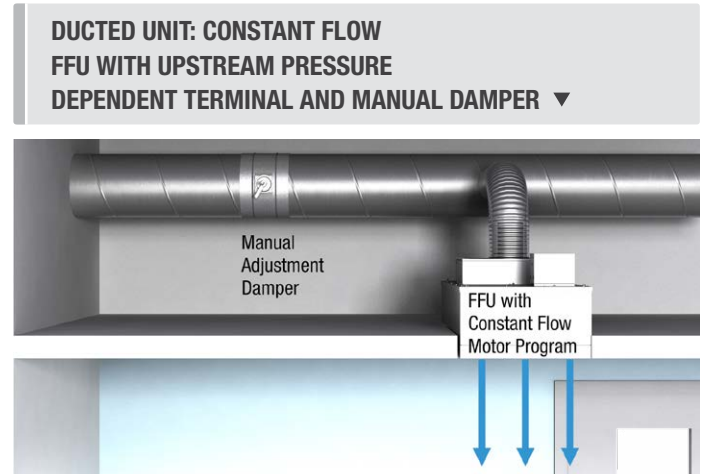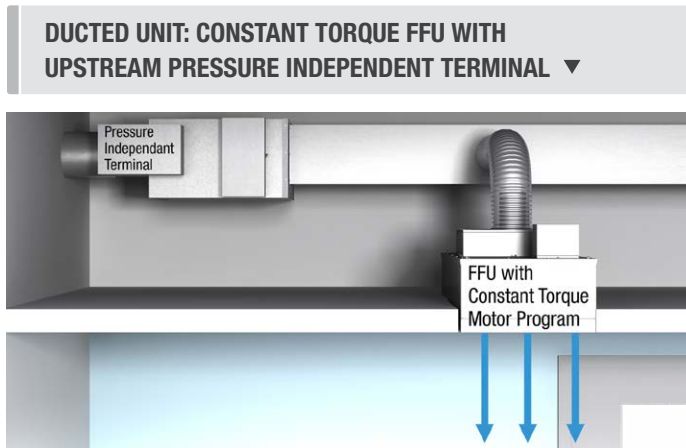

Step 1: Set FFU with filter installed, on benchtop and set to desired airflow. See *Airflow Setpoint* section to determine initial setpoint.

Step 2: Confirm airflow using a flow hood and adjust speed controller as required.

Step 3: Ensure each supply air duct is balanced to scheduled airflow and matches FFU set point.

Step 4: Turn off primary air source.

Step 5: Install FFU into ceiling, connect ductwork.

Step 6: Turn all FFUs on – ensure all FFUs are running before proceeding to next step.

Step 7: Turn on primary air source.

Step 8: Measure airflow using flow hood and compare against scheduled flow. FFU inlet static should be verified to be neutral. See table below if proper operation is not achieved.

FAN FILTER UNIT

BALANCING

If the FFU is ducted and removing the duct is not possible, follow the below instructions for balancing:

Step 1: Turn off primary air source.

Step 2: Install an air pressure measurement device (i.e. Pitot tube) in the duct prior to the FFU inlet.

Step 3: Power up FFU and set speed controller to desired airflow. See *Airflow Setpoint* section to determine initial setpoint.

Step 4: Power up the airflow control device. (Ductwork should have been previously balanced)

Step 5: Read the inlet pressure.

Step 6: Measure airflow using flow hood.

Step 7: Using the table below, adjust FFU controller, or upstream airflow device as required

Repeat steps 4-6 until desired airflow and inlet pressure (0.0 ± 0.05 " w.g.) is achieved..

FFU Airflow	FFU Inlet Static (measured)	Action
Above Set point	Above desired pressure	Decrease airflow on airflow control device
Above Set point	Below desired pressure	Decrease FFU control setting
Above Set point	At desired pressure	Decrease Both FFU and airflow control device
Below Set point	At desired pressure	Increase Both FFU and airflow control device
Below Set point	Below desired pressure	Increase airflow on airflow control device
Below Set point	Above desired pressure	Increase FFU control setting


FAN FILTER UNIT

BALANCING


Balancing Ducted Supply – Pressure Independent and Dependent Airflow Control

NOTE: If a ducted return or return mixing box is used, a PSC, ECM Constant Torque or ECM Constant Flow (preferred) can be used.

FFU WITH DUCTED RETURN ▼

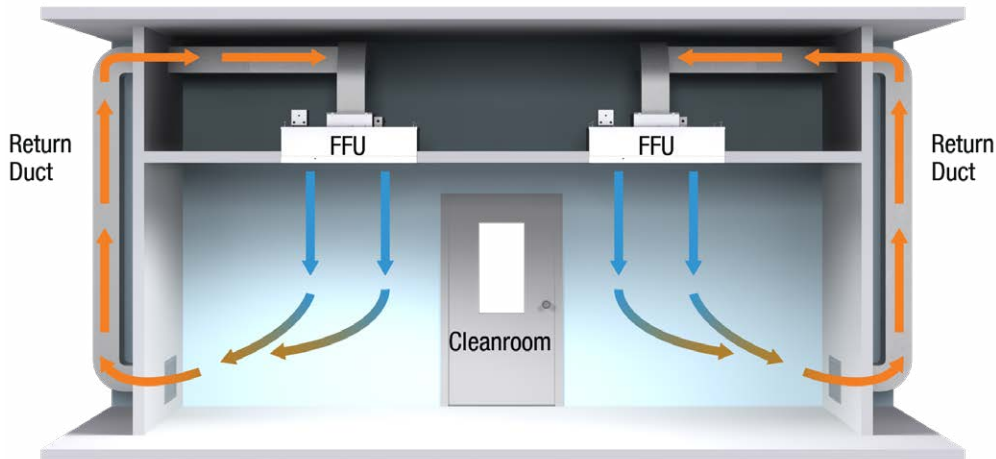

FFU WITH RETURN MIXING BOX ▼

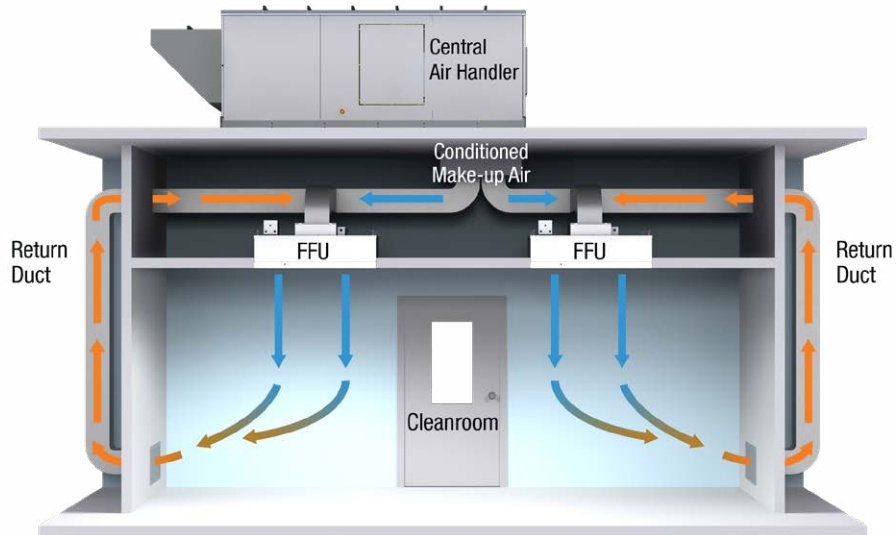

Step 1: If return mixing box is used, turn primary air off. If ducted return, proceed directly to Step 2.

Step 2: Set FFU to desired airflow. See *Airflow Setpoint* section to determine initial setpoint.

Step 3: Confirm airflow using flow hood and adjust speed controller as required.

Step 4: Power up the primary airflow control device. (Ductwork should have been previously balanced).

Step 5: Measure airflow using flow hood and compare against scheduled flow. Adjust speed controller as necessary to achieve design airflow.

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Pre-Filter Cleaning

Step 1: Gain access to the top of the unit by removing adjacent ceiling, or access panel.

Step 2: Remove filter by pushing filter to one side and sliding it out from under the brackets (non-ducted), or remove filter access door (ducted). Reference the below figures for further details.

NON-DUCTED UNIT FILTER REMOVAL ▼



DUCTED UNIT FILTER REMOVAL ▼



Step 3: Clean pre-filter by hand washing in water with a mild detergent or by using a vacuum cleaner. Allow pre-filter to dry completely before replacing.

Step 4: Reverse above steps to install the pre-filter.

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Motor Change

Top Access Motor/Blower Assembly

Sample line string: *FFU-1-X//I/24/48/RSR/BC/ECM/115/10//CT//HEPA/ECMSC//WK-ECMSC//DSW-115//PC-115//TMB/ASSP/INJ////WPFH/PL-AL/F-AL//PL-B12/F-B12*

Step 1: Gain access to the top of the unit by removing adjacent ceiling, or access panel.

Step 2: Remove filter by pushing filter to one side and sliding it out from under the brackets (non-ducted), or remove the duct collar/pre-filter housing and pre-filter (if applicable) via screws (ducted) to expose motor assembly. Reference the below figures for further detail.

UN-DUCTED UNIT FILTER REMOVAL ▼



DUCTED UNIT FILTER REMOVAL ▼



FAN FILTER UNIT

SERVICE INSTRUCTIONS

Step 3: Make note of all wire locations for re-installation later. It is recommended to take a picture of all applicable wires.

Step 4: Open control box and disconnect wires at the terminal block, referencing applicable wiring diagram.

Step 5: Remove the 6 bolts to free the motor/blower assembly, using a 7/16" socket wrench (or equivalent).

MOTOR - BLOWER ASSEMBLY ▼



Step 6: Remove motor/blower assembly.

Step 7: Inspect and/or replace parts.

Step 8: Replace with the new motor/blower assembly and reassemble by reversing the above steps.

NOTE: For information on how to order replacement motor/blowers, [contact your local Price Sales Representative.](#)

Step 9: Double check airflow to ensure that set point has not changed.

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Room Side Accessible Motor/Blower Assembly

Sample line string:


FFU-1-X//I/SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/TC/DSW-115/PC-115/ASSP/INJ/WPF/PL-AL/F-AL/PL-B12/F-B12

NOTE: Disconnect the unit from the electrical power source before attempting any service. Electrical service should be performed by a licensed electrician or authorized service technician.

NOTE: Disconnect the unit from the electrical power source before attempting any service. Electrical service should be performed by a licensed electrician or authorized service technician.

STEP 1: Remove diffuser perforated face by turning quarter turn fasteners holding face in place.


DIFFUSER FACE WITH QUARTER TURN FASTENERS ▼

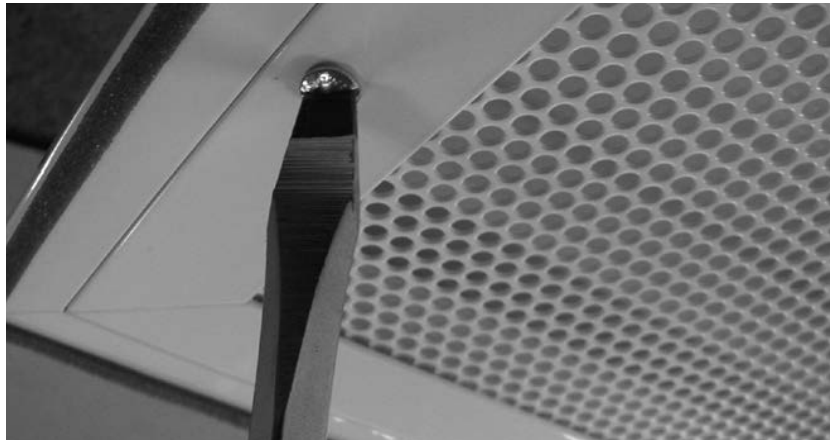

NOTE: Safety cables will be attached to the diffuser face, but care should be taken to ensure that diffuser face does not swing and injure anyone.

STEP 2: Remove filter by loosening cam latch bolts (filter retainer clips) by turning counter clockwise using your hands, or hex key as required to fully tighten latches.

CAM LATCH BOLTS ▼

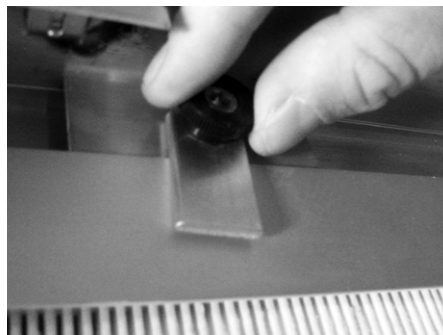

STEP 3: Turn all cam latch filter retainers to the open position.

STEP 4: Remove filter by handling frame; do not touch filter media.

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Step 5: Remove the nuts securing the blower housing using a 7/16" socket wrench (or equivalent).

2X2 FORWARD CURVED BLOWER HOUSING ▼



2X3 AND 2X4 FORWARD CURVED BLOWER HOUSING ▼



NOTE: A 7/16" ratchet with extension is recommended for ease of access for unfastening.

2X3 AND 2X4 BACKWARD CURVED BLOWER HOUSING ▼



FAN FILTER UNIT

SERVICE INSTRUCTIONS

Step 6: Remove the housing exposing the motor/blower assembly.

MOTOR-BLOWER HOUSING REMOVAL ▼



Step 7: Remove 7/16" nuts holding motor/blower assembly in place.

2X2 MOTOR-BLOWER HOUSING REMOVAL ▼



Step 8: Drop motor/blower assembly out of unit. Be careful as wire connections are still in place.

Step 9: Disconnect plug and play connection connecting wires from motor to control box.

SPEED CONTROL AND MOTOR HARNESS CABLES 115V SHOWN ▼



Step 10: Remove motor/blower assembly.

Step 11: Inspect and/or replace parts.

Step 12: Replace with the new motor/blower assembly and reassemble by reversing the above steps.

Step 13: Double check airflow to ensure that set point has not changed.

NOTE: For information on how to order replacement motor/blowers, [contact your local Price Sales Representative.](#)

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Room Side Accessible Controls

Sample line string: *FFU-1-X//SUPPLY/24/48//RSR/HEPA/FC/ECM/115/CF/R+TMB/BACnet/BFC/R+TC/DSW-115/PC-115/ASSP/INJ//WPF/PL-AL/F-AL/PL-B12/F-B12*

Step 1: Remove diffuser perforated face by turning quarter turn fasteners holding face in place.


NOTE: Safety cables will be attached to the diffuser face, but care should be taken to ensure that diffuser face does not swing and injure anyone.

DIFFUSER FACE WITH QUARTER TURN FASTENERS ▼



Step 2: Remove filter by loosening cam latch bolts (filter retainer clips) by turning counter clockwise using your hands, or hex key as required to fully tighten latches.

CAM LATCH BOLTS ▼

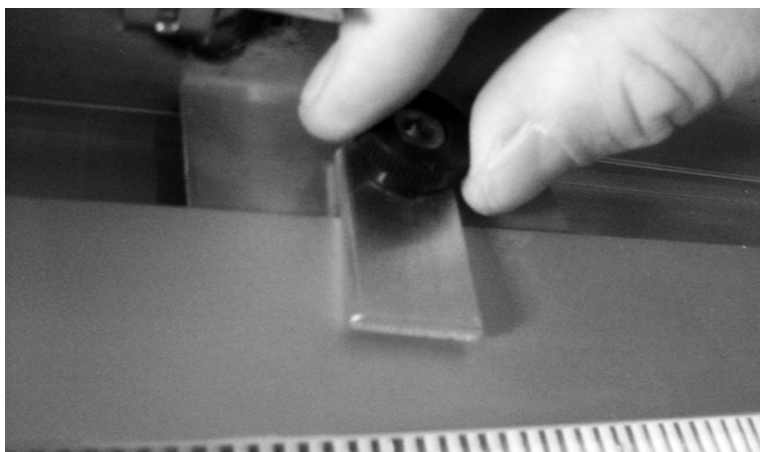

FAN FILTER UNIT

SERVICE INSTRUCTIONS

Step 3: Turn all cam latch filter retainers to the open position.

Step 4: Remove filter by handling frame; Extreme caution should be taken when removing the filter if the filter is to be reinstalled. Touch the filter by the frame only;

never touch the filter media as it can damage the filter.

If your unit is 24 x 48" or 24 x 36", skip to Step 8.

Step 5: Remove the 2 nuts securing the baffle retainer bracket using a 7/16" socket wrench.

LOCATION OF NUTS ▼



Step 6: Remove the 4 bolts securing the baffle on the opposite side of the retainer bracket using a 7/16" socket wrench.

LOCATION OF BOLTS ▼



FAN FILTER UNIT

SERVICE INSTRUCTIONS

Step 7: Carefully remove the baffle and the retainer bracket from the module.

BAFFLE AND RETAINER BRACKET REMOVAL ▼



Step 8: For 24 x 36" units with BC option, remove the housing to access the control lid.

Step 9: Remove the control lid from the inside of the plenum using a 7/16" socket wrench for access to the control box.

CONTROL BOX ▼



STEP 10: Reverse the previous steps taken to re-assemble the unit.

FAN FILTER UNIT

TROUBLESHOOTING

Troubleshooting – Changing Motor Programs

The motors have the ability to function as either constant flow or constant torque. This provides the ability to change motor programs without the need to reprogram the motor.

NOTE: Changes will only take effect upon restarting the motor (must be powered off and then back on) and cannot be made live.


Switching from constant flow to constant torque: To switch the motor from constant flow to constant torque all that is required is to open the connection of the white wire as shown.

MOTOR SETTING - CONSTANT TORQUE ▼



Switching from constant torque to constant flow: To switch the motor from constant torque to constant flow all that is required is to close the connection of the white wire as shown.

MOTOR SETTING - CONSTANT FLOW ▼

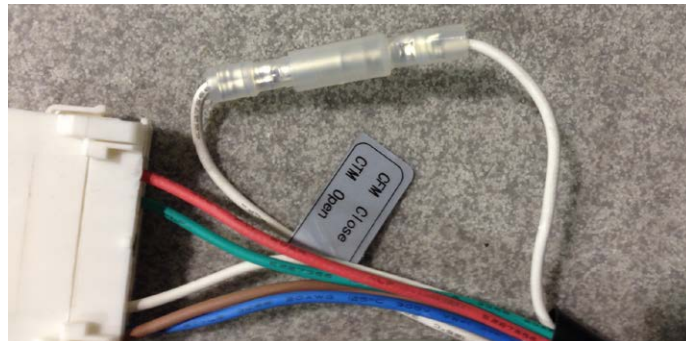

The motor will be factory wired to the motor program selected on the order.

NOTE: If using the BFC, please updated the BFC programming to reflect the change in motor program. Please refer to the [BFC manual](#) for instructions.

FAN FILTER UNIT

TROUBLESHOOTING

Troubleshooting Tips

Low Air Velocity	1. Check pre-filter media (only with optional pre-filter); replace or clean as necessary
	2. Adjust variable speed control for higher blower output.
	3. Check power for proper voltage, amperage, and distribution frequency.
	4. Replace HEPA/ULPA filter if the velocity remains low.
High Air Velocity	1. Adjust variable speed control for lower blower output.
Non-Laminar Flow and/or Excessive Contamination	1. Ensure that no large obstructions are upstream of airflow pattern.
	2. Determine that no other air-moving devices are operating in or around cleanroom which could disrupt the room's airflow pattern.
	3. Check air velocity and if low, conduct the 'Low Air Velocity' procedure outlined above.
	4. Conduct smoke and photometer test on HEPA/ULPA filter. Seal or replace.
Motor Keeps Shutting Off	1. Check if unit is ducted.
	2. If no, contact Price at criticalenvironments@priceindustries.com .
	3. If yes, check inlet pressure, if positive, re-balance until inlet pressure is zero.
LED Light Turned Red	1. Refer to 'Motor Will Not Run' procedure outlined below.
LED light Turned Yellow	1. Replace filter.
Motor Will Not Run	1. Check that motor has power at correct voltage.
	2. Check that the speed controller has power.
	3. Check control mode on speed controller and ensure setpoint is not 0%.
	4. Check control harness between speed controller and motor

If experiencing further issues with unit, contact Price Industries Fan Filter help at:

By Email: criticalenvironments@priceindustries.com

By Phone: (204) 654-5613 option 5

FAN FILTER UNIT

REPLACEMENT PARTS

BTR Unit Replacement Parts

HEPA Filters

Size	Quantity	Description	Price Part Number
2x2	1	Filter, HEPA, 99.99% FFU 24 x 24 x 3.06"	042299-011
2x3	1	Filter, HEPA, 99.99% FFU 24 x 36 x 3.06"	042299-012
2x4	1	Filter, HEPA, 99.99% FFU 24 x 48 x 3.06"	042299-013

ULPA Filters

Size	Quantity	Description	Price Part Number
2x2	1	Filter, ULPA, 99.9995% FFU 24 x 24 x 3.06"	042299-014
2x3	1	Filter, ULPA, 99.9995% FFU 24 x 36 x 3.06"	042299-015
2x4	1	Filter, ULPA, 99.9995% FFU 24 x 48 x 3.06"	042299-016

Parts	Quantity	Description	Price Part Number
Washable Pre-filter (FC Unit)	1	Foam Filter 16.5x16.5x.437	045964-001
Washable Pre-filter (BC Unit)	1	Foam Filter 19.5x19.5x.437	045964-002
Washable Pre-filter (FC Unit)	1	Foam Filter 15.5x19.5x.437	045964-004
ECM Standard Speed Controller	1	USC 8A speed control	232953-100
ECM Speed Controller Cable	1	Cable ECM Speed Control 2ft	019186-001
ECM Power Cable	1	Power Cable Harness – 115V	019187-003
		Power Cable Harness – 208V,240V, 277V	019187-004
ECM Wall Controller	1	FFUCS-WMSC-30	

Transformer	Quantity	Description	Price Part Number
115V	1	Transformer 120/24 50VA FT-MT	019436-001
208-240V	1	Transformer (208/240V)/24V 50VA FT-MT	019436-011
277V	1	Transformer 277/24V 50VA FT-MT	019439-001

Blower Wheel	Quantity	Description	Price Part Number
2x2	1	WHL 1/2 Bore w/ REV Hub	100080-001
2x3, 2x4	1	WHL 1/2 (FC)	100090-002
2x3, 2x4	1	WHL 1/2 (BC)	100090-003
Disconnect Switch	1	Disconnect Switch 15A, 1-Pole (115/277)	019903-001
		Disconnect Switch 30A, 2-Pole (208/240V)	019903-003

PSC Motor

Size	Quantity	Description	Price Part Number
2x4, 2x3, 2x2	1	115V – PSC Motor 1/4HP	019152-002
2x4, 2x3, 2x2	1	208-240V – PSC Motor 1/4HP	019589-002
2x4, 2x3, 2x2	1	277V – PSC Motor 1/4HP	019153-002

ECM Motor

Size	Quantity	Description	Price Part Number
2x4, 2x3, 2x2	1	115/208/240/277V - ECM Motor 1/3HP	019219-001

FAN FILTER UNIT

REPLACEMENT PARTS

RSR Unit Replacement Parts

HEPA Filters

Size	Quantity	Description	Price Part Number
2x2	1	Filter, HEPA, 99.99% FFU 24 x 24 x 3.5"	042299-005
2x3	1	Filter, HEPA, 99.99% FFU 24 x 36 x 3.5"	042299-006
2x4	1	Filter, HEPA, 99.99% FFU 24 x 48 x 3.5"	042299-007

ULPA Filters

Size	Quantity	Description	Price Part Number
2x2	1	Filter, ULPA, 99.9995% FFU 24 x 24 x 3.5"	042299-008
2x3	1	Filter, ULPA, 99.9995% FFU 24 x 36 x 3.5"	042299-009
2x4	1	Filter, ULPA, 99.9995% FFU 24 x 48 x 3.5"	042299-010

Parts	Quantity	Description	Price Part Number
Washable Pre-filter (FC Unit)	1	Foam Filter 16.5x16.5x.437	045964-001
Washable Pre-filter (BC Unit)	1	Foam Filter 19.5x19.5x.437	045964-002
Washable Pre-filter (FC Unit)	1	Foam Filter 15.5x19.5x.437	045964-004
ECM Standard Speed Controller	1	USC 8A speed control	232953-100
ECM Speed Controller Cable	1	Cable ECM Speed Control 2ft	019186-001
ECM Power Cable	1	Power Cable Harness – 115V	019187-003
		Power Cable Harness – 208V,240V, 277V	019187-004
ECM Wall Controller	1	FFUCS-WMSC-30	

Transformer	Quantity	Description	Price Part Number
115V	1	Transformer 120/24 50VA FT-MT	019436-001
208-240V	1	Transformer (208/240V)/24V 50VA FT-MT	019436-011
277V	1	Transformer 277/24V 50VA FT-MT	019439-001

Blower Wheel	Quantity	Description	Price Part Number
2x2	1	WHL 1/2 Bore w/ REV Hub	100080-001
2x3, 2x4	1	WHL 1/2 (FC)	100090-002
2x3, 2x4	1	WHL 1/2 (BC)	100090-003
Disconnect Switch	1	Disconnect Switch 15A, 1-Pole (115/277)	019903-001
		Disconnect Switch 30A, 2-Pole (208/240V)	019903-003

PSC Motor

Size	Quantity	Description	Price Part Number
2x4, 2x3, 2x2	1	115V – PSC Motor 1/4HP	019152-002
2x4, 2x3, 2x2	1	208-240V – PSC Motor 1/4HP	019589-002
2x4, 2x3, 2x2	1	277V – PSC Motor 1/4HP	019153-002

ECM Motor

Size	Quantity	Description	Price Part Number
2x4, 2x3, 2x2	1	115/208/240/277V - ECM Motor 1/3HP	019219-001

This document contains the most current product information as of this printing.
For the most up-to-date product information, please go to priceindustries.com

© 2020 Price Industries Limited. All rights reserved.

price[®]