Floor System Tutorial

 $FS4-Skewed\ End\ Panel\ Floor\ System\ Example$

Topics Covered

- Superstructure composed of girders, floorbeams and stringers
- System Superstructure Definition
- Skewed end panels
- Mirroring stringer group definitions when they are assigned to stringer units


This example demonstrates entering a Girder-Floorbeam-Stringer superstructure with skewed end panels in BrR using the System superstructure definition approach. The focus of this example is the skewed end panels and geometry of the system. It is assumed that the user of this example is an advanced user who is familiar with the basics of BrR. As such, the details of creating bridge materials, beam shapes, etc., are not presented in great detail in this example.

If you have already completed example problem "FS1-GirderFloorbeamStringer Example", you can open the bridge you created in that example and jump to Page FS5-5 to start this example. If you have not completed "FS1-GirderFloorbeamStringer Example", continue with this page.


From the Bridge Explorer, select File/New/New Bridge to create a new bridge. Enter the following description data:


1

Last Modified: 8/30/2016

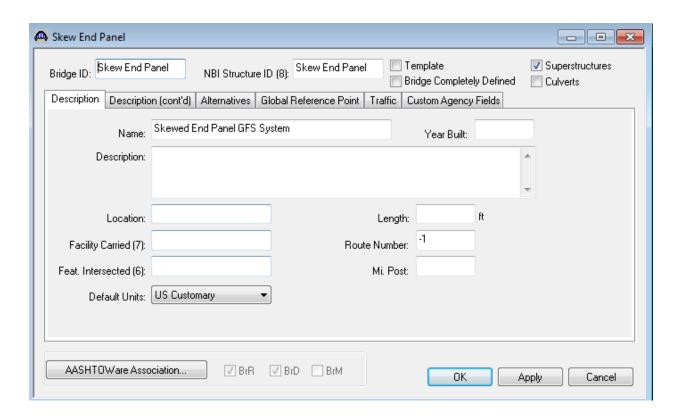


Create the following materials for the bridge.

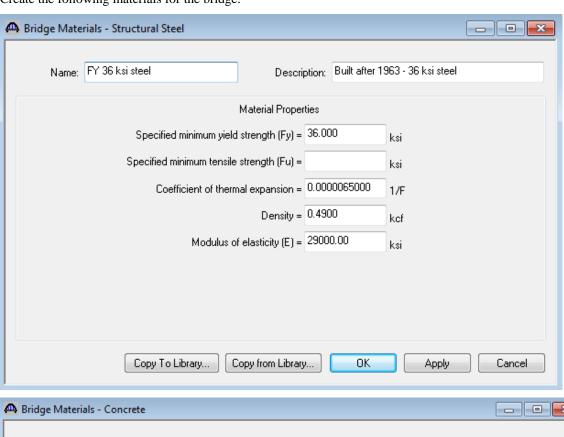


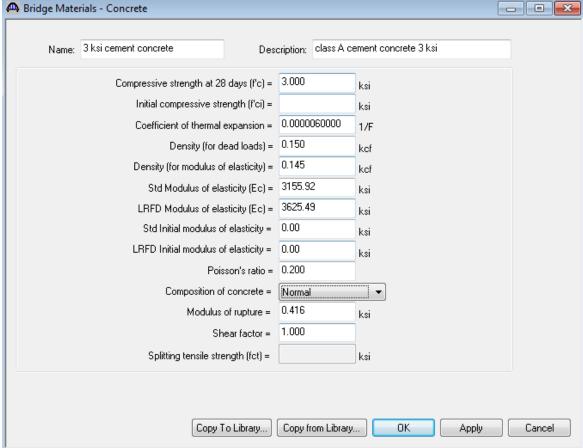


Copy the following steel beam shape from the library to the bridge. This shape will be used for the stringers in this superstructure.

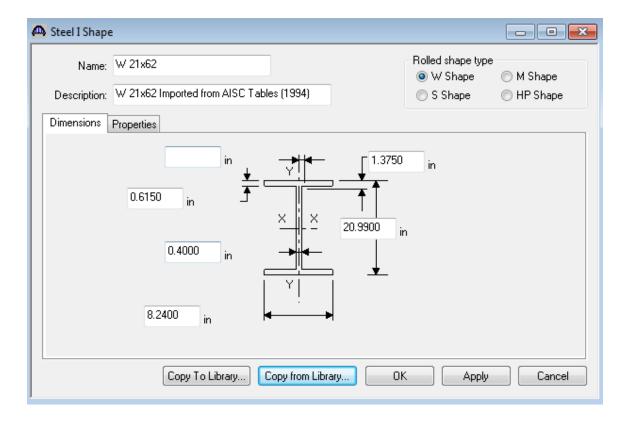


Add the following appurtenance to the bridge.

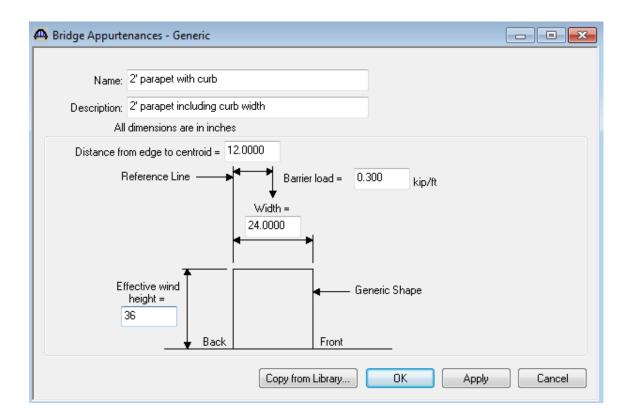

Double click on SUPERSTRUCTURE DEFINITIONS (or click on SUPERSTRUCTURE DEFINITIONS and select File/New from the menu or right mouse click on SUPERSTRUCTURE DEFINITIONS and select New from the popup menu) to create a new superstructure definition. The dialog shown below will appear.

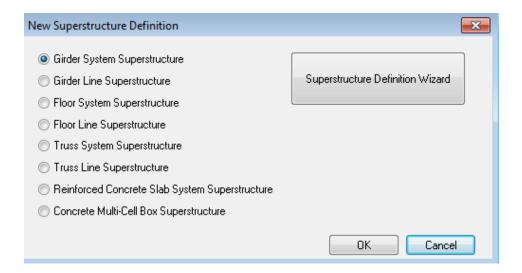


Selecting Floor System Superstructure will display three types of floor system superstructure definitions.

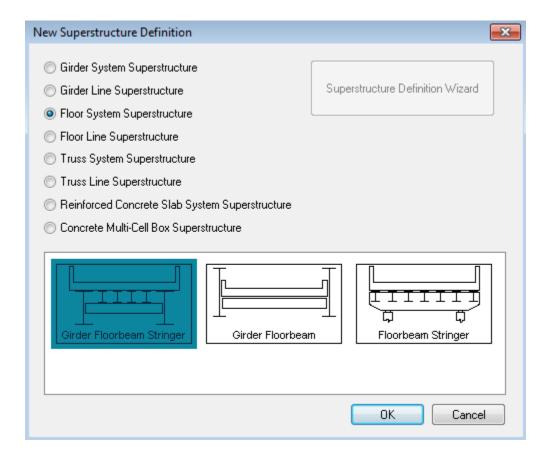


Select Girder Floorbeam Stringer and click OK. The Girder Floorbeam Stringer Floor System Superstructure Definition window will open.

Enter the appropriate data as shown below.

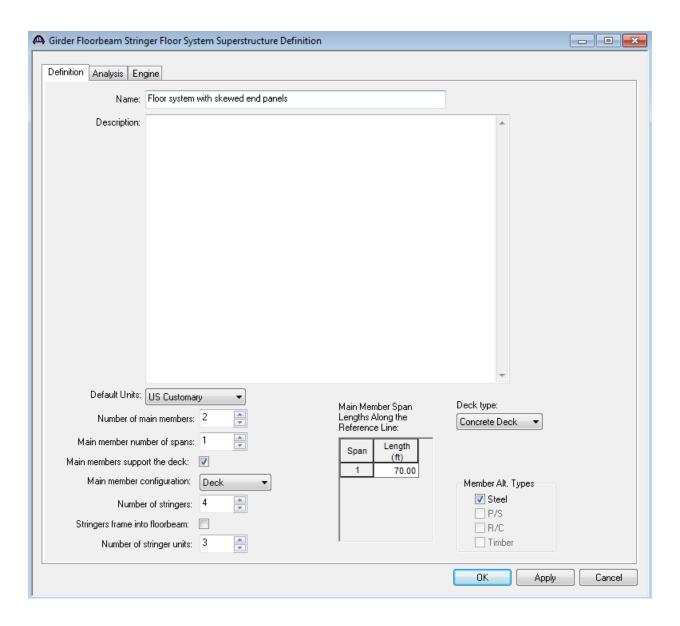



As shown by the sketch, this structure has 2 main members (girders) and 4 stringers.

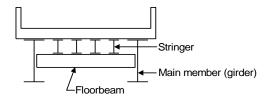

Last Modified: 8/30/2016

Stringer Units are the portions of the structure where the stringers are to be analyzed as structurally continuous units. In this structure, the stringers in the skewed end panels are simple span between the floorbeams and the stringers in the interior panels are 2 span continuous.

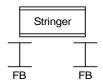


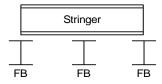

In the skewed end panels, the stringers are 1 simple span over 2 floorbeams.


In the interior panels, the stringers are 2 continuous spans over 3 floorbeams.

This superstructure has 3 stringer units. Each stringer unit contains 4 stringer members.

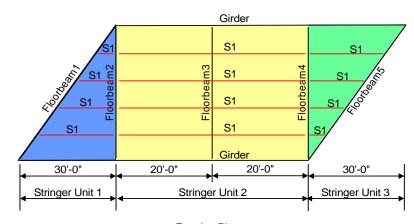


Framing Plan (Stringers are shown in red) There are 3 Stringer Units in this superstructure definition

The span lengths for the main members are entered along the superstructure definition reference line. In this example, the superstructure definition reference line is located in the center of the deck. It has the following dimensions. As can be seen by this example, it is important to know where the superstructure definition reference line is located within the structure typical section when the main girder supports are skewed.

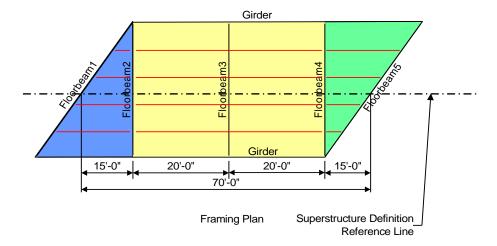


The partially expanded Bridge Workspace tree is shown below:

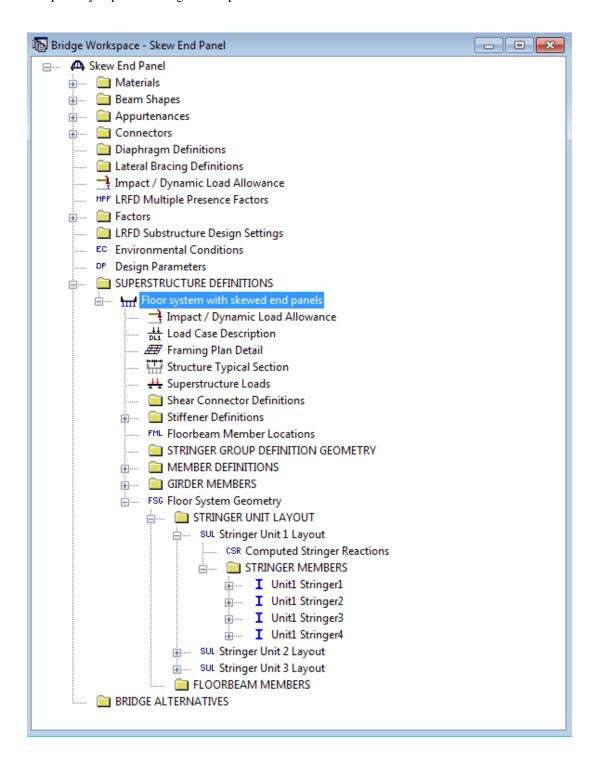


This example does not cover creating a Bridge Alternative, Superstructure or Superstructure Alternative as those windows have been covered in numerous other examples. We will continue with describing this superstructure definition.

Double click on Load Case Description to define the dead load cases. Click the Add Default Load Case

Descriptions button to add four default load cases. The completed Load Case Description window is shown below:

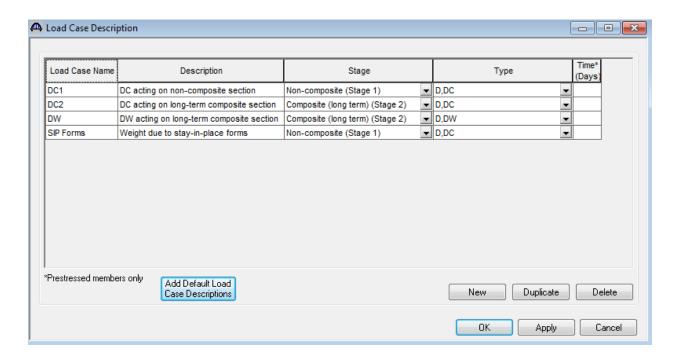


Enter the appropriate data on the Framing Plan Details window as shown below:

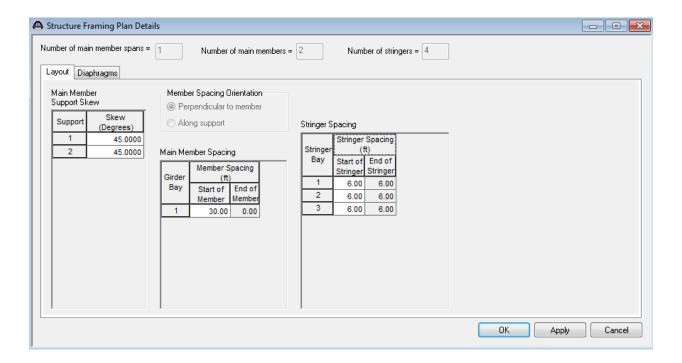



This superstructure does not have any lateral bracing between the girders so we will not enter any data on the diaphragms tab.


The Structure Framing Plan Schematic appears as follows. The girders appear as dashed lines because we have not defined any girder member alternatives yet. The stringers do not appear in the framing plan yet because we have not located the stringer members along the length of the superstructure yet. The floorbeams do not appear either because we have not entered any information about the number of floorbeams or where they are located.

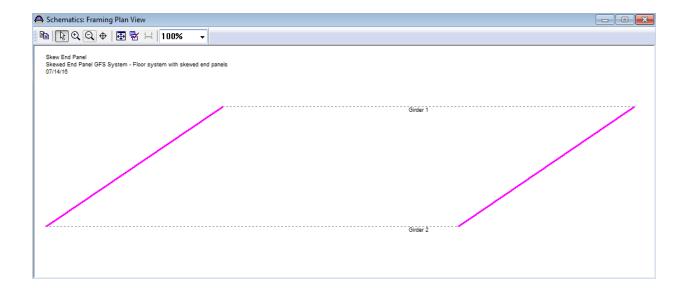


Next enter the data describing the typical section as shown below.

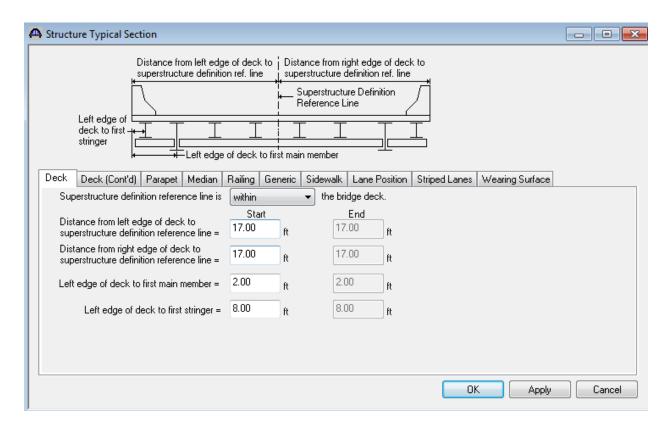

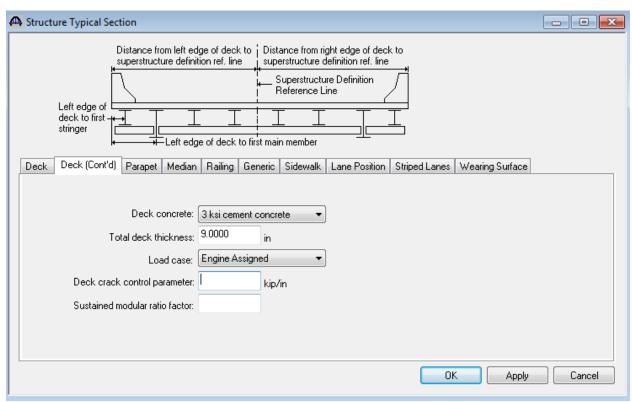


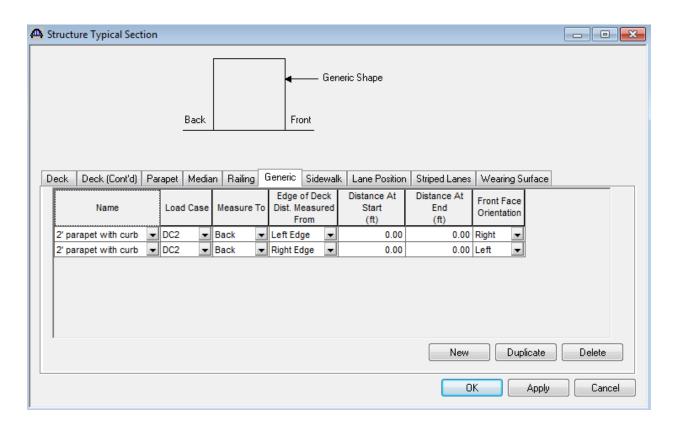

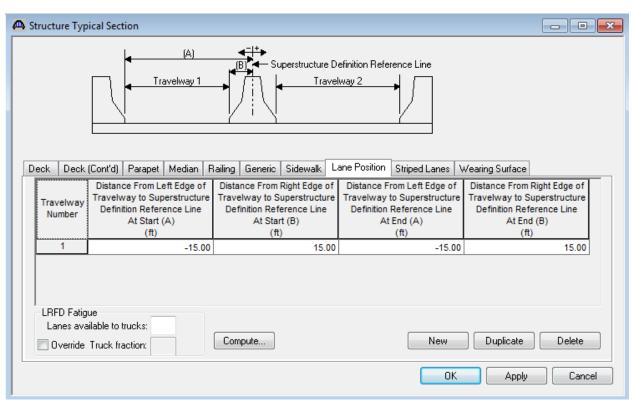


This superstructure does not contain any transverse or bearing stiffeners so we will not create any stiffener definitions.

Enter the locations of the floorbeam members as follows.

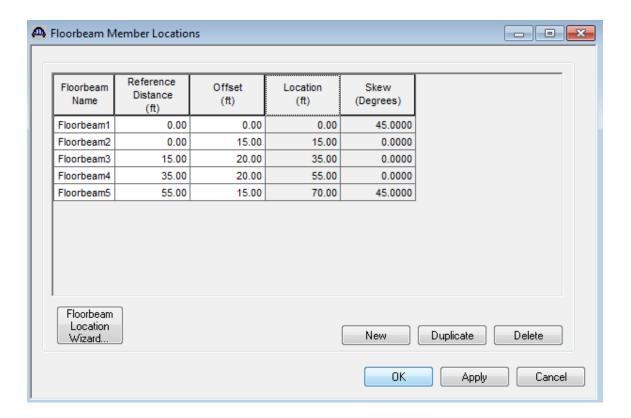


The Skew column displays the skew angle of the floorbeam. Floorbeams that intersect the superstructure definition reference line at the same location as a support line for the main members are assumed to be at the same skew angle as the support line. Otherwise, all floorbeams are assumed to be perpendicular to the superstructure definition reference line. If this superstructure had floorbeams that were skewed and not located at a support line, we would have to use a floor line superstructure definition to describe this superstructure.

An important item to note about a floor system with skewed support lines is that the location of the superstructure definition reference line within the structure typical section is important. Consider the following example where the superstructure definition reference line is located along the left main girder. Floorbeam 1 and 2 will both be located at 0' which is the girder support line. Therefore both Floorbeam 1 and 2 will display the skew angle as 45 degrees. Shifting the location of the superstructure definition reference line will cause the floorbeams to have different locations and then only Floorbeam 1 will be considered to be along the girder support line and skewed.

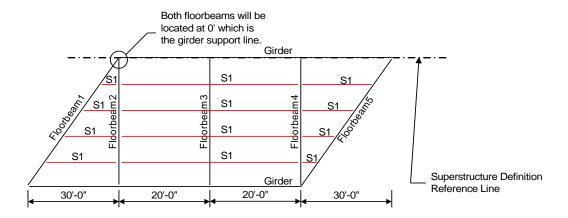



The framing plan schematic will now show the floorbeam members as dashed locations. The superstructure definition reference line is now displayed in the schematic since it was located in the Structure Typical Section window.

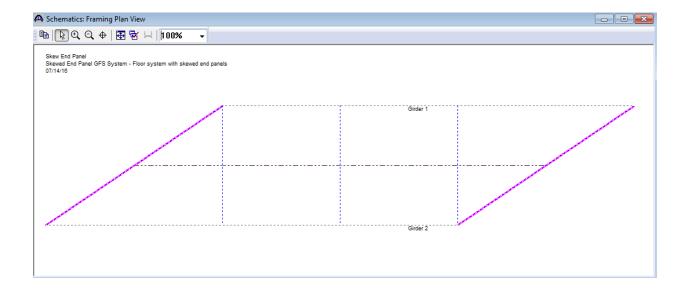

Double click on STRINGER GROUP DEFINITION GEOMETRY to define the geometry for a stringer group definition. A stringer group definition contains data regarding a portion of the structure where the stringers are structurally continuous. The stringers in this structure have two different types of span data. The skewed end panels are simple span and the interior panels are 2 span continuous. We will create 2 stringer group definitions and then assign them to the appropriate stringer units.

Enter the following data to describe the stringer group definition we will assign to the end panels.

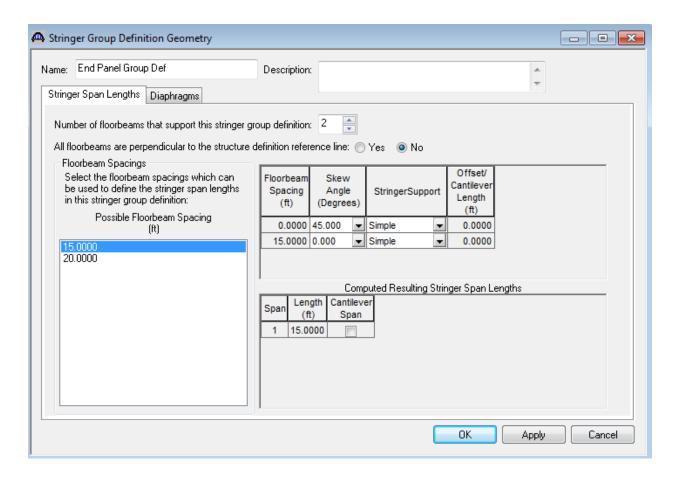

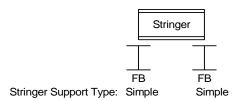


In the skewed end panels, the stringers are 1 simple span over 2 floorbeams.

The stringers in this stringer group definition are supported by 2 floorbeams. The Possible Floorbeam Spacing list shows all of the possible combinations of adjacent floorbeam spacings between 2 floorbeams. BrR uses the information shown in the Floorbeam Member Locations window to produce this list. The spacings displayed in this list are measured along the superstructure definition reference line. Select the "15" value in this list.


The end floorbeam is not perpendicular to the superstructure definition reference line so select "No" for that data field. It is necessary to know which floorbeams in the stringer group definition are skewed because skewed floorbeams will cause the stringer span lengths in the stringer group definition to vary. In the floorbeam spacing grid, select the skew angle of the first floorbeam as 45 degrees. When this stringer group definition is assigned to a stringer unit later in the Floor System Geometry window, BrR will check to ensure that any floorbeams that fall along the girder support lines have the same skew as the support line. The stringer support types are "Simple" in this example.


The computed resulting stringer span lengths grid displays the length of the spans measured along the superstructure definition reference line. The actual span lengths of each stringer will vary due to the skew of the first floorbeam. Based on the geometry entered on the Structure Framing Plan Details, Structure Typical Section windows and this window, BrR will know that the span lengths of the stringers in this stringer group definition are as follows:

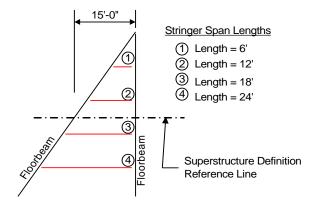

The stringers in this stringer group definition do not have any diaphragms so the description is complete.


The stringer group definition that will be applied to the interior panels is defined as follows.

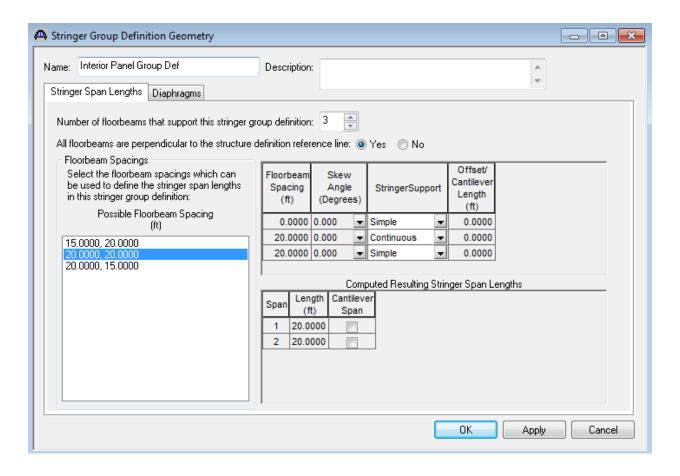

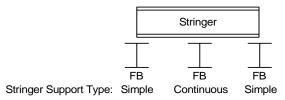


In the interior panels, the stringers are 2 continuous spans over 3 floorbeams.

Select the Diaphragms tab to enter diaphragm spacing for the stringer group definition. The stringers have diaphragms at each end and one at the center of the stringer elevation. Enter the following data for Diaphragm Bay 1 and use the "Copy Bay To…" button to copy the data to the other diaphragm bays.

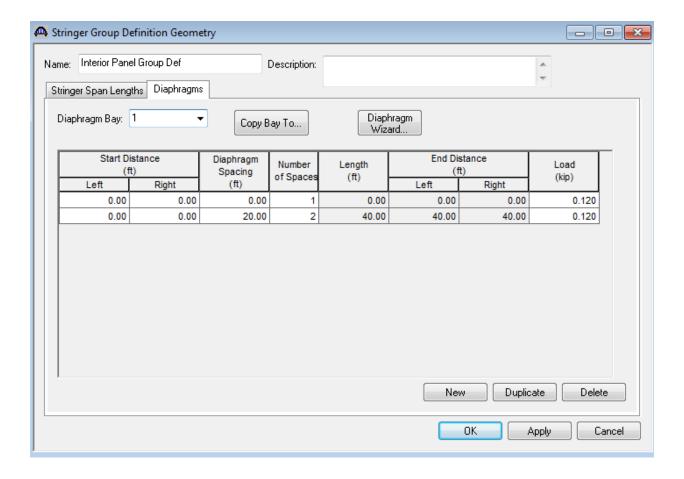


Assign Stringer Group Definitions to Stringer Units


Since this example is focusing on the geometry of the system, skip over defining the floorbeam and stringer member definitions for now and open the Floor System Geometry window. Enter the following data to assign the stringer group definitions to the stringer units.

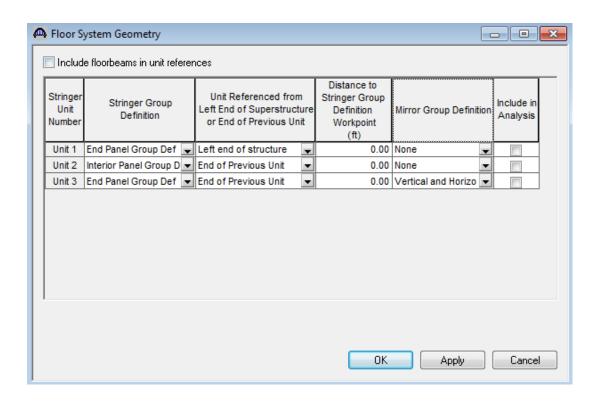

When the "End Panel Group Def" is assigned to Stringer Unit 3, it must be mirrored both vertically and horizontally so that the stringer members are properly located.

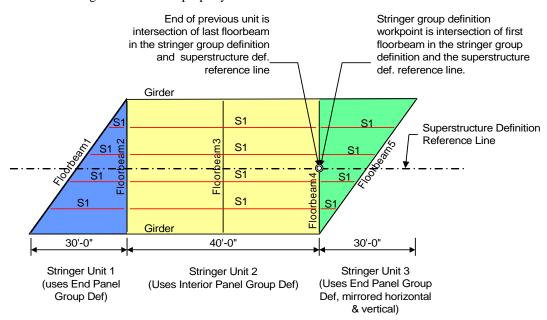



The Structure Framing Plan schematic appears as follows. The girder, floorbeam and stringer members all appear as dashed lines because we have not defined any member alternatives for any members.

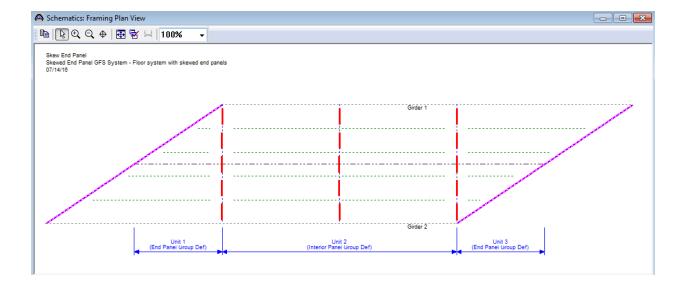

Defining Stringer Member Definitions


We will now create one of the stringer member definitions for a stringer in the end panel. Since the stringer member lengths vary in this end panel, we will have to create a stringer member definition for each stringer member in the panel. For this example, we will create a stringer member definition that will be applied to the first stringer in the structure typical section. This stringer member has a length of 6'.

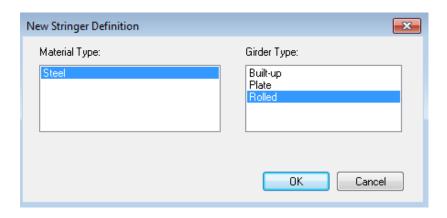


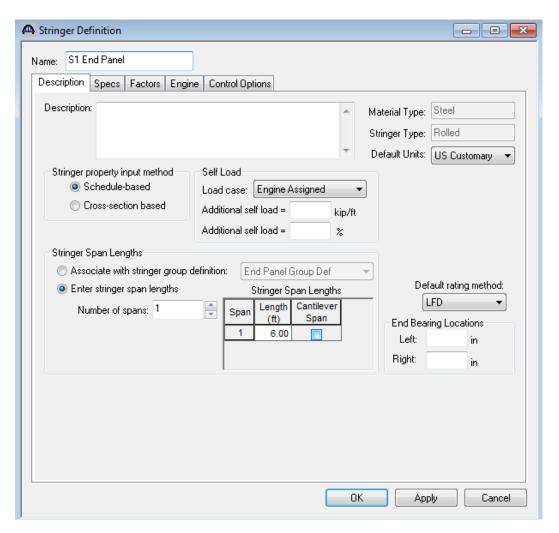



When we define the stringer span lengths, we cannot use the "Associate with stringer group definition" option. Selecting that button would mean that the stringer definition has a length equal to the stringer group definition as measured along the superstructure definition reference line. If we did that, the stringer definition would have a length of 15' not the 6' that we need. Therefore, select the "Enter stringer span lengths" radio button and enter the stringer span length in the grid.


Describe the stringer member definition as follows.

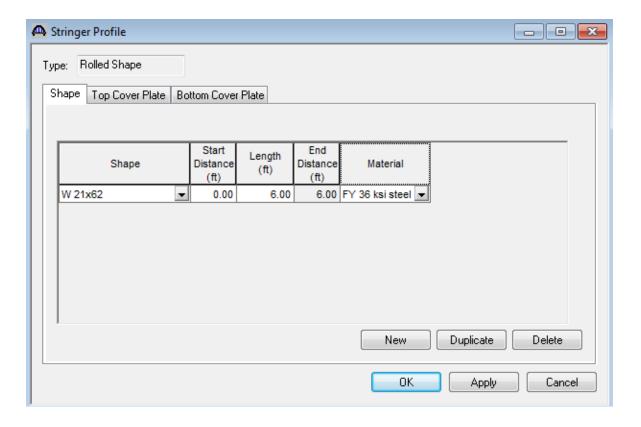

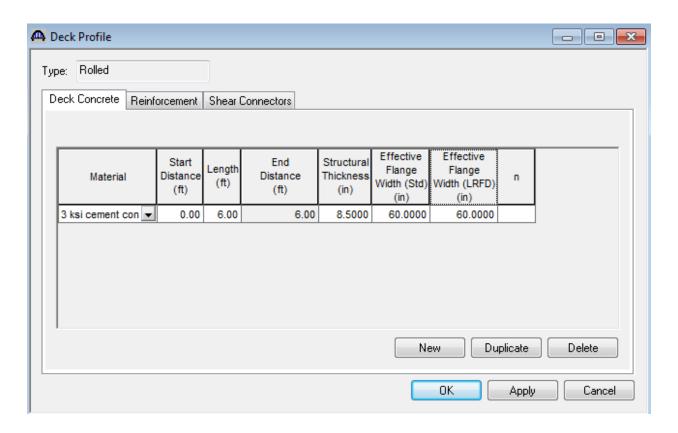

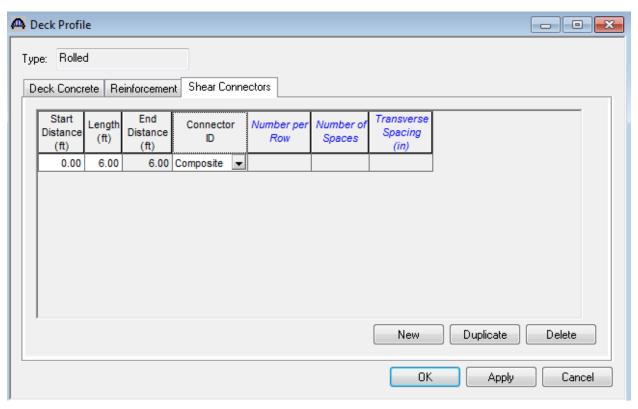


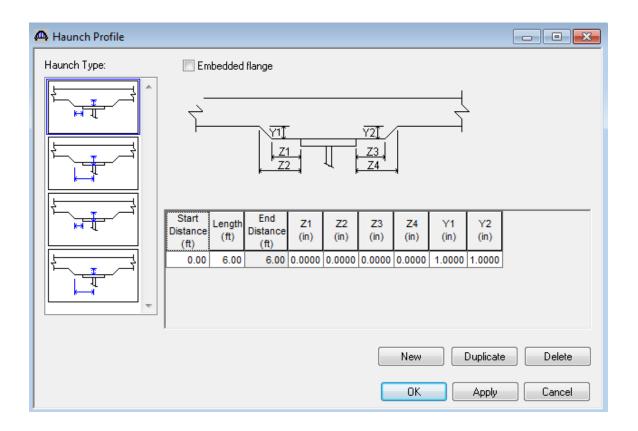

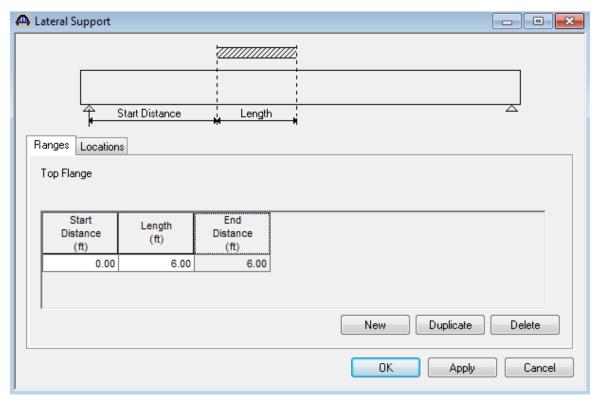


The description of the stringer member definition is complete.

Now create a stringer member alternative for stringer member "Unit 1 Stringer 1" and assign this stringer definition to it.

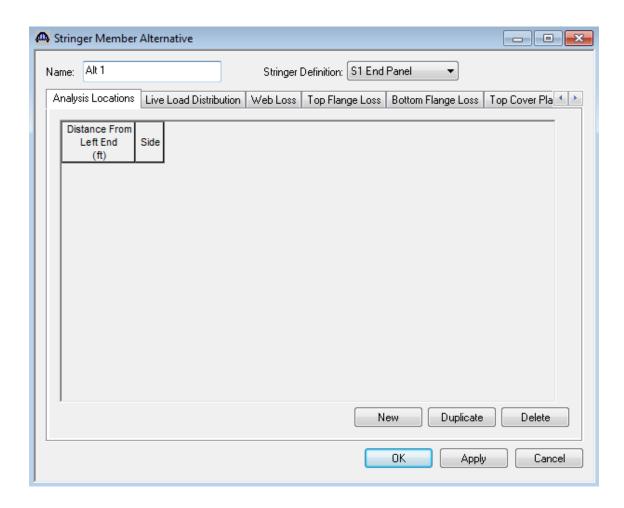


BrR checks to ensure that the length of the stringer definition matches the length of the stringer member alternative to which you are assigning it when you hit OK or Apply.

This stringer definition can also be applied to a stringer member alternative for stringer member "Unit 3 Stringer 4" since that member is the mirror image of member "Unit 1 Stringer 1". The following shows the Structure Framing Plan schematic after this stringer definition has been applied to these 2 stringer members. These 2 stringer members are displayed as solid lines since they have stringer member alternatives marked as "Existing".

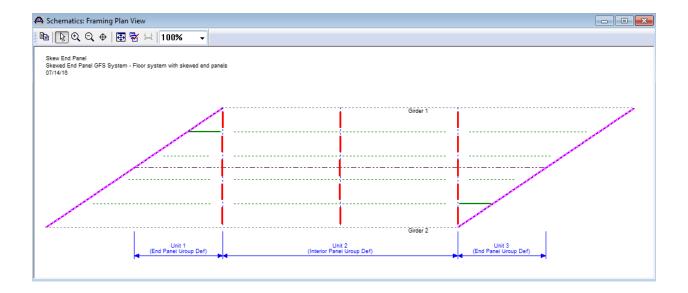


An important item to note is that a stringer member definition is not mirrored when it is assigned to a stringer member that belongs to a stringer unit where the stringer group definition is mirrored. The following sketches best explain this.

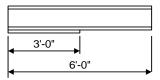


Stringer Member Definition A

Assume Stringer Member Definition A has a cover plate over the first 3' of its length. When this definition is assigned to Unit 1 Stringer 1, the cover plate is located at the left end of the member, adjacent to Floorbeam 1. When this definition is assigned to Unit 3 Stringer 4, the cover plate is still located at the left end of the member, this time adjacent to Floorbeam 4 instead of Floorbeam 5.

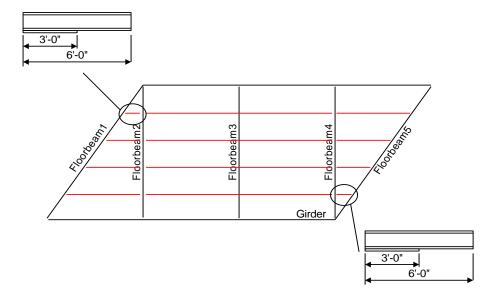

In order to have the BrR model consider the cover plate at the right end of Unit 3 Stringer 4, you must create a new stringer member definition with the cover plate in that location. The following Stringer Member Definition B illustrates this.

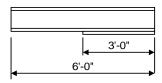

Stringer Member Definition B

Last Modified: 8/30/2016

Continue with this example on your own. Create the remaining stringer and floorbeam member definitions and assign them to the member alternatives. Create girder member alternatives for the girder members and rate the member alternatives in this superstructure definition.

Last Modified: 8/30/2016