

TIBEK

Food Processor

INSTRUCTION MANUAL



MODEL: HGM409

READ THIS MANUAL THOROUGHLY
BEFORE USING AND SAVE IT FOR FUTURE REFERENCE

HOUSEHOLD USE ONLY



Shenzhen Luoteman Trade Limited Co.,LTD
Longgang District Longcheng Street Longxiang Avenue
No. 5105 Yuanjing Garden No. 209 ShenZhen GuangDong 518000
Facebook Page: <https://www.facebook.com/TIBEK.CC/>

Made in China



Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Never immerse the motor unit in water or any other liquid, nor rinse it under the tap.

Warning

- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Never connect this appliance to a timer switch in order to avoid a hazardous situation.
- Do not use the appliance if the mains cord, the plug or other parts are damaged.
- If the mains cord is damaged, you must have it replaced by the supplier, a service center authorized by the Supplier or similar qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never let the appliance run unattended.
- Never use your fingers or an object (e.g. a spatula) to push ingredients down the feeding tube while the appliance is running. Only use the pusher for this purpose.
- Be very careful when you handle the discs or food processor blade unit. Be especially careful when you

remove them from the food processor bowl, when you empty the bowl and when you clean it. Its cutting edges are very sharp.

Caution

- Never switch off the appliance by turning the food processor bowl. Always switch off the appliance by turning the speed control knob to OFF.
- Switch off the appliance before you detach any accessory.
- Unplug the appliance immediately after use.
- Always unplug the appliance before you reach into the processor bowl with your fingers or an object (e.g. a spatula).
- Wait until moving parts stop running before you remove the lid of the bowls.
- Never use any accessories or parts from other manufacturers or that Supplier does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not exceed the maximum content indicated on the food processor bowl.
- Consult the tables in this user manual for the correct quantities and processing times.
- Thoroughly clean the parts that come into contact with food before you use the appliance for the first time.
- Let hot ingredients cool down before you process them (max. temperature 80°C/175°F).

Built-in safety lock

This feature ensures that you can only switch on the appliance if you have assembled the processor bowl with blade unit, on the motor unit. If the food processor bowl, is assembled correctly, i.e. when it has been turned in the direction of the 'locked' symbol as far as possible ('click'), the built-in safety lock will be unlocked.

Chopping Meat

	1	Place the Bowl on the Main Body, the angle between the handle and the main body safety switch is about 55 degrees (before placing, make sure that the Main Body is on a flat desktop and it is not shaking).
	2	Hold the handle of the Bowl and turn it clockwise into the Main Body. When the "▼" on the Bowl is opposite to the Main Body "☒" or a "click" is heard, it indicates that the Bowl has been rotated in the right position. The product does not work if the Bowl is not in the right position.
	3	Put the Drive Shaft into the Bowl.
	4	Put the Chopping Blade on the Drive Shaft.
	5	Put the meat into the Bowl. Food that needs to be processed should not exceed 500g.


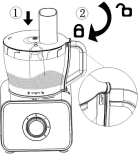

	6	<ol style="list-style-type: none"> 1 Cover the Bowl with the Bowl Lid. 2 Rotate the Bowl Lid lockwise into the Bowl. When the "click" is heard, it means that the Bowl Lid has been rotated in the right position. The product does not work if the Bowl Lid is not in the right position.
	7	Insert the power cord into the power supply, and rotate the switch to 1 or 2 shift and start working. Each working time should be less than 30 seconds.

Caution:


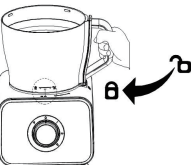
- 1) Make sure that the Chopping Blade is placed first when putting the ingredients in the Bowl, so as to avoid the difficulty to assemble Chopping Blade.
- 2) The Bowl Lid should be in the right position to avoid not working.
- 3) Do not process hard food materials, such as coffee beans, ice cubes, etc. to avoid cracking Bowl and deformation blunt of Chopping Blade;
- 4) Ingredient should not exceed the maximum calibration line of the Bowl, otherwise the crushing effect and life of the product will be affected.
- 5) When there is ingredient sticking to the Chopping Blade and Bowl, please be sure to turn off the power, then take out the food.




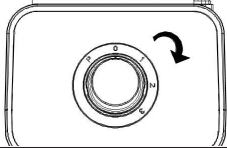

Kneading Dough

	1	Place the Bowl on the Main Body, the angle between the handle and the main body safety switch is about 55 degrees (before placing, make sure that the Main Body is on a flat desktop and it is not shaking).
	2	Hold the handle of the Bowl and turn it clockwise into the Main Body. When the "▼" on the Bowl is opposite to the Main Body "☒" or a "click" is heard, it indicates that the Bowl has been rotated in the right position. The product does not work if the Bowl is not in the right position.
	3	Put the Drive Shaft into the Bowl.
	4	Put the Dough Hook on the Drive Shaft.

	5	Put the flour into the Bowl. The flour should not exceed 500g.
	6	<ol style="list-style-type: none"> 1 Cover the Bowl with the Bowl Lid. 2 Rotate the Bowl Lid clockwise into the Bowl. When the "click" is heard, it means that the Bowl Lid has been rotated in the right position. The product does not work if the Bowl Lid is not in the right position.
	7	<ol style="list-style-type: none"> 1 Insert the power cord into the power supply, and rotate the switch to 1 shift and start working. Each working time should be less than 3 minutes. 2 Pour slowly water into the Bowl through chute on the Bowl Lid when the product start working. Don't pour the water too fast.
<p>Caution:</p> <ol style="list-style-type: none"> 1) Make sure that the Dough Hook is placed first when pouring the flour into the Bowl, so as to avoid the difficulty to assemble the Dough Hook. 2) Do not process hard food materials, such as coffee beans, ice cubes, etc. to avoid cracking Bowl and deformation blunt of Dough Hook. 3) Ingredient should not exceed the maximum calibration line of the Bowl, otherwise the crushing effect and life of the product will be affected. 4) When there is ingredient sticking to the Dough Hook and Bowl, please be sure to turn off the power, then take out the food. 5) Please put in the appropriate proportion of flour first, then start the machine to ensure that the Dough Hook works first, then evenly and slowly pour into the appropriate proportion of water, do not pour water too fast, so that water can not form paste with the flour. 		

Slicing & Shredding

	1	Place the Bowl on the Main Body, the angle between the handle and the main body safety switch is about 55 degrees (before placing, make sure that the Main Body is on a flat desktop and it is not shaking).
	2	Hold the handle of the Bowl and turn it clockwise into the Main Body. When the "▼" on the Bowl is opposite to the Main Body "▲" or a "click" is heard, it indicates that the Bowl has been rotated in the right position. The product does not work if the Bowl is not in the right position.

	2	Put the Drive Shaft into the Bowl.
	4	Place the Adjustable Slicing Disc on the Drive Shaft. (Three types of Disc can be selected according to the processing requirements)
	5	<ol style="list-style-type: none"> 1 Cover the Bowl with the Bowl Lid. 2 Rotate the Bowl Lid clockwise into the Bowl. When the "click" is heard, it means that the Bowl Lid has been rotated in the right position. The product does not work if the Bowl Lid is not in the right position.
	6	Insert the power cord into the power supply, and rotate the switch to 1 or 2 shift and start working. Each working time should be less than 30 seconds.
	7	<ol style="list-style-type: none"> 1 Put slowly food material to the Bowl through the chute on the Bowl Lid. 2 Gently use the Double Pusher to push the ingredients through the chute.
<p>Caution:</p> <ol style="list-style-type: none"> 1) Before processing, please make sure that the size of food materials can be fully put into the chute. 2) When you put the food into the chute, don't push hard by the Double Pusher to avoid affecting the processing effect and stuck. 3) Do not put hand or other objects (such as knives, forks, spoons, chopsticks, etc.) into the chute, only use the Double Pusher. 4) Ingredient should not exceed the maximum calibration line of the Bowl, otherwise the crushing effect and life of the product will be affected. 5) When the food stuck on the Disc, please turn off the power first, and then take out the food. 		



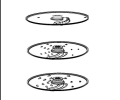
Safety

- Don't touch the sharp blades. Keep the blade unit away from children.

Important

- Switch off as soon as you've got the right consistency.
- Don't process spices – they may damage the plastic.
- Use for dry ingredients only.

Choosing a speed for all functions

Tool/ Attachment	Picture	Function	Speed	Maximum capacities	KB time	Rest time	Empty working KB time
Chopping blade		Chopping meat Cutting vegetables	Min. – Max.	500g	30sec	1min.	30sec
Dough tool (plastic knife)		Dough making Dough kneading	Min.	500g flour 280ml water	30sec	1min.	30sec
Discs - slicing/ shredding/ chipping/		Slicing/ shredding/ chipping food and vegetables such as Carrots, Cheese, Cucumber, etc	Mid. – Max.	1200ml	1min.	2min.	30sec

EN | Cleaning

- Always unplug the appliance before you remove accessories or clean the motor unit.
- You can quickly and easily pre-clean the food processor bowl with the pulse button. Simply add some water and washing-up liquid to the dirty bowl and secure the lid. Then use the pulse button until the bowl is clean. When you pre-clean the food processor bowl in this way, make sure the food processor blade is assembled in the bowl.



EN | Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

EN | Troubleshooting

Question	Answer
The appliance does not go on.	Make sure that all assembly indications (on the lid of the bowl, on the bowl, on the motor unit) are aligned.
The appliance suddenly stops running.	The lid of the bowl may have become undone during a heavy processing job. Close the lid properly. The appliance immediately starts working again. The processing job is too heavy. Set the control knob to OFF to switch off the appliance and remove the mains plug from the wall socket. Then let the appliance cool down to room temperature. Plug in the appliance and switch it on again. Process smaller batches.
Can I clean all removable parts in the dishwasher?	Yes, except the motor unit and the protection cap for the blade unit.
What does 'pulse' mean?	When you press the Pulse button, the appliance will run at its highest speed as long as you keep pressing the button. Using the Pulse button is recommended if you want to have more control over the processing job, for instance when you are chopping.
Why does the motor produce an unpleasant smell during processing?	It is very common for a new appliance to give off an unpleasant smell or emit some smoke the first few times it is used. This phenomenon will stop after you have used the appliance a number of times. The appliance may also give off an unpleasant smell or emit some smoke if it has been used too long. In that case you have to switch the appliance off and let it cool down for 60 minutes.
What should I do when the blade unit or motor gets blocked during processing?	Switch the appliance off and use a spatula to dislodge the ingredients that block the blade unit. We also recommend processing a smaller quantity.