

Portable DVD for Android™



For TV • TV BOX Users
User's Guide

Contents

1. Product Configuration and Specifications	1
1) Package Included	1
2) Hardware Specifications	1
2. Connecting and Installing to Use	2
1) Android Device / OS Requirements	2
2) Connect Android Device and Install the App	2
3. How to Use “Disc Link Platinum” App	3
1) What is “Disc Link Platinum”?	3
2) App Installation	3
3) Using the function	4
① Running the App	4
② Disc Recognition	5
③ DVD Video Playback	5
④ End DVD Video Playback	5
⑤ Disc Explorer	6
⑥ Audio Player	7
⑦ Audio CD Ripper	8
⑧ Data Backup	9
⑨ Audio CD Burner	10
4. How to Use “True DVD for Android TV” App	11
1) What is the “True DVD for Android TV”?	11
2) App Installation	11
3) DVD Playback and Control	12
① How to Start Playing	12
② How to control during playback	14
5. Troubleshooting	15
6. Contact	17

1. Product Configuration and Specifications

1) Package Included



Portable DVD for Android




Cyberlink Media Suite for DVD



Type A USB Cable
(For TV, PC)



Type C USB Cable
(For Smart Device)

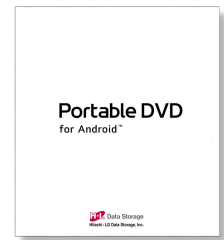

Manual

2) Hardware Specifications

Loading Type	Tray Type
Power Connection	USB Cable
Environment	Operating: Temperature 5 ~ 40°C, Humidity 15 ~ 85% Storage: Temperature -30 ~ 60°C, Humidity 10 ~ 90%
Reliability	MTTF: 60,000 POH (Duty 10%) Disc Tray Loading: 10,000 times
Interface	USB 2.0 (3.0 Compatible)
Dimensions (W x H x D)	141 mm x 14 mm x 136.5 mm
Net Weight	200 g

※ This specifications can be changed for improvement without prior notice.

2. Connecting and Installing to Use

1) Android Device / OS Requirements

Category	Tablet & Smart Phone	TV	Set-Top Box & TV Box
Device	Android device that uses Google Play with USB-C port	Android device that uses Google Play with USB-A port	
OS	Android OS version 8.0 +	Android OS version 8.0 +	


2) Connect Android Device and Install the App

➤ Android TV(Set-Top Box, TV Box)


- Move to the TV home menu and select 'Google Play Store' on the TV app.
- Search 'Dislink Platinum' or 'True DVD for Android TV' on 'Google Play Store' using remote controller or voice recognition and install the app.
- Connect the drive and TV device with USB type A cable.



① Connect to the Android TV

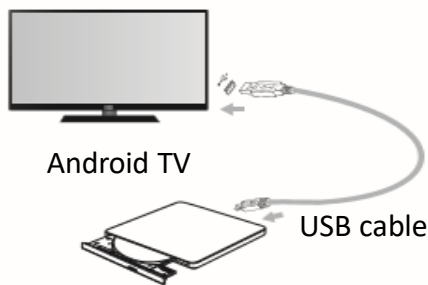

② Connect to the Android TV BOX(STB)

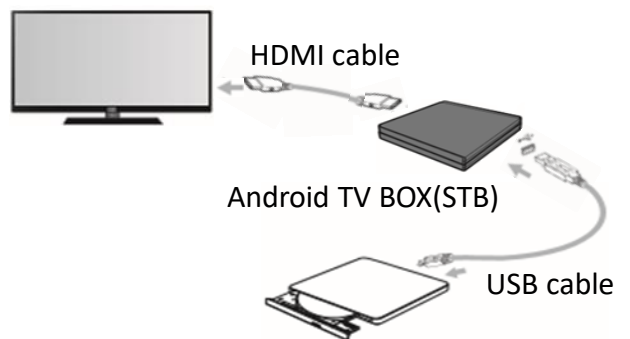

- ✘ The user must have a 'Google Play Store' account for the initial access.
- ✘ Connect USB cable directly to Android TV or Android TV BOX(STB) USB port.
Connection using USB Hub may cause low power supply and malfunction of the drive.

3. How to Use “Disc Link Platinum” App

1) What is “Disc Link Platinum”?


- ① “Disc Link Platinum” is the app can be installed on [Android TV / TV BOX(STB) / Projector] (hereafter referred to as “Android TV”) to play or copy CD / DVD files, play audio files, rip audio CDs, back data up, burn audio CDs.
- ② To use CD/DVD function of the “Disc Link Platinum” app, a compatible DVD drive must be connected to the Android TV.

Functions	Description	Supported Discs
DISC EXPLORER	Play discs and files on Android devices and copy to Android devices	CD-ROM, CD-R, DVD-ROM(SL/DL), DVD-R(SL/DL), DVD+R(SL/DL), Internal Storage, SD card
AUDIO PLAYER	Play Audio CD	CD-ROM, CD-R, CD-RW
AUDIO CD RIPPER	Extract selected song from audio CD to Android device	CD-ROM, CD-R, CD-RW
DATA BACKUP	Burn selected data files to the disc	CD-R, DVD-R, DVD+R
AUDIO CD BURNER	Burn audio files to the disc	CD-R

2) App Installation

Download the free “Disc Link Platinum” app from ‘Google Play Store’.

- ① Move to the home screen of your Android TV.
- ② Launch ‘Google Play Store’ app.
- ③ Search the ‘Disc Link Platinum’ on ‘Google Play Store’ and install the app.

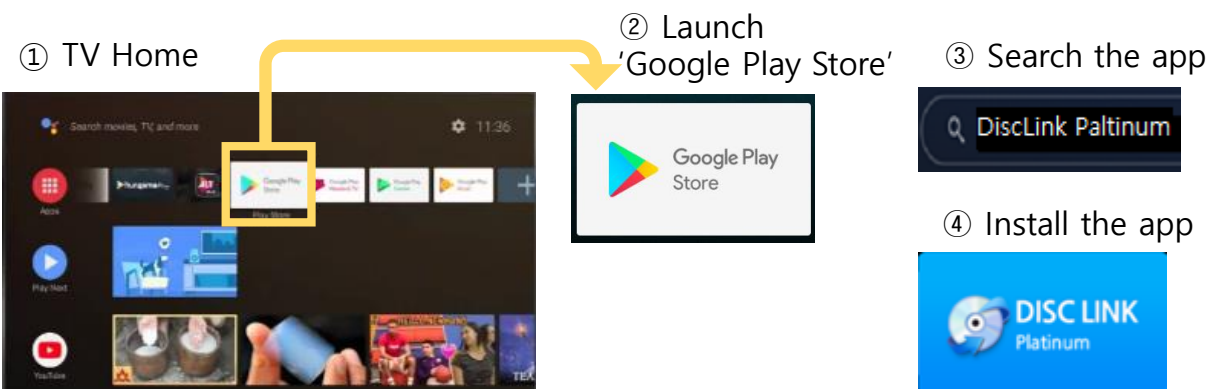


3. How to Use “Disc Link Platinum” App


3) Using the function

➤ Running the App

- ① Connect DVD drive and your Android TV with USB cable provided in the package.
- ② In the dialog for selecting execution, select "Disc Link Platinum", or select the installed "Disc Link Platinum" from the list of apps on the TV home screen.

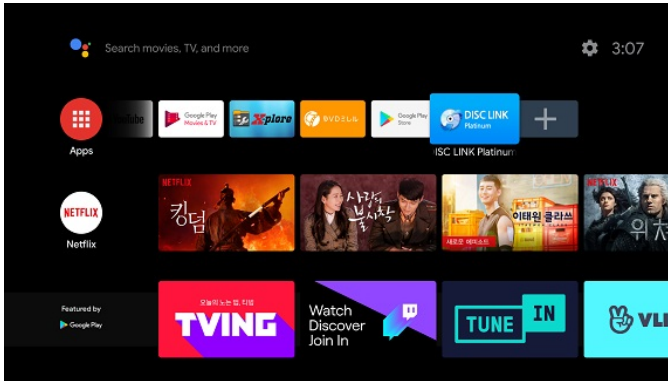

- ③ When you launch the app, “Disc Explorer” appears on the first screen.

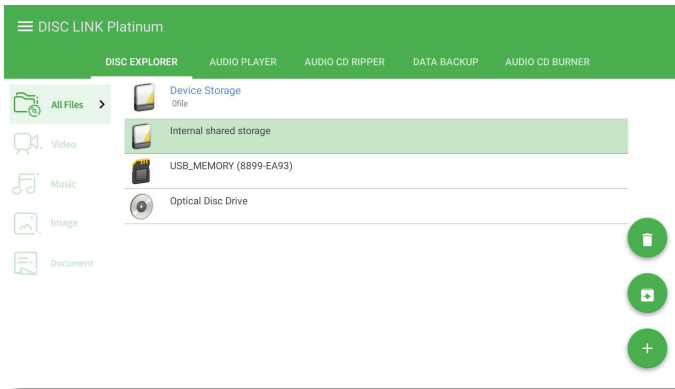


3. How to Use “Disc Link Platinum” App

➤ Disc Recognition


When you insert your CD / DVD into the connected DVD drive, the main functions required for the disc are automatically executed after the “Recognition” process.

- Data Disc : Disc Explorer
- DVD-Video : DVD Player (True DVD for Android TV)
- Audio CD : Play Audio CD
- Blank Disc : Data Backup (Blank CD-R, DVD±R)

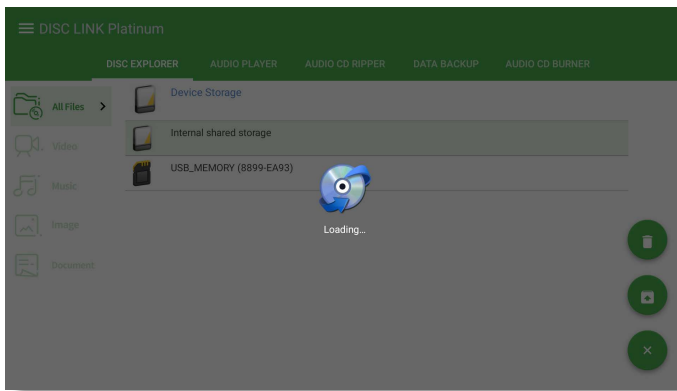

➤ DVD Video Playback

- ① Insert the DVD-Video into the DVD drive while running.
- ② When confirmed as the DVD-Video disc, DVD-Video Player (True DVD for Android TV) will launch automatically.

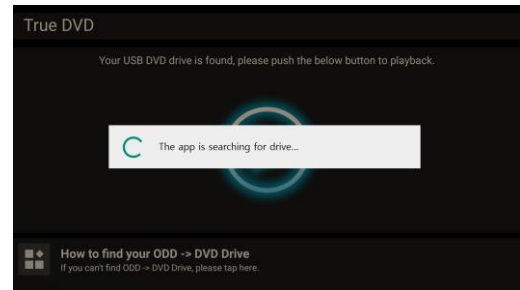

➤ End DVD Video Playback


- ① To exit while watching a DVD-Video, click the "Back" button on the remote control twice in a row.
- ② DVD-Video Player (True DVD for Android TV) quits and returns to the Disc Link.

3. How to Use “Disc Link Platinum” App

➤ Disc Explorer

Play disc files and copy, delete, etc. on the Android TV.


- Device Storage : Android TV internal storage
- External Storage : USB Memory, External HDD, etc.
- Optical Disc Drive : CD, DVD Discs

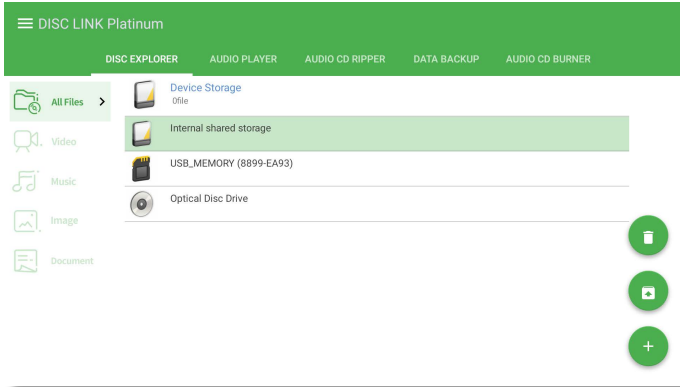

➤ Device Storage / External Storage / Optical Disc Drive

Represents the data recorded on each device, which can be executed (opened), copied and deleted.



※ Due to the limited function of Android TV, it can be copied to the TV's internal storage only.

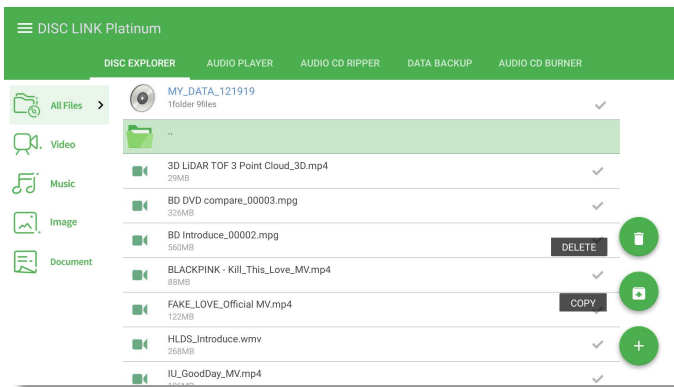

3. How to Use “Disc Link Platinum” App

➤ Audio Player


Play audio CD through Android TV and provide various playback screens for user convenience.

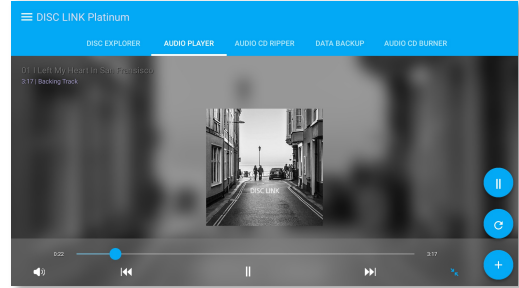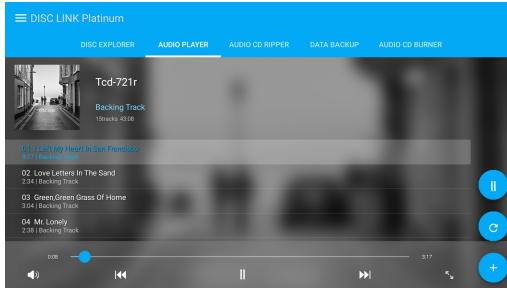

➤ Gracenote

Support album cover, title & track information display through Gracenote. (Network connection required)

※ Gracenote starts immediately after recognition of the audio CD, and the information is displayed with playback screen.

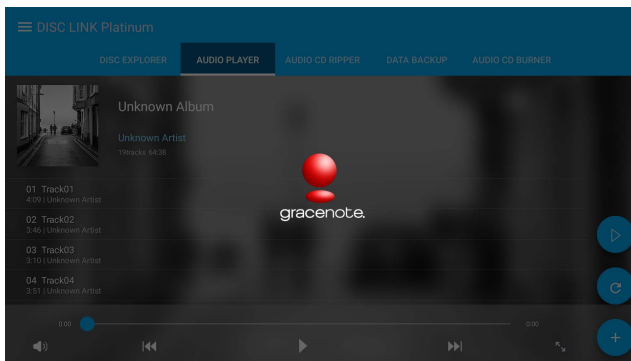


3. How to Use “Disc Link Platinum” App




➤ Audio CD Ripper

Extract the track of the desired audio CD to the Android TV.

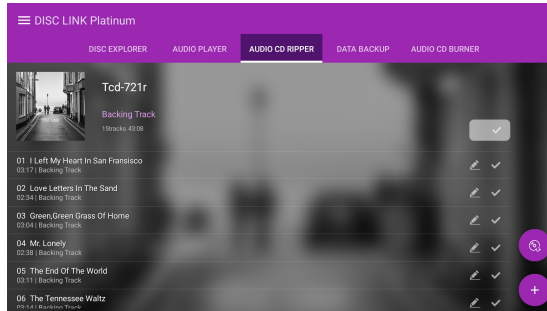※ The default extraction path is saved in the / DiscLink folder of the internal storage as a folder named for the Title.




※ Audio CD Ripper Function

-  : Select all Audio tracks
-  : Rename selected tracks during extraction
-  : Select the Audio track

※ Audio CD Ripping Format

FLAC (Lossless)	M4A	WAV	MP3
24 bit	320 kbps	Default	320 kbps
16 bit	192 kbps		192 kbps
	128 kbps		128 kbps


※ Audio CD Ripping Process

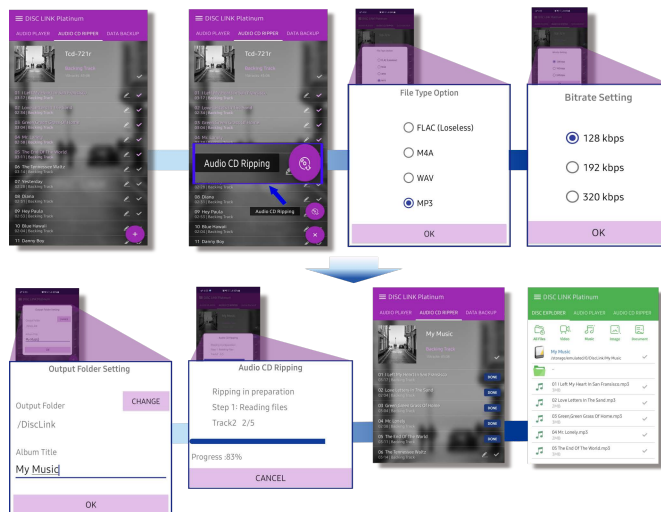


3. How to Use “Disc Link Platinum” App

➤ Data Backup

Record (Save) Android TV data to the disc and save internal storage, external storage files to the recordable CD or DVD

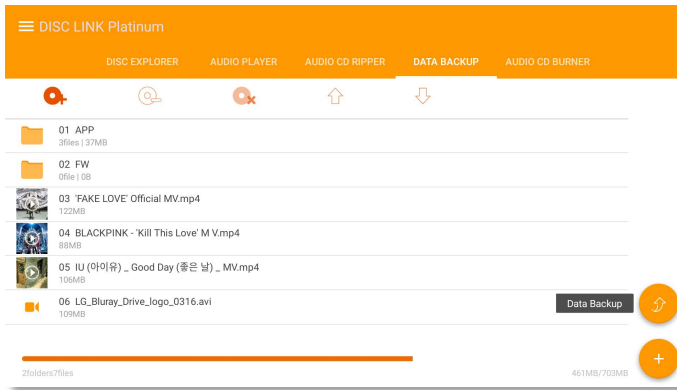

※ Data Backup Button

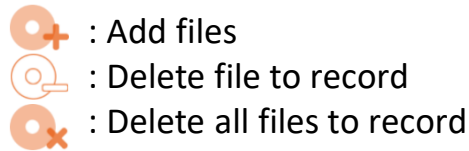

※ Recordable Disc Format : CD-R, DVD-R, DVD+R


※ Data Backup Process

- ① Insert a recordable disc into the DVD drive (Go to “Data Backup” automatically)
- ② Click "Add files" button and select a folder or file to back up
- ③ Start backup with “Data backup” button
- ④ Rename the backup disc (If necessary)
- ⑤ Data backup complete




3. How to Use “Disc Link Platinum” App

➤ Audio CD Burner

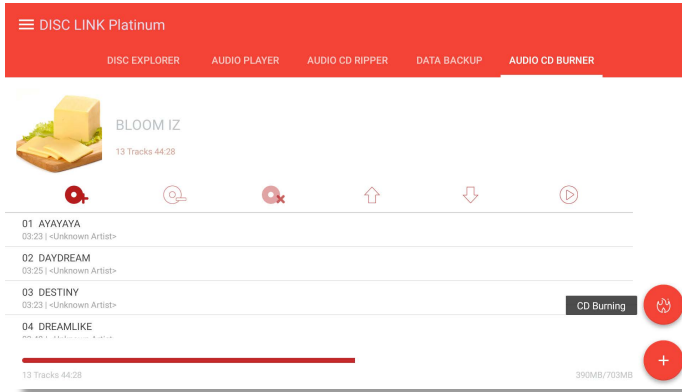After recording the audio file to disc, you can create audio CDs. Completed audio CD can be played on home or car CD players.



※ Audio CD Burner Button

-  : Add audio track
-  : Delete audio track to record
-  : Delete all audio tracks to record

※ Recordable Disc Format : CD-R

※ Recordable audio file format : FLAC, MP3, M4A, WAV, OGG, AAC

※ Audio CD Burning Process

- ① Insert a recordable CD-R disc into your DVD drive and go to Audio CD Burner
- ② Click the “+” square button and select album title and album image (The image appears when playing back the CD on the device you recorded it on with Disc Link)
- ③ Click "Add audio track" button and select the audio file to record
- ④ Start CD recording with “CD Burning” button
- ⑤ Audio CD burning complete

4. How to Use "True DVD for Android TV" App


1) What is "True DVD for Android TV"?

- ① "True DVD for Android TV" is the app to use to play DVD-Video on [Android TV, Android TV BOX(STB), Android Projector] (hereafter referred to as "Android TV").
- ② Connect the DVD drive that supports " True DVD for Android TV " app to your Android TV in order to play DVD.
- ③ Blu-ray discs can not be played.

2) App Installation

Download the free " True DVD for Android TV" app from 'Google Play Store'.

- ① Move to the home screen of your Android TV.
- ② Launch 'Google Play Store' app.
- ③ Search the 'True DVD for Android TV' on 'Google Play Store' and install the app.

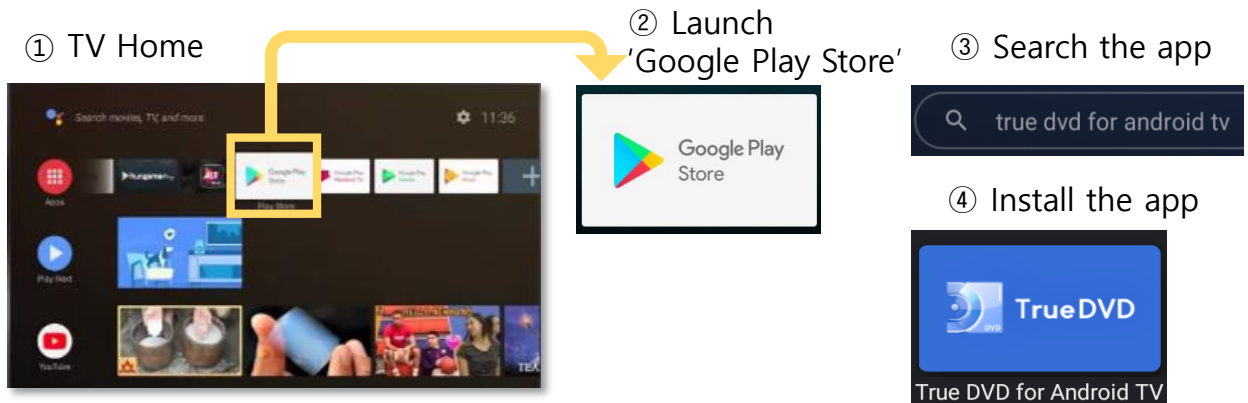


4. How to Use “True DVD for Android TV” App


3) DVD Playback and Control

➤ How to Start Playing


- ① Connect DVD drive and your Android TV with USB cable provided in the package.
- ② Insert a DVD-Video disc into the DVD drive.
- ③ Select and launch “True DVD for Android TV” app on your Android TV home screen, to start DVD playback.

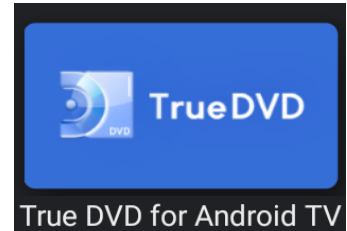

※ When below message appears, select “OK”.

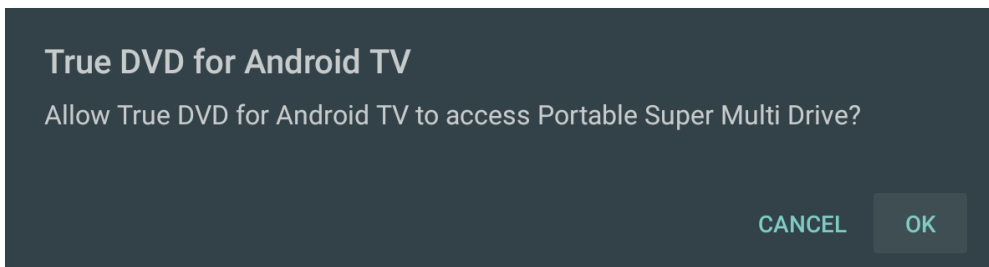


※ If playback does not start, select “▶” on the screen using remote control, and press [OK] button on the remote control.

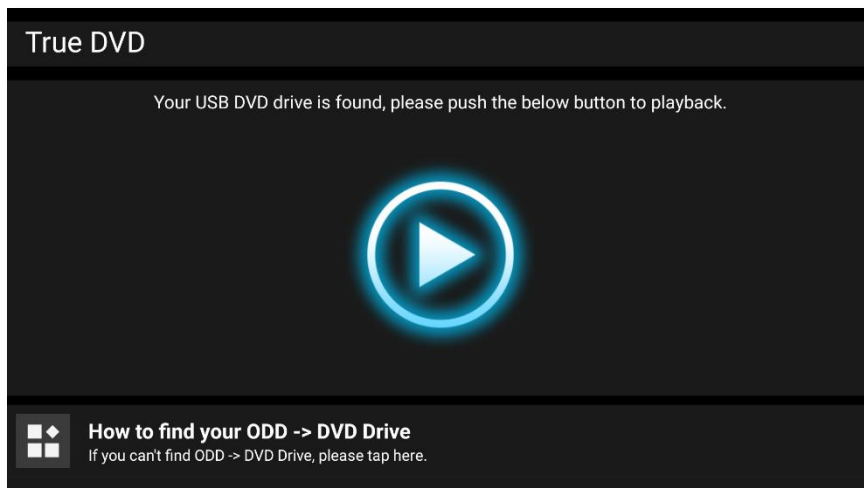

4. How to Use “True DVD for Android TV” App

- ※ To end playback, press the [Back] button twice on the remote control to return to the app's main screen.
- ※ End playback before ejecting the disc. If disc is ejected before ending playback, video may still play for a few more seconds even after ejection.
- ※ To play a DVD, the region code of the DVD disc must match the region code of the DVD drive.

If the region codes of the DVD disc and the drive doesn't match, a dialog will appear for changing the code of the drive.

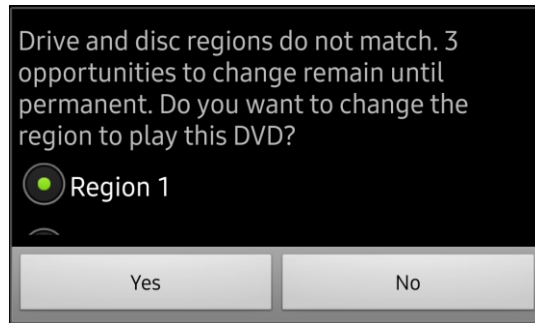


- The maximum number of region code changes is limited to 5 times. You can not change the region code again after the 5th change. Refer to DVD region code at the bottom of this page for region code.
- If the DVD region code is not matched, the DVD can not be played.
- If the region code has been changed up to 5 times, it is fixed with the region code that was changed for the last 5th time. And it is unable to restore.





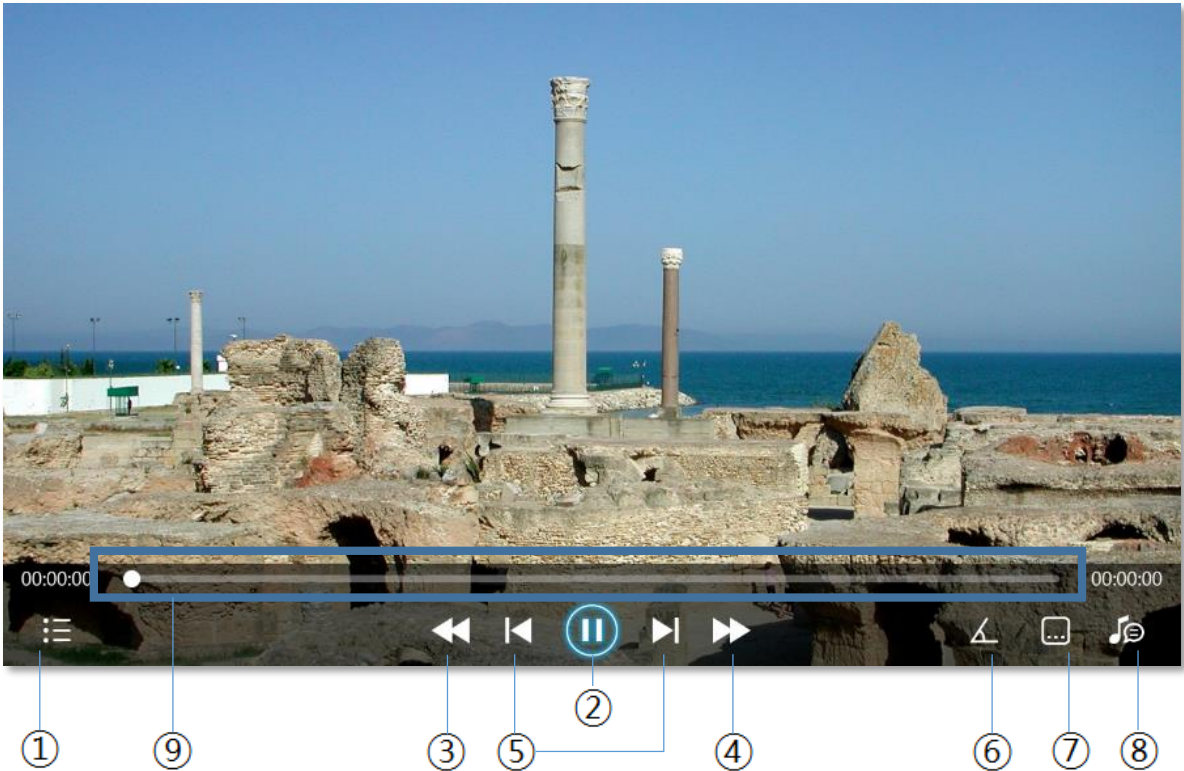


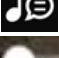

4. How to Use “True DVD for Android TV” App

➤ How to control during playback

To pause, rewind, fast forward, etc. during playback, push the [OK] button once to bring up the control screen at the bottom and select the icon to control. The control screen disappears within a few seconds if nothing is selected.



※ It will only show icons for features supported by the DVD-Video disc.

- ①  : Move to the DVD menu
- ②  : Pause / Play
- ③  : Rewind 10 seconds
- ④  : Fast forward 60 seconds
- ⑤  : Go to previous / next chapter
- ⑥  : DVD angle selection
- ⑦  : DVD subtitle selection
- ⑧  : DVD audio selection
- ⑨  : Adjust playback position with the [Left / Right] button on the remote control

5. Troubleshooting

➤ Recommended latest software updates

- Please update your Android device(TV/TV BOX(STB)) OS and app to the latest version to use this product without effort.
- Depending on the installation environment and hardware performance of your Android device, functionality of this product can not work well.

➤ If your DVD doesn't play

- When the video doesn't play, try ejecting and inserting the disc again.
- Turn off the app and restart.

➤ If the app is not responding

- If the app is not responding, turn off the app manually and restart.
(At Home screen – Go to "Setting" (Gear icon) – "App"
– Select "True DVD for Android TV" or "Disc Link Platinum" -
Select "Force Stop")

➤ To check the app version

- At Home screen – Go to "Setting" (Gear icon) – "App"
– Select "True DVD for Android TV" or "Disc Link Platinum"
- You can check the app version.

➤ To prevent app from starting automatically when connecting the DVD drive?

- At Home screen – Go to "Setting" (Gear icon) – "App"
– Select "True DVD for Android TV" or "Disc Link Platinum"
- Select "Clear defaults"
- App will not start automatically.

➤ If recording data disc can't be playable

- If you record and play a UHD (4K) level movie on a CD disc, exceeding Bit rate can cause playback delays or stops.
- In this case, it is recommended that you use it only for data backup purposes.

5. Troubleshooting

➤ If video transition is delayed while playing DVD video

- During chapter or menu transition in DVD video disc playback, please understand that it can be delayed a little bit due to the search operation.


➤ What codec does Disc Link Platinum support?

- Disc Link uses external Player / Codec for playback compatibility.
 - 1) DVD video, Audio CD : Playback using Player / Codec embedded in Disc Link
 - 2) General Video/Music files: Playback using external apps such as VLC player and MX player
- In case of an issue that does not support the codec, select another player to play

➤ What is DVD video region code?

- This is the code specified by each region of the world where DVD video is sold and used.
- When playing DVD video, change the region code via Disc Link / True DVD for Android TV. If the screen related on the region code does not appear, there is no need to change it.

Region code	Region
1	U.S.A, Canada
2	Europe, Japan, South Africa, Middle East
3	Southeast Asia, South Korea
4	South America, Oceania
5	Africa, Central Asia, Russia, North Korea
6	China

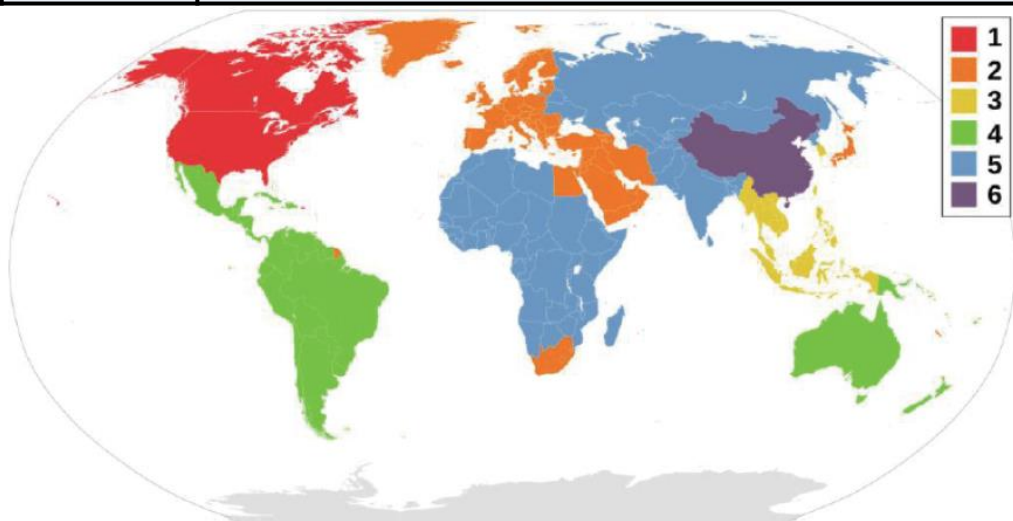

6. Contact

- To register product enquiries and suggestions
 - e-mail : disclink@hlds.co.kr
 - For faster support, please include the following information.
 - DVD drive product name, Android device product name and version
 - Detailed fault description (Exact contents of the error message)
 - Situation in which the problem has arisen