

How to replace an engine air filter on Audi A6 C6_4F


► VIDEO TUTORIAL

(i) Important!

This replacement procedure can be used for: AUDI A6 (4F2, C6) 2.0 TDI, AUDI A6 Avant (4F5, C6) 2.0 TDI

The steps may slightly vary depending on the car design.



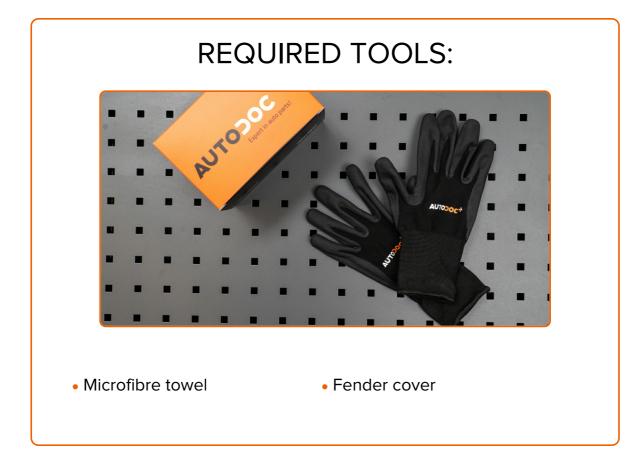



AUTODOC recommends:

- Follow the terms, recommendations and requirements of the part operation provided by the manufacturer.
- All work should be done with the engine stopped.

CARRY OUT REPLACEMENT IN THE FOLLOWING ORDER:



Open the bonnet.


1





Use a fender protection cover to prevent damaging paintwork and plastic parts of the car.



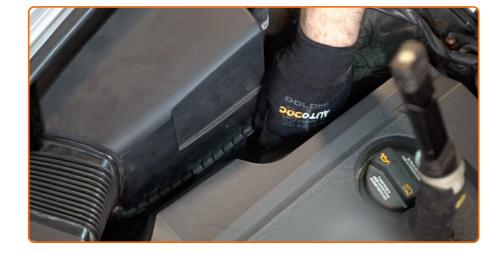

Slide the filter cover clips.





Take off the filter lid.






Remove the filter element from the filter housing.





Cover the air intake hose with a microfibre towel to prevent dust and dirt from getting into the system.



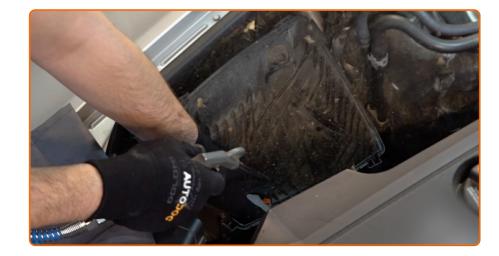

Clean the air filter cover and housing.

AUTODOC recommends:

• Before cleaning the air filter cover and housing, cover the air duct parts, mass airflow sensor (if available), throttle valve with a clean cloth.



9



Remove the microfibre towel from the air intake hose.




Insert a new filter element into the filter housing. Make sure that the filter edge fits tight to the housing.

AUTODOC recommends:

- Check out the correct location of the filter element. Do not skew.
- Take care to only use quality filters.
- During installation, make sure to prevent dust and dirt from getting into the air filter housing.



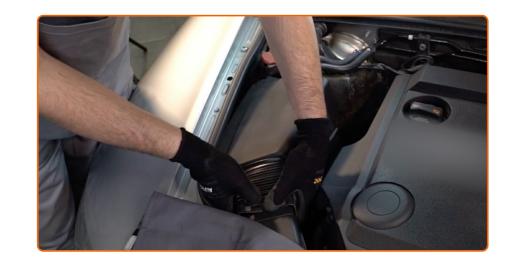

Reinstall the air filter cover. Fasten it.





Lock the retaining clips of the air filter housing cover.

12




Remove the fender protection cover.





Close the hood.



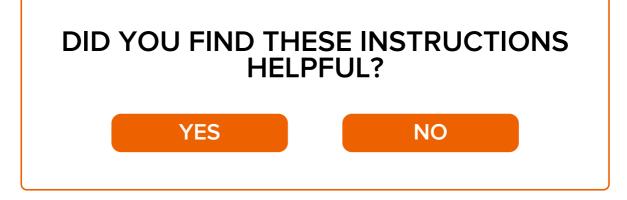



BECOME A MEMBER OF AUTODOC CLUB!



AUTODOC — TOP QUALITY AND AFFORDABLE CAR PARTS ONLINE








<section-header>

AIR FILTERS: A WIDE SELECTION

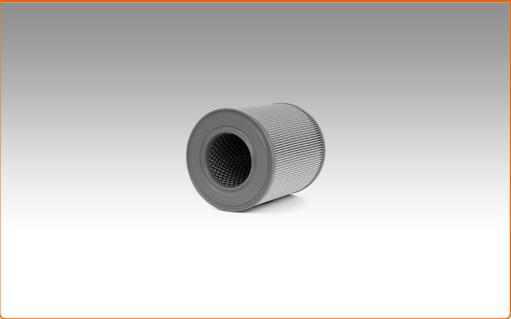



<section-header>

AIR FILTERS FOR AUDI: BUY NOW

<section-header>

(i) Disclaimer:

The document contains only general recommendations that may be useful for you when you perform repair or replacement work. AutoDoc shall not be liable for any loss, injury, damage of property occurring in the repair or replacement process due to incorrect use or misinterpretation of the provided information.

AutoDoc shall not be liable for any possible mistakes and uncertainties in this guide. The information provided is for information purposes only and cannot replace advice from specialists.

AutoDoc shall not be liable for incorrect or hazardous usage of equipment, tools and car parts. AutoDoc strongly recommends to be careful and observe the safety rules when performing repair or replacement works. Remember: usage of low quality auto parts does not guarantee you the appropriate level of road safety.

© Copyright 2018 – All the contents of this website, in particular texts, photographs and graphics, are protected by copyright. All rights, including reproduction, publication, editing and translation rights, are reserved by Autodoc GmbH.