



Imation FlashGO! 2.0 Hi-Speed USB Flash Card Reader/Writer User Manual

Thanks for purchasing the Imation FlashGO!™ 2.0 Hi-Speed USB Flash Card Reader/Writer. Please read this manual carefully before using the reader/writer.

Model Name	Description	Built-in Flash Disk Capacity
IMN-USB-FG2	CompactFlash Card Microdrive SmartMedia Card MultiMediaCard Secure Digital Memory Card Memory Stick Card	None (Reader Only)

 
Driver Installation

Note: The driver should not be installed for Windows ME and XP. (See Page 4 below.)


Windows® 98/98SE/2000:

(DO NOT plug the reader/writer into USB port before completing the driver installation.)

1. Insert the CD into CD-ROM drive. The following screen will appear. Click “next.”

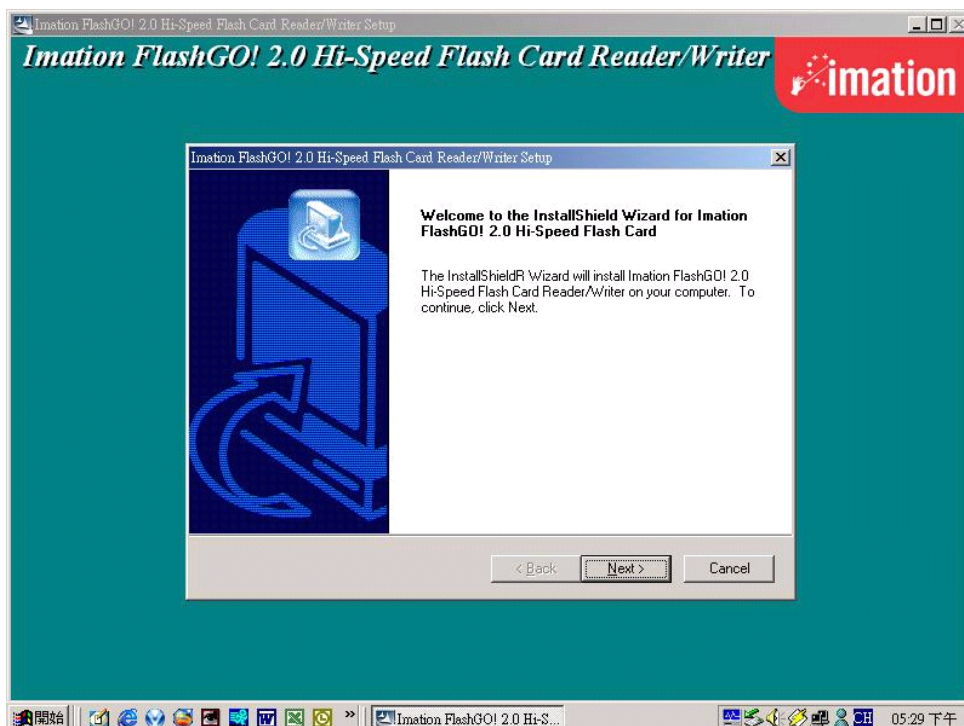

 2. The driver will be installed automatically. Wait for setup to finish.

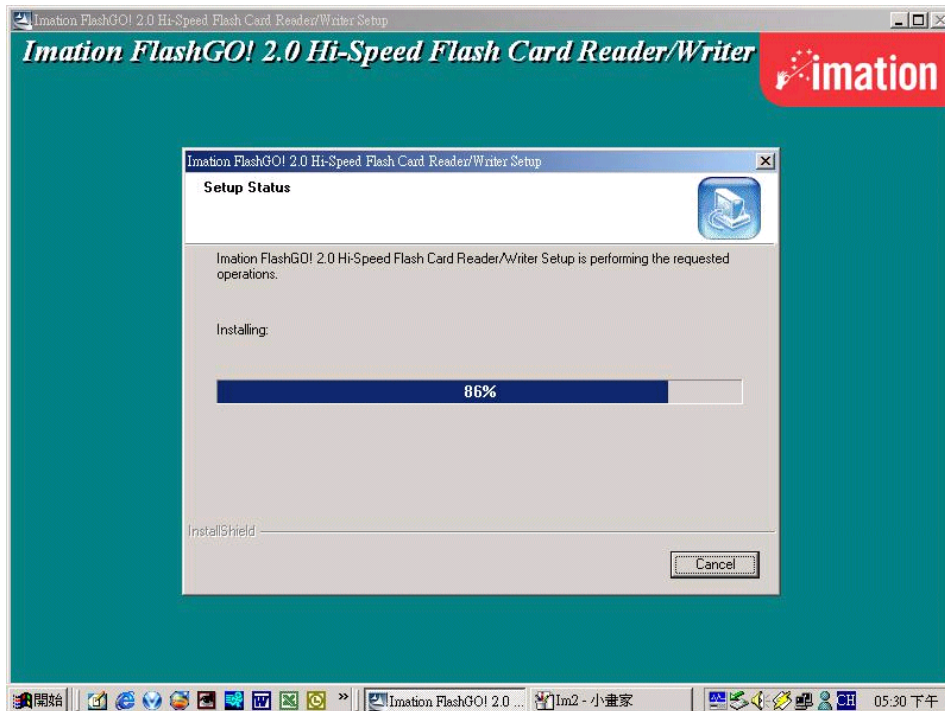


3. Choose "Finish."




The driver has been set up successfully.

 4. Restart the computer.

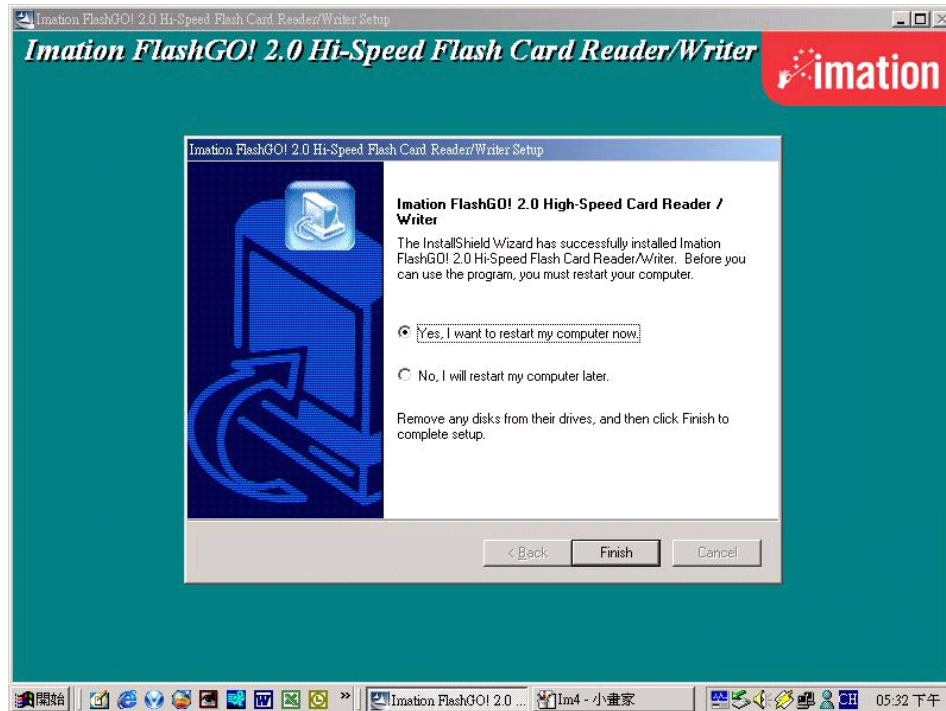

 
5. After the computer is restarted, plug the Imation FlashGO! 2.0 Reader/Writer into the USB port. You will see four extra icons in "My Computer." You can now insert one or more flash memory cards and start to use the Imation FlashGO! 2.0 Reader/Writer. See Page 4 below for the icon assignments.

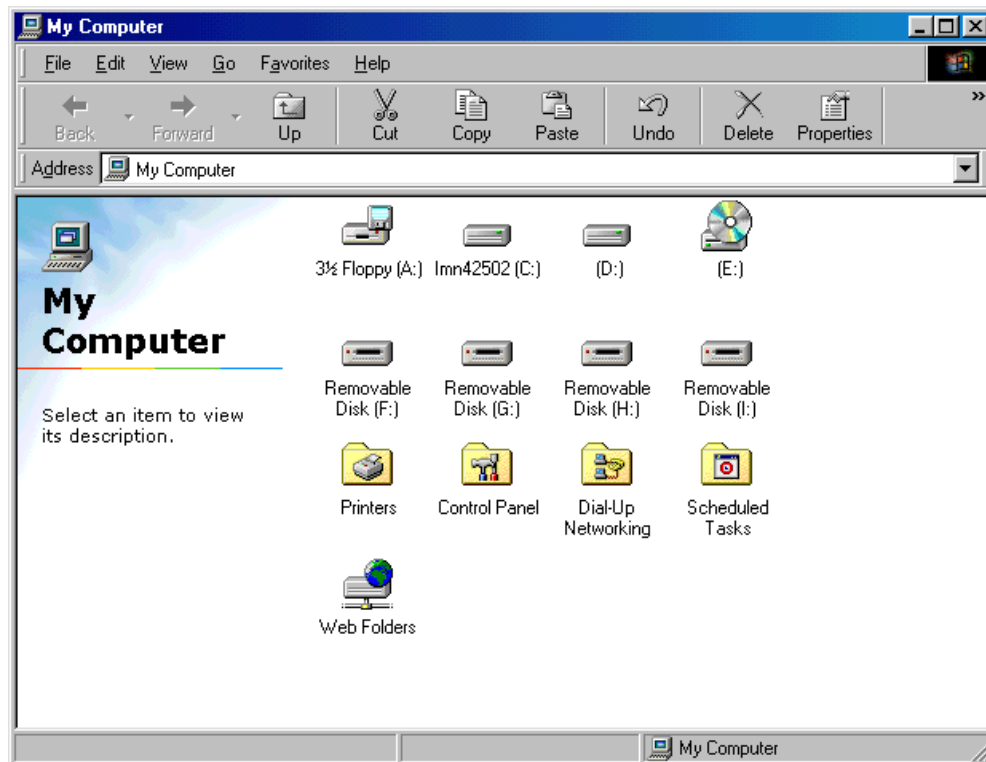

(Note: If you wish to uninstall the drivers in Windows 98, 98SE or 2000, simply rerun the Install process from the CD.)

Windows ME/XP:

 You don't need to install any drivers if your computer's O/S is Windows ME or XP. Just plug your Imation FlashGo! 2.0 Reader/Writer into the USB port. You will then see four extra icons in "My Computer," and you can start to use the Imation FlashGO! 2.0 Reader/Writer.

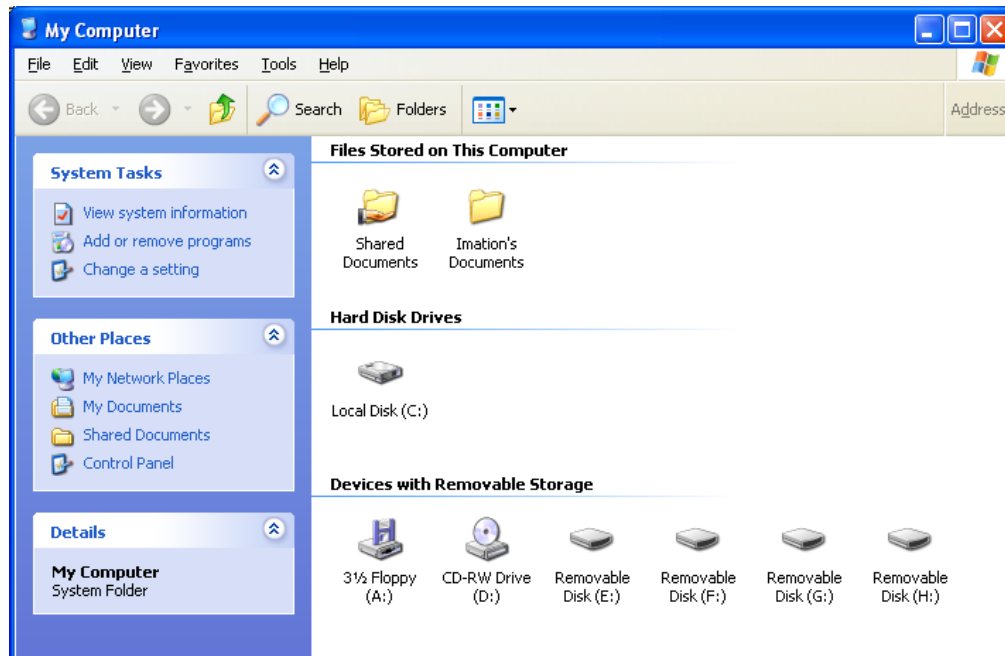

Note: For Windows operating systems the icons are listed as Removable Disk (n:). The assignments are as follows:

- First icon - Removable Disk = CompactFlash (Drive E: in above example)
- Second icon - Removable Disk = SmartMedia
- Third icon - Removable Disk = MultiMediaCard
- Fourth icon - Removable Disk = Memory Stick

If the flash card has been given a volume label ID, this label ID will be displayed with the Removable Disk (n:) icon in Windows ME and XP. To name an inserted flash card with these operating systems, right click the icon, select "Properties" and enter the label.

 
Mac® OS 10.1.2 and above:

For Mac 10.1.2 and above, you don't need to install any driver. Plug the reader/writer into the USB port and start using the Imation FlashGO! 2.0 Reader/Writer immediately.


Mac OS 8.6 - 9.x:

(DO NOT plug the reader/writer into USB port before completing the driver installation)
If your Mac Operating System is OS 8.6 - 9.x, please follow these steps:

1. Insert the CD into the CD-ROM drive.

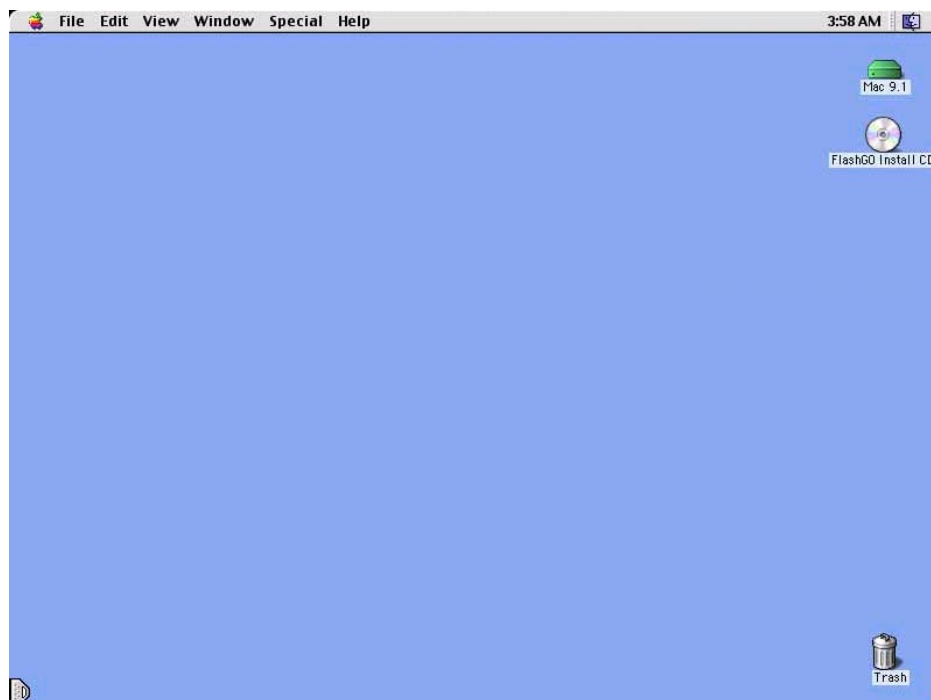

 
2. Click the "FlashGO! 2.0 Installer" file icon.

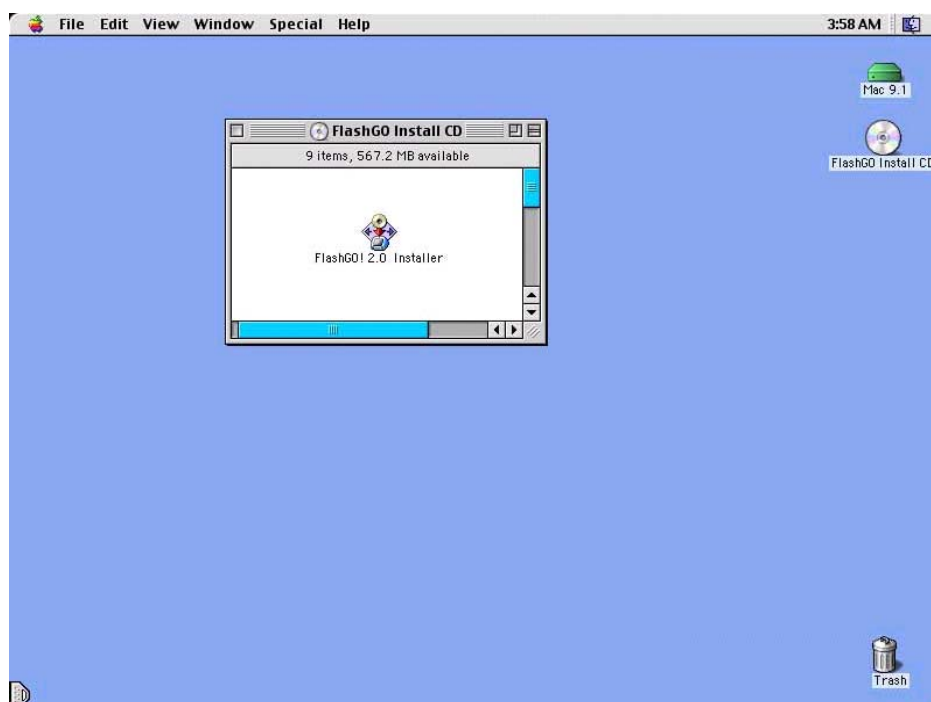


3. Click "Continue."



 4. Click "Agree."

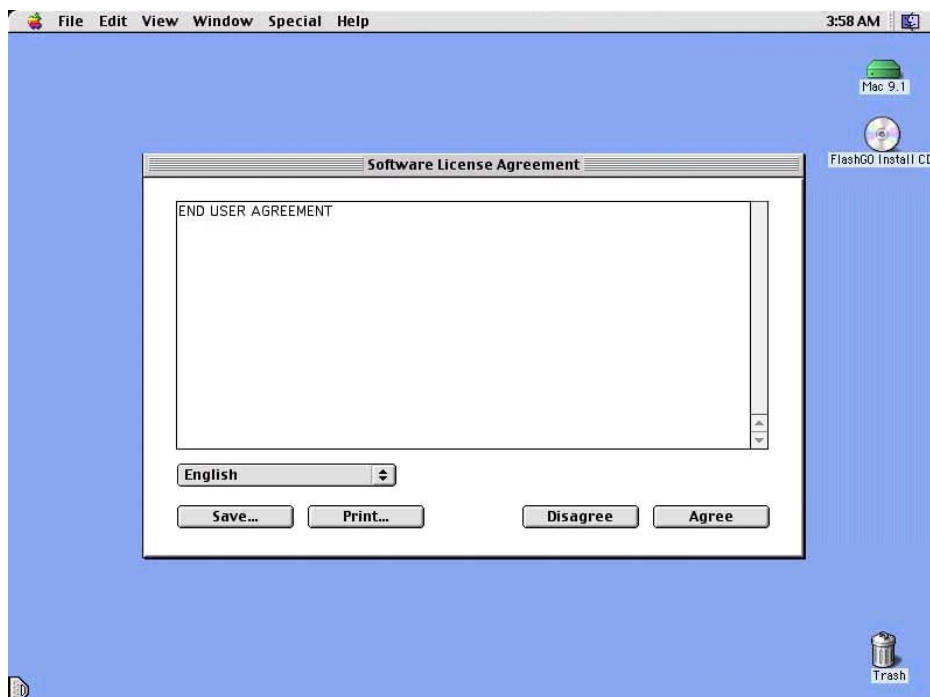


 5. Click "Install."

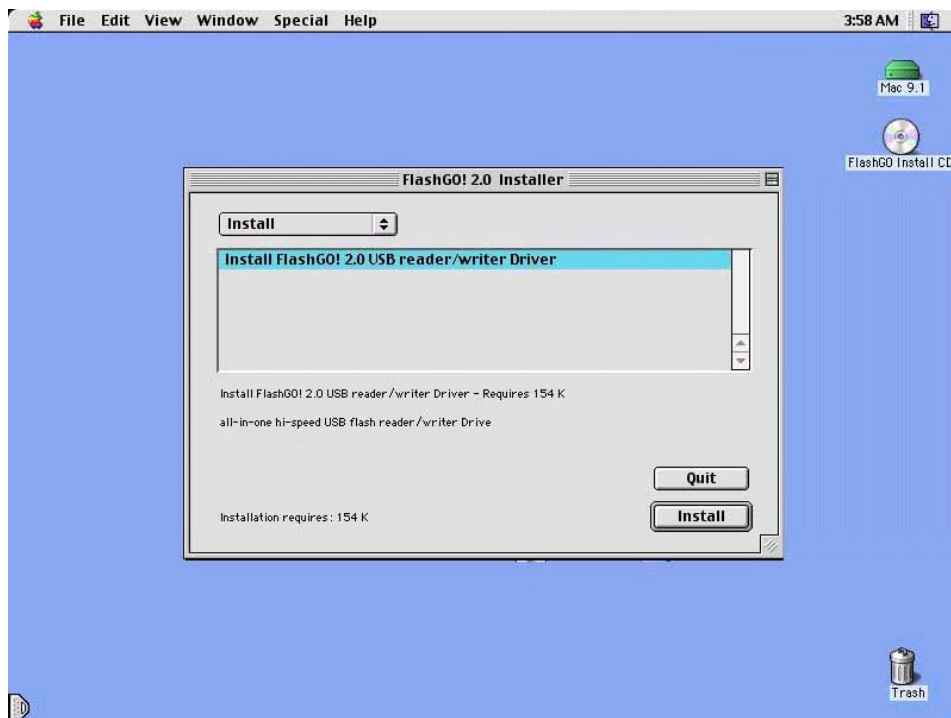

(Note: Selecting Uninstall instead of Install in the screen above allows removing the drivers, should this become necessary.)

 6. Click "Restart."

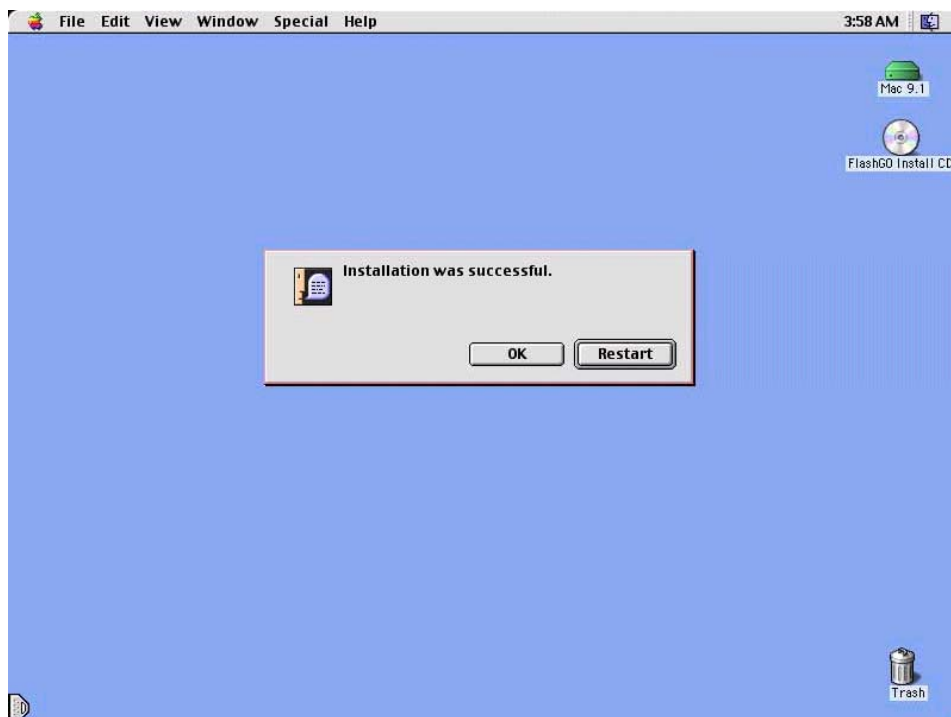

7. After the computer is restarted, plug the Imation FlashGO! Reader/Writer into the USB port. For each Flash Card you insert, a removable HDD icon will appear on the desktop. If the disks are labeled, the label name will appear in place of "Untitled."

