

# **Wine & Beverage Centre**

236 02 40 02


## **INSTRUCTION MANUAL**


PLEASE READ THIS MANUAL CAREFULLY BEFORE INSTALLING AND OPERATING.

# **TABLE OF CONTENTS**

CONTENTS	PAGE #
DIAGRAM & DESCRIPTION OF WINE & BEVERAGE CENT	RE 3
IMPORTANT SAFETY & PRE-USE INSTRUCTIONS	4
INSTALLATION INSTRUCTIONS  (a) General Installation Instructions (b) Installation of Unit as a Built-In Cellar  OPERATING YOUR WINE & BEVERAGE CENTRE	4 5
<ul><li>(a) Control Panel and Temperature Setting</li><li>(b) Display Window</li><li>(c) Temperature for Serving Wine</li></ul>	6 7 7
DOOR LOCK	8
LAYOUT & STORAGE	8
CARE & MAINTENANCE	8
TECHNICAL DATA	9
TROUBLESHOOTING GUIDE	10
WARRANTY INFORMATION	11

# **DIAGRAM & DESCRIPTION OF WINE & BEVERAGE CENTRE**

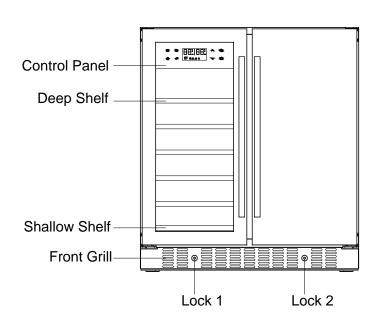

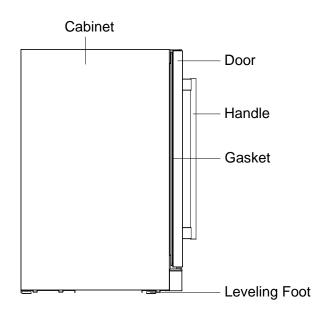

## YOUR WINE & BEVERAGE CENTRE ALSO INCLUDES THE FOLLOWING:

- 1 Instruction manual
- 7 pull-out wine shelves(left zone) & 4 fixed beverage shelves(right zone)
- 2 keys
- 2 handles

#### **IMPORTANT SAFETY & PRE-USE INSTRUCTIONS**

WARNING	To reduce the risk of fire, electrical shock, or injury when
	using your appliance, follow these basic precautions:

- Read all instructions before using the wine & beverage centre.
- DANGER: Risk of child becoming trapped in new cellar, old wine & beverage centre/refrigeration unit, or large boxes.
  - Junked or abandoned appliances, boxes and other containers are still dangerous, even if they will "just sit in the garage for a few days".
- Before you throw away your old wine & beverage centre or refrigeration unit: 1. Take off the door. 2.
   Leave the shelves in place so that children cannot climb inside.
- Never allow children to operate, play with, or crawl inside the appliance.
- Never clean appliance parts with flammable fluids. The fumes can create a fire hazard or explosion.
- Do not store in the vicinity of any other appliance. Do not store near gasoline or any other flammable vapors.
   The fumes can create a fire hazard or explosion.

-Save these instructions-

#### **BEFORE USING YOUR WINE & BEVERAGE CENTRE**

- Remove the exterior and interior packaging.
- Before connecting the wine & beverage centre to the power source, let it stand upright for approximately 2 hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Clean the interior surface with lukewarm water using a soft cloth.

#### INSTALLATION INSTRUCTIONS


## (a) General Installation Instructions

- This appliance is designed for free standing installation or can be recessed into cabinetry.
- Place your wine & beverage centre on a flat, solid floor that is strong enough to support it when it is fully loaded. To level your wine & beverage centre, adjust the front leveling leg at the bottom of the wine & beverage centre.
- When moving your wine & beverage centre, please do not incline it more than 45 degrees.
- Locate the wine & beverage centre away from direct sunlight and sources of heat (stove, heater, radiator, etc.). Direct sunlight may affect the acrylic coating and heat sources may increase electrical consumption. Extreme cold ambient temperatures may also cause the unit to perform improperly.
- Avoid locating the unit in damp areas.
- Plug the wine & beverage centre into a dedicated (for this appliance only), properly installed and grounded wall outlet. Do not under any circumstances cut or remove the third (grounding) prong from the power cord. Any questions concerning power and/or electrical grounding should be directed to a certified electrician or authorized product service center.

## (b) Installation of Unit as a Built-In Cellar

The cutout dimensions illustrated below allows for door clearance and access to the pull-out shelves when installed as a built-in appliance.

Your wine & beverage centre has been manufactured with a zero clearance door so no extra space is required to account for the door swing when building into cabinetry.

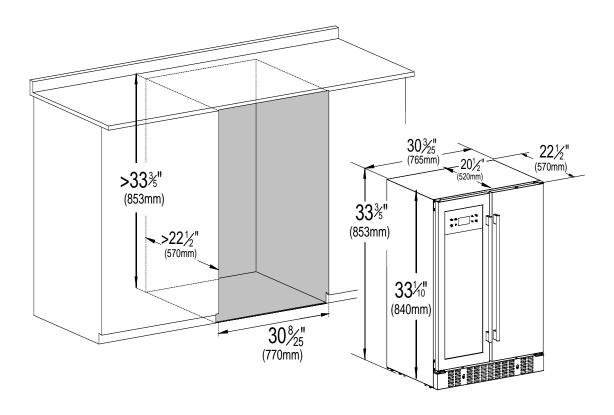

These cut out dimensions show the minimum space required for your wine & beverage centre to perform as designed.

## **OPERATING YOUR WINE & BEVERAGE CENTRE**

Your wine & beverage centre has a control panel with display window on the left of the door. It includes several features to operate and control the temperature of both the LEFT and RIGHT zones of the wine & beverage centre.



## (a) Control Panel and Temperature Setting

- (I) **POWER**: Press to turn on the control panel back light buttons if they are off.
- To turn off your wine & beverage centre for cleaning or extended absence, press the power button once.

After the unit beeps once, hold the power button for 10 seconds and your wine & beverage centre will shut itself off. Once the wine & beverage centre has been turned off, please allow at least 5 minutes before starting up again. This will limit excessive wear on the compressor.

- **UNLOCK:** Press for 3 seconds to unlock the control panel.
- -O- LIGHT: Press the wine & beverage centre light on or off.
- \*\* C/\*F: Press to alter the temperature display in Fahrenheit or Celsius.
- Press to select Left/Right zone for setting temperature. The digital display flashes to inform the accessibility to adjust setting.
- <u>↑ TEMP. UP:</u> Press to increase setting temperature by 1°.
- **TEMP. DOWN:** Press to decrease setting temperature by 1°.
- SET-RANGE SELECT: Press to change the temperature set-range among E,F,H,L, and leave it for 3 seconds to confirm your option. Your wine & beverage centre is originally set as "H", the ideal temperature for the storage of wines in the left zone and beverages in the right zone.

Display	Left Zone Set-range	Right Zone Set-range
E	41-72°F (5-22°C)	41-72°F (5-22°C)
F	41-72°F (5-22°C)	36-72°F (2-22°C)
Н	45-64°F (7-18°C)	34-43°F ( 1-6°C)
L	41-64°F (5-18°C)	41-64°F (5-18°C)

#### Note:

The control panel will lock automatically when left untouched for 15 seconds. Make sure to unlock the control panel before setting. With the exception of the **power button**, all other buttons' back light will turn off when the control panel is left untouched for 15 seconds.

## (b) Display Window





The temperature display will show the set temperature when the wine & beverage centre control panel is unlocked and selected

to be reset, and show the actual temperature when the control panel is locked.



The display window can be set to the off position for a less obtrusive appearance. Your wine & beverage centre will continue

to run, but the wine & beverage centres display window will not be visible. You can check the temperature of the wine & beverage centre

by pressing the power button.

To set the display window to either on or off, press °C/°F button for 5 seconds while the control panel is locked. Once the ON/OF indicator flashes, press °C/°F a second time to enter into the option interface. "ON" will show the display window at all times while "OF" will turn off the display window. Leave the control panel untouched for 5 seconds to confirm your option.

#### Note:

Temperatures may fluctuate depending on whether the interior light is ON or OFF and depending on the position of the bottles.

#### Before you start:

The wine & beverage centre should be placed in a location where the ambient temperature is between 60-80° Fahrenheit. If the ambient temperature is outside this range, the performance of the unit may be affected. For example, placing your unit in extreme cold or hot conditions may cause interior temperatures to fluctuate.

## (c) Temperature for Serving Wine

Although optimal storage temperature is generally regarded to be 53-57°F, different varietals of wine have different recommended serving temperatures for optimal taste. The recommended temperature ranges for serving different varietals of wine are listed below.

Red Wines: 60-66°F
White Wines 45-52°F
Sparkling Wines 40-45°F

## Note:

- If the unit is unplugged, loses power, or is turned off, you must wait 5 minutes before restarting.
   Attempting to restart the wine & beverage centre before this time has elapsed may prevent the wine & beverage centre from starting.
- When you use the wine & beverage centre for the first time or restart the wine & beverage centre after having been shut off for a long time, there will be a few degrees variance between the temperature you select and the one indicated on the LED readout for the first few hours of operation. After a few hours of operation, the temperature will normalize to the displayed temperature.

#### **DOOR LOCK**

- This unit comes with key lock.
- The keys are located inside the plastic bag that contains the user manual. To unlock the door, insert the key
  into the lock and turn counter clockwise.
- To lock the door, simply reverse the operation making sure the metal pin is engaged completely. Then remove the key and place it is a secure place for safekeeping.

## **LAYOUT & STORAGE**

Your wine & beverage centre was designed to store a maximum number of bottles securely. We recommend that you observe the tips below to optimize loading.

- Remove tape from shelves once unit is stable and ready for storage.
- Disperse the bottles evenly to avoid concentrating weight in one place. Bottles must not touch either the back
  of the cabinet or the step at the bottom. While your wine & beverage centre was designed to hold large
  format bottles such as Pinot Noir and Champagne, these larger bottles reduce the number of bottles you can
  fit on 1 shelf. Make sure that the bottles are not all grouped together either at the top or bottom of the
  throughout the cabinet will contribute to optimal cooling.
- Only pull out one rolling shelf at a time. Never attempt to pull more than one.
- Each telescopic shelf is designed to comfortably hold one row of 5 bottles.

## **CARE & MAINTENANCE**

## Cleaning Your Wine & beverage centre

- Turn off the power, unplug the appliance, and remove all items including all shelves.
- Wash the inside surfaces with a solution of warm water and baking soda (approximately 2 tablespoons of baking soda for each quart of water.)
- Wash the shelves with a mild detergent solution.
- Wring excess water out of the sponge or cloth when cleaning area of the controls, or any electrical parts.
- Wash the exterior with warm water and mild liquid detergent. Rinse well and wipe dry with a clean soft cloth.
- Vacuum the front grill and back of the unit twice yearly. Make sure the power is off before cleaning.
- It is recommended to clean the unit completely inside and out once a year to maximize the longevity of the wine & beverage centre.

#### Power Loss

- Power failures that are corrected within a few hours should not affect the temperature of your appliance if you
  minimize the number of times the door is opened. If the power is going to be off for a longer period of time, you
  need to take other measures to protect your contents.
- If the unit is unplugged, loses power, or is turned off, you must **wait 5 minutes before restarting**. Attempting to restart the wine & beverage centre before this time has elapsed may prevent the wine & beverage centre from starting.

#### Absence/Vacation

- Short vacations: You may leave the wine & beverage centre powered on and unattended for absences of less than three (3) weeks.
- Long vacations: If the appliance will not be used for more than three weeks, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent mold growth, leave the door open slightly, blocking it open if necessary.

## Moving Your Wine & beverage centre

- Remove all items.
- Securely tape down all loose items (shelves) inside your appliance.
- Turn the adjustable leg up to the base to avoid damage.
- Tape the door shut.
- Be sure the appliance stays secure in the upright position during transportation. Also protect the outside of the appliance with a blanket or similar item.

## **Energy saving Tip**

• The wine & beverage centre should be located in the coolest area of the room, away from heat producing appliances, and away from direct sunlight.

## **TECHNICAL DATA**

236 40	Wine & beverage centre
Accommodation (bottles)	Left:34-bottle(Bordeaux),Right:95-can(12 oz)
Type of cooling	Compressor & air-circulated fan cooling
Electricity protection grade	I I
Nominal voltage/Frequency	115V/60HZ
Ambient temperature	60-80 degrees Fahrenheit
Temperature range	Left Zone: 45F - 64F Right Zone: 34F - 43F
Range of inside cabinet humidity	60%RH
Item weight	138 pounds
Item dimension	$30^3/_{25}$ " W X $22^1/_2$ " D X $33^3/_5$ " H Stainless steel door handle will add $2^3/_5$ " to depth

# TROUBLESHOOTING GUIDE

Many common issues with your wine & beverage centre can be solved very easily. Try the troubleshooting tips below should you experience any problems

PROBLEM	POSSIBLE CAUSE
Wine & beverage centre does not	Not plugged in.
operate.	The appliance is turned off.
	The circuit breaker tripped or a fuse has blown out.
Wine & beverage centre is not cold	Check the temperature control setting.
enough.	External environment may require a higher setting. (e.g. room
	needs to be air conditioned)
	The door is opened too often.
	The door is not closed completely.
	The door gasket is not sealing properly.
Wine & beverage centre is turning on	The room temperature is hotter than normal.
and off frequently.	The door is opened too often.
	The door is not closed completely.
	The temperature control is not set correctly.
	The door gasket does not seal properly.
The lights do not work.	Not plugged in.
	The circuit breaker tripped or a fuse has blown.
	The light is turned "OFF".
Vibrations.	Check to assure that the wine & beverage centre is on a level
	surface.
The wine & beverage centre seems to	A faint humming noise may come from the flow of the refrigerant,
make too much noise.	which is normal.
	As each cycle ends, you may hear gurgling sounds caused by
	the flow of refrigerant in your wine & beverage centre.
	Contraction and expansion of the inside walls may cause
	popping and crackling noises.
	The wine & beverage centre is not on a level surface.
The door will not close properly.	The wine & beverage centre is not on a level surface.
	The door was reversed and not properly installed.
	The gasket is dirty.
	The shelves are out of position.

#### WARRANTY INFORMATION

#### LIMITED WARRANTY

**Length of Warranty**: This Limited Warranty lasts for one (1) year from date of receipt of purchase of the wine & beverage centre ("Limited Warranty Period"). Extended warranties may be available for an additional cost at the time of purchase or up to the seventh month from date of purchase. These extended warranties would extend this one (1) year limited warranty to two (2), three (3), or five (5) years. Details about our extended protection plans can be found @ wineenthusiast.com.

**Who is Protected**: This Limited Warranty protects the original purchaser during the Limited Warranty Period, provided that such purchaser can present appropriate proof of original purchase.

What is Covered: This Limited Warranty covers any defects in workmanship or materials in your new wine & beverage centre under normal use.

What is Not Covered: The following are not covered by this Limited Warranty damage due to such things as accident, misuse, abuse, mishandling, neglect, unauthorized repair, failure to properly maintain, acts of God or any other cause beyond the reasonable control of the Wine Enthusiast whether similar or dissimilar to the foregoing.

Purchaser understands and acknowledges that the wine & beverage centre is a wine refrigerator, which houses wine. Purchaser assumes all the risk of using these units, including risk of spoilage, humidity variations, temperature variations, leaks, fires, water damage, mold, mildew, dryness and similar perils that may occur.

What We Will Do: During the Limited Warranty Period, Wine Enthusiast and/or the manufacturer will, at its sole discretion, repair or replace any wine & beverage centre not operating within the manufacturer's specifications. All costs for labor and materials thereto shall be covered during the Limited Warranty Period. If Wine Enthusiast deems the wine & beverage centre is not repairable, Wine Enthusiast will use the value of your original order toward a replacement; provided, however, that the purchaser will be responsible for all shipping and handling costs with respect to the replacement after the initial ninety (90) days after the date of receipt of original purchase. After the initial ninety (90) day period after the date of receipt of purchase, purchaser must pay any shipping and handling charges that are incurred in shipping or transporting the wine & beverage centre for service under this Limited Warranty. Wine Enthusiast reserves the right to substitute materials of substantially similar quality in the event that identical materials are not available at the time the Limited Warranty services are performed. Wine Enthusiast reserves the right to request that purchaser contact a local refrigeration company to service the wine & beverage centre.

**How to get Warranty Service**: In the event your wine & beverage centre is not operating within the manufacturer's specifications, during the Warranty Period, contact customer service by email at <a href="mailto:custoerv@WineEnthusiast.net">custoerv@WineEnthusiast.net</a> or by phone 800.648.6058.

**Limitation of Implied Warranties**: All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this Limited Warranty.

**Exclusion of Certain Damages**: Wine Enthusiast's liability is limited to replacement or repair of the defective wine & beverage centre. Wine Enthusiast shall not be liable for any damages, whether incidental, consequential or otherwise, because of any defective wine & beverage centre.

**How State Law Applies**: Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

The Limited Warranty gives you specific legal rights, and you may also have other rights which vary from state tostate.