

# HELLER

## Induction Cooker 2000W

### User Manual

Model Number: IHP200



**IMPORTANT SAFETY INSTRUCTIONS  
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE**

Please read and follow the instructions in this user manual even if you feel you are familiar with the product, and find a place to keep it handy for future reference.

For your convenience record the complete model number (located on the product identification plate) and the date you received the product, together with your purchase receipt and attach to the warranty and service information. Retain in the event that warranty service is required.

**NOTE:** The rating of this product (as marked on the product identification plate) is based on specific loading tests. Normal use or the use of other recommended attachments may draw significantly less power.

## **IMPORTANT SAFEGUARDS**

---

**When using any electrically powered product, basic safety precautions should always be followed, including the following:**

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Carefully read all instructions before operation and save them for future reference.
- Remove and safely discard any packaging material before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and discard the protective cover that is fitted to the power plug of the appliance.
- Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
- Do not allow children to use it as a toy.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach away from children. Children shall not play with the appliance.
- Children should be supervised to ensure that they do not play with the appliance.
- Always disconnect the appliance from the supply if it is left unattended or not in use, and before assembling, disassembling or cleaning.
- Do not operate this product with a damaged cord or plug, or after the product malfunctions, or appears damaged in any way. Return appliance to the nearest authorized service center for examination, repair, adjustment or any other servicing.
- This appliance is designed for domestic household use only. No responsibility is accepted for damage resulting from use non-compatible with the instructions.
- Do not operate the appliance with wet hands.
- Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
- The use of other accessory attachments not recommended by the appliance manufacturer may cause hazard or injury. Do not use any accessories other than the ones provided with this product.
- Always pull the plug out from the wall, never pull the cord. Remove the plug from the wall before moving the appliance. Use both hands to move the appliance.

- DO NOT place the appliance on, or near a hot gas or electric burner, or in a heated unit.
- Unplug from the power outlet when not in use and before cleaning. Allow to cool completely before putting on or removing parts, and before cleaning.
- Do not use outdoors. Indoor use only.
- Do not use the appliance other than for its intended purpose.
- There are no user serviceable parts. If the supply cord is damaged, it must be replaced by the manufacturer or its authorized service agent, or a similarly qualified person in order to avoid a hazard.
- If there is a crack on the heating plate, immediately cut off the power supply and stop using.
- The appliance is designed only for heating and warming food and must only be used when cooking in pots or pans.
- Do not modify the parts, or repair the unit by yourself.
- Do not use the unit near flame or wet places.
- Do not place on unstable surfaces.
- Do not move the unit when the pot or the pan is on it.
- Do not heat the pot empty or overheat the pot.
- Do not immerse the electric cooker (appliance) in liquid.
- Improper installation may result in the risk of fire, electric shock or injury to persons.
- **WARNING:** Do not touch surface or hotplate when the appliance is in operation or in the phase of cooling down.
- **WARNING:** The surfaces are liable to get hot during use.
- **CAUTION:** Do not leave appliance without supervision when oil and fat are heated.
- The appliance must be cooled down completely after use before storing. Please allow at least 30 minutes for the appliance to cool down.
- The appliance should be positioned in use directly beneath cupboards.
- This appliance should not be used near or under curtains or any inflammable materials to avoid fire hazards.
- Metallic objects such as knives, forks, spoons, lids, cans and aluminum foils should not be placed on the top plate since they can get hot.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Use the unit with sufficient space around it. Keep the front side and either right or left side of the unit clear.
- Do not use the unit on carpet or tablecloth (vinyl) or any other low-heat resistant article.
- Do not place a sheet of paper between the pot or the pan and the unit. The paper may get burnt.
- Do not block the air intake or exhaust vent.
- Do not touch the top plate just after removing the pot or the pan, as the top plate will still be very hot.
- Do not place the unit close to objects which are affected by magnet, such as: radios, televisions, automatic-banking cards and cassette tapes.
- Before carrying out any cleaning or maintenance work, always allow the unit to cool down first and make sure it is disconnected from the mains supply by unplugging the power cord from socket-outlet.
- This appliance is in intended for household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;

- Bed & breakfast type environments.




- CAUTION: **Hot surface!**

SAVE THESE INSTRUCTIONS

## OPERATING INSTRUCTIONS

*Induction cooking is safe because only the cooking surface gets hot where it comes in contact with the cookware. There is no open flame or exposed heating elements to burn people, it makes cooking cool and fun.*

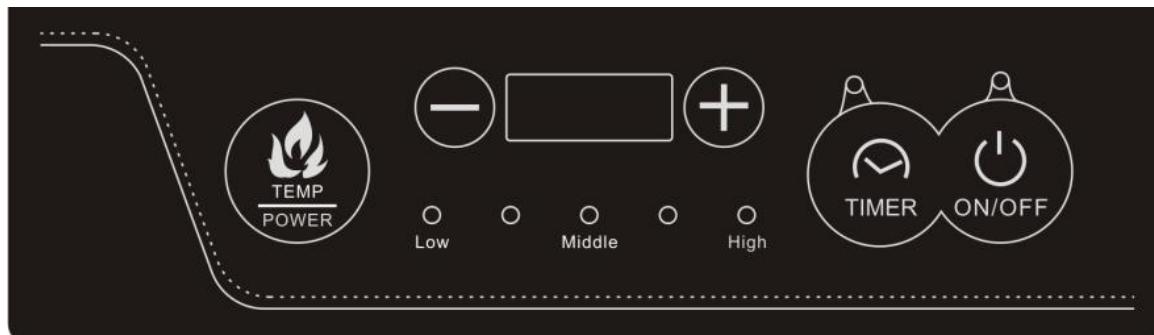

1. Please put the cookware at the center of the ceramic surface and plug in the power cord, and then indicator light of 'ON/OFF' is on.
2. The appliance has 5 operating buttons, including: "ON/OFF", "TEMP/POWER", "TIMER", "-" and "+".
3. Please be noted that the power range is from 300W to 2000W. The temperature range is 80°C to 240°C.
4. Details for operation:
  - a. Touch the "ON/OFF" button, the induction cooker is ready to work, "ON" is shown in the LCD.
  - b. Touch "TEMP/POWER", the cooker is in heating status, and the temperature is shown on the LCD, then touch to "-", or "+" to lower or raise the temperature.
  - c. Touch "TEMP/POWER" again, the LCD will show the power, then touch to "-", or "+" to lower or raise the working power.
  - d. Touch "TIMER", you can set the auto close time. The time display format is "00: 00"; when you touch the timer button once, you can set the hours, and the number will be shown in the left 00, then touch the time again, you can set the minutes, the number will be shown on the place of right 00. However, the longest time you can set is 2 hours.
  - e. After cooking, touch the 'ON/OFF' button, the appliance will stop work immediately. And the power indicator light is off after power cord was unplugged.

## USABLE & NON-USABLE COOKWARE


### A. Usable Pans

Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter from 12 to 26cm.



### B. Non-usable Pans

Heat-resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pans/pots with bottom measuring less than 12cm.

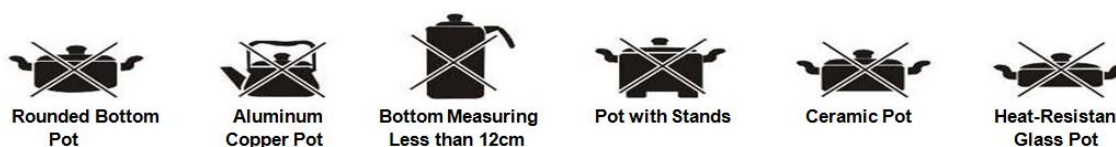

## MALFUNCTION TABLE

---

Malfunction	Checking
The screen shows "E0"	Whether the cooking utensils is usable or not.  Whether pan/pot is placed in the centre of appliance.  No pan/pot is placed in appliance.
The screen shows "E1"	The high temperature protection for IGBT, please check whether fan is ok or not. Whether the exhausting or absorbing vent is jammed or not.
The screen shows "E2"	The temperature of the surface of induction cooker is too high, please reuse it after few minutes later or the cooking utensils is not available.
The screen shows "E3"	The input voltage exceeds 270V. Please using the appliance after input is steady.
The screen shows "E4"	The input voltage below 145V, Please using the appliance after input is steady.
The screen shows "E5"	Low or excess current. Make sure the appliance is connected to the current indicated on the rating label.

## CARE & CLEANING

---

**WARNING: BE SURE TO UNPLUG THE UNIT AND ALLOW IT TO COOL BEFORE CLEANING**

1. Disconnect plug and wait until the unit is cooled down completely. Clean after using every time.
2. If the pots/pans are used without being cleaned, discoloration or cooked on stains may be caused.
3. Do not use benzene, thinner, scrubbing brush or polishing powder to clean the induction cooker.
4. Wipe using dish washing agent and damp cloth.
5. Use vacuum cleaner to suck up dirt from the air intake and exhaust vent.
6. Never run water over the unit (Water gets inside may cause malfunction).
7. The connector must be removed before the appliance is cleaned and that the appliance inlet must be dried before the appliance is used again.

## SPECIFICATIONS

---

Model	Brand	Description	Voltage	Frequency	Wattage
IHP2000	HELLER	Induction Cooker 2000W	220-240Vac	50Hz	2000W

## CUSTOMER SERVICE

---

### Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria 3025

Phone: 1300 659 489

Hours: 9am-5pm (EST) Mon-Fri

[www.gafcontrol.com.au](http://www.gafcontrol.com.au)

\*This product may vary slightly to the product illustrated due to ongoing product development.