



Spectrum 10

Spectrum 30

Spectrum 50

		Spectrum 10	Spectrum 30	Spectrum 50
Agfa	DC-8330i	•		
Argus	DC-6340	•		
BenQ	C840	•		
	DC C1050	•		
	DC C740i	•		
	DC C750	•		
	DC C820	•		
	DC C850	•		
	DC E100	•		
	DC E800	•		
	DSC X800		•	
Canon	Digital IXUS 80	•		
	IXUS 70	•		
	IXY Digital 820IS	•		
	PowerShot A1000 IS	•		
	PowerShot A1100 IS	•		
	PowerShot A470			•
	PowerShot A480		•	
	PowerShot A570 IS		•	
	PowerShot A580		•	
	PowerShot A590 IS		•	
	PowerShot A650 IS			•
	PowerShot A720 IS			•
	PowerShot D10			•
	PowerShot E1	•		
	PowerShot G10			•
	PowerShot G9			•
	PowerShot SD1000/IXUS 70	•		
	PowerShot SD1100 IS/IXUS 80	•		
	PowerShot SD1200 IS	•		
	PowerShot SD770/IXUS 85	•		
	PowerShot SD780 IS	•		
	PowerShot SD790 IS/IXUS 90 IS	•		
	PowerShot SD850 IS/IXUS 950 IS	•		
	PowerShot SD870 IS/IXUS 860 IS	•		
	PowerShot SD880 IS/IXUS 870 IS	•		
	PowerShot SD890 IS/IXUS 970 IS	•		
	PowerShot SD950 IS/Digital IXUS 960 IS	•		
	PowerShot SD960 IS		•	
	PowerShot SD970 IS	•		
	PowerShot SD990 IS/IXUS 980 IS	•		
	PowerShot SX100 IS			•
	PowerShot SX110 IS			•
	PowerShot SX200 IS			•
	PowerShot TX-1		•	
	SD1200 IS	•		







Spectrum 10

Spectrum 30

Spectrum 50

		Spectrum 10	Spectrum 30	Spectrum 50
Casio	EXILIM EX-FC100	•	•	
	EXILIM EX-FS10	•		
	EXILIM EX-S10	•		
	EXILIM EX-S12	•		
	EXILIM EX-S5	•		
	EXILIM EX-S880	•		
	EXILIM EX-V7/V8	•		
	EXILIM EX-Z100	•		
	EXILIM EX-Z1080	•		
	EXILIM EX-Z11	•		
	EXILIM EX-Z200	•		
	EXILIM EX-Z250	•		
	EXILIM EX-Z270	•		
	EXILIM EX-Z300	•		
	EXILIM EX-Z400	•		
	EXILIM EX-Z80	•		
	EXILIM EX-Z85	•		
	EXILIM EX-Z850	•		
EXILIM EX-Z9	•			
DXG	110		•	
	202V		•	
	305V		•	
Fuji	FinePix A100/A150	•		
	FinePix A820/A825/A900		•	
	FinePix A850	•		
	FinePix A920		•	
	FinePix F100fd		•	
	FinePix F200EXR		•	
	FinePix F40fd		•	
	FinePix F47fd		•	
	FinePix F480		•	
	FinePix F50fd/F60fd	•		
	FinePix J10/J20	•		
	FinePix J100/J110W/J120W/J150W	•		
	FinePix J12/J50		•	
	FinePix Z10fd/Z100fd/Z200fd	•		
	FinePix Z20fd	•		
	FinePix Z30fd	•		
	FinePix Z33	•		
	FinePix Z5fd	•		
GE	A730	•		
	A735/A835	•		
	E1035/E1235			•
	E1050	•		
	E840S	•		
	G2/G3	•		
H855	•			

				
		Spectrum 10	Spectrum 30	Spectrum 50
HP	Photosmart E337	•		
	Photosmart E427		•	
	Photosmart M437	•		
	Photosmart M447	•		
	Photosmart M537		•	
	Photosmart M547	•		
	Photosmart M627	•		
	Photosmart M637	•		
	Photosmart M737	•		
	Photosmart Mz67		•	
	Photosmart R742	•		
	Photosmart R837		•	
	Photosmart R847		•	
	Photosmart R937			•
Kodak	EasyShare C180	•		
	EasyShare C513	•		
	EasyShare C603	•		
	EasyShare C613		•	
	EasyShare C653		•	
	EasyShare C703	•		
	EasyShare C713	•		
	EasyShare C763	•		
	EasyShare C913	•		
	EasyShare M1033	•		
	EasyShare M1063	•		
	EasyShare M1073 IS	•		
	EasyShare M1093 IS		•	
	EasyShare M320/M340		•	
	EasyShare M380	•		
	EasyShare M753/M853		•	
	EasyShare M763/M863	•		
	EasyShare M873/M883	•		
	EasyShare M893 IS	•		
	EasyShare Picture Viewer	•		
	EasyShare V1073/V1273	•		
	EasyShare V1233/V1253		•	
	EasyShare V1285	•		
	EasyShare Z1085 IS		•	
	EasyShare Z1275	•		
	EasyShare Z1285	•		
	EasyShare Z1485 IS		•	
	EasyShare Z885	•		
EasyShare Z915			•	
Leica	C-Lux 1	•		
	C-Lux 3	•		
	D-Lux 3			•
	D-Lux 4			•
Minox	DC 7022	•		
	DC-8011	•		
Mustek	DV-4500		•	
	GSmart D35	•		
	MDC-6500z			•

*Availability may vary depending on country and location.



Spectrum 10

Spectrum 30

Spectrum 50

		Spectrum 10	Spectrum 30	Spectrum 50
Nikon	Coolpix L14/L15	•		
	Coolpix L16/L18		•	
	Coolpix L19/L20		•	
	Coolpix P5000/P5100			•
	Coolpix P60	•		
	Coolpix P6000 GPS			•
	Coolpix S200	•		
	Coolpix S202	•		
	Coolpix S210	•		
	Coolpix S220	•		
	Coolpix S51/S51c	•		
	Coolpix S510	•		
	Coolpix S52	•		
	Coolpix S520	•		
	Coolpix S52c	•		
	Coolpix S550	•		
	Coolpix S560	•		
	Coolpix S60		•	
	Coolpix S600	•		
	Coolpix S610/S610c	•		
Coolpix S620	•			
Coolpix S630		•		
Coolpix S700	•			
Coolpix S710	•			
Olympus	FE-190	•		
	FE-20		•	
	FE-25	•		
	FE-280	•		
	FE-290		•	
	FE-300	•		
	FE-3000/3010	•		
	FE-310		•	
	FE-320	•		
	FE-340		•	
	FE-350	•		
	FE-360	•		
	FE-370	•		
	FE-45		•	
	FE-5000/5010	•		
	Mju 1040	•		
	Mju 1050SW		•	
	Mju 1060	•		
	Stylus 1010/1020		•	
	Stylus 1030SW	•		
	Stylus 1040	•		
	Stylus 1050SW	•		
	Stylus 1200/Mju Digital 1200		•	
	Stylus 550WP/Mju 550WP	•		
	Stylus 7000/Mju 7000		•	
	Stylus 770SW	•		
	Stylus 780		•	
	Stylus 790SW/Mju 790SW	•		
	Stylus 830/Mju Digital 830	•		
	Stylus 840		•	
	Stylus 850SW	•		
	Stylus Tough 6000/Mju 6000	•		
	Stylus Tough 8000/Mju 8000	•		
	X835	•		



Spectrum 10

Spectrum 30

Spectrum 50

		Spectrum 10	Spectrum 30	Spectrum 50
Panasonic	Lumix DMC-FS12/FS62		•	
	Lumix DMC-FS15		•	
	Lumix DMC-FS20	•		
	Lumix DMC-FS25		•	
	Lumix DMC-FS3/FS5	•		
	Lumix DMC-FS42		•	
	Lumix DMC-FS6		•	
	Lumix DMC-FS7		•	
	Lumix DMC-FX100		•	
	Lumix DMC-FX150		•	
	Lumix DMC-FX33	•		
	Lumix DMC-FX35	•		
	Lumix DMC-FX37	•		
	Lumix DMC-FX40/FX48	•		
	Lumix DMC-FX500	•		
	Lumix DMC-FX55	•		
	Lumix DMC-FX550/FX580	•		
	Lumix DMC-LS60/LS75	•		
	Lumix DMC-LS80	•		
	Lumix DMC-LS85		•	
	Lumix DMC-LX3			•
	Lumix DMC-LZ10		•	
	Lumix DMC-LZ6/LZ7		•	
	Lumix DMC-LZ8		•	
	Lumix DMC-TS1/FT1	•		
	Lumix DMC-TZ2/TZ3			•
	Lumix DMC-TZ4/TZ5		•	
Lumix DMC-TZ50		•		
Lumix DMC-TZ6/ZS1			•	
Lumix DMC-TZ7/ZS3			•	
Pentax	Optio A30	•		
	Optio A40	•		
	Optio E40		•	
	Optio E50		•	
	Optio E60	•		
	Optio E70		•	
	Optio L30		•	
	Optio M30		•	
	Optio M40	•		
	Optio M50/M60	•		
	Optio P70		•	
	Optio S10	•		
	Optio S12	•		
	Optio T30	•		
	Optio V10		•	
	Optio V20	•		
	Optio W60	•		
	Optio Z10	•		
Polaroid	A310	•		
	i533P	•		
	i631	•		
	i633	•		
	i733	•		
	i832W	•		
Pure Digital	Flip Mino/Mino HD	•		
Ricoh	Caplio RR770	•		
	CX1			•
	R10	•		
	R50			•
	R8			•
Samsung	CL5/PL10	•		
	Digimax i100	•		
	Digimax i70	•		
	Digimax i8	•		
	Digimax i80	•		
	Digimax i85	•		
	Digimax L730	•		
	Digimax L74 Wide			•
	HZ10W/WB500			•
	HZ15W/WB550			•
	L100/110/200/210	•		
	L201/SL201	•		
	L310W	•		
	L73		•	
	L730	•		
L830		•		

*Availability may vary depending on country and location.

				
		Spectrum 10	Spectrum 30	Spectrum 50
	L83T	•		
	NV100HD		•	
	NV24HD	•		
	NV30/NV40	•		
	NV4	•		
	NV8/10/15/20		•	
	NV9/TL9	•		
	S1060	•		
	S1070	•		
	S630/S730		•	
	S73		•	
	S760/S860	•	•	
	S85		•	
	S850/S1050		•	
	SL102/ES55	•		
	SL201	•		
	SL202/PL50	•		
	SL30/ES15		•	
	SL420/PL60	•		
	SL620/PL65	•		
	SL820/IT100	•		
	ST10	•		
	TL100/ST50			•
	TL34HD			•
Sanyo	VPC-CA9			•
	VPC-CG10			•
	VPC-TH1			•
	VPC-WH1			•
	VPS-FH1			•
	Xacti VPC-S50	•		
Xacti VPS-T700	•			
Sigma	DP-1			•
	DP-2			•



Spectrum 10

Spectrum 30

Spectrum 50

Sony	DSC-G1		•
	DSC-H10		•
	DSC-H20		•
	DSC-S650/S700/S800	•	
	DSC-S730	•	
	DSC-S750/S780	•	
	DSC-S950	•	
	DSC-T100	•	
	DSC-T2	•	
	DSC-T20	•	
	DSC-T200	•	
	DSC-T300	•	
	DSC-T500		•
	DSC-T70	•	
	DSC-T700	•	
	DSC-T77/T770	•	
	DSC-T90/T900	•	
	DSC-W110/W200	•	
	DSC-W115/W125	•	
	DSC-W120/W130	•	
	DSC-W150/W170	•	
	DSC-W210/W220	•	
	DSC-W230/W290	•	
DSC-W300	•		
NSC-GC1			•
Vivitar	V6320	•	