

LX5550



Something to talk about!

LX5550

Headset Jack

Indicator flashes for incoming calls or messages

Ear Piece

Charging Port for AC Adapter (Charging time: up to 3 hours)

External OEL Display

Charging Port for Vehicle Power Adapter (Charging time: up to 3 hours)

Antenna



Speaker Phone

Navigation Key scrolls through menus and displays the next or previous message, entry or item

Left Soft Key / Menu

Access Shop

Volume Up/Down

Messages

TALK Key / Recent Calls

Voice Command Activation Key

One-Touch Voicemail

Manner/Silence All Mode

Microphone



Speaker Phone Activation Key

Scheduler

Web Browser

Right Soft Key / Contacts

END/PWR Key powers the phone on or off, ends a call or returns you to the main menu

Lock Mode Key



Full Color Internal LCD





VOICE COMMAND

The LX5550 by LG is enabled with speaker-independent voice recognition. This technology makes it possible for any user to dial a number by speaking the name of a contact entered in the phone book or by speaking the digits of a phone number. Voice command also provides quick and easy access to other essential features and when coupled with speaker phone and driving mode, offers true hands-free usage without additional equipment.

Activate Speaker Phone

1. From standby mode, press the **OK** Key, "Speaker Phone is set to On" will appear on the screen. To deactivate, press the key again and "Speaker Phone is set to Off" will appear on the screen.

VOICE SETTINGS

Voice Commands

Allows you to select how voice recognition is activated.

1. From the **Voice (4)** menu, select **Voice Settings (4)**.
2. Select **Voice Commands (1)**.
3. Use the Navigation Key to select from **Flip open** or **Side key only** and press **OK**.

Announce Alerts

Automated alert notifies you by voice of incoming calls and text messages by contact name or phone number. It also provides notification of new emails.

1. From the **Voice (4)** menu, select **Voice Settings (4)**.
2. Select **Announce Alerts (2)**.
3. Use the Navigation Key to select from **On** or **Off** and press **OK**.

Best Match

After you say a name or number, your phone displays the recognition results that best matches the one you said and asks you to confirm. You may select the number of results that you want your phone to display.

1. From the **Voice (4)** menu, select **Voice Settings (4)**.
2. Select **Best Match (3)**.
3. Use the Navigation Key to select from **1 Result** or **4 Results** and press **OK**.

Train Commands


An optional personalization feature that helps train your phone to recognize the way you pronounce commands.

1. From the **Voice (4)** menu, select **Voice Settings (4)**.
2. Select **Train Commands (4)**.
3. Use the Navigation Key to select **Training On** and press **OK**.
4. Follow the screen prompts by clearly speaking the series of words shown on the screen. A percentage bar will show your progress as the training of each word is successfully spoken.

Train Digits

An optional personalization feature that helps train your phone to recognize the way you pronounce numbers.

1. From the **Voice (4)** menu, select **Voice Settings (4)**.
2. Select **Train Digits (5)**.
3. Use the Navigation Key to select **Training On** and press **OK**.
4. Follow the screen prompts by clearly speaking the series of numbers shown on the screen into the phone. A percentage bar will show your progress as the training of each number series is successfully spoken.

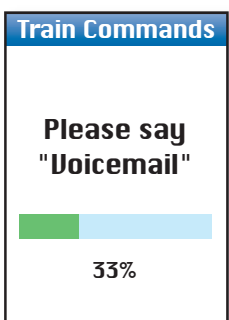



VOICE MENU FUNCTIONS

Start Commands

Allows you to use your voice to activate certain features of your phone.

1. From the **Voice (4)** menu, select **Start Commands (1)**.
2. You will be asked to "Please Say a Command". Clearly speak a command from the list: **Contacts, Digit Dial, Redial, Voice Mail, Driving, Schedule** or **Time**.

Contacts: a phone call is made by saying the name of a contact saved in your phone book. In this function only the default number will be dialed.

Digit Dial: a phone call is made by saying a telephone number of 4, 7, 10 or 11 digits.

Redial: calls the most recently-dialed number again.

Voice Mail: connects to *1 voice mail.

Driving: activates Voice Command features and speaker phone for hands-free operation.

Schedule: reads out the events that you have scheduled for the current day and enables you to add new events.

Time: announces the time and displays it on the phone.

Note: For voice recognition, keep surrounding area quiet and speak clearly.

Note: Pronounce phone numbers digit by digit. Do not say "1-800" as "one eight hundred." Instead, say "One, eight, zero, zero."



Activate Driving Mode

Allows you to switch hands-free calling on and off during driving without the need for a car kit.

1. From the **Voice (4)** menu, select **Driving Mode (5)**.
2. Use the Navigation Key to select from **Activate** or **Deactivate** and press **OK**.

Shortcut: You may immediately activate or deactivate Driving Mode when the phone is closed by pressing the **Voice Command Activation Key** on the side of the phone for three seconds.




Schedule an Event


1. From the **Voice (4)** menu, select **Voice Scheduler (2)**.
2. Highlight the event date using your Navigation Key and press **Left Soft Key** for **Add**.
3. You may set the appropriate start and end times, content, voice memo, recurrence (if any), alarm and ringer by scrolling to the corresponding field and entering the desired information and pressing **OK**.
4. Press **Left Soft Key** for **Save**.

Record a Voice Memo

Allows you to record up to four (4) minutes of voice memos.

1. From the **Voice (4)** menu, select **Voice Memos (3)**.
2. Press **Left Soft Key** for **New**.
3. Start recording after the tone.
4. Press **Left Soft Key** for **Done** to stop recording. By default, your message will be listed by date and time.

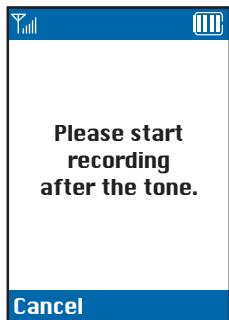

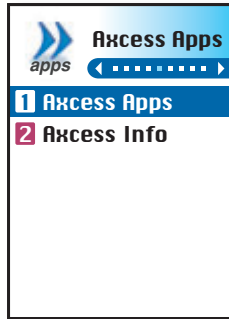

DOWNLOADING ACCESSSM CONTENT

The new LX5550 by LG can download up to 1.5 MB of content from Access, an enhanced wireless service that allows you to download applications ranging from games, news, sports information, ringtones, stock quotes, and more to your phone.

Downloading New Content from Access

1. From the **Access Apps (5)** menu, select **Access Apps (1)**.
2. Once the Access Shop page is displayed, select the shopping cart icon. Choose from ringtones, games, e-mail and more.

Shortcut: Press the **Access Shop** icon on the navigation key while in standby mode to quickly start Access.




MESSAGES

Send New

Allows you to send text messages and emails.

1. From the **Messages (3)** menu, select **New Message (2)**.
2. Press **Left Soft Key** for **Contacts** to select pre-programmed recipient or select **Address** and enter an email address or phone number and press **OK**.
3. Select **Message** and press **OK**.
4. Enter a custom text message (up to 160 characters), and press **OK** to complete the message.
5. Press **Left Soft Key** for **Send**.

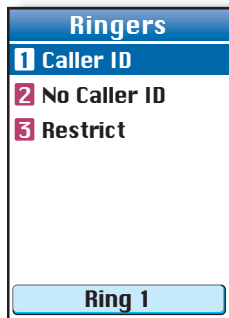


CUSTOMIZABLE FEATURES

CHANGING THE SOUND SETTINGS

Selecting a Built-in Ringer

1. From the **Settings (9)** menu, select **Sounds (1)**.
2. Select **Ringers (1)**.
3. Select **Caller ID (1)**, **No Caller ID (2)**, or **Restrict (3)**.
4. Choose from the list of available default ringers and press **OK**.

Note: The ringer list includes both downloaded and default ringtones. Downloaded ringtones will be indicated by all lower case names while default ringtones will have the first letter of their name capitalized.

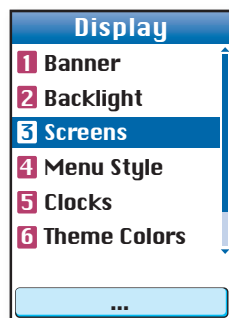


CHANGING THE DISPLAY SETTINGS

Changing the Screen Display Image

Allows you to choose the kind of background to be displayed on the phone.

1. From the **Settings (9)** menu, select **Display (2)** menu, select **Screens (3)**.
2. Select **Wallpaper (1)**, **Power On (2)**, or **Power Off (3)**.
3. Select from the list of nine default images, or press **Right Soft Key** for more images by selecting from from **Default (1)**, **Graphics (2)** or **Objects (3)**.
4. Press **Left Soft Key** for **Save**.

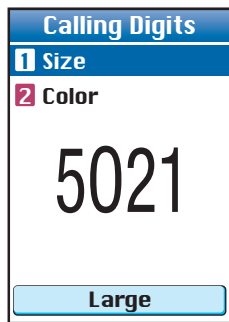

Changing the Backlight Timer


Allows you to select the duration the backlight is on for the display.

1. From the **Settings (9)** menu, select **Display (2)** menu, select **Backlight (2)**.
2. Select either **Main LCD (1)** or **Key Light Timer (2)**.
3. For **Main LCD (1)**, select **Timer (1)**, and select from **7 seconds**, **15 seconds**, **30 seconds**, **Always off**, or **Always on** and press **OK**.
4. For **Key Light Timer (2)**, select from **7 seconds**, **15 seconds**, **Always off** or **Always on** and press **OK**.

Changing the Font Size and Color

Allows you to choose the size and color of the number and text input font.

1. From the **Settings (9)** menu, select **Display (2)** menu, select **Fonts (9)**.
2. Select **Calling Digits (1)** or **Text Editor (2)**.
3. Select **Size (1)** or **Color (2)**.
4. Press the Navigation Key to select the size or color of the text and press **OK**.

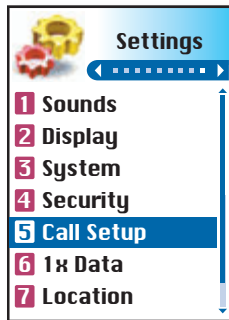


CALL SETUP

Allows you to designate how the phone handles both incoming and outgoing calls.

Auto Retry

Allows you to set the length of time the phone waits before automatically redialing a number when the attempted call fails.

1. From the **Settings (9)** menu, select **Call Setup (5)**.
2. Select **Auto Retry (1)**.
3. Use the Navigation Key to select from **Off**, **Every 10 seconds**, **Every 30 seconds**, or **Every 60 seconds** and press **OK**.

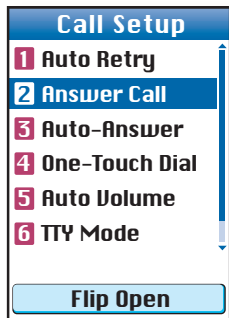

Answer Call

Allows you to determine how to accept an incoming call.


1. From the **Settings (9)** menu, select **Call Setup (5)**.
2. Select **Answer Call (2)**.
3. Use the Navigation Key to select from **Flip Open**, **Any Key**, or **TALK Only** and press **OK**.

Auto-Answer

Allows you to select the number of rings before the phone automatically answers a call.

1. From the **Settings (9)** menu, select **Call Setup (5)**.
2. Select **Auto-Answer (3)**.
3. Use the Navigation Key to select from **Off**, **After 1 ring**, **After 3 rings**, **Ans. Machine Speaker on**, or **Ans. Machine Speaker off** and press **OK**.


Note: This feature is intended for use with hands-free devices but is an independent feature of the phone and must be manually turned on or off.

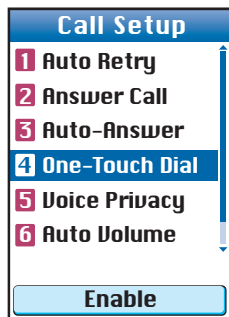

One-Touch Dial

Allows you to initiate a speed dial call by pressing and holding the speed dial digit.

1. From the **Settings (9)** menu, select **Call Setup (5)**.
2. Select **One-Touch Dial (4)**.
3. Use the Navigation Key to select from **Enable** or **Disable** and press **OK**.

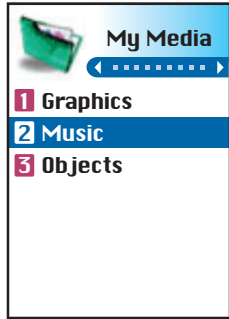

MY MEDIA FOLDER


Allows you to access and use a wide variety of graphics, sounds, and animations that are stored in your phone. Select graphics for wallpaper, ringtones for incoming calls, and pictures, sounds and animations to attach to messages.

1. From the **My Media (7)** menu, select **Graphics (1)**, **Music (2)** or **Objects (3)**.
2. Use the Navigation Key to highlight your selection and press **OK**.

PERSONAL INFORMATION TOOLS

Scheduling an Alarm

1. From the **Tools (8)** menu, select **Alarm Clock (1)**.
2. Select from **Alarm 1 (1)**, **Alarm 2 (2)**, **Alarm 3 (3)**, or **Quick Alarm (4)** and press **OK**.
3. You may set the appropriate time, recurrence (if any), and ringer by scrolling to the corresponding field and entering the desired information.
4. Press **Left Soft Key** for **Save**.

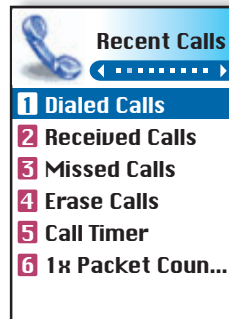


CALL HISTORY

Call History automatically logs up to 30 numbers for each category of dialed, received, and missed calls. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Making a Call from Recent Calls

1. From the **Recent Calls (2)** menu, select **Dialed Calls (1)**, **Received Calls (2)** or **Missed Calls (3)** and press **OK**.
 2. Select the desired entry and press **TALK** to connect.
- Shortcut: To quickly access the list of recent calls, press **TALK** from the main menu.

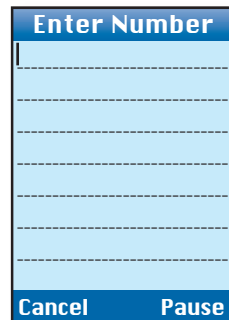

PHONE BOOK

The internal phone book is capable of storing up to 499 contacts with up to 5 numbers and 3 email addresses per contact.

Adding a New Phone Book Entry

1. From the **Contacts (1)** menu, select **New Number (2)**.
2. Enter the telephone number for the entry and press **OK**.
3. Select a label from **Home**, **Home 2**, **Office**, **Office2**, **Mobile**, **Mobile2**, **Pager**, **Fax**, **Fax2** or **None** and press **OK**.
4. Enter a name for the entry and press **OK**.
5. Set up a speed dial for this contact if you wish or press **Left Soft Key** for **Done**.



One-Touch Speed Dialing

One-Touch Speed Dialing: Enables you to dial 9 of your most frequently used numbers using a single key press. These numbers are stored in your phone book in memory locations 1 through 9. For locations 1 through 9, you can use one-touch dialing by pressing and holding the corresponding key to the memory location to be dialed or press a digit, then press **TALK**.

Two-Touch Speed Dialing: Enables you to dial numbers in your phone book through two keys (for locations 10 to 99).

1. From the **Contacts (1)** menu, select **Speed Dials (5)**.
2. Select or enter a slot number and press **OK**.
3. Select a name from the list using the Navigation Key and press **OK**.
4. Select the desired number and press **OK**.

Contacts (1)

- 1 List Contacts
- 2 New Number
- 3 New E-mail
- 4 Groups
- 5 Speed Dials
- 6 My Contact Info

Recent Calls (2)

- 1 Dialed Calls
- 2 Received Calls
- 3 Missed Calls
- 4 Erase Calls
 - 1 Dialed Calls
 - 2 Received Calls
 - 3 Missed Calls
 - 4 All Calls
- 5 Call Timer
 - 1 Last Call
 - 2 Home Calls
 - 3 Roam Calls
 - 4 All Calls
- 6 1x Packet Counter
 - 1 Received
 - 2 Transmitted
 - 3 Total

Messages (3)

- 1 Voice Mail
- 2 New Message
- 3 Inbox
- 4 Outbox
- 5 Saved
- 6 Msg Settings
 - 1 Auto Save

2 Auto Delete

- 3 Callback #
- 4 Msg Alerts
- 5 Signature
- 6 Direct View
- 7 Entry Mode
- 8 Edit Voice Mailbox #
- 9 Quick-Text
- 0 Auto Play
 - * Font Size
- 7 Erase All
 - 1 Inbox
 - 2 Outbox
 - 3 Saved
 - 4 All

Voice (4)

- 1 Start Commands
- 2 Voice Scheduler
- 3 Voice Memos
- 4 Voice Settings
 - 1 Voice Commands
 - 2 Announce Alerts
 - 3 Best Match
 - 4 Train Commands
 - 5 Train Digits
- 5 Driving Mode
- 6 Help

Access Apps (5)

- 1 Access Apps
- 2 Access Info

Mobile Web (6)

- 1 Start Browser
- 2 Web Messages
- 3 Web Settings

My Media (7)

- 1 Graphics
- 2 Music
- 3 Objects

Tools (8)

- 1 Alarm Clock
- 2 Notepad
- 3 Ez Tip Calc
- 4 Calculator
- 5 World Clock

Settings (9)

- 1 Sounds
 - 1 Ringers
 - 2 Key Tone
 - 3 Volume
 - 4 Alerts
 - 5 Power On/Off Tone
- 2 Display
 - 1 Banner
 - 2 Backlight
 - 3 Screens
 - 4 Menu Style
 - 5 Clocks
 - 6 Theme Colors
 - 7 Status LED Colors
 - 8 Contrast
 - 9 Fonts
 - 0 Language

3 System

- 1 Select System
- 2 Set NAM
- 3 Auto NAM
- 4 Serving System

4 Security

- 1 Lock Phone
- 2 Restrict
- 3 Emergency #s
- 4 Change Code
- 5 Erase Contacts
- 6 Reset Default

5 Call Setup

- 1 Auto Retry
- 2 Answer Call
- 3 Auto-Answer
- 4 One-Touch Dial
- 5 Auto Volume
- 6 TTY Mode

6 1x Data

7 Location

8 Phone Info

- 1 My Phone Number
- 2 S/W Version
- 3 Icon Glossary
- 4 Shortcut Help

