

# **Comfee**

## **Vacuum Cleaner 20S Series**

**PLEASE READ THE  
MANUAL CAREFULLY  
BEFORE USING AND  
KEEP IT PROPERLY FOR  
FUTURE USE**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference.

## **INSTRUCTION MANUAL**



 


- If the supply cord is damaged, It must be replaced by the manufacturer, its service agent or qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children without supervision.
- Children should not play with the appliance.
- The appliance is only to be used with the power supply unit provided with the appliance.
- The appliance must only be supplied at safety extra low voltage corresponding to the marking on the appliance.
- The instructions for appliances incorporating a battery that contains materials that are hazardous to the environment shall give details on how to remove the battery and shall state that
  - the battery must be removed from the appliance before it is scrapped;
  - the appliance must be disconnected from the supply mains when removing the battery;
  - the battery is to be disposed of safely.
- The instructions for appliances incorporating batteries that are intended to be replaced by the user shall include the following:
  - the type reference of the battery;
  - the orientation of the battery with regard to polarity;
  - the method of replacing batteries;
  - details regarding safe disposal of used batteries;
  - warning against using non-rechargeable batteries;
  - how to deal with leaking batteries.
- The plug must be removed from the socket-outlet before cleaning or maintaining the appliance.


- CAUTION: This hose contains electrical connections:
  - do not use to suck up water (for vacuum cleaners only);
  - do not immerse in water for cleaning;
  - the hose should be checked regularly and must not be used if damaged.
- Please keep the vacuum cleaner in laid down position when storing.  
The vacuum cleaner can't stand by itself, please put it to the base stand after use.
- When you pause using the vacuum cleaner, please put it to the base stand or leave it in laid down position.

# 02

## STRUCTURE OF THE PRODUCT

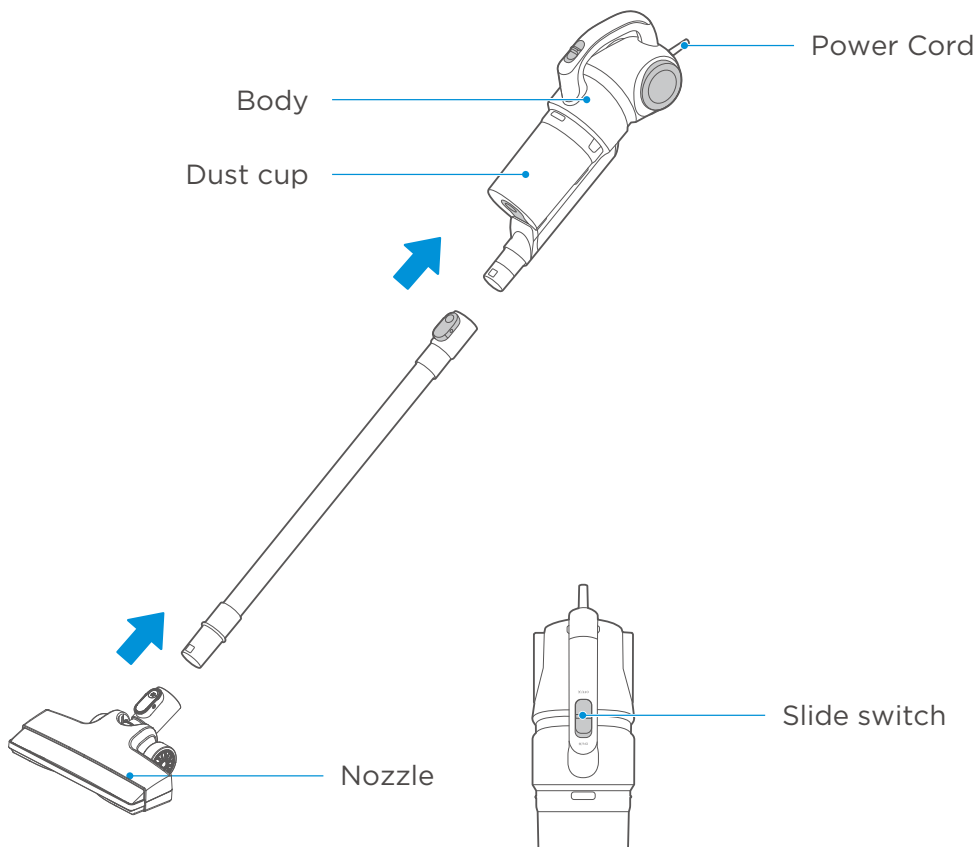

Accessories list:

 

Instruction Manual



Accessories holder



Dusting brush tool



Crevice tool

### Tips:

When cleaning the high places, please assemble the accessories on tube or body.

 
**Note:**

To avoid the air flue being blocked, please clean the big particle waste, such as paper, cloth and others.

Before connect to power, be sure the slide switch is closed.

**Operation instruction**


1. Connect the power to AC 120V power socket.
2. Push forward "Slide switch" to start.
3. Pull backward "Slide switch" to stop.

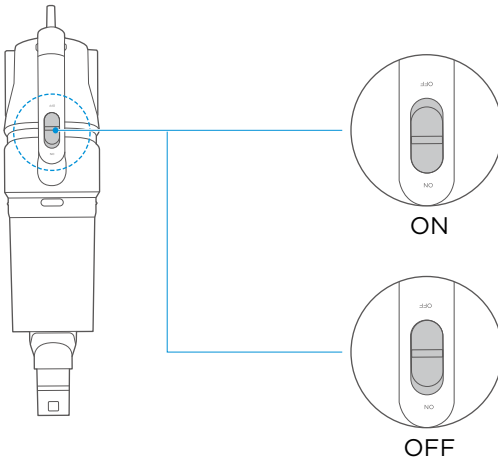**Wall-hung assembly and usage**

1. Wall-hung assembly.

When not using the cleaner, please store the cleaner on wall.

 2. Choose the wall-hung assembly location.

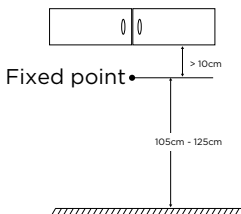

3. Fixed the M3/M4/M5/M6 screw to the fixed point, and be sure the distance between surface of screw and wall surface is bigger than 3mm.

4. Store the cleaner on wall.

# 04

 
# MAINTENANCE

## Dust cup disassembly and clean

### Tips:

To keep the suction power of cleaner, please clean the dust in it regularly.


1. Knob down the dust cup release button, take down the cup.

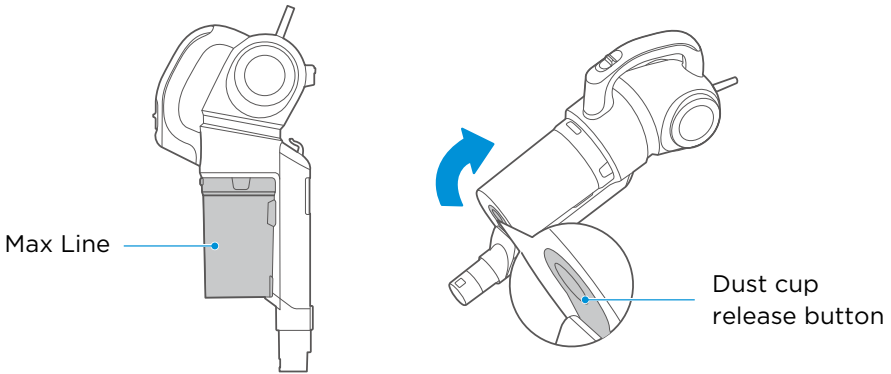

2. Take out the cyclone from dust cup and release dust.



 3. Disassemble cyclone and clean, all parts are washable.

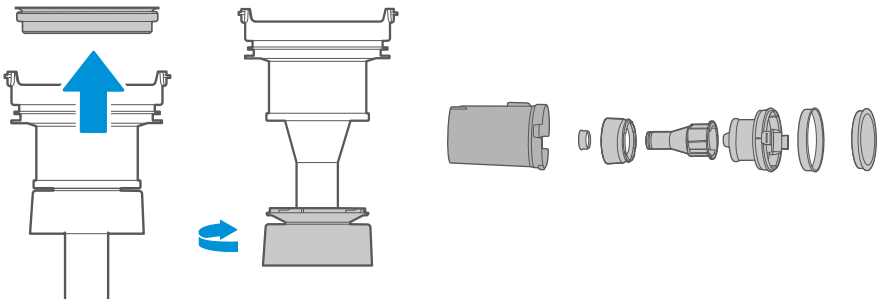


4. After drying all parts thoroughly., assemble them according to disassembly steps.

**Clean and maintain nozzle**

 **Note:**

1. To avoid affect the normal operation of nozzle, when wheels are dusty, please clean and maintain them.
2. When disassemble and main brush, please make sure it's not working.
3. Push button and take off the nozzle.

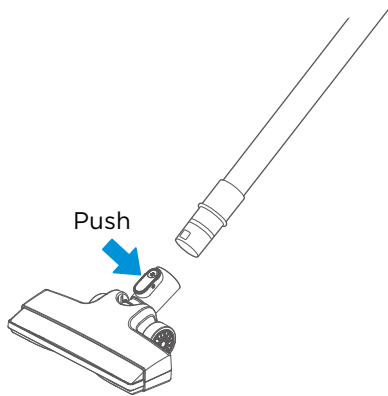

**Tips:**

Don't suggest to wash the nozzle.




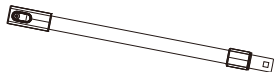



If the wheels were tangled by hair, please use scissor or knife to clean.

# Problem Solving

**⚠ Make sure vacuum is turned off and power cord is unplugged.**

| Problem  | Solution   |
|--|--|
| <b>Motor will not start.</b>                       | 1. Push plug securely into outlet, try another outlet, or check circuit breaker.   |
| <b>Vacuum cleaner does not vacuum effectively.</b> | 1. Filters may be clogged, wet, or dirty. Follow instructions for cleaning filters.<br>2. Dust cup may be full. Follow instructions for emptying dust cup. |
| <b>Dust blows out of air vents.</b>                | 1. Ensure filters are properly secured.  |

## Parts and Accesories
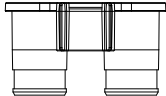
|   |                    |        |
|---|--------------------|--------|
|    | Cyclone(no filter) | N02030 |
|    | Filter             | N02020 |
|    | Nozzle             | N02040 |
|   | Wand               | N02050 |
|  | Crevice tool       | N02060 |
|  | Dusting brush tool | N02070 |
|  | Accessories holder | N02080 |



# WARRANTY

## **ONE-YEAR LIMITED WARRANTY**

Midea USA Inc. warrants this product to be free from defects in material or workmanship for a period of one(1) year following the date of purchase, provided that the product is used in a home environment. This limited warranty does not cover failures due to abuse, accidental damage or when repairs have been made or attempted by anyone other than MIDEA authorized service agent. A defective product meeting the warranty conditions set forth herein will be replaced or repaired at no charge in either of two ways:

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided that the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges. Proof of purchase may be required. Please check with the retailer for its specific return policy regarding time limits for returns or exchanges.

The second option is to take or send the product (prepaid) to a MIDEA authorized service agent for repair or replacement at MIDEA's option.

Proof of purchase may be required. This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state. This product is not intended for commercial use, and accordingly, such commercial use of this product will void this warranty. All other guarantees, express or implied, are hereby disclaimed.

For assistance with your product, call the customer service help line at 1-800-282-2886