Panasonic®

Advanced Hybrid System User Guide

for KX-T77 Series

Model No. KX-TA824



Please read this guide before using and save for future reference.

Con Outside (C	O) Line button	PF Program	mmable Feature button	Feature number
Off-hook	On-hook	رريخ Talk	* "Location of Cont	rols" is shown on page 9.

Desired Feature	Operation			
	Making Calls			
Calling	To an external party			
Redial	PEDIAL NO. S. C.			
One-Touch Dialing	To program PROGRAM O PROGRAM O PROGRAM PROGRAM PROGRAM PROGRAM STORE PROGRAM PROGRAM PROGRAM O STORE PROGRAM PROGRAM O STORE O O O O O O O O O O O O O			
Calling an operator	> • • • • • • • • • • • • • • • • • • •			
Speed Dialing (Personal)	To store			
Speed Dialing (System)	To dial NUTO DIAL System speed dial no. ► (\(\bigcup_{\lambda(l)}^{\infty} \bigcup_{\infty}^{\infty} \bigcup_{\infty}^			
Handsfree answerback (Other than KX-T7750)	Receiving Calls While on-hook AUTO ANS MUTE			
Picking up a call	Directed 4 • extension no. Group 4 0			

Desired Feature	Operation			
	When the Dialed Extension is Busy/No Answer			
Automatic Callback Busy	To set While hearin 6 ▶	To call If you hear callback ringing		
Message Waiting	Sender	To leave a notification MESSAGE O To cancel a notification		
	Receiver	To call back MESSAGE MESSAGE To clear all notifications ↑ 0 0 ↑ # ↑ ♠		
Call Waiting	Sender	While hearing a busy tone 1 ▶ Wait for an answer. ▶ ((())		
	Receiver	For outside calls 7 3 1 1 # Set 7 3 1 0 # Cancel For intercom calls 7 3 2 0 # Cancel To talk to the new party While hearing the Call Waiting tone Terminating a current status Holding a current status HOLD CO MITERCOM F(I) F(I)		


Desired Feature	Operation			
	During a Conversation			
Holding a call	Holding Hold For retrieve a call at the holding extension NTTERCOM NTTERCOM NTERCOM NTE			
	To retrieve an outside call from another extension ▶ □ ► □ ► □ ← □ ← □ ← □ ← □ ← □ ← □ ← □ ←			
Holding a call exclusively	Holding HOLD HOL			
Transferring a call	Screened TRANSFER Extension no. To an extension To an external party (System programming is required.) Unscreened to an extension TRANSFER Extension no. Extension no.			
	Useful Features			
Paging	To page All extensions 3 3 0 Group 3 3 ▶ group no. All external speakers 3 4 All extensions & external speakers 3 3 ★			
	From a telephone speaker 4 3 From an external speaker 4 3			

Desired Feature	Operation			
	Useful Features			
Three-party conference	third party's no. (4) (5) (6) (7) (8) (9) (10) (1			
Setting Absent	To set 7 5 ▶ message no. ▶ parameter (if required) ▶ # ▶ #			
Message	To cancel			
Log-In/Log-Out	For Log-Out For Log-Out			
Forwarding a call	All calls Nextension no. #			

Desired Feature	Operation			
	Useful Features			
Do Not Disturb (DND)	FWD/DND [4 # Set 0 # Cancel			
Locking your extension	(Lock code is 4 digits.) 7 7 lock code lock code ▶ # Lock 7 7 lock code ▶ # Unlock			
Clearing the setting				

Desired Feature	Operation				
	To Make Use of Voice Mail Service				
Listening Message	From your Own Extension	Extension No. of the VPS Password # If you have no password, you can skip the last step.	■ KX-TVA series 1 Listen to Message 2 Deliver Message 3 Mailbox Management 4 Automated Attendant 5 Message Notification		
	From someone else's extension	Extension No. of the VPS # 6	Check Mailbox Distribution Mailbox Management Other Features End Call KX-TVS series 1 Listen to Message Check Mailbox Distribution Automated Attendant Mailbox Management Other Features End Call		
Leaving Message	■ Mailbox	nsion No. of the VPS ► # 6 ► No. / # 1 first 3 or 4 of r Message	name ▶		
During Playback	0 Repea	at Voice Guidance lenu			

Location of Controls

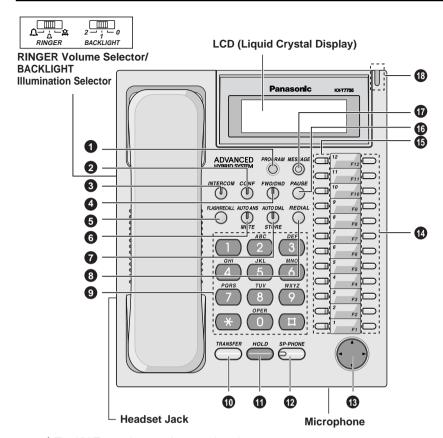

- * The KX-T7750 does not have a microphone.
- * The backlit display is only available on the KX-T7730/7731/7735/7736.
- * The headset is an option. Recommended headsets are KX-TCA91 and KX-TCA92.
- PROGRAM: Used to enter and exit the programming mode.
- CONF (Conference): Used to establish a multiple party conversation.
- 3 INTERCOM: Used to make or receive intercom calls.
- FWD/DND (Call Forwarding/Do Not Disturb): Used to perform Call Forwarding or Do Not Disturb.
- **5** FLASH/RECALL: Used for External Feature Access or to disconnect the current call and make another call without hanging up.

6 AUTO ANS (Auto Answer) (Other than KX-T7750): Used to receive an incoming call in the hands-free mode.

MUTE (Other than KX-T7750): Used to mute the microphone during a conversation.

VOICE CALL (KX-T7750 only): Used to receive a notification via monitor in place of ringing.

- **AUTO DIAL/STORE:** Used for speed dialing or storing program changes.
- 8 REDIAL: Used to redial.

Location of Controls

- DIALING BUTTONS WITH BACKLIGHT (KX-T7731/36): Dialing buttons are backlit when (1) you receive a call, (2) during a conversation, or (3) when BGM is activated at your phone.
- TRANSFER: Used to transfer a call to another party.
- **MOLD:** Used to place a call on hold.
- **SP-PHONE (Other than KX-T7750):** Used for the handsfree operation.

MONITOR (KX-T7750 only): Used for handsfree dialing. You can monitor the other party's voice handsfree.

(KX-T7730/7731/7735/7736):
Used to adjust the volume and the display contrast, or select desired items.

VOLUME KEY (KX-T7720/7750): Used to adjust the volume.

Programmable Feature (PF) Button:
Used as an One-Touch Dialing button
(Button assignment is required).

- Used to make or receive an outside call.

 Pressing this button seizes an idle outside line automatically. (Button assignment is required.) Also used as feature buttons. (Button assignment is required.)
- **PAUSE:** Used to insert a pause during dialing.
- **MESSAGE:** Used to leave a message waiting indication, or call back the party who left the message waiting indication.
- **Message/Ringer Lamp:** The Message/ Ringer lamp informs you visually that you have a message or a call.
 - When you receive a call, the lamp flashes depending on the ringing pattern. When the ringing pattern is set to Single (Slow flash), Double (Moderate flash), or Triple (Rapid flash) in your PBX, the lamp flashes. When the other ringing patterns are set in your PBX, the lamp may not flash. (e.g., S-Double, Call Waiting Tone1).
 - When someone has left you a message, the lamp is lit continuously.

Initial Settings

◆ Speaker volume *

While on-hook or during a conversation









Press SP-PHONE.

Press Up or Down.

♦ Handset/Headset volume *

While using the handset or headset





Press Up or Down.

♠ Ringer volume/Backlight illumination





Slide the lever of the **RINGER** Volume Selector and **BACKLIGHT** Illumination Selector to the desired setting.

BACKLIGHT SW POSITION	2	1	0
LCD backlight	HIGH	LOW	OFF
DIALING BUTTONS backlight	AUTO	AUTO	OFF

AUTO: The backlight shines only during operation.

◆ Display contrast *

KX-T7730/7731/7735/7736



Press Left or Right.

* The above settings may return to default settings if the telephone line cord is disconnected, or the main unit's power is interrupted.



© 2005 Panasonic Communications Co., Ltd. All Rights Reserved.

Company Division of Panasonic

Corporation of North America

Secaucus, New Jersey 07094 http://www.panasonic.com/csd

One Panasonic Way,

Ave. 65 de Infantería, Km. 9.5,

Puerto Rico 00985

San Gabriel Industrial Park, Carolina,