

MP4 PLAYER USER MANUAL

Displayer



Note: VOL button means the round button in the middle. Due to the different firmware versions, some versions are showing “Radio” and some versions are showing “FM-Radio”. This makes no difference.


Basic Functions

- 1. Music playing: support WMA, WAV, MP3.**
- 2. Record: support FM, MIC record, support WAV format.**
- 3. Pictures: support JPEG, BMP, GIF**
- 4. Video: support AMV**
- 5. Support FM radio**
- 6. Support TXT**
- 7. Support function set**
- 8. Support USB upgrade**
- 9. Support 24 languages**
- 10. Support game**


List of Menus

To access different menu functions from main menu.


Music menu:

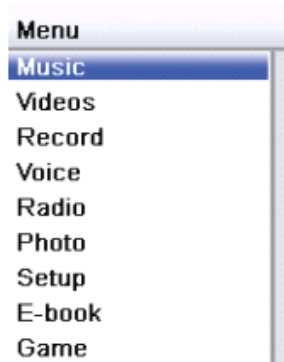


Videos Menu:

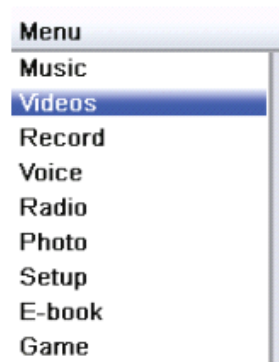 

Record Menu

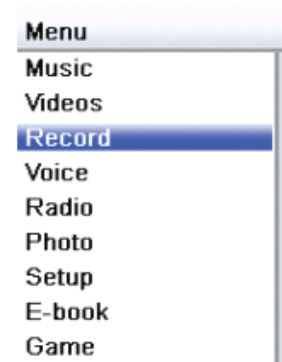

Voice Menu:

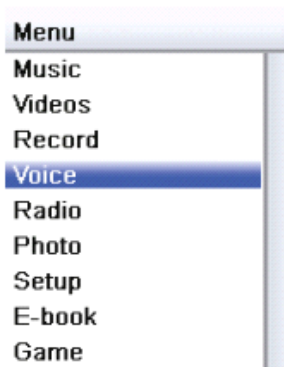

Radio Menu:



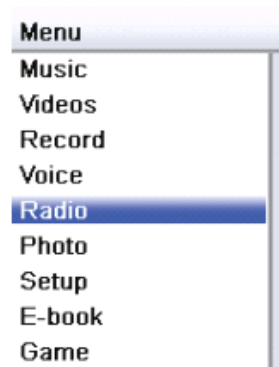



Photo Menu:

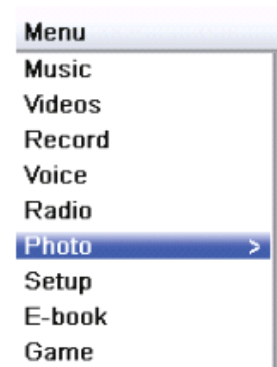


Setup Menu:

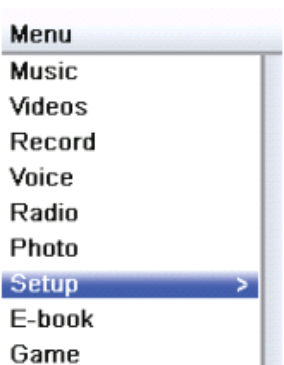

E-book Menu:

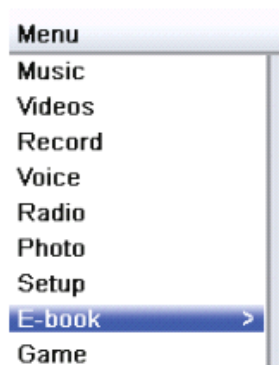

Game Menu:

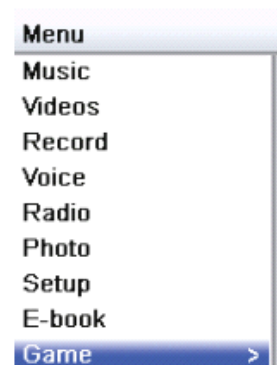 

Volume Adjust

Push VOL to access volume adjust, press Next/Last to increase or decrease volume.

Switch on/off

Push to switch to left side to power on and push it to the right side to power off.

When the idle time reached the power off time set by user, the player start to stand-by. press and hold **Play** to activate.

Press and hold **Play** to stand by and to activate.

Play & Pause:

exit from submenu


On music Menu, Press Play to play music. When playing music, press Play to pause.

On recording Menu, press Play to Start / Stop recording.

Functions for the buttons

1. Play/Pause : Standby and activate, Play, Pause, Stop
2. MENU: Enter main menu or exit from current menu.
3. Next : Next, FF, Volume increase
4. Last : Previous, Rev, Volume decrease
5. USB : USB outlet
6. ON/OFF: Power switch
7. Earphone: Standard earphone outlet

Play music

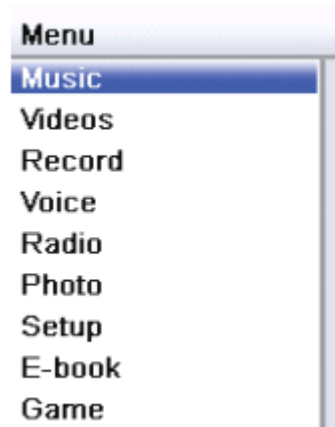

1. Put earphone plug into earphone outlet;
2. Power on the player
3. Enter to Music menu and press Play play music
4. Select a music: Last : Previous music; Next :Next music.
Volume adjusts: Press VOL to change volume, press Next to increase, last to decrease.

When playing music, the following functions are available:

1> Repeat

When playing music, press MENU to set the repeat mode.Seven modes are available.

--Normal: Play all the music in order.

--Repeat one: Repeat one music.

- Folder: Play all the music in the current folder in order.
- Repeat folder: Repeat all the music in the current folder.
- Repeat all: Repeat all the music.
- Random: Play music randomly.
- Intro: Preview every music for 10 seconds.

2>Equalizer

1. When playing music, press Menu to enter play submenu;
 3. Push Next choosing Equalizer Menu;
 4. Press Menu to entry 'Equalizer Menu' submenu.
- Detail of each equalizer (EQ):

Natural	Rock	Soft	Jazz
Pop	Classial	DBB	

Push Next to select an EQ and press Menu to confirm.

3> Temporate

Set the playing speed

4> Replay mode

To replay the music. To set the replay times and reply gap.

When in pause mode, the following functions are available:

1> Local folder

To check the voice files saved in the player

2> Delete file

Delete the music that the user don't want to keep.

3> Delete all

Deleta all the music

Synchronous Lyric Display

The player supports lyric files with *.LRC suffix, and displays synchronously.

How to use lyric files?

Please make sure the lyric has the same name to the music.

For example:

Music file: My heart will go on.mp3

Lyric file: My heart will go on.lrc

How to know if lyric available?

If lyric matched, a symbol will be shown on bottom-right in music Menu.

When matched lyric available, press and hold Menu to enter lyric interface and Lyric displays. Press Menu return to music Menu.

Video

Similar with music playing

Record

Please make sure the battery has enough capacity before making record. Each fold can save up to 99 voice recording files.

Recording on “Record Menu”


1. Entry main menu:
2. Push Next scroll to Record Menu
3. Push Menu to select Record mod
4. Press Play to start/stop recording. Press and hold Play to save the record. Press and hold MENU to save the record and go back to the main menu.

Voice

Files saved by record

FM radio

1. Enter main menu, different firmware versions may show FM-Radio.

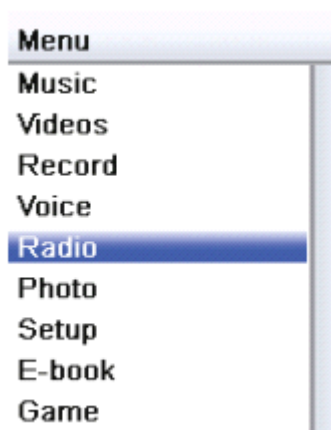

2. Push Next scrolling to “FM-Radio Menu”
 3. Push Menu to entry
 4. Auto tuning
- Hold Last/Next 2 seconds to start the channel search in 87-108 KHz. Press Last/Next to stop auto tuning.

5. Manual tuning

Push Last/Next to select channels.

6. Save current channel:

Push Menu to entry FM submenu

Press Menu again to save channel.

7. Listening to a saved channel:

 
You can press Play to choose a saved channel.

Photo

Press MENU to enter photo menu and press Play to view photos. Press Last/Next to view previous and next photos.

Setup

Entry Settings

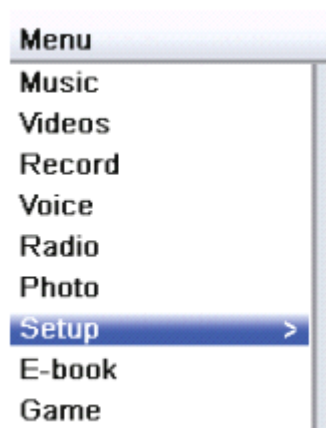

You can set system performances here, options may vary in different firmware version

1. Entry main menu
2. Push Next Scrolling into “Settings”
3. Press Menu to entry.

–Options introduction:

1> System time

Press VOL to switch YEAR/MONTH/DATE/MINUTE/SECOND. Press Last/Next to set the time. Press MENU to save.

2> LCD set

Screen will become dark without any operation in the set time. Press Menu to enter. Press VOL and Last/Next to set the time. 0-50 seconds can be set. But in these 5 modes, the screen will not go dark: picture-viewing,, Video playing, e-book, USB connected to computer and lyric playing.

3> Language

Simplified Chinese, Traditional Chinese, English, Japanese, Korean, French, German,

Italian, Dutch, Portuguese, Spanish, Swedish, Danish, Czech, polish, Russian, Turkish, Hungarian, Romania, Arabic, Hebrew, Thai, Bahasa Indonesia, Greek.

4> Power off

You can set time in seconds on “off time” Menu, allow the player shut down automatically when player become stop and idle for the period you have set. 0-200 seconds can be set. But this function is not available in these modes: USB connected, recording, FM radio, picture-viewing, e-book autorun. You can set time in minutes on “Sleep time”, allow the player shut down automatically when the player become idle (regardless current status) for the period you have set. It is designed for listening music before sleep. Please note: Sleep Menu valid only once after setting, you have to set again if you want to use it next time. 0-120 minutes can be set.

5> Online mode

--Multiply driver: When connect the player to PC, it will show both normal partition and encrypted partition(if this is set by the user).

--Normal only: When connect the player to PC, it will show the normal partition only.

--Encrypted only: When connect the player to PC, it will show the encrypted partition(if this is set by the user) only.

6> Memory info

It shows the total capacity and used percentage of the memory.

7> Firmware version

You can find the player’s firmware version.

8> Firmware upgrade

Download the latest firmware version to PC and connect the player with PC to upgrade the firmware.

9> Exit

Back to the main menu

E-book

Press MENU to enter. Press Play to start reading. Press Last/Next to turn the pages.

Game

Press MENU to see the game list. Press Last/Next to select the game.