

The information and specifications included in this publication were in effect at the time of approval for printing. Honda Motor Co., Ltd., reserves the right, however, to discontinue or change specifications or design at any time without notice and without incurring any obligation.

#### Accessories Precautions

The GPS antenna is located on the roof. Trees, tall buildings, highway overpasses, tunnels, or overhead electrical power wires can easily interrupt or interfere GPS reception. Signal noise from devices such as radar detectors, vehicle tracking devices, remote starters, and additional amplifiers can disrupt the navigation system. If you install any such item, install it away from the navigation display and antenna.

#### Important Safety Information

### **WARNING**

Using the navigation system while driving can take your attention away from the road, causing a crash in which you could be seriously injured or killed.

Only operate system controls when the conditions permit you to safely do so.

Avoid focusing on the screen or manually operating the system controls while driving.

Certain on-screen controls are disabled when driving, however most of the voice commands continue to function. Pull to the side of the road if you need to devote more attention and time to look at the screen or access additional menus.

Route guidance may conflict with street closures, road construction, detours, and out-of-date map data.

The system itself may also have limitations. Verify route information by carefully observing roads, signs, and signals. Always use your own judgment and obey traffic laws.


#### **NOTICE**

This vehicle's navigation display, if so equipped, includes mercury-containing components. Upon removal, please reuse, recycle, or dispose of as hazardous waste. Clean the screen with a soft, damp cloth. You may use a mild cleaner intended for use on navigation screens.


\* Not available on all models

# System Controls


## Audio/Information Screen

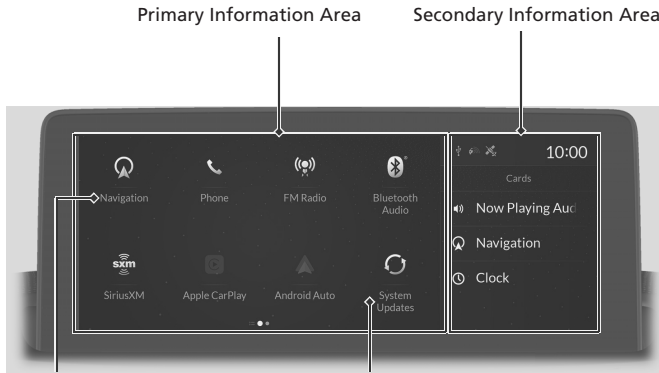



**Navigation**  
Displays the navigation screen.

**HOME Screen**  
The system displays various functions from the HOME screen. Press the  (Home) button on the true touchpad at any time to return to the main HOME screen.
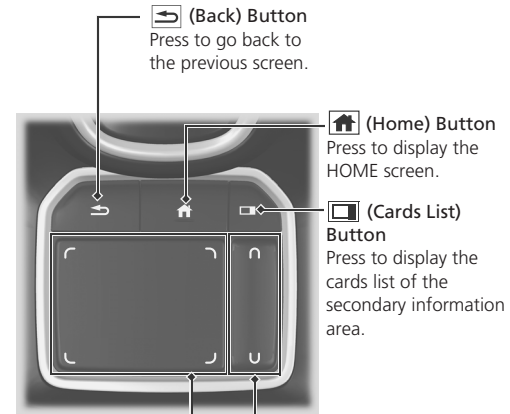
## True Touchpad



 **(Back) Button**  
Press to go back to the previous screen.

 **(Home) Button**  
Press to display the HOME screen.

 **(Cards List) Button**  
Press to display the cards list of the secondary information area.

**True Touchpad A**  
Tap or swipe the pad with your finger, or move your finger along the pad to operate the primary information area.

**True Touchpad B**  
Tap or swipe the pad with your finger to operate the secondary information area.

\* Not available on all models


# True Touchpad Operation

 You can operate the navigation system using your finger on the true touchpad A.

You can change the true touchpad sensitivity setting.


📖 Refer to the Owner's Manual.

## Swipe




Swipe or drag your finger in various directions to operate the menu screen.

## Click

 

Lightly press true touchpad A to select an item.

## Press and Hold

 

Press the true touchpad A and hold it down for a moment.

## Two-finger Drag



Swipe or drag two fingers across the true touchpad A to move the map.

## On List Screen

- 1 If necessary, swipe your finger vertically on the true touchpad A to scroll the list. You can scroll the list when the slider is displayed.




- 2 Move your finger around on the true touchpad A to highlight the item you want to select, then click the true touchpad A to make your selection.



- Additional menus are available for some options. To access the additional menu, press and hold the true touchpad A while the desired option is highlighted.


## On Map Screen

- 1 If necessary, move two fingers in the direction in which you want the map to move. The map moves along with your fingers.

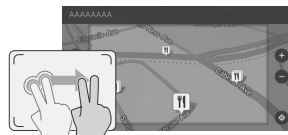

- Swipe one finger to scroll the map by one page.

- 2 Move your finger around on the true touchpad A to highlight the item you want to select, then click the true touchpad A to make your selection.

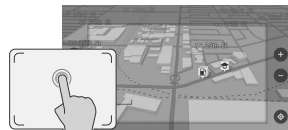


# How to Enter Information

You can enter information (e.g., city names, street names, numbers, and symbols) when prompted on the input screen. There are three modes to enter information.

## Handwriting Mode

Move your finger slowly to trace a character on the true touchpad A.


The system will read what you write back to you character-by-character.

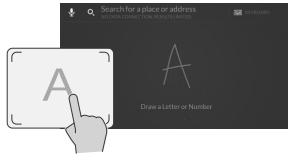

- Click anywhere to get search results.
- Swipe your finger from right to left to remove the last entered character.
- Swipe your finger from left to right to enter a space character.

## On-Screen Keyboard Mode


Select **KEYBOARD** at the top right of the screen, and then select a character or icon on the visual keyboard.

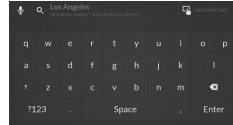

- Select **Enter** to get search results.
- Select **X** to remove the last entered character.
- Select **↑/↓** to display upper/lower case characters.
- Select **Space** to enter a space character.
- Select **?123/ABC** to display other types of characters.
- Select **HANDWRITING** at the top right of the screen to toggle to the handwriting mode.

## Speech Recognition Mode

Select **🗣️** at the top left of the screen or press the **🗣️** (Talk) button, and then say a word to enter.

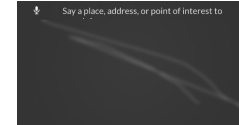

# Map Screen Legend

The color of the map is different depending on the selected map color scheme.



## Exploration Mode

In exploration mode, you can browse the map or select a location/POI icon directly from the map. Select **EXPLORE** to use the map in the exploration mode.




\* Not available on all models

## During Route Guidance

During route guidance, route information is displayed on the map screen.


You can see information of upcoming turns on the turn list screen.

### Map Screen

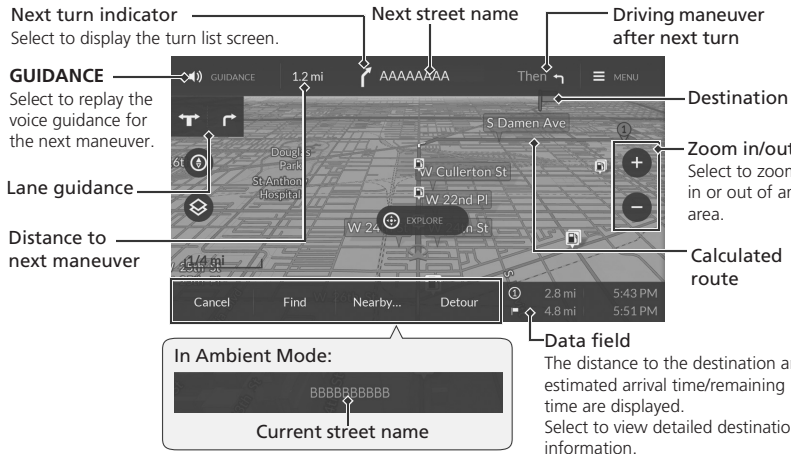


### Mini Map

You can also see the next driving maneuver on the mini map in the secondary information area. Press the (Cards List) button, select **Navigation** and then press the true touchpad B to display the mini map.

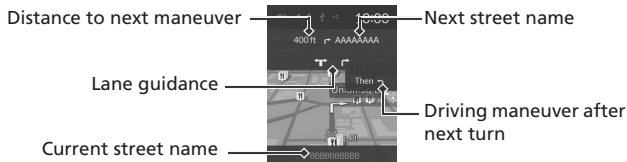


### Turn List Screen

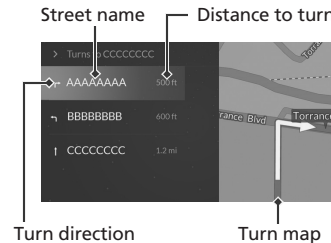

### Turn-by-Turn Directions

The next guidance point appears on the head up display\* or multi information display if you set turn-by-turn information to be displayed.

#### Remaining distance

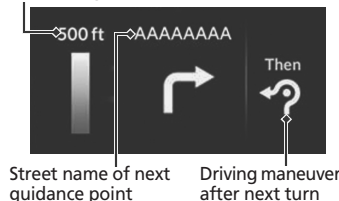

For more information, refer to the Owner's Manual.

\* Not available on all models


## Navigation—Home Address and Going Home

The “Home” feature automatically routes you to your home address from any location simply by selecting **Home**.

Set your home location to use the feature.


The order of the steps may change depending on the map data loaded on your system.

### Storing Your Home Address

1 Press the  (Home) button and then select **Navigation**.


2 Select **Find**.

3 Select **Set Home Address**.

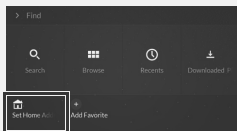


4 Enter your home address.

5 Click the true touchpad A.

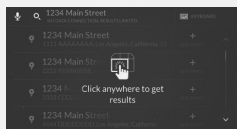


● If you use the on-screen keyboard, select **Enter**.


6 Select an address from the search results.

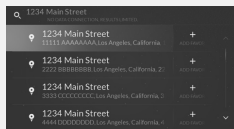

7 Select **Add to Favorites**.

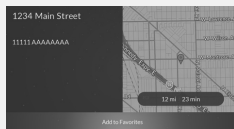


### Going Home

1 Press the  (Home) button and then select **Navigation**.

2 Select **Find**.


3 Select **Home**.

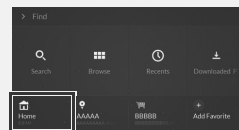

\* Not available on all models


# Navigation—Entering a Destination

Enter your destination using one of several methods, then follow route guidance on the map to your destination. The order of the steps may change depending on the map data loaded on your system.

1 Press the  (Home) button and then select **Navigation**.


2 Select **Find**.

3 Select **Search**.

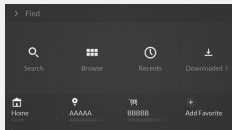

4 Enter an address.


5 Click the touchpad A.

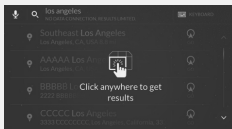

- If you use the on-screen keyboard, select **Enter**.

6 Select **GO** on the right side of the address.

Route guidance to the destination begins.

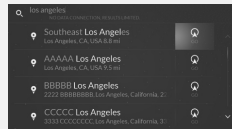



- If you select the address, you can view its detailed information.



## Navigation\*



Turn-By-Turn Driving Directions

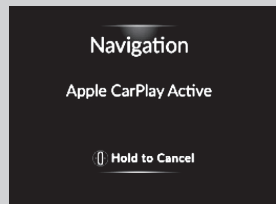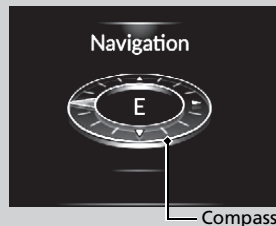

Display Audio shows you turn-by-turn directions to your destination.

### Models with navigation system

When the navigation system is not providing driving guidance, an image of a compass appears in the multi-information display.

## Navigation\*

You can cancel the driving guidance by pressing and holding the right selector wheel.

A confirmation screen appears when Apple CarPlay navigation route is active.

You can select whether to have the turn-by-turn display come on or not during the route guidance.

### Models without navigation system

Turn-by-turn directions will be shown on the multi-information display only when your android phone is connected to Android Auto or your iPhone is connected to Apple CarPlay.

\* Not available on all models