NOTE: Please read all instructions carefully before using this product

Table of Contents

Safety Notice

Hardware Pack

Assembly Instruction

Parts List

**Resistance Chart** 

Warranty

Ordering Parts


Model MWM-980

Retain This Manual for Reference

08-07-09

OWNER'S MANUAL



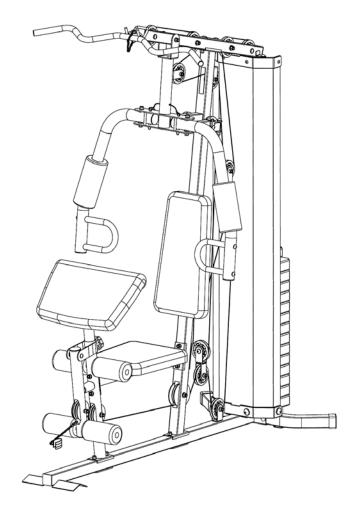

## TABLE OF CONTENTS

BEFORE YOU BEGIN	1
IMPORTANT SAFETY NOTICES	2
HARDWARE IDENTIFIER	4
ASSEMBLY INSTRUCTIONS	6
PARTS LIST	24
RESISTANCE CHART	25
WARRANTY	26
ORDERING PARTS	26

## **BEFORE YOU BEGIN**

Thank you for selecting the MARCY MWM-980 HOME GYM. For your safety and benefit, read this manual carefully before using the machine. As the distributor, we are committed to provide you complete customer satisfaction. If you have any questions, or find there are missing or damaged parts or you require assistance assembling this product, we guarantee you complete satisfaction through direct assistance. To avoid unnecessary delays, please call our Customer Support Department Monday to Friday 9am to 5pm.

Tel / Fax: 00 44 115 9820 122 E mail: info@escaladesupport.co.uk

Supplied by

### Escalade International Ltd

www.escaladesports.co.uk E mail: info@escaladesports.co.uk

## **SAFETY NOTICE**

#### **PRECAUTIONS**

This exercise machine is built for optimum safety. However, certain precautions apply whenever you operate a piece of exercise equipment. Be sure to read the entire manual before you assemble or operate your machine. In particular, note the following safety precautions:

- 1. Keep children and pets away from the machine at all times. DO NOT leave children unattended in the same room with the machine.
- 2. Only one person at a time should use the machine.
- 3. If the user experiences dizziness, nausea, chest pain, or any other abnormal symptoms, STOP the workout at once. CONSULT A PHYSICIAN IMMEDIATELY.
- 4. Position the machine on a clear, leveled surface. DO NOT use the machine near water or outdoors.
- 5. Keep hands away from all moving parts.
- 6. Always wear appropriate workout clothing when exercising. DO NOT wear robes or clothing that could become caught in the machine. Running or aerobic shoes are also required when using the machine.
- 7. Use the machine only for its intended use as described in this manual. DO NOT use attachments not recommended by the manufacturer.
- 8. Do not place any sharp object around the machine.
- 9. Disabled person should not use the machine without a qualified person or physician in attendance.
- 10. Before using the machine to exercise, always do stretching exercises to properly warm up.
- 11. Never operate the machine if the machine is not functioning properly.
- 12. A spotter is recommended during exercise.
- 13. Do not intend to insert weight selector pin while the weight stack or top plate is in elevated position.
- 14. Be certain the weight Selector Pin is completely inserted.
- 15. Never use dumbbells or other means to increase the weight resistance. Use only weight plates provided by manufacturer.
- 16. This machine is designed and intended for home and consumer use only, not for commercial use.


### CARE AND MAINTENANCE

- 1. Lubricate moving parts with WD-40 or light oil periodically.
- 2. Inspect and tighten all parts before using the machine.
- 3. The machine can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.
- 4. Failure to examine the gym regularly may affect the safety level of the equipment.
- 5. Maximum user's weight: 140 kg.

WARNING: BEFORE BEGINNING ANY EXERCISE PROGRAM, CONSULT YOUR PHYSICIAN. THIS IS ESPECIALLY IMPORTANT FOR INDIVIDUALS OVER THE AGE OF 35 OR PERSONS WITH PRE-EXISTING HEALTH PROBLEMS. READ ALL INSTRUCTIONS BEFORE USING ANY FITNESS EQUIPMENT. IMPEX INC. ASSUMES NO RESPONSIBILITY FOR PERSONAL INJURY OR PROPERTY DAMAGE SUSTAINED BY OR THROUGH THE USE OF THIS PRODUCT.


SAVE THESE INSTRUCTIONS.

## WARNING LABEL REPLACEMENT

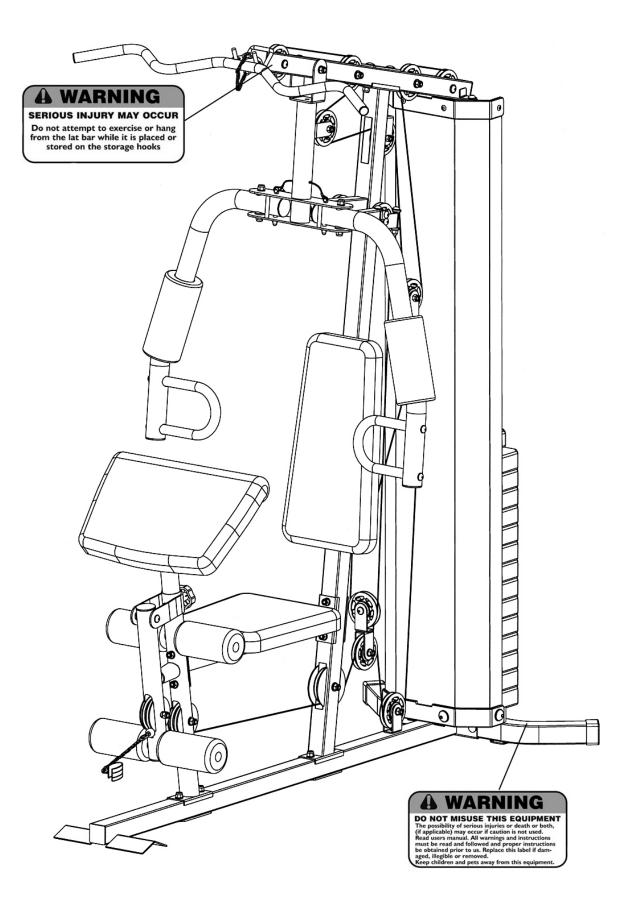


## HARDWARE PACK

NOTE: The following parts are not drawn to scale. Please use your own ruler to measure the size.

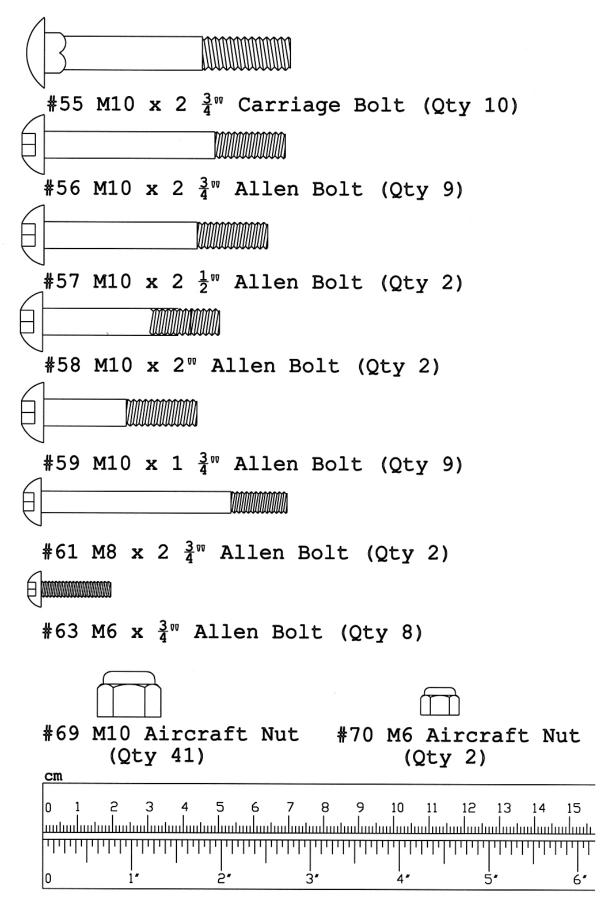

## HARDWARE PACK

NOTE: The following parts are not drawn to scale. Please use your own ruler to measure the size.

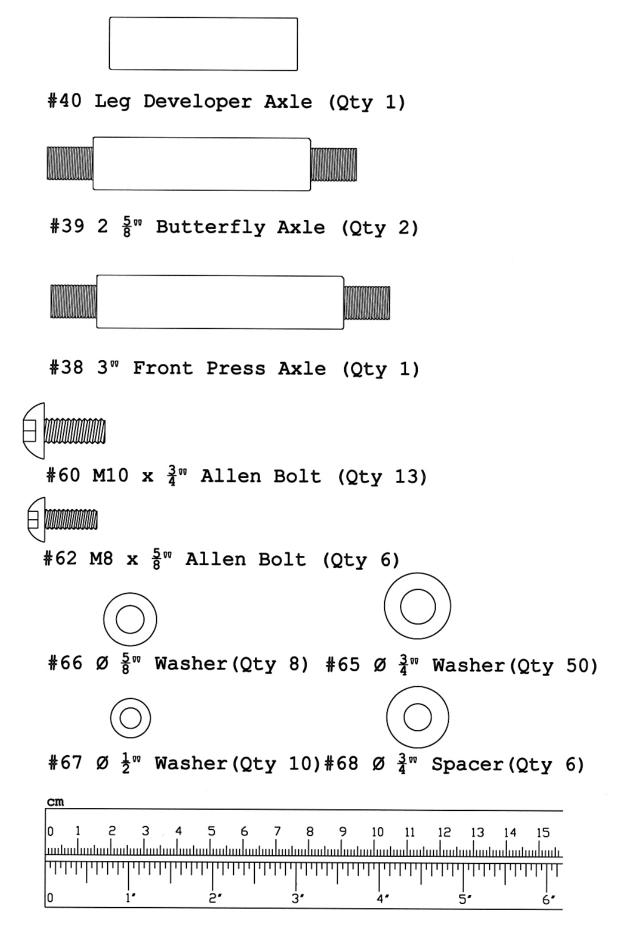


## **ASSEMBLY INSTRUCTION**

Tools Required for Assembling the Machine: Two Adjustable Wrenches and Allen Wrenches. NOTE: It is strongly recommended this machine to be assembled by two or more people to avoid possible injury.


#### STEP 1 (See Diagram 1)


- A.) Insert the two Guide Rods (#17&#75) into the holes on the Rear Stabilizer (#4). Secure each Guide Rod with one M10 x ¾" Allen Bolt (#60) and Ø ¾" Washer (#65) from the bottom. The Guide Rods have holes on the rods to lock the weight stack when not in use. The shorter end of the guide rod with the lock holes will need to be pointed downwards towards the Rear Stabilizer.
- B.) Do not tighten all Nuts and Bolts starting from this procedure until instructed to do so.
- C.) Attach the rear of Base Frame (#3) to the Rear Stabilizer. Secure them with two M10 x 2 <sup>3</sup>/<sub>4</sub>" Carriage Bolts (#55), one 2" x 7" U-shaped Bracket (#21), two Ø <sup>3</sup>/<sub>4</sub>" Washers (#65), and two M10 Aircraft Nuts (#69).
- D.) Attach the Vertical Frame (#2) onto the Base Frame. Secure them with two M10 x 2 ¾" Carriage Bolts (#55), one 1 ¾" x 4 ¾" (#20), two Ø ¾" Washers (#65), and two M10 Aircraft Nuts (#69).

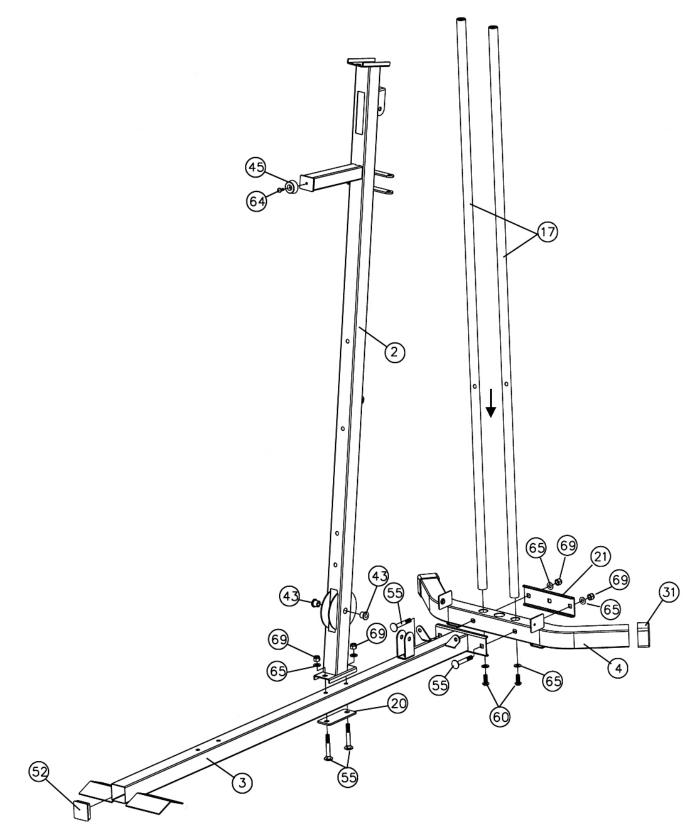

#### STEP 2 (See Diagram 2)


- A.) Attach the Leg Developer Holder (#5) onto the Base Frame (#3). Secure it with two M10 x 2 ¾" Carriage Bolts (#55), one 1 ¾" x 4 ¾" Bracket (#20), two Ø ¾" Washers (#65), and two M10 Aircraft Nuts (#69).
- B.) Attach the Seat Support (#6) to the Vertical Frame (#2). Secure it with two M10 x 2 <sup>3</sup>/<sub>4</sub>" Carriage Bolts (#55), one 1 <sup>3</sup>/<sub>4</sub>" 4 <sup>3</sup>/<sub>4</sub>" Bracket (#20), two Ø <sup>3</sup>/<sub>4</sub>" Washers (#65), and two M10 Aircraft Nuts (#69).
- C.) Attach the other end of Seat Support to the Leg Developer Holder. Secure it with two M10 x 2 ¾" Allen Bolts (#56), four Ø ¾" Washers (#65), and two M10 Aircraft Nuts (#69).
- D.) Slide two Ø 2 3/8" Weight Plate Rubber Bumpers (#41) onto the two Guide Rods (#17).
- E.) Slide 14 Weight Plates (#36) onto the Guide Rods. Make sure the deep grooves on the Weight Plates all face the back of the machine and downward. Align the holes on the Weight Plates. Insert a Selector Rod (#19) through the center hole.
- F.) Slide the Selector Stem (#35) onto the Guide Rods.
- G.) Attach the holes on the Upper Frame (#1) onto the Guide Rods. Place the Upper Frame onto the Vertical Frame (#2).
- H.) Secure the Upper Frame to the Guide Rods with two M10 x <sup>3</sup>/<sub>4</sub>" Allen Bolts (#60) and Ø <sup>3</sup>/<sub>4</sub>" Washers (#65).
- I.) Secure the Upper Frame to the Vertical Frame with two M10 x 2 ¾" Carriage Bolts (#55), one 1 ¾"x 4 ¾" Bracket (#20), two Ø ¾" Washers (#65), and two M10 Aircraft Nuts (#69).
- J.) Use a Weight Selector Pin (#32) to select the number of Weight Plates to exercise. Attach the ring on Weight Selector Pin's cable onto the Selector Rod. Note: Each Weight Plate weights approximately 10 lbs. Please refer to the Weight Resistance Chart in page 25.

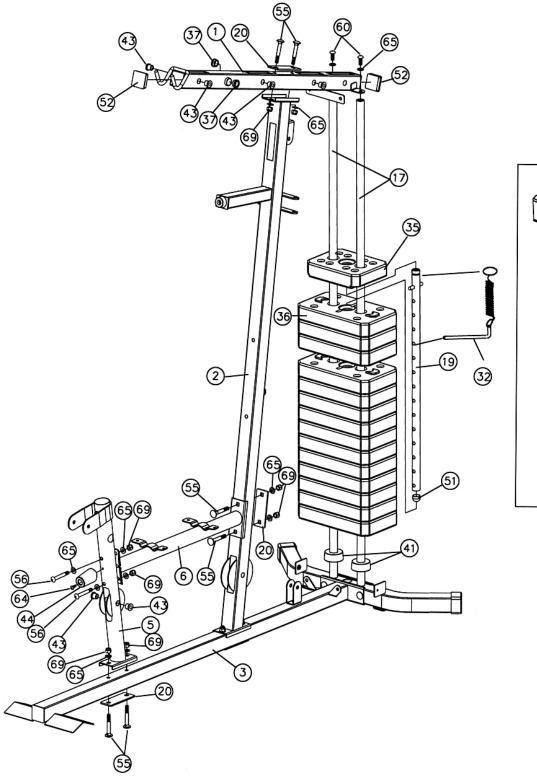

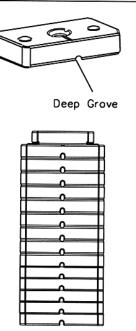


#### STEP 3 (See Diagram 3)

- A.) Attach the Weight Stack Cover (#16) to the bracket on Rear Stabilizer (#4) and Upper Frame (#1).
- B.) Attach two Weight Stack Cover Brackets (#29) to top and bottom of Weight Stack Cover.
- C.) Secure the Weight Stack cover Bracket, Weight Stack Cover to Upper Frame with four M6 x <sup>3</sup>⁄<sub>4</sub>" Allen Bolts (#63), four Ø <sup>1</sup>⁄<sub>2</sub>" Washers (#67), and two M6 Aircraft Nuts (#70).
- D.) Secure the Weight Stack cover Bracket, Weight Stack Cover to Rear Stabilizer with four M6 x <sup>3</sup>/<sub>4</sub>" Allen Bolts (#63) and four Ø <sup>1</sup>/<sub>2</sub>" Washers (#67).
- E.) Securely tighten all Nuts and Bolts installed in Step-1 and Step-2.

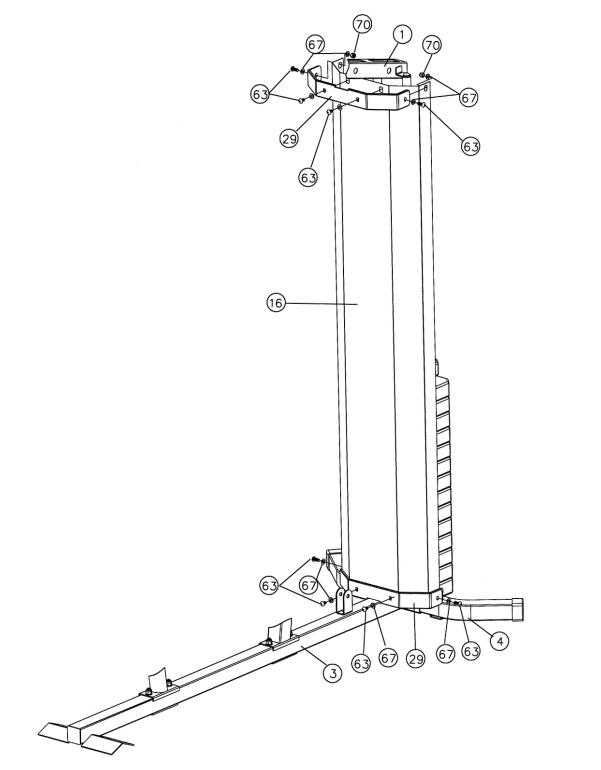


#### STEP 4 (See Diagram 4)

- A.) Attach the Front Press Base (#8) to the Upper Frame (#1). Secure it with one 3" Front Press Axle (#38), two Ø ¾" Spacers (#68), and two M10 Aircraft Nuts (#69). **Do not over tighten the Nuts.**
- B.) Attach the Right Butterfly (#9) to the open bracket on Front Press Base. Secure it with one 2 5/8" Butterfly Axle (#39), two Ø ¾" Spacers (#68), and two M10 Aircraft Nuts (#69). Push one large Foam Roll (#27) onto the Right Butterfly.
- C.) Attach one Front Press Handle (#11) to the holes on Right Butterfly. Secure it with two M10 x <sup>3</sup>/<sub>4</sub>" Allen Bolts (#60) and two Ø <sup>3</sup>/<sub>4</sub>" Washers (#65).
- D.) Repeat Procedure B & C to install the Left Butterfly (#10).
- E.) Insert the two Butterfly Lock Pins (#46) into the holes on Front Press Base to lock the Butterflies for Front Press exercise.
- F.) Pull out the Butterfly Lock Pins and insert into the holes on the stopper on the Vertical Frame (#2) for Butterfly exercise.

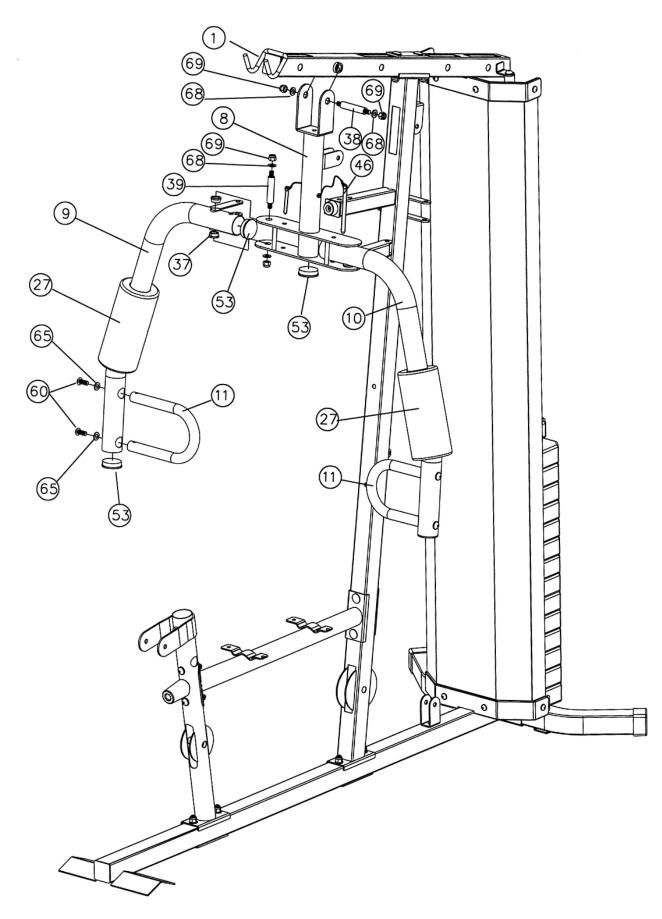



- A.) Attach the Backrest Board (#24) to the Vertical Frame (#2). Secure it with two M8 x 2 <sup>3</sup>/<sub>4</sub>" Allen Bolts (#61) and two Ø 5/8" Washers (#66).
- B.) Attach the Seat Pad (#25) to the Seat Support (#6). Secure it with four M8 x 5/8" Allen Bolts (#62) and two Ø 5/8" Washers (#66).

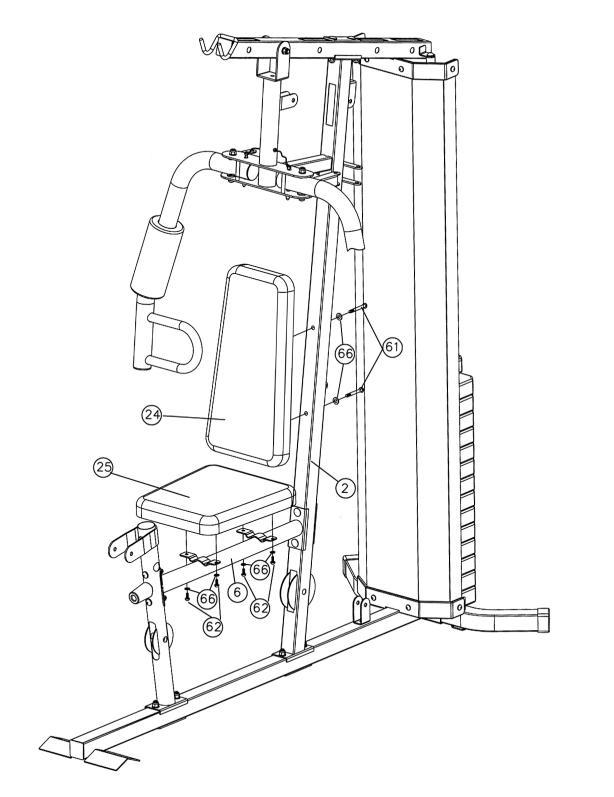

#### STEP 6 (See Diagram 6)


- A.) Attach one Swivel Pulley Bracket (#14) to the open bracket on the back of Vertical Frame (#2). Secure it with one M10 x 2 ½" Allen Bolt (#57), two Ø ¾" Washers (#65), and one M10 Aircraft Nut (#69). Do not over tighten the Nut and Bolt. Make sure the Swivel Pulley Bracket can swivel freely.
- B.) Repeat Procedure A to install the other Swivel Pulley Bracket on the other side.
- C.) Attach two Butterfly Cable Brackets (#12) to the Right & Left Butterfly (#9 & #10). Secure each Butterfly Cable Bracket with one M10 x 2" Allen Bolt (#58), two Ø ¾" Washers (#65), and one M10 Aircraft Nut (#69).
- D.) Attach the Leg Developer (#7) to the Leg Developer Holder (#5). Secure it with one Leg Developer Axle (#40), two M10 x ¾" Allen Bolts (#60), and two Ø ¾" Washers (#65).
- E.) Insert two Foam Tubes (#23) halfway through the holes on Leg Developer Holder and Leg Developer. Push four Foam Rolls (#28) onto the Foam Tubes from both ends.
- F.) Attach the Arm Curl Pad (#26) to Arm Curl Stand (#13). Secure it with two M8 x 5/8" Allen Bolts (#62) and two Ø 5/8" Washers (#66).
- G.) Insert the Arm Stand into the opening on the Leg Developer Holder (#5). Use a Lock Knob (#22) to lock the Arm Curl Stand in position.

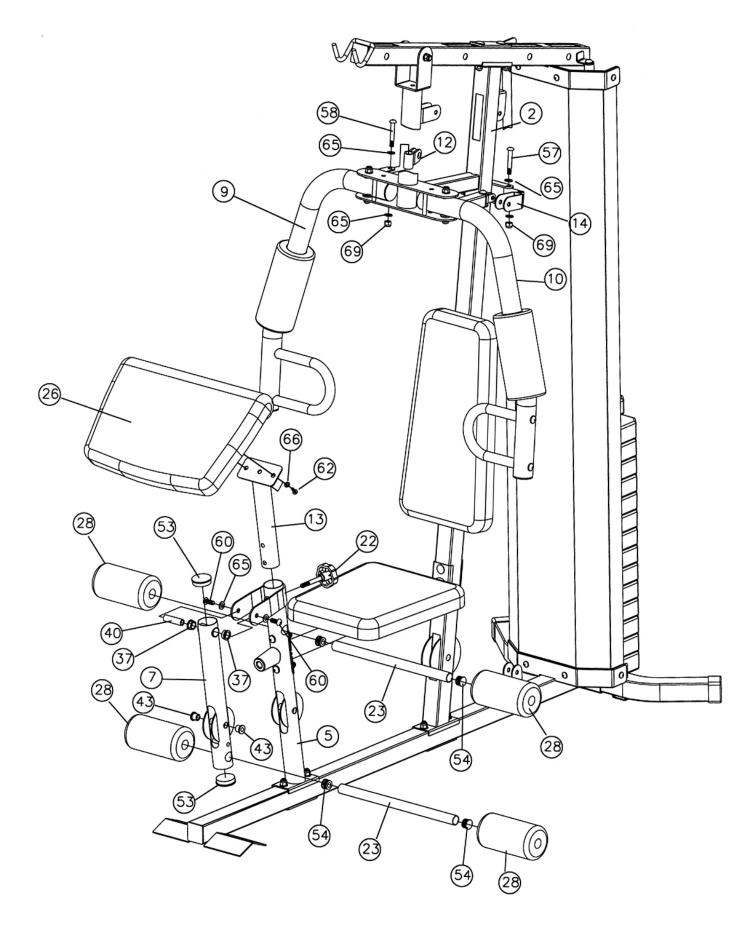

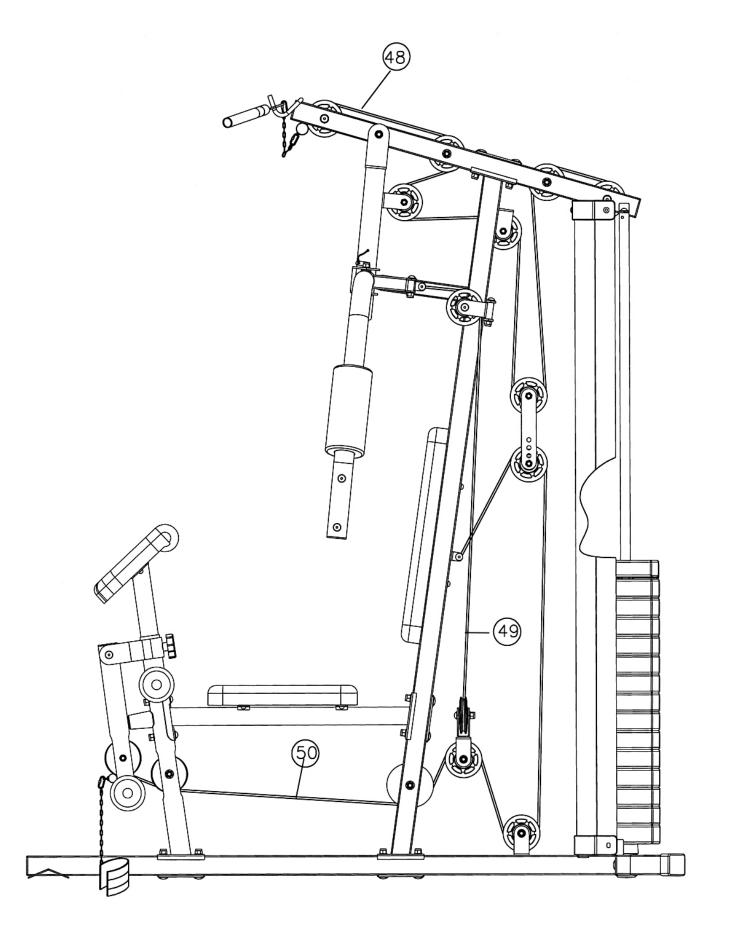


#### STEP 7 (See Diagram 7 & Cable Loop Diagram)

- A.) Attach the 116" Upper Cable (#48) to the front opening on the Upper Frame. NOTE: The Ball Stopper on the Cable needs to be underneath the Frame.
- B.) Attach a Pulley (#42) to the opening. Secure it with one M10 x 2 <sup>3</sup>/<sub>4</sub>" Allen Bolt (#56), two Ø 7/8" Pulley Bushings (#43) pre-installed on Upper Frame, and one M10 Aircraft Nut (#69).
- C.) Draw the Cable towards the back of the machine to the second opening on the Upper Frame. Repeat Procedure B above to install a Pulley.
- D.) Draw the Cable around the Pulley then pull back to the open bracket on the Front Press Base (#8).
- E.) Attach a Pulley to the bracket. Secure it with one M1 x <sup>3</sup>/<sub>4</sub>" Allen Bolt (#59), two Ø <sup>3</sup>/<sub>4</sub>" Washers (#65), and one M10 Aircraft Nut (#69).
- F.) Draw the Cable around the Pulley then through the opening on the Vertical Frame (#2) to the open bracket on the back of Vertical Frame. Repeat Procedure E to install a Pulley.
- G.) Draw the Cable over the Pulley and pull the Cable downwards. Attach a Pulley to the upper hole on the two Double Floating Pulley Brackets (#30). Repeat Step E above to install another Pulley with a Cable Retainer (#74). Let the Bracket hanging for now.
- H.) Draw the Cable around the Pulley then pull upwards the third opening on the Upper Frame. Repeat Procedure B to install a Pulley.
- I.) Draw the Cable to the rear opening on Upper Frame. Repeat Procedure B to install a Pulley.
- J.) Draw the Cable downwards between the two Guide Rods (#17) to the Selector Rod (#19). Securely thread the bolt on the end of the Cable into the Selector Rod.

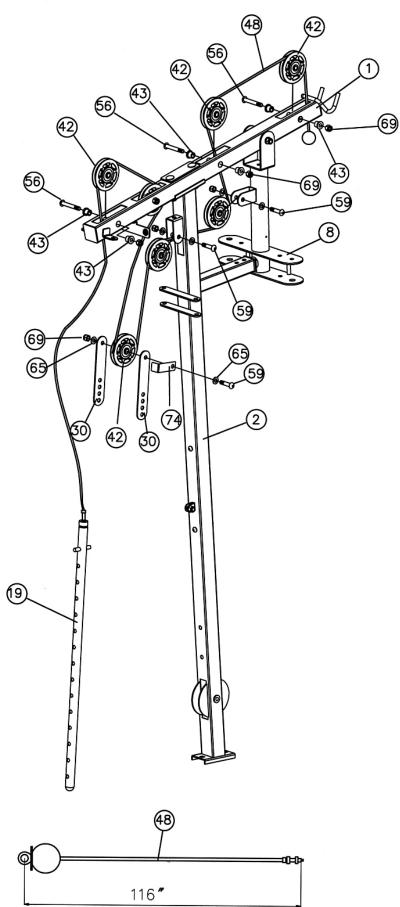


#### STEP 8 (See Diagram 8 & Cable Loop Diagram)


- A.) Attach one end of the 91" Butterfly Cable (#49) to one Butterfly Cable Bracket (#12). Secure it with one M10 x <sup>3</sup>/<sub>4</sub>" Allen Bolt (#60) and one M10 Aircraft Nut (#65).
- B.) Draw the Cable towards the right open Swivel Pulley Bracket (#14).
- C.) Attach a Pulley (#42) to the bracket. Secure it with one M10 x 1 ¾" Allen Bolt (#59), two Ø ¾" Washers (#65), and one M10 Aircraft Nut (#69).
- D.) Draw the Cable over the Pulley then pull downward. Attach the Cable to an Angled Double Floating Pulley Bracket (#15). Repeat Procedure C to install a Pulley. Let the Bracket hanging for now.
- E.) Draw the Cable around the Pulley and pull upward to the left open Swivel Pulley Bracket. Install another Pulley as described in Step C above.
- F.) Draw the Cable over the Pulley and attach the end to the open Butterfly Cable Bracket. Repeat Procedure A to secure the Butterfly Cable.

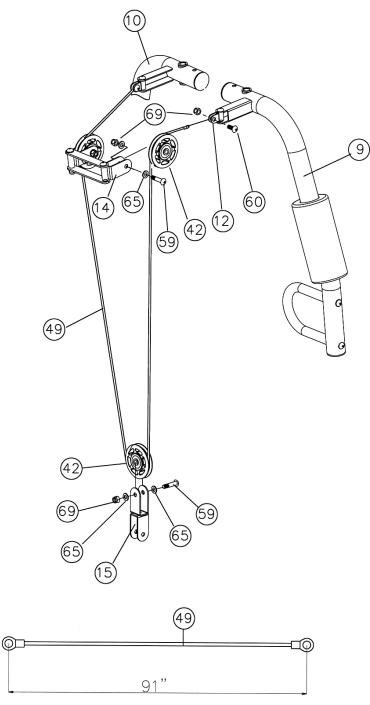

#### STEP 9 (See Diagram 9 & Cable Loop Diagram)


- A.) Attach the 134" Lower Cable (#50) to the opening on the bottom of the Leg Developer (#7).
- B.) Attach a Pulley (#42) to the opening. Secure it with one M10 x 2 ¾" Allen Bolt (#56), two Ø 7/8" Pulley Bushings (#43) pre-installed on the holes, and one M10 Aircraft Nut (#69).
- C.) Draw the Cable underneath the Pulley towards the back of the machine through the opening on the Leg Developer Holder (#5). Repeat Procedure B to install a Pulley.
- D.) Draw the Cable underneath the Pulley through the opening on bottom of Vertical Frame (#2). Repeat Procedure B to install a Pulley.
- E.) Pull the Cable upward to the Angled Double Floating Pulley Brackets (#15) previously installed in Step 8.
- F.) Attach a Pulley to the bracket. Secure the Pulley to the selected hole with one M10 x 1 <sup>3</sup>/<sub>4</sub>" Allen Bolt (#59), two Ø <sup>3</sup>/<sub>4</sub>" Washers (#65), and one M10 Aircraft Nut (#69).
- G.) Draw the Cable around the Pulley and downward to the open bracket on Base Frame (#3). Repeat Procedure F to install another Pulley.
- H.) Draw the Cable around the Pulley then pull upward to the Double Floating Pulley Bracket (#30) previously installed in Step-7. Repeat Procedure F to install a Pulley with a Cable Retainer (#74).
- I.) Draw the Cable around the Pulley to the bracket on the back of Vertical Frame. Secure the end of Cable to the bracket with one M10 x <sup>3</sup>/<sub>4</sub>" Allen Bolt (#60) and one M10 Aircraft Nut (#69).
- J.) If the whole Cable system is too loose, adjust the tension of the cable system by moving up or down the lower pulley on the Double Floating Pulley Bracket. Moving up the pulley up will increase the tension in the pulley system; conversely, lowering the pulley will decrease the tension.

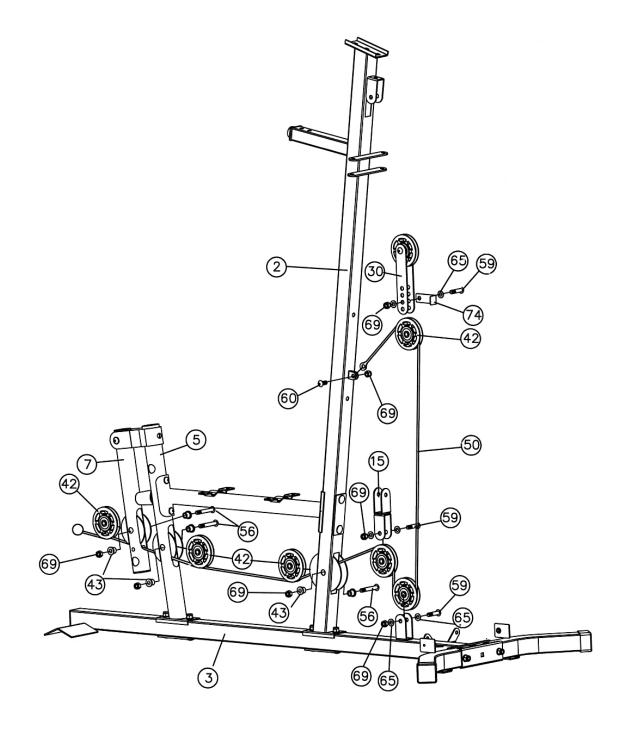

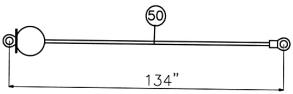

#### STEP 10 (See Diagram 10)


- A.) Attach Lat Bar (#18) to the Upper Cable (#48) with two C-Clips (#34) and one Chain (#33) when doing Lat Pull exercises.
- B.) Attach Lat Bar to the Lower Cable (#50) with two C-Clips (#34) and one Chain (#33) when doing Arm Curl exercises
- C.) Remove Arm Curl Stand. Replace Lat Bar with the Ankle Strap (#47) to the Lower Cable (#50) for various leg exercises.
- D.) Insert a Lock Pin (#72) through the hole on Guide Rod and lock with a Combination Lock (#73) to prevent any un-authorized usage of the machine.
- E.) Unlock the Lock and attach it to Selector Rod before using the machine.

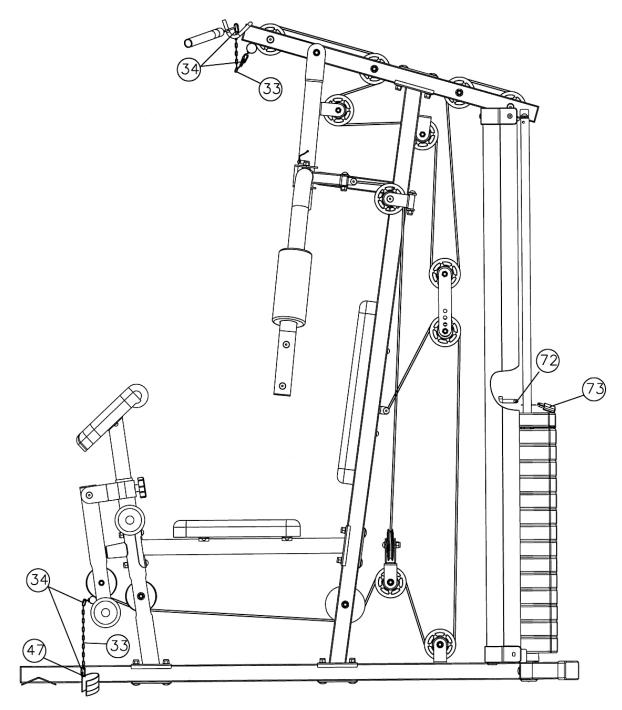

#### USING INSTRUCTIONS

The lock is set at the manufacturer to open at 0-0-0. You can keep it as your own combination, or set a new one as following steps:

- Push and hold the number changing cover(1) in the direction of the arrow, and turn the number ring(2) to set up your personal cipher as required. Release the cover (1) and press the button (3) to return the original position.
- 2. Rotate the dials so that your three secret numbers can't be seen.
- 3. Turn the dials to your desired personal combination, to open the lock.

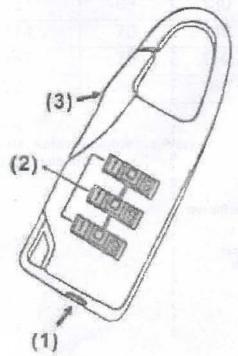

# ZIPPERLOCK

#### PARTS LIST KEY NO. DESCRIPTION Q'

)	'ty
---	-----

1 2 3 4 5 6 7 8 9 10 11	Upper Frame Vertical Frame Base Frame Rear Stabilizer Leg Developer Holder Seat Support Leg Developer Front Press Base Right Butterfly Left Butterfly Front Press Handle	1 1 1 1 1 1 1 1 2
12	Butterfly Cable Bracket	2 2 1
13	Arm Curl Stand	
14	Swivel Pulley Bracket	2
15	Angled Double Floating Pulley Bracket	1
16 17	Weight Stack Cover Guide Rod	1 2
18	Lat Bar	2
19	Selector Rod	1
20	1 ¾" x 4 ¾" Bracket	4
21	2" x 7" U-shaped Bracket	1
22	Lock Knob	1
23	Foam Tube	2
24	Backrest Board	1
25	Seat Pad	1
26	Arm Curl Pad	1
27	Ø 1 7/8" x 8 5/8" Foam Roll	2
28	Ø 7/8" x 7" Foam Roll	4
29	Weight Stack Cover Bracket	2
30 31	Double Floating Pulley Bracket	2 2 2
32	Rear Stabilizer End Cap Weight Selector Pin	2
32 33	Chain	2
33 34	C-clip	4
35	Selector Stem	1
36	Weight Plate	14
37	Ø 1" Bushing	8
38	3" Front Press Axle	1
39	2 5/8" Butterfly Axle	2
40	Leg Developer Axle	1
41	Ø 2 3/8" Weight Plate Rubber Bumper	2
42	Pulley	16
43	Ø 7/8" Pulley Bushing	14
44	Ø 1 7/8" x 2 1⁄2" Rubber Bumper	1
45	Ø 1 ½" x 5/8" Rubber Bumper	1
46	Butterfly Lock Pin	2
47	Ankle Strap	1
48	116" Upper Cable	1
49	91" Butterfly Cable	1
50	134" Lower Cable	1

51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 9 70 71 72	Ø 1" Cone-shaped End Cap 2" Square End Cap Ø 2" End Cap Ø 1" End Cap M10 x 2 $\frac{3}{4}$ " Carriage Bolt M10 x 2 $\frac{3}{4}$ " Allen Bolt M10 x 2 $\frac{1}{2}$ " Allen Bolt M10 x 2 $\frac{1}{4}$ " Allen Bolt M10 x 3 $\frac{3}{4}$ " Allen Bolt M10 x 3 $\frac{3}{4}$ " Allen Bolt M8 x 2 $\frac{3}{4}$ " Allen Bolt M8 x 5/8" Allen Bolt M6 x $\frac{3}{4}$ " Allen Bolt M6 x $\frac{5}{8}$ " Philips Screw Ø $\frac{3}{4}$ " Washer Ø $\frac{5}{8}$ " Washer Ø $\frac{3}{4}$ " Spacer M10 Aircraft Nut M6 Aircraft Nut ST5 Screw Lock Pin	$\begin{array}{c}1\\3\\7\\6\\10\\9\\2\\2\\9\\13\\2\\6\\8\\2\\50\\8\\10\\6\\41\\2\\2\\1\end{array}$
72	Lock Pin	1
73 74	Combination Lock Cable Retainer	1 2

MWM98	0 WEIGHT	RESIS	TANCE	CHART
Weight Plate	Front Press	Butterfly	Lat Pull	Low Pulley
1	14	7	13.5	13.5
2	20	9	18	18
3	26	11	22.5	22.5
4	32	13.5	27	27
5	38	16	32	32
6	43.5	18	36	36
7	49.5	20.5	41	41
8	55.5	22.5	45.5	45.5
9	61.5	25	50	50
10	67	27	54.5	54.5
11	73	29.5	59	59
12	79	32	63.5	63.5
13	85	34	68	68
14	91	36	73.5	72.5

Note: Each plate weights 4.5 kg. Numbers are approximate. Actual weights may vary. Values for Butterfly are for each arm.

# LIMITED WARRANTY

Escalade warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of two years on the frame and one year on all other parts and components from the date of purchase. This warranty extends only to the original purchaser. Escalade's obligation under this Warranty is limited to replacing damaged or faulty parts at Escalade's option.

All returns must be pre-authorised by Escalade. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, purchasers own repairs or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by Escalade.

Escalade is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or other damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyments or use, costs of removal, installation or other consequential damages or whatsoever natures.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein.

Your statutory rights are not affected.

#### **ORDERING REPLACEMENT PARTS**

#### Replacement parts can be ordered by calling our Customer Support Department. Tel / Fax: 00 44 115 9820 122 E mail: info@escaladesupport.co.uk

Escalade International Ltd Customer Support Centre Unit 19 Nottingham South & Wilford Industrial Estate Ruddington Lane Wilford Nottingham NG11 7EP

When ordering replacement parts, please give the following information,

- 1. Model
- 2. Description of Parts
- 3. Part Number
- 4. Date of Purchase

#### CARE AND MAINTENANCE

- 1. Inspect and tighten all parts before using the gym.
- 2. The gym can be cleaned using a damp cloth and mild non-abrasive detergent. DO NOT use solvents.
- 3. Examine the gym regularly for signs of damage or wear. Pay particular attention to the bushings on movable parts.
- **4.** Examine the cables regularly for signs of wear and damage. Adjust cable tension as required.
- 5. Failure to examine the gym regularly may affect the safety level of the equipment.
- 6. Periodically, spray the Guide Rods # 17 with silicon spray or light oil to ensure a smooth operation.
- 7. Replace any defective components immediately and/or keep the gym out of use until repair.
- 8. Ensure all Pull Pins are properly located before using the gym.