

# Océ | User manual

**Océ BLM500/550/550 PRO**

---

Operating information

# Copyright

© 2007-2010 Océ

All rights reserved. No part of this work may be reproduced, copied, adapted, or transmitted in any form or by any means without written permission from Océ.

Océ makes no representation or warranties with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose. Further, Océ reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revision or changes.

# Contents

## Chapter 1

<b>Introduction to the Booklet maker.....</b>	<b>5</b>
Introduction.....	6
Description of the Booklet maker.....	8
Right Hand Side of the Booklet maker.....	10
The Rear Panel of the Booklet maker.....	11
The mains input panel of the Book Stacker.....	12

## Chapter 2

<b>How to run the Booklet maker.....</b>	<b>13</b>
Before You Begin.....	14
Turn On the Booklet maker.....	15
Enter the Job Settings.....	16
Stacker and Book Stacker adjustment.....	19
Run the job.....	20

## Chapter 3

<b>The User Interface.....</b>	<b>21</b>
The Touch Screen.....	22
The Job Mimic.....	25
The BASIC Window.....	27
The LOAD & SAVE Window.....	29
The ADVANCED Window.....	31
The CONFIGURE Window.....	32
The MENU Window.....	33

## Chapter 4

<b>Standard Tasks.....</b>	<b>35</b>
Load and Save the Job Settings.....	36
Adjust the Stitch Pitch.....	37
Open the Connecting Bridge Cover.....	38
Open and Close the Folder Cover.....	39
Lift and Lower the Clincher Frame.....	41
Open the Gathering Area Cover.....	43
Lift the Booklet maker Main Deck.....	44
Empty the Trim Bin.....	46
Open the Stitch-Wire Cabinet.....	48
Adjust the Stacker.....	49
Adjust the Book Stacker.....	51
Unload the Book Stacker.....	52
Operate the Booklet maker offline.....	53

**Chapter 5**

**Error Conditions, Problems and Solutions.....55**  
Clear a Printer Error.....56  
Clear a Booklet maker error.....57  
General Problems.....58  
Book Quality.....60  
Error Messages.....75  
Clear Paper Jams.....88  
Clear a Stitch-wire Jam.....100  
Clear a Stitch Head Jam.....102  
Calibrate the Touch Screen.....106  
Change the fuses of the Booklet maker.....107  
Change the fuses of the Book Stacker.....108  
Manually park the Shuttle.....109

**Chapter 6**

**Maintenance.....111**  
About Maintenance.....112  
Booklet maker cleaning.....114  
Clean the Static Elimination Bars.....115  
Clean the Former Roller.....118  
Clean the Polyurethane Strips in the Form Clamp.....120  
Clean the Trimmings-removal Fingers.....123  
Clean excess grease from the Stitch Head.....126  
Lubricate the Stitch Head.....128  
Install New Stitch-wire.....133  
Clear paper from the trim stop.....138

**Appendix A**

**Specifications.....141**  
Specifications.....142

**Appendix B**

**Declaration of Conformity.....145**  
Declaration of Conformity.....146

# **Chapter 1**

## **Introduction to the Book- let maker**

# Introduction

## Introduction

This User Manual is applicable to all model Océ BLM550 booklet makers. The Océ BLM550 PRO version is an Océ BLM550 booklet maker with the optional Book Stacker attached. The User Manual is also applicable to all model Océ BLM500 booklet makers from serial number 120 onwards with software version 3.1. (It is possible to retrofit the optional Book Stacker to these Océ BLM500 models).



**Caution:**

A CAUTION message tells you that a procedure or operation can be dangerous. To prevent injury, you must follow the instructions.

---



**Attention:**

An ATTENTION message tells you that a procedure or operation can damage the machine or the product. To prevent damage, you must follow the instructions.

---

## Documentation

### Your Manual

The User Manual of the Booklet maker describes how to do these tasks:

- Operate the Booklet maker
- Find and correct error conditions
- Do normal maintenance tasks

Operator training is given when the Booklet maker is installed. To make sure you use your Booklet maker correctly, read your manual.

The User Manual of the Booklet maker does not describe the operation of the printer. If needed, refer to your printer user manual.

### Safety Information

Safety information is included in the separate “Safety Information Manual”. Read the safety information before you use your Booklet maker.

## Installation

Your Booklet maker must be installed by a service engineer. Special knowledge is needed to install the machine.

**Attention:**

Only connect the machine to a mains power supply of the correct voltage with a good earth connection. The correct machine voltage is shown on the label at the mains power supply input on the rear of the machine. If the machine is connected to the wrong supply, the warranty is cancelled.

## How to Get Help


If you have any questions or problems, refer to the problem solving section in this manual (see chapter “Error Conditions, Problems and Solutions”). Contact your Booklet maker supplier for further help

## Description of the Booklet maker

### Introduction

The Booklet maker operates online with digital printers to process sets of printed pages into stitched books. The main parts are shown below.

### Illustration

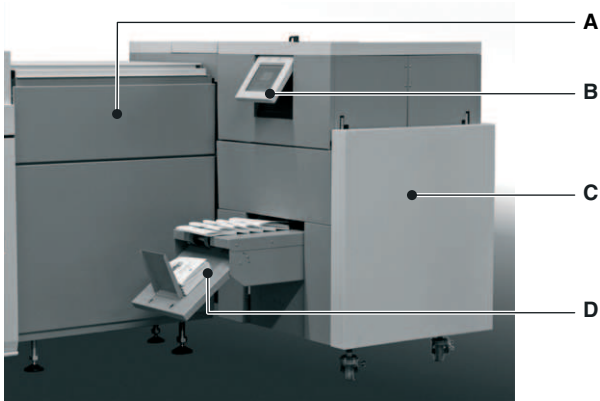

[1] Operator Side of the Booklet maker





[2] Book Stacker (optional)




## Component - function table

Operator Side of the Booklet maker

	Component	Function
A	The connecting bridge	The connecting bridge moves the printed sheets from the printer to the Booklet maker. If needed, the sheets are rotated into the correct direction. Rotation lets the printer operate at optimum print speed. Adjustment for the size of the paper and sheet rotation is automatic, according to the settings entered on the touch screen.
B	The user interface	The user interface has a colour touch screen, a start button  and a stop  button .
C	The Booklet maker	The Booklet maker stitches, folds, spine-forms and trims the sheets to make a finished book.
D	The Stacker	The Stacker collects the finished books (see <i>'Illustration' on page 8</i> ).
E	The Book Stacker	The optional Book Stacker is a high-capacity stacker for the finished books (see <i>'Illustration' on page 8</i> ).

## Right Hand Side of the Booklet maker

### Illustration

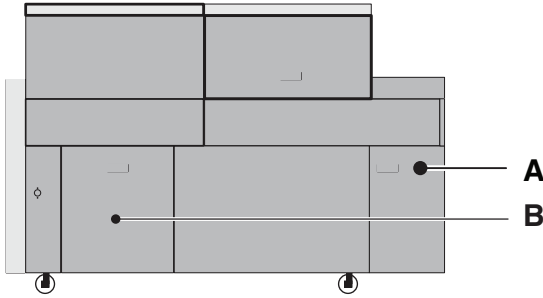

[3] Right hand side of the Booklet maker


### Component - function table

Right hand side of the Booklet maker

	Component	Function
A	The stitch wire cabinet	The stitch-wire cabinet holds the spool of stitch-wire.
B	Trim Bin	The trim bin collects the paper that is trimmed from the edge of the book

## The Rear Panel of the Booklet maker

### Illustration

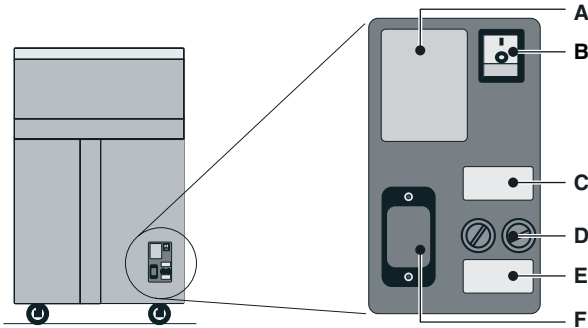

[4] The Rear Panel of the Booklet maker


### Component - function table

The Rear Panel of the Booklet maker

	Component	Function
A	Rating and serial label	The rating label displays the type of machine, serial number, power use and fuse information.
B	Mains power ON/OFF switch	The mains power ON/OFF switch turns ON or turns OFF the Booklet maker. When you turn OFF the Booklet maker, the current settings are stored.
C	Voltage advisory label	The voltage advisory label tells the installer to refer to the installation instructions before the Booklet maker is connected to mains power. The Booklet maker can be adjusted for one of several different input voltages.
D	Fuses	The fuses make sure the operator and the machine are protected if there is an electrical problem or short circuit.
E	Voltage label	The voltage label is fitted to the Booklet maker during the installation procedure. The voltage label displays the selected voltage.
F	Mains power input connector	The mains power input connector is used to connect the Booklet maker to mains electrical power.

## The mains input panel of the Book Stacker

### Illustration

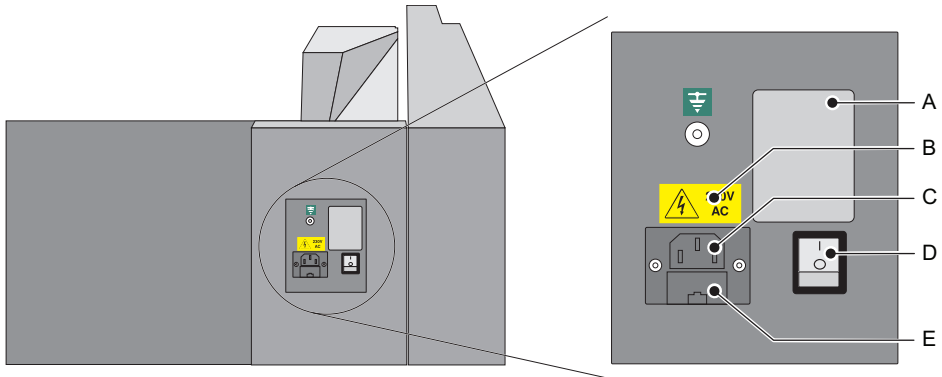

[5] The mains input panel of the Book Stacker

### Component - function table

The mains input panel of the Book Stacker

	Component	Function
A	Rating and serial label	The rating label displays the type of machine, serial number, power use and fuse information.
B	Voltage advisory label	The voltage advisory label shows that the input voltage is 230 V AC. The 230 V power is supplied by the Océ BLM500/550/550 PRO.
C	Power input connector	The power input connector is used to connect the power supply from the Océ BLM500/550/550 PRO to the Book Stacker.
D	Mains power ON/OFF switch	The mains power ON/OFF switch turns ON the Book Stacker or turns OFF the Book Stacker.
E	Fuses	The fuses make sure the operator and the machine are protected if there is an electrical problem or short circuit.

# **Chapter 2**

## **How to run the Booklet maker**

This chapter gives information on how to run a job on the Booklet maker. For information on how to operate the printer, refer to the printer documentation. Information about the user interface is included in chapter “The User Interface”.

Information about standard procedures, for example opening covers to clear a paper jam, is included in chapter “Standard Tasks”.

## Before You Begin

### Paper and Book Quality Instructions

- The size of paper and the thickness of the set must be measured. These measurements are entered into the touch screen before you begin a print job.
- Measure the size of the printed paper. The paper dimension changes when the paper is printed.
- Measure the set thickness as accurately as possible. Use the measuring tool supplied with the machine.
- To get the best accuracy, use millimetres to measure the set (see *‘Before You Begin’* on page 16).
- Enter accurate dimensions into the touch screen.
- If the book is made from several different types of paper, make sure the different paper types are all the same size.

See *‘Book Quality’* on page 60 for further information.

## Turn On the Booklet maker

### Procedure

1. Connect the Booklet maker to the mains power supply.
2. Use the mains ON/OFF switch to turn ON the Booklet maker.

### Result

The machine makes this sequence of beeps:

'beep\_\_beep beep beep beep\_\_\_\_\_ beep\_\_beep'.

The touch screen illuminates and the machine calibrates.

When READY is displayed on the screen, the machine is ready for use.

# Enter the Job Settings

## Introduction

Make the settings for a new job in the BASIC  $\uparrow$  window on the touch screen. See the chapter “The User Interface” for more information.

The PAPER SIZE and PAGE DIRECTION settings are entered on the touch screen. These dimensions refer to the format of the paper when it enters the Booklet maker.



**Attention:**

Do not operate the touch screen with a sharp object or with too much force. These actions can damage the touch screen.

---

## Before You Begin

Step	Action	Information
1	Print a set to the stacker.	
2	Measure the sheet size and the set thickness.	Measure the set accurately. To make an accurate book you must enter accurate paper dimensions into the touch screen. To get the best accuracy, use millimetres to measure the set. If needed, set the Booklet maker to use millimetres: <ul style="list-style-type: none"><li>■ Touch MENU.</li><li>■ Select Supervisor access level.</li><li>■ Touch MENU &gt; CONFIGURE <math>\odot\odot</math> &gt; MACHINE OPTIONS.</li><li>■ Touch mm &gt; CLOSE.</li></ul>
3	Use these dimensions for the job setting.	




**Note:**

This set can be made into a book (see ‘*Operate the Booklet maker offline*’ on page 53).



## Procedure for a New Job

Step	Action	Information
1	Touch BASIC 	
2	Enter the paper size	Touch PAPER SIZE. Enter the dimensions of the paper. The job setting is easier if you first select a preset paper size, then adjust the settings as necessary Touch PAPER SIZE > PRESETS > A3 or A4. (USA: 11x17, 8.5x11 or 8.5x14)
3	Enter the page direction	Touch PAGE DIRECTION > LANDSCAPE or PORTRAIT. If the PAGE DIRECTION option is not available, the PAGE DIRECTION cannot be changed.
4	Enter the page rotation setting	For A4 paper size, the normal setting for ROTATE is ON. Rotation lets the printer operate at optimum speed. Touch ROTATE to turn the sheet rotation ON or OFF. Always select the page direction before you change the rotate setting.
5	Enter the set thickness.	Touch SET THICKNESS. Enter the measured value.
6	Enter the number of stitches.	Touch STITCHES and enter the number of stitches. If needed, the stitch pitch can be changed. See "STITCH PITCH", <i>'Button overview'</i> on page 27
7	Enter the spine form setting	The spine form setting is automatic, according to the SET THICKNESS setting. If needed, the setting can be changed. See "FORM" in <i>'Button overview'</i> on page 27
8	Enter the trim setting.	The trim setting is automatic, according to the PAGE SIZE and SET THICKNESS settings. To change the setting, touch TRIM. See "TRIM" in <i>'Button overview'</i> on page 29
9	Touch CLOSE	
	If needed, save the job settings to memory.	If the same job settings are used frequently, then save the job settings to memory. See <i>'Save a job'</i> on page 36.

### Procedure for a Saved Job

1. Touch LOAD & SAVE □
2. Touch the job name or use the Up arrow and the Down arrow to select the job.
3. Touch LOAD.
4. Wait until the Booklet maker is ready

## Stacker and Book Stacker adjustment

### Adjust the Stacker

Adjust the stacker according to the size and thickness of the finished book (see *'Adjust the Stacker'* on page 49).

### Adjust the Book Stacker

Check if the book stacker is ready to accept books (see *'Adjust the Book Stacker'* on page 51).

## Run the job

1. Make sure the adjustments on the Booklet maker are complete before you release the print job from the print queue.
2. Start the print job. The Booklet maker starts automatically.
3. Check the quality of the first book
4. If the quality is not acceptable, make adjustments (see *'Book Quality'* on page 60).

## Result

### During the job


- Unload books from the Stacker before the Stacker is full. The Booklet maker stops and displays a message when the Stacker is full.
- Unload books from the optional Book Stacker (see *'Unload the Book Stacker'* on page 52).
- Empty the trim bin from time to time. The Booklet maker displays a message when the trim bin is full *'Empty the Trim Bin'* on page 46.

# **Chapter 3**

## **The User Interface**

# The Touch Screen

## Introduction

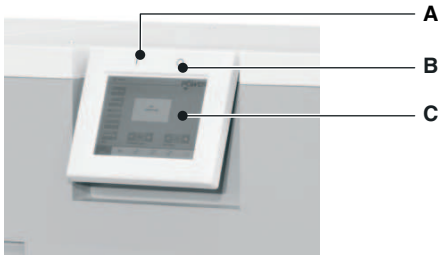

[6] The User Interface

A	START Button
B	STOP Button
C	Touch Screen

The user interface includes a colour touch screen and START/STOP buttons.

Operate the touch screen with a fingertip. You can touch the screen with a blunt item, for example a palm-top 'wand' or the blunt end of a pen. Do not use too much force. A light touch is all that is needed.

### Power save

The touch screen has a power-save function. After several minutes without use, the brightness of the touch screen decreases. After several hours, the touch screen turns off. Touch the screen to restore the normal brightness. The touch screen takes two or three minutes to reach full brightness.

If you hear a 'beep' when you operate the touch screen, the selected function is not available. Some functions are not available when the machine is in operation. Some functions and buttons are only available at certain access levels. See "ACCESS LEVEL" *'The MENU Window'* on page 33.




### Attention:

Do not operate the touch screen with a sharp object or with too much force. These actions can damage the touch screen.

---

## Illustration

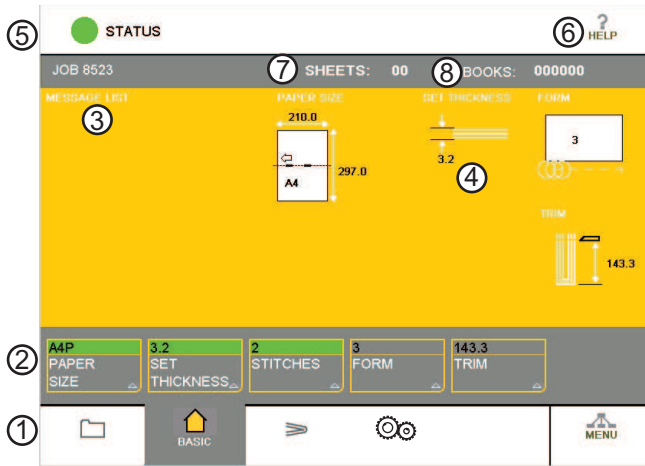

[7] The Touch Screen

## Component - function table

No.	Component	Function
1	Window Tabs	The touch screen buttons are divided into groups that have connected functions. Each group of buttons has a separate window. Touch the correct tab to select the window. □ <b>LOAD &amp; SAVE</b> ⬆ <b>BASIC</b> > <b>ADVANCED</b> ⚙ <b>CONFIGURE</b> ≡ <b>MENU</b>
2	Window Buttons	Each window contains a group of buttons. Touch the button to select the function.
3	Message List	Information and error messages are shown in the <b>MESSAGE LIST</b> . To display the information about a message, touch <b>HELP</b> then touch the message list. Use the right-arrow and left-arrow to see the help text for each message.
4	Job Mimic	The job mimic shows the current machine settings.

No.	Component	Function
5	Status	The <b>STATUS</b> line shows the machine status.
	- GREEN	The Booklet maker is <b>READY</b> or <b>RUNNING</b> .
	- ORANGE	<b>PLEASE WAIT</b> - wait until the Booklet maker is ready. <b>ATTENTION</b> - the Booklet maker needs an action by the operator.
	- RED	The Booklet maker is in an <b>ERROR</b> condition.
6	Help	<p>Help text is available on the touch screen.</p> <ul style="list-style-type: none"> <li>■ Touch <b>HELP</b> then touch any button or tab on the screen. Information about that button or tab is displayed.</li> <li>■ To display the information about a message, touch <b>HELP</b> then touch the message list.</li> <li>■ Use the Up arrow and the Down arrow to scroll-up and scroll-down the screen.</li> <li>■ Some text has more than one screen. Use the right-arrow and left-arrow to see the other screens.</li> </ul> <p>To leave the help-text, touch <b>HELP</b> or touch <b>X</b>.</p>
7	Sheet Counter	The sheet counter shows the number of sheets in the gathering area. The counter starts again with each book.
8	Book Counter	The book counter shows the number of books made. The counter is reset to zero when the Booklet maker is turned off.




# The Job Mimic

## Introduction

The job mimic shows the current machine status.


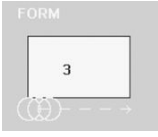

## Illustration

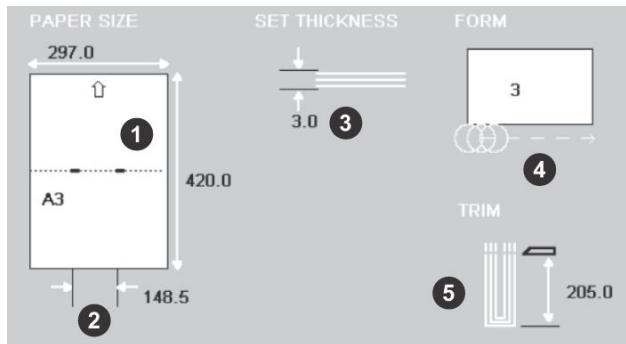

[8] The Job Mimic

## Component - function table

No.	Icon	Information
1		<p>The following items are shown</p> <ul style="list-style-type: none"> <li>■ the size of paper</li> <li>■ the format of the paper in the gathering area</li> <li>■ the broken line shows the fold line</li> <li>■ the small thick lines show the stitches</li> <li>■ the arrow shows the original feed edge in the printer</li> </ul>
2		<p>The stitch pitch is shown only when a non-standard setting is selected.</p>

No.	Icon	Information
3	 The icon shows the text "SET THICKNESS" at the top. Below it is a horizontal line with a downward-pointing arrow above it and an upward-pointing arrow below it. The number "3.0" is centered below the line.	The set thickness, in mm, is shown.
4	 The icon shows the text "FORM" at the top. Below it is a rectangular box containing the number "3". To the left of the box are two overlapping circles, and to the right is a dashed line with an arrow pointing right. A red "X" is overlaid on the number "3".	The number of forms is shown. If the pressure is adjusted, the setting is shown in brackets. A red X shows that the form function is not active.
5	 The icon shows the text "TRIM" at the top. Below it is a vertical line with a horizontal bar at the top. To the right of the line is a vertical double-headed arrow with the number "205.0" next to it.	The trim setting is displayed. A red X shows that the trim function is not active.

## The BASIC Window

### Introduction

The **BASIC**  $\triangle$  window gives you access to frequently-changed machine settings.

### Button overview

The BASIC Window Buttons

Button	Information
<b>PAPER SIZE</b>	Measure the accurate size of the printed paper before you make a book. Touch <b>PAPER SIZE</b> to enter the paper size. When the machine is in operation, you can adjust the <b>PAPER SIZE</b> by a maximum of +/- 1mm.
- PAGE DIRECTION	Touch <b>PAGE DIRECTION</b> to change the direction of the paper to Landscape or Portrait.
- ROTATE	Touch <b>ROTATE</b> to set the sheet rotation ON or OFF. If you select A4 portrait (USA: 8.5x11), <b>ROTATE</b> is set to <b>ON</b> automatically.
- PRESETS	Touch <b>PRESET</b> to select a standard paper size.
<b>SET THICKNESS</b>	Use the <b>SET THICKNESS</b> window to define the thickness of the set. Measure the thickness of the set before you make a book. Touch <b>SET THICKNESS</b> and enter the value.
<b>STITCHES</b>	Touch <b>STITCHES</b> to select the number of stitches. Available options are <b>1 - 6</b> . The machine automatically calculates the position of the stitches according to the size of the paper. Select <b>o</b> to turn off the stitch function.
-STITCH PITCH	The stitch pitch is the space between the stitches. The machine automatically calculates the stitch pitch according to the size of the paper. If a non-standard stitch pitch is needed, use <b>STITCH PITCH</b> to make the adjustment.
- AUTO	Touch <b>AUTO</b> to select the default stitch pitch.

Button	Information
<b>FORM</b>	<p>To make the square spine of the book, pressure is applied to the spine. This process is called forming.</p> <p>Touch <b>FORM</b> to specify the amount of spine form.</p> <p>To make a good spine on different paper types, the amount of spine form can be changed.</p> <p>To change the amount of spine form:</p> <ul style="list-style-type: none"> <li>■ Touch <b>NUMBER</b> to change how many times the spine is processed</li> <li>■ Touch <b>PRESSURE</b> to change the pressure</li> </ul>
- AUTO	<p>Touch <b>AUTO</b> to select the optimum amount of spine form, according to the set thickness.</p>
- NUMBER	<p>Touch <b>NUMBER</b> to select how many times the form roller processes the spine. The available options are 1, 2, 3 or 4. An increase in <b>NUMBER</b> increases the time taken to form the spine and can decrease the production rate for thin books. Alternatively, increase the <b>PRESSURE</b>.</p>
- PRESSURE	<p>Touch <b>PRESSURE</b> to increase or decrease the pressure used to form the spine.</p> <p>Touch + to increase the amount of spine form. Touch - to decrease the amount of spine form. The range is -9 to +9. The default setting is 0.</p>
- THRESHOLD	<p>Use <b>THRESHOLD</b> to choose if a square spine is formed.</p> <p>If the <b>SET THICKNESS</b> value is thinner than the <b>THRESHOLD</b> value, a square spine is not formed.</p> <p>If the <b>SET THICKNESS</b> value is thicker than the <b>THRESHOLD</b> value, a square spine is formed.</p> <p>If the <b>SET THICKNESS</b> value is 1.5mm or thicker, a square spine is always formed.</p> <p>The default value is 0.8 mm. The allowed range is 0.1 mm to 1.5 mm</p>
<b>TRIM</b>	<p>The trim dimension is calculated automatically according to the <b>PAPER SIZE</b> and <b>SET THICKNESS</b>.</p> <p>If needed, the trim dimension can be changed. Touch <b>TRIM</b> to adjust the size of the finished book after the fore-edge is trimmed.</p> <p>The maximum trim is 28 mm. The trim function can be turned off.</p>
- AUTO	<p>Touch <b>AUTO</b> to select the default trim position.</p>

## The LOAD & SAVE Window

### Introduction

The **LOAD & SAVE** □ window lets you save and reload job settings. Each job is given a name. The jobs are displayed in a list on the screen. Touch the job name or use the Up arrow or Down arrow to make the selection.

### Button overview

The LOAD & SAVE Window Buttons

Button	Information
<b>SAVE</b>	Touch <b>SAVE</b> to save the current settings. An on-screen keyboard is displayed. Enter the job name. Touch <b>OK</b> or <b>CLOSE</b> . The new job appears in the list of saved jobs. You can reload a saved job to decrease set-up time in the future.
- REPLACE	If you change the settings of a saved job, touch <b>REPLACE</b> to save the new settings.
- CANCEL	Touch <b>CANCEL</b> if you do not need to save a job that you have changed.
- SAVE NEW	If you change the settings of a saved job, touch <b>SAVE NEW</b> to save the new settings as a new job. An on-screen keyboard is displayed. Enter the new job name. Touch <b>OK</b> or <b>CLOSE</b> . The original job is not changed. If the job name is not changed before <b>OK</b> or <b>CLOSE</b> is touched, the job will be saved with the current name followed by an asterisk*.
<b>JOB DETAILS</b>	<b>JOB DETAILS</b> shows the settings for each saved job. Select the job that you need to view from the job list. Touch <b>JOB DETAILS</b> to see a summary of the job settings.
<b>LOAD</b>	Touch the job name or use the Up arrow or the Down arrow to make the selection. Touch the <b>LOAD</b> button
<b>PADLOCK SYMBOL</b>	The padlock symbol shows when a saved job is locked or unlocked. There is a small padlock symbol next to each locked job. To lock or unlock a job. <ol style="list-style-type: none"> <li>1. select the job from the job list</li> <li>2. touch the large key symbol.</li> </ol> A padlock symbol displayed in light grey shows that a job has been locked by a supervisor to prevent changes to the settings

Button	Information
<b>DELETE</b>	To delete a particular job it must be unlocked. Touch the job name or use the Up arrow or Down arrow to make the selection from the job list. Touch and hold <b>DELETE</b> . A red line appears. The red line fills from left to right. Hold <b>DELETE</b> until the red line reaches the right-hand side.
<b>VIEW OF JOB LIST</b>	<b>VIEW OF JOB LIST</b> changes the order that saved jobs are listed. There is a line between Factory Template jobs and jobs saved by the operator. The Factory Template jobs are at the top of the list
- A->Z	Touch <b>A-&gt;Z</b> to list the jobs in alphabetical order.
- BY USE	Touch <b>BY USE</b> to list jobs in the order they were last used. The most recently-run job is at the top of the list.
- BY INDEX	Touch <b>BY INDEX</b> to list jobs in numerical order. the machine gives a number to all jobs that are saved.

## The ADVANCED Window

### Introduction

The **ADVANCED** > window gives you access to special machine functions.

#### Button overview

Button	Information
<b>RE-REF</b>	If the machine calibration appears incorrect or if an 'axis moving' error message remains on the screen, touch <b>RE-REF</b> to re-reference the adjustment axes. The adjustment axes return to the current settings. At intervals, the machine will re-reference the axes during the set-up procedure.
<b>STITCHER UP</b>	Touch <b>STITCHER UP</b> before you lubricate the stitch head. This action moves the stitch head to the correct position for lubrication.
<b>PURGE SET</b>	If the print job has been cancelled, a set or part of a set can remain in the gathering area. Touch <b>START</b> Ⓞ, then touch <b>PURGE SET</b> to clear the set from the machine. The book is not stitched or trimmed According to the type of error that occurred, there can be a pause of 7 seconds before the <b>PURGE SET</b> button will operate. For safety reasons, this function is disabled when the gathering area cover is open.
<b>- MAKE BOOK</b>	If there is a set in the gathering area, you can make the set into a book. Touch <b>START</b> Ⓞ then touch <b>MAKE BOOK</b> to clear the set from the machine. The book is not stitched or trimmed. According to the type of error that occurred, there can be a pause of 7 seconds before the <b>MAKE BOOK</b> button will operate. For safety reasons, this function is disabled when the gathering area cover is open.

## The CONFIGURE Window

### Introduction

The CONFIGURE window lets you make changes to the configuration of the machine.

Some functions and buttons are only available at certain access levels, see 'ACCESS LEVEL' *'Button overview'* on page 33.

### The CONFIGURE Window Buttons

Button overview

Button	Information	Operator	Supervisor
<b>MACHINE OPTIONS</b>	Touch <b>MACHINE OPTIONS</b> to view the general machine set-up. Some of the settings can be changed, depending on the current access level.	Hidden	Active
- MEASUREMENT	Select 'mm' or 'inch' as the unit of measurement.	Hidden	Active
- STITCH SENSOR	There is a sensor that checks for stitches. Touch <b>STITCH SENSOR</b> to turn the stitch sensor on or off. The default setting is ON.	Hidden	Active
- PRESET PAPER SIZES	The preset paper sizes can be either ISO A sizes or US paper sizes. To select which preset paper sizes are available, touch the relevant button.	Hidden	Active
<b>SHUTTLE</b>	Touch <b>SHUTTLE</b> to make adjustments to the tamper.	Hidden	Active
-TAMPER DELAY	This button is used by the service engineer.	Hidden	Visible
- TAMPER TIME	<b>TAMPER TIME</b> adjusts the time that the tamper touches the set. An increase in <b>TAMPER TIME</b> causes a decrease in the production rate for thin books.	Hidden	Active
<b>FORM SET-UP</b>	This button is used by the service engineer.	Visible	Visible



## The MENU Window

### Introduction

**MENU** shows the settings that are not changed during day-to-day operation.

These settings include

- Change the Access Level
- Change the display language
- Advanced machine settings that are accessed by a person who has the correct access-code.

### Button overview

The MENU Window Buttons

Button	Information
<b>ACCESS LEVEL</b>	<p>The Touch Screen has five different access levels</p> <ul style="list-style-type: none"> <li>■ Operator</li> <li>■ Supervisor</li> <li>■ Service</li> <li>■ Distributor</li> <li>■ Factory</li> </ul> <p>Touch <b>ACCESS LEVEL</b> and select the correct level from the list. The last three levels are protected by access codes. To protect the job settings, the supervisor level allows jobs to be locked.</p>
<b>CURRENT LANGUAGE</b>	<p>Touch one of the flags to select the language you need.</p>
<b>AXES</b>	<p>Touch <b>AXES</b> to re-reference individual axes. Supervisor access level is needed for this function.</p> <p>Other functions on this button are used by the service engineer.</p>
<b>BRIDGE</b>	<p>Touch <b>BRIDGE</b> to re-reference the bridge axes. Supervisor access level is needed for this function.</p> <p>Other functions on this button are used by the service engineer.</p>
<b>SERVICE OPTIONS</b>	<p>This button is used by the service engineer.</p>
<b>TEST</b>	<p>This button is used by the service engineer.</p>

Button	Information
<b>COUNTERS</b>	The counters display the <ul style="list-style-type: none"><li>■ number of books that have been made</li><li>■ number of sheets that have been processed</li><li>■ number of stitches that have been used</li></ul>
-RESET	Touch <b>RESET</b> to reset the book, sheet and stitch counter. Use <b>RESET</b> after operator maintenance to the stitch head. Touch and hold <b>RESET</b> . A red line appears. The red line fills from left to right. Hold <b>RESET</b> until the red line reaches the right-hand side.

# **Chapter 4**

## **Standard Tasks**

This chapter describes the standard tasks that are needed in the day-to-day operation of your Booklet maker.

# Load and Save the Job Settings

## Introduction

The current job settings can be saved to the memory and reloaded for use again at a later date. Load the 'Default Job Template' to reset the Booklet maker to normal settings.

## Save a job

1. Touch **LOAD & SAVE** ☐ > **SAVE**.
2. If these options appear, select one.
  - **REPLACE** to over-write the previous job with the current job settings.
  - **SAVE NEW** to save the current job with a new name.
  - **CANCEL** to cancel the job save.
3. Enter the name for the job on the keyboard
4. Touch **OK** or **CLOSE**.

## Load a job

1. Touch **LOAD & SAVE** ☐.
2. Touch the job name or use the Up arrow and the Down arrow to select the job.
3. Touch **LOAD**.
4. Wait until the Booklet maker has made the adjustments.

## Reset the Booklet maker to default settings


1. Touch **LOAD & SAVE** ☐.
2. Select the **Default Job Template** from the list of jobs.
3. Touch **LOAD**.
4. Touch **YES**.

## Adjust the Stitch Pitch

### Introduction

The stitch pitch is the space between the stitches. The machine automatically calculates the stitch pitch according to the size of the paper and the number of stitches. The stitches are inserted symmetrically on the spine of the book.

If a non-standard stitch pitch is needed, use STITCH PITCH to make the adjustment.

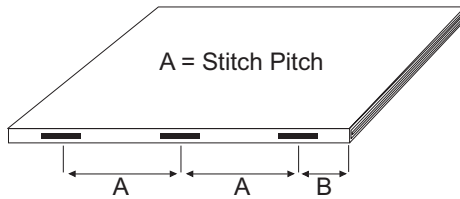

[14] Stitch Pitch

Limitations:

- The minimum stitch pitch 'A' is 2.5mm.
- The minimum distance from the centre of the stitch to the edge of the sheet 'B' is 1.5mm.

### When to do

If you need the Booklet maker to insert the stitches in a non-standard position. For example, to keep the stitches away from the text on the spine of the book.

### Select a non-standard stitch pitch

1. Touch BASIC  $\hat{>}$  STITCHES
2. Touch AUTO. The STITCH PITCH value goes green.
3. Change the stitch pitch value. Either use the "+" and "-" or touch the green stitch pitch value to open a numeric keypad.
4. Touch STITCHES to close the window.  
The stitch pitch value is displayed in the job mimic and on the STITCHES button.


### Select a standard stitch pitch

1. Touch BASIC  $\hat{>}$  STITCHES.
2. Touch AUTO to select ON.
3. Touch STITCHES to close the window.  
The stitch pitch value is not displayed in the job mimic or on the STITCHES button.

## Open the Connecting Bridge Cover

### Introduction

The Booklet maker will not stop if you open the connecting bridge cover.

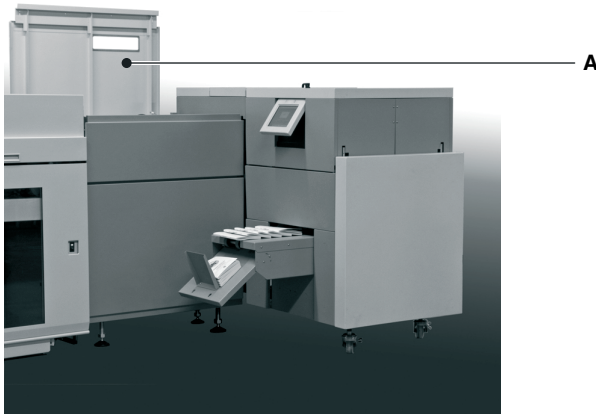

[15] Connecting Bridge Cover in the open position.

A	Connecting Bridge Cover
---	-------------------------

### When to do

If a machine error occurs, or for maintenance.

- To clear a paper jam
- To clean the static elimination bar



#### **Caution:**

Keep your hands, clothing and hair away from the belts.

---

### Procedure

1. Lift the connecting bridge cover.

## Open and Close the Folder Cover

### Introduction


If a machine error occurs, or for maintenance.

- To access the stitch area
- To access the folder area



#### Note:

The folder cover has an interlock switch. The Booklet maker stops if you open the folder cover.

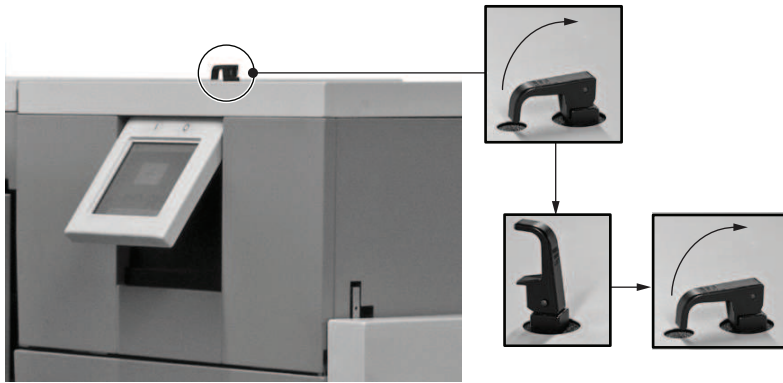

[16] Unlock and lock the Folder Cover.

### Open the Folder Cover

1. Lift the black locking handle against the spring pressure.
2. Turn the handle through 90° to unlock.
3. Lift the folder cover carefully to the vertical.

### Close the Folder Cover



#### Caution:

Check that the folder cover will not hit the clincher frame locking-handle when you close the folder cover. If necessary, lift and rotate the clincher frame locking-handle to a new position *Introduction* on page 41 .

## Open and Close the Folder Cover


---

1. Lower the folder cover.
2. Turn the handle through  $90^\circ$  to lock.
3. Close the locking handle to lock the folder cover.




# Lift and Lower the Clincher Frame

## Introduction

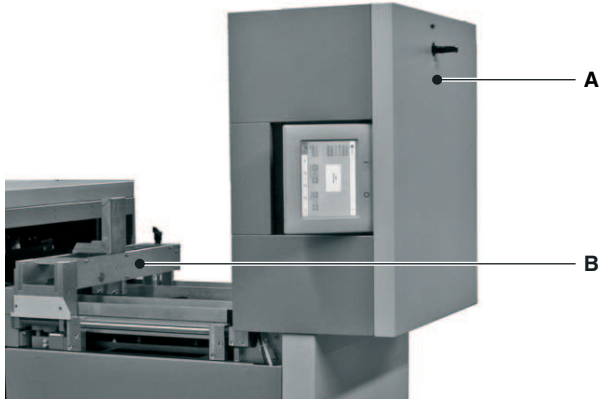

[17] Folder Cover in the vertical position.

A	Folder Cover
B	Clincher Frame

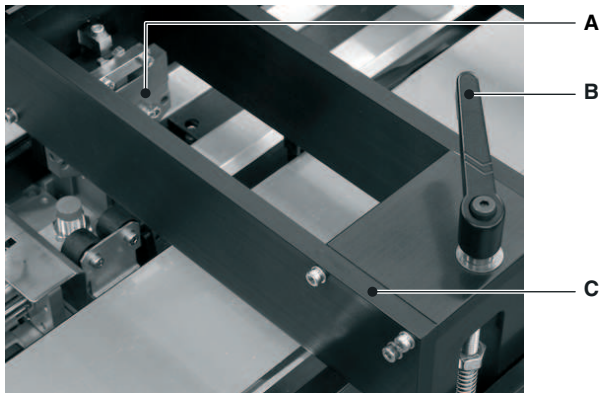

[18] Clincher Frame Components

A	Clincher
B	Locking Handle
C	Clincher Frame

### When to do

If a machine error occurs, or for maintenance.

- To clear a paper jam in the stitch area
- To unlock the Booklet maker main deck

### Lift the Clincher Frame

1. Open the folder cover.
2. Turn the locking handle to the left ☺, until the thread is disengaged.
3. Lift the clincher frame to the vertical position.

### Lower the Clincher Frame

---



**Attention:**


You must hold the weight of the clincher frame. Do not let the clincher frame fall on your hand.

---

1. Lower the clincher frame.
2. Turn the locking handle to the right ☹, until the handle is tight.
3. Check that the locking handle will not be hit by the folder cover when you close the folder cover. The locking handle should point towards the middle of the machine. If necessary, lift and rotate the locking-handle to a new position.

## Open the Gathering Area Cover

### Introduction

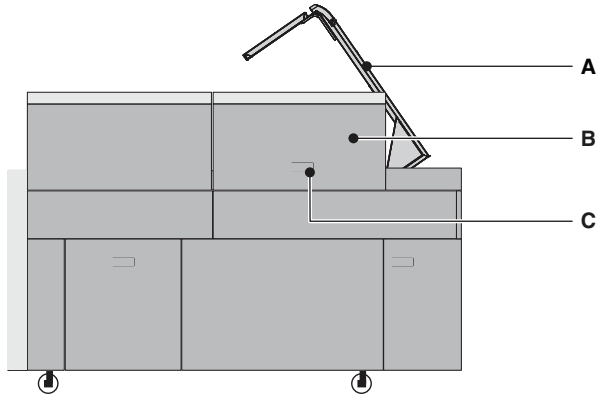

[19] Gathering Area Cover.

A	Connecting Bridge Cover open
B	Gathering Area Cover
C	Gathering Area Cover Handle

### When to do

If a machine error occurs, or for maintenance.

- To access the gathering area
- To access the static elimination bar in the gathering area


The Booklet maker will stop if you open the gathering area cover.

### Procedure

1. Open the connecting bridge cover.
2. Use the gathering area cover handle to lift the gathering area cover.

# Lift the Booklet maker Main Deck

## Introduction

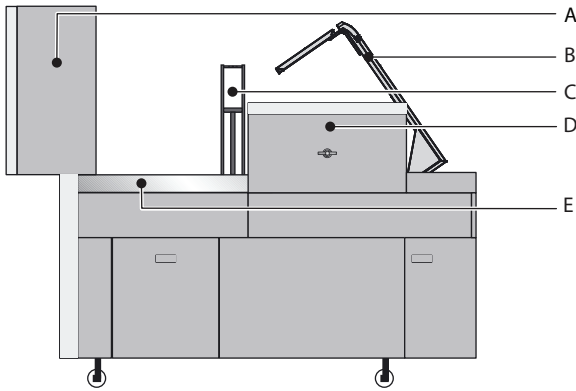

[20] Lift the Booklet maker Main Deck


A	Folder Cover open
B	Connecting Bridge Cover open
C	Clincher Frame lifted
D	Gathering Area Cover
E	Main Deck

## When to do

If a machine error occurs, or for maintenance.

- To access the stitch head
- To access the former area
- To access the trim area

## Before you begin

Check the touch screen for the error message <b>FOLD BLADE NOT PARKED</b> .	
If the error message is displayed:	Open the folder cover, remove any paper, close the folder cover. Touch START  , then follow the instructions on the screen. Wait for the message to clear. Then continue with the procedure below.

If the error message is not displayed:	Continue with the procedure below.
--	------------------------------------

**Caution:**

Keep your hands and fingers clear when you lift the main deck.

**Attention:**


Do not lift the main deck if the error message **FOLD BLADE NOT PARKED** is shown on the screen.

## Procedure

Step	Action	Information
1	Open the connecting bridge cover.	<i>'Open the Connecting Bridge Cover'</i> on page 38
2	Open the folder cover.	<i>'Open the Connecting Bridge Cover'</i> on page 38
3	Lift the clincher frame.	<i>'Lift the Clincher Frame'</i> on page 42
4	Open the gathering area cover.	<i>'Lower the Clincher Frame'</i> on page 42
5	Lift the Booklet maker main deck.	The main deck lifts to approximately 60. The weight of the main deck is supported by a gas strut. Let the gas strut control the movement of the main deck.

# Empty the Trim Bin

## Introduction

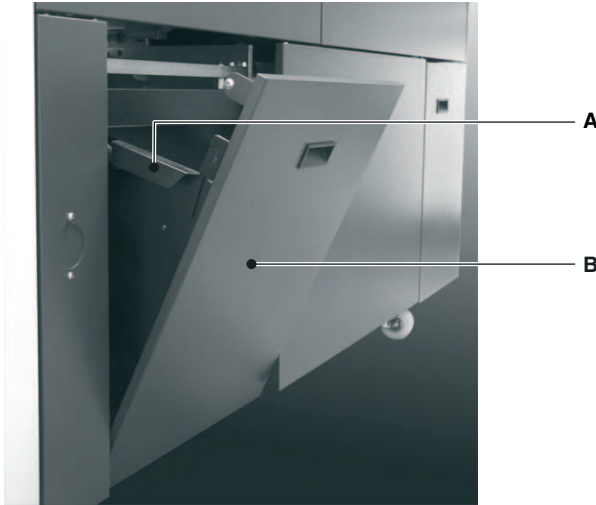

[21] Trim Bin Open.

A	Trim Bin Side Handle
B	Trim Bin open



**Note:**

The Booklet maker operates with the trim bin removed for a short time. The printer waits while the trim bin is removed, then continues when the trim bin is replaced. To prevent lost production, you must remove, empty and return the trim bin to the Booklet maker as quickly as possible.

## When to do

- An error message is displayed on the touch screen when the trim bin is full.
- You can empty the trim bin when you choose. For example, before you start a print job.


## Procedure

1. Use the handle to open the trim bin.
2. Use the side handles to lift and remove the trim bin.

3. Empty the trim bin
4. Fit the bottom of the trim bin over the mounting rail.
5. Push the trim bin closed at the top.

## Open the Stitch-Wire Cabinet

### Introduction

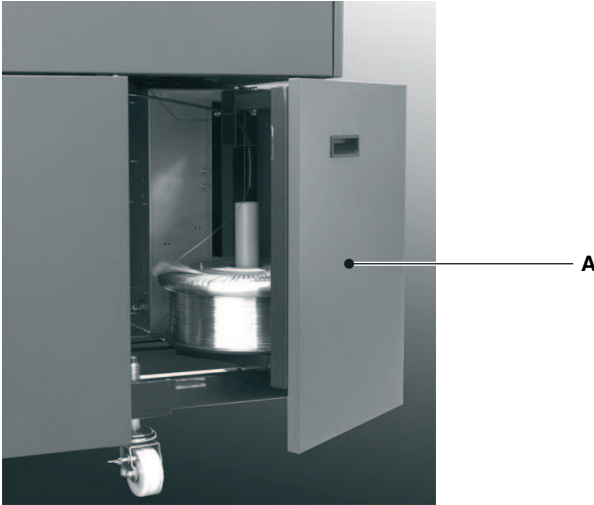

[22] Stitch-wire Cabinet.

A	Stitch-wire Cabinet open
---	--------------------------

### When to do

- To see if the stitch-wire is jammed or finished. An error message is displayed on the touch screen when the stitch-wire is jammed or finished.
- To install a new stitch-wire spool. *‘Install New Stitch-wire’ on page 133.*

### Procedure

1. Open the stitch-wire cabinet cover. The cover is held closed by a magnetic catch.




## Adjust the Stacker

### Introduction


The collection table must be in the correct position for the stacker to operate. The position of the collection table depends on the finished size of the job.

- When you start a new job
- If the books do not stack correctly

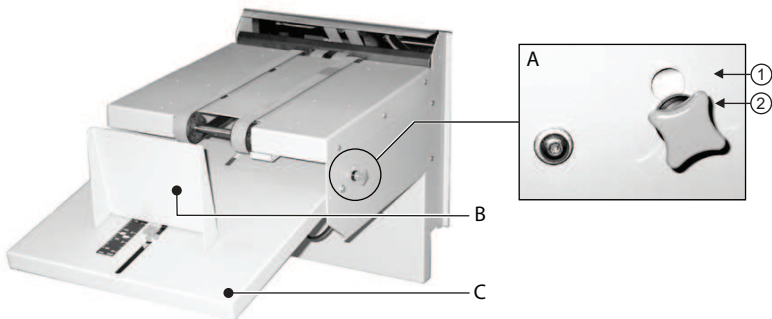

[23] The Stacker

A	Catch tray adjustment
B	Collection table
C	Catch tray

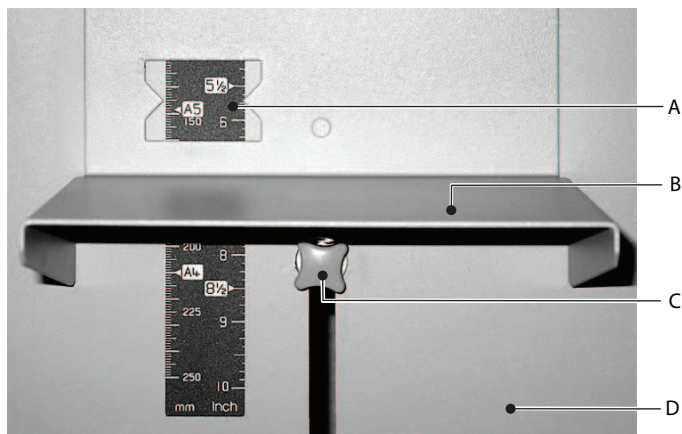

[24] Collection table position

A	Book size in window
---	---------------------

B	Collection table
C	Orange plastic hand-screw
D	Catch tray

### Procedure


1.

Step	Action	Information
1	Set the catch tray angle according to the thickness of the book.	For books that are 1.5mm thick or less, use position 1. For books that are more than 1.5mm thick, use position 2. <i>Introduction</i> on page 49
2	Set the collection table position according to the size of the book.	Read the setting through the window. <i>Introduction</i> on page 49


These settings are recommendations. The settings can change with the size, thickness and material of book. Make further adjustment if necessary.

# Adjust the Book Stacker

## - Illustration

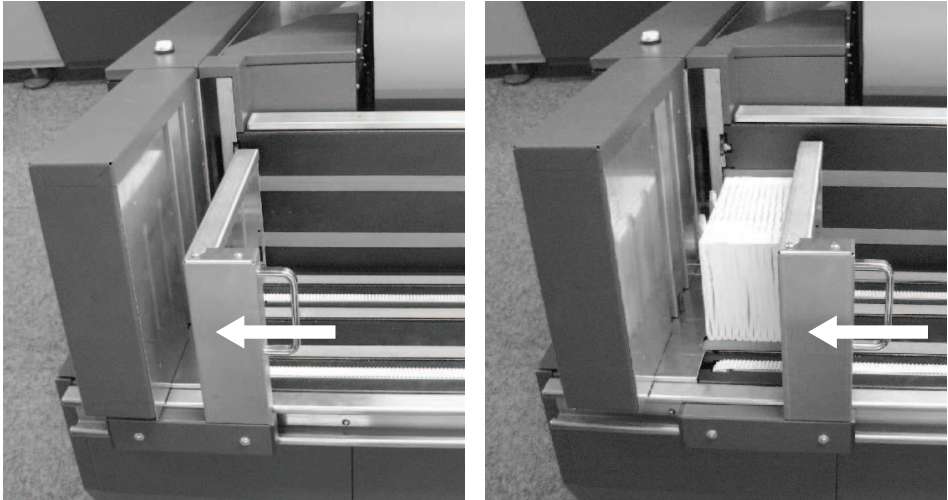

[25] Push the book support to the left

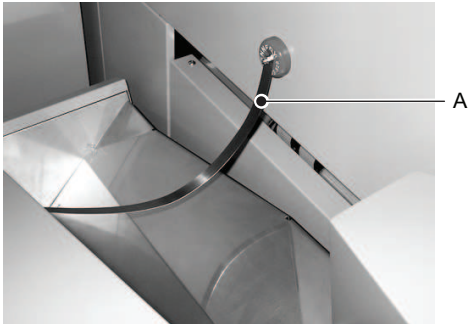

[26] The magnetic paper guide for thin books


A	Magnetic paper guide
---	----------------------

## Procedure

1. Before you use the Book Stacker, make sure the book support is pushed completely to the left. There is no need to empty the Book Stacker until the stacker is full.
2. If you are making thin books, attach the magnetic paper guide above the book outfeed on the Océ BLM500/550/550 PRO. Insert the loose end of the magnetic paper guide into the slot opposite (see *Illustration* on page 51).

## Unload the Book Stacker

### Introduction

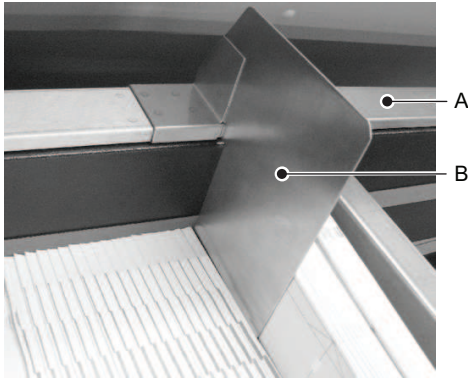

[27] The book divider

A	Guide rail
B	Book divider

### Procedure

1. If required, insert the book divider so that the stack does not slip while you unload the books.
2. Remove the books.
3. Push the book support completely to the left (see *Illustration* on page 51).
4. Remove the book divider until it is needed. Store the book divider on the right-hand end of the guide rail of the stacker.

---

# Operate the Booklet maker offline

## Introduction

You can hand feed sets into the Booklet maker if offline operation is needed. The machine operates when you push the two buttons.

## When to do

- To check the settings are correct
- To make a small number of books offline



### **Attention:**

Do not put your hands in the gathering area when the machine operates. Use two hands to push the buttons. For safety reasons, this task is for a single operator. Do not let another person help you.

---

## Procedure

1. Enter the correct settings on the touch screen, according to the size and thickness of the job.
2. Touch START Ⓢ
3. Open the connecting bridge cover.
4. Open the gathering area cover.
5. Put the set in the gathering area with the middle pages of the book face up.
6. Press the two buttons and hold for 9 seconds, or until you hear the folder operate. The time interval changes according to the number of stitches.



# **Chapter 5**

## **Error Conditions, Problems and Solutions**


This chapter describes how to correct problems that can occur on your Booklet maker. If a problem continues, contact your service engineer.

# Clear a Printer Error

## Introduction

If a paper jam or other error occurs in the printer, the printer and the Booklet maker stop.

## Procedure

1. Clear the printer error.
2. Follow the instructions on the printer. If the printer tells you to remove paper from the Booklet maker, touch **START**  to start the machine.
3. Then touch **ADVANCED > PURGE SET > PURGE SET**.
4. The partial book is delivered to the stacker.
5. Discard the book.
6. Check the Océ BLM500/550/550 PRO screen. If an error message is displayed, take the corresponding action (see *Error Messages* on page 75).



## Clear a Booklet maker error

### Introduction

If a paper jam or other error occurs in the Booklet maker, the printer and the Booklet maker stop. The type of error is displayed on the touch screen *'Error Messages'* on page 75.

### Procedure

1. Clear the error. The error message on the touch screen tells you about the error.
2. Remove all sheets from the Booklet maker.
3. Follow the instructions on the printer.



Is the Booklet maker turned ON and connected to the mains power supply of the correct type and voltage?	
No	Yes
⋮ ⋮ ⋮ V	Replace the fuse at the mains input (see <i>'Change the fuses of the Booklet maker'</i> on page 107). If the problem continues, then call your service engineer.
Connect the Booklet maker to the mains supply of the correct type and voltage and then turn the machine ON.	

### The touch screen does not work

Is the touch screen in power-save mode (see <i>'The Touch Screen'</i> on page 22)? Touch the screen to restore the normal brightness.	
No	Yes
⋮ V	No further action is needed.
Calibrate the touch screen (see <i>'Calibrate the Touch Screen'</i> on page 106).	

# Book Quality

## Paper Size and Book Quality Instructions

- Careful measurement of the paper size and set thickness is important.
- To make an accurate book you must enter accurate paper dimensions into the touch screen.
- To get best accuracy, use millimetres to measure the set (see *'Before You Begin'* on page 16).
- Measure the size of the printed paper. The paper dimension changes when the paper is printed.
- If the book is made from several different types of paper, make sure the different paper types are all the same size. If the size of the paper is different, an accurate book cannot be made.
- The paper must be cut accurately. If the sheets are not cut squarely, an accurate book cannot be made.
- Adjustments to the **FORM** settings can be necessary for some types of paper.

## Machine Adjustments

Machine adjustments can be made while the machine is in operation.

The **PAPER SIZE** adjustment is limited to a maximum of +/- 1 mm when the machine is in operation.

## Untidy book problem




- The finished book is not tidy.
- The sheets are not aligned.
- The book is not folded squarely.

Are the covers of the books and the insides of the books made from the same paper weight and paper type?		
Yes	No	
: V	Accurately measure the different papers. Are the different types of paper exactly the same size?	
	Yes	No
	: V	You must use paper that is the same size.

Is the paper within specification (see ' <i>Specifications</i> ' on page 142)?	
Yes	No
⋮ V	Do not use paper that is outside the specification.
Have you accurately measured the paper-size after printing?	
Yes	No
⋮ V	Print a sample to the stacker and measure the printed paper. Accurate measurement will improve book quality.
Have you entered the measured PAPER SIZE into the touch screen?	
Yes	No
⋮ V	Enter the correct, measured <b>PAPER SIZE</b> into the touch screen.
Have you accurately measured the set thickness?	
Yes	No
⋮ V	Measure the set thickness and enter the correct <b>SET THICKNESS</b> into the touch screen.
Have you entered the measured set thickness into the touch screen?	
Yes	No
⋮ V	Enter the correct <b>SET THICKNESS</b> into the touch screen.
Touch <b>ADVANCED</b> > <b>RE-REF</b> > <b>RE-REF</b> to re-reference the machine. Does the problem continue?	
Yes	No
⋮ V	Further action is not needed.

Clean the static elimination bars (see <i>'Clean the Static Elimination Bars'</i> on page 115). Does the problem continue?	
Yes	No
⋮ ⋮ V	Further action is not needed.
Is the paper thin and/or curly?	
Yes	No
⋮ ⋮ V	Call your service engineer.
Increase the <b>TAMPER TIME</b> to give the paper more time to settle. Supervisor access level is needed (see <i>'The MENU Window'</i> on page 33). On thin books, this may reduce the production speed. Touch <b>CONFIGURE &gt; SHUTTLE</b> . Increase the <b>TAMPER TIME</b> in increments of 200. Does the problem continue?	
Yes	No
⋮ ⋮ V	Further action is not needed.
Call your service engineer.	

### Spine form problems

<p>Correct spine form</p> 	<p>Incorrect spine form. The square spine is part formed or not formed.</p> 	<p>Incorrect spine form. The spine is over-formed and the book is damaged.</p> 
---	---	--


Is the spine form different at each end of the spine?	
Yes	No

: : : : : V	The spine is incorrect along the full length. Is the folder cover closed fully?		
	Yes	No	
	: : : : : V	Lock the folder cover (see <i>'Close the Folder Cover'</i> on page 39).	
: : : : : V	Is the <b>SET THICKNESS</b> correct?		
	Yes	No	
	: : : : : V	Measure the <b>SET THICKNESS</b> and enter the value in the touch screen. Does the problem continue?	
		Yes	No
	: : : : : V		Further action is not needed.
		Check the <b>THRESHOLD</b> setting. If the <b>SET THICKNESS</b> is less than the <b>THRESHOLD</b> , a square spine is not formed (see <i>'The BASIC Window'</i> on page 27). Adjust <b>THRESHOLD</b> if needed. Does the problem continue?	
	: : : : : V	Yes	No
	: : : : : V	Further action is not needed.	
: : : : : V	Adjust the <b>PRESSURE</b> setting. Increase the <b>PRESSURE</b> to give more spine form and decrease the <b>PRESSURE</b> to give less spine form. Does the problem continue?		
	Yes	No	
	: : : : : V	Further action is not needed.	

: : : : : V	Adjust the <b>NUMBER</b> of forms setting. Increase the <b>NUMBER</b> of forms to give more spine form and decrease the <b>NUMBER</b> of forms to give less spine form. Does the problem continue?	
	Yes	No
	: : : : : V	Further action is not needed.
: : : : : V	Load a Default Job. This will reset the <b>FORM</b> settings, including <b>PRESSURE</b> , <b>NUMBER</b> and <b>THRESHOLD</b> (see <i>Reset the Booklet maker to default settings</i> on page 36). Does the problem continue?	
	Yes	No
	: : : : : V	Further action is not needed.
: : : : : V	Run a standard job using paper of 80 g/m <sup>2</sup> (20 lb bond). Does the problem continue?	
	Yes	No
	: : : : : V	The problem is caused by the cover material or the finish on the cover. Change the cover material.
: : : : : V	Re-reference the machine. Touch <b>ADVANCED</b> > <b>RE-REF</b> > <b>RE-REF</b> to re-reference the machine. Does the problem continue?	
	Yes	No
	: : : : : V	Further action is not needed.
Call your service engineer.		




## Stitching problems - the book is not stitched

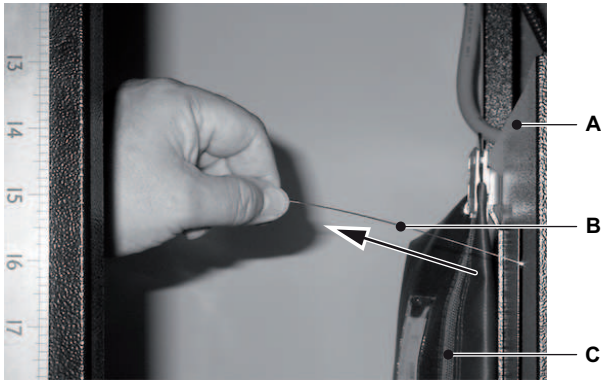

[31] Pulling stitch-wire

A	Stitch-wire cabinet
B	Stitch-wire
C	Accessory bag

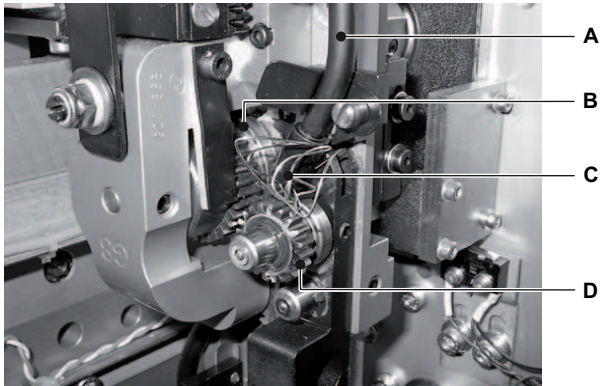

[32] Stitch-wire jam

A	Middle wire-tube
B	Large feed gear
C	Stitch-wire jam
D	Small feed gear

Is the number of STITCHES set between 1 and 6?

Yes	No
⋮ ⋮ V	Select STITCHES 1 - 6 (see <i>'The BASIC Window'</i> on page 27).
Check the stitch-wire spool. Is there stitch-wire present?	
Yes	No
⋮ ⋮ V	Load a new stitch-wire spool (see <i>'Install New Stitch-wire'</i> on page 133).
Open the PSQ main deck (see <i>'Lift the Booklet maker Main Deck'</i> on page 44). Pull approximately 100 mm -150 mm of stitch-wire from the stitch wire spool. Does the wire move freely?	
Yes	No
⋮ ⋮ ⋮ ⋮ V	Open the stitch-wire cabinet. Discard any tangled wire and reload the stitch-wire spool (see <i>'Install New Stitch-wire'</i> on page 133).
Check the stitch head for stitch-wire jams. Is the stitch head clear of stitch-wire jams?	
Yes	No
⋮ ⋮ V	Clear the stitch-wire jam (see <i>'Clear a Stitch-wire Jam'</i> on page 100).
Lubricate the stitch head (see <i>'Lubricate the Stitch Head'</i> on page 128). Does the problem continue?	
Yes	No
⋮ ⋮ V	Further action is not needed.
Call your service engineer	

### Stitching problems - the book is badly stitched

A correctly formed stitch:

- has equal leg length
- has straight legs

- the distance between the ends of the stitch legs is approximately 1 mm, the distance can vary by +/- 0.5 mm
- has a flat crown.

Is the stitch formed correctly?			
Yes		No	
		Call your service engineer	
V			
The stitches should be aligned centrally on the spine. Are the stitches positioned correctly?			
Yes		No	
		Are the covers of the books and the insides of the books made from the same paper weight and paper type?	
V		V	
		Yes	
		No	
		Accurately measure the different papers. Are the different types of paper exactly the same size?	
		Yes	
		No	
		V	
		You must use paper that is the same size.	
Is the paper within specification (see <i>'Specifications'</i> on page 142)?			
		Yes	
		No	
		Do not use paper that is outside the specification.	
V		V	
Have you accurately measured the paper size after printing?			
		Yes	
		No	
		Print a sample to the stacker and measure the printed paper. Accurate measurement will improve the book quality.	
V		V	

: : : : V	Have you entered the measured <b>PAPER SIZE</b> into the touch screen?	
	Yes	No
	: : V	Enter the correct, measured <b>PAPER SIZE</b> into the touch screen.
: : : : : V	Touch <b>ADVANCED &gt; RE-REF &gt; RE-REF</b> to re-reference the machine. Does the problem continue?	
	Yes	No
	: : V	Further action is not needed.
	Call your service engineer	
Further action is not needed.		

### Trimming problem - the book is not trimmed

Is the <b>TRIM</b> option turned off?	
No	Yes
: : V	Turn on the <b>TRIM</b> option.
Is <b>AUTO</b> turned off in the <b>TRIM</b> window?	
No	Yes



Re-reference the machine. Touch <b>ADVANCED</b> > <b>RE-REF</b> > <b>RE-REF</b> to re-reference the machine. Does the problem continue?	
Yes	No
⋮ ⋮ V	Further action is not needed.
Call your service engineer.	


**Trimming problem - the book is not trimmed square**

Open the trim stop guard and check for paper trimmings (see *'Clear paper from the trim stop'* on page 138).


Is the trim stop clear of paper trimmings?		
Yes	No	
⋮ ⋮ ⋮ ⋮ ⋮ V	Clear paper from the trim stop. Does the problem continue?	
	Yes	No
	⋮ ⋮ V	No further action is needed.
Call your service engineer.		

**Trimming problem - poor trim quality**

The trim process uses a double-edge blade to cut thick books. This can leave a small mark in the centre of the trimmed edge. The visibility of this mark will depend on the paper quality and characteristics.

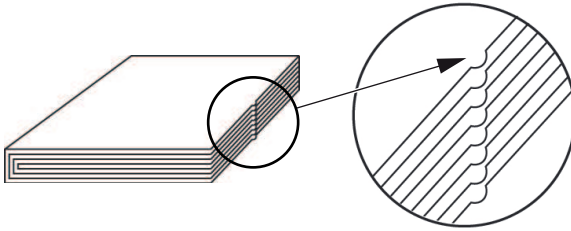


[33] Blade witness mark in the centre of the book

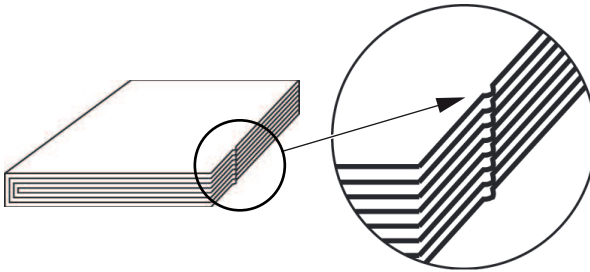

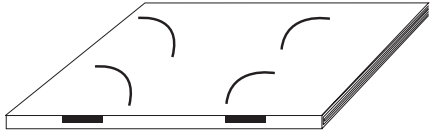


[34] Blade damage mark

Are there marks on the trimmed edge other than the blade witness mark?	
No	Yes
⋮ ⋮ V	Call your service engineer.
No further action is needed.	

### Dirty marks on book


Are there dirty marks on the spine?	
	Marks on the spine
No	Yes
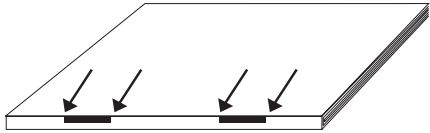
<p>⋮ ⋮ ⋮ ⋮ ⋮ V</p>	<p>Clean the former roller (see <i>'Clean the Former Roller'</i> on page 118).</p>
<p>Are there grease or oil spots on the spine of the book?</p>	 <p>Grease marks near the stitches</p>
<p>No</p>	<p>Yes</p>
<p>⋮ ⋮ ⋮ ⋮ ⋮ V</p>	<p>Clean grease from the top of the stitch head (see <i>'Clean excess grease from the Stitch Head'</i> on page 126).</p>
<p>Are there dirty marks on the cover of the book near to the spine?</p>	 <p>Marks beside the spine</p>
<p>No</p>	<p>Yes</p>
<p>⋮ ⋮ ⋮ ⋮ ⋮ V</p>	<p>Clean the polyurethane form strips (see <i>'Clean the Polyurethane Strips in the Form Clamp'</i> on page 120).</p>
<p>Are there curved dirty marks on either the front or rear cover of the book?</p>	 <p>Curved marks on the book</p>
<p>No</p>	<p>Yes</p>
<p>⋮ ⋮ ⋮ ⋮ ⋮ V</p>	<p>Clean the trimmings removal fingers (see <i>'Clean the Trimmings-removal Fingers'</i> on page 123).</p>



Print a sample to the printer stacker. Is the printer the cause of the dirty marks?	
No	Yes
⋮ V	Printer service is required.
Call your service engineer.	

**Damaged book**

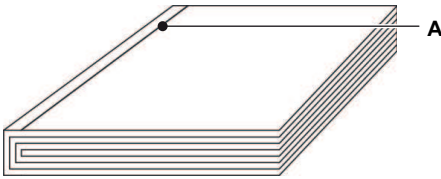

[39] Normal witness mark (A) left by the form clamp during spine forming

Are there damage marks on the cover of the book near to the spine, from the form clamp, that are worse than the normal witness mark?		
No	Yes	
⋮ ⋮ ⋮ ⋮ ⋮ ⋮ ⋮ ⋮ ⋮ V	Run a standard job using paper of 80 g/m <sup>2</sup> (20 lb bond). Does the problem continue?	
	Yes	No
	⋮ ⋮ ⋮ ⋮ V	The problem is caused by the cover material or the finish. Change the cover material.
	Call your service engineer.	
Is the spine torn or creased?		
No	Yes	
⋮ ⋮ V	The spine is over-formed (see <i>'Spine form problems'</i> on page 62).	
Is there damage to the spine at the stitch positions or is the cover falling off?		
No	Yes	



## Error Messages

### Message list


Information and error messages are shown in the message list.

The error messages are shown in order of priority.

Follow the action needed for the messages, starting with the message at the top of the list.

To display the information about a message:



- Touch **HELP** then touch the message list.
- Use the right-arrow and left-arrow to see the help text for each message.



Problem	Cause	Solution
AXES MOVING	Some of the machine axes are moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF</b>	
BOOK CYCLE TIME TOO LONG	The printer has delivered the sets faster than the books can be made. To decrease the book cycle time, adjust the machine settings: <ul style="list-style-type: none"> <li>■ decrease the number of FORMS</li> <li>■ decrease the number of STITCHES</li> <li>■ decrease the TAMPER TIME</li> <li>■ touch <b>STOP</b>  to clear the message from the screen</li> </ul>	

Problem	Cause	Solution
BOOK DELIVERY TOO FAST	Books are being delivered to the stacker too fast. This error can happen when you insert books into the stacker by hand. Press the reset button on the stacker. If the problem continues, then call your service engineer.	
Bridge axis moving	The bridge axis is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
BRIDGE INFEED COVER OPEN	The bridge infeed cover is open. The machine will not operate until the cover is closed.	See <i>'Clear Paper Jams'</i> on page 88
BRIDGE MOTOR STALL	Check for a paper jam in the connecting bridge. <ul style="list-style-type: none"> <li>■ Touch STOP ⊙ to stop the Booklet maker.</li> <li>■ Clear the paper jam.</li> <li>■ Touch STOP ⊙ to clear the message from the screen.</li> <li>■ Continue the print job.</li> </ul>	See <i>'Clear Paper Jams'</i> on page 88
BRIDGE - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	

Problem	Cause	Solution
CHECK PAPER SIZE	Remember to check the paper size. To make an accurate book you must enter accurate paper dimensions into the touch screen. Measure the size of the printed paper. The paper dimension changes when the paper is printed.	
CHECK THE TRIM BIN	The trim bin is either open or full. Check the trim bin. Empty the trim bin if necessary.	
COVER OPEN	A safety cover is open. The machine will not operate until the cover is closed.	
DFA INTERFACE - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
DRIVE MOTOR STALL	There is a paper jam. Check the machine and correct the error. Touch STOP © to clear the message from the screen.	
Endlay axis moving	The endlay axis (size adjustment) is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	

Problem	Cause	Solution
ENDLAY - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
ERROR IN TRIM AREA	There is an error at the trimmer. Check the trimmer for a paper or book jam. Touch STOP © to clear the message from the screen.	
ERROR - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
FLOW ERROR - BRIDGE	There is an error at the connecting bridge. Open the connecting bridge cover and check for a paper jam. Touch STOP © to clear the message from the screen.	See <i>'Clear Paper Jams'</i> on page 88
FLOW ERROR - FORMER	There is an error at the former. Open the folder cover and remove the book. If necessary, open the main deck to remove the book.	See <i>'Jam in the Folder or Former Area'</i> on page 91
FLOW ERROR - GATHER AREA	There is a paper jam in the gathering area. Open the connecting bridge cover, lift the gathering area and remove the paper jam.	See <i>'Jam in the Gathering Area'</i> on page 89


Problem	Cause	Solution
FLOW ERROR - OUT-FEED	There is an error at the outfeed. Remove the trim bin and open the trim stop guard to remove the book. If necessary, open the main deck to remove the book.	See <i>Jam in the Trim Area</i> on page 96
FLOW ERROR - STITCHER	There is an error at the stitcher. Open the folder cover and remove the book. If the problem continues, then call your service engineer.	See <i>Jam in the Stitch Area</i> on page 90
Fold blade axis moving	The fold blade axis (book thickness adjustment) is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF</b>	
FOLD BLADE NOT PARKED	Open the folder cover, remove the paper, close the folder cover. Touch START  , then follow the instructions on the screen.	
FOLD - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
FORM CLAMP CLOSED	The form clamp is in the wrong position. Touch START  to reset the position. Follow the instructions on the screen.	


Problem	Cause	Solution
FORM ROLLER ERROR	Open the folder cover, remove the paper, close the folder cover.	See <i>'Jam in the Folder or Former Area'</i> on page 91
FORM ROLLER NOT PARKED	The form roller is in the wrong position. Touch START  to reset the position. Follow the instructions on the screen.	
FORM CLAMP ERROR	There is an error at the former. Open the folder cover and remove the book. If necessary, open the main deck to remove the book.	See <i>'Jam in the Folder or Former Area'</i> on page 91
GATHERING AREA COVER OPEN	Close the gathering area cover if you need to operate the machine online.	
INVERTER ERROR	Check for a paper jam and clear if necessary. Touch STOP  to clear the message from the screen. If the problem continues, contact your service engineer.	
JAM AT BRIDGE INFEED	There is a paper jam at the infeed to the connecting bridge. Clear the jam and continue.	See <i>'Clear Paper Jams'</i> on page 88
JAM AT FORM ROLLER	Open the folder cover, remove the paper, close the folder cover.	See <i>'Jam in the Trim Area'</i> on page 96.
JAM AT STACKER INFEED	There is a jam in the stacker infeed. Remove the books from the stacker infeed. Press the reset button on the stacker.	See <i>'Jam at Book Stacker infeed'</i> on page 97





Problem	Cause	Solution
JAM AT STACKER OUTFEED	There is a jam in the stacker out-feed or there are paper-trimmings in the stacker outfeed. Remove the books from the stacker outfeed. Check for paper-trimmings and remove them if present. Press the reset button on the stacker.	See <i>'Jam at Book Stacker outfeed'</i> on page 99
JAM BEFORE TRIMMER	There is a book jammed before the trimmer. Open the main deck to remove the book.	See <i>'Jam before the Trimmer'</i> on page 91.
JAM IN CONNECTING BRIDGE	There is a paper jam in the connecting bridge. Clear the jam and continue.	See <i>'Jam in the Connecting Bridge'</i> on page 89
JAM IN GATHERING AREA	There is a paper jam in the gathering area. Open the connecting bridge cover, lift the connecting bridge and remove the paper jam.	See <i>'Jam in the Gathering Area'</i> on page 89
JAM IN STACKER AREA	There is a paper jam at the outfeed of the machine. Remove the jammed books and continue.	
JAM IN STITCHER AREA	There is a paper jam in the stitch area. Open the folder cover, remove the paper jam and continue.	See <i>'Jam in the Stitch Area'</i> on page 90
JAM IN STITCH HEAD	There is a jam in the stitch head.	See <i>'Clear a Stitch Head Jam'</i> on page 102
JAM IN TRIMMER	There is a book jammed in the trimmer. Clear the jam and continue.	See <i>'Jam in the Trim Area'</i> on page 96

Problem	Cause	Solution
MAIN CONTROL - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
MANUALLY PARK SHUTTLE	The shuttle is not parked correctly. Open the folder cover and move the shuttle to the park position. Close the folder cover. The shuttle will reset. When the message list is clear, continue operation.	See <i>'Manually park the Shuttle'</i> on page 109
MISSING STITCHES	The machine has detected missed stitches. Check if the stitch-wire is jammed or if the stitch-wire spool is empty.	See <i>'Clear a Stitch-wire Jam'</i> on page 100 See <i>'Install New Stitch-wire'</i> on page 133
MOTOR CONTROLLER NOT READY	The drive motor controller is not ready. If the problem continues, contact your service engineer.	
OPERATOR MAINTENANCE	The machine needs routine maintenance by the operator.	See <i>'Operator Maintenance'</i> on page 112
REBOOT THE MACHINE	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
REMOVE SET FROM FOLD AREA	Open the folder cover and remove the set.	
REMOVE SET - GATHERING AREA	Open the gathering area and remove the sheets.	
REMOVE SET - STITCH AREA	Open the folder cover and remove the set.	See <i>'Jam in the Stitch Area'</i> on page 90




Problem	Cause	Solution
Rotate axis moving	The rotate axis is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
ROTATE - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
SET IN GATHERING AREA	There is a set or partial set in the gathering area. Open the gathering area and remove the sheets. If the print job has been cancelled, open the gathering area and remove the sheets. Or touch START  , then touch <b>ADVANCED &gt; PURGE SET &gt; PURGE SET</b> to clear the set from the machine.	
Shuttle axis moving	The shuttle axis is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
SHUTTLE MOTOR COMMS FAIL	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	

Problem	Cause	Solution
SHUTTLE MOTOR ERROR	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
SHUTTLE - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
SHUTTLE NOT PARKED	The shuttle is in the wrong position. Touch START  , then follow the instructions on the screen to reset the position.	
Sidelay axis moving	The sidelay axis (size adjustment) is adjusting. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
SIDEDELAY - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
STACKER FULL	The stacker is full. Unload the books from the stacker.	

Problem	Cause	Solution
Stitch axis moving	The stitch axis is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
Stitch length will change soon	The stitch length cannot adjust at the moment. The stitch leg length will adjust after the next book.	
STITCH - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
Stitch position adjusting	The stitch position is adjusting. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
STITCH TIMEOUT	Press STOP ☉. Open the folder cover, remove the paper, close the folder cover.	
SYSTEM ERROR 00.20 40.21 40.22	Touch STOP to clear the message from the screen. If the message does not clear, use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	


Problem	Cause	Solution
SYSTEM ERROR 39.xx	Press the reset button on the stacker. If the message does not clear, use the stacker mains ON/OFF switch. Turn the stacker OFF, then turn the stacker ON. If the problem continues, then call your service engineer.	
TOO MANY PAGES	The printer has delivered more than 55 sheets into the gathering area. Remove the incorrect set. Correct the printer setting. Touch STOP  to clear the message from the screen.	See <i>'Open the Gathering Area Cover'</i> on page 43
TOUCH PAD ERROR	There is a fault with the START and STOP touch pads. If the problem continues, then call your service engineer.	
Touch START to clear machine	There may be some paper in the machine. Touch START  to clear the machine before you start a new job.	
Trim axis moving	The trim axis (size adjustment) is moving. This message clears when the adjustment is complete. If the message does not clear, touch <b>ADVANCED &gt; RE REF.</b>	
TRIM BIN OPEN	The trim bin is not fitted or is not contacting the safety switch. Fit the trim bin.	

---

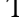Problem	Cause	Solution
TRIM BLADE NOT PARKED	The trim blade is in the wrong position. Touch START  to reset the position. Follow the instructions on the screen.	
TRIM - No comms	Use the mains ON/OFF switch. Turn the machine OFF, then turn the machine ON. If the problem continues, then call your service engineer.	
USER STOP	The user has touched the STOP  button while the machine is in operation. Touch START  to restart the machine.	

# Clear Paper Jams

## Introduction

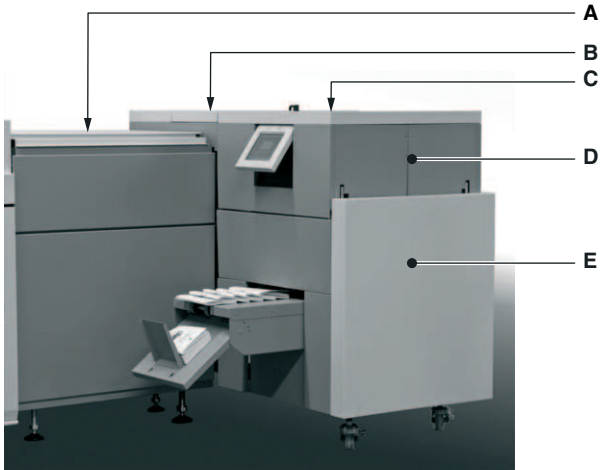


[40] Paper Jam Locations

A	Connecting Bridge
B	Gathering Area
C	Stitch Area
D	Fold and Forming Areas
E	Trim Area



## Illustration

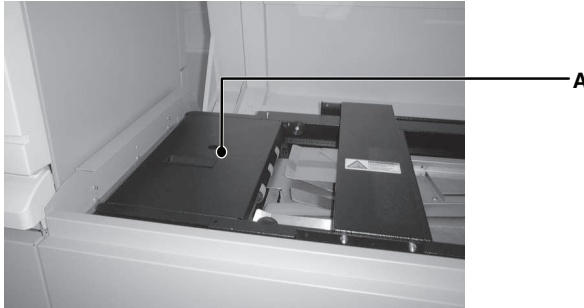

[41] Paper Jam Location - Bridge Infeed

A	Bridge Infeed Cover
---	---------------------

### Jam in the Bridge Infeed

1. Open the connecting bridge cover.
2. Open the bridge infeed cover.
3. Remove the jammed paper.
4. Close the bridge infeed cover.
5. Close the connecting bridge cover.

### Jam in the Connecting Bridge


1. Open the connecting bridge cover.
2. Remove the jammed paper.
3. Close the connecting bridge cover.

### Jam in the Gathering Area

1. Open the connecting bridge cover.
2. Lift the gathering area cover.
3. Remove the jammed paper.
4. Check the belts are in the correct position. Adjust the position of the belts if necessary (see *Illustration* on page 90).
5. Close the gathering area cover.

6. Close the connecting bridge cover.


### Illustration

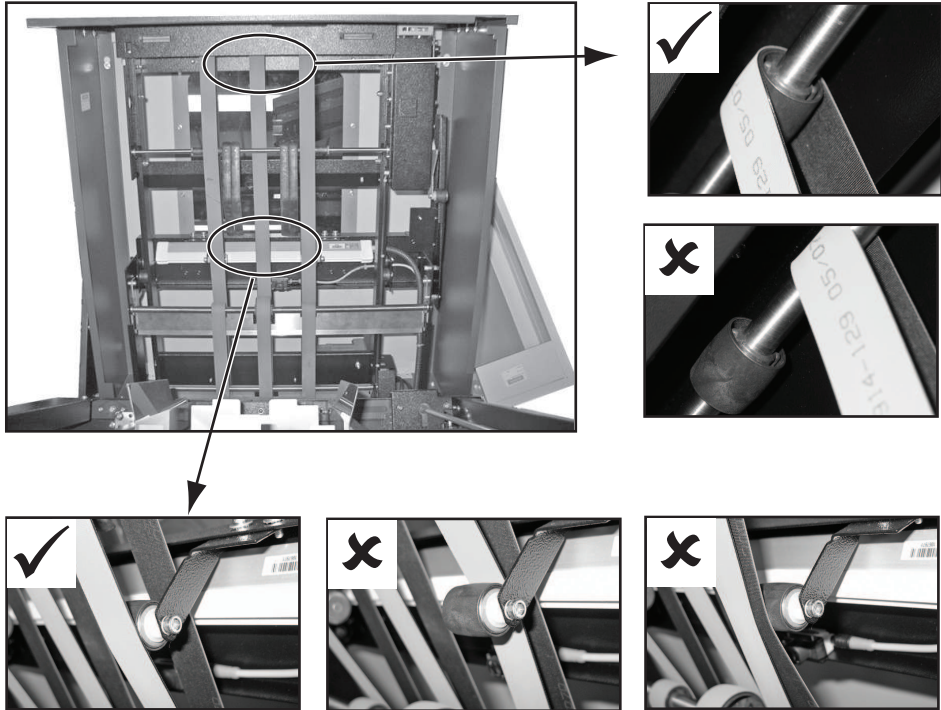

[42] Gathering Area Belt Positions

### Jam in the Stitch Area

Step	Action	Information
1	Open the folder cover.	See ' <i>Open and Close the Folder Cover</i> ' on page 39
2	Lift the clincher frame.	See ' <i>Lift and Lower the Clincher Frame</i> ' on page 41.
3	Remove the jammed paper.	

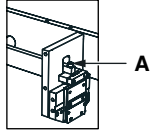Step	Action	Information
4	Check for broken or damaged stitches in the clincher area. Manually operate the clincher to clear any stitches that are jammed.	 <p>A: Press to manually operate the clincher.</p>
5	Lower the clincher frame.	See <i>'Lift and Lower the Clincher Frame'</i> on page 41
6	Close the folder cover.	

### Jam in the Folder or Former Area


1. Open the folder cover.
2. Remove the jammed paper. See *'Jam in the Trim Area'* on page 96 if you cannot see the paper in the former area.
3. Close the folder cover.

### Jam before the Trimmer

The error message **JAM BEFORE TRIMMER** is displayed. This error can be

1. a book jammed before the trimmer
2. a piece of paper trimming has covered the jam sensor


### Illustration

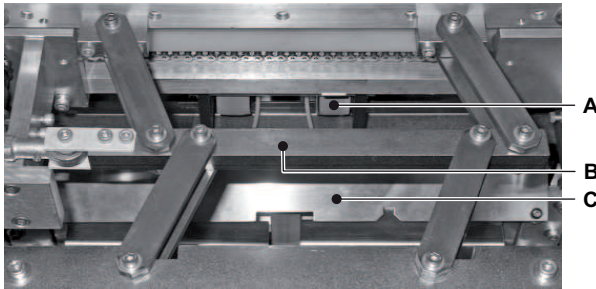

[44] Trimmer Infeed Conveyor viewed from above.

A	Trimmer Infeed Conveyor
B	Former-clamp mechanism
C	Reach in here to access the trim-infeed conveyor


### Illustration

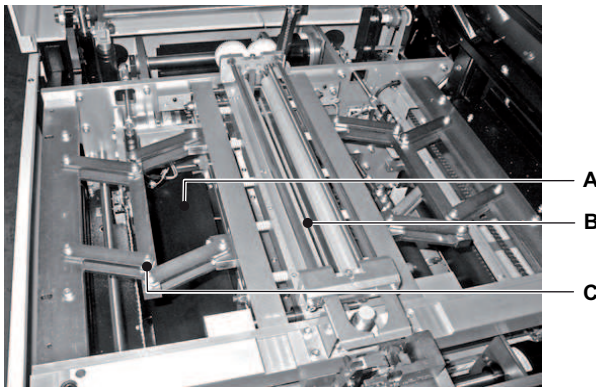


[45] Access to the Trimmer Infeed Conveyor


A	Reach in here to access the trim-infeed conveyor
B	Former clamp - look in here for paper trimmings

C	Former clamp mechanism.
---	-------------------------

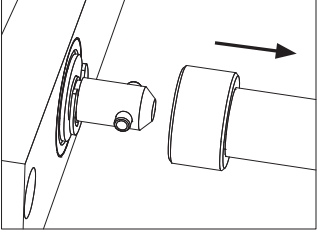Step	Action	Information
1	Open the Booklet maker main deck	See <i>'Lift the Booklet maker Main Deck'</i> on page 44
2	Remove the trim bin.	
3	Loosen the trimmer infeed conveyor.	<p>The procedure can be seen from the top of the machine (see <i>'Illustration'</i> on page 92).</p> <p>Access to the parts is through the former clamp mechanism (see <i>'Illustration'</i> on page 92).</p> <p>Hold the shaft and push to the right, against spring pressure to disengage the shaft from the drive pin.</p>  <p>Lift the left hand end clear.</p>
4	Remove the book, if one is found.	
5	Remove any paper offcuts from the trimmer infeed conveyor.	<p>Look down through the former clamp (see <i>'Illustration'</i> on page 92).</p> <p>Small pieces of paper trimmings can cover the jam sensor and cause an error message.</p>

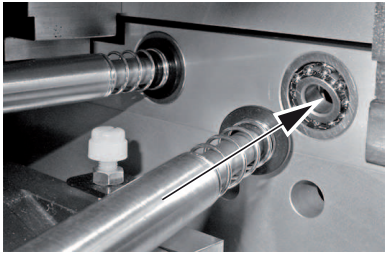Step	Action	Information
6	Fit the trimmer infeed conveyor.	 <p data-bbox="715 465 1055 529">Look down through the former clamp.</p> <ul data-bbox="715 538 1097 833" style="list-style-type: none"><li data-bbox="715 538 1097 633">■ Insert the right hand end of the shaft into the bearing, against the spring pressure.</li><li data-bbox="715 642 1097 737">■ Rotate the trimmer infeed conveyor, so that the green belts are vertical.</li><li data-bbox="715 746 1097 833">■ Insert the left-hand end, so that the shaft engages with the drive pin.</li></ul>
7	Fit the trim bin.	
8	Close the Booklet maker main deck and covers.	


**Illustration**

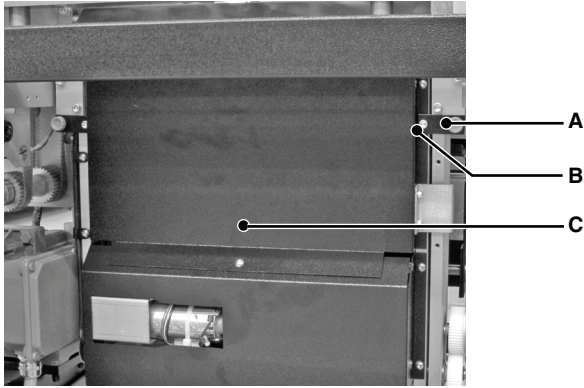

[48] Trim Stop Guard

A	Orange Plastic Hand Screw
B	Locking Plate
C	Trim Stop Guard

**Illustration**

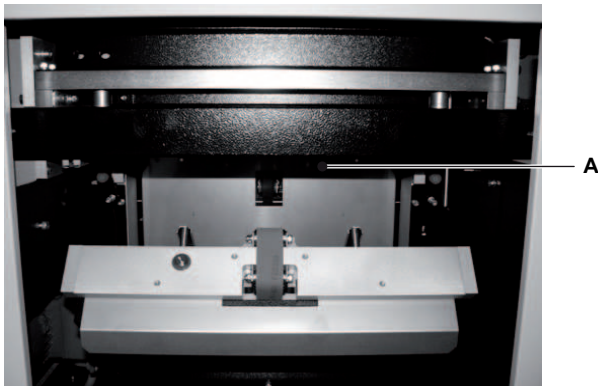

[49] Location of the sensor


A	Check under here for paper trimmings
---	--------------------------------------

## Jam in the Trim Area

Step	Action	Information
1	Remove the trim bin.	
2	Open the trim stop guard.	See <i>Illustration</i> ' on page 95. Loosen the 2 orange plastic hand screws to release the locking plates. The locking plates can rotate to release the trim stop guard. Pull the trim stop guard towards you.
3	Remove the jammed book.	
4	Check the trim stop and remove any pieces of trimmed paper.	In particular, check around the sensor. The sensor is where you can see a red and a green light (see <i>Illustration</i> ' on page 95). Small pieces of paper trimmings can cover the sensor and cause an error message.
5	Close the trim stop guard.	Push the trim stop guard into position. Hold the locking plates in position and tighten the orange hand screws.
6	Attach the trim bin.	



## Illustration

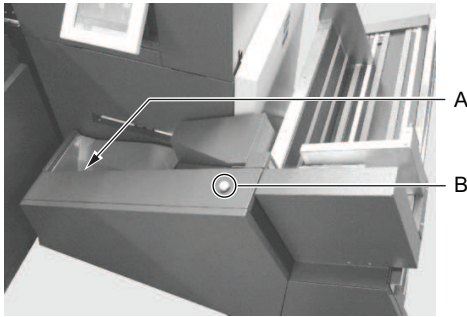

[50] Book Stacker infeed


A	Book Stacker infeed
B	Book Stacker reset button

## Jam at Book Stacker infeed


The error message **JAM AT STACKER INFEED** is displayed. This means a book is covering the sensor at the Book Stacker infeed.

1. Remove the book.
2. If you are making thin books, attach the magnetic paper guide (see '*Adjust the Book Stacker*' on page 51).
3. Press the reset button on the Book Stacker.

Illustration

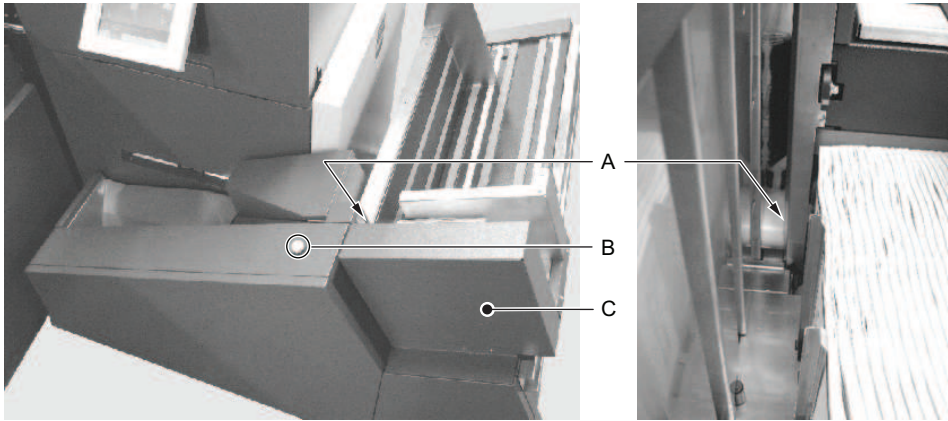

[51] Book Stacker outfeed - 1

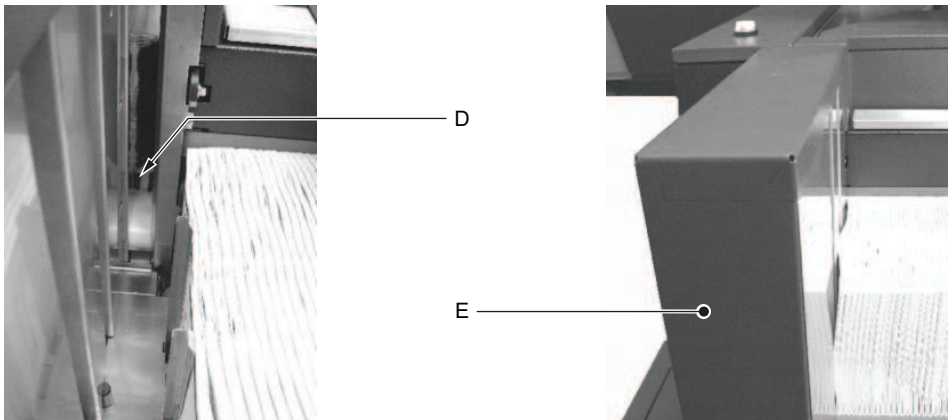

[52] Book Stacker outfeed - 2

A	Book Stacker outfeed
B	Book Stacker reset button
C	Pusher
D	Book Stacker outfeed is visible.
E	The pusher is in forward position. The Book Stacker out-feed is not visible.

### Jam at Book Stacker outfeed

The error message **JAM AT STACKER OUTFEED** is displayed. This means a book or some paper trimmings are covering the sensor at the Book Stacker outfeed. If the Book Stacker outfeed is visible:

1. Remove the book, if present.
2. Check for paper trimmings and remove them, if present.
3. Press the reset button on the Book Stacker.

If the pusher is in the forward position so that the Book Stacker outfeed is not visible:


1. Use your hand to move the pusher to the left, against the spring pressure.
2. Remove the book, if present.
3. Check for paper trimmings and remove them, if present.
4. Press the reset button on the Book Stacker.

## Clear a Stitch-wire Jam

### Introduction

**Before you begin:**


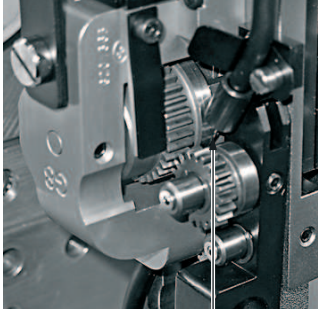
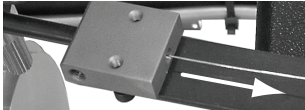
Lift the Booklet maker main deck. See *'Lift the Booklet maker Main Deck'* on page 44

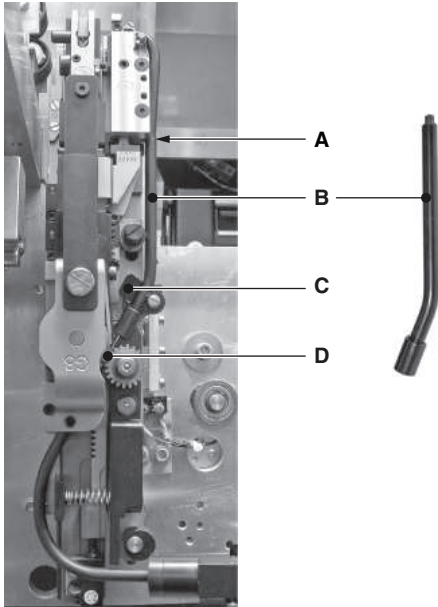

[53] Stitch Head.

A	Top location of Middle Wire Tube
B	Middle Wire Tube
C	Metal Spring Clip
D	Feed Gears

## Clear the Jammed Wire

Step	Action	Information
1	Cut the stitch-wire at position 'A' approximately 50mm (2-inches) from where the stitch-wire leaves the stitch-wire guide.	 <p>A</p> <p><i>Detail A:</i> Cut stitch-wire here.</p>
2	Cut the stitch-wire at position 'B' between the feed gears and the middle wire tube.	 <p>B</p> <p><i>Detail B:</i> Cut stitch-wire here.</p>
3	Pull the stitch-wire from the stitch-wire guide block.	 <p>Pull stitch-wire in direction of arrow</p>
4	Remove the middle wire tube.	See <i>'Introduction'</i> on page 100
5	Pull the wire from the stitch head.	
6	Install the stitch-wire into the stitch head.	See <i>'Install the Stitch-wire into the Stitch Head'</i> on page 135

## Clear a Stitch Head Jam

### Introduction



The error message **JAM IN STITCH HEAD** is displayed.

This may be caused by


- the **SET THICKNESS** setting is incorrect
- the stitch head is jammed by broken wire
- the stitch head needs lubrication

Do Procedure 1. If the error message continues, do Procedure 2.

### Procedure 1

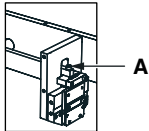Step	Action	Information
1	Open the folder cover.	See ' <i>Open and Close the Folder Cover</i> ' on page 39
2	Lift the clincher frame.	See ' <i>Lift and Lower the Clincher Frame</i> ' on page 41.
3	Remove the jammed paper.	
4	Check for broken or damaged stitches in the clincher area. Manually operate the clincher to clear any stitches that are jammed.	 <p>A: Press to manually operate the clincher.</p>
5	Lower the clincher frame.	See ' <i>Lift and Lower the Clincher Frame</i> ' on page 41
6	Close the folder cover.	
7	Press the START button  . Follow the on-screen instructions.	

## Procedure 2

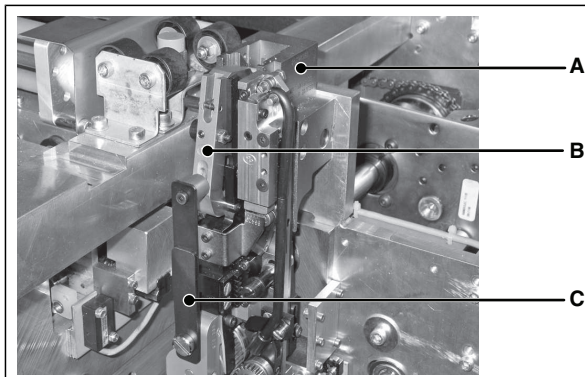

[58] Remove the stitch head wire-holder


A	Stitch head
B	Wire-holder
C	Wire-holder retaining spring

## Procedure 3



### **Attention:**

Do not apply force to the wire guide bars or the pivot block when you do this procedure. Force on these parts will damage the stitch head.

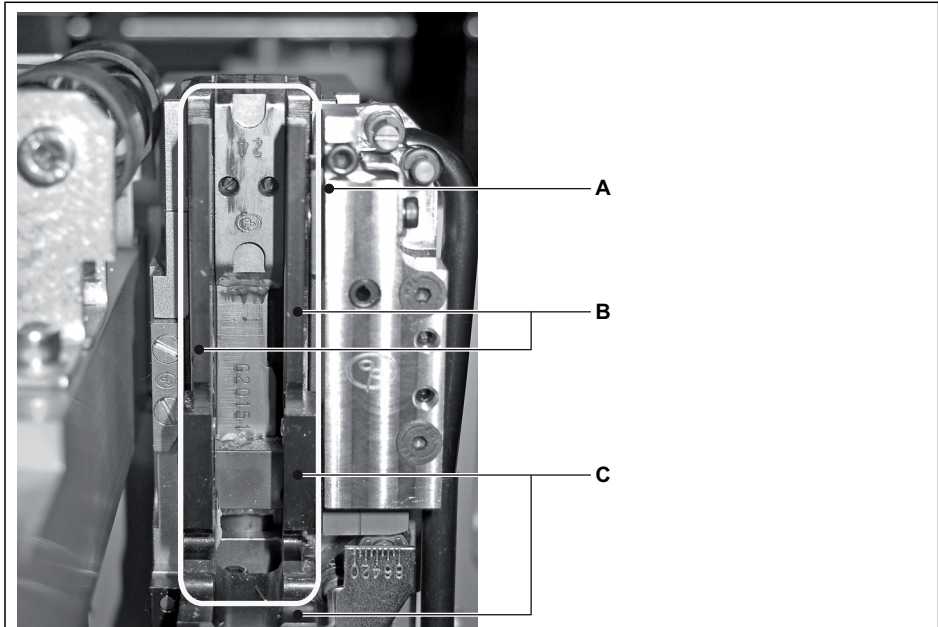

[59] Inspect for stitch-wire


A	Inspect this area for pieces of stitch-wire
B	Wire guide bars
C	Pivot block

**Tools and Materials:**

1. Klüber Isoflex NBU 15 Grease, 50g.
2. Air duster. Supplied with the machine
3. Wire cutters. Supplied with the machine.
4. Flat blade screwdriver.

Step	Action	Information
1	Lift the Booklet maker main deck.	See <i>'Lift the Booklet maker Main Deck'</i> on page 44

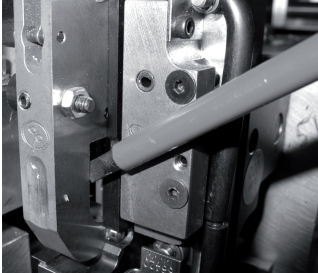

Step	Action	Information
2	Remove the wire-holder from the stitch head.	<ul style="list-style-type: none"> <li>■ Move the wireholder retaining spring to the right. <i>Procedure 2</i> on page 103</li> <li>■ Remove the wire-holder</li> </ul> <p>If the wire-holder is held in position, use a screw driver to help the removal of the wire-holder from the stitch head. Attention: Do not apply force to the wire guide bars or the pivot block (see <i>Procedure 3</i> on page 103).</p> 
3	Inspect the area behind the wire-holder for stitch-wire.	<i>Procedure 3</i> on page 103
4	Remove any stitches or pieces of stitch-wire and clean the area with the air-duster.	Use the wire-cutters to remove any jammed stitches or pieces of stitch-wire.
5	Lubricate the stitch-head.	<i>Lubricate the Stitch Head</i> on page 128
6	Fit the wire-holder.	Remember to put the wire-holder retaining spring in position.
7	Close the Booklet maker.	
8	Start the Booklet maker.	<p>If the head operates normally and returns to the parked position, then further action is not needed.</p> <p>If the stitch-head remains jammed, then repeat the procedure one time.</p> <p>If the problem continues, then contact your service engineer.</p>

## Calibrate the Touch Screen

### When to do

Calibrate the touch screen if the buttons do not operate or the buttons do not operate correctly.



#### **Attention:**

Use a pencil, the blunt end of a pen or a palm top wand for this procedure. Do not use a sharp object. Sharp objects damage the screen.

---

### Procedure

1. Touch the STOP button © 5 times.
2. Follow the instructions on the touch screen.  
You must touch the screen, where shown, as accurately as possible.
3. Touch **DONE** in the centre of the screen.

# Change the fuses of the Booklet maker

## Introduction

The Booklet maker has 2 fuses at the mains power input (see *'The Rear Panel of the Booklet maker'* on page 11). If either fuse is broken, the Booklet maker will not operate.

## Required tool

- Fuse description: 7A, HRC Quick Acting, F



### **Attention:**

Turn OFF the machine and remove the mains power supply cable before you change the fuses. This machine uses two fuses in parallel. To avoid the risk of fire, replace fuses using only the same type and rating.

---

## Procedure

1. Turn OFF the Booklet maker.
2. Disconnect the Booklet maker from the mains power supply.
3. Turn one fuse-holder to the left and remove the fuse-holder from the Booklet maker.
4. Check the fuse.
5. If the fuse is broken then replace with a fuse of the correct specification.
6. Repeat the procedure for the other fuse.



### **Note:**

If the fuse breaks again, then call your service engineer.

## Change the fuses of the Book Stacker

### Introduction

The Book Stacker has 2 fuses at the power input connector (see *Illustration* on page 12). If either fuse is broken, the Book Stacker will not operate.

### Required tool

- 3A, HRC Quick acting, F



**Attention:**

Turn OFF the machine and remove the mains power supply cable before you change the fuses. This machine uses two fuses in parallel.

---



**Attention:**

To avoid the risk of fire, replace fuses using only the same type and rating.

---

### Procedure

1. Turn OFF the Book Stacker.
2. Disconnect the Book Stacker from the power supply.
3. Check each fuse.
4. If the fuse is broken then replace with a fuse of the correct specification.



**Note:**

If the fuse breaks again, then call your service engineer.

## Manually park the Shuttle

### When to do

The error messages 'MANUALLY PARK SHUTTLE' and 'SHUTTLE NOT PARKED' are displayed.





**Note:**

'C' in the illustration below is fitted only to machines with serial no. 500 onwards)

### Illustration



[61] Shuttle Assembly Position - CORRECT

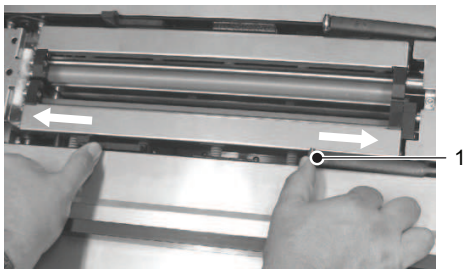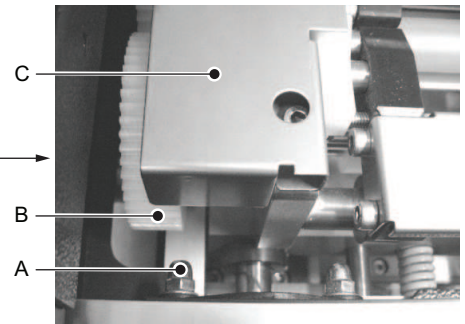

[62] Pick-up fingers

1	Pick-up fingers
---	-----------------

## Procedure

Step		
1	Open the folder cover.	See <i>'Open and Close the Folder Cover'</i> on page 39
2	Push the shuttle-assembly to the end.	<i>'Illustration'</i> on page 109 shows the correct position for the shuttle assembly. The screw 'A' must align with the white gear 'B'. If the shuttle assembly does not move to the correct position, push the pick-up fingers away from each other by 2-3mm and try again. Repeat if necessary. See <i>'Illustration'</i> on page 109.
3	Wait until the error message <b>SHUTTLE NOT PARKED</b> is cleared from the screen.	If the message does not clear, check that the shuttle assembly is in the correct position. Repeat Step 2 if necessary.
4	Close the folder cover.	

## Result

The error message **'MANUALLY PARK SHUTTLE'** is cleared from the screen. The shuttle axis re-references and the message **Shuttle axis moving** is displayed. When the message list is clear, you can continue operation

# **Chapter 6**

## **Maintenance**

## About Maintenance

### Service Interval

- The Booklet maker needs service every four months.
- After every one-million stitches, the stitch head needs service. This interval is every 3rd spool of stitch-wire.

Only a service engineer can service the Booklet maker. Contact your supplier for further information.

### Operator Maintenance

Correct maintenance by the operator makes sure that

- The machine operates correctly
- The machine makes high quality books
- The machine is safe to use
- Small problems can be identified early

### Operator Maintenance Plan

Interval	Task	Reference
■ Every week	Clean the machine.	See ' <i>Booklet maker cleaning</i> ' on page 114
	Clean the static elimination bars.	See ' <i>Clean the Static Elimination Bars</i> ' on page 115



When the message <b>OPERATOR MAINTENANCE</b> is displayed on the screen.	Lubricate the stitch head.	See <i>'Lubricate the Stitch Head'</i> on page 128
	Clean the former roller.	See <i>'Clean the Former Roller'</i> on page 118
	Clean the polyurethane strips in the form clamp.	See <i>'Clean the Polyurethane Strips in the Form Clamp'</i> on page 120
	Clean the trimmings-removal fingers.	See <i>'Clean the Trimmings-removal Fingers'</i> on page 123
	Clean excess grease from the stitch head.	See <i>'Clean excess grease from the Stitch Head'</i> on page 126
	Clean the static elimination bars.	See <i>'Clean the Static Elimination Bars'</i> on page 115

## Booklet maker cleaning

### Introduction

Clean the Booklet maker every week to remove surface dust.

---



***Attention:***

Only clean the machine with materials that are recommended in this manual. Do not use other chemicals or abrasive material.

---

### Outside of the Booklet maker

Use a moist cloth to clean the outside of the Booklet maker.

### Touch screen

Clean the touch screen with a clean, dry cloth. Never use an abrasive material or chemical to clean the touch screen. Light pressure with a clean, dry cloth is enough to remove fingerprints. Do not use too much force.

## Clean the Static Elimination Bars

### Introduction

Clean the static elimination bars every week. This action extends the performance and service life of the static elimination bars.

The Booklet maker is supplied with a small brush. Use the brush to clean the static elimination bars.


There are three static elimination bars.

- One in the connecting bridge
- Two in the gathering area.

### Required tool

- The Booklet maker is supplied with a small brush. Use the brush to clean the static elimination bars.


### Illustration

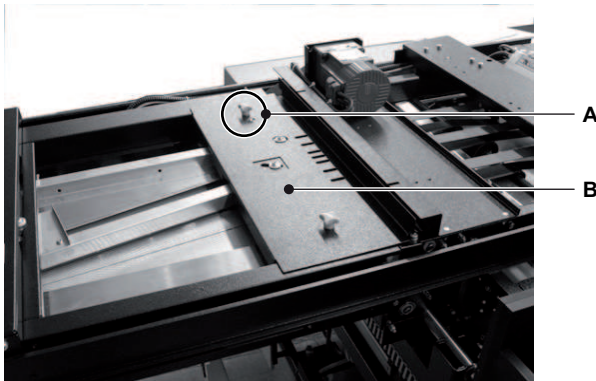

[63] The Bridge Pivot Guard

A	Orange thumb-screw
B	Bridge Pivot Guard


**Illustration**

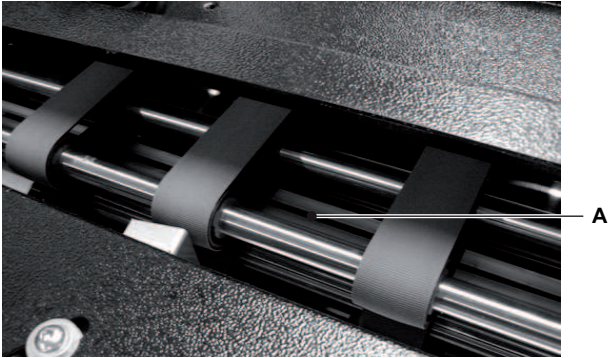

[64] The Static Elimination Bar in the Connecting Bridge

A	Static Elimination Bar
---	------------------------

**Illustration**

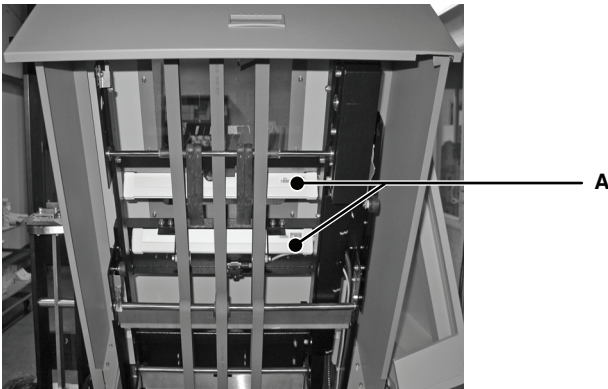

[65] The Static Elimination Bars in the Gathering Area

A	Static Elimination Bars
---	-------------------------

**Note:**

On the bottom of the static elimination bar there is a row of sharp pins. The pins are not dangerous, but if you touch the pins accidentally, this action can alarm you.


Step	Action	Information
1	Open the connecting bridge cover.	
2	Remove the bridge pivot guard.	See <i>‘Illustration’</i> on page 115. <ul style="list-style-type: none"> <li>■ Remove the two orange thumb-screws</li> <li>■ Lift the bridge pivot guard clear of the machine.</li> </ul>
3	Clean the static elimination bar in the connecting bridge.	See <i>‘Illustration’</i> on page 116. Clean the pins on the static elimination bar with a small brush.
4	Fit the bridge pivot guard.	Fit the guard and secure with the two orange thumb-screws.
5	Open the gathering area cover.	
6	Clean the static elimination bars in the gathering area.	See <i>‘Illustration’</i> on page 116. Clean the pins on the bottom of the static elimination bars with a small brush. Be careful that you do not dislodge the belts (see <i>‘Illustration’</i> on page 90).
3	Close the Booklet maker.	<ul style="list-style-type: none"> <li>■ Close the gathering area cover</li> <li>■ Close the connecting bridge cover.</li> </ul>

# Clean the Former Roller

## Introduction

Clean the former roller:

- Every month, as part of the operator maintenance plan.
- If the spines of the books are dirty. Ink and toner can collect on the former roller.

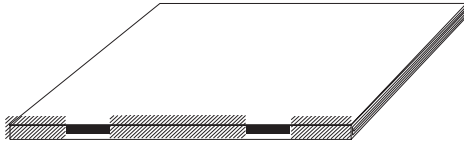

[66] Dirty marks on the spine

## Required tool

- Clean, plain paper that is not printed. A3 size (USA: 11 x 17”) is recommended. 4mm thickness is needed for each cycle. More than one cycle can be needed

## Procedure

Step	Action	Information
1	Enter the correct settings on the touch screen.	<ul style="list-style-type: none"> <li>■ Set the touch screen to the correct <b>PAPER SIZE</b></li> <li>■ Set the <b>SET THICKNESS</b> to 4.0</li> <li>■ Set the number of <b>STITCHES</b> to 0.</li> <li>■ Set the number of <b>FORMS</b> to 4.</li> </ul>
2	Touch START Ⓢ	
3	Open the connecting bridge cover.	
4	Lift the gathering area cover.	
5	Put 4mm of clean paper in the gathering area.	
6	Press the two orange buttons and hold for 9 seconds, or until you hear the folder operate.	

## Result

The book is delivered to the stacker. Check the book. Repeat the procedure until the book spine is clean.

## Clean the Polyurethane Strips in the Form Clamp

### Introduction

Clean the polyurethane strips in the form clamp:

- Every month, as part of the operator maintenance plan.
- If there are dirty marks near the spine on the front and back cover of the book. Ink and toner can collect on these parts, especially when you make thin books.



[67] Dirty marks beside the spine

### Required tool

- Alcohol wipe or
- A lint free cloth and alcohol (isopropanol)



#### **Attention:**

Only use alcohol to clean this part of the machine. Other chemicals can damage the machine.

---



#### **Caution:**

Wear protective gloves when you use the alcohol wipe.

---




#### **Note:**


If you push the eject rollers, the rollers can move together against your hand. This movement can alarm you, but is not dangerous.



**Illustration**

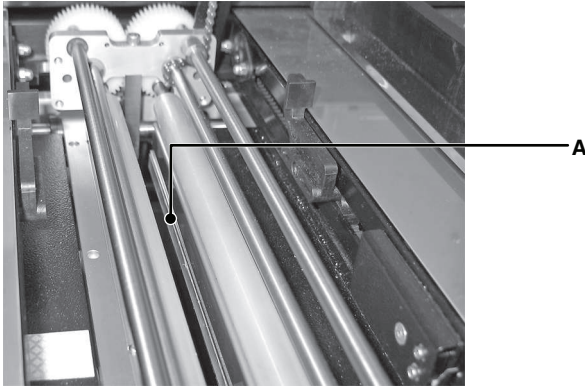

[68] Polyurethane strips (machines prior to serial number 500)

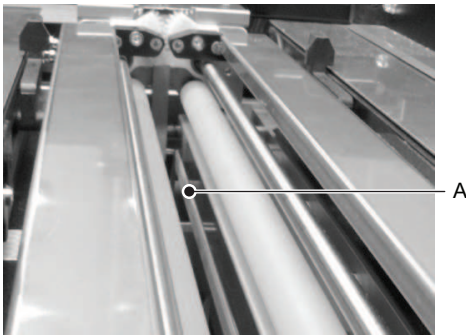

[69] Polyurethane strips (machines with serial number 500 onwards)

A	Polyurethane strip
---	--------------------

Step	Action	Information
1	Open the folder cover	
2	Use an alcohol wipe, or apply a small amount of alcohol to a lint free cloth.	Wear protective gloves when you use the alcohol wipe.

## Clean the Polyurethane Strips in the Form Clamp

---


Step	Action	Information
3	Reach into the form clamp and clean each of the polyurethane strips.	There is a polyurethane strip on the face of each side of the clamp. Repeat this step until the polyurethane strips are clean.
4	Close the folder cover	

## Clean the Trimmings-removal Fingers

### Introduction

Clean the trimmings-removal fingers:

- Every month, as part of the operator maintenance plan.
- If there are small, dirty marks on the book. Ink and toner can collect on the trimmings-removal fingers and cause marks on the book.

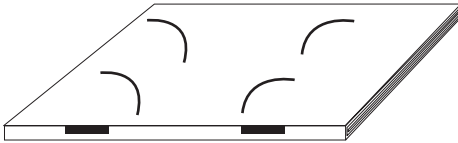

[70] Curved marks on the book

### Required tool


- Alcohol wipe



#### **Caution:**

Wear protective gloves when you use the alcohol wipe.


### Illustration

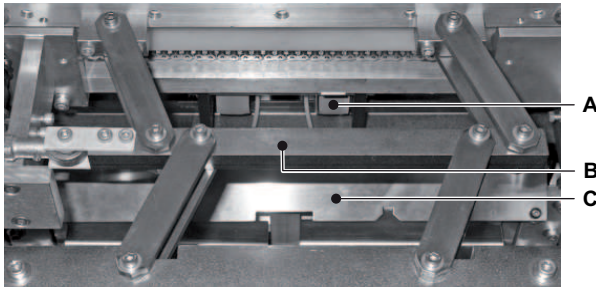

[71] Trimmer infeed conveyor viewed from above\_1

A	Trimmer infeed conveyor
B	Former-clamp mechanism
C	Reach in here to access the trim-infeed conveyor

### Illustration

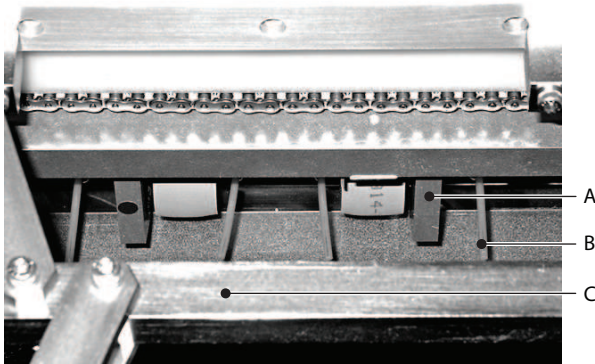


[72] Trimmer infeed conveyor viewed from above\_2

A	Trimmer infeed conveyor
B	Trimmings-removal fingers
C	Former-clamp mechanism

### Procedure

Step	Action	Information
1	Lift the Booklet maker main deck.	See <i>'Lift the Booklet maker Main Deck'</i> on page 44.
2	Remove the trim bin.	
3	Clean the four visible trimmings-removal fingers with an alcohol wipe.	The procedure can be seen from the top of the machine. Access to the parts is through the former-clamp mechanism (see <i>'Illustration'</i> on page 123). Wear protective gloves when you use the alcohol wipe.

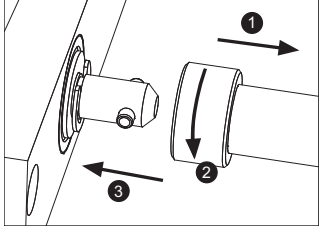
Step	Action	Information
4	Rotate the conveyor shaft by half a turn.	<p>1. Hold the shaft and push to the right, against spring pressure to disengage the shaft from the drive pin.</p>  <p>2. Rotate the shaft by half a turn.</p> <p>3. Align the shaft with the drive pin and release.</p>
5	Clean the four visible trimmings-removal fingers with an alcohol wipe.	Wear protective gloves when you use the alcohol wipe.
6	Fit the trim bin.	
7	Close the Booklet maker.	

## Clean excess grease from the Stitch Head

### Introduction

Clean excess grease from the stitch head:

- Every month, as part of the operator maintenance plan.
- If there are grease marks around the stitches on the book.

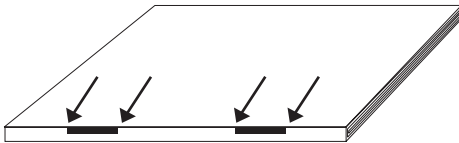

[74] Grease marks around the stitches

### Required tool

- Lint free cloth

### Procedure

Step	Action	Information
1	On the user interface, touch <b>ADVANCED &gt; STITCHER UP &gt; STITCHER UP</b>	The folder cover must be closed. This action moves the stitch head to the correct position for lubrication.
2	Open the folder cover.	<i>'Open and Close the Folder Cover'</i> on page 39
3	Lift the clincher frame.	<i>'Lift and Lower the Clincher Frame'</i> on page 41
4	Clean grease from the sides of the stitch head.	A close-up photograph of the internal stitch head mechanism. Four white arrows point to dark, greasy spots on the metal surfaces of the mechanism, specifically on the sides of the central assembly.
5	Lower the clincher frame.	


Step	Action	Information
6	Close the folder cover.	

# Lubricate the Stitch Head


## Introduction

Lubricate the stitch head:

- Every month, as part of the operator maintenance plan.
- When a new stitch-wire is installed if this interval is shorter.

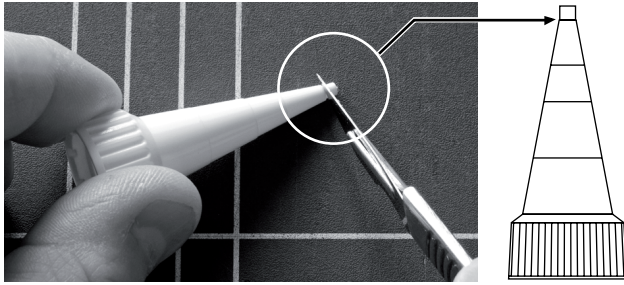


[76] Trim the nozzle of the tube of grease

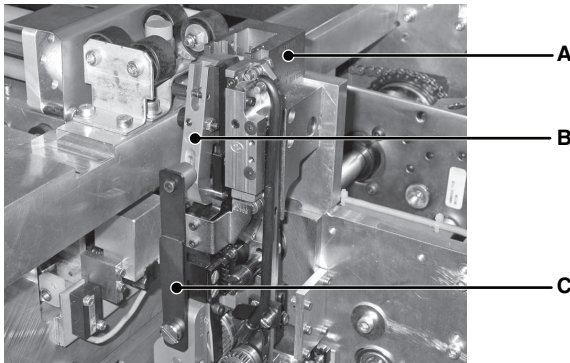

[77] Stitch Head Wire Holder


A	Stitch Head
B	Wire Holder
C	Wire Holder Retaining Spring



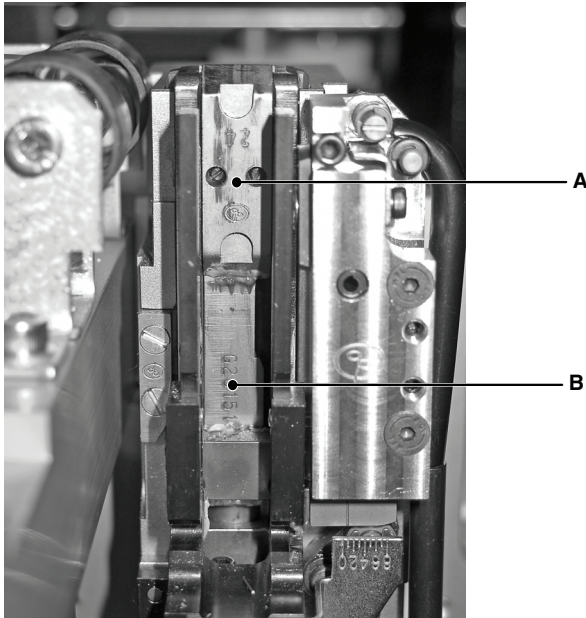

[78] Driver Bar - Wire Holder removed

A	Driver, in upper position
B	Driver Bar

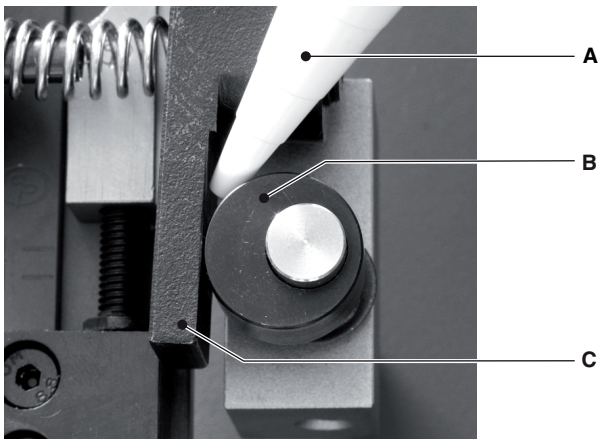

[79] Lubricate the wire-feed cam

A	Nozzle of the tube of grease
B	Wire-feed cam
C	Feed lever

### Required tool

- Klüber Isoflex NBU15 Grease, 50g
- Air duster




#### **Attention:**


- Only use the grease shown in this manual. Correct lubrication extends the performance and service life of the stitch head. Other types of grease do not protect the stitch head
  - Only apply the grease as shown. If you apply additional grease, the paper gets marked.
- 

### Before You Begin


Step	Action	Information
1	Trim the first part from the nozzle.	See <i>Trim the nozzle of the tube of grease.</i>
2	Remove the cap from the tube of grease.	
3	Fit the nozzle to the tube of grease.	
4	On the user interface, touch <b>&gt; ADVANCED &gt; STITCHER UP &gt; STITCHER UP</b>	The folder cover must be closed. This action moves the stitch head to the correct position for lubrication.
5	Lift the Booklet maker main deck	See <i>'Lift the Booklet maker Main Deck'</i> on page 44

### Apply the Grease to the Driver Bar

Step	Action	Information
1	Use the supplied air duster to remove dust from the stitch head.	

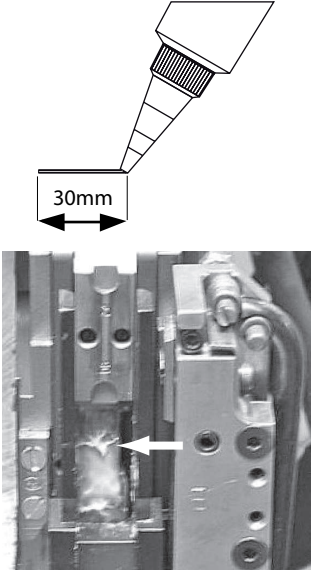Step	Action	Information
2	Remove the wire holder from the stitch head.	Move the wire holder retaining spring to the right. Then remove the wire holder ( see <i>'Introduction'</i> on page 128)
3	Apply 30mm of grease to the visible surface of the driver bar.	See <i>Driver Bar</i> . 
4	Fit the wire holder.	

### Lubricate the wire-feed cam

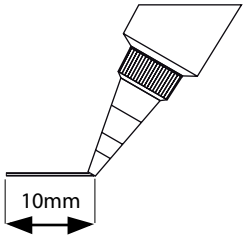Step	Action	Information
1	Lift the PSQ main deck.	
2	Apply 10mm of grease from the tube between the bearing surface of the wire-feed cam and the feed lever.	See <i>Lubricate the wire-feed cam</i> . 
3	Lower the Booklet maker main deck	

Step	Action	Information
4	Lower the clincher frame.	See <i>'Lower the Clincher Frame'</i> on page 42
5	Close all of the covers	

### Reset the Operator Maintenance Counter

1. Touch **MENU**.
2. Touch and hold **RESET**. A red line appears. The red line fills from left to right. Hold **RESET** until the red line reaches the right-hand side.
3. Touch **MENU**.

## Install New Stitch-wire

### Introduction

Only use stitch-wire that is approved by your supplier. Stitch-wire that is not approved by your supplier can cause bad performance and cancels the warranty.


Stitch-wire Description: Stitcher wire S33.

### Before you begin

Lift the Booklet maker main deck.

See *'Lift the Booklet maker Main Deck'* on page 44


### Illustration

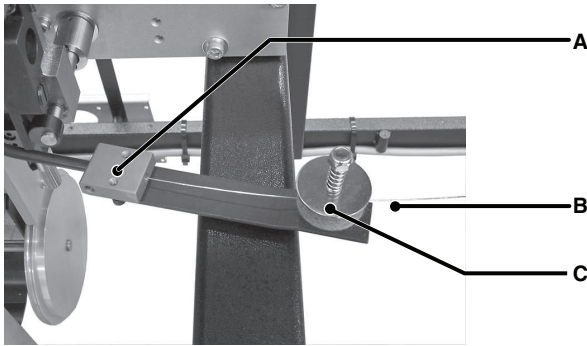


[84] Stitch-wire Guide Block


A	Stitch-wire Guide Block
B	Stitch-wire
C	Felt wire-cleaning pads

### Remove the Stitch-wire from the Stitch Head


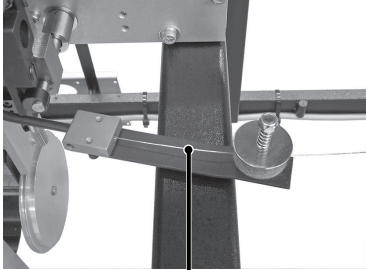
Step	Action	Information
1	Cut the stitch-wire to the right of the stitch-wire guide block.	 <p data-bbox="681 647 879 675">Detail A: Cut here</p>
2	Pull the stitch-wire from the stitch-wire guide block.	
3	Fit a new stitch-wire spool.	<i>'Fit a New Stitch-wire Spool'</i> on page 134



### Fit a New Stitch-wire Spool

Step	Action	Information
1	Open the stitch-wire cabinet	
2	Remove the stitch-wire cap and finished stitch-wire spool.	
3	Fit a new stitch-wire spool.	
4	Fit the stitch-wire cap	
5	Loosen the end of the stitch-wire from the edge of the stitch-wire spool.	

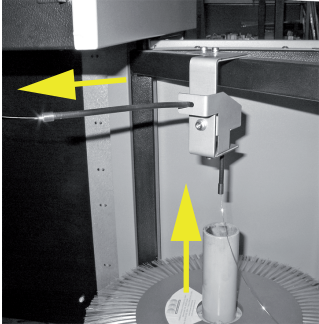Step	Action	Information
6	Use wire-cutters to remove the damaged end of the stitch-wire.	Remove enough stitch-wire to leave the end of the stitch-wire clean and straight.
7	Feed the stitch-wire through the stitch-wire guide.	
8	Install the stitch-wire.	<i>'Install the Stitch-wire into the Stitch Head' on page 135</i>

### Install the Stitch-wire into the Stitch Head

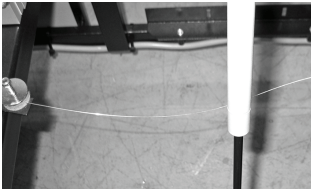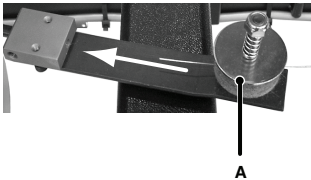
Step	Action	Information
1	Pull the stitch-wire from the end of the stitch-wire guide.	
2	Make sure the stitch-wire runs behind the gas-strut.	
3	Feed the end of the stitch-wire between the felt wire-cleaning pads.	 <p><i>Detail A: Felt Wire-Cleaning Pads</i></p>

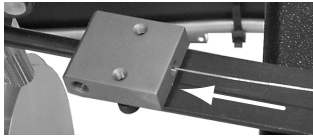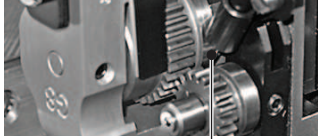Step	Action	Information
4	Push the stitch-wire into the stitchwire guide block.	 <p>Push stitch-wire in direction of arrow</p>
5	Push the stitch-wire as far as possible.	 <p><i>Detail A:</i> Make sure the stitch-wire runs between the wire feed rollers and into the middle wire tube.</p>

### Close the Booklet maker

Step	Action	Information
1	Close the stitch wire cabinet.	
2	Lower the Booklet maker main deck.	<i>Lower the Clincher Frame</i> on page 42.
3	Lower the clincher frame.	
4	Close the folder cover.	
5	Close the connecting bridge cover.	

### Feed the Stitch-wire

Step	Action	Information
1	Touch START  .	
3	Set the number of stitches to 6	Touch <b>BASIC &gt; STITCHES</b> .
4	Hand-feed or print an A4 or larger size test job..	The stitch-wire loads automatically during the stitch head cycle.



---


Step	Action	Information
5	Check the stitch-wire is loaded.	Check that a stitch is made. If needed, repeat the previous step. If a stitch is still not made, repeat the procedure. Install the Stitch-wire into the Stitch Head <i>'Install the Stitch-wire into the Stitch Head'</i> on page 135.
6	Reset the number of stitches on the touch screen.	

## Clear paper from the trim stop

### Introduction

Clear paper from the trim stop if the books are not trimmed square. If paper trimmings collect on the trim stop, the books are not trimmed square.


### Illustration

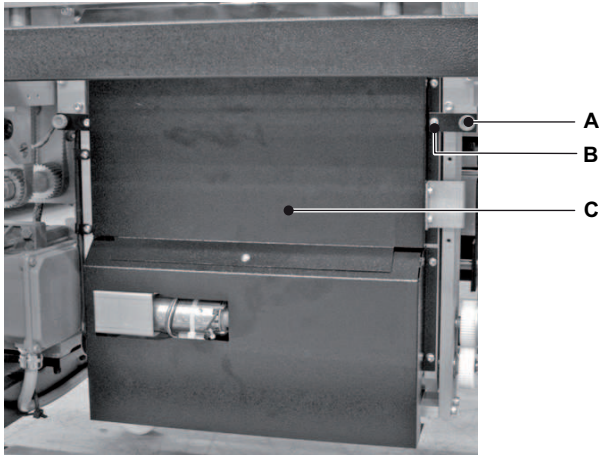

[92] Trim Stop Guard

A	Orange Plastic Hand Screw
B	Locking Plate
C	Trim Stop Guard

## Illustration

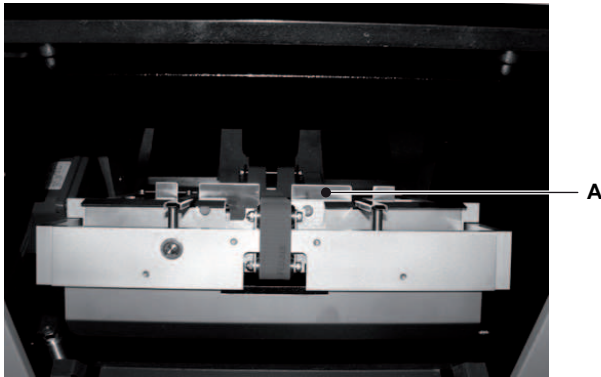

[93] Trim Stop

A	Trim Stop
---	-----------

## Clear paper from the trim stop



Step	Action	Information
1	Remove the trim bin.	
2	Open the trim stop guard.	See <i>Illustration</i> on page 138. Loosen the 2 orange plastic hand screws to release the locking plates. The locking plates can rotate to release the trim stop guard. Pull the trim stop guard towards you.
3	Check the trim stop and remove any pieces of trimmed paper.	See <i>Illustration</i> on page 139
4	Close the trim stop guard.	Push the trim stop guard into position. Hold the locking plates in position and tighten the orange hand screws.
5	Attach the trim bin.	




# **Appendix A**

## **Specifications**

# Specifications
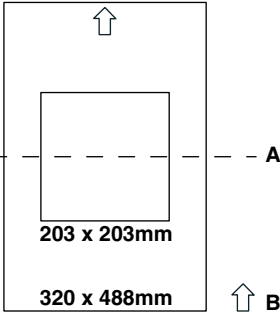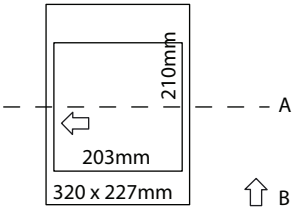
<p><b>Operating Conditions</b></p>	<p>10-35 °C          35-85% relative humidity          Up to 2000 m above mean sea level</p>
<p><b>Production</b></p>	<p>Cycle time: Printer dependent          Inter-set gap: 1 second (if printer has DFD2, then 1 or 2 seconds, depending on job settings)          Minimum set time: 4.5 seconds (if printer has DFD2, then 4.5 or 7.8 seconds, depending on job settings)          Maximum set time: 12.5 seconds</p>
<p><b>Stock Sizes</b></p>	<p>Minimum input size: 203 mm x 203 mm          Maximum input size: 320 mm x 488 mm</p>  <p>A = Stitch &amp; fold line          B = indicates original lead edge from the printer</p>
<p><b>Sheet Rotation</b></p>	<p>Integrated rotator ensures maximum printer productivity.          Maximum rotation sheet size: 320 mm x 227 mm          Minimum rotation sheet size: 210 mm x 203 mm          The cross-track dimension of the sheet (before rotation) must be at least 7mm greater than the in-track dimension.</p>  <p>A = Stitch &amp; fold line          B = indicates original lead edge from the printer</p>
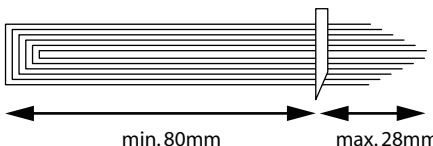
<b>Stock Range</b>	80 - 160 g/m <sup>2</sup> normal paper types 70 - 250 g/m <sup>2</sup> dependant on paper type and quality
<b>Book Thickness</b>	Maximum finished book thickness: 10mm (approximately 200 pages of 80 g/m <sup>2</sup> ) Maximum set thickness: 5 mm (approximately 50 sheets of 80 g/m <sup>2</sup> )
<b>Stitching</b>	1 - 6 stitches, evenly spaced on the spine of the book Stitches/spool: up to 291,500 Books*/spool: approximately 127,000
<b>Trimming</b>	Maximum fore-edge trim: 28 mm Minimum trimmed book size: 80 mm 
<b>Stacker Capacity</b>	Standard stacker: 35 books* Book Stacker (optional): 930 mm
<b>Paper Input Requirements</b>	Input sheets must be of consistent size and cut square. Machine setting must match paper size at the input to the Océ BLM500/550/550 PRO Book quality is dependent upon quality of input sheets.
<b>Dimensions</b>	<b>Footprint</b> With standard stacker: 1870 mm x 1675 mm With Book Stacker: 2420 mm x 1770 mm <b>Height</b> 1330 mm maximum
<b>Weight</b>	Booklet maker including stitching wire: 542 kg As above, plus bridge and bridge covers: 702 kg Book Stacker: 150 kg
<b>Power Supply</b>	Adjustable to 200, 208, 220, 230 and 240V 50/60Hz, single phase
<b>Power Consumption</b>	Océ BLM500/550/550 PRO Stand-by: 92VA (75W) In operation: 700VA (500W) Book Stacker Stand-by: 35VA (16W) In operation: 75VA (53W)

<b>Noise Emission</b>	Stand-by: ambient In operation: 66 dB (A), peak 87 dB (A)
<b>Approvals</b>	Complies with CE and UL. Conforms to FCC rules Part 15 Class A.
* Standard book is made from 20 sheets of 80 g/m <sup>2</sup> paper, with 2 stitches.	
Production may vary according to operating conditions. In line with a policy of continual product improvement, the manufacturer reserves the right to alter the materials or specification of this product at any time without notice.	



# **Appendix B**

## **Declaration of Conformity**

## Declaration of Conformity

<b>Name of Manufacturer:</b>	Watkiss Automation Limited
<b>Address of Manufacturer:</b>	Watkiss House Blaydon Road Sandy, Bedfordshire SG19 1RZ United Kingdom
<b>Declares that the product:</b>	
<b>Name of Product:</b>	Océ BLM500/550/550 PRO
<b>serial Number:</b>	WA/PSQ/---/010 onwards
<b>Conforms to the following Directives:</b>	
<b>Safety:</b>	2006/95/EC Council Directive 'on the approximation of laws of Member States relating to electrical equipment designed for use within certain voltage limits'. EN 60950-1:2006 (ed.2) + A11:2009
<b>EMC:</b>	2004/108/EC Council Directive 'on the approximation of laws of Member States relating to electromagnetic compatibility'. EN 55022:2006 + A1:2007 Class A EN 55024:1998 + A1:2001 + A2:2003 EN 61000-3-2:2006 EN 61000-3-3:1995 + A1:2001 + A2:2005
<b>RoHS:</b>	2002/95/EC Council Directive
<b>WEEE:</b>	2002/96/EC Council Directive amended by 2008/34/EC and 2008/35/EC
<b>Reach:</b>	REGULATION (EC) No. 1907/2006
	M C Watkiss Technical Director, Watkiss Automation Ltd. 01 September 2010