


Operating Instructions

Blu-ray Disc Player

Model No. **DMP-BD35**

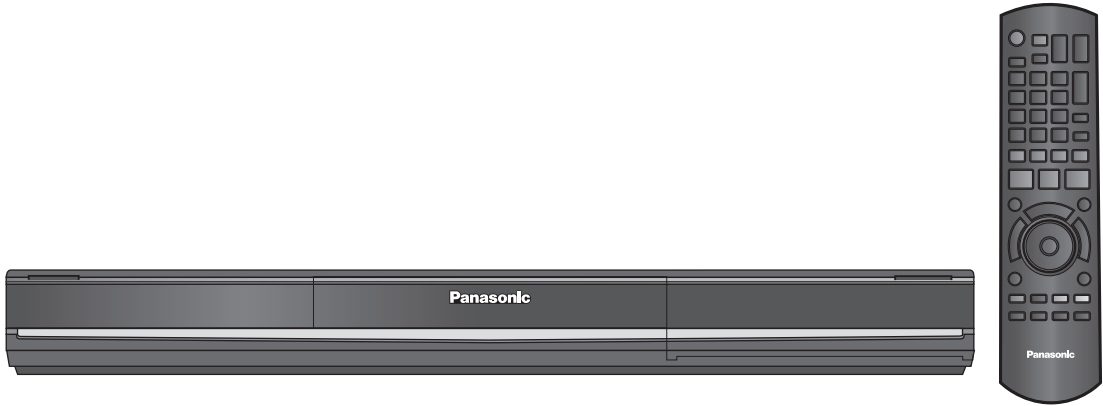







Dear customer

Thank you for purchasing this product.
For optimum performance and safety, please read these instructions carefully.

Before connecting, operating or adjusting this product, please read the instructions completely.
Please keep this manual for future reference.



Region management information	
BD-Video This unit plays BD-Video marked with labels containing the region code B.	Example:   
DVD-Video This unit plays DVD-Video marked with labels containing the region number "4" or "ALL".	Example:   

CAUTION!
THIS PRODUCT UTILIZES A LASER.
USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.
DO NOT OPEN COVERS AND DO NOT REPAIR YOURSELF. REFER SERVICING TO QUALIFIED PERSONNEL.

WARNING:
TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR PRODUCT DAMAGE,
●DO NOT EXPOSE THIS APPARATUS TO RAIN, MOISTURE, DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE APPARATUS.
●USE ONLY THE RECOMMENDED ACCESSORIES.
●DO NOT REMOVE THE COVER (OR BACK); THERE ARE NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION!
●DO NOT INSTALL OR PLACE THIS UNIT IN A BOOKCASE, BUILT-IN CABINET OR IN ANOTHER CONFINED SPACE. ENSURE THE UNIT IS WELL VENTILATED. TO PREVENT RISK OF ELECTRIC SHOCK OR FIRE HAZARD DUE TO OVERHEATING, ENSURE THAT CURTAINS AND ANY OTHER MATERIALS DO NOT OBSTRUCT THE VENTILATION VENTS.
●DO NOT OBSTRUCT THE UNIT'S VENTILATION OPENINGS WITH NEWSPAPERS, TABLECLOTHS, CURTAINS, AND SIMILAR ITEMS.
●DO NOT PLACE SOURCES OF NAKED FLAMES, SUCH AS LIGHTED CANDLES, ON THE UNIT.
●DISPOSE OF BATTERIES IN AN ENVIRONMENTALLY FRIENDLY MANNER.

CAUTION
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

This product may receive radio interference caused by mobile telephones during use. If such interference is apparent, please increase separation between the product and the mobile telephone.

The socket outlet shall be installed near the equipment and easily accessible.
The mains plug of the power supply cord shall remain readily operable.
To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from AC receptacle.

THIS UNIT IS INTENDED FOR USE IN MODERATE CLIMATES.

Safety precautions

Placement

Set the unit up on an even surface away from direct sunlight, high temperatures, high humidity, and excessive vibration. These conditions can damage the cabinet and other components, thereby shortening the unit's service life. Do not place heavy items on the unit.

Voltage

Do not use high voltage power sources. This can overload the unit and cause a fire. Do not use a DC power source. Check the source carefully when setting the unit up on a ship or other place where DC is used.

AC mains lead protection

Ensure the AC mains lead is connected correctly and not damaged. Poor connection and lead damage can cause fire or electric shock. Do not pull, bend, or place heavy items on the lead. Grasp the plug firmly when unplugging the lead. Pulling the AC mains lead can cause electric shock. Do not handle the plug with wet hands. This can cause electric shock.

Foreign matter

Do not let metal objects fall inside the unit. This can cause electric shock or malfunction.
Do not let liquids get into the unit. This can cause electric shock or malfunction. If this occurs, immediately disconnect the unit from the power supply and contact your dealer.
Do not spray insecticides onto or into the unit. They contain flammable gases which can ignite if sprayed into the unit.

Service

Do not attempt to repair this unit by yourself. If sound is interrupted, indicators fail to light, smoke appears, or any other problem that is not covered in these instructions occurs, disconnect the AC mains lead and contact your dealer or an authorized service center. Electric shock or damage to the unit can occur if the unit is repaired, disassembled or reconstructed by unqualified persons.

Extend operating life by disconnecting the unit from the power source if it is not to be used for a long time.

DANGER – VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID DIRECT EXPOSURE TO BEAM. FDA 21 CFR Class IIb.	
CAUTION – CLASS 3B VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN. AVOID EXPOSURE TO THE BEAM. IEC60825-1 +A2/Class 3B.	
ATTENTION – RAYONNEMENT LASER VISIBLE ET INVISIBLE, CLASSE 3B, EN CAS D'OUVERTURE, EVITER UNE EXPOSITION AU FAISCEAU.	
FORSIGTIG – SYNLIG OG USYNLIG LASERSTRÅLING KLASSE 3B, NÅR LÅGET ER ÅBENT. UNDGÅ AT BLIVE UDSAT FOR STRÅLEN.	
VARO – AVIATUOKSA OLET ALTIIN LUOKAN 3B NÄKYVÄÄ JA NÄKYMÄTÖNTÄ LASERSÄTELYÄ, VARO ALTISTUMISTA SÄTEELLE.	
VARNING – KLAS 3B SYNLIG OCH OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD, UNDVIK EXPONERING FÖR STRÅLEN.	
VORSICHT – SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG KLASSE 3B, WENN ABDECKUNG GEÖFFNET. NICHT DEM STRAHL AUSSETZEN.	
注意 – 打开时有可见及不可见激光辐射。避免光束照射。	
注意 – ここを開くと可視及び不可視レーザー光が出ます。ビームを見たり、触れたりしないでください。VOL1J70	

(Inside of product)



(Back of product)


Table of contents

Getting started		Playing music	19
Safety precautions	2	Showing FUNCTIONS menu.....	19
Accessory information	3	About MP3/JPEG files.....	20
Disc and card information.....	4	Linked operations with the TV (VIERA Link “HDAVI Control™”)	21
Using the remote control.....	5		
Connection	6	Settings	
Control reference guide.....	9	Changing settings with the on-screen menu	22
Easy Setting.....	10	Changing the unit’s settings.....	24
Setting the television and amplifier/receiver operation.....	10		
Network settings	11	Reference	
Firmware updating	12	Frequently asked questions.....	28
		Troubleshooting guide	28
Playback		Messages	32
Basic play (Playing video contents).....	13	Disc and card handling.....	33
Enjoying BD-LIVE or BONUSVIEW in BD-Video	15	Maintenance	33
Enjoying High Bit rate Audio and Video	16	To dispose or transfer this unit	33
Chapter playback	17	Glossary	34
Playing still pictures	17	Specifications	37
		Index.....	Back cover

Getting started


Accessory information

☒



 
Please check and identify the supplied accessories. Use numbers indicated in parentheses when asking for replacement parts.
(Product numbers correct as of September 2008. These may be subject to change.)

☐




1 Remote control
(N2QAYB000185)

☐




1 Audio/Video cable

☐

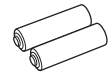

2 Batteries
for remote control

☐








1 AC mains lead

•For use with this unit only. Do not use it with other equipment.
Also, do not use cords for other equipment with this unit.

Disc and card information

Packaged discs







This chart shows the different type of retail/commercial discs you can use, and also includes the industry-standard logos that should appear on the discs and/or packaging.

Type of media/ Logo	Features	Indicated as	Type of media/ Logo	Features	Indicated as
BD-Video 	High Definition (HD) movie and music discs • Discs supporting BD-Live (BD-ROM version 2 Profile 2) that allows interactive functions to be used when this unit is connected to the Internet in addition to the BONUSVIEW function.  • Discs supporting BONUSVIEW (BD-ROM version 2 Profile 1 version 1.1/ Final Standard Profile) that allows Virtual packages or Picture-in-Picture functions to be used. BONUSVIEW™	BD-V	DVD-Video  	High quality movie and music discs	DVD-V
			CD 	Compact Discs (CD's) that contain audio and music • Operation and sound quality of CDs that do not conform to CD-DA specifications (copy control CDs, etc.) cannot be guaranteed.	CD

Recorded discs

This chart shows the different type of discs recorded with other devices that you can use.

Finalized This mark means you must finalize the disc with the DVD recorder, etc. before playback. For details about finalizing, refer to the operating instructions for your equipment.

Type of media/ Logo	Formats	Indicated as	Type of media/ Logo	Formats	Indicated as
BD-RE 	• Version 3 of the BD-RE Recording Format • JPEG format	BD-V JPEG	DVD-R DL Finalized  R DL	• DVD-Video Format • Version 1.2 of the DVD Video Recording Format • AVCHD format	DVD-V DVD-VR AVCHD
BD-R 	• Version 2 of the BD-R Recording Format	BD-V	+R/+RW/ +R DL Finalized	• +VR (+R/+RW Video Recording) Format • AVCHD format	DVD-V AVCHD
DVD-RAM 	• Version 1.1 of the DVD Video Recording Format • JPEG format • AVCHD format	DVD-VR JPEG AVCHD	CD-R/RW Finalized	• CD-DA format • MP3 format • JPEG format	CD MP3 JPEG
DVD-R/RW Finalized  R 4.7  R W	• DVD-Video Format • Version 1.1 of the DVD Video Recording Format • AVCHD format	DVD-V DVD-VR AVCHD	• It may not be possible to play the above discs in some cases due to the type of discs, the condition of the recording, the recording method and how the files were created. • When a disc recorded in the AVCHD format is being played, the video may be paused for a few seconds at portions spliced, due to deletion or editing.		

SD cards

This chart shows the different type of cards recorded with other devices that you can use.

Type of media	Formats	Indicated as
SD Memory Card* (from 8 MB to 2 GB)	• JPEG format	JPEG
SDHC Memory Card (from 4 GB to 32 GB)	• AVCHD format	AVCHD

* Including miniSD Card and microSD Card

- When using from 4 GB to 32 GB SD cards, only SD cards that display the SDHC logo can be used.
- This unit is compatible with SD Memory Cards that meet SD Card Specifications FAT12 and FAT16 formats, as well as SDHC Memory Cards in FAT32 format.
- In these operating instructions, the cards shown in the table (⇒ above) are comprehensively called SD cards.

- A miniSD Card and a microSD Card must be used with the attached adaptor that comes with the card.
- Useable memory is slightly less than the card capacity.
- If the SD card is formatted on a PC, you may not be able to use it on this unit.
- We recommend using a Panasonic SD card.
- Keep the Memory Card out of reach of children to prevent swallowing.
- When a card recorded in the AVCHD format is being played, the video may be paused for a few seconds at portions spliced, due to deletion or edition.
- Switch the write-protect switch to the "LOCK" position to protect the content from accidental erasure.



Getting started

Regarding BD-Video

- Please enjoy BD-Live functions (⇒ 15), such as the network connection. The various functions differ depending on the disc.
- **Regarding high bit rate audio of BD-Video such as Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio and DTS-HD Master Audio (⇒ 16)**
This unit can output the high bit rate audio adopted in BD-Video to your amplifier/receiver in bitstream format. In addition, even if your amplifier/receiver cannot decode the high bit rate audio, you can enjoy BD-Video's high-quality audio by decoding the high bit rate audio with this unit.


Discs that cannot be played

- BD-RE with the cartridge
- 2.6 GB and 5.2 GB DVD-RAM
- 3.95 GB and 4.7 GB DVD-R for Authoring
- DVD-RAM that cannot be removed from their cartridges
- Version 1.0 of DVD-RW
- +R 8 cm, DVD-ROM, CD-ROM, CDV, SACD, Photo CD, MV-Disc and PD
- DVD-Audio
- Video CD and SVCD
- WMA discs
- DivX discs
- HD DVD
- Other discs that are not specifically supported

Using the remote control

Batteries


Insert so the poles (+ and -) match those in the remote control. When closing the lid, insert it from the - (minus) side.

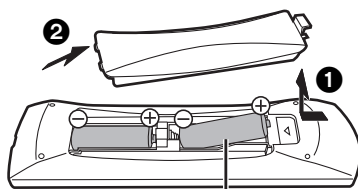

R6/LR6, AA

- Do not use rechargeable type batteries.
 - Do not mix old and new batteries.
 - Do not use different types at the same time.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in an automobile exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not take apart or short circuit.
 - Do not attempt to recharge alkaline or manganese batteries.
 - Do not use batteries if the covering has been peeled off.
- Mishandling of batteries can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire. Remove batteries if the remote control is not going to be used for a long period of time. Store in a cool, dark place.

Use

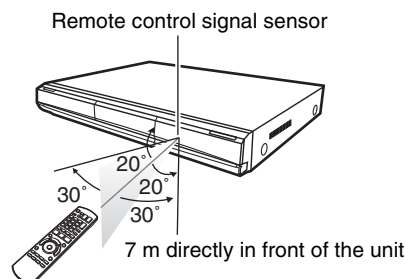

If you cannot operate the unit or other equipment using the remote control after changing the batteries, please re-enter the codes (⇒ 10, 31).

Connection

- Do not place the unit on amplifiers/receiver or equipment that may become hot. The heat can damage the unit.
- **Do not connect through the video cassette recorder.** Due to copy guard protection, the picture may not be displayed properly.
- Turn off all equipment before connection and read the appropriate operating instructions.


- **Non-HDMI-compliant cables cannot be utilized.**
- **Please use High Speed HDMI Cables that have the HDMI logo (as shown on the cover). It is recommended that you use Panasonic's HDMI cable.**
Recommended part number:
RP-CDHG10 (1.0 m), RP-CDHG15 (1.5 m), RP-CDHG20 (2.0 m), RP-CDHG30 (3.0 m), RP-CDHG50 (5.0 m), etc.
- This unit incorporates HDMI (Deep Colour, x.v.Colour™, High Bit rate Audio) technology. (⇒ 34, 35)
- When outputting 1080p signal, please use HDMI cables 5.0 meters or less.

Connecting to a television

The image quality improves in a sequence of connections **C**, **B**, **A**, given below.

A Connecting to HDMI AV OUT terminal

You can enjoy high quality, digital video and audio.

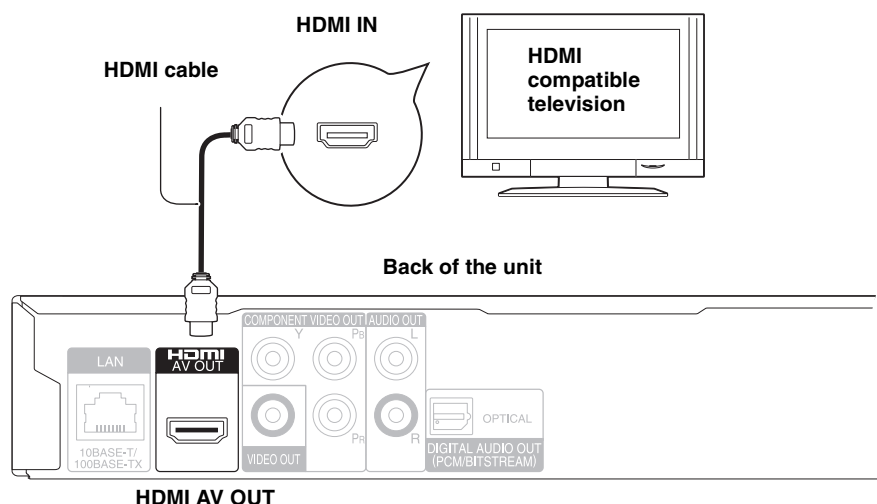

NECESSARY SETTINGS

- "HDMI Video Mode" and "HDMI Audio Output": "On" (⇒ 26)




To enjoy a richer sound

- Use connections **D** or **E** (⇒ 7, 8) additionally.
- In case of the connection **E**, set "HDMI Audio Output" to "Off" (⇒ 26)

With this connection, you can use VIERA Link "HDAVI Control" (⇒ 21).

B Connecting to COMPONENT VIDEO OUT terminal

You can enjoy high definition images by connecting to a component video terminals that supports 720p (750p) and 1080i (1125i) signals.

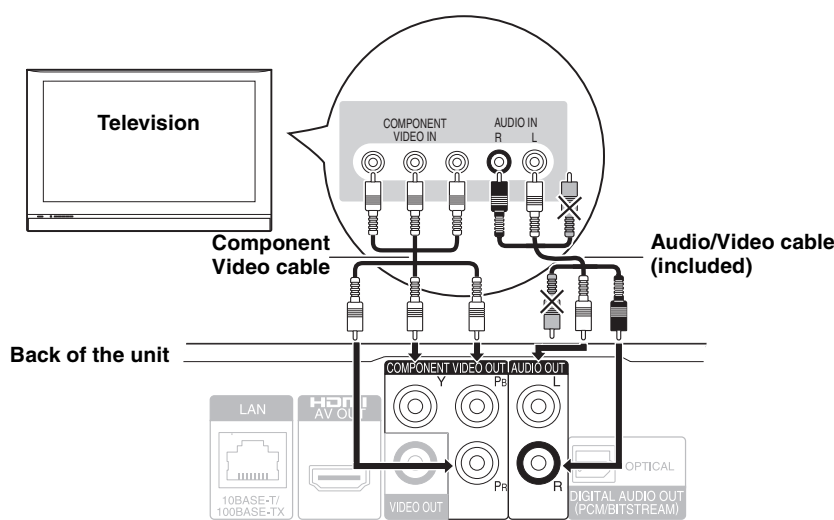

- Connect terminals of the same color.
- Unplug the yellow plug of Audio/Video cable.

- The video output resolution is restricted to "576p/480p" when DVD-Video discs and BD-Video discs recorded at a rate of 50 field per second are output from the COMPONENT VIDEO OUT terminals.




To enjoy a richer sound

- Use connections **D** or **E** (⇒ 7, 8) additionally.
- (Unplug the red and white plugs.)

To enjoy high definition/progressive video

- Connect to a television that supports 576p/480p or higher.
- Set "Component Resolution" to "576p/480p", "720p" or "1080i". (⇒ 26)
- If this unit is connected to an amplifier/receiver, etc. via an HDMI cable with "HDMI Video Mode" to "On" (⇒ 26), the video will be fixed to 576i/480i.

C Connecting to VIDEO OUT terminal

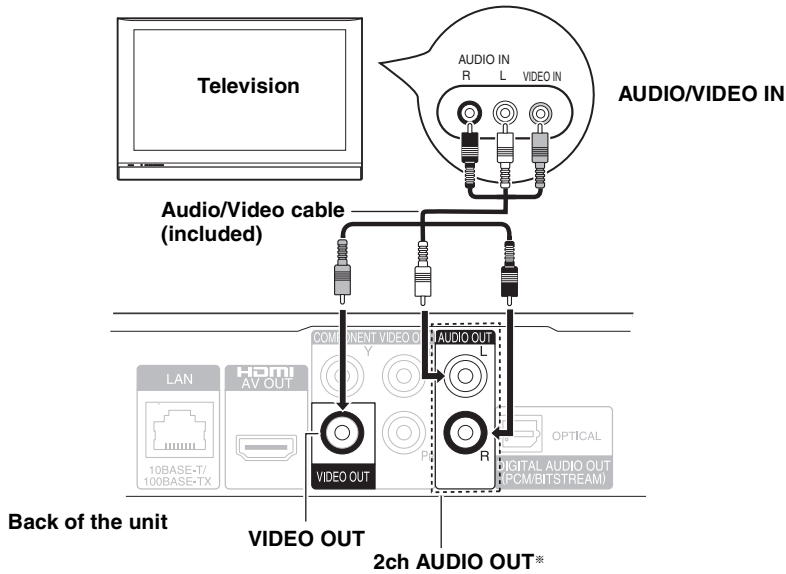

NOTE

- Connect terminals of the same color.
- High definition video cannot be output with this connection. Use connection **A** or **B** (⇒ 6) for high definition video.



TIPS

- * With audio cables, connect the AUDIO OUT terminals to the two-channel audio input terminals of an analog amplifier/receiver or system component in place of a television to enjoy stereo sound.


To enjoy a richer sound

- Use connections **D** or **E** (⇒ 7, 8) additionally.
(Unplug the red and white plugs.)

Connecting an amplifier/receiver

D Connecting to HDMI AV OUT terminal

When connected to a compatible amplifier/receiver, you can enjoy surround sound recorded with Dolby Digital Plus, Dolby TrueHD or DTS-HD.

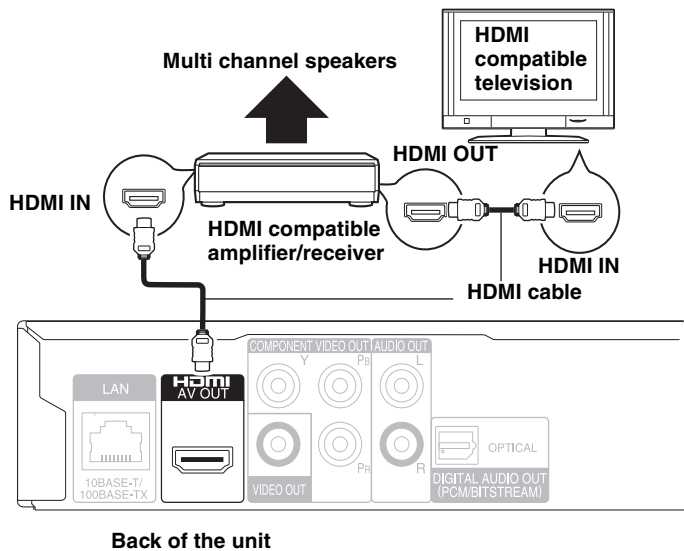

NOTE

NECESSARY SETTINGS

- “HDMI Video Mode” and “HDMI Audio Output”: “On” (⇒ 26)
- “Digital Audio Output”: Depending on the connected amplifier/receiver (⇒ 25)




TIPS

With this connection, you can use VIERA Link “HDAVI Control” (⇒ 21).

- This unit comes equipped with a Dolby Digital Plus, Dolby TrueHD and DTS-HD decoder. When an amplifier/receiver with 7.1ch speakers that support HDMI (High Bit rate Audio) is connected using High Speed HDMI cable, you can enjoy surround sound recorded with Dolby Digital Plus, Dolby TrueHD or DTS-HD. (⇒ 16)

E Connecting to DIGITAL AUDIO OUT terminal

You can enjoy surround sound, when connected to an amplifier/receiver using the OPTICAL terminal.

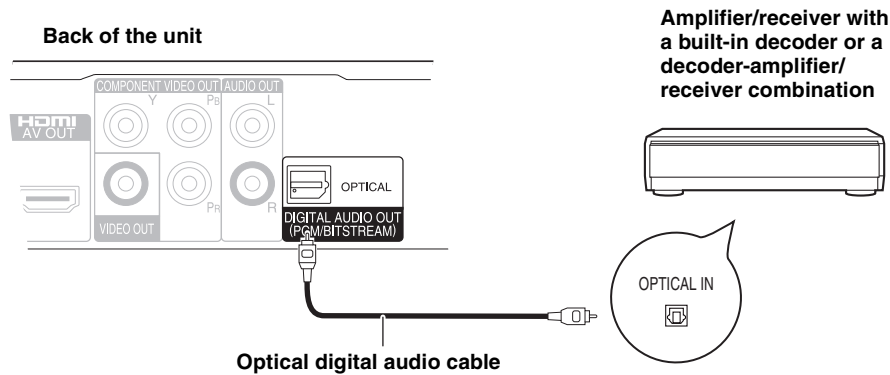


NECESSARY SETTINGS

- “Digital Audio Output” : Depending on the connected amplifier/receiver (⇒ 25)

When connecting a television with HDMI AV OUT terminal (⇒ 6, A).

- “HDMI Audio Output” : “Off” (⇒ 26)
(Otherwise, the sound may not be output with the desired audio.)

Connecting AC mains lead

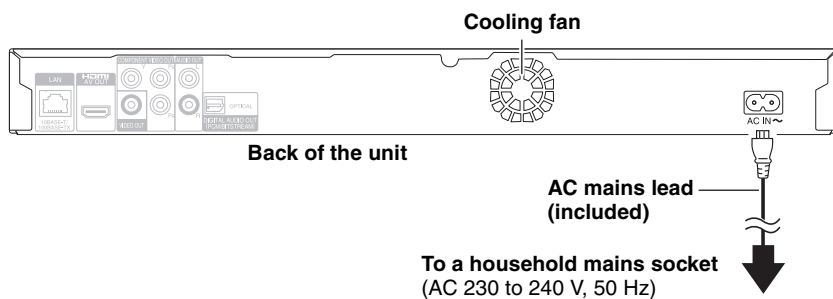

Connect only after all other connections are complete.



Conserving power

This unit consumes a small amount of power even when it is turned off (less than 0.6 W). To save power when the unit is not to be used for a long time, unplug it from the household mains socket.

Network connection

F With LAN

By connecting the unit to broadband Internet, you can use a disc that offers BD-Live function. (⇒ 15)


This connection also allows you to automatically check for the latest firmware version. (⇒ 12)




- After connecting to the Internet, perform necessary settings. (⇒ 11)



- Use only shielded LAN cables when connecting to peripheral devices.

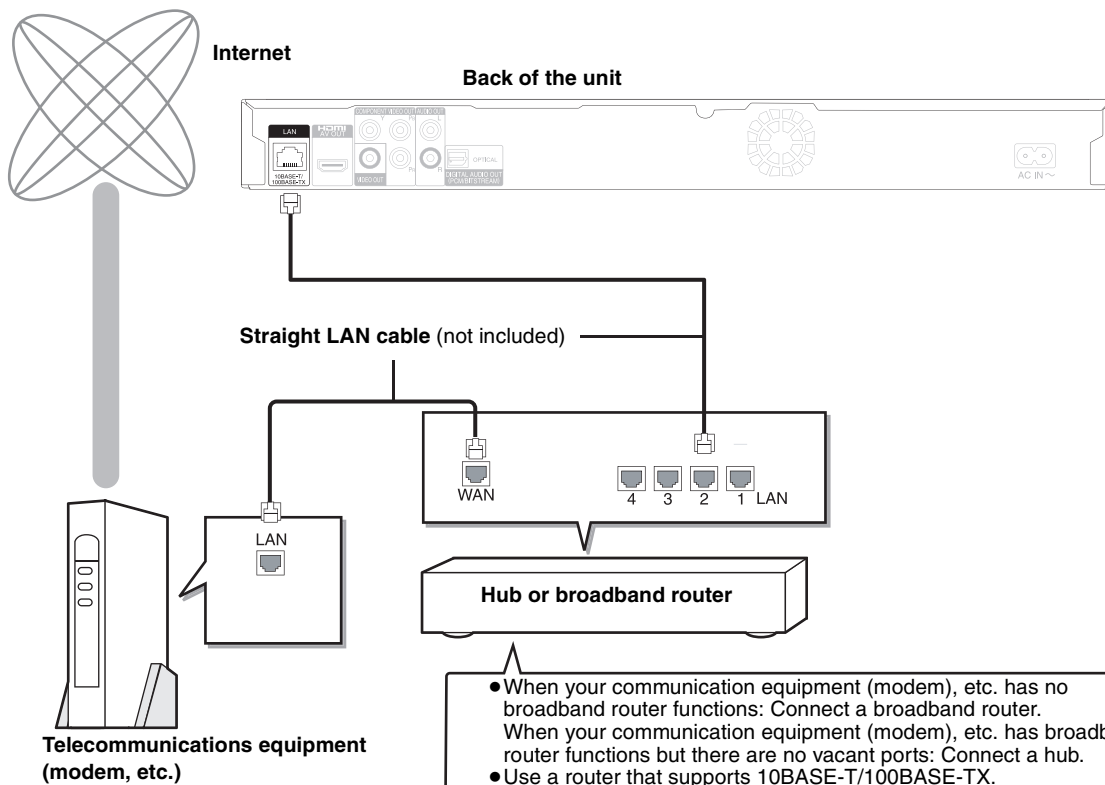



Control reference guide

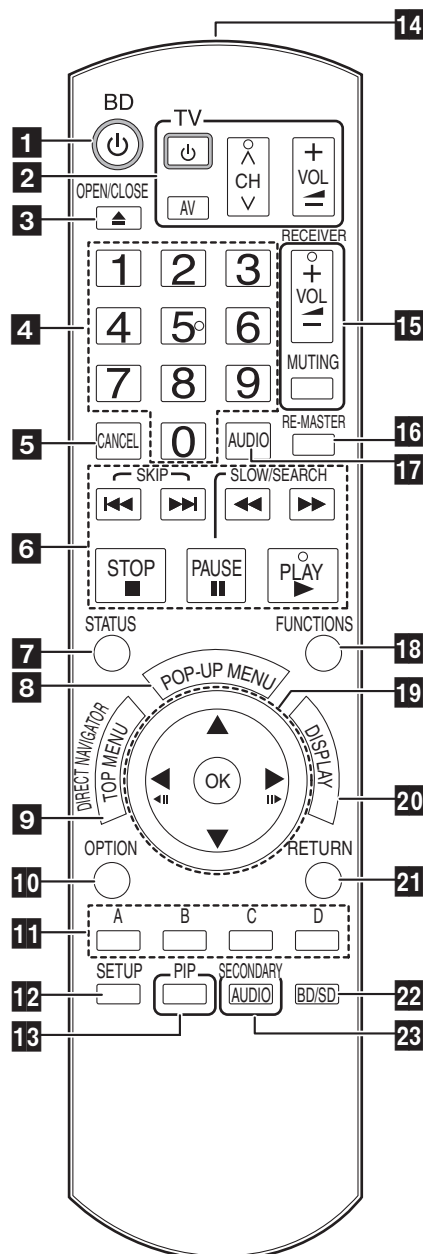

- 1** Turn the unit on and off (⇒ 10)
- 2** **TV operation buttons** (⇒ 10)
You can operate the TV through the unit's remote control.
[⏻ TV] : Turn the television on and off
[AV] : Switch the input channel
[↕ CH] : Channel select
[+ - VOL] : Adjust the volume
- 3** Open or close the disc tray (⇒ 13)
- 4** **Numbered buttons**
Select title numbers, etc./Enter numbers (⇒ 14)
- 5** Cancel
- 6** **Basic playback control buttons** (⇒ 13, 14)
- 7** Show status messages (⇒ 14)
- 8** Show Pop-up menu (⇒ 13)
- 9** Show Top menu/Direct Navigator (⇒ 13)
- 10** Show OPTION menu (⇒ 17)
- 11** These buttons are used when operating a BD-Video disc that includes Java™ applications (BD-J). For more information about operating this kind of disc, please read the instructions that came with the disc.
The [A] and [B] buttons are also used with the "Title View", "Picture View" and "Album View" screens (⇒ 17).
- 12** Show Setup menu (⇒ 24)
- 13** Switch on/off Secondary Video (Picture-in-picture) (⇒ 15)
- 14** Transmit the remote control signal
- 15** **Amplifier/receiver operation buttons** (⇒ 10)
You can operate an amplifier/receiver through the unit's remote control.
[+ - VOL] : Adjust the volume
[MUTING] : Mute the sound
- 16** Reproduce more natural audio (⇒ 14)
- 17** Select audio (⇒ 14)
- 18** Show FUNCTIONS menu (⇒ 19)
- 19** Selection/OK, Frame-by-frame (⇒ 14)
- 20** Show on-screen menu (⇒ 22)
- 21** Return to previous screen
- 22** Select disc drive or SD card drive (⇒ 13)
- 23** Switch on/off Secondary Audio (⇒ 15)

CAUTION

Do not place objects in front of the unit. The disc tray may collide with objects when it is opened, and this may cause injury.

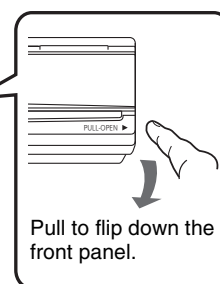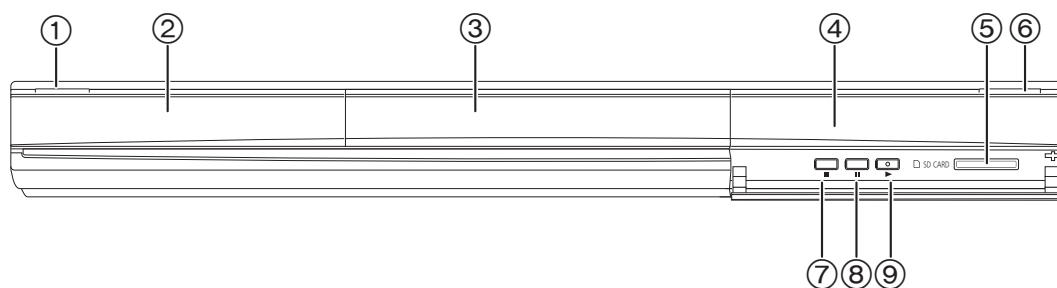

- 1** **Standby/on switch** (⏻/⏻) (⇒ 10, 13)
Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
- 2** Display
 Disc indicator SD SD card indicator
The indicator blinks when reading data from a disc or card, or writing data to a card.
- 3** Disc tray (⇒ 13)
- 4** Remote control signal sensor (⇒ 5)
- 5** SD card slot (⇒ 17)

- 6** Open or close the disc tray (⇒ 13)
- 7** Stop (⇒ 14)
- 8** Pause (⇒ 14)
- 9** Start play (⇒ 13)

Rear panel terminals (⇒ 6–8)

Easy Setting

After connecting your new player and pressing the standby/on button, a screen for the basic settings will appear.

Preparation

Turn on the television and select the appropriate video input on the television.


① Press [⏻ BD].

Setup screen appears.

- If this unit is connected to a Panasonic TV (VIERA) supporting HDAVI Control 2 or HDAVI Control 3 via an HDMI cable, then the "TV Aspect" setting information on the TV is captured from the TV.

② Follow the on-screen instructions and make the settings with [▲, ▼] and [OK].

"TV Aspect" is set. (⇒ 26)

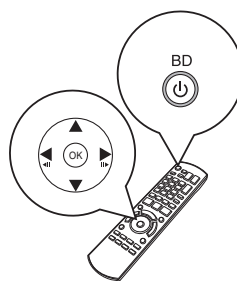

TIPS

- You can perform this setup anytime by selecting "Easy Setting" in the Setup menu. (⇒ 27)
- You can also change this setting individually. (⇒ 26)

Setting the television and amplifier/receiver operation

You can operate the TV or amplifier/receiver using the unit's remote control.

Point the remote control at the television or amplifier/receiver.

① For televisions

Input the 2-digit code with the numbered buttons while pressing [⏻ TV].

For amplifiers/receivers

Input the 2-digit code with the numbered buttons while pressing [MUTING].

e.g., 01: [0] ⇒ [1]

② Test by turning on the television or adjusting the volume of the amplifier/receiver.



NOTE

- If your television or amplifier/receiver brand has more than one code listed, select the one that allows correct operation.
- If your television or amplifier/receiver brand is not listed or if the code listed for them does not allow control of your television or amplifier/receiver, this remote control is not compatible with them. Use their remote control.
- When audio is muted, press [MUTING] again.

Brand	TV Code
Panasonic	01/02/03/04
AIWA	35
AKAI	27/30
BEJING	33
BEKO	05/71/72/73/74
BENQ	58/59
BP	09
BRANDT	10/15
BUSH	05
CENTREX	66
CHANGHONG	69
CURTIS	05
DAEWOO	64/65
DESMET	05
DUAL	05
ELEMIS	05
FERGUSON	10/34
FINLUX	61
FISHER	21
FUJITSU	53
FUNAI	63/67
GOLDSTAR	05/50/51
GOODMANS	05
GRADIENTE	36
GRUNDIG	09
HIKONA	52
HITACHI	05/22/23/40/41
INNO HIT	05
IRRADIO	30
ITT	25
JINGXING	49
JVC	17/30/39/70
KDS	52
KOLIN	45
KONKA	62
LG	05/50/51
LOEWE	07/46
MAG	52
METZ	05/28
mitsubishi	05/19/20/47

Brand	TV Code
MIVAR	24
NEC	36
NOBLEX	33
NOKIA	25/26/27/60/61
NORDMENDE	10
OLEVIA	45
ONWA	30/39/70
ORION	05
PEONY	49/69
PHILCO	41/48/64
PHILIPS	05/06/46
PHONOLA	05
PIONEER	37/38
PROVIEW	52
PYE	05
RADIOLA	05
SABA	10
SALORA	26
SAMSUNG	32/42/43/65/68
SANSUI	05
SANYO	21/54/55/56
SCHNEIDER	05/29/30
SEG	05/69/75/76/77/78
SELECO	05/25
SHARP	18
SIEMENS	09
SINUDYNE	05
SONY	08
TCL	31/33/66/67/69
TELEFUNKEN	10/11/12/13/14
TEVION	52
TEX ONDA	52
THOMSON	10/15/44
TOSHIBA	16/57
WHITE	05
WESTINGHOUSE	05
YAMAHA	18/41

Brand	Amplifier/Receiver Code
Panasonic	01/02/03
TECHNICS	35
ADCOM	62
AIWA	04/05/06/48/49
ALPINE	63
ARCAM	57/58
BOSE	07
DENON	08/09/10/11/50/51/52
HARMAN	12
KARDON	12
JVC	13/14
KENWOOD	15/16/17
KLH	18
LG	19
LUXMAN	59
MARANTZ	20/21
MCINTOSH	54
NAD	22/55
NAKAMICHI	60/61
ONKYO	23
OUTLAW	56
PREAMP	56
PHILIPS	24/44
PIONEER	25/26/27/28
SAMSUNG	45/46/47
SONY	29/30/31
TEAC	32/33/34
THOMSON	43/53
YAMAHA	36/37/38/39/40/41/42

Network settings

These settings are used if you will connect this unit to the Internet.

- The connection to the Internet may take time or the Internet may not be connected depending on the connection environment. (⇒ 27)
It is required that you use a broadband connection.

Preparation

- Connect to the network. (⇒ 8)

Testing the connection

Always test the connection when a LAN cable is connected or when new "IP Address / DNS Settings" have been made.

- 1 Press [SETUP].
- 2 Press [▲, ▼] to select "Network Settings" and press [OK].
- 3 Press [▲, ▼] to select "IP Address / DNS Settings" and press [OK].
- 4 Press [▲, ▼] to select "Connection Test" and press [OK].

"Testing...": The test is in progress.

"Pass": The connection is completed.

"Fail": Please check the connection and settings. (⇒ 32)

Tips

- If the connection test fails, it may be necessary to set the MAC address of this unit at the router side. The MAC address can be displayed by pressing [SETUP] and selecting "Network Settings".

Setting the IP address

In most cases, default settings can normally be used without making any changes.

Set the IP address only when the router has no DHCP server functions or when the router's DHCP server function is disabled.

After performing steps 1–3 (⇒ above)

- 4 Press [▲, ▼] to select "IP Address Auto-Assignment" and press [◀, ▶] to select "Off".
- 5 Press [▲, ▼] to select "IP Address", "Subnet Mask" or "Gateway Address" and press [OK].
- 6 Enter numbers with the numbered buttons and press [OK].
 - After checking the specifications for your broadband router, enter each number.
 - If the number is unknown, then check the number of other devices such as personal computers connected via a LAN cable. Assign a different number from those of other devices for the "IP Address" and the same number for others.
 - If a wrong number is entered, then press [CANCEL].
- 7 Press [◀, ▶] to select "Yes" and press [OK].

Note

- The numeric input range is between 0 and 255.

Setting the DNS-IP

In most cases, default settings can normally be used without making any changes.

When setting an assigned DNS server from your Internet service provider, perform the following settings.

After performing steps 1–3 (⇒ left)

- 4 Press [▲, ▼] to select "DNS-IP Auto-Assignment" and press [◀, ▶] to select "Off".
- 5 Press [▲, ▼] to select "Primary DNS" or "Secondary DNS" and press [OK].
- 6 Enter numbers with the numbered buttons and press [OK].

- Follow the instructions given by your Internet service provider and enter the numbers.
- If the number is unknown, then check the number of other devices such as personal computers connected via a LAN cable and assign the same number.
- If a wrong number is entered, then press [CANCEL].

- 7 Press [◀, ▶] to select "Yes" and press [OK].

Note

- The numeric input range is between 0 and 255.

Setting the connection speed

When the connection test results in "Fail" after the IP and DNS-IP addresses are assigned, perform the following settings.

After performing steps 1–3 (⇒ left)


- 4 Press [▲, ▼] to select "Connection Speed Auto-Config" and press [◀, ▶] to select "Off".
- 5 Press [▲, ▼] to select "Connection Speed Setting" and press [◀, ▶] to select a connection speed.

- Select a connection speed in accordance with the environment of the network connected.
- When the settings are changed, the network connection may be disabled depending on the device.

Setting the proxy server


In most cases, default settings can normally be used without making any changes.
Please use this setting when instructed to by your Internet service provider.

- ① Press [SETUP].
- ② Press [▲, ▼] to select “Network Settings” and press [OK].
- ③ Press [▲, ▼] to select “Proxy Server Settings” and press [OK].

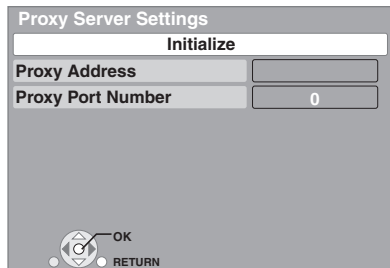


- ④ Press [▲, ▼] to select “Proxy Address” and press [OK].
- The text entry screen is displayed.

Text field: shows the text you have entered

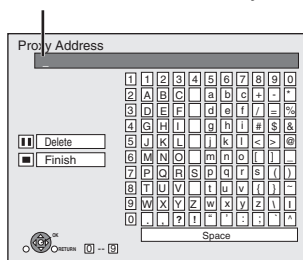

- ⑤ Press [▲, ▼, ◀, ▶] to select a character and press [OK].
Repeat this step to enter other characters.
• Press [■] to delete.
- ⑥ Press [■] when you complete the entry.
- ⑦ Press [▲, ▼] to select “Proxy Port Number” and press [OK].
- ⑧ Enter numbers with the numbered buttons and press [OK].

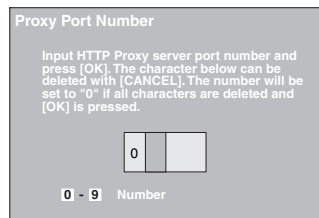

- ⑨ Press [◀, ▶] to select “Yes” and press [OK].



TIPS


- The specified ports may be blocked and not be able to be used depending on the network environment.

In order to restore the default settings

After performing steps ①–③

- 1) Press [▲, ▼] to select “Initialize” and press [OK].
- 2) Press [◀, ▶] to select “Yes” and press [OK].

Using the numbered buttons to enter characters
e.g., entering the letter “F”

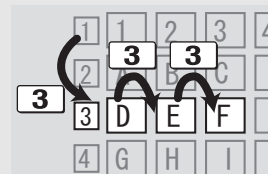


- 1) Press [3] to move to the 3rd row.
- 2) Press [3] twice to highlight “F”.
- 3) Press [OK].

Firmware updating

When this unit remains connected to the Internet, it will automatically check for the latest firmware version when it is turned on.

When latest firmware version is available, the following screen is displayed.
Select “Yes” or “No”.

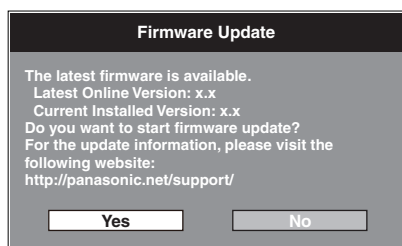


- If “Yes” is selected, then follow the on-screen instructions.
- If “No” is selected, then manually update the firmware later. (⇒ right)

After the latest firmware is downloaded, the system will be restarted and the firmware will be updated.

When the system is restarted, the screen display disappears and “START” is displayed on the unit’s display.



After the firmware is updated and the system is restarted, the following screen indicates that the firmware update has been completed.

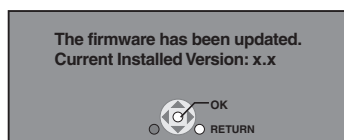

- During the update process, no other operations can be performed. Serious damage may occur if you turn off the unit and/or press any buttons.



NOTE

- Downloading will require several minutes. It may take longer or the Internet may not be connected depending on the connection environment. It is required that you use a broadband connection.



TIPS

- If downloading on this unit fails or this unit is not connected to the Internet, then you can download the latest firmware from the following website and burn it to a CD-R to update the firmware.
<http://panasonic.net/support/>
(This site is in English only.)
- When the unit is connected to the Internet, communication charges may be generated.
- If you do not want to check for the latest firmware version when the unit is turned on, set “Automatic Update Check” to “Off”.
(⇒ 27)

Manually updating the firmware

If the firmware update is not carried out when the unit is turned on, a message is displayed when displaying the FUNCTIONS menu.

The latest firmware is available.
Please update firmware in Setup.

You can manually update the firmware.




- 1) Press [SETUP].
- 2) Press [▲, ▼] to select “General” and press [OK].
- 3) Press [▲, ▼] to select “Firmware Update” and press [OK].
- 4) Press [▲, ▼] to select “Update Now” and press [OK].
- 5) Press [◀, ▶] to select “Yes” and press [OK].

Basic play (Playing video contents)

Instructions for operations are generally described using the remote control in these operating instructions.

Preparation

Turn on the television and select the appropriate video input on the television.

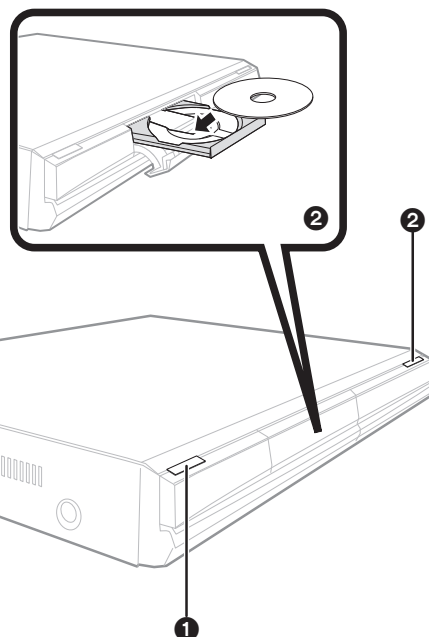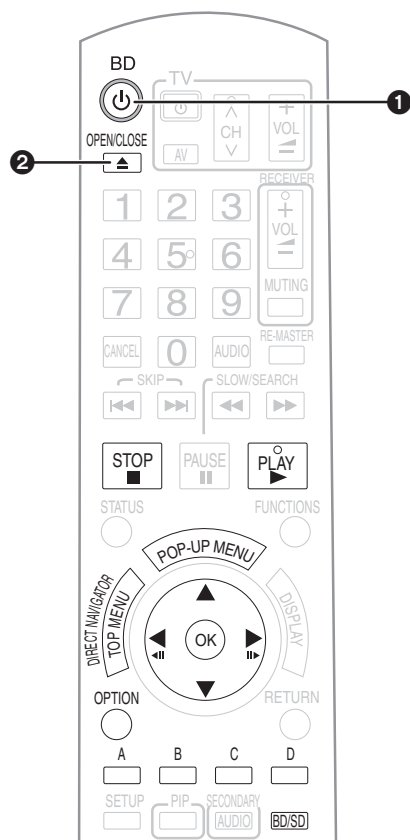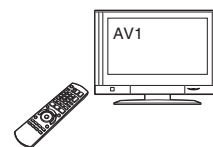

Getting started

Playback


- 1 Press [BD] to turn on the unit.
- 2 Press [▲ OPEN/CLOSE] to open the disc tray and load the disc.

- Load double-sided discs so the label for the side you want to play is facing up. e.g.,
- DVD-RAM: Remove discs from their cartridges before use.
- Press the button again to close the tray. Play starts.




- If a disc with data in different file formats is inserted, the file selection menu is displayed. Press [▲, ▼] to select the desired file format and press [OK].
- If play does not start, press [▶] (PLAY).

e.g., **BD-V**

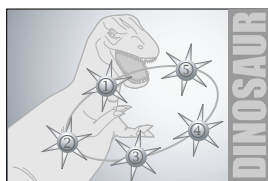

e.g., **DVD-VR**

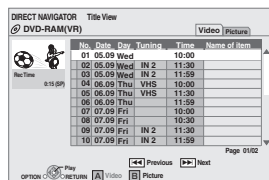

- If the menu is displayed, press [▲, ▼, ◀, ▶] to select the item and press [OK].
- If the screen prompting you to use the color buttons appears, continue to operate with the color buttons on the remote control.



NOTE

- Signal from PAL discs is output as PAL. Signal from NTSC discs is output as "NTSC" or "PAL60". You can select "NTSC" or "PAL60" in "NTSC Contents Output" for NTSC discs. (⇒ 24)
- DISCS CONTINUE TO ROTATE WHILE MENUS ARE DISPLAYED. Press [■] when you have finished playback to protect the unit's motor, your television screen and so on.



TIPS

To switch drives

Press [BD/SD] to select "BD" to play a disc.

- If a disc or an SD card is inserted while the unit is stopped, the drive switches automatically depending on the inserted media.

To display menus

BD-V **AVCHD** **DVD-VR** **DVD-V**

Press [TOP MENU/DIRECT NAVIGATOR].

To show Pop-up menu **BD-V**

The Pop-up menu is a special feature available with some BD-Video discs. This menu may vary with discs. For the operating method, refer to the instructions for the disc.

- 1) Press [POP-UP MENU].
 - 2) Press [▲, ▼, ◀, ▶] to select the item and press [OK].
- Pop-up menu also appears by pressing [OPTION] and selecting "Pop-up Menu".
 - Press [POP-UP MENU] to exit the screen.

- The producers of the disc can control how discs are played. So you may not always be able to control play as described in these operating instructions. Read the disc's instructions carefully.
- When playing a set of two or more BD-Video discs, the menu screen may continue to display even if the disc has been ejected.
- It may take time to read BD-Video discs that include BD-J (⇒ 34).



TIPS

- You can play data in AVCHD format recorded on an SD card.

Other operations during play (These functions may not work depending on the disc.)



Stop

The stopped position is memorized.

Resume play function

Press [▶] (PLAY) to restart from this position.

- The position is cleared if the tray is opened or you press [■] several times to display "STOP" on unit's display.
- **BD-V**: On BD-Video discs including BD-J (⇒ 34), the resume play function does not work.
- **CD MP3**: The position is cleared if the unit is turned off.



Pause

- Press [||] again or [▶] (PLAY) to restart play.

SLOW/SEARCH



Search/Slow-motion

The speed increases up to 5 steps.

- Press [▶] (PLAY) to revert to normal playback speed.
- For some discs, the speed may not change.

Search

While playing, press [◀◀] or [▶▶].

- **BD-V AVCHD DVD-VR DVD-V**: Audio is heard during first level of forward search.
- **CD MP3**: The speed is fixed to a single step.

Slow-motion

While paused, press [◀◀] or [▶▶].


- **BD-V AVCHD**: Forward direction [▶▶] only.
- **DVD-VR**: If continued for approx. 5 minutes, slow-motion play pauses automatically.



Skip

Skip to the title, chapter or track you want to play.

- Each press increases the number of skips.

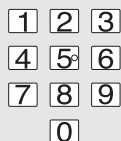

Starting from a selected item

Play starts from the selected title or chapter.

BD-V AVCHD

e.g., 5: [0] ⇒ [0] ⇒ [5]
15: [0] ⇒ [1] ⇒ [5]

DVD-V

e.g., 5: [0] ⇒ [5]
15: [1] ⇒ [5]

- While stopped (the image on the right is displayed on the screen), the title is designated. While playing, the chapter is designated.



Frame-by-frame

While paused, press [◀] (◀||) or [▶] (||▶).

Each press shows the next frame.

- Press and hold to change in succession forward or backward.
- Press [▶] (PLAY) to revert to normal playback speed.
- **BD-V AVCHD**: Forward direction [▶] (||▶) only.

Screen Aspect

When black bars are shown at the top, bottom, left, and right sides of the screen, you can enlarge the image to fill the screen.

- Press [OPTION].
- Press [▲, ▼] to select "Screen Aspect" and press [OK].
- Press [◀, ▶] to select "Side cut" or "Zoom".

Normal: Normal output

Side cut: The black bars on the right and left sides of the 16:9 image disappear and the image is enlarged. Please note that the right and left sides of the image are cut off when the black bar is not displayed.

Zoom: The black bars on the top and bottom sides of the 4:3 image disappear and the image is enlarged. Please note that the top and bottom sides of the image are cut off when the black bar is not displayed.

- **BD-V**: "Side cut" and "Zoom" do not have any effect.
- **DVD-V**: "Side cut" does not have any effect.
- When "TV Aspect" (⇒ 26) is set to "4:3 Pan & Scan" or "4:3 Letterbox", the "Zoom" effect is disabled.


STATUS



Status messages

The status messages give you information about what is currently being played. Each time you press [STATUS], the information displayed will change.

e.g. **BD-V** Type of disc Play status

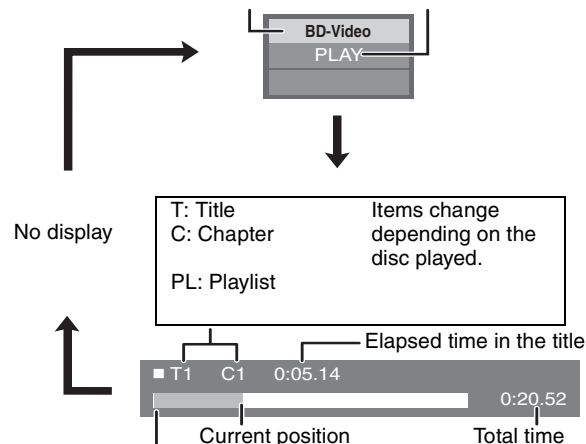

Depending on the kind of disc or the playback status, this display may not appear.



Changing audio during play

BD-V AVCHD DVD-V

e.g. **DVD-V**




English is selected.

You can change the audio channel number each time you press the button. This allows you to change the soundtrack language (⇒ 22, Soundtrack), etc.

DVD-VR

AudioLR → AudioL → Audio R

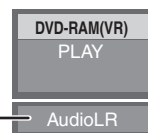

"AudioLR" is selected

RE-MASTER



Reproducing more natural audio (Discs recorded at 48 kHz or less)

This feature gives you a more natural sound by adding higher frequency signals not recorded on the track.

Press [RE-MASTER] to select "Re-master 1", "Re-master 2" or "Re-master 3".

Select the one that you like best.

Setting	When playing LPCM sound Type of music	Other types of sound Effect level
Re-master 1	High tempo (e.g., pop and rock)	Light
Re-master 2	Various tempos (e.g., jazz)	Medium
Re-master 3	Low tempo (e.g., classical)	Strong
Off	Off	Off

- This function is effective for audio from the HDMI terminal or the DIGITAL AUDIO OUT terminal only when "Dolby D/Dolby D +/ Dolby TrueHD" or "DTS/DTS-HD" is set to "PCM". (However, in this case, audio is output as 2ch from the DIGITAL AUDIO OUT terminal.)

Enjoying BD-LIVE or BONUSVIEW in BD-Video BD-V

This unit allows you to enjoy functions such as picture-in-picture, secondary audio and Virtual packages, etc., with BD-Video supporting BONUSVIEW (BD-ROM version 2 Profile 1 version 1.1/ Final Standard Profile). In addition to the BONUSVIEW function, BD-Video supporting BD-Live (BD-ROM version 2 Profile 2) that has a network extension function allows you to enjoy more functions such as online games by connecting this unit to the Internet.

- These discs may not be on sale in certain regions.
- For details about usable card, refer to “Disc and card information” (⇒ 4)

Playing secondary video (picture-in-picture) and secondary audio

Secondary video can be played from a disc compatible with the picture-in-picture function.

For the playback method, refer to the instructions for the disc.

To turn on/off secondary video Press [PIP].


Secondary video is played.

- “PiP ON” is displayed.
- Press the button to turn it ON and OFF.

To turn on/off audio with the secondary video Press [SECONDARY AUDIO].

The secondary audio is played.

- “Secondary Audio ON” is displayed.
- Press the button to turn it ON and OFF.

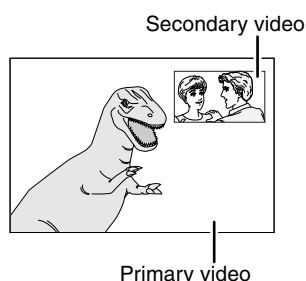

NOTE

- Discs may not always be played back according to the settings on this unit, as certain playback formats are prioritized on certain discs.
- Only the primary video is played during search/ slow-motion or frame-by-frame.
- When “BD-Video Secondary Audio” in “Digital Audio Output” is set to “Off”, secondary audio will not be played even if [SECONDARY AUDIO] is pressed. Please check that “BD-Video Secondary Audio” is set to “On” (⇒ 25).
- When the secondary video is turned off, the secondary audio does not be played.

Virtual package

For a disc compatible with the virtual package (⇒ 35), data is copied to other media (⇒ 35, Local storage) from the Internet or disc to use the different functions while playing the data.


For this unit, data is copied to an SD card.

The methods for copy and playback and the required available capacity on the card may vary with the disc. For details, refer to the instructions for the disc.

To use the above functions, it is recommended that you format the card on this unit. Format the card using the following procedures. BD-Video data, such as secondary video recorded on the card, can also be erased with the following procedures.

Formatting SD cards/Deleting data

- 1) Insert an SD card (⇒ 17).
- 2) Press [FUNCTIONS].
- 3) Press [▲, ▼] to select “To Others” and press [OK].
- 4) Press [▲, ▼] to select “Card Management” and press [OK].
- 5) Press [▲, ▼] to select “BD-Video Data Erase” or “Format SD Card” and press [OK].
- 6) Press [◀, ▶] to select “Yes” and press [OK].
- 7) Press [◀, ▶] to select “Start” and press [OK].

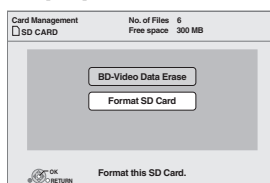

NOTE

- If the SD card is removed from this unit when using data that was copied with the virtual package function, disc playback stops.
- Images and audio may freeze momentarily during playback.
- Data cannot be copied in the following cases.
 - The card is protected.
 - Available capacity on the card is too small. Delete unnecessary data or use a new card.
- When the function fails to work properly, even if the data is copied, format the card again with this unit. (In this case, all data will be erased.)
- If an SD card with files in different formats is used, images and audio may not be played back properly. It is recommended that you use an SD card with no data or an SD card formatted on this unit.



TIPS

- It is impossible to restore data after formatting the card or erasing the data. Once a card is formatted, all data including those recorded on the PC is erased as well, even if the data were protected with other equipment. Confirm whether the card can be formatted.

Enjoying BD-Live discs with Internet

Preparation

- Connect to the network. (⇒ 8)

This unit supports BD-Live, a new BD-Video function that allows you to use the following interactive functions when connected to the Internet.

(The usable functions and the operating method may vary with each disc. For details, refer to the instructions for the disc.)

- Additional contents such as movie's trailer, subtitles and BD-J (⇒ 34), etc. can be downloaded to SD cards (⇒ 35, Local storage) to play them.
- Special video data, etc. may be played back while they are being downloaded to an SD card.
- You can be introduced to other similar movies if you record your viewing history on the server.



NOTE

- The unit must be connected to the Internet and set up (⇒ 11) to use the BD-Live functions. “BD-Live Internet Access” may need to be changed for certain discs (⇒ 24).
- The connection to the Internet may take time or the Internet may not be connected depending on the connection environment. It is required that you use a broadband connection.
- The unit is connected to the Internet when BD-Live functions are used, generating communication charges.
- Special video data, etc. may be played back while they are being downloaded to an SD card using one function of BD-Live. The playback may be paused depending on the communication environment. Some functions may be disabled to prevent skipping to sections that have not been downloaded, etc.
- When discs supporting BD-Live are played back, the player or disc IDs may be sent to the content provider via the Internet.

Enjoying High Bit rate Audio and Video

This unit supports high bit rate audio (Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio and DTS-HD Master Audio) adopted in BD-Video.

Enjoying High Bit rate Audio with 7.1ch speaker

To enjoy 7.1ch surround sound, the following conditions are necessary. (Part shown in the shaded area of table given below)

NECESSARY CONNECTIONS

- Connect an amplifier/receiver with 7.1ch speaker.
- Connect to HDMI AV OUT terminal.
- HDMI AV OUT terminal: connect an amplifier/receiver supporting HDMI (High Bit rate Audio) using a High Speed HDMI cable (⇒ 7).

NECESSARY SETTINGS

- Set "BD-Video Secondary Audio" to "Off". (⇒ 25)
- HDMI AV OUT terminal: Set "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD" to "Bitstream" or "PCM". (⇒ 25)

About audio from audio output terminal

Connect an amplifier/receiver (⇒ 7, 8) and confirm the desired audio type and necessary settings ("BD-Video Secondary Audio", "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD").

- The number of channels listed is the maximum possible number of output channels.
- Also, depending on the specifications or the settings of the amplifier/receiver, the results of the output may vary.

Terminal	HDMI AV OUT				DIGITAL AUDIO OUT	
“Dolby D/Dolby D +/Dolby TrueHD”/“DTS/DTS-HD”	“Bitstream”*1		“PCM”*3		“Bitstream”	“PCM”
“BD-Video Secondary Audio”	“On”*2	“Off”	“On”	“Off”	“On” / “Off”	“On” / “Off”
Dolby Digital/ Dolby Digital EX*5	Dolby Digital/ Dolby Digital EX*6	Dolby Digital/ Dolby Digital EX	5.1ch PCM		Dolby Digital/ Dolby Digital EX*6	Down-mixed 2ch PCM
Dolby Digital Plus	Dolby Digital	Dolby Digital Plus	5.1ch PCM*2	7.1ch PCM	Dolby Digital	
Dolby TrueHD		Dolby TrueHD				
DTS Digital Surround/ DTS-ES*5	DTS Digital Surround/ DTS-ES*6	DTS Digital Surround/ DTS-ES	DVD-V : 5.1ch PCM		DTS Digital Surround/ DTS-ES*6	
			BD-V : 7.1ch PCM*4			
DTS-HD High Resolution Audio	DTS Digital Surround	DTS-HD High Resolution Audio	7.1ch PCM*4		DTS Digital Surround	
DTS-HD Master Audio		DTS-HD Master Audio				
7.1ch LPCM	Down-mixed 5.1ch PCM	7.1ch PCM	Down-mixed 5.1ch PCM*2	7.1ch PCM	Down-mixed 2ch PCM	

*1 When the connected equipment is not supported with these audio format, the audio is output as Dolby Digital bitstream, DTS Digital Surround bitstream or down-mixed 2ch PCM (e.g., TV).

*2 **BD-V**: When playing BD-Video without secondary audio or clicking sound, the audio is output as the same format as if "BD-Video Secondary Audio" was set to "Off".

*3 When the connected equipment is not supported with multi channel surround, the audio is output as down-mixed 2ch PCM.

*4 **BD-V**: When the connected equipment is supported with 7.1 channel surround, the audio output is amplified from 5.1ch or 6.1ch to 7.1ch depending on the DTS, Inc. specifications.

*5 With PCM output, Dolby Digital EX becomes PCM audio decoded as Dolby Digital, DTS-ES recorded to DVD-Video becomes PCM audio decoded as DTS Digital Surround, and DTS-ES recorded to BD-Video becomes PCM audio decoded as DTS-ES.

*6 **BD-V**: When "BD-Video Secondary Audio" is set to "On", Dolby Digital EX is output as Dolby Digital and DTS-ES is output as DTS Digital Surround, however if playing BD-Video without secondary audio or clicking sound, the audio is output as the original format.

NECESSARY SETTINGS

- HDMI AV OUT/DIGITAL AUDIO OUT terminal: "Digital Audio Output" (⇒ 25)

Note

- When setting "BD-Video Secondary Audio" to "Off", the clicking sound on the menu and audio with secondary video in picture-in-picture mode (⇒ 15) cannot be output.

Regarding 24p output

Many BD-Video movie contents are recorded in 24 frames/second in accordance with the film materials. However, they will normally be output in 60 frames/second in accordance with the display format.

These can be output in 24p as the original. Therefore, high-quality video can be enjoyed, such as the improved clarity, enhanced perspective, etc.

NECESSARY CONNECTIONS


- Connect to a TV supporting 1080/24p input via an HDMI cable.

NECESSARY SETTINGS

- "24p Output": "On" (⇒ 26)

Chapter playback DVD-VR

- ① Insert a disc (⇒ 13).
- ② While “Title View” screen is displayed
Press [▲, ▼] to select the title and press [OPTION].

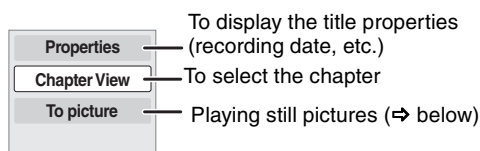

- ③ Press [▲, ▼] to select “Chapter View” and press [OK].
- ④ Press [◀, ▶] to select the chapter and press [OK].

Playing still pictures JPEG

You can play still pictures recorded onto a BD-RE, DVD-RAM, CD-R/RW and an SD card.

- ① Insert a disc (⇒ 13) or an SD card (⇒ right).

- If a disc or an SD card containing data in different file formats is inserted, the file selection menu may be displayed.

SD card:

Press [▲, ▼] to select “Picture (JPEG)” and press [OK].


CD-R/RW:

Press [▲, ▼] to select “JPEG” and press [OK].

BD-RE, DVD-RAM

“Album View” screen is displayed


e.g.,

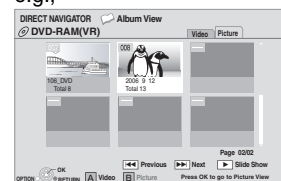

- When the “Title View” screen is displayed, press the [B] button to switch to the “Album View” screen.

- ② Press [▲, ▼, ◀, ▶] to select the album and press [OK].

e.g.,

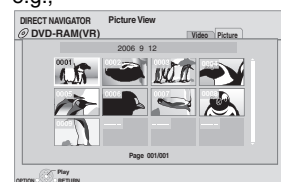


- ③ Press [▲, ▼, ◀, ▶] to select the still picture and press [OK].

e.g.,



e.g.,

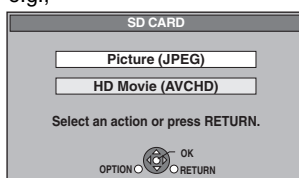


CD-R/RW, SD card


“Picture View” screen is displayed

⇒ Go to step ③

e.g.,

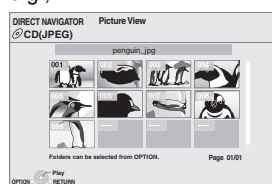

Inserting a card

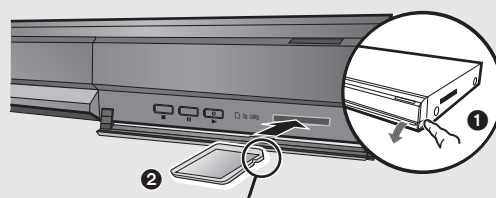

Insert the card label up with the cut-off corner on the right.

- ① Pull to flip down the front panel.
- ② Insert the SD card into the SD card slot.
 - Press on the center of the card until it clicks into place.

Removing the card

Press on the center of the card and pull it straight out.



TIPS

- Press [◀, ▶] to display the previous or next still picture.
- Press [◀◀, ▶▶] to show other pages.

To return to the previous screen

Press [RETURN].

To exit the screen

Press [DIRECT NAVIGATOR].

CD-R/RW, SD card

To switch from other menus to JPEG menu

(If the media contains data in different file formats)

- 1) Press [FUNCTIONS].
- 2) Press [▲, ▼] to select “Menu” and press [OK].
- 3) Press [▲, ▼] to select “JPEG” or “Picture (JPEG)” and press [OK].



NOTE

- Small-sized still pictures are displayed with a frame.

Useful functions during still picture play

Start Slideshow

You can display still pictures one by one at a constant interval.

BD-RE, DVD-RAM

- ① While the "Album View" screen is displayed
Press [▲, ▼, ◀, ▶] to select the album and press [OPTION].
- ② Press [▲, ▼] to select "Start Slide Show" and press [OK].

- You can also start slideshow by pressing [▶] (PLAY) after selecting the album.

CD-R/RW, SD card

- ① While the "Picture View" screen is displayed
Press [OPTION].
- ② Press [▲, ▼] to select "Start Slide Show" and press [OK].

To stop slideshow

Press [■].

Slideshow with music

SD card only

If a music CD is inserted in the disc tray while playing slideshows, the music CD starts playing automatically as background music.

- You cannot search or skip on a music CD.
- When the slideshow stops, playback of the music CD also stops.
- **MP3**: This function will not operate.

Slideshow settings

In step ② in "Start Slideshow" above,

- ① Press [▲, ▼] to select "Slide Show Setting" and press [OK].
- ② **To change the display interval**
Press [▲, ▼] to select "Display interval" and press [◀, ▶] to select the interval ("Long", "Normal" or "Short").
 - When a still picture with large number of pixels is played, the display interval may become longer. Even if the setting is changed, the display interval may not become shorter.**To set display method**
Press [▲, ▼] to select "Transition Effect" and press [◀, ▶] to select "Random" or "Fade".
 - "Random": The transition effects are changed in a random sequence.
 - "Fade": The image is displayed while fading in and switches to next image after fading out.**To repeat slideshow**
Press [▲, ▼] to select "Repeat Play" and press [◀, ▶] to select "On" or "Off".

- ③ Press [▲, ▼, ◀, ▶] to select "Set" and press [OK].

Rotate

- ① While playing (except for slideshows)
Press [OPTION].
 - ② Press [▲, ▼] to select "Rotate RIGHT" or "Rotate LEFT" and press [OK].
- The rotation information will be stored until the unit is turned off or the media is removed.

Zoom out

This function is only available for small-sized still pictures.

- ① While playing (except for slideshows)
Press [OPTION].
 - ② Press [▲, ▼] to select "Zoom out" and press [OK].
- To cancel "Zoom out", press [▲, ▼] to select "Zoom in" in step ② and press [OK].
 - The zoom-out information will not be stored.


To select the still pictures in another folder

BD-RE, DVD-RAM

To switch to another higher folder

(Only if there is a multiple number of higher folders recognizable)


- ① While the "Album View" screen is displayed
Press [OPTION].
- ② Press [▲, ▼] to select "Select Folder" and press [OK].

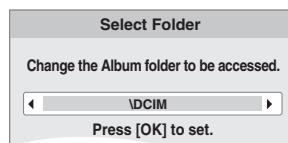

- ③ Press [◀, ▶] to select the higher folder and press [OK].

CD-R/RW

- ① While the "Picture View" screen is displayed
Press [OPTION].
- ② Press [▲, ▼] to select "Folder" and press [OK].
- ③ Press [▲, ▼] to select a folder and press [OK].
The "Picture View" screen for the folder appears.

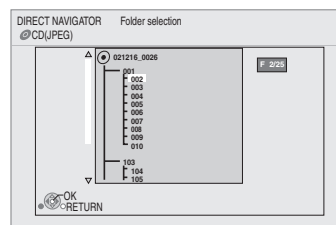

To show the picture properties

While playing
Press [STATUS] twice.

e.g. JPEG on DVD-RAM
Shooting date

Date	11.12.2007	Total	3/9
------	------------	-------	-----


To exit, press [STATUS].

Playing music CD MP3

You can play generally available music CD or MP3 files recorded onto a CD-R/RW.

① Insert a disc. (⇒ 13)

- If a disc containing data in different file formats is inserted, the file selection menu may be displayed. Press [▲, ▼] to select "MP3" and press [OK].

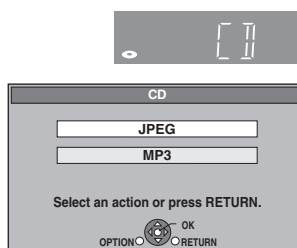


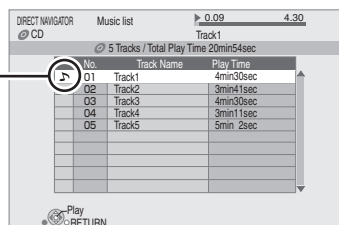
② Press [▲, ▼] to select the track and press [OK].

Play starts on the selected track.

- **CD** "TR" and the track number being played back are displayed on the unit's display.


e.g. **CD**

" " indicates the track currently playing.



MP3 Playing a track in another folder

- ① While the "Music list" is displayed
Press [OPTION], press [▲, ▼] to select "Select Folder" and press [OK].

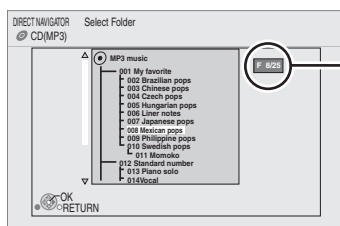

Selected folder No. /Total folders
If the folder has no track, "—" is displayed as folder number.

- ② Press [▲, ▼] to select a folder and press [OK].
The "Music list" for the folder appears.

Playing music continuously even after turning off power to the television

When the unit is connected to a Panasonic TV (VIERA) that supports HDAVI Control 2 or HDAVI Control 3 and other device supports VIERA Link, the unit is turned off if the power to the television is turned off, since "Power off link" (⇒ 21) operates.

The following operations make it possible to keep the power of the unit ON and to play music continuously.

- ① While playing music
Press [OPTION].
- ② Press [▲, ▼] to select "TV Power" and press [OK].

Showing FUNCTIONS menu

Some functions of this unit can be operated from the FUNCTIONS menu.

① Press [FUNCTIONS].

- Items to be displayed may vary with the media.


② Press [▲, ▼] to select the item and press [OK].

- Top Menu
- Menu
- Playback
- SD CARD
- BD/DVD/CD
- To Others

Switches to the SD drive.
Switches to the disc drive.
"Playlists":

You can play playlists created on DVD-VR.
Press [▲, ▼, ◀, ▶] to select the playlist and press [OK].
"Setup" (⇒ 24)
"Card Management" (⇒ 15)

e.g.,

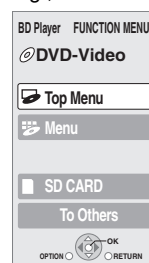

TIPS

To switch from other menus to MP3 menu

(If a disc contains data in different file formats)

- 1) Press [FUNCTIONS].
- 2) Press [▲, ▼] to select "Menu" and press [OK].
- 3) Press [▲, ▼] to select "MP3" and press [OK].

- You can use search and skip functions. (⇒ 14)
- When the "Screen Saver Function" is set to "On" (⇒ 25), the screen switches to Screen Saver mode if there is no operation for 10 minutes after starting playback. (Playback continues.)



NOTE

- You cannot select folders that contain no compatible tracks.



TIPS

To return to the previous screen
Press [RETURN].



NOTE

- Sound may be discontinued for several seconds when the power to the television is turned off.
- If the operation mentioned left is executed while audio is output from the television, the sound may not be output from the device. It is recommended to set the device beforehand so that audio will be output from the device.

About MP3/JPEG files

File format	MP3	JPEG
Playable media	CD-R* ¹ , CD-RW* ¹	CD-R* ¹ , CD-RW* ¹ , DVD-RAM* ² , BD-RE* ³ , SD card
Extension	Files must have the extension “.mp3” or “.MP3”.	Files must have the extension “.jpg” or “.JPG”.
Picture resolution	—	between 34×34 and 8192×8192 pixels (sub sampling is 4:2:2 or 4:2:0)
Compression rate	32 kbps to 320 kbps	—
Sampling rate	44.1 kHz/48 kHz	—
Reference	<p>ID3 tags: version 1, 2.2, 2.3, 2.4 ID3 is a tag embedded in MP3 track to provide information about the track. This unit supports the versions listed above but only titles and the names of artists can be displayed. ● If there is a large amount of still picture data etc. within a MP3 file, play may not be possible.</p>	<p>JPEG conforming DCF*⁴ is supported. Thawing Time: approx. 2 sec. (7M pixels) ● MOTION JPEG and Progressive JPEG is not supported.</p>

- English alphabet and Arabic numerals are displayed correctly. Other characters may not be displayed correctly.
- The display order on this unit may differ from how the order is displayed on a computer.
- Depending on how you create the media (writing software), files and folders may not play in the order you numbered them.
- Depending on how you create the structure of folders (writing software), files and folders may not play. (⇒ 36)
- This unit is not compatible with packet-write format.
- Depending on the recording conditions, the media may not play.
- Operation may take time to complete when there are many files and/or folders and some files may not display or be playable.

*1 ISO9660 level 1 or 2 (except for extended formats), Joliet

This unit is compatible with multi-session.

This unit is not compatible with packet writing.

*2 Discs must conform to UDF 2.0.

*3 Discs must conform to UDF 2.5.

*4 Design rule for Camera File system: unified standard established by Japan Electronics and Information Technology Industries Association (JEITA).

Linked operations with the TV

(VIERA Link “HDAVI Control™”)

What is VIERA Link “HDAVI Control”?

VIERA Link “HDAVI Control” is a convenient function that offers linked operations of this unit, and a Panasonic TV (VIERA) or other device under “HDAVI Control”.

You can use this function by connecting the equipment with an HDMI cable. See the operating instructions for connected equipment for operational details.

- VIERA Link “HDAVI Control”, based on the control functions provided by HDMI which is an industry standard known as HDMI CEC (Consumer Electronics Control), is a unique function that we have developed and added. As such, its operation with other manufacturers’ equipment that supports HDMI CEC cannot be guaranteed.
- This unit supports “HDAVI Control 3” function.
“HDAVI Control 3” is the newest standard (current as of December, 2007) for Panasonic’s HDAVI Control compatible equipment. This standard is compatible with Panasonic’s conventional HDAVI equipment.
- Please refer to individual manuals for other manufacturers’ equipment supporting VIERA Link function.

Preparation

- 1) Connect this unit to your TV or other device with an HDMI cable (⇒ 6, 7).
 - 2) Set “VIERA Link” to “On” (⇒ 26).
(The default setting is “On”.)
 - 3) Set the “HDAVI Control” operations on the connected equipment (e.g., TV).
 - When using HDMI2 terminal of VIERA as “HDAVI Control”, set the input channel to HDMI2 on VIERA.
 - 4) Turn on all “HDAVI Control” compatible equipment and select this unit’s input channel on the connected TV so that the “HDAVI Control” function works properly.
- Also when the connection or settings are changed, repeat this procedure.

What you can do with “HDAVI Control”

Automatic input switching

When the following operations are performed, the television will automatically switch the input channel and display the corresponding action.

- When play starts on the unit
- When an action that uses the display screen is performed (e.g., Direct Navigator screen)

Power on link

When the television is off and the following operations are performed, the television will automatically turn on and display the corresponding action.

- When play starts on the unit
- When an action that uses the display screen is performed (e.g., Direct Navigator screen)

Power off link

All connected equipment compatible with “HDAVI Control”, including this unit, automatically turns off when you switch the television off.

- This unit automatically turns off even during playback or any other operation.

Playing music continuously even after turning off power to the television (⇒ 19)



NOTE

- When [▶] (PLAY) is pressed on this unit for “Automatic input switching” or “Power on link”, the playback image is not immediately displayed on the screen and it may not be possible to watch the contents from where playback started.
In this case, press [◀◀] or [◀◀] to go back to where playback started.

Easy control only with VIERA remote control

If you connect this unit to a TV that has “HDAVI Control 2” or “HDAVI Control 3” function with an HDMI cable, you can operate this unit using the following buttons on the TV remote control.

[▲], [▼], [◀], [▶], [OK], [RETURN], [EXIT], [OPTION] and colored buttons ([EXIT]: Exit the screen)

Use the remote control for this unit to operate any other buttons (numbered buttons, etc.) that are not listed above.

- Refer to the TV operating instructions for operating TV.

Using the FUNCTIONS menu to operate this unit

By using the TV remote control, you can play media using the FUNCTIONS menu.

- 1 Press the button for VIERA Link on the remote control.

- 2 Select the player.

- The FUNCTIONS menu is displayed.

e.g.,



Using the OPTION menu to operate this unit

By using the TV remote control, you can play discs using the “Control Panel” and display the Top Menu (for BD-Video and DVD-Video) or Pop-up Menu (for BD-Video).

- 1 Press [OPTION].

This can also be displayed by using the VIERA menu screen.

Note You cannot use the OPTION menu while the Top Menu for BD-Video or DVD-Video is displayed.

- 2 Select an item, then press [OK].

e.g.,



Control Panel	Control Panel is displayed. Follow the indications on the screen.
Screen Aspect	(⇒ 14)
Top Menu BD-V AVCHD DVD-V	Top menu is displayed.
Menu DVD-V	Menu is displayed.
Pop-up Menu BD-V AVCHD	Pop-up menu is displayed.
Rotate RIGHT JPEG	Rotate the still picture.
Rotate LEFT JPEG	
Zoom in JPEG	Enlarge or reduce the still picture.
Zoom out JPEG	

- When you want to leave the TV on and set only this unit to standby mode

Press [⏻ BD] on this unit’s remote control and set to standby mode.

- When not using “HDAVI Control”

Set “VIERA Link” in the Setup menu to “Off”. (⇒ 26)

Changing settings with the on-screen menu

On-screen menu operations

- 1 Press [DISPLAY].
- 2 Press [▲, ▼] to select the menu and press [▶].
- 3 Press [▲, ▼] to select the item and press [▶].
- 4 Press [▲, ▼] to select the setting.

e.g., BD-Video

Disc	Signal Type
Play	Subtitle Off PIP 1 ENG
Picture	Subtitle Style - Angle -
Sound	
Menus	Items Settings



NOTE

- Depending on the condition of the unit (playing, stopped, etc.) and disc contents, there may be some items that you cannot select or change.



TIPS

- Some items can be changed by pressing [OK].

To exit the on-screen menu
Press [DISPLAY].

What you can change with the on-screen menu

Menus	Items	Settings and details
Disc	Signal Type	BD-V <ul style="list-style-type: none">• Primary Video Video: The video recording method appears. (⇒ below, Video recording method) Soundtrack: Select the type of audio or language. (⇒ below, Language, Audio attribute)• Secondary Video Video: Select on/off of images. The video recording method appears. (⇒ below, Video recording method) Soundtrack: Select on/off of audio and the language. (⇒ below, Language, Audio attribute)
	Video	AVCHD The video recording method appears. (⇒ below, Video recording method)
	Soundtrack	AVCHD DVD-V Select the type of audio or language. (⇒ below, Language, Audio attribute) DVD-VR The audio attributes appear. (⇒ below, Audio attribute)
	Subtitle	BD-V AVCHD DVD-V Turn the subtitle on/off and select the language. (⇒ below, Language) DVD-VR (Only discs that contain subtitle on/off information) Turn the subtitle on/off.
	Subtitle Style	BD-V Select the subtitle style.
	Audio channel	DVD-VR (⇒ 14, Changing audio during play)
	Angle	BD-V DVD-V Select the number of the angle.

Some items may be changed only on the disc specific menu. (⇒ 13)


Language			
ENG: English	DAN: Danish	THA: Thai	
FRA: French	POR: Portuguese	POL: Polish	
DEU: German	RUS: Russian	CES: Czech	
ITA: Italian	JPN: Japanese	SLK: Slovak	
ESP: Spanish	CHI: Chinese	HUN: Hungarian	
NLD: Dutch	KOR: Korean	FIN: Finnish	
SVE: Swedish	MAL: Malay	*: Others	
NOR: Norwegian	VIE: Vietnamese		

Audio attribute	
LPCM/ Digital/ Digital+/ TrueHD/DTS/DTS 96/DTS-HD HI RES/DTS-HD MSTR/DTS-HD LBR/ MPEG	Signal type
ch (channel)	Number of channels
k (kHz)	Sampling frequency
b (bit)	Number of bits

Video recording method

MPEG-2	This is a standard for compressing and decompressing color motion pictures efficiently. This compression method is used for DVDs, etc.
MPEG-4 AVC VC-1	These are standards for compressing and decompressing color motion pictures more efficiently than MPEG-2 and used for Blu-ray Discs, etc.

Menus	Items	Settings and details
Play	Repeat Play	<p>(Only when the elapsed time is being displayed on the unit's display.) Selects the item which you want to repeat. The items displayed differ depending on the type of disc.</p> <ul style="list-style-type: none"> • All tracks All tracks • Chapter Chapter • Playlists Playlist • Title Title • One track Track • Off <p>Select "Off" to cancel.</p>
	Random	<p>CD MP3</p> <p>While playing, press [▲, ▼] to select "On". Random playback starts from the next track.</p> <ul style="list-style-type: none"> • On • Off
Picture	Mode	<p>BD-V AVCHD DVD-VR DVD-V</p> <p>Select the picture quality mode during play.</p> <ul style="list-style-type: none"> • Normal: Default setting • Soft: Soft picture with smoother video • Fine: Details are sharper • Cinema: Mellows movies, enhances detail in dark scenes. • User: You can make further adjustments. (⇒ below) <p>① Press [►] to select "Picture Adjustment" and press [OK]. ② Select the item using [▲, ▼] and adjust it with [◀, ▶].</p> <p>Contrast: Increases the contrast between light and dark parts of the picture (–7 to +7).</p> <p>Brightness: Brightens the picture (0 to +15).</p> <p>Sharpness: Adjusts the sharpness of the edges of the horizontal lines (–6 to +6).</p> <p>Colour: Adjusts the shade of the picture's color (–7 to +7).</p> <p>Gamma: Adjusts the brightness of dark portions of the screen (0 to +5).</p> <p>3D NR: Reduces the rough noise in the background to give a greater feeling of depth (0 to +4). When "24p Output" is set to "On", this function may not operate. (⇒ 26)</p> <p>Integrated NR: Smooths block noise and reduces the smudging that appears around contrasting sections of the picture (0 to +3).</p>
	Progressive	<p>Select the method of conversion for progressive output to suit the type of material being played (⇒ 34, Film and video).</p> <ul style="list-style-type: none"> • Auto: Automatically detects the film and video content, and appropriately converts it. • Video: Select when using "Auto" and the content is distorted. • Film: Select this if the edges of the film content appear jagged or rough when "Auto" is selected. However, if the video content is distorted as shown in the illustration to the right, then select "Auto".
	24p DVD-V	<ul style="list-style-type: none"> • On • Off <p>Only when you have selected "On" in "24p Output" (⇒ 26) and play discs recorded at a rate of 60 fields per second.</p>
Sound	Sound Effects*1, 2	<ul style="list-style-type: none"> • Off <p>Re-master (⇒ 14)</p> <ul style="list-style-type: none"> • Re-master 1 • Re-master 2 • Re-master 3 <p>V. Surround BD-V AVCHD DVD-VR DVD-V (2 channels or more only)</p> <p>Enjoy a surround-like effect if you are using two front speakers only. – Turn V. Surround off if it causes distortion. – Do not use in combination with surround effects on other equipment. – V. Surround does not work for bilingual recordings.</p> <ul style="list-style-type: none"> • V. Surround 1 • V. Surround 2 <p>Night Surround To enjoy a movie with powerful sound even when the volume is kept low at night, the audio is set in such a way that it can be heard easily.</p> <ul style="list-style-type: none"> • Night Surround
	Dialog Enhancer*1	<p>BD-V AVCHD DVD-VR DVD-V (3 channels or more only, including a center channel)</p> <p>The volume of the center channel is raised to make dialog easier to hear.</p> <ul style="list-style-type: none"> • On • Off

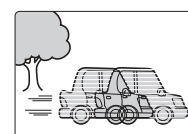

*1 This function is effective for audio from the HDMI terminal or the DIGITAL AUDIO OUT terminal only when "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD" is set to "PCM". (However, in this case, audio is output as 2ch from the DIGITAL AUDIO OUT terminal.)


*2 Not every function can be set individually.

Changing the unit's settings

Change the unit's settings if necessary. The settings remain intact even if you switch the unit to standby.

Setup menu operations

- 1 While stopped
Press [SETUP].
- 2 Press [▲, ▼] to select the menu and press [OK].
- 3 Press [▲, ▼] to select the item and press [OK].
If there are any other items, repeat these steps.
- 4 Press [▲, ▼, ◀, ▶] to select the option and press [OK].

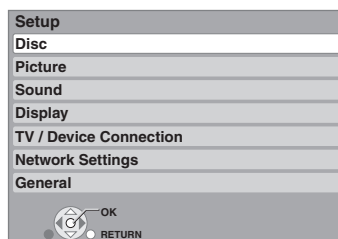

NOTE

- There may be differences in operation methods. If this happens, follow the on-screen instructions for the operation.



TIPS

- To return to the previous screen**
Press [RETURN].
- To exit the screen**
Press [SETUP].

Summary of settings

Underlined items are the factory presets.

“Disc”

DVD-Video Ratings Set a ratings level to limit DVD-Video play.	Follow the on-screen instructions. Enter a 4-digit password with the numbered buttons when the password screen is shown. It will be the common password for both “DVD-Video Ratings” and “BD-Video Ratings”. ● Do not forget your password.	● <u>8 No Limit:</u> ● 1 to 7: ● 0 Lock All: ● <u>Unlock Player</u> ● <u>Change Level</u>	All DVD-Video can be played. Prohibits play of DVD-Video with corresponding ratings recorded on them. Prohibits play of all DVD-Video. ● <u>Change Password</u> ● <u>Temporary Unlock</u>
BD-Video Ratings Set an age limit of BD-Video play.		● <u>No Limit:</u> ● 0 to 254 year(s): ● <u>Unlock Player</u> ● <u>Change Level</u>	All BD-Video can be played. Prohibits play of BD-Video with corresponding ratings recorded on them. ● <u>Change Password</u> ● <u>Temporary Unlock</u>
Soundtrack Preference	Choose the language for audio, subtitle and disc menus. BD-V DVD-V	● <u>English</u> ● Italian ● <u>Original:</u> The original language of each disc will be selected. ● Other ****	● German ● French ● Spanish
Subtitle Preference	● Some discs start in a certain language despite any changes you make here. ● When the selected language is not available on the disc, the default language is played. There are discs where you can only switch the language from the menu screen. (⇒ 13) ● Enter a code (⇒ 37) with the numbered buttons when you select “Other ****”.	● <u>Automatic:</u> If the language selected for “Soundtrack Preference” is not available, subtitles of that language will automatically appear if available on that disc. ● <u>English</u> ● Italian ● Other ****	● German ● French ● Spanish
Menu Preference		● <u>English</u> ● Italian ● Other ****	● German ● French ● Spanish
BD-Live Internet Access BD-V (⇒ 15) You can restrict Internet access when BD-Live functions are used.		● <u>Permit:</u> ● <u>Limit:</u> ● <u>Prohibit:</u>	Internet access is permitted for all BD-Live contents. Internet access is permitted only for BD-Live contents which have content owner certificates. Internet access is prohibited for all BD-Live contents without a certificate. Internet access is prohibited for all BD-Live contents.

“Picture”

Still Mode BD-V AVCHD DVD-V Select the type of picture shown when you pause playback (⇒ 34, Frames and fields).	● <u>Automatic</u> ● <u>Field:</u> Select if jittering occurs when “Automatic” is selected. (The picture is coarser.) ● <u>Frame:</u> Select if small text or fine patterns cannot be seen clearly when “Automatic” is selected. (The picture is clearer and finer.)
Seamless Play DVD-VR Select the play mode between playlist chapter segments and partially deleted titles.	● <u>On:</u> The chapters in playlists are played seamlessly. This does not work while searching or when there are several audio types included on the playlist. Additionally, the positioning of chapter segments may change slightly. ● <u>Off:</u> The points where chapters in playlists change are played accurately, but the picture may freeze for a moment.
NTSC Contents Output Select PAL60 or NTSC output when playing NTSC discs.	● <u>NTSC:</u> NTSC discs are played as NTSC. ● <u>PAL60:</u> Select if picture is not displayed correctly when “NTSC” is selected.

“Sound”

Dynamic Range Compression BD-V AVCHD DVD-V (Dolby Digital, Dolby Digital Plus and Dolby TrueHD only) Change the dynamic range (⇒ 34) for late night viewing.		● On ● Auto: Effective only when Dolby TrueHD is played.	● Off
Digital Audio Output (⇒ 16) ● Press [OK] to show the following settings.			
Dolby D/Dolby D +/ Dolby TrueHD DTS/DTS-HD	Select whether Dolby Digital, Dolby Digital Plus, Dolby TrueHD, DTS Digital Surround, DTS-HD High Resolution Audio or DTS-HD Master Audio is output in “Bitstream” or “PCM” format. Note ● Not making the proper settings may result in noise. ● If the unit is connected with the HDMI AV OUT terminal, the specifications of the connected equipment take preference over this unit and audio selected in these items may not be output (e.g., when a television is connected, the HDMI audio output of this unit is limited to down-mixed 2ch.)	● Bitstream: Select “Bitstream” when the connected equipment can decode the respective audio format. – Connect equipment supporting HDMI (High Bit rate Audio) and use a High Speed HDMI Cable in order to output high bit rate audio such as Dolby Digital Plus, Dolby TrueHD, DTS-HD High Resolution Audio or DTS-HD Master Audio. ● PCM: Select “PCM” when the connected equipment cannot decode the respective audio format. Refer to the operating instructions for connected devices to verify whether or not they can decode each of the audio formats.	
MPEG Audio		● Bitstream: When connected to equipment with a built-in MPEG decoder. ● PCM: When connected to equipment without a built-in MPEG decoder.	
BD-Video Secondary Audio BD-V Turn on/off the clicking sound on the menu and audio with secondary video in picture-in-picture mode. (⇒ 15)		● On: The primary audio and secondary audio are mixed and output. The sampling frequency is converted to 48 kHz. ● Off: The clicking sound on the menu and secondary audio are not output.	
PCM Down Conversion Select how to output audio with a sampling frequency of 96 kHz or more. ● Signals are converted to 48 kHz despite the settings across in the following cases: – when the signals have a sampling frequency of over 96 kHz – when the disc has copy protection – when “BD-Video Secondary Audio” is set to “On”		● On: Signals are converted to 48 kHz. (Choose when the connected equipment cannot process signals with sampling frequency of 96 kHz.) ● Off: Signals are output as 96 kHz. (Choose when the connected equipment can process signals with sampling frequency of 96 kHz.)	
Downmix Switch the downmix system for playing back multi-channel surround sound. ● When “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” is set to “Bitstream”, there are no downmix effects for the outputted audio. ● The audio will be outputted in “Stereo” in the following cases. – AVCHD playback – BD-V : Playback of clicking sound on the menu and audio with secondary video in picture-in-picture mode		● Stereo: When connected to equipment that does not support the virtual surround function. ● Surround encoded: When connected to equipment that supports the virtual surround function (Dolby Pro Logic, DTS Neo: 6, etc.)	

“Display”

On-Screen Messages Choose whether to show status messages automatically.	● Automatic ● Off
Screen Saver Function This is to prevent burn-in on the screen. ● When this is set to “On”, the masked-off area on the screen becomes gray. [Only when connecting with an HDMI cable or a component video cable and “HDMI Video Format” (⇒ 26) is set to any other mode than “576p/480p”, or “Component Resolution” (⇒ 26) is set to “720p” or “1080i”]	● On: If there is no operation for 10 minutes or more, the displayed screen switches to the other states automatically. – When the Direct Navigator or FUNCTIONS menu is displayed, the display returns to the screen saver mode. – When CD or MP3 is played, the display returns to the screen saver mode. (Playback continues.) – When still pictures are shown (except for slideshows), the display returns to the Direct Navigator screen. ● Off
FL Display Changes the brightness of the unit’s display.	● Bright ● Dim: The display is dimmed. ● Automatic: The display is dimmed during playback and bright except playback.
Software Licence	Information about the software used by this unit is displayed.

“TV/Device Connection”

TV Aspect Set to match the type of television connected.	When connected to a 4:3 aspect television: ● 4:3 Pan & Scan: Video recorded for a widescreen is played as Pan & Scan (unless prohibited by the producer of the disc). When playing BD-Video, video is output as “4:3 Letterbox”. ● 4:3 Letterbox: Video recorded for a widescreen is played in the letterbox style. When connected to a 16:9 widescreen television: ● 16:9: Video recorded for 4:3 aspect screen is displayed as a 4:3 ratio image in the center of the screen. ● 16:9 full: Video recorded for 4:3 aspect screen is displayed as a horizontally stretched 16:9 image.
HDMI Connection ● Press [OK] to show the following settings.	
HDMI Video Mode Select “On” when video is output from HDMI AV OUT terminal.	● On: Images are output from the HDMI terminal in the resolution set in “HDMI Video Format”. Video from COMPONENT VIDEO OUT terminal is output as “576i/480i”. ● Off: Images are output in the resolution set in “Component Resolution”.
HDMI Video Format* The items supported by the connected devices are indicated on the screen as “*”. When any item without “*” is selected, the images may be distorted.	● Automatic: Automatically selects the output resolution best suited to the connected television (1080p, 1080i, 720p or 576p/480p). ● 576p/480p ● 1080i ● 720p ● 1080p – When the unit is connected to an amplifier/receiver that does not support the resolution set on the unit, the video cannot be output properly. In this case, use the HDMI cable to connect the unit to the TV and then connect the unit to the amplifier/receiver using a cable other than HDMI. – To enjoy high definition video up-converted to 1080p, you need to connect the unit directly to 1080p compatible HDTV (High Definition Television). If this unit is connected to an HDTV through other equipment, it must also be 1080p compatible.
24p Output BD-V DVD-V When this unit is connected to a TV supporting 1080/24p output via an HDMI cable, this unit displays each frame at 1/24 second intervals – the same interval originally shot with the film camera. ● When playing DVD-Video, set to “On” and then set “24p” in “Picture” (⇒ 23) to “On”	● On: Images in 24p are output in 24p as they are. However, – when video is being output at 24 frames, images from any other terminal than the HDMI terminal may not be output properly. – BD-V: when images other than 24p are played, images are output at 60p. ● Off
HDMI Output Range Effective when connected to a device that only supports RGB output.	● Standard: The video is output as it is. ● Enhanced: When the black and white contrast of a video is low, the signal is enhanced to reproduce clear video.
HDMI Audio Output This setting selects whether or not to output audio from HDMI.	● On: ● Off: When the TV is connected to this unit using an HDMI cable, and this unit is also connected to other devices, such as an amplifier/receiver using an optical digital audio cable.
VIERA Link Set to use “HDAVI Control” function when connected with an HDMI cable to a device that supports “HDAVI Control”.	● On: ● Off: Select when you do not want to use “HDAVI Control”.
Component Resolution* This sets the video output resolution when using the component video terminal.	● 576i/480i ● 576p/480p ● 720p ● 1080i 480i, 480p: When playing NTSC discs 576i, 576p: When playing PAL discs Even if you select “720p” or “1080i”, the video output resolution is restricted to “576p/480p” when DVD-Video discs and BD-Video discs recorded at a rate of 50 field per second are output from the COMPONENT VIDEO OUT terminals.
TV System Change the setting to match the equipment you are connecting with. ● If picture output is not smooth, change the setting. ● When NTSC contents are played, they are outputted in the signal format specified in the “NTSC Contents Output”, irrespective of the settings here.	● NTSC: Select when connecting to a NTSC television. ● PAL: Select when connecting to a PAL or multi-system television.

* In this unit, a P4HD (⇒ 35) video processor is used to provide video of optimal resolution to the connected TV.

“Network Settings”

IP Address / DNS Settings (⇨ 11)		
● Press [OK] to show the following settings.		
Connection Test	— — — —	
IP Address Auto-Assignment	● On	● Off
IP Address	— — — — . — — — — . — — — — . — — — —	
Subnet Mask	— — — — . — — — — . — — — — . — — — —	
Gateway Address	— — — — . — — — — . — — — — . — — — —	
DNS-IP Auto-Assignment	● On	● Off
Primary DNS	— — — — . — — — — . — — — — . — — — —	
Secondary DNS	— — — — . — — — — . — — — — . — — — —	
Connection Speed Auto-Config	● On	● Off
Connection Speed Setting	● 10BASE Half Duplex	● 10BASE Full Duplex
This is enabled only when "Connection Speed Auto-Config" is turned "Off".	● 100BASE Half Duplex	● 100BASE Full Duplex
Proxy Server Settings (⇨ 12)		
● Press [OK] to show the following settings.		
Initialize	● Yes	● No
Proxy Address	(The initial setting is blank.)	
Proxy Port Number	(The initial setting is "0".)	

“General”

Remote Control (⇒ 31)		● Set Code 1	● Set Code 2	● Set Code 3
Easy Setting		● Yes	● No	
You can execute the basic setting ("TV Aspect").				
Default Settings		● Yes	● No	
This returns all values in the Setup menu and the on-screen menu, except for "Remote Control", "IP Address / DNS Settings", "Proxy Server Settings", "DVD-Video Ratings" and "BD-Video Ratings" to the default settings.				
Firmware Update (⇒ 12)				
● Press [OK] to show the following settings.				
Automatic Update Check		● On	● Off	
When this equipment remains connected to the Internet, it will check for the latest firmware version when it is turned on and you can update it if necessary.				
Update Now		You can update the firmware manually.		

Frequently asked questions

Setup

Page

What do I need to play multi channel surround sound?	<ul style="list-style-type: none"> Connect the appropriate amplifier/receiver to the HDMI terminal, the DIGITAL AUDIO OUT terminal (OPTICAL) on this unit. 	7, 8
How do I set this unit to play 7.1ch surround sound?	<ul style="list-style-type: none"> After connecting this unit to an amplifier/receiver with 7.1ch speaker and setting "BD-Video Secondary Audio" to "Off", set the items in the Setup menu as follows. <ul style="list-style-type: none"> When connecting to an amplifier/receiver supporting HDMI (High Bit rate Audio) using a High Speed HDMI cable <ul style="list-style-type: none"> "Dolby D/Dolby D +/Dolby TrueHD" or "DTS/DTS-HD": "Bitstream" or "PCM" 	25
Can headphones and speakers be directly connected to this unit?	<ul style="list-style-type: none"> You cannot directly connect them to this unit. Connect through the amplifier/receiver, etc. 	7, 8
My television has COMPONENT VIDEO IN terminals and HDMI IN terminal. Which should I connect with?	<ul style="list-style-type: none"> The different levels of picture quality input are listed below in order from highest to lowest. HDMI IN→COMPONENT VIDEO IN→VIDEO IN. However, it will take longer for the picture output to start up when this unit is connected with the HDMI IN terminal. 	—

Disc

Can I play BD-Video and DVD-Video bought in another country?	<ul style="list-style-type: none"> You cannot play: <ul style="list-style-type: none"> BD-Video discs that do not include your region code. DVD-Video discs that do not include your region number or "ALL". Refer to the cover of these operating instructions for more information about your region code and number. Refer to the disc's jacket for more information. 	Cover
Can BD-Video/DVD-Video that does not have a region code/number be played?	<ul style="list-style-type: none"> The region management information for BD-Video/DVD-Video indicates that the disc conforms to industry standards. You cannot play discs that do not conform to industry standards or do not have a region code or number. 	—
Please tell me about disc compatibility with this unit.	<ul style="list-style-type: none"> Refer to "Disc and card information" and "About MP3/JPEG files". You cannot write to a disc with this unit. 	4, 20 —

SD card

What kinds of operations are available on the SD card slot on this unit?	<ul style="list-style-type: none"> The following operations are available. <ul style="list-style-type: none"> Play back JPEG data recorded with a digital camera etc. Play back AVCHD motion pictures recorded with Panasonic High Definition Video Camera If a BD-Video disc supporting BD-Live or BONUSVIEW is used, it is possible to copy secondary video, etc. from the Internet or disc to the card and play it back together with the images on the disc, etc. 	— — 15
What kinds of cards can be used?	<ul style="list-style-type: none"> SD Memory Cards (from 8 MB to 2 GB), SDHC Memory Cards (from 4 GB to 32 GB), miniSD Cards*, and microSD Cards* can be used. * A miniSD Card and a microSD Card must be used in the adaptor included with the memory card. Please confirm the latest information on the following website. http://panasonic.co.jp/pavc/global/cs (This site is in English only.) BD-V To play the virtual package, it is recommended that you use a card that supports SD Speed Class Rating Class 2 and has 1 GB or more free space. 	5 —

Troubleshooting guide

Before requesting service, make the following checks. If you are in doubt about some of the check points, or if the solutions indicated in the chart do not solve the problem, consult your dealer for instructions.

The following do not indicate a problem with this unit:

- Regular disc rotating sounds.
- Image disturbance during search.


To reset this unit

Page

To restore the unit if it freezes due to one of the safety devices being activated	<ul style="list-style-type: none"> Press and hold [⏻/I] on the main unit for 3 seconds. (The settings remain unchanged.) 	—
To return all settings other than some settings to the factory preset	<ul style="list-style-type: none"> Select "Yes" in "Default Settings" in the Setup menu. This returns all values in the Setup menu and the on-screen menu, except for "Remote Control", "IP Address / DNS Settings", "Proxy Server Settings", "DVD-Video Ratings" and "BD-Video Ratings" to the default settings. 	27
To return to the factory preset (No setting)	<ul style="list-style-type: none"> Reset the unit as follows: <ol style="list-style-type: none"> Press [⏻/I] on the unit to turn off the unit. Press and hold [■] and press [⏻/I] and [▲ OPEN/CLOSE] on the unit at the same time for more than 5 seconds until "HELLO" is displayed on the unit. The power is turned on and then turned off automatically. 	—

No power.	● Insert the AC mains lead securely into a household mains socket.	8
The unit switches to standby mode.	● One of the unit's safety devices is activated. Press [⏻/I] on the main unit to turn the unit on.	—

Operation

Cannot operate the television or amplifier/receiver. The remote control doesn't work properly.	<ul style="list-style-type: none"> ● Change the manufacturer code of the remote control. In some cases, even if you change the code, the remote control may not be operated depending on the type of the televisions or amplifier/receivers. ● It may be necessary to set the manufacturer code or the remote control code again after changing the batteries for remote control. ● The remote control and main unit are using different codes. Change the code on the remote control. Press and hold [OK] and the indicated number button at the same time for more than 5 seconds. ● The batteries are depleted. Replace them with new ones. ● You are not pointing the remote control at the main unit's remote control signal sensor during operation. ● Colored glass may obstruct the signal reception/transmission. ● Don't place the signal sensor in direct sunlight or in areas that may be subject to sunlight exposure. 	 10 10, 31 31 5 5 — —
The unit is on but cannot be operated.	<ul style="list-style-type: none"> ● Confirm the correct drive is selected. ● Some operations may be prohibited by the disc. ● The unit is hot ("U59" appears on the display). Wait for "U59" to disappear. ● One of the unit's safety devices may have been activated. Reset the unit as follows: <ol style="list-style-type: none"> 1 Press [⏻/I] on the main unit to switch the unit to standby. If the unit doesn't switch to standby, press and hold [⏻/I] on the main unit for about 3 seconds. The unit is forcibly switched to standby. Alternatively, disconnect the AC mains lead, wait one minute, then reconnect it. 2 Press [⏻/I] on the main unit to switch it on. If the unit still cannot be operated, consult the dealer. ● Condensation has formed. Wait 1 to 2 hours for it to evaporate. 	13 — 32 — —
Play fails to start even when [▶] (PLAY) is pressed. Play starts but then stops immediately.	<ul style="list-style-type: none"> ● Insert the disc correctly with the label facing up. ● The disc is dirty. ● You tried to play a blank disc or unplayable disc on this unit. 	13 33 4, 5
Cannot eject disc.	<ul style="list-style-type: none"> ● The unit may have a problem. While the unit is off, press and hold [■] and [▲ OPEN/CLOSE] on the main unit at the same time for about 5 seconds. Remove the disc and consult the dealer. 	—
Startup is slow. It takes time before play starts.	<ul style="list-style-type: none"> ● Startup takes time in the following situations. <ul style="list-style-type: none"> – Immediately after a power failure or the AC mains lead is connected. – When the unit is connected with an HDMI cable. 	—
Cannot set "On" in "24p Output".	<ul style="list-style-type: none"> ● Only when the unit is connected to the HDMI terminal of a TV supporting 24p you can select "On". In some cases where the unit is connected to a TV via an amplifier/receiver through the HDMI terminals, you may not be able to select "On". In this case, connect the unit to a TV through the HDMI terminal and connect it to the amplifier/receiver through any terminal other than HDMI. 	26

Displays

The display is dim.	● Change "FL Display" in the Setup menu.	25
The elapsed time displayed is actually less than the play time.	● The displayed play time is converted from the number of frames at 29.97 frames (equal to 0.999 seconds) to one second. There will be a slight difference between the time displayed and the actual elapsed time (e.g., actual one-hour elapsed time may display as approximately 59 minutes 56 seconds).	—

TV screen and video

The images from this unit do not appear on the television.	<ul style="list-style-type: none"> ● Make sure that the television is connected to the VIDEO OUT terminal, COMPONENT VIDEO OUT terminals or HDMI AV OUT terminal on this unit. ● Make sure that the television's input setting (e.g., AV 1) is correct. 	6, 7 —
Picture is distorted.	<ul style="list-style-type: none"> ● An incorrect resolution is selected in "Component Resolution", when the television is connected to COMPONENT VIDEO OUT terminals. While stopped, press and hold [■] and [▶] (PLAY) on the main unit at the same time for more than 5 seconds to cancel this setting. Set the item again. ● If "24p Output" is set to "On" when the unit is connected to a TV through any terminal other than HDMI, images may not display properly. In this case, set "24p Output" to "Off". ● The unit and television are using different video systems. While stopped, keep pressing [■] and [▲ OPEN/CLOSE] on the main unit for 5 or more seconds. The system switches from PAL to NTSC or vice versa. ● The system used on the disc doesn't match your television. <ul style="list-style-type: none"> – PAL discs cannot be correctly viewed on an NTSC television. – This unit can convert NTSC signals to PAL60 for viewing on a PAL television ("NTSC Contents Output" in the "Picture"). 	26 26 — — 24
The screen changes automatically.	<ul style="list-style-type: none"> ● When the "Screen Saver Function" in the Setup menu is set to "On", the display may return to the screen saver mode automatically if there is no operation for 10 minutes or more. 	25

(Continued on the next page)

Video is not output in high definition.	<ul style="list-style-type: none"> High definition video cannot be output through the VIDEO OUT terminal. Confirm that the “HDMI Video Mode”, “HDMI Video Format”, and “Component Resolution” in the Setup menu are set properly. The video output resolution is restricted to “576p/480p” when DVD-Video discs and BD-Video discs recorded at a rate of 50 field per second are output from the COMPONENT VIDEO OUT terminals. 	—
		26
		—
Status messages do not appear.	<ul style="list-style-type: none"> Select “Automatic” in “On-Screen Messages” in the Setup menu. 	25
The 4:3 aspect ratio picture expands left and right.	<ul style="list-style-type: none"> Use the television to change the aspect. Refer to your television's operating instructions. When using a component video cable, set “Progressive” to “Video”. If the situation is not restored after that, set “TV Aspect” to “4:3 Pan & Scan”. 	—
Screen size is wrong.		23, 26
There is a lot of after-image when playing video.	<ul style="list-style-type: none"> Turn “3D NR” or “Integrated NR” off if it is on. 	23
There is no apparent change in picture quality when adjusted with the “Picture” menu in the on-screen menu.	<ul style="list-style-type: none"> The effect is less perceivable with some types of video. 	—
The masked-off area is masked in gray.	<ul style="list-style-type: none"> If the “Screen Saver Function” in the Setup menu is set to “Off”, the masked-off area is displayed in black. 	25
Still pictures (JPEG) do not playback normally.	<ul style="list-style-type: none"> The images that were edited on the PC, such as Progressive JPEG, etc., may not playback. 	20

Sound

No sound. Low volume. Distorted sound. Cannot hear the desired audio type.	<ul style="list-style-type: none"> Check the connections and the “Digital Audio Output” settings. Check the input mode on the amplifier/receiver if you have connected one. Press [AUDIO] to select the audio. Turn off “V. Surround” in the following cases. <ul style="list-style-type: none"> When using discs that do not have surround sound effects such as Karaoke discs. When playing bilingual broadcast programs. The sound effects (Re-master, V. Surround, etc.) will not work when the bitstream signal is output from the HDMI AV OUT terminal or the DIGITAL AUDIO OUT terminal. 	6–8, 25
		14
		23
Cannot switch audio.	<ul style="list-style-type: none"> There are discs for which audio cannot be changed because of how the disc was created. When connecting an amplifier/receiver using a optical digital audio cable or an HDMI cable, you cannot switch the audio if “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” is set to “Bitstream”. Set “Dolby D/Dolby D +/Dolby TrueHD” or “DTS/DTS-HD” to “PCM” or connect using AUDIO OUT terminal. 	—
		7, 8, 25

HDMI connections

The images from this unit do not appear on the television.	<ul style="list-style-type: none"> Press [■] and [▶] (PLAY) simultaneously on the unit for more than 5 seconds to shift to more compatible mode with HDMI equipment. However, Dolby Digital Plus, Dolby TrueHD, and DTS-HD audio are not output in bitstream. To output the bitstream, select “Default Settings” to restore the factory presets and make proper settings. To output video from a device connected with an HDMI cable, set “HDMI Video Mode” to “On” in the Setup menu. Picture may not be seen when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices. When “24p Output” is set to “On”, HDMI authentication takes place where 24p images switch to other images, and a black screen is displayed. When “24p Output” is set to “On”, jittering may occur while playing DVD-Video. In this case, turn “24p Output” to “Off”. 	27
Picture is distorted.		26
Jittering occurs.		—
The 4:3 aspect ratio picture expands left and right.		26
Screen size is wrong.		26
When playing DVD-Video using progressive output, one part of the picture momentarily appears to be doubled up.	<ul style="list-style-type: none"> When you use the HDMI AV OUT terminal for video output, follow the steps below for setting. <ol style="list-style-type: none"> 1 Connect this unit to the TV with any cable except the HDMI cable. 2 When you connect with the Component Video cable, set “HDMI Video Mode” to “Off” and “Component Resolution” to “576i/480i” in the Setup menu. 	26
No sound.		—
Low volume.	<ul style="list-style-type: none"> Audio may not be heard when more than 4 devices are connected with HDMI cables. Reduce the number of connected devices. The sound effects will not work when the bitstream signal is output from the HDMI AV OUT terminal or the DIGITAL AUDIO OUT terminal. To output audio from a device connected with an HDMI cable, set “HDMI Audio Output” to “On” in the Setup menu. Depending on the connected equipment, the sound may be distorted if this unit is connected with an HDMI cable. When “BD-Video Secondary Audio” is set to “On”, Dolby Digital Plus, Dolby TrueHD, and DTS-HD are converted to 48 kHz Dolby Digital or DTS Digital Surround and output. LPCM 7.1 channel audio is converted to 5.1 channel audio. In this case, set the “BD-Video Secondary Audio” to “Off”. 	—
Distorted sound.		26
Cannot hear the desired audio type.		—
		25

The capacity of the SD card decreased.	<ul style="list-style-type: none"> When a BD-Video that supports the virtual package is used, and an SD card is in the slot, data may be written to the SD card. Erase the data by using "BD-Video Data Erase", format the card or use a new card. 	15
MPEG-2 motion pictures and music on an SD card cannot be played.	<ul style="list-style-type: none"> Data that can be played from an SD card are AVCHD and JPEG data. 	5
The contents of the card cannot be read.	<ul style="list-style-type: none"> The card is not compatible or the contents on the card may be damaged. Turn off and then turn on the unit again. 	5 —

Network

I can't connect to the network.	<ul style="list-style-type: none"> Has the LAN cable come unplugged? Check that the LAN cable is properly connected. Have you plugged in a modular cable for use with a telephone into the LAN terminal on this unit? Connect with a straight LAN cable. Is the power for the modem or broadband router turned on? Turn the power on for each device. Is there a mistake in the network settings? Follow any instructions you may have received from your ISP (Internet Service Provider) and make changes to the settings. Are the broadband router settings correct? Read the operating instructions for the broadband router. Is the broadband router and/or modem correctly connected? Check the operating instructions for each device and connect accordingly. Check the "Network Settings" and "BD-Live Internet Access" settings. 	8 8 — — — — 24, 27
While using my PC, I cannot connect to the network.	<ul style="list-style-type: none"> Does your Internet Service Provider (ISP) or service contract prevent multiple terminals connecting at the same time? Check the content of your contract. 	—


Other difficulties with playback

Audio and video momentarily pause.	<ul style="list-style-type: none"> This occurs between playlist chapters or scenes (AVCHD). When playing a title recorded on both layers, the unit automatically switches between layers and plays the title in the same way as a normal program. However, video and audio may momentarily cut out when the unit is switching layers. 	— —
BD-Video or DVD-Video is not played.	<ul style="list-style-type: none"> Ensure the disc is for the correct BD-Video region code or DVD-Video region number, and is not defective. You have set a ratings level to limit BD-Video or DVD-Video play. Change this setting. Some BD-Video can only be output with HDMI. 	Cover 24 —
Picture-in-picture is not played with BD-Video.	<ul style="list-style-type: none"> Confirm whether the disc supports picture-in-picture. 	—
The virtual package is not played with BD-Video.	<ul style="list-style-type: none"> Confirm whether the disc supports the virtual package. The inserted SD card does not have sufficient available capacity. The SD card is write-protected. Sub contents copied to an SD card are provided by the disc producer as a part of the BD-Video content. Even if you record images and audio onto an SD card, it cannot be played as a virtual package. 	15 — 5 15
Alternative soundtrack and subtitles cannot be selected.	<ul style="list-style-type: none"> The languages are not recorded on the disc. You may not be able to use the on-screen menu to change the soundtrack and subtitles on some discs. Use the disc's menus to make changes. 	— 13
No subtitles.	<ul style="list-style-type: none"> Subtitles are not recorded on the disc. Turn the subtitles on. Set "Subtitle" on the on-screen menu to "On". 	— 22
Angle cannot be changed.	<ul style="list-style-type: none"> Angles can only be changed during scenes where different angles are recorded. 	—
The resume play function does not work.	<ul style="list-style-type: none"> Memorized positions are canceled when <ul style="list-style-type: none"> pressing [■] several times. opening the disc tray. The resume play function may not work depending on the disc. BD-V: On BD-Video discs including BD-J, the resume play function does not work. 	— — —

When other Panasonic products respond to this remote control

Change the remote control code on the main unit and the remote control (the two must match) if you place other Panasonic products close together.

- Press [SETUP].
- Press [▲, ▼] to select "General" and press [OK].
- Press [▲, ▼] to select "Remote Control" and press [OK].
- Press [▲, ▼] to select the code (1, 2, or 3) and press [OK].
- To change the code on the remote control
While pressing [OK], press and hold the numbered button ([1], [2] or [3]) for more than 5 seconds.
- Press [OK].

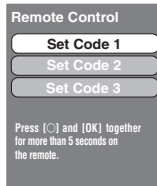

When the following indicator appears on the unit's display and you are unable to operate the unit




The unit's remote control code
Press and hold [OK] and the indicated number button at the same time for more than 5 seconds.

Messages

The following messages or service numbers appear on the television or unit's display when something unusual is detected during startup and use.

On the television		Page
Cannot play.	● You inserted an incompatible disc.	4, 5
Cannot play on this unit.	● You tried to play a non-compatible image. ● Confirm "SD" on the unit's display is not blinking and re-insert the card.	5, 20 —
No disc is inserted.	● The disc may be upside down.	—
⌚ This operation is currently disabled.	● Some operations are prohibited by the unit or disc. For example; — BD-V : During play back, reverse slow-motion or reverse frame-by-frame is not possible. — Depending on the disc, you may not be able to perform search or skip when film previews and warning screens are being played back.	—
Cannot connect. Please check the connection of the LAN cable.	● When a hub is used but its Link lamp does not light up, check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc.	8
IP address is not set.	● The "IP Address" in "IP Address / DNS Settings" is "---. ---. ---. ---". Set the "IP Address", "Subnet Mask", and "Gateway Address". (Select the automatic address acquisition if necessary.)	11
Cannot obtain IP address. Please check the connection or setting of the router.	● If you use a hub, then check the connection between the hub and the router. — Use the UPLINK port of the hub to connect to a router. — Check whether or not the hub's Link lamp lights up. If it does not light up, then check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc.	8
	● If the above conditions are OK, then the router may not operate in DHCP mode. Check the router settings and operation. You may reset the router to restore it to normal.	8
This IP address is already in use. Please check the setting.	● This unit's IP address is used by another device. Check the IP addresses of this unit, personal computers, and routers, etc. If necessary, reconfigure them to avoid IP addresses from being duplicated.	—
Connection test could not be conducted.	● Turn the unit off. Remove the AC mains lead and reconnect it and try again. If the same symptom persists, then consult your dealer.	—
IP address is not set correctly.		—
Connection test was unsuccessful. No reply from Gateway. Please check the connection or setting of the router.	● If you use a hub, then check the connection between the hub and the router. — Use the UPLINK port of the hub to connect to a router. — If the hub's Link lamp does not light up, then check the cable connection, LAN terminal connection, cable itself (a cross cable may be used by mistake), etc.	8
	● Check the "IP Address", "Subnet Mask", and "Gateway Address" in the "IP Address / DNS Settings".	11
	● If the MAC address information is required, then press [SETUP] to display the "Network Settings" menu.	11
Network connection was rejected. Please confirm Setup "BD-Live Internet Access".	● When you set "BD-Live Internet Access" to "Limit" and play BD-Live contents which do not have a content owner certificate, the Internet access of the content is not allowed. If you allow the content to connect to Internet, set "BD-Live Internet Access" to "Permit".	24


On the unit's display

F99	● The unit fails to operate properly. Press [⏻/I] on the main unit to switch the unit to standby for 3 seconds. Now press [⏻/I] on the main unit again to turn the unit on.	—
HDMI ONLY	● Some BD-Video discs can only be output with HDMI.	—
No PLAY	● There is a viewing restriction on a BD-Video or DVD-Video.	24
No READ	● The disc is dirty or badly scratched. The unit cannot play.	—
PLEASE WAIT	● The unit is carrying out internal process. This is not a malfunction. You cannot operate the unit while "PLEASE WAIT" is displayed.	—
SET □ ("□" stands for a number.)	● The remote control and main unit are using different codes. Change the code on the remote control.  Press and hold [OK] and the indicated number button at the same time for more than 5 seconds.	31
UNFORMAT	● You inserted an unformatted DVD-RAM, DVD-RW, +RW, an unused +R, +R DL or DVD-RW (DVD-Video format).	—
UNSUPPORT	● You have inserted a disc the unit cannot play.	4, 5
U59	● The unit is hot. The unit switches to standby for safety reasons. Wait for about 30 minutes until the message disappears. Select a position with good ventilation when installing the unit. Do not block the cooling fan on the rear of the unit.	—
U72 U73	● The HDMI connection acts unusually. — The connected equipment is not HDMI compatible. — Please use HDMI cables that have the HDMI logo (as shown on the cover). — The HDMI cable is damaged.	—

H□□ or F□□	<ul style="list-style-type: none">• There is something unusual. (The service number displayed after H and F depends on the unit's condition.)• Check the unit using the troubleshooting guide. If the service number does not disappear, do the following.<ol style="list-style-type: none">1 Disconnect the plug from the household mains socket wait a few seconds, then reconnect it.2 Press [⏻/I] to turn the power on. (The unit may be fixed.)If the service number does not disappear despite doing the above, request service from the dealer. Inform the dealer of the service number when requesting service.	— 28–31
START	• The system is being restarted during the firmware update. Please do not turn off power.	12
UPD□/□	• The firmware is being updated.	12
FINISH	• The firmware update is complete.	12

Disc and card handling

Clean discs

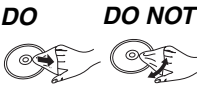

Wipe with a damp cloth and then wipe dry.

Disc and card handling precautions

- Handle discs by the edges to avoid inadvertent scratches or fingerprints on the disc.
- Do not attach labels or stickers to discs (This may cause disc warping, rendering it unusable).
- Do not write on the label side with a ball-point pen or other writing instrument.
- Do not use record cleaning sprays, benzine, thinner, static electricity prevention liquids or any other solvent.
- Do not use scratch-proof protectors or covers.
- Clean any dust, water, or foreign matter from the terminals on the rear side of the card.
- Do not use the following discs:
 - Discs with exposed adhesive from removed stickers or labels (rented discs etc).
 - Discs that are badly warped or cracked.
 - Irregularly shaped discs, such as heart shapes.

Maintenance

Clean this unit with a soft, dry cloth

- Never use alcohol, paint thinner or benzene to clean this unit.
- Before using chemically treated cloth, carefully read the instructions that came with the cloth.

Observe the following points to ensure continued listening and viewing pleasure.

Dust and dirt may adhere to the unit's lens over time, making it impossible to play discs.

Use the lens cleaner (not included) about once every year, depending on frequency of use and the operating environment. Carefully read the lens cleaner's instructions before use.

Lens cleaner: RP-CL720E

- This lens cleaner is sold as specific for DIGA, but can be used without problem on this unit as well.

To dispose or transfer this unit

This unit may record information of your operating procedures. If you discard this unit either by disposal or transfer, then follow the procedures to return all the settings to the factory presets to delete the recorded information. (⇒ 28, “To return to the factory preset”)

- When BD-Video is played back, the operation history may be recorded in the memory of this unit. The recorded contents differ depending on the disc.

Glossary

AVCHD

AVCHD is a new format (standard) for high definition video cameras that can be used to record and play high-resolution HD images.

BD-J

Some BD-Video discs contain Java applications, and these applications are called BD-J. You can enjoy various interactive features in addition to playing normal video.

BD-Live

This is a BD-Video (BD-ROM version 2 Profile 2) that supports the new functions such as Internet connection, etc. in addition to the BONUSVIEW function.

Bitstream

This is the digital form of multi-channel audio data (e.g., 5.1 channel) before it is decoded into its various channels.

BONUSVIEW (Final Standard Profile)

This is a BD-Video (BD-ROM version 2 Profile 1 version 1.1) that supports the new functions such as Picture-in-picture, Secondary Audio, and Virtual Package, etc.

Deep Colour

This unit incorporates HDMI (Deep Colour) technology that can reproduce greater color gradation (4096 steps) when connected to a compatible TV.

You can enjoy exceptionally rich, natural-looking colors, with smooth, detailed gradation and minimal color banding.

[A lower color gradation (256 steps), without Deep Colour, will be reproduced if connected to a TV which does not support Deep Colour.

The unit will automatically set appropriate output to suit the connected TV.]

DNS Server

A server which acts like a telephone directory and translates Internet domain names into IP addresses.

Dolby Digital

This is a method of coding digital signals developed by Dolby Laboratories. Apart from stereo (2-channel) audio, these signals can also be multi-channel audio.

Dolby Digital Plus

Multi-channel audio and higher audio quality is made possible using Dolby Digital Plus. BD-Video supports up to 7.1 channel output.

Dolby TrueHD

Dolby TrueHD is a very high quality audio format that reproduces the studio master audio. BD-Video supports up to 7.1 channel output.

Down-mixing

This is the process of remixing the multi-channel audio found on some discs into fewer channels.

DTS (Digital Theater Systems)

This surround system is used in many movie theaters. There is good separation between the channels, so realistic sound effects are possible.

DTS-HD

DTS-HD is a high-quality, sophisticated audio format used in movie theaters. Previous DTS Digital Surround-compatible equipment can play DTS-HD as DTS Digital Surround audio. BD-Video supports up to 7.1 channel output.

DTS-HD High Resolution Audio

This is a signal format achieved by improving the previous DTS, DTS-ES and DTS 96/24 formats. It is compatible with sampling frequency 96 kHz/48 kHz. BD-Video supports up to 7.1 channel output.

DTS-HD Master Audio

This is a lossless audio format and compatible with 96 kHz/7.1ch or less. In addition, faithful reproduction of the master audio is enabled using lossless audio encoding technology. BD-Video supports up to 7.1 channel output.

Dynamic range

Dynamic range is the difference between the lowest level of sound that can be heard above the noise of the equipment and the highest level of sound before distortion occurs.

Dynamic range compression means reducing the gap between the loudest and softest sounds. This means you can listen at low volumes but still hear dialog clearly.

Folder

This is a place on the disc or SD card where groups of data are stored together. Additional folders can be created within folders, and you can make detailed classifications depending on the folder structure. (⇒ 36)

Film and video

DVD-Video are recorded using either film or video. This unit can determine which type has been used, then uses the most suitable method of progressive output.

Film: Recorded at 25 frames per second (PAL discs) or 24 frames per second (NTSC discs). (NTSC discs recorded at 30 frames per second as well.)

Generally appropriate for motion picture films.

Video: Recorded at 25 frames/50 fields per second (PAL discs) or 30 frames/60 fields per second (NTSC discs). Generally appropriate for TV drama programs or animation.

Frames and fields

Frames refer to the single images that constitute the video you see on your television. Each frame consists of two fields.



Frame

Field

Field

- A frame still shows two fields, so there may be some blurring, but picture quality is generally better.
- A field still shows less picture information so it may be rougher, but there is no blurring.

Gateway

IP address of the electronic device providing Internet access. Usually called a router IP address. (e.g., 192.168.0.1)

HDMI (High-Definition Multimedia Interface)

HDMI is a digital interface for consumer electronic products. Unlike conventional connections, it transmits uncompressed digital video and audio signals on a single cable.

Hub

Used for connecting more than one device to the network.

IP address

A set of numbers which distinguish each device on the network when, for example, connected to the Internet. When using a PC in a LAN to access a PC or device that is not included in the LAN, the IP address is called the local IP address. (e.g., 192.168.0.10)

JPEG (Joint Photographic Experts Group)

This is a system used for compressing/decoding color still pictures. If you select JPEG as the storage system on digital cameras, etc., the data will be compressed to 1/10–1/100 of its original size. The benefit of JPEG is less deterioration in picture quality considering the degree of compression.

LAN (Local Area Network)

A group of linked devices in a company, school or home. Indicates the boundaries of a particular network.

Local storage

This storage area is used as a destination for sub contents for playing virtual packages on BD-Video.

LPCM (Linear PCM)

These are a kind of PCM format.

These are uncompressed digital signals, similar to those found on CDs.

MP3 (MPEG Audio Layer 3)

An audio compression method that compresses audio to approximately one tenth of its size without any significant loss of audio quality.

P4HD (Pixel Precision Progressive Processing for HD)

This is a processor which makes use of an exclusive Panasonic algorithm. Various processing is supported, including a high-level conversion of the TV scanning format from interlace to progressive and a high-level conversion of standard resolution (480i or 576i) video signal to a 1080 High Definition video signal. Consequently, this unit is able to provide video of optimal resolution to the connected TV.

Pan&Scan/Letterbox

In general, DVD-Video are produced with the intention that they be viewed on a widescreen television (16:9 aspect ratio), so images often don't fit regular (4:3 aspect ratio) televisions. Two styles of picture, "Pan & Scan" and "Letterbox", deal with this problem.

Pan&Scan: The sides are cut off so the picture fills the screen.



Letterbox: Black bands appear at the top and bottom of the picture so the picture itself appears in an aspect ratio of 16:9.



PCM (Pulse Code Modulation)

This is one format for converting analog audio into digital audio, enabling you to enjoy digital audio with no hassle.

Picture-in-picture

This is a function of BD-Video that plays the primary video and secondary video simultaneously. For instance, the function is capable of playing the original movie as the primary video while playing video commentary from the film director on a small screen as a secondary video.

Progressive/Interlace

The PAL video signal standard has 625 (or 576) interlaced (i) scan lines, whereas progressive scanning, called 625p (or 576p), uses twice the number of scan lines. For the NTSC standard, these are called 525i (or 480i) and 525p (or 480p) respectively. Using progressive output, you can enjoy the high-resolution video recorded on media such as DVD-Video. Your television must be compatible to enjoy progressive video. Panasonic televisions with 625 (576)/50i · 50p, 525 (480)/60i · 60p input terminals are progressive compatible.

Router

Distinguishes the IP address assigned to each device, such as the PC, and relays the flow of data within the network.

Sampling frequency

Sampling is the process of converting the heights of sound wave (analog signal) samples taken at set periods into digits (digital encoding). Sampling frequency is the number of samples taken per second, so larger numbers mean more faithful reproduction of the original sound.

Subnet mask

Enables efficient network use. A set of numbers which identify which part of the IP address allocated to every device connected to the router is the network portion.

Virtual package

This is a function of BD-Video that plays discs and other media (Local storage) simultaneously. For instance, the function is capable of playing sub contents (secondary video, secondary audio, and subtitles) which are automatically recorded to other media from the Internet or disc.

x.v.Colour™

x.v.Colour™ is a name for devices that are compatible with the xvYCC format, an international standard for expanded color in motion pictures, and that follow the rules for signal transmission. You can enjoy vivid colors of wider color ranges for a more realistic picture when connected to a TV that supports the x.v.Colour™ with HDMI cable.

1080i (1125i)

In one high definition image, 1080 (1125) alternating scan lines pass to create an interlaced image. Because 1080i (1125i) more than doubles current television broadcasts of 480i, the detail is much clearer and creates a more realistic and rich image.

1080p (1125p)

In one high definition image, 1080 (1125) scan lines pass at the same time to create a progressive image. Since progressive video does not alternate scan lines like interlace, there is a minimal amount of screen flicker.

24p

This is a progressive image recorded at a rate of 24 frames per second.


720p (750p)

In one high definition image, 720 (750) scan lines pass at the same time to create a progressive image. Since progressive video does not alternate scan lines like interlace, there is a minimal amount of screen flicker.

■ Structure of folders that can play back on this unit

You can play files on this unit by structure of folders as shown below. However depending on the method of writing data (writing software), play may not be in the order you numbered the folders.

- Folder structure created on a DVD-RAM, BD-RE or an SD card is not displayed.

 : Folder which can be displayed with this unit

***: Numbers

XXX: Letters

*1 ***: from 001 to 999


*2 ***: from 100 to 999

XXX: up to 5 figures

*3 ****: from 0001 to 9999

Structure of MP3 folders in CD-R/CD-RW


Prefix the file names with 3-digit numbers in the order you want to play them.

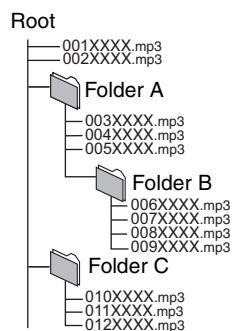

Structures of still picture (JPEG) folders


in CD-R/CD-RW

Files inside a folder are displayed in the order they were updated or taken.

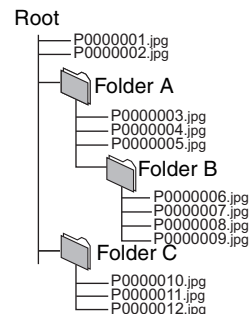


in BD-RE/DVD-RAM

- When the highest level folders are "DCIM" folders, they are displayed as a priority in the "Select Folder" screen.

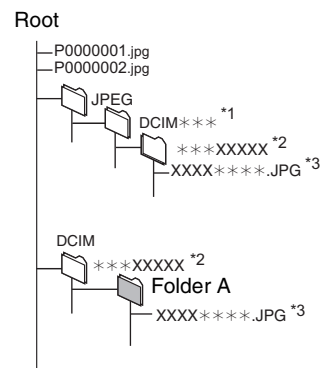

in SD card

- When the highest level folders are "DCIM" folders, they are displayed as a priority in the "Select Folder" screen.

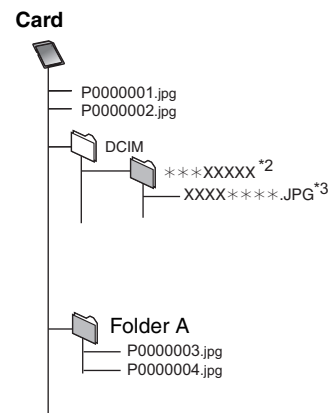


Specifications

Signal system:	PAL/NTSC	Digital audio output:	
Operating temperature range:	+5 to +35 °C	Optical digital output:	Optical terminal
Operating humidity range:	10 to 80 % RH (no condensation)	HDMI AV output	
Playable disc:		Output format:	
BD-Video		480p (525p)/576p (625p)/720p (750p)/1080i (1125i)/1080p (1125p)	
BD-ROM: Version 2		Output connector:	Type A (19 pin)
BD-RE: Version 3 (Single Layer, Dual Layer), JPEG*6		HDMI™ (Deep Colour, x.v.Colour™, High Bit rate Audio)	
BD-R Version 2 (Single Layer, Dual Layer)		• This unit supports "HDAVI Control 3" function.	
DVD-RAM:		SD card slot:	
DVD Video Recording format, AVCHD format*7, JPEG*4		Output connector:	1 system
DVD-R/DVD-RW/DVD-R DL:		Ethernet:	
DVD-Video format*1, DVD Video Recording format*1, AVCHD format*1,7		10BASE-T/100BASE-TX:	1 system
+R/+RW/+R DL:		Optical pick-up:	System with 2 lenses
Video*1, AVCHD format*1,7		Wave length:	782 nm (CDs)/662 nm (DVDs)/405 nm (BDs)
DVD-VIDEO:		LASER Specification	
DVD-Video format		Class 1 LASER Product:	
CD-Audio:		Wave length:	782 nm (CDs)/662 nm (DVDs)/405 nm (BDs)
CD-DA		Laser power:	
CD-R/CD-RW:		No hazardous radiation is emitted with the safety protection	
CD-DA, JPEG*5, MP3		Power supply:	
SD card:		AC 230 to 240 V, 50 Hz	
SD Memory Card*2 formatted FAT12, FAT16, FAT32*3:		Approx. 20 W	
JPEG*4, AVCHD format*7		Power consumption:	
Video output:		Power consumption in standby mode:	less than 0.6 W
Output level:	1.0 Vp-p (75 Ω)	Dimensions (W×D×H)	
Output connector:	Pin jack (1 system)	Excluding the projecting parts:	430 mm×242 mm×49 mm
Component video output:	(1080i/720p/480p/480i: 60 Hz)	Including the projecting parts:	430 mm×249 mm×49 mm
	(1080i/720p/576p/576i: 50 Hz)	Mass:	Approx. 2.6 kg
Y output level:	1.0 Vp-p (75 Ω)	Note	
P _B output level:	0.7 Vp-p (75 Ω)	Specifications are subject to change without notice.	
P _R output level:	0.7 Vp-p (75 Ω)	*1 Finalizing is necessary.	
Output connector:	Pin jack (Y: green, P _B : blue, P _R : red) (1 system)	*2 Includes SDHC card	
Audio output:		Includes miniSD Cards (need a miniSD Adaptor)	
Output level:	2 Vrms (1 kHz, 0 dB)	Includes microSD Cards (need a microSD Adaptor)	
Output connector:	Pin jack	*3 Does not support long file name	
Number of connectors:	2 channel: 1 system	*4 The total combined maximum number of recognizable picture contents and folders: 3000 picture contents and 300 folders.	
Audio performance:		*5 The total combined maximum number of recognizable picture contents and folders: 999 picture contents and 99 folders.	
Frequency response:		*6 The total combined maximum number of recognizable picture contents and folders: 9999 picture contents and 300 folders.	
• DVD (linear audio):	4 Hz to 22 kHz (48 kHz sampling)	*7 AVCHD format V1.0	
	4 Hz to 44 kHz (96 kHz sampling)	• Useable capacity will be less. (SD Card)	
• CD-Audio:	4 Hz to 20 kHz		
S/N ratio:	115 dB		
Dynamic range:	100 dB		
Total harmonic distortion:	0.003 %		

Language code list Enter the code with the numbered buttons.

Abkhazian: 6566	Catalan: 6765	Gujarati: 7185	Lingala: 7678	Rhaeto-Romance: 8465
Afar: 6565	Chinese: 9072	Hausa: 7265	Lithuanian: 7684	Tatar: 8484
Afrikaans: 6570	Corsican: 6779	Hebrew: 7387	Macedonian: 7775	Telugu: 8469
Albanian: 8381	Croatian: 7282	Hindi: 7273	Malagasy: 7771	Russian: 8285
Amharic: 6577	Czech: 6783	Hungarian: 7285	Malay: 7783	Samoan: 8377
Arabic: 6582	Danish: 6865	Icelandic: 7383	Malayalam: 7776	Sanskrit: 8365
Armenian: 7289	Dutch: 7876	Indonesian: 7378	Maltese: 7784	Scots Gaelic: 7168
Assamese: 6583	English: 6978	Interlingua: 7365	Maori: 7773	Serbian: 8382
Aymara: 6589	Esperanto: 6979	Irish: 7165	Marathi: 7782	Serbo-Croatian: 8372
Azerbaijani: 6590	Estonian: 6984	Italian: 7384	Moldavian: 7779	Shona: 8378
Bashkir: 6665	Faroese: 7079	Japanese: 7465	Mongolian: 7778	Sindhi: 8368
Basque: 6985	Fiji: 7074	Javanese: 7487	Nauru: 7865	Singhalese: 8373
Bengali; Bangla: 6678	Finnish: 7073	Kannada: 7578	Nepali: 7869	Slovak: 8375
Bhutani: 6890	French: 7082	Kashmiri: 7583	Norwegian: 7879	Slovenian: 8376
Bihari: 6672	Frisian: 7089	Kazakh: 7575	Oriya: 7982	Somali: 8379
Breton: 6682	Galician: 7176	Kirghiz: 7589	Pashto, Pushto: 8083	Spanish: 6983
Bulgarian: 6671	Georgian: 7565	Korean: 7579	Persian: 7065	Sundanese: 8385
Burmese: 7789	German: 6869	Kurdish: 7585	Polish: 8076	Swahili: 8387
Byelorussian: 6669	Greek: 6976	Laotian: 7679	Portuguese: 8084	Swedish: 8386
Cambodian: 7577	Greenlandic: 7576	Latin: 7665	Punjabi: 8065	Tagalog: 8476
	Guarani: 7178	Latvian, Lettish: 7686	Quechua: 8185	Tajik: 8471
				Tamil: 8465
				Tatar: 8484
				Telugu: 8469
				Thai: 8472
				Tibetan: 6679
				Tigrinya: 8473
				Tonga: 8479
				Turkish: 8482
				Turkmen: 8475
				Twi: 8487
				Ukrainian: 8575
				Urdu: 8582
				Uzbek: 8590
				Vietnamese: 8673
				Volapük: 8679
				Welsh: 6789
				Wolof: 8779
				Xhosa: 8872
				Yiddish: 7473
				Yoruba: 8979
				Zulu: 9085

-If you see this symbol-



Information on Disposal in other Countries outside the European Union

This symbol is only valid in the European Union.
If you wish to discard this product, please contact your local authorities or dealer and ask for the correct method of disposal.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries.
Manufactured under license from Dolby Laboratories. Dolby and the double-D symbol are trademarks of Dolby Laboratories.
Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,226,616; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS is a registered trademark and the DTS logos, Symbol, DTS-HD and DTS-HD Master Audio Essential are trademarks of DTS, Inc. © 1996-2008 DTS, Inc. All Rights Reserved.
U.S. Patent Nos. 6,836,549; 6,381,747; 7,050,698; 6,516,132; and 5,583,936.
This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.
HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
This product is licensed under the AVC patent portfolio license and VC-1 patent portfolio license for the personal and non-commercial use of a consumer to (i) encode video in compliance with the AVC Standard and VC-1 Standard ("AVC/VC-1 Video") and/or (ii) decode AVC/VC-1 Video that was encoded by a consumer engaged in a personal and non-commercial activity and/or was obtained from a video provider licensed to provide AVC/VC-1 Video. No license is granted or shall be implied for any other use. Additional information may be obtained from MPEG LA, LLC. See http://www.mpegla.com .
HDAVI Control™ is a trademark of Panasonic Corporation.
"AVCHD" and the "AVCHD" logo are trademarks of Panasonic Corporation and Sony Corporation.
SDHC Logo is a trademark.
Portions of this product are protected under copyright law and are provided under license by ARIS/SOLANA/4C.
x.v.Colour™ is a trademark.
"Blu-ray Disc" is trademark.
"BD-LIVE" logo is trademark of Blu-ray Disc Association.
"BONUSVIEW" is trademark of Blu-ray Disc Association.

Index

A	Angle	22
	Audio	
	Attribute.....	22
	Changing audio.....	14
	Channel.....	22
	Language.....	22, 24
	AVCHD	34
B	BD-J	34
	BD-Live	15, 34
	BD-Video Ratings	24
	BONUSVIEW	
	(Final Standard Profile).....	15, 34
C	Chapter	17
	Cleaning	
	Disc.....	33
	Lens.....	33
	Main unit.....	33
	Connection	
	Amplifier/Receiver.....	7, 8
	HDMI.....	6, 7
D	Deep Colour	34
	Default Settings	27
	Dialog Enhancer	23
	Direct Navigator	13
	DNS Server	11, 34
	Dolby Digital	16, 25, 34
	Dolby Digital Plus	16, 25, 34
	Dolby TrueHD	16, 25, 34
	DTS	16, 25, 34
	DTS-HD	16, 25, 34
F	Finalize	4
	Firmware	12
	Format	15
H	HDMI	6, 7, 34
I	IP address	11, 34
J	JPEG	17, 20, 35
L	LAN	8, 35
	Language	
	Audio.....	22, 24
	Code list.....	37
	Soundtrack.....	22
	Subtitle.....	22, 24
	Local storage	35
	LPCM	35
M	Maintenance	33
	Menu	
	On-screen.....	22
	Pop-up.....	13
	Setup.....	24
	MP3	19, 20, 35
N	Noise reduction (NR)	
	Integrated NR.....	23
	3D NR.....	23
O	On-screen	
	Menu.....	22
	Status messages.....	14
P	PCM Down Conversion	25
	Picture-in-picture	15
	Playlist	19
	Pop-up Menu	13
	Progressive	23, 35
	Properties	
	Chapter.....	17
	Still picture.....	18
	Proxy Server	12
	P4HD	35
R	Ratings level	24
	Re-master	14, 23
	Remote control code	31
	Repeat play	23
	Resume play function	14
S	SD card	5, 15
	Setup menu	24
	Slideshow	18
	Soundtrack	22
	Status Message	14
	Still pictures	17
	Subtitle	22
T	TV System	26
V	V. Surround	23
	VIERA Link "HDAVI Control™"	21
	Virtual package	15
X	x.v.Colour™	35
	24p	23, 26