



# OWNER'S GUIDE



*Fitness Bikes AND  
Elliptical Trainers*  
SIMPLE, DELUXE, AND PREMIER





**C**ongratulations on choosing a VISION FITNESS product. You've taken an important step in developing and sustaining an exercise program! Your VISION FITNESS product is a tremendously effective tool for achieving your personal fitness goals. Regular use of your VISION FITNESS product can improve the quality of your life in so many ways...

Here are just a few of the health benefits of aerobic exercise:

- Weight Loss
- A Healthier Heart
- Improved Muscle Tone
- Increased Daily Energy Levels
- Reduced Stress
- Help in Countering Anxiety and Depression
- An Improved Self Image

The key to reaping these benefits is to develop the exercise habit. Your new VISION FITNESS product will help you eliminate the obstacles that prevent you from getting in your exercise time. Snow and rain and darkness won't interfere with your workout when you have your VISION FITNESS product in the comfort of your home. This Owner's Guide provides you with basic information on starting an exercise program. A more complete knowledge of your new VISION FITNESS product will assist you in realizing your goal of a healthy lifestyle.

Please contact your authorized VISION FITNESS retailer should service be required. If a question or problem arises which cannot be handled by your VISION FITNESS retailer, please contact us:

VISION FITNESS  
500 South CP Avenue  
P.O. Box 280  
Lake Mills, WI 53551  
Ph: 1.800.335.4348  
Fax: 1.920.648.3373  
[www.visionfitness.com](http://www.visionfitness.com)

# Table of Contents

SAFETY INSTRUCTIONS .....	2
CONTACT HEART RATE .....	4

## ALL BIKE MODELS

ASSEMBLY & MOVING .....	6
STABILIZING & SEAT POSITIONING ..	7
SEAT ADJUSTMENT .....	8
PEDAL STRAP ADJUSTMENT .....	10
SERVICE & TROUBLESHOOTING ...	11

## ALL ELLIPTICAL TRAINER MODELS

ASSEMBLY & MOVING .....	15
PLACEMENT, STABILIZING, & POWER SUPPLY .....	16
FOLDING ELLIPTICAL TRAINER .....	17
SERVICE & TROUBLESHOOTING ...	20

<b>SIMPLE</b> CONSOLE	
DISPLAY CONSOLE OVERVIEW .....	22
DISPLAY DESCRIPTIONS .....	24
USING THE CONSOLE .....	26
THE PROGRAMS .....	27
ENGINEERING MODE .....	28

<b>DELUXE</b> CONSOLE	
DISPLAY CONSOLE OVERVIEW .....	30
DISPLAY DESCRIPTIONS .....	31
THE PROGRAMS .....	33
USING THE PROGRAMS .....	36
ENGINEERING MODE .....	38

<b>PREMIER</b> CONSOLE	
DISPLAY CONSOLE OVERVIEW .....	40
DISPLAY DESCRIPTIONS .....	41
USING THE PROGRAMS .....	44
THE PROGRAMS .....	46
USING CUSTOM PROGRAMS .....	49
USING HEART RATE TRAINING .....	53
USING HEART RATE STRAP .....	54
ENGINEERING MODE .....	56

<b>GENERAL</b>	
HOME WARRANTY:	
X1500, E1500, R1500 .....	58
HOME WARRANTY: X6000, R2050, X6200, E3200, R2250 .....	60
CORPORATE WARRANTY .....	62

ALL BIKES

ALL ELLIPTICALS

SIMPLE

DELUXE

PREMIER

GENERAL

# IMPORTANT SAFETY INSTRUCTIONS

## SAVE THESE INSTRUCTIONS

When using an electrical product, basic precautions should always be followed, including the following:

Read all instructions before using this exercise product.

**WARNING!** To reduce the risk of burns, fire, electrical shock or injury to persons:

- Use this exercise product for its intended use as described in this Owner's Guide. Only use attachments recommended by the manufacturer.
- Never drop or insert any object into any opening.
- Do not remove the product sidecovers. Service should be performed only by an authorized VISION FITNESS retailer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, or if it has been damaged or immersed in water. Please contact your authorized VISION FITNESS retailer for service.
- Keep the cord away from heated surfaces.
- Do not use outdoors.
- To disconnect, turn the switch to the OFF position, then remove plug from outlet.
- Only use the power cord provided with your VISION FITNESS product.
- Never place the power cord under carpeting or place any object on top of the power cord that may pinch and damage it.
- Unplug your product before moving it.

### CHILDREN

- Keep children off your product at all times.
- When the product is in use, young children and pets should be kept at least 10 feet away.

## **OTHER SAFETY TIPS FOR YOUR VISION FITNESS PRODUCT**

**CAUTION!** If you experience chest pains, nausea, dizziness or shortness of breath, stop exercising immediately and consult your physician before continuing.

- Do not wear loose clothing that might catch on any part of the product.
- Read this Owner's Guide before operating this product.


## **CLEANING**

- Clean only with soap and a slightly damp cloth; never use solvents.

## CONTACT HEART RATE

### HAND PULSE HEART RATE SENSORS

The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.

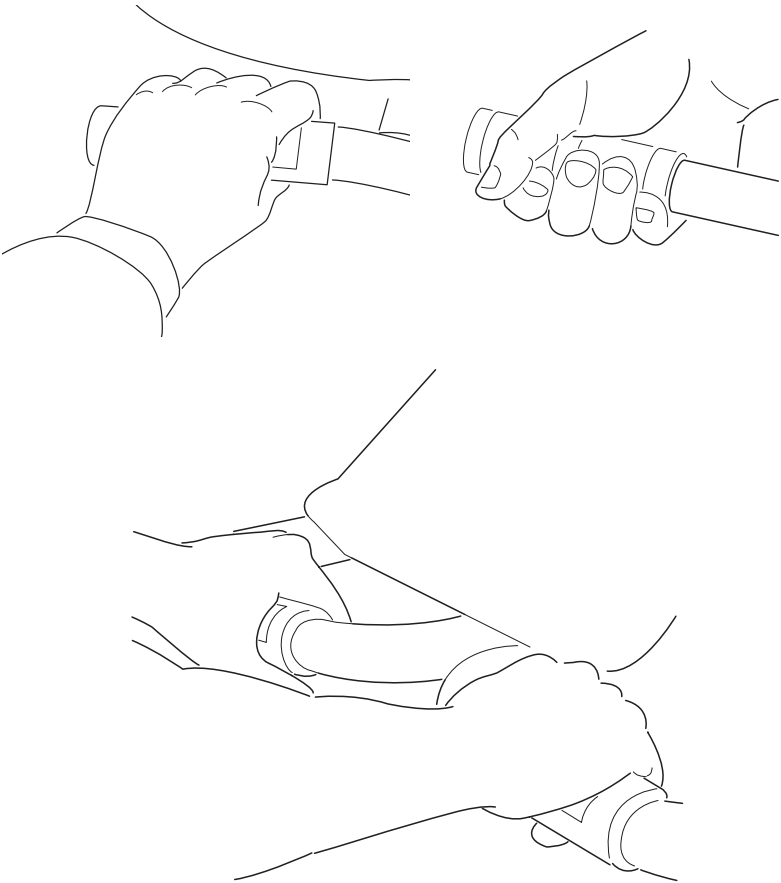




### AVAILABLE CONSOLE OPTIONS



SIMPLE

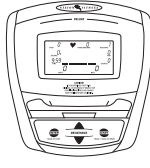

DELUXE



PREMIER



**E1500**

**E3200**

**R1500**

**R2050**

**R2250**


UPRIGHT & SEMI-RECUMBENT FITNESS BIKES

## ASSEMBLY

It is recommended, when possible, that an authorized VISION FITNESS retailer assemble your Bike. If you have elected to assemble this product yourself, for your safety, please read and follow each of the steps in the enclosed assembly instructions. If you have any questions regarding any component or function of your Bike, contact your retailer.

## MOVING

Your VISION FITNESS Bike has transport wheels included for ease of mobility. To move your semi-recumbent Bike, firmly grasp the rear of the seat rail or the rear of the frame assembly. Carefully lift and roll on the transport wheels. To move your upright Bike, firmly grasp the handlebars, carefully tip toward you, and roll on the transport wheels.

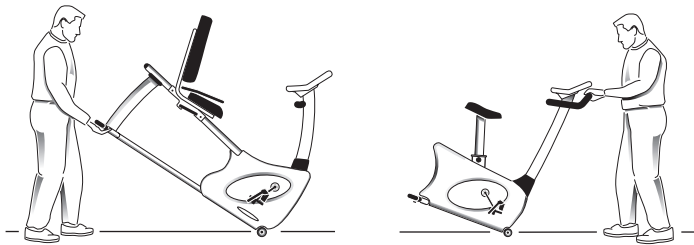

**CAUTION:** Our Bikes are well-built and heavy, weighing up to 150 pounds! Use care and additional help if necessary.


## PLACEMENT IN YOUR HOME

6

Please follow the safety instructions to place your Bike in the location where it will best be used. It is important that you place your Bike in a comfortable and inviting room. Avoid putting your Bike in an unfinished basement or undesirable setting. Exercise adherence will be achieved only if you exercise in an attractive setting.


## STABILIZING THE BIKE

After positioning your Bike in its intended location, check its stability by attempting to rock it side to side. Rocking or wobbling indicates that the Bike needs to be leveled. Determine which leveler is not resting completely on the floor. Loosen the wing nut at the base of the leveler to allow the leveler to rotate. Now rotate the leveler to the left or right until your Bike is stable. Lock the adjustment by tightening the wing nut against the rear foot support.

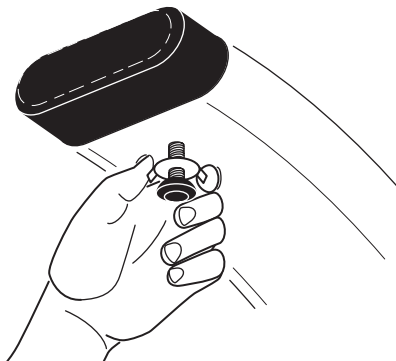


## SEAT POSITIONING

To determine proper seat position, sit on the seat and position the ball of your foot on the center of the pedal. Your knee should bend slightly at the furthest pedal position. You should be able to pedal without locking your knees or shifting your weight from side to side.

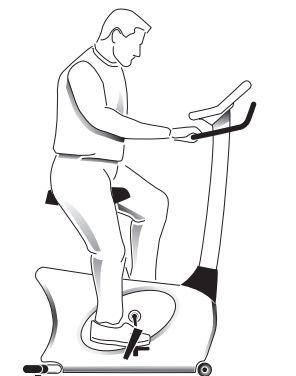

## UPRIGHT SEAT ADJUSTMENT


The Upright Bikes feature a locking seat adjustment pin to easily and safely adjust the seat height. To adjust, loosen the adjustment knob by turning it two half turns counter-clockwise. Pull out the knob to unlock the post, and adjust the post up or down to the desired setting. Release the knob to lock in place. Turn the knob clockwise until tightened. Please check to be sure seat post is locked in place before each use.

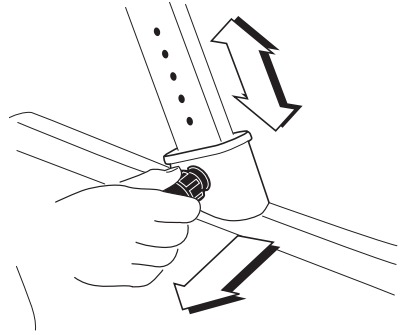

## R1500

### SEMI-RECUMBENT SEAT ADJUSTMENT


While seated on the Bike, lift the seat lever on the right side of the seat to make adjustments. Slide the seat forward or backward to desired location. Push the seat lever down to lock in place.

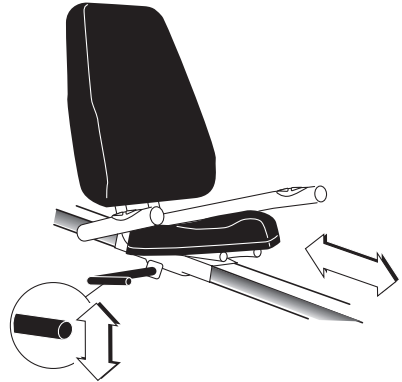

## R2050

### SEMI-RECUMBENT SEAT ADJUSTMENT


While seated on the Bike, push the seat lever forward on the right side of the seat to make adjustments. Slide the seat forward or backward to desired location. Pull the seat lever back to lock in place.

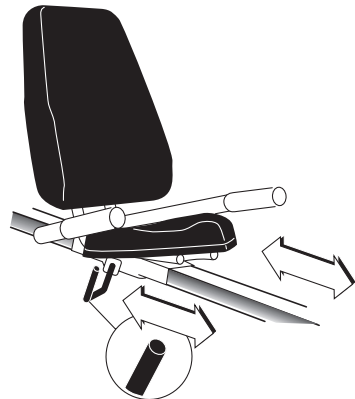

## R2250

### SEMI-RECUMBENT SEAT ADJUSTMENT

While seated on your Bike, lift the spring-loaded seat lever on the right side of the seat to make adjustments. Slide the seat forward or backward to desired location. Release the spring-loaded seat lever and gently attempt to rock forward and backward to assure it is locked in place.

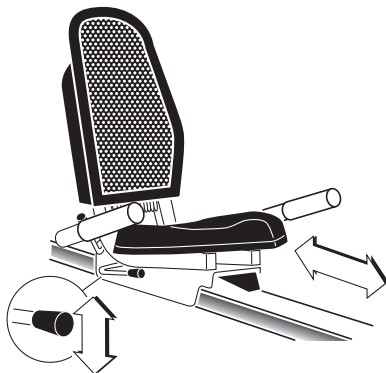


## R2250

### TILTING MESH SEAT BACK


The R2250 comes equipped with a tilting mesh seat back. Tilt adjustments are made with a rotating lever on the user's right side, located slightly behind the handlebar.

To adjust the tilt angle of the seat, rotate the lever down (counter-clock wise) and lean back on the mesh seat until the desired position is achieved. When the position is set, rotate the lever upward (clock wise) until it is snug. The seat comes equipped with a spring return system to return the seat back to its original position when the friction lever is released and the user is not leaning against the backrest.

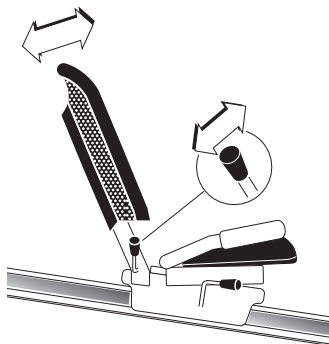

## PEDAL STRAP ADJUSTMENT

The straps are designed to fit your individual foot size and should be adjusted tight enough to keep your feet from slipping. The pedals include spring-loaded clips for easy adjustment. To tighten the strap, pull down the open end of the strap. To loosen the strap, push down on the top of the clip and pull the strap up. Release the clip to lock in place.

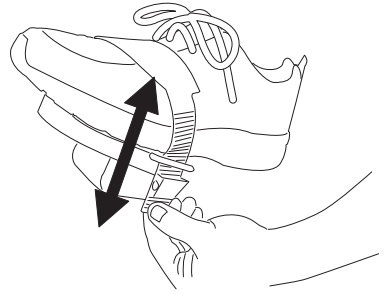

## POWER SUPPLY

Your Bike uses a wall mount external power supply. Use only the power supply provided with your Bike. If you misplace this power supply, please contact your authorized VISION FITNESS retailer for an original replacement. Use of the wrong power supply may cause damage to your Bike.

## SERVICE AND TROUBLESHOOTING

### PREVENTATIVE MAINTENANCE TIPS

- Locate Bike in a cool, dry place.
- Clean the top surface of the pedals regularly.
- Make sure pedals are kept tight to crank arms.
- Keep the display console free from fingerprints and salt build-up caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the bike. Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

### PREVENTATIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

<b>ITEM</b>	<b>WEEKLY</b>	<b>MONTHLY</b>	<b>BI-ANNUALLY</b>	<b>ANNUALLY</b>
DISPLAY CONSOLE	CLEAN	INSPECT		
CONSOLE MOUNTING BOLTS			INSPECT	
FRAME	CLEAN			INSPECT
SEAT FRAME	CLEAN	INSPECT		
HANDLEBARS	CLEAN	INSPECT		
PLASTIC COVERS	CLEAN	INSPECT		
PEDALS AND STRAPS	CLEAN	INSPECT		
POWER CORD				INSPECT

## TROUBLESHOOTING

Our Bikes are designed to be reliable and easy to use. If, however, you have a problem, these troubleshooting steps may reveal the cause.

**PROBLEM:** The console does not light up.


**SOLUTION:** Check to make sure the power switch located on the backside of the console is turned on.

**SOLUTION:** Make sure the power adapter is plugged into the base of the Bike.

**SOLUTION:** Make sure the wire harness is plugged into the back of the console.

**PROBLEM:** The Bike is making a clicking noise.

**SOLUTION:** Using the pedal wrench supplied with your Bike, remove both the left and right pedals, apply grease to the threaded portion and reassemble the pedals onto the Bike. Make sure the pedals are tight.

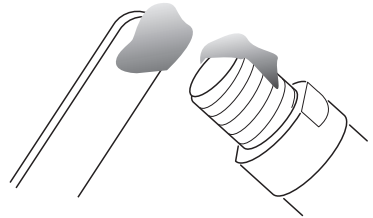

**SOLUTION:** Make sure the pedal straps or your shoe laces are not hitting the side cover.

**SOLUTION:** Assure seat adjustment is tight (See page 8)

**PROBLEM:** The Bike makes a squeaking or creaking noise.


**SOLUTION:** Check and tighten all hardware.



**R2250 ONLY**

**PROBLEM:** The seat on your semi-recumbent Bike rocks from side to side.

**SOLUTION:** With a 13mm wrench, loosen the Fixing Nuts on the side of the seat frame. With an 11mm wrench, pivot the Adjusting Post so the Fixing Nut is at the *top* of the slot. Tighten the Fixing Nut with the 13mm wrench.

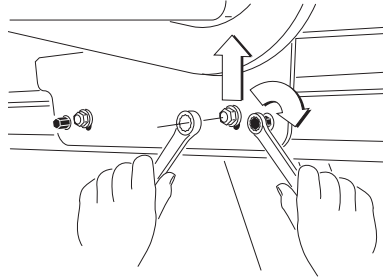

**NOTE:** If the above steps fail to remedy the problem, discontinue use, turn the power off and contact your retailer.

## AVAILABLE CONSOLE OPTIONS




SIMPLE



DELUXE



PREMIER

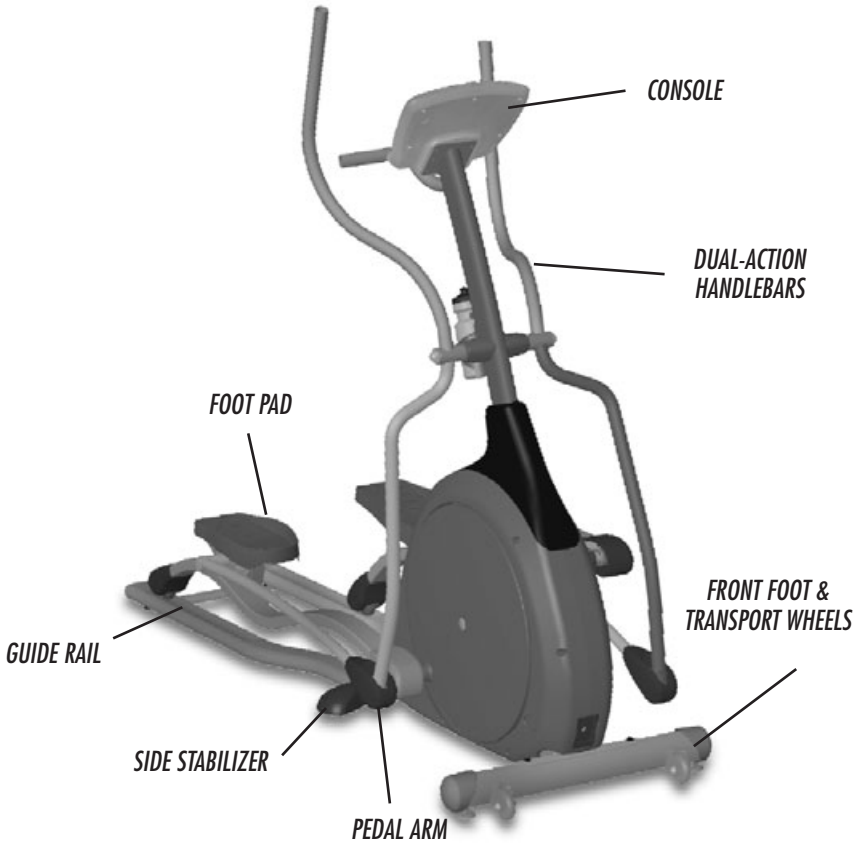

**X1500**

**X6000**

**X6200**

ELLIPTICAL TRAINERS

## ASSEMBLY

It is recommended, when possible, that an authorized VISION FITNESS retailer assemble your Elliptical Trainer. If you have elected to assemble this product yourself, for your safety, please read and follow each of the steps in the enclosed assembly instructions. If you have any questions regarding any component or function of your Elliptical Trainer, contact your retailer.

## MOVING (X1500, X6000)

Your VISION FITNESS Elliptical Trainer has transport wheels included for ease of mobility. To move, firmly grasp the guide rails at rear of the machine. Slowly lift the machine and roll on the front transport wheels.

## MOVING (X6200)

Your VISION FITNESS Elliptical Trainer has transport wheels included for ease of mobility. To move, fold up your Elliptical Trainer, firmly grasp the console mast handlebars, tilt the machine toward you, and roll on the front transport wheels. When tilting, you may need to use your foot supported against the front support tube to prevent the machine from rolling forward.



**CAUTION:** Our Elliptical Trainers are well built and heavy, weighing up to 200 pounds. Use care and additional help if necessary.

## PLACEMENT IN YOUR HOME

Please follow the safety instructions to place the Elliptical Trainer in the location where it will best be used. It is important that you place your Elliptical Trainer in a comfortable and inviting room. Avoid putting your Elliptical Trainer in an unfinished basement or undesirable setting. Exercise adherence will be achieved only if you exercise in an attractive setting.

## STABILIZING THE ELLIPTICAL TRAINER

After positioning the Elliptical Trainer in its intended location, check its stability by attempting to rock it side to side. Excessive rocking or wobbling indicates that your Elliptical Trainer needs to be leveled. Your Elliptical Trainer has levelers located under the guide rails and under the side stabilizers. Determine which leveler is not resting completely on the floor. Loosen the wing nut to the base of the leveler to allow the leveler to rotate. Now rotate the leveler to the left or right until the Elliptical Trainer is stable. Lock the adjustment by tightening the wing nut against the stabilizer or guide rail.



## POWER SUPPLY


Your Elliptical Trainer uses a wall mount external power supply. Use only the power supply provided with your Elliptical Trainer. If you misplace this power supply, please contact your authorized VISION FITNESS retailer for an original replacement. Use of the wrong power supply may cause damage to your Elliptical Trainer.

## X6200 ONLY

### FOLDING YOUR ELLIPTICAL TRAINER


It is important to always follow steps in the correct order when folding your Elliptical Trainer.

**STEP 1:** On the left side of the machine, locate the arrow on the side cover that points to the four o'clock position of the disk. Rotate the disk so that the arrow is pointing to the disk axle (the point where the disk and pedal arm connect.)

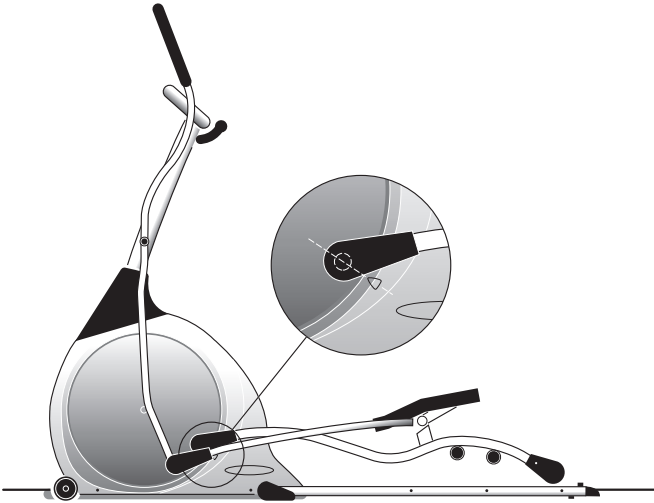


**STEP 2:** Move to the right side of the machine. Simultaneously lift both the pedal arm and the guide rail upon which the pedal arm rests to the vertical position (image A). The locking device, which is mounted to the guide rail, should now be aligned with the cylinder on the backside of the pedal arm. Firmly push the guide rail so it locks in place (image B) with the pedal arm. Check to be sure it is secure before proceeding.

If secure, move to the left side and lift the pedal arm and guide rail into place and lock them into position.

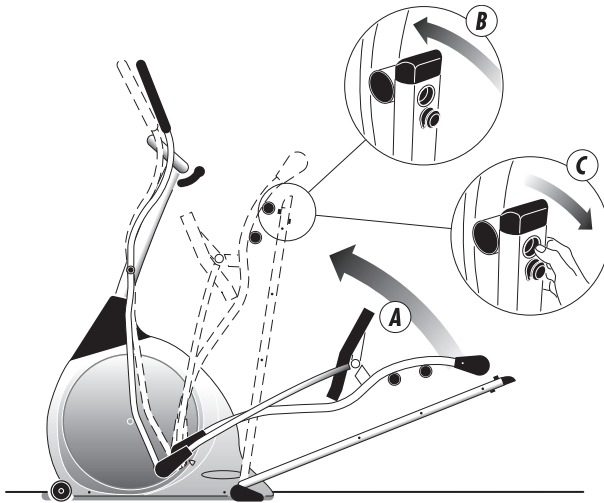

**STEP 3:** To unfold your Elliptical Trainer, push the recessed lock key, found on the underside of the guide rail (image C), to release the lock. Pull the guide rail away from the pedal arm, and lower both to the floor.

Repeat this step on the opposite side to completely unfold your Elliptical Trainer.

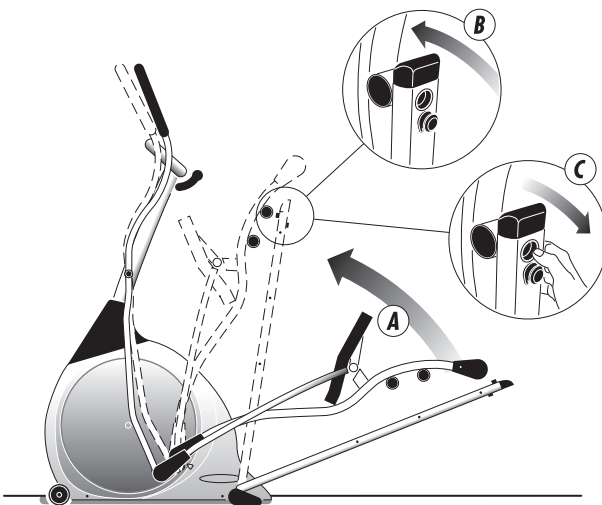

## SERVICE AND TROUBLESHOOTING

### PREVENTATIVE MAINTENANCE TIPS

- Locate Elliptical Trainer in a cool, dry place.
- Make sure all bolts and fasteners are kept tight.
- Keep the display console free from fingerprints and salt build-up caused by sweat.
- Use a cotton cloth with water and a mild cleaning product to clean the Elliptical Trainer. Other fabrics, including paper towels, may scratch the surface. Do not use ammonia or acid-based cleaners.
- Clean the housing thoroughly on a regular basis.

### PREVENTATIVE MAINTENANCE SCHEDULE

Follow the schedule below to ensure proper operation of the product.

<b><i>ITEM</i></b>	<b>WEEKLY</b>	<b>MONTHLY</b>	<b>BI-ANNUALLY</b>	<b>ANNUALLY</b>
DISPLAY CONSOLE	CLEAN	INSPECT		
ALL BOLTS AND HARDWARE			INSPECT	
FRAME	CLEAN			INSPECT
HANDLEBARS	CLEAN	INSPECT		
GUIDE RAILS	CLEAN			
ROLLER WHEELS			INSPECT	
PLASTIC COVERS	CLEAN			
FOOTPLATES	CLEAN			
POWER CORD				INSPECT



## TROUBLESHOOTING

Our Elliptical Trainers are designed to be reliable and easy to use. If, however, you have a problem, these troubleshooting steps may reveal the cause.

**PROBLEM:** The console does not light up.

**SOLUTION:** Check to make sure the power switch located on the backside of the console is turned on.

**SOLUTION:** Make sure the power adapter is plugged into the base of the Elliptical Trainer.

**SOLUTION:** Make sure the wire harness is plugged into the back of the console.

**PROBLEM:** You feel a thump or hitch in the stride motion.

**SOLUTION:** Check assembly and tightness of all hardware.

**SOLUTION:** Wipe off the roller wheels and tracks. They could have taken on debris that is causing the thump.


**SOLUTION:** Check the bolts and the bracket under the footplate. At times, these can be over-tightened which cause friction to the pivoting footplate and may lead to a thump or hitch.

**NOTE:** If the above steps fail to remedy the problem, discontinue use, turn the power off and contact your retailer.

## SIMPLE CONSOLE

### DISPLAY CONSOLE OVERVIEW

The computerized display allows you to select a workout that helps you achieve your fitness goals. It also allows you to monitor the progress and feedback of each workout, so you can track improvements in fitness over time.

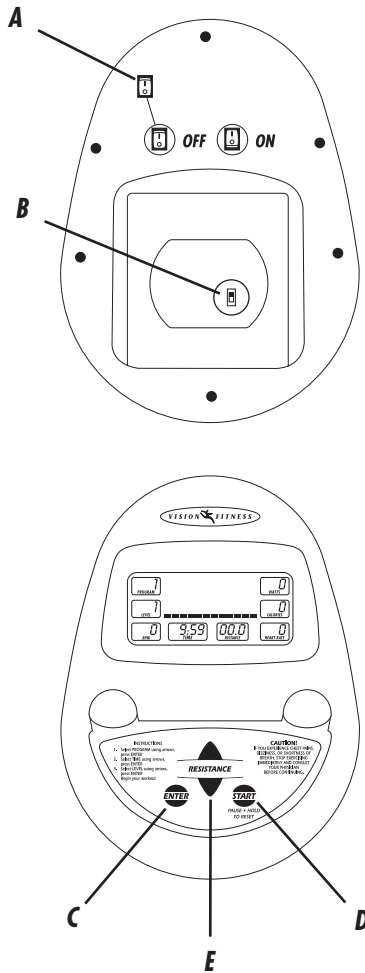

## CONSOLE HARDWARE DESCRIPTIONS

### A. POWER SWITCH

Turn off power to your console if it will not be used for an extended period of time.

### B. MILES/KILOMETER SWITCH

Changes your exercise feedback to the English or Metric system.

### C. ENTER KEY

Use this key in setup mode to select your program, exercise time, and resistance level.

### D. START/PAUSE/HOLD TO RESET KEY


Press the START key to begin exercising in manual mode at the set default time. When exercising, press the START key to pause your workout. To reset press and hold the START key for three seconds.

### E. UP ▲ OR DOWN ▼ ARROWS

Use these keys to change program number, exercise time, and resistance level in setup. During the workout use these keys to increase or decrease resistance.

# SIMPLE CONSOLE

SIMPLE

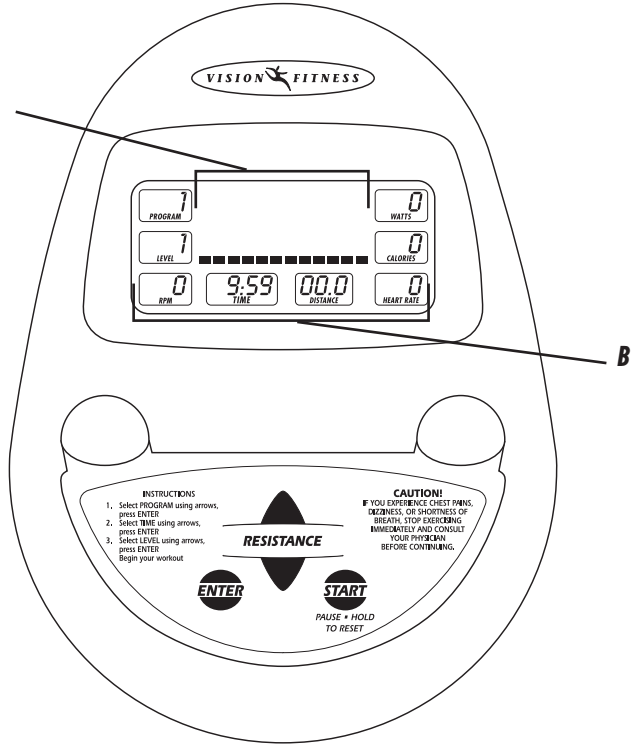

## SIMPLE CONSOLE DISPLAY DESCRIPTIONS

### A. PROFILE DISPLAY

This window provides an 8x12 block profile of your program profile. Each horizontal row of blocks represents your segment time, which is total workout time divided by twelve. Each vertical column of blocks represents the resistance level, which is one block for every two levels.

### B. FEEDBACK DISPLAY


During your workout these windows display exercise feedback about your workout including:

- **PROGRAM:** A number that represents one of seven program profiles that the console may be set to
- **LEVEL:** the current resistance level of your workout
- **RPM:** Revolutions Per Minute (RPM)
- **TIME:** the time elapsed or time remaining in your workout
- **DISTANCE:** the total distance traveled in miles or kilometers since the start of the workout
- **HEART RATE:** displays your heart rate in beats per minute when using the hand pulse grips
- **CALORIES:** an estimate of calories burned since the start of the workout
- **WATTS:** a measurement of workload. It is determined by resistance level and stride rate

## USING THE SIMPLE CONSOLE


### QUICK START

The quickest and easiest way to begin exercising is to simply press **START**. You will begin exercising in manual mode for a default time at the default resistance level. You can change the resistance manually with the arrow keys.

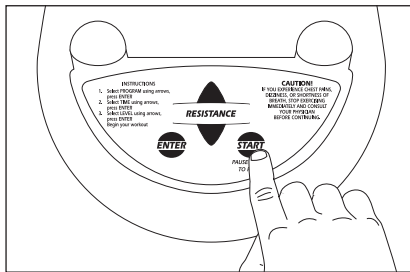


### CHOOSING A PROGRAM

The default program number will be flashing in the **PROGRAM** window. Press the **UP ▲** or **DOWN ▼** keys to scroll through the seven program profile options. Press the **ENTER** key to select a program.

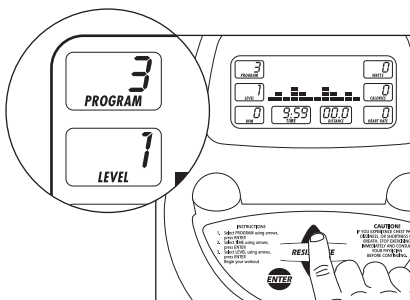


### CHOOSING EXERCISE TIME

The default exercise time will be flashing in the **TIME** window. Use the **UP ▲** or **DOWN ▼** keys to set your desired workout time. Press **ENTER** to select.

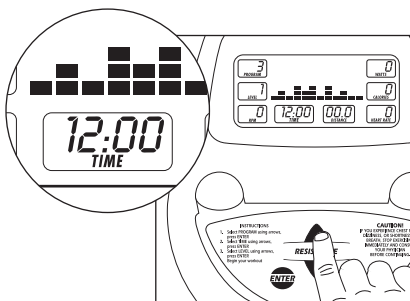

### CHOOSING RESISTANCE LEVEL

The default resistance level will be flashing in the **LEVEL** window. Use the **UP ▲** or **DOWN ▼** keys to set your desired workout resistance level. Press **ENTER** to select.

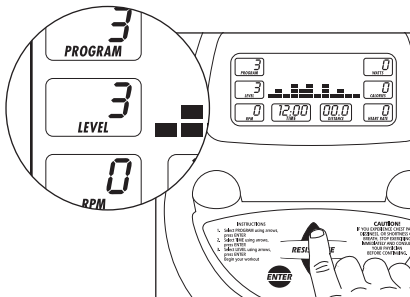

# SIMPLE PROGRAMS



PROGRAM 1 (MANUAL)



PROGRAM 5 (ROLLING HILLS)



PROGRAM 2 (INTERVAL)



PROGRAM 6 (MUSCLE TONER)



PROGRAM 3 (INCLINE)



PROGRAM 7 (MOUNTAIN)



PROGRAM 4 (FAT BURN)

SIMPLE

## ENGINEERING MODE

Engineering mode consists of six optional settings. Use the engineering mode to access information and enable certain features or displays on your console.

### ENTERING AND USING ENGINEERING MODE

- Press and hold the UP ▲ and DOWN ▼ keys for approximately three seconds.
- The console will beep and display engineering modes and optional settings. Use the UP ▲ or DOWN ▼ keys to scroll through the options. Press the ENTER key to select the appropriate mode or setting.

### OPTIONAL SETTINGS

<b>SETTING</b>	<b>DESCRIPTION</b>
ENG1 – LCD TEST	TEST USED BY SERVICE TECHNICIANS TO TEST LCD DISPLAYS
ENG2 – HARDWARE TEST	TEST USED BY SERVICE TECHNICIANS TO TEST EDDIE CURRENT BRAKE SYSTEM
ENG2 – ACCUMULATED TIME/ ACCUMULATED DISTANCE	MEASURES TOTAL TIME USED IN HOURS AND MEASURES TOTAL DISTANCE USED IN MILES
ENG3 – MACHINE AND UNITS MODE	USED BY SERVICE TECHNICIANS TO CHECK IF THE CONSOLE IS SET TO BIKE MODE OR ELLIPTICAL MODE, SHOWS YOU IF THE EXERCISE FEEDBACK IS SET TO THE ENGLISH (MILES) OR METRIC (KILOMETERS) SYSTEM AND DISPLAYS THE SOFTWARE VERSION
ENG4 – DEFAULT TIME SET	ALLOWS YOU TO SET THE TIME THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS
ENG5 – DEFAULT LEVEL SET	ALLOWS YOU TO SET THE LEVEL THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS
ENG6 – PRODUCT SELECTION AND MODEL CONFIGURATION	ALLOWS YOU TO CONFIGURE YOUR CONSOLE TO THE PROPER PRODUCT (BIKE OR ELLIPTICAL) AND MODEL NUMBER IF IT WAS NOT DONE CORRECTLY IN THE INITIAL SET UP

- Use the UP ▲ and DOWN ▼ keys within each setting to change the setting.
- Press the ENTER key to save settings.
- To EXIT engineering mode, press and hold the START key for three seconds.







# DELUXE CONSOLE

## DISPLAY CONSOLE OVERVIEW

The computerized display allows the user to select a workout that meets their desired fitness goals. It also allows the user to monitor the progress and feedback of each workout, so they can track improvements in overall fitness over time.

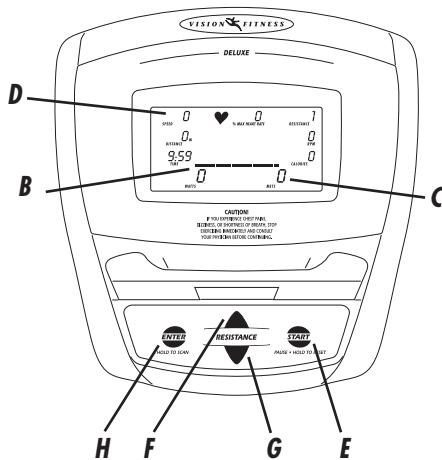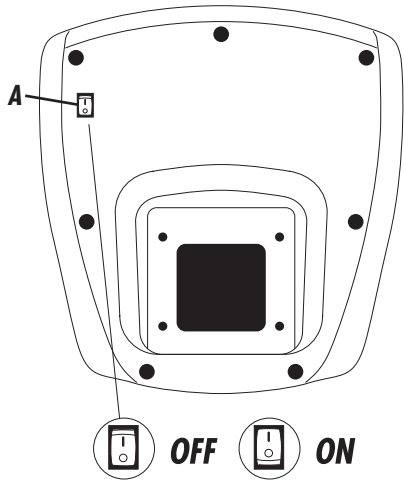

## DELUXE CONSOLE DISPLAY DESCRIPTIONS

### A. POWER SWITCH

Turn off power to your console if it will not be used for an extended period of time.

### B. PROFILE DISPLAY

This window provides a 10x16 block profile of the workout segments you are about to complete or have completed and the level of resistance for each segment. Each column represents 1/16 of your total workout time. Each row represents two resistance levels.

### C. MESSAGE BAR

The LCD display has an alpha-numeric scrolling text bar which provides step-by-step instructions in the setup mode, and instructions, feedback or motivational messages during your workout and at the end of your workout.

### D. FEEDBACK DISPLAY

During your workout, these display exercise feedback about your workout, including:

**TIME:** the time elapsed or the time remaining in your workout.

**SPEED:** the speed you are exercising at in miles or kilometers per hour.

**DISTANCE:** the total distance traveled in miles or kilometers since the start of your workout.

**RPM:** this window provides feedback on the stride rate, pedal rate in Revolutions Per Minute (RPM); one revolution is two full strides.

**WATTS:** measurement of workload; one watt is equal to six kilogram-meters per minute.

**CALORIES:** an estimate of calories burned since the start of the workout

**RESISTANCE:** the current resistance level of your workout.

**HEART RATE:** displays your heart rate in beats per minute when using the hand pulse grips.

**% OF MAX HEART RATE:** displays the percent of your predicted maximum heart rate.

**METS:** a measurement of oxygen consumption; one MET equals the approximate amount of oxygen consumed per minute by a person at rest.

## DELUXE CONSOLE DISPLAY DESCRIPTIONS (continued)

### **E. START/PAUSE/HOLD TO RESET KEY**

Press the START key to begin exercising at the set default time. Press START when instructed to by the scrolling LCD message center to begin a program. When exercising, press the START key to pause your workout. To reset press and hold the START key for three seconds.

### **F. UP ▲ KEY**

Use this key in setup mode to select programs and change display values. During your workout, use this key to increase resistance.

### **G. DOWN ▼ KEY**

Use this key in setup mode to select programs and change display values. During your workout, use this key to decrease resistance.

### **H. ENTER KEY**

Use this key in setup mode to select your personal settings prior to your workout. During your workout, use this key to toggle between Heart Rate and % Max. Heart Rate feedback.

## THE DELUXE CONSOLE PROGRAMS

### WORKOUT OVERVIEW

#### QUICK START

Simply press START and you will skip the setup of specific workouts and begin exercising at a constant level (manual) workout. The resistance levels do not change automatically, but you can adjust the resistance with the arrows as you choose.

**NOTE:** Because you did not go through setup mode, the computer will use default values to calculate your feedback information.

**MANUAL** is a workout in which the resistance level does not change unless you change it.



**SPRINT 8™** is an anaerobically-based interval program. It is effective in recruiting fast twitch muscle fibers and improving athletic performance.



**INTERVAL** is an efficient workout that strengthens your cardiovascular system by alternating work intervals with recovery intervals. Be sure to challenge yourself with intense work intervals.



**FAT BURN** is a program intended to target your stored body fat. This program is generally used at a slightly lower intensity, but runs for longer durations than other programs (30 to 60 minutes is recommended).



**MOUNTAIN** features gradual increases in resistance to simulate riding through a mountain range. This is a great program for building strength and endurance.



**RANDOM** is a program for users who enjoy variety in their daily workout routine. When this program is selected the computer will randomly select a resistance level for each segment of the workout based on the resistance level that the user chooses in set-up mode.



**WATTS** is a program that lets the user exercise at a set work level. As you increase your RPM, your resistance will decrease; if you decrease your RPM, your resistance will increase.



## USING THE SPRINT 8 PROGRAM

The Sprint 8 program is an anaerobic interval program designed to build muscle, improve speed, and naturally increase the release of Human Growth Hormone (HGH) in your body. Producing HGH through exercise and a proper diet has been shown as an effective way to burn fat and build lean muscle mass according to Phil Campbell, author of *Ready, Set, Go! Synergy Fitness*. Please go to Mr. Campbell's website [www.readysetgofitness.com](http://www.readysetgofitness.com) for more details about this radical new approach to fitness.

The SPRINT 8 program features intense sprint intervals followed by recovery intervals. The program includes the following phases:


1. **WARM-UP** should gradually increase your heart rate and increase respiration and blood flow to working muscles. The warm-up is controlled by the user to meet your specific needs.
2. **INTERVAL TRAINING** starts immediately after the warm-up with a 30-second sprint interval. Seven recovery intervals of one minute and 30 seconds will alternate with the eight 30-second sprint intervals. The message display will prompt you to increase your RPMs during the sprint interval and decrease RPMs during the recovery interval. A difference of 30 to 50 RPM between sprint interval and recovery interval is recommended for bikes. A difference of 20 to 30 RPMs between sprint interval and recovery interval is recommended for elliptical trainers.
3. **COOL-DOWN** helps return your body's systems to resting levels. Less demand is placed on your heart during recovery if an appropriate cool-down is used following the exercise.

Due to the fact that this is a specialized training program, total workout time is not displayed during the program. The interval time is displayed in the time window instead. It takes only 20 minutes to complete the SPRINT 8 workout.

## USING THE PROGRAMS


### SELECTING QUICK START

The easiest way to begin exercising is to simply press the START key. You will begin exercising at a MANUAL resistance program in which you can change the resistance levels to meet your goals. Current default settings will be used to determine exercise feedback.

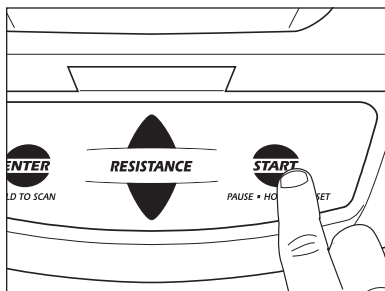


### CHOOSING A PROGRAM

Press the UP ▲ or DOWN ▼ keys to scroll through the program selections (Manual, Sprint 8, Intervals, Fat Burn, Mountain, Random, Watts). When you arrive at your chosen workout, press the ENTER key.

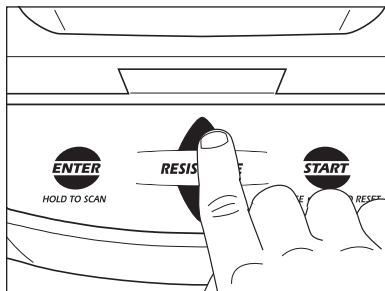

### ENTERING AGE


When prompted by the message center to enter your age, use the UP ▲ arrow or DOWN ▼ arrow to adjust displayed age to the correct value. This information will affect your "% Max. Heart Rate" feedback.

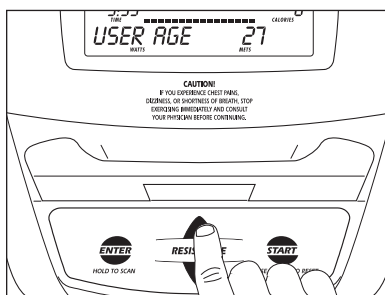




## ENTERING TIME

When prompted by the message center to enter a time, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed exercise time to a desired value.

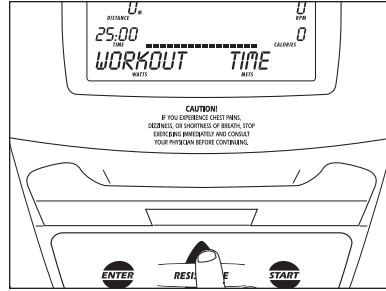

## ENTERING RESISTANCE LEVEL


When prompted by the message center to enter resistance level, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed resistance level. There are 20 levels of resistance to choose from in each program. The resistance level varies by program.

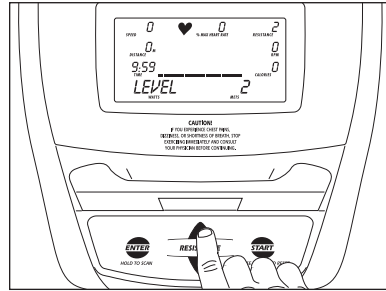

The WATTS program will ask you to set the desired WATT level instead of resistance levels. The WATT level will range from 40 to 250 in increments of five.


## ENTERING WEIGHT

When prompted by the message center to enter weight, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed weight to equal your current body weight. This information is necessary to give accurate exercise feedback for calorie and MET calculations.

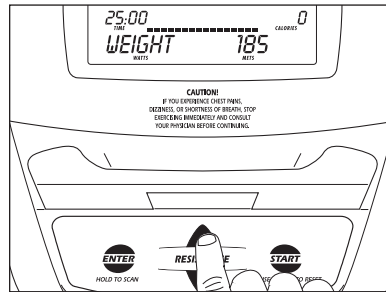

## STARTING

Press START to begin your workout.

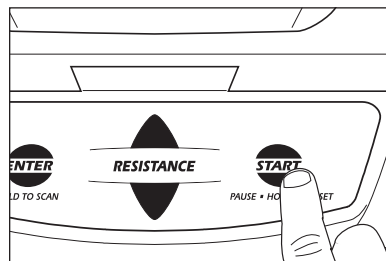

## ENGINEERING MODE

Engineering mode consists of 13 optional settings. Use the engineering mode to enable certain features or displays on your console.

### ENTERING AND USING ENGINEERING MODE

- Press and hold the UP ▲ and DOWN ▼ keys for approximately three seconds.
- The console will beep and display engineering modes and optional settings. Use the UP ▲ or DOWN ▼ keys to scroll through the options. Press the ENTER key to select the appropriate mode or setting.

### OPTIONAL SETTINGS

<b>SETTING</b>	<b>DESCRIPTION</b>
P1 – SET MAX TIME	ALLOWS YOU TO SET THE MAXIMUM TIME A PROGRAM CAN RUN FOR.
P2 – SET USER TIME	ALLOWS YOU TO SET THE TIME THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS.
P3 – SET USER AGE	ALLOWS YOU TO SET THE AGE THAT THE COMPUTER WILL DEFAULT TO DURING SETUP.
P4 – SET WEIGHT	ALLOWS YOU TO SET THE WEIGHT THAT THE COMPUTER WILL DEFAULT TO DURING SETUP.
P5 – DEFAULT RESISTANCE LEVEL	ALLOWS YOU TO SET THE RESISTANCE LEVEL THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS.
P6 – DEFAULT LANGUAGE	ALLOWS YOU TO CHOOSE, FROM THE AVAILABLE LANGUAGES, WHAT LANGUAGE TEXT WILL BE DISPLAYED IN.
P7 – UNIT	ALLOWS YOU TO SET EXERCISE FEEDBACK TO ENGLISH (MILES) OR METRIC (KILOMETERS) SYSTEM.
P8 – MACHINE TYPE	ALLOWS YOU TO SET YOUR CONSOLE TO BIKE MODE OR ELLIPTICAL MODE.
P9 – ACCUMULATED DATA	ALLOWS YOU TO VIEW THE TOTAL TIME IN HOURS AND TOTAL DISTANCE IN MILES OR KILOMETERS ACCUMULATED ON YOUR PRODUCT.
P10 – DISPLAY TEST	TEST USED BY SERVICE TECHNICIANS TO TEST LCD DISPLAYS.
P11 – HARDWARE TEST	TEST USED BY SERVICE TECHNICIANS TO TEST EDDIE CURRENT BRAKE SYSTEM.
P12 – BEEPER MODE	ALLOWS YOU TO TURN THE BEEPER ON OR OFF.
P13 – VERSION	ALLOWS SERVICE TECHNICIANS TO VIEW SOFTWARE VERSION USED BY CONSOLE.


- Use the UP ▲ and DOWN ▼ keys within each setting to change the setting.
- Press the ENTER key to save settings.
- To EXIT engineering mode, press and hold the START key for three seconds.



## PREMIER CONSOLE

### DISPLAY CONSOLE OVERVIEW

The computerized display allows the user to select a workout that meets their desired fitness goals. It also allows the user to monitor the progress and feedback of each workout so they can track improvements in overall fitness over time.

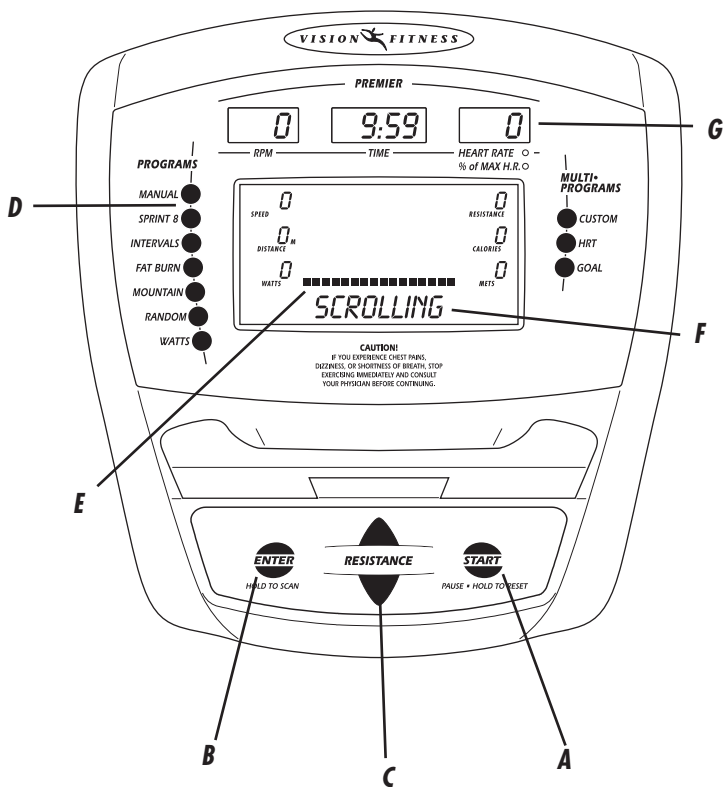

## PREMIER CONSOLE DISPLAY DESCRIPTIONS

### A. START/HOLD TO RESET

Press the START key to begin a MANUAL workout immediately without having to set individual information. When the program begins, you have the ability to adjust resistance levels with the ARROW keys. Feedback information will be calculated using default settings.

**PAUSE:** If you need to PAUSE your program during a workout, pressing the START key will PAUSE your program for five minutes. Pressing START will return you to your workout.

**RESET:** If you need to RESET the console during your workout, you can do so by holding down the START key for three seconds or until the display resets.

### B. ENTER/HOLD TO CHANGE FEEDBACK DISPLAY

This key is used after entering each piece of information in setup such as Age, Weight, or Level.

**SCAN:** When exercising in a program, pressing the ENTER key will allow you to change what is displayed in the Heart Rate Feedback window. Press ENTER to switch between Heart Rate and % Max. Heart Rate. If you hold down the ENTER key for three seconds during your workout, the SCAN function will automatically alternate feedback display views.

### C. ARROW KEYS

These keys are used to change values in setup mode prior to your workout. During your workout, they are used to change workout levels. In HRT® programs, they are used to change your target heart rate.

### D. PROGRAM KEYS

These keys provide quick access to your favorite workouts. There is no need to scroll through the programs to find the one you want. Simply press the program key you want and you begin user setup.

**CHANGE ON THE FLY:** You can change your program “on the fly” by simply pressing another program key. The SPRINT 8™ and Multi-Programs can not be changed to or from “on the fly”.

## PREMIER CONSOLE DISPLAY DESCRIPTIONS (continued)

### E. PROFILE DISPLAY

The LCD display screen provides a profile of your workout, this includes the workout segments you are about to complete as well as the ones you have already completed, and the level of resistance for each segment.

### F. MESSAGE/SCROLLING TEXT BAR

This alpha-numeric scrolling bar provides step-by-step instructions in the setup mode, and instructions, feedback or motivational messages during your workout and at the end of your workout.

**FEEDBACK DISPLAY:** During your workout the LCD displays exercise feedback about your workout, including:

**SPEED:** your speed in miles or kilometers per hour.

**DISTANCE:** the total distance traveled in miles or kilometers since the start of your workout.

**WATTS:** measurement of workload; one watt is equal to six kilogram-meters per minute.

**RESISTANCE:** the current resistance level of your workout.

**CALORIES:** an estimate of calories burned since the beginning of the workout.

**METS:** a measurement of oxygen consumption; one MET equals the approximate amount of oxygen consumed per minute by a person at rest.


**G. FEEDBACK WINDOWS:** During your workout these three windows display exercise feedback about your workout.

**TIME:** this window provides feedback on the time elapsed or the time remaining in your workout.

**RPM:** this window provides feedback on the stride rate, pedal rate in Revolutions Per Minute (RPM); one revolution is two full strides.

**HEART RATE/% MAX HEART RATE:** this window provides feedback on your current Heart Rate and the percent of your predicted maximum heart rate (% Max HR).


**ON/OFF SWITCH** Turn your console off if you will not use it for an extended period of time.

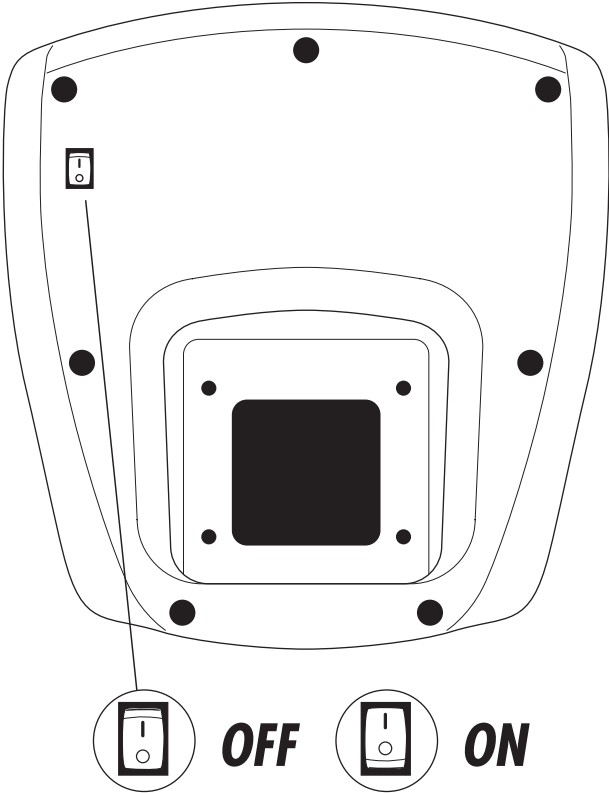

## USING THE PROGRAMS


### SELECTING QUICK START

The easiest way to begin exercising is to simply press the START key. You will begin exercising at a MANUAL resistance program in which you can change the resistance levels to meet your goals. Current default settings will be used to determine exercise feedback.

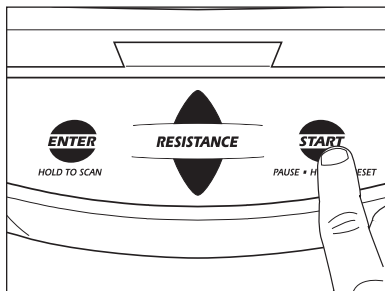


### SELECTING A PROGRAM

Each program has its own program key. Press the key of the program you would like to use. You can also use the arrow keys to scroll through the program options and see the exercise profiles for each of the programs.

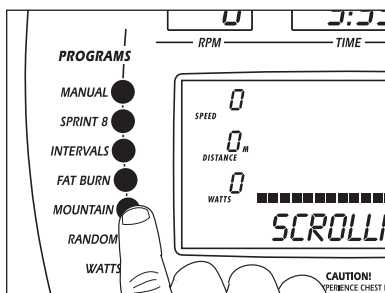

### ENTERING AGE


When prompted by the message center to enter your age, use the UP ▲ arrow or DOWN ▼ arrow to adjust displayed age to the correct value. This information is necessary for the HRT® programs and will affect your “% Max. Heart Rate” feedback.

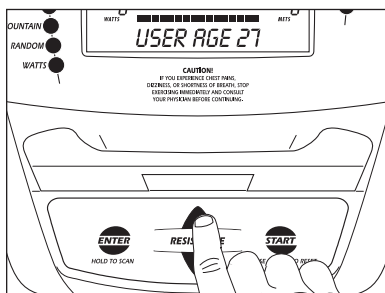




## ENTERING TIME

When prompted by the message center to enter a time, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed exercise time to a desired value.

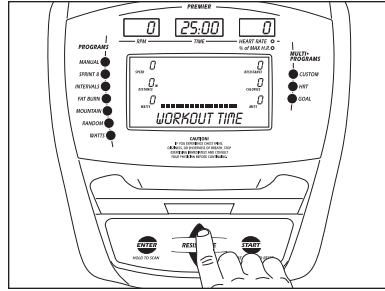

## ENTERING RESISTANCE LEVEL

When prompted by the message center to enter resistance level, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed resistance level. There are 20 levels of resistance to choose from in each program. The resistance level varies by program.

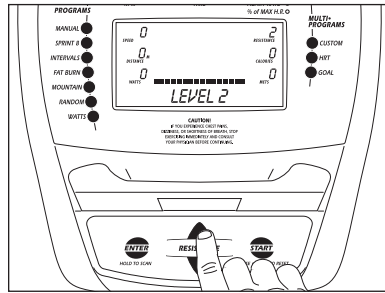


The WATTS program will ask you to set the desired WATT level instead of resistance levels. The WATT level will range from 40 to 250 in increments of five.

The TARGET HRT, HRT HILL, and HRT INTERVAL programs will set your Target Heart Rate in the place of resistance level. The console will display your Target Heart Rate and give you the opportunity to adjust this value if you wish.


## ENTERING WEIGHT

When prompted by the message center to enter weight, use the UP ▲ arrow and DOWN ▼ arrow to adjust the displayed weight to equal your current body weight. This information is necessary to give accurate exercise feedback for calorie and MET calculations.

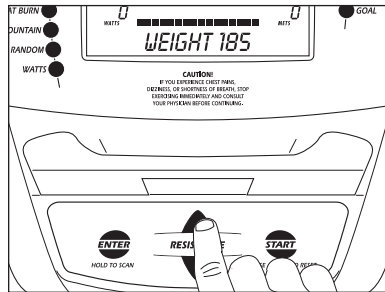

## STARTING

Press START to begin your workout.

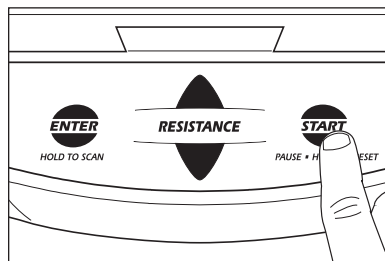

## PREMIER CONSOLE PROGRAMS

### WORKOUT OVERVIEW

#### QUICK START

Simply press **START** and you will skip the setup of specific workouts and begin exercising at a constant level (manual) workout. The resistance levels do not change automatically, but you can adjust the resistance with the arrows as you choose.

**NOTE:** Because you did not go through setup mode, the computer will use default values to calculate your feedback information.

**MANUAL** is a workout in which the resistance level does not change unless you change it.



**SPRINT 8™** is an anaerobically-based interval program. It is effective in recruiting fast twitch muscle fibers and improving athletic performance.



**INTERVAL** is an efficient workout that strengthens your cardiovascular system by alternating work intervals with recovery intervals. Be sure to challenge yourself with intense work intervals.



**FAT BURN** is a program intended to target your stored body fat. This program is generally used at a slightly lower intensity, but runs for longer durations than other programs (30 to 60 minutes is recommended).



**MOUNTAIN** features gradual increases in resistance to simulate riding through a mountain range. This is a great program for building strength and endurance.



**RANDOM** is a program for users who enjoy variety in their workout routine. When this program is selected the computer will randomly select a resistance level for each segment of the workout based on the resistance level that the user chooses in set-up mode.



**WATTS** is a program that lets the user exercise at a set work level. As you increase your RPM, your resistance will decrease; if you decrease your RPM, your resistance will increase.



## USING THE SPRINT 8 PROGRAM

The Sprint 8 program is an anaerobic interval program designed to build muscle, improve speed, and naturally increase the release of Human Growth Hormone (HGH) in your body. Producing HGH through exercise and a proper diet has been shown as an effective way to burn fat and build lean muscle mass according to Phil Campbell, author of *Ready, Set, Go! Synergy Fitness*. Please go to Mr. Campbell's website [www.readysetgofitness.com](http://www.readysetgofitness.com) for more details about this radical new approach to fitness.

The SPRINT 8 program features intense sprint intervals followed by recovery intervals. The program includes the following phases:


1. **WARM-UP** should gradually increase your heart rate and increase respiration and blood flow to working muscles. The warm-up is controlled by the user to meet your specific needs.
2. **INTERVAL TRAINING** starts immediately after the warm-up with a 30-second Sprint interval. Seven Recovery Intervals of one minute and 30 seconds will alternate with the eight 30-second Sprint Intervals. The message display will prompt you to increase your RPMs during the Sprint Interval and decrease RPMs during the Recovery Interval. A difference of 30 to 50 RPMs between Sprint Interval and Recovery Interval is recommended for bikes. A difference of 20 to 30 RPMs between Sprint Interval and Recovery Interval is recommended for elliptical trainers.
3. **COOL-DOWN** helps return your body's systems to resting levels. Less demand is placed on your heart during recovery if an appropriate cool-down is used following the exercise.

Due to the fact that this is a specialized training program, total workout time is not displayed during the program. The interval time is displayed in the time window instead. It takes only 20 minutes to complete the SPRINT 8 workout.

## USING CUSTOM PROGRAMS

The CUSTOM USER program allows five separate workouts to be completed, saved, and then stored for future use.

Setup for the CUSTOM USER programs begins just as any other program. The user will press the CUSTOM program key.

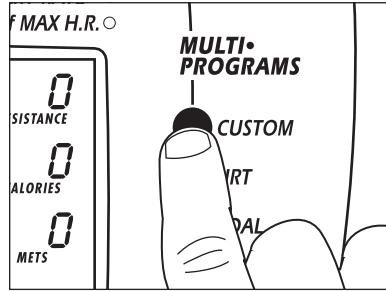

1. Use the arrows to select one of five CUSTOM USER programs.
2. Press ENTER to select.
3. Set user age, set time, and set weight just as any other program.

When you have entered your information you will be asked to press START to begin the program and informed that you can adjust resistance as desired to create a new program. As you perform your workout and change your resistance level the CUSTOM USER program will save these changes throughout the program. Your settings will be saved to provide an identical program that can be selected for your next exercise session.

At the end of the program you will be prompted to press ENTER to save.

## GOAL PROGRAMS


The GOAL programs allow you to select one of three programs, TIME GOAL, CALORIE GOAL, and DISTANCE GOAL. These goals are designed to run until you have reached your set target goal.

Setup for the GOAL PROGRAMS begins just as any other program.


The user will press the GOAL program key.

1. Use the arrows to select TIME GOAL, CALORIE GOAL, or DISTANCE GOAL program.
2. Press ENTER to select.
3. Set the goal value you would like to reach, either TIME, CALORIE, or DISTANCE.
4. Set user age, set weight, and set resistance.

When you have entered your information you will be asked to press START to begin the program. Once you have reached your goal the program will end.

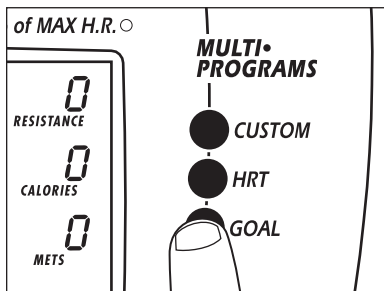

## HRT PROGRAMS

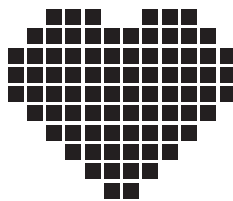

### TARGET HRT

The TARGET HRT program is designed to maintain your heart rate at 70% of your predicted maximum heart rate. It is intended to improve efficiency and endurance of your cardiovascular system by working your heart, lungs and circulatory systems. This is a great workout for anyone, but beginners may want to start lower and build their way up to 70% of their predicted maximum heart rate.

### HRT HILL

The HRT HILL program uses four different Target Heart Rates to build cardiovascular strength and endurance. The resistance will adjust until your rate reaches the Target Heart Rate for four separate hills. The hills will be set at 65%, 70%, 75%, and 80% of your predicted maximum heart rate. The program will keep you at each heart rate level for one minute from the time the Target Heart Rate is reached. The program will repeat the series of hills until the workout time is complete.

### HRT INTERVAL


The HRT INTERVAL program is designed to increase aerobic endurance and your overall fitness level, increase endurance of muscle fibers, and increase the amount of calories burned in your exercise session. This program consists of alternating effort and recovery intervals. The Target Heart Rate for your effort interval will be 80% of your predicted maximum heart rate, while the Target Heart Rate for your recovery intervals will be 70% of your predicted maximum heart rate. The two-minute effort interval begins when you reach your Target Heart Rate for that particular interval. The recovery interval duration depends on the amount of time it takes to get to your recovery heart rate.

## ALL HRT PROGRAMS

During the workout, the user will grasp the hand pulse sensors or wear the telemetric chest strap to send their heart rate signal to a receiver in the console. The console will continuously monitor the heart rate, adjusting the resistance level to keep your heart rate within several beats of your Target Heart Rate. By using the SCAN key, the heart rate feedback window conveniently displays your Heart Rate and % of Max. Heart Rate to keep you informed about your current heart rate. Each program will begin with a two-minute warm-up. When the workout time has been completed, the console will begin a five-minute cool-down. The user will be responsible for adjusting resistance to meet their needs during the warm-up and cool-down.

### ADJUSTING TARGET HEART RATE

While exercising in one of the HRT® programs, you may decide the Target Heart Rate needs to be adjusted. To adjust your Target Heart Rate, use the UP ▲ arrow or DOWN ▼ arrow. Press ENTER to select.

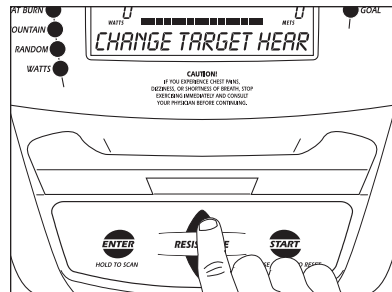



## USING HEART RATE TRAINING

### WHAT IS HEART RATE TRAINING?


Heart Rate Training means exercising at an intensity that keeps you in your ideal heart rate zone. Your personal heart rate training zone depends on your fitness goal, such as weight loss, cardiovascular endurance, or strength building. Refer to Page 66 for more information on heart rate training zones. VISION FITNESS HRT® programs are set up to keep you at an ideal heart rate based on your fitness goal. These programs automatically adjust resistance based on your heart rate readings.

The Premier console features three programs (Target HRT, HRT Hill, and HRT Interval) that offer the benefits of Heart Rate Training.

- *These programs use the predicted maximum heart rate formula (220 minus age) to determine your predicted maximum heart rate. Some individuals have higher or lower maximum heart rates than determined by this formula. The programs allow you to modify your Target Heart Rate to achieve your personal goals.*

### HAND PULSE HEART RATE SENSORS


The Contact Hand Pulse Sensors are included on each product to monitor your heart rate. To use, grasp the sensors with a comfortable grip during your workout. The console will display your heart rate. Although your signal will be displayed immediately, it may take the system a few seconds to zero in on your actual heart rate.

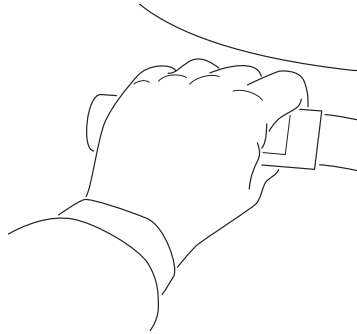

**NOTE:** The Contact Hand Pulse Sensors will work for the HRT® programs, but it is recommended to use the telemetric chest strap for an uninterrupted signal and ease of use.


## TELEMETRIC HEART RATE CHEST STRAP (AVAILABLE WITH PREMIER CONSOLE ONLY)

The wireless Telemetric Chest Strap uses a pair of electrodes on the underside of the strap to send your heart rate signal to the console. Prior to wearing the chest strap, moisten the two rubber electrode pads with several drops of water. These electrodes must remain wet to provide an accurate signal. We advise using the chest strap against your skin, but it also functions through a thin layer of wet clothing.

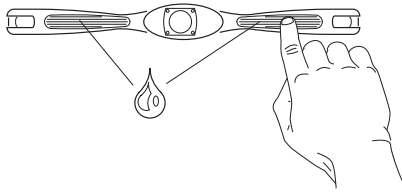

### STRAP PLACEMENT

Center the transmitter strap just below the breast or pectoral muscles, directly over your sternum with the logo facing out. Adjust the elastic strap so it is snug but comfortable enough for proper breathing.

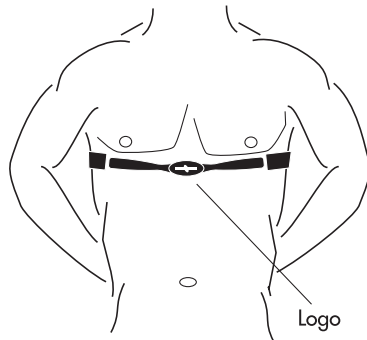

## TROUBLESHOOTING YOUR HEART RATE MONITOR CHEST STRAP

**PROBLEM:** No pulse reading appears.

**SOLUTION:** There may be a poor connection between the contact pads and skin; remoisten the electrode pads.

**SOLUTION:** Transmitter is not properly positioned; reposition the chest strap.

**SOLUTION:** Verify that the distance between the transmitter and receiver is not beyond the recommended range of 36 inches.

**PROBLEM:** There is an erratic pulse rate.

**SOLUTION:** Chest strap is too loose; readjust according to directions.

**NOTE:** It is possible that heart rate monitors will not function properly on some people for a variety of reasons. It may be necessary to experiment with the fit and position of the chest strap. Outside interference sources such as computers, motors, electric dog fences, home security systems, remote controls, CD players, fluorescent lights, etc., may cause problems for heart rate monitors.

## ENGINEERING MODE

Engineering mode consists of 13 optional settings. Use the engineering mode to enable certain features or displays on your console.

### ENTERING AND USING ENGINEERING MODE

- Press and hold the UP ▲ and DOWN ▼ keys for approximately three seconds.
- The console will beep and display engineering modes and optional settings. Use the UP ▲ or DOWN ▼ keys to scroll through the options. Press the ENTER key to select the appropriate mode or setting.

### OPTIONAL SETTINGS

<b>SETTING</b>	<b>DESCRIPTION</b>
P1 – SET MAX TIME	ALLOWS YOU TO SET THE MAXIMUM TIME A PROGRAM CAN RUN FOR.
P2 – SET USER TIME	ALLOWS YOU TO SET THE TIME THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS.
P3 – SET USER AGE	ALLOWS YOU TO SET THE AGE THAT THE COMPUTER WILL DEFAULT TO DURING SETUP.
P4 – SET WEIGHT	ALLOWS YOU TO SET THE WEIGHT THAT THE COMPUTER WILL DEFAULT TO DURING SETUP.
P5 – DEFAULT RESISTANCE LEVEL	ALLOWS YOU TO SET THE RESISTANCE LEVEL THAT THE COMPUTER WILL DEFAULT TO FOR ALL PROGRAMS.
P6 – DEFAULT LANGUAGE	ALLOWS YOU TO CHOOSE, FROM THE AVAILABLE LANGUAGES, WHAT LANGUAGE TEXT WILL BE DISPLAYED IN.
P7 – UNIT	ALLOWS YOU TO SET EXERCISE FEEDBACK TO ENGLISH (MILES) OR METRIC (KILOMETERS) SYSTEM.
P8 – MACHINE TYPE	ALLOWS YOU TO SET YOUR CONSOLE TO BIKE MODE OR ELLIPTICAL MODE.
P9 – ACCUMULATED DATA	ALLOWS YOU TO VIEW THE TOTAL TIME IN HOURS AND TOTAL DISTANCE IN MILES OR KILOMETERS ACCUMULATED ON YOUR PRODUCT.
P10 – DISPLAY TEST	TEST USED BY SERVICE TECHNICIANS TO TEST LCD DISPLAYS.
P11 – HARDWARE TEST	TEST USED BY SERVICE TECHNICIANS TO TEST EDDIE CURRENT BRAKE SYSTEM.
P12 – BEEPER MODE	ALLOWS YOU TO TURN THE BEEPER ON OR OFF.
P13 – VERSION	ALLOWS SERVICE TECHNICIANS TO VIEW SOFTWARE VERSION USED BY CONSOLE.

- Use the UP ▲ and DOWN ▼ keys within each setting to change the setting.
- Press the ENTER key to save settings.
- To EXIT engineering mode, press and hold the START key for three seconds.



## ***X1500, E1500, R1500 LIMITED HOME USE WARRANTY\****

VISION FITNESS extends the following exclusive, limited warranty, which shall apply only to the use of the device in the home, for residential, non-commercial purposes only. Any other use of the device shall void this warranty.

VISION FITNESS hereby extends the following limited warranties for the following components of the device, for the time period indicated:

**FRAME - LIFETIME** VISION FITNESS warrants the Frame against defects in workmanship and materials for the life of the product, as long as it remains in the possession of the original owner.

**ECB BRAKE - LIFETIME** VISION FITNESS warrants the ECB Magnetic Brake against defects in workmanship and materials for the life of the product, as long as it remains in the possession of the original owner. Only the Brake and Magnet assembly, and no other ancillary components or parts, are covered by this lifetime warranty.

**ELECTRONICS & PARTS - TWO YEARS** VISION FITNESS warrants the Electronic components and all original Parts (other than the ECB Magnetic Brake) against defects in workmanship and materials for a period of two years from the date of original purchase, so long as the device remains in the possession of the original owner.

**LABOR - ONE YEAR** VISION FITNESS shall cover the Labor cost for the repair of the device for a period of one year from the date of original purchase, so long as the device remains in the possession of the original owner.

\*Limited Home-Use Warranty valid only in North America.

## LIMITED HOME USE WARRANTY (continued)

### EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective Parts, or the supply of Labor to cure any defect, provided that Labor shall be limited to one year. All Labor shall be supplied by the local Retailer who sold the Product, and the Product must be located within that Retailer's service area. Products located outside the Retailer's service area will not be covered by the Labor warranty.

### EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, ECB Magnetic Brake, Electronic component, or defective Part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the Fitness Product as sold. The warranty does not apply to damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic, or neglect. VISION FITNESS shall not be responsible for incidental or consequential damages. Parts and Electronic components reconditioned to As New Condition by VISION FITNESS or its vendors may sometimes be supplied as warranty replacement parts and constitute fulfillment of warranty terms. Any warranty replacement parts shall be warranted for the remainder of the original warranty term.

VISION FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights, and your rights may vary from state to state.

### WARRANTY REGISTRATION

Your warranty card must be completed and sent to VISION FITNESS before a warranty claim can be processed. You may also register via our website at [www.visionfitness.com](http://www.visionfitness.com). Inside the enclosed warranty card, you will find a customer survey. Your care in completing the survey will be of value to us in serving you in the future. Comments and suggestions are always welcome. We are certain you will enjoy your new fitness product. Thank you for selecting a VISION FITNESS product.

## **X6000, R2050, X6200, E3200, R2250 LIMITED HOME USE WARRANTY\***

VISION FITNESS extends the following exclusive, limited warranty, which shall apply only to the use of the device in the home, for residential, non-commercial purposes only. Any other use of the device shall void this warranty.

VISION FITNESS hereby extends the following limited warranties for the following components of the device, for the time period indicated:

**FRAME - LIFETIME** VISION FITNESS warrants the Frame against defects in workmanship and materials for the life of the product, so long as it remains in the possession of the original owner.

**ECB BRAKE and ECB-PLUS™ BRAKE - LIFETIME** VISION FITNESS warrants the ECB Magnetic Brake and ECB-PLUS™ Magnetic Brake against defects in workmanship and materials for the life of the product, so long as it remains in the possession of the original owner. Only the Brake and Magnet assembly, and no other ancillary components or parts, are covered by this lifetime warranty.

**ELECTRONICS & PARTS - THREE YEARS** VISION FITNESS warrants the Electronic components and all original Parts (other than the ECB-PLUS™ Magnetic Brake) against defects in workmanship and materials for a period of three years from the date of original purchase, so long as the device remains in the possession of the original owner.

**LABOR - ONE YEAR** VISION FITNESS shall cover the Labor cost for the repair of the device for a period of one year from the date of original purchase, so long as the device remains in the possession of the original owner.

\*Limited Home-Use Warranty valid only in North America.



## LIMITED HOME USE WARRANTY (continued)

### EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective Parts, or the supply of Labor to cure any defect, provided that Labor shall be limited to one year. All Labor shall be supplied by the local Retailer who sold the Product, and the Product must be located within that Retailer's service area. Products located outside the Retailer's service area will not be covered by the Labor warranty.

### EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, ECB-PLUS™ Magnetic Brake, Electronic component, or defective Part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the Fitness Product as sold. The warranty does not apply to damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic, or neglect. VISION FITNESS shall not be responsible for incidental or consequential damages. Parts and Electronic components reconditioned to As New Condition by VISION FITNESS or its vendors may sometimes be supplied as warranty replacement parts and constitute fulfillment of warranty terms. Any warranty replacement parts shall be warranted for the remainder of the original warranty term.

VISION FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights, and your rights may vary from state to state.

### WARRANTY REGISTRATION

Your warranty card must be completed and sent to VISION FITNESS before a warranty claim can be processed. You may also register via our website at [www.visionfitness.com](http://www.visionfitness.com). Inside the enclosed warranty card, you will find a customer survey. Your care in completing the survey will be of value to us in serving you in the future. Comments and suggestions are always welcome. We are certain you will enjoy your new fitness product. Thank you for selecting a VISION FITNESS product.

## LIMITED CORPORATE WARRANTY\*

Up to 3 hours use per day

**CORPORATE USES DEFINED** VISION FITNESS warrants model X6200, E3200, and R2250 for use in corporate facilities including: Hotels; Resorts; Police & Fire Stations; Apartment Complexes; Corporate Fitness Centers; Hospitals; Rehabilitation and Sports Medicine Clinics, where average use is up to three hours per day. Not warranted for private Health Clubs, YMCA's or Schools.

### FRAME, ECB-PLUS™ BRAKE, ELECTRONICS & PARTS - ONE YEAR

VISION FITNESS warrants the Frame, ECB-PLUS™ Magnetic Brake, Electronic components and all original Parts against defects in workmanship and materials for a period of one year from the date of original purchase, so long as the device remains in the possession of the original owner.

**LABOR - ONE YEAR** VISION FITNESS shall cover the Labor cost for the repair of the device for a period of one year from the date of original purchase, so long as the device remains in the possession of the original owner.

### EXCLUSIVE REMEDY

The exclusive remedy for any of the above warranties shall be repair or replacement of defective Parts, or the supply of Labor to cure any defect, provided that Labor shall be limited to one year. All Labor shall be supplied by the local Retailer who sold the Product, and the Product must be located within that Retailer's service area. Products located outside the Retailer's service area will not be covered by the Labor warranty.

\*Limited Corporate Warranty valid only in North America.

## LIMITED CORPORATE WARRANTY (continued)

Up to 3 hours use per day

### EXCLUSIONS AND LIMITATIONS

This warranty applies only to the original owner and is not transferable. This warranty is expressly limited to the repair or replacement of a defective Frame, ECB-PLUS™ Magnetic Brake, Electronic component, or defective Part and is the sole remedy of the warranty. The warranty does not cover normal wear and tear, improper assembly or maintenance, or installation of parts or accessories not originally intended or compatible with the Fitness Product as sold. The warranty does not apply to damage or failure due to accident, abuse, corrosion, discoloration of paint or plastic, or neglect. VISION FITNESS shall not be responsible for incidental or consequential damages. Parts and Electronic components reconditioned to As New Condition by VISION FITNESS or its vendors may sometimes be supplied as warranty replacement parts and constitute fulfillment of warranty terms. Any warranty replacement parts shall be warranted for the remainder of the original warranty term.

VISION FITNESS expressly disclaims all other warranties, express or implied, including but not limited to all warranties of fitness for a particular purpose or of merchantability. This warranty gives you specific legal rights, and your rights may vary from state to state.

### WARRANTY REGISTRATION

Your warranty card must be completed and sent to VISION FITNESS before a warranty claim can be processed. You may also register via our website at [www.visionfitness.com](http://www.visionfitness.com). Inside the enclosed warranty card, you will find a customer survey. Your care in completing the survey will be of value to us in serving you in the future. Comments and suggestions are always welcome. We are certain you will enjoy your new fitness product. Thank you for selecting a VISION FITNESS product.

## DEVELOPING A FITNESS PROGRAM

By purchasing this piece of VISION FITNESS exercise equipment, you have made a commitment to exercise and now have the convenience of exercising in your own home. Your new equipment offers the flexibility to exercise at whatever time suits you best. It will be easier to maintain a consistent exercise program that will help you achieve your fitness goals.

### ACHIEVING YOUR FITNESS GOALS

An important step in developing a long-term fitness program is to determine your goals. Is your primary goal to lose weight? Improve muscle tone? Relieve stress? Prepare for the spring racing schedule? Knowing what your goals are will help you develop a more successful exercise program. If possible, try to define your personal goals in precise, measurable terms over specific periods of time. Examples of these goals might include:

- Decrease your waistline by two inches over the next two months.
- Run the local 5K race this summer.
- Get 30 minutes of cardiovascular exercise at least five days per week.
- Improve your race time by two minutes over the next year.
- Move from walking a mile to jogging a mile within the next three months.

The more specific the goal, the easier it will be to track your progress. If your goals are long-term, divide them into monthly and weekly segments. Long-term goals can lose some of the motivational benefits. Short-term goals are easier to achieve and will allow you to see the progress you are making. Every time you reach a goal, it is important to set a new goal. This will lead to a healthier lifestyle and will provide the motivation that you will need to move forward.

### TRACK YOUR PROGRESS

Now that you have set your exercise goals, it is time to write them down and make an exercise schedule that will help you achieve them. By keeping a fitness diary, you will stay motivated and know where you are in terms of reaching your goals. As time goes on, you will be able to look back with pride to see how far you've come.

## EXERCISE GUIDELINES

### EXERCISE DURATION

A common question asked is, “how much exercise do I need?” We recommend following the guidelines set up by the American College of Sports Medicine (ACSM) for healthy aerobic activity.

- Exercise three to five days per week.
- Warm up for five to 10 minutes before aerobic activity.
- Maintain your exercise activity for 30 to 45 minutes.
- Gradually decrease the intensity of your workout, then stretch to cool down during the last five to 10 minutes.


If weight loss is a major goal, participate in your aerobic activity at least 30 minutes for five days each week.

### EXERCISE INTENSITY

The next question asked is, “how hard do I need to work out?” To reap the most cardiovascular benefits from your workout, it is necessary to exercise within a recommended intensity range. We recommend monitoring your exercise heart rate.

## TARGET HEART RATE

Target Heart Rate is a percentage of your maximum heart rate. Target Heart Rate will vary for each individual depending on age, current level of conditioning, and personal fitness goals. Exercise heart rate should range from 55% to 85% of your maximum heart rate. As a point of reference, we use the predicted maximum heart rate formula of (220 minus age) to determine your heart rate training zone. Please use the following chart to determine your predicted Target Heart Rate.

TARGET HEART RATE ZONES										
Beats Per Minute 										
85%	178	170	161	153	144	136	127	119	110	102
75%	157	150	142	135	127	120	112	105	97	90
65%	136	130	123	117	110	104	97	91	84	78
55%	115	110	104	99	93	88	82	77	71	66
Percentage of Maximum Heart Rate										
AGE	10	20	30	40	50	60	70	80	90	100

### EXAMPLE:

If you are a 30-year-old, your predicted maximum heart rate is 190 based on the (220 minus age) formula.

$$220 - 30 = 190$$

Based on the chart above, your heart rate training zone is 104 to 161, which is 55%–85% of 190.




comfortable

quiet

smooth

*it all  
starts  
with a  
vision*

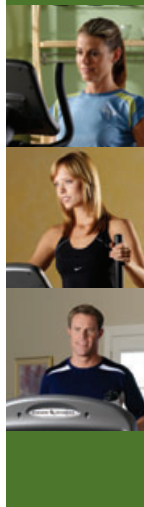

500 South CP Avenue ■ P.O. Box 280 ■ Lake Mills, WI 53551  
toll free 800.335.4348 ■ phone 920.648.4090 ■ fax 920.648.3373  
[www.visionfitness.com](http://www.visionfitness.com)

©2008 Vision Fitness. All Rights Reserved. Cambridge Motor Works, Comfort Arc, Easy-8, ECB-Plus, HRT, Quick-Set, Quiet-Glide, and SPRINT 8 are Trademarks of Vision Fitness.  
May be covered by one or more patents or patents pending: US 4917376, US 5540637, US 5573480, US 5813949, US 5813949, US 5924962, US 5938567, US 6135927, US 6149551, US 7316633, TW 364373, TW 371899, CN 99808486.7

6.08  
OM18.70PRD  
REV1