

nickelodeon.




Learning Watch



Parents' Guide

This guide contains important information.
Please keep it for future reference.

91-003818-000-000 

INTRODUCTION

Thank you for purchasing the *Blue's Clues & You!*[™] Learning Watch. This interactive watch includes a timer, alarm clock, four learning games and seven digital watch faces. Explore time concepts, exercise observation and comparison skills and practice counting.



INCLUDED IN THIS PACKAGE

Blue's Clues & You!TM Learning Watch

- Parents' guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parents' guide as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

PRODUCT SPECIFICATION

Battery	One CR2450 battery
Time Format	12h or 24h
Display	Digital
Optimum Operating and Charging Temperature	32°F - 104°F (0°C - 40°C)

Important Note:

- Do not place the watch under running water.
- Do not submerge. Not suitable for showering, bathing or swimming.
- Keep the Cover closed when the watch is not in use.

Note :

- Ne pas mettre la montre sous l'eau.
- Ne pas immerger la montre et ne pas l'utiliser sous la douche et dans le bain.
- Garder le clapet fermé lorsque la montre n'est pas utilisée.

WARNING:

People with very sensitive skin may notice some irritation after wearing the **Blue's Clues & You!**TM **Learning Watch** for extended periods of time. The skin may become irritated when moisture, sweat, soap, or other irritants get trapped under the wristband and are left in contact with the skin. To prevent this, we suggest children remove the watch before going to bed for the night, take the watch off if it's feeling uncomfortable, and keep their wrist and the band clean and dry.

In addition, wearing the watch too tightly may also cause irritation. Make sure the fit is good - tight enough so the watch stays in place but not so tight that it's uncomfortable. If you notice any redness, swelling, or other irritation, you may want to consult a doctor before wearing the watch again.

PRÉCAUTIONS D'UTILISATION :

Comme avec d'autres objets portés près du corps de manière prolongée, la montre interactive pourrait éventuellement provoquer une irritation. L'humidité, la transpiration, l'eau savonnée ou d'autres agents irritants peuvent s'incruster sous le bracelet et rester en contact avec la peau.

En prévention, nous recommandons fortement aux enfants de ne pas porter la montre pendant la nuit, de l'enlever dès le moindre signe d'irritation, et de garder le bracelet sec et propre. Par ailleurs, vérifiez que le bracelet de votre enfant ne soit ni trop serré, ni trop lâche. Si vous observez des rougeurs, gonflements ou autre irritation, veuillez consulter un médecin avant de remettre la montre.

GETTING STARTED

WARNING:

This product contains a button or coin cell battery. A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

ATTENTION !

Ce jouet contient une pile bouton ! L'ingestion d'une pile bouton peut causer des brûlures internes pouvant provoquer la mort dans un délai de 2 heures. Jeter les piles usées immédiatement après les avoir retirées du jouet. Garder les piles neuves hors d'atteinte des enfants. Si vous remarquez qu'une pile bouton a été avalée, consultez immédiatement un médecin.

 
Power Source

The **Blue's Clues & You!**TM Learning Watch operates using a CR2450 battery. The CR2450 battery included with the product is for demo purposes only.

Battery Removal and Installation

NOTE: For best performance, remove the factory-installed battery from the **Blue's Clues & You!**TM Learning Watch and use a new battery.

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove the old battery by pulling up on one side of the battery.
4. Install 1 new CR2450 battery as illustrated.
5. Replace the battery cover and tighten the screw to secure.

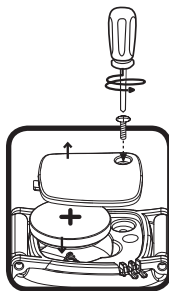

BATTERY NOTICE

- Use one CR2450 Lithium ion coin battery only for this toy. Do not use a rechargeable Lithium ion battery LIR2450. This toy is not compatible with LIR2450.
- The coin battery used with this product should be kept away from small children who might still put things in their mouths. If the coin battery is swallowed, consult a doctor immediately.
- Insert the coin battery with the correct polarity.
- Do not use damaged coin battery.
- Do not short-circuit the coin battery terminals.
- Remove exhausted coin battery from the product.
- Remove coin battery during long periods of non-use.
- Do not dispose of coin battery in fire.
- Do not charge non-rechargeable coin battery.
- Do not mix old and new batteries.
- Do not mix batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).

TO BEGIN USING *Blue's Clues & You!*TM Learning Watch

When you use the watch for the first time, open the **Cover**, then press and hold the **Left + Right + Light-Up OK Buttons** for approximately five seconds to unlock the Try-Me mode. You will hear three beeps when the Try-Me mode is unlocked. You can then press any button to activate the watch and set the time.

Press the **Left or Right Buttons** to select, then press the **Light-Up OK Button** to confirm and move to the next option. A checkmark will be displayed when the setting is complete.

Note:

- When the battery level is low, most functions on the watch may not be activated, except for the clock display. It is recommended to change the battery as soon as possible before further use.
- If the battery level is too low and cannot keep the clock running, you will need to enter the time again after the battery has been replaced.

PRODUCT FEATURES

1. Cover

Open the **Cover** to view the time. When the **Cover** is closed, tap the bottom of the **Cover** to activate *Blue's Clues & You!*TM sounds with a lighting effect.

2. Left/Right Buttons

Use the **Left** and **Right Buttons** to select an activity or option, or to change options in Time Settings or Alarm Mode.

3. Light-Up OK Button

Press the **Light-Up OK Button** to confirm a selection and move to the next option in different activities.






4. Clock/Home Button

(A) Clock Display

Press the **Clock/Home Button** to return to the clock from any other function or activity.

(B) Home Menu

While displaying the clock, press the **Left** or **Right Buttons** to display the Home Menu. There are five activities to choose from:

1. Alarm Clock 	2. Stopwatch 	3. Timer 
4. Games 	5. Settings 	

- Press the **Left** or **Right Buttons** to scroll through the menu options.
- Press the **Light-Up OK Button** to enter the chosen activity.

5. Alarm Clock

You can set an alarm with a choice of two alarm tones.

- Press the **Left** or **Right Buttons** to select the time/alarm tone.
- Press the **Light-Up OK Button** to confirm and move to the next setting.
- Press the **Clock Button** to automatically save the current setting.



6. Stopwatch

Access the stopwatch here.

- Press the **Light-Up OK Button** to start the stopwatch, press again to stop.
- When the stopwatch is stopped, you can press the **Left** or **Right Buttons** to reset.



7. Timer

- Set a countdown timer here.
- Press the **Left** or **Right Buttons** to change the time.
- Press the **Light-Up OK Button** to confirm.
- Press the **Clock Button** to automatically save the current setting.
- When you press the **Light-Up OK Button** to confirm the timer duration, the countdown will start immediately.
- While the timer is running, you can press the **Light-Up OK Button** to pause/resume, and press the **Left** or **Right Buttons** to reset.



8. Settings

In the Settings menu, press the **Left** or **Right Buttons** to scroll through the various options:

(A) Watch Faces

- Press the **Left** or **Right Buttons** to select from seven different watch faces.
- Press **Light-Up OK Button** or **Clock Button** to confirm and save the setting.



(B) Cuckoo Clock

- When the cuckoo clock is activated, the watch will briefly chime at the top of each hour between 7 AM and 7 PM. The cuckoo clock will not ring if a game is in progress or the Alarm or Timer is ringing.
- Press the **Left** or **Right Buttons** to turn the cuckoo clock **ON** or **OFF**.
- Press the **Light-Up OK Button** or **Clock Button** to confirm and save the setting.



(C) Time Setting

- Press the **Left** or **Right Buttons** to change the options. (Note: The AM/PM setting is only applicable in 12-hour time format.)
- Press the **OK Button** to confirm.
- Press the **Light-Up OK Button** to automatically save the current setting.

 


Automatic Shut-Off

To preserve battery life, the *Blue's Clues & You!*TM Learning Watch will automatically power down when there has been no input for approximately 30 seconds. Press any button or open the **Cover** to turn the unit **ON** again.

Note: The *Blue's Clues & You!*TM Learning Watch will not automatically power down when the stopwatch is running.

The unit will automatically shut **OFF** when the battery power is very low. If you see the Low Battery icon appear on screen, please replace the battery.

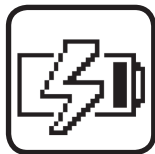


ACTIVITIES

1. Games

In the Games menu, press the **Left** or **Right Buttons** to scroll through the different learning game options:


(A) A Day With Blue and Magenta!

 What do Blue and Magenta want to do with you today? Press the **Left** or **Right Buttons** to scroll through the hours of the day, and press the **Light-Up OK Button** to find out.

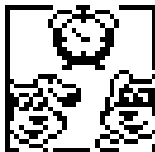


(B) Spot the Difference

 Play a game of spot the difference with Blue and her friends! Press the **Left** or **Right Buttons** to select the pose that's different, and press the **Light-Up OK Button** to confirm.

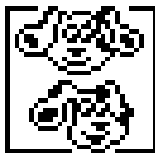


(C) Count the Bubbles

 Let's count Slippery Soap's bubbles! Press the **Left** or **Right Buttons** to choose the answer.

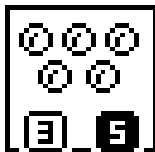

(D) Catch!

 Shovel and Pail are catching shapes in the yard. Press the **Left** or **Right Buttons** to help Pail catch the correct shapes.

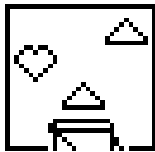

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, then please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

IMPORTANT NOTE:


If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.




Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement



Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.



NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by

turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

Trade Name: LeapFrog®
Model: 6117
Product Name: Blue's Clues & You!™ Learning Watch
Responsible Party: LeapFrog Enterprises, Inc.
Address: 6401 Hollis Street, Suite 100,
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.

CAN ICES-3 (B)/NMB-3(B)

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CLASS 1
LED PRODUCT



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com

***Read our complete warranty policy online at
leapfrog.com/warranty***

© 2020 Viacom International Inc. All Rights Reserved. Nickelodeon, Blue's Clues & You! and all related titles, logos and characters are trademarks of Viacom International Inc.

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2020 LeapFrog Enterprises, Inc.
All rights reserved.
91-003818-000-000 (S)