

2014

Cadillac.

CTS

CONVENIENCE/PERSONALIZATION GUIDE

Review this guide for an overview of some important features in your Cadillac CTS. Some optional equipment (denoted by ♦) described in this guide may not be included in your vehicle. More detailed information can be found in your Owner Manual.

Instrument Panel

Memory Seat Buttons Electric Parking Brake Switch Turn Signal Lever/Exterior Lamps Control Instrument Cluster/Driver Information Center Manual Shift Paddles Windshield Wipers Lever Hazard Warning Flashers/Lane Departure Warning Buttons CUE Touch Screen Glove Box/Parking Assist/Automatic Parking Assist♦ Buttons Audio System Controls



Power Mirror Controls Cruise Control/Voice Recognition/Heated Steering Wheel♦ Buttons Head-Up Display Controls♦ Power Rake/Telescope Steering Wheel Control♦ Audio Steering Wheel Controls/5-way Control Engine Start/Stop Button Traction Control and StabiliTrak Button/Driver Mode Control Heated/Ventilated Seat Buttons♦ Climate Controls

Steering Wheel Controls

Cruise Control

 On/Off

 On/Off
(Adaptive Cruise Control)

SET Set Speed

With Cruise Control on, press the control bar down fully to set the cruise speed.

RES Resume Speed


With Cruise Control on, press the control bar up fully to resume the previous set speed.

+ – Adjust Speed

When active, press the control bar up (+) or down (–) lightly to increase or decrease the set speed by 1-mph increments; press up or down fully to increase or decrease the set speed to the next 5-mph interval on the speedometer.

 **Cancel**

Press to cancel cruise control without erasing the set speed from memory.

 **Follow Distance Gap (Adaptive Cruise Control)**

Press repeatedly to select a gap setting of Far, Medium, or Near.

See Driving and Operating in your Owner Manual.


Heated Steering Wheel

 On/Off

See Instruments and Controls in your Owner Manual.



Voice Recognition

 **Push to Talk**

Press to interact with the OnStar, Bluetooth or CUE system.

 **End Call/Mute**

Press to end/reject a call or mute the audio system.

See your CUE Infotainment System Manual.

5-Way Control

Moves left/right, up/down, and in.

 **Left/Right**

Press to view the left or right cluster display. Press the left < to exit a display menu.

 **Up/Down**

Press the control bar up or down to scroll through a menu.



SEL Select

Press to select a highlighted menu item.



See Instruments and Controls in your Owner Manual.

Audio Controls

 **Volume**

Press the  or  to increase or decrease the volume.

 **Next/Previous**

Press  or  to select the next or previous favorite radio station, track or file.

See your CUE Infotainment System Manual.

Instrument Cluster



Uplevel Performance Cluster shown

Cluster Display Zones



Use the 5-way control on the right side of the steering wheel to move between the different display zones and scroll through the different displays in each cluster configuration.

Uplevel Cluster Configurations

1. With the vehicle in Park, use the 5-way control on the steering wheel to find the Settings page in one of the display zones on the cluster.
2. Press **SEL (Select)** to enter the Settings menu.
3. Scroll down to highlight Display Layout; press **SEL**.
4. Scroll up or down to highlight one of four cluster configurations; press **SEL**.
5. Press **<** to exit the menu.

See *Instruments and Controls in your Owner Manual*.

Driver Information Center



The Driver Information Center (DIC) on the instrument cluster displays a variety of vehicle information. The DIC Info Displays may include a digital speedometer, trip odometers, fuel range, average fuel economy, instantaneous fuel economy, average speed, timer, compass, turn arrow, travel time, distance to destination, speed limit speed warning, cruise control set speed, follow distance gap/gap setting, battery voltage, oil life, and odometer.

Info Pages Menu

1. Use the 5-way control on the right side of the steering wheel to find the Settings page in one of the display zones on the cluster. Press **SEL** to enter the Setting menu.
2. Scroll **∨ down** to highlight Info Pages; press **SEL**.
3. Scroll **∧ up** or **∨ down** to move through the list of Info Displays.
4. Press **SEL** to select or deselect a display item.

See Instruments and Controls in your Owner Manual.

Head-Up Display ♦

The Head-Up Display (HUD) displays some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



Lift up or press down to adjust the position of the image. It cannot be adjusted side-to-side.

INFO

Press to select from four displays: Speed View; Audio/Phone View; Navigation View; and Performance View.



Lift up or press down to brighten or dim the display.
Hold down to turn off the display.

See Instruments and Controls in your Owner Manual.

Touch Screen and Controls

Applications:
Touch the screen icon to access the desired application

VOLUME:
Touch arrows or swipe finger **above** chrome bar

Power/Mute:
Press and hold to turn CUE On/Off; Press to mute audio

Driver's Temperature Control

OFF
Climate Control Power Off

Driver's Heated/Ventilated Seat Control

AUTO:
Automatic Climate Control Operation

Windshield Defrost Mode

Additional Pages:
Touch to view additional pages of applications

Interaction Selector:
Touch to display the favorites list.

Home Page

Passenger's Temperature Control

Climate Control Fan Speed

Passenger's Heated/Ventilated Seat Control

Recirculation Mode

Rear Window Defog

Storage Compartment with USB Port:
Press and hold the bright bar to open/close

The controls use capacitive technology – simply touch the icon/text to access a feature or adjust a function.

CUE System Menus

CUE offers a variety of entertainment, communication and vehicle system options. Touch an application icon on the touch screen to access the following items.



Audio

- Voice Recognition
- Radio Band
- Seek Up/Down
- Tune/Play
- Media
- Menu

Navigation◆

- Zoom Out
- Zoom In
- Overview
- Destination
- Map Menu
- Seek Up/Down
- Tune/Play

Phone

- Voice Recognition
- Contacts
- Recent
- Keypad
- Voice Mail
- Phones

Note: The  microphone icon activates Handset Voice Recognition. See page 10.

Climate


- Driver/Vehicle Set Temperature
- Passenger Set Temperature
- Sync Temperature Settings
- AC Mode
- Automatic Climate On/Off
- Air Distribution Settings
- Front/Rear Settings
- Fan Speed

Settings


- Time and Date
- Language
- Valet Mode
- Radio
- Vehicle
- Bluetooth
- Voice
- Display
- Rear Camera
- Return to Factory Settings


Interacting with the CUE System


To make interactions simple and safe, use the following gestures on the CUE touch screen just as you would on a smartphone.


Tap  Tap an item on the screen to perform the desired function.


Press and Hold  Press and hold an item.

Drag  Touch an item on the screen and drag your finger along the screen while holding down on the item.

Nudge  Press the desired item and move your finger in an up/down or side-to-side motion without releasing your finger. When your finger is removed, the item stops moving.

Fling or Swipe  Press anywhere within a list or page and move your finger rapidly in an up/down or side-to-side motion, releasing from the screen while your finger is still moving.

Spread  Place two fingers on the screen and spread them apart.

Pinch  Place two fingers on the screen and bring them together in a pinching motion.

Double Tap  Tap an item twice on the screen quickly.

See your CUE Infotainment System Manual.

CUE System Features

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

CUE uses a Bluetooth or USB connection to link a smartphone, cell phone, USB flash drive or portable audio player/iPod® to the touch screen infotainment display. It offers a variety of entertainment options, including streaming audio from the Internet through a smartphone, and features enhanced hands-free voice control, music information and the ability to play music files from a USB flash drive or an SD media card. For assistance, call 1-855-4-CUE-NOW (1-855-428-3669) or visit www.cadillac.com/cue.

Setting the Time

1. Touch **Settings** on the Home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch **+** or **-** to adjust the hours, minutes, and AM or PM.
5. Touch **< Back** to exit the menu.

If the Auto Set feature is enabled, the time will be updated automatically as the system obtains time information from the cellular network.

Storing Favorite Stations

Radio stations from all bands (AM, FM or XM♦), Pandora stations, tone settings, phone contacts and navigation destinations♦ can be stored in any order.

1. Display the desired radio station, tone settings, Pandora station, navigation destination or contact.
2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
3. Touch and hold a favorite screen button.
4. Repeat the steps to store another favorite item.

CD Player (located in the glove box)

- ▶ Touch **Media** until CD is displayed to play a disc.

♦ Optional equipment

Portable Audio Devices

Two USB ports, an SD media card slot, and an auxiliary audio input jack are located in the center console storage compartment.

- ▶ Connect an iPod®, iPhone®, MP3 player, a USB flash drive or a USB mass storage device to the USB port or insert an SD media card into the card slot.
- ▶ Touch **Media** until the connected device is shown. CUE will read the device and build a list of voice commands. Search for music on-screen or by voice commands.


PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres. Requires an Internet-connected device with Pandora software.

1. Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora (if necessary).
2. Create a station on your phone to listen to a customized song list in the vehicle.
3. Connect your smartphone/device to the system by Bluetooth (see page 10) or, for Apple devices, by a USB cable.
4. Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

Voice Recognition

Control the music source and navigation destination, and make phone calls hands-free, using the enhanced voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say “Say a command,” followed by a beep.
3. After the beep, say what you want it to do.

- **Hands-free calling:**

Example command: “Call Amanda” or “Dial 555-1212”

- **Connected music device search:**

Example command: “Play artist Van Halen”

Example command: “Play song ‘Dance the Night Away’”

- **Radio control:**

Example command: “Tune FM 104.3” or “Tune XM Classic Vinyl”


Example command: “Tune Pandora” (Pandora app required)

- **Help:**

- Say “Help” for voice recognition assistance.

Handset Voice Recognition

Handset Voice Recognition pass-thru allows access to the voice recognition commands on a cell phone, e.g. Siri or Voice Command. See the cell phone manufacturer’s user guide to determine if the cell phone supports this feature.


- ▶ To activate Handset Voice Recognition, touch the  microphone icon on the CUE touch screen.

See your CUE Infotainment System Manual. 10

Bluetooth® System


Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. Not all devices will support all functions. The pairing process is disabled when the vehicle is moving. For more information, visit www.gmttotalconnect.com.

Pair a Phone using Voice Recognition

1. Press the  **Push to Talk** button.
2. After the beep, say “Pair Phone.” The system will search for your phone. A four-digit code appears on the display.
3. Start the pairing process on the phone. Locate Cadillac CUE on the phone.
4. Enter the four-digit code that appears on the touch screen or confirm a six-digit code on the phone.
5. If your phone prompts you to accept the connection or phone book download, click “yes” and always allow.

Device List

Up to 10 devices may be paired with the in-vehicle Bluetooth system. To switch devices using voice recognition:

1. Press the  **Push to Talk** button.
2. Say “Switch phone.”
3. Select from the list of paired phones/devices.

To switch devices using CUE, select Phones from the Phone menu.

See your CUE Infotainment System Manual.

Vehicle Personalization



Some vehicle features can be customized using the controls on the CUE system. The Vehicle Settings menu may include Climate and Air Quality; Collision/Detection Systems; Comfort and Convenience; Lighting; Power Door Locks; and Remote Lock, Unlock, Start.

1. Touch **Settings** on the Home page.
2. Touch **Vehicle** from the **Settings** menu.
3. Touch the desired menu item.
4. Touch the desired feature and setting.
5. Touch **< Back** to exit each menu.

See Instruments and Controls in your Owner Manual.

Navigation◆



Enter a destination using the Single Line Destination feature. Approximate your desired destination and CUE's auto-fill function will enter the necessary information.

1. Touch **Navigation** on the Home page.
2. Touch **Destination**.
3. Type the address, intersection or road.
4. Touch **Go**.
5. Select the desired name from the generated list.
6. Touch **Go**.

See your CUE Infotainment System Manual.

Remote Keyless Entry Transmitter

Lock

Press to lock all doors.

Unlock

Press to unlock the driver's door.
Press again to unlock all doors.


Note: To change the Remote Lock and Unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

Remote Start◆

Use to start the engine from outside the vehicle. See Adaptive Remote Start on page 13.

Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The exterior lamps flash and the horn sounds.

Press and hold for three seconds to activate the alarm. The turn signal lamps flash and the horn sounds for 30 seconds, or until the  button is pressed again or the vehicle is started.

Trunk Release

Press twice to open the trunk.

Door Key

Press the button (A) on the side of the transmitter to pull the door key out of the transmitter. Use the key to lock/unlock the driver's door, front passenger's door and rear folding seats.◆



Keyless Access System

The Keyless Access System enables operation of the doors, ignition and trunk without removing the transmitter from your pocket or purse. **The system will recognize the transmitter when it is within three feet of the doors or trunk.**

Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within five seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touch pad above the license plate to open the trunk.



Keyless Locking

With the ignition off, the transmitter removed from the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ All doors will lock automatically after a short delay, if passive locking is turned on.

Note: To change the Keyless Locking and Unlocking settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

See Keys, Doors and Windows in your Owner Manual.

Pushbutton Start

Start

- ▶ With the vehicle in Park or Neutral, **press the brake pedal** and then press the **ENGINE START/STOP** button to start the engine. The green indicator on the button will illuminate.



Note: The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the depression under the rubber mat on the top shelf of the center console to enable the engine to start. Replace the transmitter battery as soon as possible.

Cell phone chargers may interfere with the operation of the Pushbutton Start System and should not be plugged in when starting or turning off the engine.

Stop/Off

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.

Power will be available for 10 minutes to operate the audio system until the driver's door is opened and to operate the windows and sunroof♦ until any door is opened.

Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the vehicle in Accessory mode. The yellow indicator on the button will illuminate.

See *Driving and Operating in your Owner Manual*.

Adaptive Remote Start

Starting the Vehicle

1. Press and release the **Lock** button on the Remote Keyless Entry transmitter.
2. Immediately press and hold the **Remote Start** button until the turn signal lamps flash.

When the vehicle starts, the doors remain locked, and the parking lamps will light and remain on while the vehicle is running. The engine will continue running for 10 minutes. Repeat these steps for a 10-minute time extension. Remote start can be extended only once.

3. Before driving, simultaneously press the brake pedal and the **ENGINE START/STOP** button to turn on the ignition.

Canceling a Remote Start

- ▶ Press and hold the **Remote Start** button until the parking lamps turn off.

Climate Control Operation




During a remote start, the automatic climate control system will operate at the same setting as when the vehicle was last turned off.

Heated/Ventilated Seat Operation

During a remote start, the heated/ventilated seats♦ will turn on automatically if enabled in the Vehicle Settings menu. When it is cold outside, the heated seats turn on; and when it is hot outside, the ventilated seats turn on. The temperature performance of an unoccupied seat may be reduced. The heated/ventilated seats turn off when the ignition is turned on. The seats can be turned on manually if desired.


See *Keys, Doors and Windows in your Owner Manual*.

Power Door Locks/Safety Locks

- ▶ Press the power door  **Unlock**/ **Lock** button on the driver's door to unlock or lock all doors. The lock indicator on the button illuminates when the door is locked.
- ▶ Pull the inside door handle to unlock a door; pull the handle again to open the door.
- ▶ Press the  **Safety Locks** button on the driver's door to prevent the rear doors from opening from the inside and to disable the rear power windows.

See *Keys, Doors and Windows* in your Owner Manual.

Trunk Release


- ▶ To open the trunk from inside the vehicle, press the  **Trunk Release** button on the driver's door.
- ▶ To open the trunk from outside the vehicle, press the touch pad above the license plate. The vehicle must be unlocked or the transmitter must be within range of the trunk.



See *Keys, Doors and Windows* in your Owner Manual.

Power Mirrors

Power Mirror Adjustment

- ▶ Move the power mirror selector switch to the Left (L) or Right (R) position to select the driver's or passenger's mirror; use the four-way control to adjust the mirror.
- ▶ Press the  **Rear Window Defog** button to activate the heated power mirrors.



Reverse Tilt Mirror

The Reverse Tilt Mirror will tilt down the driver and passenger mirrors to improve visibility near the rear wheels when the vehicle is shifted into Reverse.

Note: To change the Reverse Tilt Mirror settings, go to *Comfort and Convenience* in the Vehicle Settings menu.

See *Keys, Doors and Windows* in your Owner Manual.

Valet Mode

- ▶ To lock/unlock the CUE screen and the glove box, select Valet Mode under Settings and enter a passcode. It can be used when it's desired that only an authorized user has access to personalized features.

Note: For added security, the rear seat pass-through door can be locked by turning the knob on the pass-through door and the folding rear seat-backs can be locked using the door key.

See your *CUE System Owner Manual* and *Seats and Restraints* in your Owner Manual.

Driver Awareness and Driver Assist Features◆

The driver awareness and assist systems are based on a “control and alert” strategy that helps identify potential collision situations and intervenes when a collision threat appears more imminent, employing visual, audible and/or tactile (vibration) alerts.

Driver Awareness Package◆

Lane Departure Warning – When crossing a detected lane marking without using a turn signal, a visual alert flashes on the instrument cluster and the left or right side of the driver’s seat pulses.*

- ▶ Press the  **Lane Departure Warning** button on the left side of the CUE touch screen to turn the system on or off.

Forward Collision Alert – When approaching a vehicle directly ahead too quickly, a visual alert flashes on the windshield and the driver’s seat pulses.*

- ▶ Press the  **Collision Alert** button (or the  **Follow Distance Gap** button if equipped with Adaptive Cruise Control) on the left side of the steering wheel to set the alert timing.

Rainsense™ Automatic Windshield Wipers – A sensor detects the amount of water on the windshield and controls the frequency of the wipers. See Windshield Wipers on page 16.

IntelliBeam® – Automatically turns the high-beam headlamps on or off depending on traffic conditions.

Side Blind Zone Alert – When a vehicle is detected in a side blind spot area, a warning symbol displays on the side mirror.

- ▶ To turn off the system, see the Collision/Detection Systems menu under Vehicle Settings. The system turns on automatically every time the vehicle is started.

Safety Alert Seat – Subtle seat cushion vibration pulses, left or right, or simultaneously, alert the driver of potential hazards.

**To select audible notification instead of Safety Alert Seat vibrations, see the Collision/Detection Systems menu under Vehicle Settings.*

◆ Optional equipment


Rear Vision Camera – When the vehicle is in Reverse, a view of the area behind the vehicle appears on the CUE touch screen.

Rear Cross Traffic Alert – Warns of traffic coming in either direction behind the vehicle by displaying a visual alert on the CUE touch screen and the left or right side of the driver’s seat pulses.*

- ▶ To turn the system on or off, see the Collision/Detection Systems menu under Vehicle Settings.

Driver Assist Package◆ (includes Driver Awareness Package)

Front and Rear Automatic Braking – Applies the brakes in potential collision situations to help reduce damage or help avoid collisions at lower speeds.

- ▶ Press the  **Parking Assist** button on the right side of the CUE touch screen to turn Rear Automatic Braking on or off.

Adaptive Cruise Control – If a vehicle is detected ahead, the vehicle accelerates or brakes moderately to maintain the selected following gap. If driver action is required, a visual alert flashes on the windshield and the driver’s seat pulses.*

- ▶ Press the  **Follow Distance Gap** button on the left side of the steering wheel to set a following gap.

Automatic Collision Preparation – Prepares the brakes or applies the brakes if an emergency collision appears imminent or the driver does not react to previous alerts.

Automatic Safety Belt Tightening – When the vehicle starts moving, gently removes slack from the front safety belts. At higher speeds, tightens the front safety belts during emergency, hard braking or steering maneuvers.

Exterior Lighting



Exterior Lighting Controls

 Off/On

AUTO Automatic Light Control

Automatically activates the Daytime Running Lamps (DRLs) or the headlamps and other exterior lamps depending on outside light conditions, including the IntelliBeam® automatic high-beam system.

 Parking Lamps

 Headlamps

Adaptive Forward Lighting (included with HID headlamps)

The Adaptive Forward Lighting (AFL) system pivots the headlamps left or right in the direction of travel.

Note: The AFL system operates only when the exterior lamps control knob is in the AUTO position, at speeds greater than 2 mph, and after driving a short distance to calibrate the system.

See Lighting in your Owner Manual.

Windshield Wipers



HI Fast wipes

LO Slow wipes

INT Intermittent (Rainsense™ Sensitivity)

When in Rainsense mode, rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

Note: When entering an automatic car wash, turn off the automatic Rainsense windshield wipers.

OFF

 **Mist**
Single wipe

 **Washer Fluid**
Pull the lever toward you to spray washer fluid on the windshield.

See Instruments and Controls in your Owner Manual.


Memory Seats◆





Set Memory Positions

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

Set Exit Position

1. Adjust the driver's seat, power outside mirrors and the power steering column to the desired positions.
2. Press and hold the **SET** button and the  **Exit** button on the driver's door until a beep sounds.

Manually Recall Positions

- ▶ At any time, press and hold button **1**, **2** or  until the stored position is reached. Releasing the button before the stored position is reached stops the recall.
- ▶ With the vehicle in Park and the ignition ON, press and release button **1**, **2** or  to recall the stored position.

Note: To change the Auto Memory Recall settings, go to *Comfort and Convenience* in the Vehicle Settings menu.



◆ Optional equipment

See *Seats and Restraints* in your Owner Manual. 17




UltraView Sunroof◆



Open/Close the Sunshade

- ▶ Press the front or rear of the  **Front Sunshade** switch (A) to express-open or express-close the front sunshade.
- ▶ Press the front or rear of the  **Rear Sunshade** switch (B) to express-open or express-close the rear sunshade.

Open/Close the Sunroof

- ▶ Press the rear of the  **Sunroof** switch to vent the sunroof.
- ▶ Press the rear of the  **Sunroof** switch again to express-open the sunroof.
- ▶ Press the front of the  **Sunroof** switch to express-close the sunroof.


See *Keys, Doors and Windows* in your Owner Manual.

Power Cupholders Cover

- ▶ Push and release or pull and release the chrome cupholder tab to open or close the power retractable cover.
- ▶ Open/close the cover manually when power is not provided to the cupholder cover by slowly pushing or pulling the chrome tab.

See *Storage* in your Owner Manual.

Paddle Shift Automatic Transmission

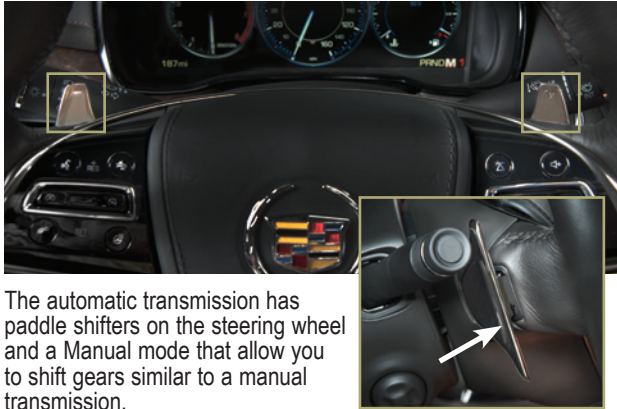

The automatic transmission has paddle shifters on the steering wheel and a Manual mode that allow you to shift gears similar to a manual transmission.

Temporary Tap Mode

- ▶ While in Drive (D), use either paddle behind the steering wheel to temporarily take control of gear selection. Automatic shifting returns if no manual shifts have been made after 10 seconds.
- ▶ Pull the right paddle to upshift or the left paddle to downshift. The current gear will be displayed on the instrument cluster.

Permanent Tap Mode

- ▶ Press the M (Manual) button on top of the shift lever to enable the Manual mode. Use the paddles to manually shift the transmission.

If current vehicle speed is too high or too low for the requested gear, the shift will not occur.


 
See *Driving and Operating in your Owner Manual*.

StabiliTrak®/Traction Control Systems

The traction control system limits wheelspin and the StabiliTrak stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

Turning Off Traction Control

Turn off traction control if the vehicle is stuck and rocking the vehicle is required.

- ▶ Press the  **Traction Control/StabiliTrak** button on the center console. The  **Traction Control Off** light will illuminate on the instrument cluster.
- ▶ Press the button again to turn on traction control.



See *Driving and Operating in your Owner Manual*.

Drive Mode Control System

The Drive Mode Control System automatically adjusts steering, automatic transmission and Magnetic Ride Control (if equipped) settings in real time.

- ▶ Press the **MODE** button on the center console to select the Tour (default at each ignition cycle), Sport, Snow/Ice, or Track mode.

See *Driving and Operating in your Owner Manual*.

Automatic Parking Assist◆

Automatic Parking Assist steers the vehicle to help park in parallel spaces.

- ▶ Press the **P** with a car icon, **Automatic Parking Assist** button on the right side of the CUE touch screen. A beep sounds and a parking assist display is shown in the Driver Information Center (DIC). The system will begin searching for a large enough parking space.
- ▶ The system searches for parking spaces to the right of the vehicle. To search for a parking space to the left, turn on the left turn signal.
- ▶ Shift the vehicle into Reverse or Drive as directed on the DIC and apply the accelerator or brake as needed. Parking Complete will be displayed and a beep will sound when the parking maneuver is complete.



See Driving and Operating in your Owner Manual.

Engine Oil Life System

The Engine Oil Life System calculates oil life based on vehicle use and displays Change Engine Oil Soon on the Driver Information Center when it's necessary to change the oil and filter. Reset the system to 100% only following an oil change.

See Vehicle Care in your Owner Manual.

Electric Parking Brake

- ▶ To apply the parking brake, pull the **(P)** **Parking Brake** switch on the left side of the instrument panel.
- ▶ To release the parking brake, turn on the ignition, press the brake pedal, and then press the **(P)** switch.



Note: *The parking brake will release automatically if the vehicle is running, placed into gear and an attempt is made to drive away.*

See Driving and Operating in your Owner Manual.

Tire Pressure Monitor

The **(!**) **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. Current tire pressures can be viewed in the Driver Information Center.

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

Refer to your Owner Manual for additional information about normal monthly tire maintenance.

See Vehicle Care in your Owner Manual.

Owner Privileges™

ROADSIDE ASSISTANCE

1-800-224-1400

TTY Users: 1-888-889-2438

Roadside Assistance provides every Cadillac owner with the advantage of contacting a Cadillac advisor and, when appropriate, a Cadillac-trained dealer technician who can provide on-site services, including towing service, battery jump-starting, lock-out service, fuel delivery and flat tire assistance. Services are provided for up to 6 years/70,000 miles, whichever occurs first.

Roadside Assistance and OnStar®: If you have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

CUSTOMER ASSISTANCE

1-800-458-8006

Should you need to ask a question, make a comment, or request additional information, Cadillac Customer Assistance is available anytime.

CADILLAC ONLINE OWNER CENTER

Visit my.cadillac.com for access to the Cadillac Owner Center, which features online owner manuals, maintenance information, service records, and more.

myCADILLAC and ONSTAR MOBILE APPS

The myCadillac and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your iPhone® or Android™ device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit OnStar.com.

CUE SUPPORT

For information or assistance operating the CUE infotainment system, call 1-855-4-CUE-NOW (1-855-428-3669).

We highly recommend always using ACDelco or genuine GM service parts.

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2013 by General Motors. All rights reserved.

