

PREPARATION

ENGINE CONTROL		
SST		PP-1
Introduction		PP-1
Lubricant and others		PP-1
ENGINE MECHANICAL		
SST		PP-2
Service tool		PP-2
Introduction		PP-3
Lubricant and others		PP-4
FUEL		
SST		PP-5
Introduction		PP-5
Lubricant and others		PP-5
EMISSION CONTROL		
Introduction		PP-6
EXHAUST		
Introduction		PP-7
COOLING		
Introduction		PP-8
Lubricant and others		PP-8
LUBRICATION		
SST		PP-10
Introduction		PP-10
Lubricant and others		PP-10
IGNITION		
Introduction		PP-11
Lubricant and others		PP-11
STARTING		
Introduction		PP-12
Lubricant and others		PP-12
CHARGING		
Introduction		PP-13
AUTOMATIC TRANSMISSION		
SST		PP-14
Introduction		PP-14
Lubricant and others		PP-15
CLUTCH		
SST		PP-17
Introduction		PP-17
Lubricant and others		PP-17
MANUAL TRANSMISSION		
SST		PP-18
Introduction		PP-18
Lubricant and others		PP-18




 
TRANSFER	
SST	PP-20
Introduction	PP-20
Lubricant and others	PP-20
PROPELLER SHAFT	
Introduction	PP-21
DRIVE SHAFT	
SST	PP-22
Introduction	PP-22
Lubricant and others	PP-22
DIFFERENTIAL	
SST	PP-23
Introduction	PP-25
Lubricant and others	PP-25
AXLE	
SST	PP-27
Introduction	PP-28
Lubricant and others	PP-28
SUSPENSION	
SST	PP-29
Introduction	PP-29
Lubricant and others	PP-30
TIRE AND WHEEL	
Introduction	PP-31
BRAKE CONTROL	
SST	PP-32
Introduction	PP-32
Lubricant and others	PP-32
BRAKE	
SST	PP-33
Service tool	PP-33
Introduction	PP-33
Lubricant and others	PP-34
PARKING BRAKE	
Introduction	PP-35
STEERING COLUMN	
Introduction	PP-36
Lubricant and others	PP-36
POWER STEERING	
SST	PP-37
Service tool	PP-37
Introduction	PP-37
Lubricant and others	PP-37
AIR CONDITIONER	
SST	PP-38
Introduction	PP-38
Lubricant and others	PP-39
SUPPLEMENTAL RESTRAINT SYSTEM	
SST	PP-40
Service tool	PP-40

Introduction	PP-40
Lubricant and others	PP-41
SEAT BELT	
SST	PP-43
Introduction	PP-43
Lubricant and others	PP-43
AUTO ALARM	
Introduction	PP-44
Lubricant and others	PP-44
ENGINE IMMOBILISER	
Introduction	PP-45
LIGHTING	
SST	PP-46
Introduction	PP-46
Lubricant and others	PP-46
WIPER AND WASHER	
Service Tool	PP-48
Introduction	PP-48
Lubricant and others	PP-48
DOOR LOCK	
Introduction	PP-49
Lubricant and others	PP-49
METER	
SST	PP-50
Introduction	PP-50
Lubricant and others	PP-50
AUDIO / VISUAL	
Introduction	PP-51
OTHER SYSTEM	
Introduction	PP-52
Lubricant and others	PP-52
GLASS AND WINDOW	
Introduction	PP-53
Lubricant and others	PP-53
MIRROR	
Introduction	PP-55
Lubricant and others	PP-55
INSTRUMENT PANEL	
Lubricant and others	PP-56
SEAT	
Service tool	PP-57
Introduction	PP-57
Lubricant and others	PP-57
BODY	
SST	PP-58
Service tool	PP-58
Introduction	PP-58
Lubricant and others	PP-58

BODY EXTERIOR	
Introduction	PP-60
Lubricant and others	PP-60
BODY INTERIOR	
Service Tool	PP-61
Lubricant and others	PP-61
BODY MULTIPLEX COMMUNICATION SYSTEM [LIN]	
SST	PP-62
Introduction	PP-62
CAN COMMUNICATION	
Introduction	PP-63


ENGINE CONTROL

SST

	09842-97209	EFI Computer Check Sub-Harness	EFI SYSTEM
	09843-18020	Diagnosis Check Wire	EFI SYSTEM
	09843-97201	Wire, EFI Inspection	EFI SYSTEM
	O9268-41047	Injection Measuring Tool Set	EFI SYSTEM

PP

Introduction




 
 
	09960-97001	DS-II	EFI SYSTEM CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY
		Torque Wrench	THROTTLE BODY KNOCK CONTROL SENSOR CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY
		Thermometer	E.F.I.WATER TEMPERATURE
		Electrical Tester	EFI SYSTEM KNOCK CONTROL SENSOR CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY E.F.I.WATER TEMPERATURE E.F.I.COMPUTER RELAY THROTTLE POSITION SENSOR

Lubricant and others



 
 

		Wire Harness for Inspection	CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY
		Engine Oil	CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY
		Automotive 12V Battery	CAMSHAFT TIMING OIL CONTROL VALVE ASSEMBLY

ENGINE MECHANICAL

SST





 
 

	09210-87701	Flywheel Holder	PARTIAL ENGINE ASSEMBLY
	09223-87202	Crankshaft Front Oil Seal Replacer	TIMING CHAIN (BELT) COVER OIL SEAL
	09278-87201	Timing Belt Pulley Holding Tool	CYLINDER HEAD GASKET TIMING CHAIN (BELT) COVER OIL SEAL
	09306-87501	Counter Gear Front Bearing Puller	CYLINDER HEAD GASKET TIMING CHAIN (BELT) COVER OIL SEAL
	09608-87302	Axle Hub Bearing & Drive Pinion Bearing Tool Set	ENGINE REAR OIL SEAL

Service tool

	09032-00100	Oil Pan Seal Cutter	ENGINE REAR OIL SEAL
	09040-00020	Socket Hexagon Wrench Set	VALVE CLEARANCE CAMSHAFT
	(09043-20100)	Socket Hexagon Wrench 10	VALVE CLEARANCE CAMSHAFT
	09043-50080	Double Hexagon 8 Wrench	CYLINDER HEAD GASKET
	09090-04020	Engine Sling Device	PARTIAL ENGINE ASSEMBLY

Introduction

PP

 

 
		Engine Lifter	PARTIAL ENGINE ASSEMBLY
	ML450	High-mission Jack	PARTIAL ENGINE ASSEMBLY
	09960-97001	DS-II	ENGINE MECHANICAL SYSTEM CYLINDER HEAD GASKET
		Torque Wrench	FAN & ALTERNATOR V-BELT VALVE CLEARANCE PARTIAL ENGINE ASSEMBLY CHAIN CAMSHAFT CYLINDER HEAD GASKET TIMING CHAIN (BELT) COVER OIL SEAL ENGINE REAR OIL SEAL
		Vernier Calipers	PARTIAL ENGINE ASSEMBLY CYLINDER HEAD GASKET TIMING CHAIN (BELT) COVER OIL SEAL ENGINE REAR OIL SEAL
		Micrometer (0-25mm)	VALVE CLEARANCE
		Dial Indicator	VALVE CLEARANCE
		Straightedge, Push-Pull Gauge	FAN & ALTERNATOR V-BELT
		Thickness Gauge	VALVE CLEARANCE
	95506-00091	Belt Tension Gauge	FAN & ALTERNATOR V-BELT
	KTL-12C	Timing Light (Current Detection Type)	ENGINE MECHANICAL SYSTEM
	TBGCG-100	Gasoline Compression Gauge Set	ENGINE MECHANICAL SYSTEM
	TIGCG-100	Gasoline Compression Gauge Set	ENGINE MECHANICAL SYSTEM
	TL-12C	Timing Light (Current Detection Type)	ENGINE MECHANICAL SYSTEM
		Chain Block	PARTIAL ENGINE ASSEMBLY

Lubricant and others

		Manual Transmission Gear Oil (API GL-3 or GL-4, API 75W-90, 75W-85 or 75W-80)	PARTIAL ENGINE ASSEMBLY
		MP Grease	TIMING CHAIN (BELT) COVER OIL SEAL ENGINE REAR OIL SEAL
		DEXRON-III	PARTIAL ENGINE ASSEMBLY
		Engine Oil	PARTIAL ENGINE ASSEMBLY CHAIN CAMSHAFT CYLINDER HEAD GASKET VALVE STEM OIL SEAL (O-RING)
		Gasoline	CYLINDER HEAD GASKET
		Cutter Knife	TIMING CHAIN (BELT) COVER OIL SEAL
		Gummed Tape	CAMSHAFT
		Sandpaper (No.400)	TIMING CHAIN (BELT) COVER OIL SEAL
		Paint	VALVE CLEARANCE CAMSHAFT CYLINDER HEAD GASKET
		Rope or Wire	VALVE CLEARANCE CAMSHAFT
		Three Bond 1207B	VALVE CLEARANCE CAMSHAFT CYLINDER HEAD GASKET ENGINE REAR OIL SEAL
		Three Bond 1324	VALVE CLEARANCE PARTIAL ENGINE ASSEMBLY CAMSHAFT
		Protective Tape	CYLINDER HEAD GASKET TIMING CHAIN (BELT) COVER OIL SEAL
		Wooden block	CYLINDER HEAD GASKET ENGINE REAR OIL SEAL VALVE STEM OIL SEAL (O-RING)
		Vinyl Tape	CAMSHAFT
		Engine Hanger No.1 (Replacement parts)	PARTIAL ENGINE ASSEMBLY
		Engine Hanger No.2 (Replacement parts)	PARTIAL ENGINE ASSEMBLY
		Engine Hanger Attachment Bolt (Replacement parts)	PARTIAL ENGINE ASSEMBLY


FUEL

SST

	09268-41047	Injection Measuring Tool Set	FUEL SYSTEM
	09843-97201	EFI Inspection Wire	FUEL INJECTOR ASSEMBLY
	09268-41047	Injection Measuring Tool Set	FUEL INJECTOR ASSEMBLY

PP

Introduction





		Clip Remover	FUEL PUMP
	09960-97001	DS-II	FUEL SYSTEM FUEL INJECTOR ASSEMBLY FUEL TANK ASSEMBLY
		Torque Wrench	FUEL INJECTOR ASSEMBLY FUEL PUMP FUEL TANK ASSEMBLY
		Stopwatch	FUEL INJECTOR ASSEMBLY
		Graduated Cylinder	FUEL INJECTOR ASSEMBLY
		Electrical Tester	FUEL INJECTOR ASSEMBLY FUEL PUMP

Lubricant and others

		Wire Harness for Inspection	FUEL INJECTOR ASSEMBLY
		Butyl Tape	FUEL PUMP
		Gasoline	FUEL INJECTOR ASSEMBLY
		Cutter Knife	FUEL INJECTOR ASSEMBLY
		Fuel Hose	FUEL INJECTOR ASSEMBLY
		Automotive 12 V Battery	FUEL PUMP
		Vinyl Bag	FUEL INJECTOR ASSEMBLY FUEL PUMP FUEL TANK ASSEMBLY

EMISSION CONTROL

Introduction

	B20D-22H	O ₂ Sensor Socket	OXYGEN SENSOR OXYGEN SENSOR NO.2
	09960-97001	DS-II	EMISSION CONTROL SYSTEM
		Torque Wrench	OXYGEN SENSOR OXYGEN SENSOR NO.2
		Electrical Tester	OXYGEN SENSOR
	TB-501	Mighty-Vac	EMISSION CONTROL SYSTEM
	6890	Mighty-Vac	EMISSION CONTROL SYSTEM

EXHAUST

 
 
 


 



Introduction

		Torque Wrench	EXHAUST PIPE ASSEMBLY
		Vernier Calipers	EXHAUST PIPE ASSEMBLY

COOLING

Introduction

PP

		Torque Wrench	RADIATOR ASSEMBLY WATER PUMP ASSEMBLY
		Vernier Calipers	THERMOSTAT
		Radiator Cap Tester	COOLANT
		Radiator Cap Tester Adapter	COOLANT
		Electrical Tester	COOLING FAN RELAY
	RCT-2A	Radiator Cap Tester	COOLING SYSTEM
	RCT-2A-30S	Radiator Cap Tester Adapter Set A	COOLING SYSTEM
	TMA-20	Thermometer	THERMOSTAT
	RCT-3	Radiator Cap Tester	COOLING SYSTEM
	RCT-3-AST	Radiator Cap Tester Adapter Set A	COOLING SYSTEM
	TH-10A	Thermometer	THERMOSTAT
	QL-25N	Preset Torque Wrench(25N)	THERMOSTAT

 
Lubricant and others

		Ethylene glycol based anti-freeze solution	COOLANT
--	--	--	---------





		String	THERMOSTAT
--	--	--------	------------

LUBRICATION

SST

	09228-87201	Oil Filter Wrench	OIL FILTER
---	-------------	-------------------	------------

Introduction


		Torque Wrench	OIL PUMP ASSEMBLY OIL FILTER
	OPG-210	Automatic Transmission Oil Pressure Gauge Set	LUBRICATION SYSTEM
	(OPG-230)	Adapter D	LUBRICATION SYSTEM
	ATG-100	Automatic Transmission Oil Pressure Gauge Set	LUBRICATION SYSTEM
	(ATG-OP20)	Adapter D	LUBRICATION SYSTEM

Lubricant and others

		Engine Oil	OIL PUMP ASSEMBLY OIL FILTER
		White Gasoline	LUBRICATION SYSTEM
		Hose	OIL FILTER
		Three Bond 1194J	LUBRICATION SYSTEM

IGNITION

Introduction

		Torque Wrench	CLUNK POSITION SENSOR SPARK PLUG
		Plug Gap Gauge	SPARK PLUG
		Electrical Tester	CAM POSITION SENSOR CLUNK POSITION SENSOR
	QL-25N	Preset Torque Wrench(25N)	CAM POSITION SENSOR






PP

Lubricant and others

		Engine Oil	CAM POSITION SENSOR CLUNK POSITION SENSOR
--	--	------------	--

STARTING

Introduction

	ML450	High-mission Jack	STARTER ASSEMBLY
		Torque Wrench	STARTER ASSEMBLY
		Vernier Calipers	STARTER ASSEMBLY
		Inspection Cable	STARTER ASSEMBLY
		Electrical Tester	STARTER ASSEMBLY STARTER RELAY ASSEMBLY
	BE4-270	Extension Bar (270mm, 12.7 sp)	STARTER ASSEMBLY
	BE4-600	Extension Bar (600mm, 12.7 sp)	STARTER ASSEMBLY
	QL-100N	Preset Torque Wrench (100N)	STARTER ASSEMBLY
	QL-25N	Preset Torque Wrench (25N)	STARTER ASSEMBLY

Lubricant and others

		Automotive 12V Battery	STARTER ASSEMBLY
--	--	------------------------	------------------

 


 

 
CHARGING

Introduction




		Torque Wrench	ALTERNATOR ASSEMBLY
--	--	---------------	---------------------


 


AUTOMATIC TRANSMISSION

SST

	09302-87201	Neutral Start Switch Adjust Gauge	NEUTRAL START SWITCH ASSEMBLY
	09308-00010	Oil Seal Puller	EXTENSION HOUSING OIL SEAL
	09350-97201	Manual Valve Idler Shaft Holder	TRANSMISSION VALVE BODY ASSEMBLY
	09351-87211	Manual Valve Setting Tool	TRANSMISSION VALVE BODY ASSEMBLY
	09990-97201	A/T Solenoid Wire Check Sub-Harness	ELECTRONICALLY CONTROL AUTOMATIC TRANSMISSION [ECT]
	09325-87201	A/T PRESSURE GAUGE NO.1 ADAPTOR	ELECTRONICALLY CONTROL AUTOMATIC TRANSMISSION [ECT]

Introduction

	HMJ450-TW	High-mission Jack	AUTOMATIC TRANSMISSION ASSEMBLY
	ML450	High-mission Jack	AUTOMATIC TRANSMISSION ASSEMBLY
	09960-97001	DS-II	ELECTRONICALLY CONTROL AUTOMATIC TRANSMISSION [ECT] TRANSMISSION REVOLUTION SENSOR

		Torque Wrench	NEUTRAL START SWITCH ASSEMBLY TRANSMISSION REVOLUTION SENSOR AUTOMATIC TRANSMISSION ASSEMBLY TRANSMISSION FLOOR SHIFT ASSEMBLY TRANSMISSION WIRE TRANSMISSION VALVE BODY ASSEMBLY SHIFT LOCK RELEASE CABLE ASSEMBLY
		Vernier Calipers	AUTOMATIC TRANSMISSION ASSEMBLY SHIFT LOCK RELEASE CABLE ASSEMBLY
		Dial Indicator	TORQUE CONVERTER CLUTCH AND DRIVE PLATE
		Straightedge	AUTOMATIC TRANSMISSION ASSEMBLY
		Electrical Tester	ELECTRONICALLY CONTROL TRANSMISSION [ECT] NEUTRAL START SWITCH ASSEMBLY TRANSMISSION WIRE AUTOMATIC TRANSMISSION 3 WAY SOLENOID ASSEMBLY CLUTCH CONTROL SOLENOID NO.1 LOCKUP CONTROL SOLENOID CLUTCH CONTROL SOLENOID NO.2
	OPG-210	Automatic Transmission Oil Pressure Gauge Set	ELECTRONICALLY CONTROL AUTOMATIC TRANSMISSION [ECT]
	BE4-600	Extension Bar (600mm, 12.7sp)	AUTOMATIC TRANSMISSION ASSEMBLY
	QL-100N	Preset Torque Wrench (100N)	AUTOMATIC TRANSMISSION ASSEMBLY
	QL-25N	Preset Torque Wrench (25N)	NEUTRAL START SWITCH ASSEMBLY TRANSMISSION WIRE

 
 
 

Lubricant and others

		MP Grease	AUTOMATIC TRANSMISSION ASSEMBLY EXTENSION HOUSING OIL SEAL
		DEXRON-III	TRANSMISSION REVOLUTION SENSOR TRANSMISSION VALVE BODY ASSEMBLY EXTENSION HOUSING OIL SEAL

		Paint	AUTOMATIC TRANSMISSION ASSEMBLY
		Battery	AUTOMATIC TRANSMISSION THREE- WAY SOLENOID ASSEMBLY CLUTCH CONTROL SOLENOID NO.1 LOCKUP CONTROL SOLENOID CLUTCH CONTROL SOLENOID NO.2
		Bulb (12V-21W)	CLUTCH CONTROL SOLENOID NO.1 CLUTCH CONTROL SOLENOID NO.2

CLUTCH

SST

	09210-87701	Flywheel Holder	CLUTCH UNIT
	09301-00110	Clutch Guide Tool	CLUTCH UNIT
	09302-87701	Clutch Diaphragm Spring Height No.4 Gauge	CLUTCH UNIT
	09333-00013	Clutch Diaphragm Spring Aligner	CLUTCH UNIT

PP

Introduction


 
		Torque Wrench	CLUTCH PEDAL (MTM) CLUTCH MASTER CYLINDER ASSEMBLY (MTM) CLUTCH RELEASE CYLINDER ASSEMBLY CLUTCH UNIT CLUTCH START SWITCH ASSEMBLY
		Vernier Calipers	CLUTCH PEDAL (MTM) CLUTCH UNIT
		Dial Indicator	CLUTCH UNIT
		Electrical Tester	CLUTCH START SWITCH ASSEMBLY

Lubricant and others



 

		MP Grease	CLUTCH PEDAL (MTM)
		Clutch Grease	CLUTCH UNIT
		Rubber Grease	CLUTCH RELEASE CYLINDER ASSEMBLY
		EP Grease	CLUTCH UNIT
		FMVSS116 DOT3 or DOT4	CLUTCH RELEASE CYLINDER ASSEMBLY

MANUAL TRANSMISSION

SST

	09308-00010	Oil Seal Puller	TRANSMISSION EXTENSION HOUSING OIL SEAL (MTM) (2WD)
	09309-87201	Transmission Bearing Replacer	TRANSMISSION EXTENSION HOUSING OIL SEAL (MTM) (2WD)

Introduction

		Clip Remover	SHIFT LEVER ASSEMBLY (MTM)
	HMJ450-TW	High-mission Jack	TRANSMISSION UNIT ASSEMBLY (MTM)
	ML450	High-mission Jack	TRANSMISSION UNIT ASSEMBLY (MTM)
		Torque Wrench	MANUAL TRANSMISSION SYSTEM (MTM) TRANSMISSION UNIT ASSEMBLY (MTM) SHIFT LEVER ASSEMBLY (MTM) TRANSMISSION CONTROL CABLE ASSEMBLY (MTM)
	BE4-600	Extension Bar (600mm,12.7sp)	TRANSMISSION UNIT ASSEMBLY (MTM)
	QL-100N	Preset Torque Wrench (100N)	TRANSMISSION UNIT ASSEMBLY (MTM)

 
 
 
Lubricant and others

		Manual Transmission Gear Oil (API GL-3 or GL-4, API 75W-90, 75W-85 or 75W-80)	TRANSMISSION EXTENSION HOUSING OIL SEAL (MTM) (2WD)
		MP Grease	TRANSMISSION EXTENSION HOUSING OIL SEAL (MTM)(2WD)
		Wire	MANUAL TRANSMISSION SYSTEM (MTM)
		Engine Hanger No.1	TRANSMISSION UNIT ASSEMBLY (MTM)



		Engine Hanger No.2	TRANSMISSION UNIT ASSEMBLY (MTM)
--	--	--------------------	-------------------------------------

TRANSFER

SST

	09308-00010	Oil Seal Puller	TRANSFER EXTENSION HOUSING OIL SEAL (4WD)
	09309-87201	Transmission Bearing Replacer	TRANSFER EXTENSION HOUSING OIL SEAL(4WD)
	09310-87301	Counter Shaft Front Bearing Replacer	TRANSFEREXTENSION HOUSING OIL SEAL(4WD)

Introduction

		Scraper	TRANSFER ASSEMBLY (4WD)
		Torque Wrench	TRANSFER OIL (4WD) TRANSFER EXTENSION HOUSING OIL SEAL(4WD) TRANSFER ASSEMBLY (4WD)
		Electrical Tester	DIFFERENTIAL LOCK SWITCH (4WD)
	TB-501	Mighty-Vac	TRANSFER SYSTEM (4WD)
	6810	Mighty-Vac	TRANSFER SYSTEM (4WD)

Lubricant and others

		Manual Transmission Gear Oil (API GL-3 or GL-4, API 75W-90, 75W-85 or 75W-80)	TRANSFER OIL (4WD)
		MP Grease	TRANSFER EXTENSION HOUSING OIL SEAL(4WD)
		White Gasoline	TRANSFER ASSEMBLY (4WD)
		Three Bond TB 1217	TRANSFER ASSEMBLY (4WD)

PROPELLER SHAFT

Introduction

		Torque Wrench	FRONT PROPELLER SHAFT ASSEMBLY (4WD) PROPELLER SHAFT ASSEMBLY
		V Block	FRONT PROPELLER SHAFT ASSEMBLY (4WD) PROPELLER SHAFT ASSEMBLY
		Dial Indicator	FRONT PROPELLER SHAFT ASSEMBLY (4WD) PROPELLER SHAFT ASSEMBLY
		Spiring Balance	FRONT PROPELLER SHAFT ASSEMBLY (4WD) PROPELLER SHAFT ASSEMBLY

PP

DRIVE SHAFT

SST

	09511-87202	Brake Drum Stopper	FRONT DRIVE SHAFT ASSEMBLY (4WD)
	09628-00011	Ball Joint Puller	FRONT DRIVE SHAFT ASSEMBLY (4WD)
	09648-87201	Drive Shaft Replacer	FRONT DRIVE SHAFT ASSEMBLY (4WD)
	09648-97202	Drive Shaft Boots Band Pliers B	FRONT DRIVE SHAFT ASSEMBLY (4WD)

Recommended tool

 
 
 
 


 
 

 
		Chisel	FRONT DRIVE SHAFT ASSEMBLY (4WD)
		Torque Wrench	FRONT DRIVE SHAFT ASSEMBLY (4WD)

Lubricant and others

 
 
 

 
 

 
 
 
 

		MP Grease	FRONT DRIVE SHAFT ASSEMBLY (4WD)
		Protective Tape	FRONT DRIVE SHAFT ASSEMBLY (4WD)

DIFFERENTIAL

SST

 
 
 
	09213-58013	Crankshaft Pulley Holding Tool	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09219-87202	Engine Overhaul Stand	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY
	09219-87701	Engine Overhaul Attachment	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09257-87202	Crankshaft Bearing Replacer	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09308-00010	Oil Seal Puller	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09308-10010	Oil Seal Puller	FRONT DIFFERENTIAL CARRIER OIL SEAL(4WD) FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER OIL SEAL REAR DIFFERENTIAL CARRIER ASSEMBLY
	09309-87201	Transmission Bearing Replacer	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09310-87301	Counter Shaft Front Bearing Replacer	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09330-00021	Companion Flange Holding Tool	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09350-87202	Automatic Transmission Tool Set	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)

PP

	09504-87501	Differential Side Bearing Adjusting Nut Wrench	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09510-87301	Front Hub & Drum Puller	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09515-87302	Rear Hub Bearing Replacer	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09530-87504	Differential Drive Pinion Adjust Gauge Set	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09548-87202	Differential Overhaul Attachment	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09564-97401	Starting Torque Measurement Tool	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09608-03071	Replacer	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09608-87302	Axle Hub Bearing & Drive Pinion Bearing Tool Set	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09636-20010	Upper Ball Joint Dust Cover Replacer	FRONT DIFFERENTIAL CARRIER OIL SEAL (4WD) FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09707-87302	Spring Bush Remover & Replacer	REAR DIFFERENTIAL CARRIER ASSEMBLY
	09950-60010	Replacer Set	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)
	09950-97201	Universal Puller	REAR DIFFERENTIAL CARRIER ASSEMBLY

	O9213-31021	Crankshaft Pulley Adjust Puller	REAR DIFFERENTIAL CARRIER ASSEMBLY
	O9330-87301	Drive Pinion Flange Holding Tool	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER OIL SEAL REAR DIFFERENTIAL CARRIER ASSEMBLY
	O9502-10012	Differential Side Bearing Puller	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)

Introduction

		Bearing Pillaring Attachment NO.145	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY
		Torque Wrench	DIFFERENTIAL OIL
		Torque Wrench	DIFFERENTIAL OIL FRONT DIFFERENTIAL CARRIER OIL SEAL (4WD) FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER OIL SEAL REAR DIFFERENTIAL CARRIER ASSEMBLY
		Dial Indicator	REAR DIFFERENTIAL CARRIER ASSEMBLY
		Preset Torque Wrench (20-100N*m) (Parts Number : CL100N - 15D-MH)	DIFFERENTIAL OIL
	RH15DX24	Ring Head (24mm)	DIFFERENTIAL OIL
	HMJ-450TWS	High-mission Jack (Allowance load 450 Kg)	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY

Lubricant and others

		MP Grease	FRONT DIFFERENTIAL CARRIER OIL SEAL (4WD)
--	--	-----------	---

 
 


 
 

 
 
 

		Limited Slip Differential Gear Oil (API GL-5, SAE 80W-90)	FRONT DIFFERENTIAL CARRIER OIL SEAL(4WD) FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD) REAR DIFFERENTIAL CARRIER ASSEMBLY
		Red Lead Primer	REAR DIFFERENTIAL CARRIER ASSEMBLY
		Three Bond 1216	FRONT DIFFERENTIAL CARRIER ASSEMBLY (4WD)

 
PP

AXLE



SST

PP

	09308-00010	Oil Seal Puller	REAR AXLE ASSEMBLY
	09506-87302	Rear Differential Drive Pinion Bearing Corn Replacer	STEERING KNUCKLE LH FRONT AXLE HUB LH
	09515-21010	Rear Axle Shaft Bearing Replacer	REAR AXLE ASSEMBLY
	09517-12010	Rear Axle Shaft Oil Seal Replacer	REAR AXLE ASSEMBLY
	09520-00031	Rear Axle Shaft Puller	STEERING KNUCKLE LH FRONT AXLE HUB LH REAR AXLE ASSEMBLY
	09550-10012	Replacer Set B	STEERING KNUCKLE LH FRONT AXLE HUB LH
	(09554-10010)	Differential Drive Pinion Oil Seal Replacer	STEERING KNUCKLE LH FRONT AXLE HUB LH
	09608-32010	Steering Knuckle Oil Seal Replacer	REAR AXLE ASSEMBLY
	09628-00011	Ball Joint Puller	STEERING KNUCKLE LH
	09718-87702	Front Disk Brake Dust Cover Replacer	STEERING KNUCKLE LH
	09950-40011	Puller B Set	STEERING KNUCKLE LH FRONT AXLE HUB LH

	O9023-00100	Union Nut Wrench	REAR AXLE HOUSING ASSEMBLY
---	-------------	------------------	----------------------------

Introduction



 
		Chisel	STEERING KNUCKLE LH REAR AXLE ASSEMBLY
		Snap Ring Expander	STEERING KNUCKLE LH FRONT AXLE HUB LH
		Hand Grinder	REAR AXLE ASSEMBLY
	HMJ450-TW	High-mission Jack	REAR AXLE HOUSING ASSEMBLY
	ML450	High-mission Jack	REAR AXLE HOUSING ASSEMBLY
		Torque Wrench	STEERING KNUCKLE LH FRONT AXLE HUB LH REAR AXLE ASSEMBLY REAR AXLE HOUSING ASSEMBLY
		Dial Indicator	AXLE SYSTEM STEERING KNUCKLE LH

Lubricant and others

		MP Grease	REAR AXLE ASSEMBLY
		Three Bond 1212	REAR AXLE HOUSING ASSEMBLY




SUSPENSION

SST






	09628-00011	Ball Joint Puller	FRONT SUSPENSION LOWWER ARM ASSEMBLY LH
	09727-30021	Coil Spring Compressor	FRONT SHOCK ABSORBER W/COIL SPRING
	09729-97203	Hexagon Wrench 6 Socket (TONE 3KH-6L)	FRONT STABILIZER BAR

PP

Introduction

		Brake Pedal Pressure	FRONT WHEEL ALIGNMENT
		Metal Saw	FRONT SHOCK ABSORBER W/COIL SPRING
	CCK-IN	CCK Gauge Compensator	FRONT WHEEL ALIGNMENT
	MB-40B-21	Brake Pedal Pressure	FRONT WHEEL ALIGNMENT
	BPD-10W	Brake Pedal Pressure	FRONT WHEEL ALIGNMENT
		Torque Wrench	FRONT WHEEL ALIGNMENT FRONT SHOCK ABSORBER W/COIL SPRING FRONT SUSPENSION LOWER ARM ASSEMBLY LH FRONT STABILIZER BAR REAR SHOCK ABSORBER LH UPPER CONTROL ARM ASSEMBLY RR LH LOWER CONTROL ARM ASSEMBLY LH
		Camber Caster Kingpin Gauge	FRONT WHEEL ALIGNMENT
		Turning Radius Gauge	FRONT WHEEL ALIGNMENT
		Tire Pressure Gauge	FRONT WHEEL ALIGNMENT
		Dial Indicator	FRONT WHEEL ALIGNMENT

PP

	<p>MB-35K</p>	<p>Turning Radius Gauge</p>	<p>FRONT WHEEL ALIGNMENT</p>
	<p>MB-56FK</p>	<p>Toe-in Gauge</p>	<p>FRONT WHEEL ALIGNMENT</p>
	<p>TG-XU</p>	<p>Toe-in Gauge</p>	<p>FRONT WHEEL ALIGNMENT</p>
	<p>TRG-3</p>	<p>Turning Radius Gauge</p>	<p>FRONT WHEEL ALIGNMENT</p>
	<p>MB-B</p>	<p>Magnetic Base</p>	<p>FRONT WHEEL ALIGNMENT</p>

Lubricant and others

		<p>Metal Saw</p>	<p>REAR SHOCK ABSORBER ASSEMBLY LH</p>
		<p>Protective Tape</p>	<p>FRONT SHOCK ABSORBER W/COIL SPRING</p>


 
TIRE AND WHEEL

Introduction


		Torque Wrench	WHEEL AND TIRE
		Tire Pressure Gauge	WHEEL AND TIRE SYSTEM
		Dial Indicator	WHEEL AND TIRE SYSTEM

BRAKE CONTROL

SST

	09843-18020	Diagnosis Check Wire	ABS WITH EBD SYSTEM
	O9023-00100	Union Nut Wrench	BRAKE ACTUATOR ASSEMBLY BRAKE ACTUATOR ASSEMBLY (WITH VSC)

Introduction

	09960-97001	DS-II	ABS WITH EBD SYSTEM ABS & TRC & VSC & BA SYSTEM WITH EBD
		Torque Wrench	BRAKE ACTUATOR ASSEMBLY BRAKE ACTUATOR ASSEMBLY (WITH VSC) FRONT SPEED SENSOR LH REAR SPEED SENSOR LH DECELERATION SENSOR (4WD) DECELERATION SENSOR (WITH VSC)
		Electrical Tester	ABS WITH EBD SYSTEM ABS & TRC & VSC & BA SYSTEM WITH EBD

 
 
 
Lubricant and others

		Protective Tape	FRONT SPEED SENSOR LH
--	--	-----------------	-----------------------

PP


BRAKE

SST

	09703-30011	Tool Set, Brake Shoe Return Spring	REAR DRUM BRAKE
	09730-87401	Brake Booster Gauge Gauge Set	BRAKE MASTER CYLINDER ASSEMBLY
	O9023-00100	Union Nut Wrench	BRAKE MASTER CYLINDER ASSEMBLY REAR DRUM BRAKE

 
PP

Service tool

	09023-00100	Union Nut Wrench	BRAKE FLUID
--	-------------	------------------	-------------

Introduction

		Snap Ring Pliers	BRAKE MASTER CYLINDER ASSEMBLY
		Box Wrench(7 mm)	BRAKE MASTER CYLINDER ASSEMBLY
		Pin Punch	BRAKE MASTER CYLINDER ASSEMBLY
		Torque Wrench	BRAKE FLUID BRAKE PEDAL BRAKE MASTER CYLINDER ASSEMBLY BRAKE BOOSTER ASSEMBLY FRONT DISK BRAKE REAR DRUM BRAKE
		Vernier Caliper	BRAKE PEDAL FRONT DISK BRAKE REAR DRUM BRAKE
		Micrometer	FRONT DISK BRAKE
		Dial Indicator	FRONT DISK BRAKE

	BT-4	Portable Brake Tester	BRAKE SYSTEM
---	------	-----------------------	--------------

Lubricant and others

		MP Grease	BRAKE PEDAL BRAKE BOOSTER ASSEMBLY
		Brake Grease	BRAKE MASTER CYLINDER ASSEMBLY FRONT DISK BRAKE REAR DRUM BRAKE
		FMVSS116 DOT3 or DOT4	BRAKE FLUID BRAKE MASTER CYLINDER ASSEMBLY FRONT DISK BRAKE
		Brake Cleaner (Spray Type) 08834-00090	FRONT DISK BRAKE
		Chalk	REAR DRUM BRAKE

PP

PARKING BRAKE

Introduction

		Torque Wrench	PARKING BRAKE PARKING BRAKE PEDAL ASSEMBLY PARKING BRAKE CABLE ASSEMBLY NO.1 PARKING BRAKE CABLE ASSEMBLY NO.2 PARKING BRAKE CABLE ASSEMBLY NO.3 PARKING BRAKE LEVER
--	--	---------------	--

PP

STEERING COLUMN

Introduction

		Reverse Tap	STEERING COLUMN ASSEMBLY
		Torque Wrench	STEERING COLUMN ASSEMBLY

Lubricant and others

 
		Drill	STEERING COLUMN ASSEMBLY
--	--	-------	--------------------------

POWER STEERING


SST

	09612-00012	Rack & Pinion Steering Rack Housing Stand	STEERING GEAR ASSEMBLY
	09616-87502	Steering Pinion Bearing Adjusting Socket	STEERING GEAR ASSEMBLY
	09628-00011	Ball Joint Puller	STEERING GEAR ASSEMBLY
	09922-10010	Variable Open Wrench	STEERING GEAR ASSEMBLY

Service tool

		Simple Spinner	STEERING GEAR ASSEMBLY
---	--	----------------	------------------------

Introduction


	09960-97001	DS-II	ELECTRIC POWER STEERING SYSTEM
		Torque Wrench	ELECTRIC POWER STEERING SYSTEM STEERING GEAR ASSEMBLY
		Electrical Tester	ELECTRIC POWER STEERING SYSTEM

Lubricant and others




		EP Grease	STEERING GEAR ASSEMBLY
		Long Life Grease	STEERING GEAR ASSEMBLY

AIR CONDITIONER

SST

	09843-18020	Diagnosis Check Wire	HEATER & AIR CONDITIONING SYSTEM
---	-------------	----------------------	----------------------------------

Introduction

		Snap Ring Plier	COMPRESSOR ASSEMBLY
		Vacuum Pump	REFRIGERANT HFC-134a (R134a)
		Vacuum Pump Adapter	REFRIGERANT HFC-134a (R134a)
		Air Conditioning Tool Set HFC-134a (R134a)	REFRIGERANT HFC-134a (R134a)
		Halogen Leak Detector	REFRIGERANT HFC-134a (R134a)
	95048-10290	Quick Joint Remover (Low Pressure)	AIR CONDITIONING RADIATOR ASSEMBLY
	95048-10300	Quick Joint Remover (High Pressure)	AIR CONDITIONING RADIATOR ASSEMBLY
	09960-97001	DS-II	HEATER & AIR CONDITIONING SYSTEM
		Torque Wrench	AIR CONDITIONING RADIATOR ASSEMBLY COOLER COMPRESSOR ASSEMBLY AIR CONDITIONING AMPLIFIER ASSEMBLY CONDENSER ASSEMBLY (WITH RECEIVER)
		Dial Indicator	COOLER COMPRESSOR ASSEMBLY
		Thermometer	HEATER & AIR CONDITIONING SYSTEM HEATER & AIR CONDITIONING SYSTEM

		Electrical Tester	HEATER & AIR CONDITIONING SYSTEM HEATER & AIR CONDITIONING SYSTEM HEATER CONTROL No.1 HEATER CONTROL No.2 HEATER CONTROL No.3 COOLER COMPRESSOR ASSEMBLY BLOWER REGISTER BLOWER REGISTER TRANSISTOR ASSEMBLY COOLER THERMISTOR NO.1 HEATER RELAY NO.1 AIR CONDITIONER TUBE AND ACCESSORY ASSEMBLY COOLER THERMISTOR (INNER AIR SENSOR) COOLER THERMISTOR(OUTER AIR SENSOR) COOLER THERMISTOR(DAYLIGHT SENSOR) MAGNETIC CLUTCH RELAY
--	--	-------------------	---



 



PP

Lubricant and others

 
		REFRIGERANT GAS HFC-134a (R134a)	REFRIGERANT HFC-134a (R134a)
		Automotive 12V Battery	HEATER & AIR CONDITIONING SYSTEM HEATER & AIR CONDITIONING SYSTEM HEATER CONTROL ASSEMBLY HEATER CONTROL No.1 HEATER CONTROL No.2 HEATER CONTROL No.3 AIR CONDITIONER RADIATOR ASSEMBLY COMPRESSOR ASSEMBLY HEATER RELAY NO.1 BLOWER MOTOR (WITH FAN)
		Protective Tape	AIR CONDITIONER RADIATOR ASSEMBLY
		Vinyl Tape	AIR CONDITIONER RADIATOR ASSEMBLY COMPRESSOR ASSEMBLY CONDENSER ASSEMBLY (WITH RECEIVER)
		Bulb (12V-3.4W)	HEATER & AIR CONDITIONING SYSTEM
		Compressor Oil (ND-OIL8)	AIR CONDITIONER RADIATOR ASSEMBLY COMPRESSOR ASSEMBLY CONDENSER ASSEMBLY (WITH RECEIVER)
		Chlorofluorocarbon Recovery And Regenerating Machine	REFRIGERANT HFC-134a (R134a)

SUPPLEMENTAL RESTRAINT SYSTEM


SST

	09082-00760	Airbag Deployment Wire Sub-harness No.4	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY FRONT SEAT SIDE AIRBAG ASSEMBLY RH
	09082-00802	Airbag Deployment Wire Sub-Harness No. 8	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH
	(09082-10801)	Wire A	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH
	(09082-20801)	Wire B	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH
	09082-87710	Air Bag Deployment Wire	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH
	09843-18020	Diagnosis Check Wire	SRS AIRBAG SYSTEM

Service tool

	09013-1C120	"TORX" Socket Wrench T30	HORN BUTTON ASSEMBLY
---	-------------	-----------------------------	----------------------

Introduction

	09960-97001	DS-II	SRS AIRBAG SYSTEM
---	-------------	-------	-------------------

PP

		Torque Wrench	HORN BUTTON ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH AIRBAG COMPUTER ASSEMBLY FRONT AIRBAG SENSOR RH SIDE AIRBAG SENSOR ASSEMBLY RH SIDE AIRBAG SENSOR ASSEMBLY RH NO.2
		Electrical Tester	SRS AIRBAG SYSTEM SPIRAL CABLE

PP


 
Lubricant and others

		Wire Harness (wire cross-section: 1.25mm ² or more)	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH
		Wire with diameter 1.8 mm or more Regular Iron Wire for general purposes JIS Standard SWM-B or equivalent	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH
		Automotive 12V Battery	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH
		Protective Tape	HORN BUTTON ASSEMBLY
		Bolt x 2 (Length under neck 35mm or longer, pitch 1.0 mm, nominal diameter 6.0 mm)	HORN BUTTON ASSEMBLY
		Tire x 4 (Tire width 185mm Tire Caliber 14 inch level)	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY
		Tire with Disc Wheel x 2 Tire x 3	HORN BUTTON ASSEMBLY
		Tire with Disc Wheel x 1 Tire x 4	INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH

		Dust-proof Safety Glasses and Vinyl Bag	HORN BUTTON ASSEMBLY INSTRUMENT PANEL PASSENGER AIRBAG ASSEMBLY CURTAIN SHIELD AIRBAG ASSEMBLY RH FRONT SEAT SIDE AIRBAG ASSEMBLY RH
--	--	---	--

SEAT BELT

SST

	09082-87710	Air Bag Deployment Wire	FRONT SEAT OUTER BELT ASSEMBLY RH
	09082-97201	Air Bag Deployment Wire Sub-Harness D1	FRONT SEAT OUTER BELT ASSEMBLY RH

PP

Introduction

		Torque Wrench	FRONT SEAT OUTER BELT ASSEMBLY RH FRONT SEAT INNER BELT ASSEMBLY RH REAR SEAT 3 POINT TYPE BELT ASSY OUT RH REAR SEAT WRAP TYPE BELT ASSEMBLY RH REAR SEAT WRAP TYPE BELT ASSEMBLY CTR LH REAR SEAT INNER BELT ASSEMBLY RH
		Electrical Tester	FRONT SEAT CUSHION COVER & PAD LH FRONT SEAT INNER BELT ASSEMBLY RH FRONT SEAT INNER BELT ASSEMBLY LH

Lubricant and others

		Wire Harness (wire cross-section:1.25mm ² or more)	FRONT SEAT OUTER BELT ASSEMBLY RH
		12V Battery	FRONT SEAT OUTER BELT ASSEMBLY RH
		Protective Tape	FRONT SEAT OUTER BELT ASSEMBLY RH REAR SEAT 3 POINT TYPE BELT ASSEMBLY OUT RH
		Tire with Wheel x 1 Âtire width approx. 185mm)	FRONT SEAT OUTER BELT ASSEMBLY RH
		Dust Protect Glass,Glove,Vinyl Bag	FRONT SEAT OUTER BELT ASSEMBLY RH

AUTO ALARM

Introduction

		Electrical Tester	SECURITY ALARM SYSTEM
--	--	-------------------	-----------------------


PP

Lubricant and others

		Battery	SECURITY ALARM SYSTEM
--	--	---------	-----------------------

ENGINE IMMOBILISER


Introduction

	09960-97001	DS-II	ENGINE IMMOBILISER SYSTEM
		Electrical Tester	ENGINE IMMOBILISER SYSTEM


LIGHTING

SST

PP

	09843-18020	Diagnosis Check Wire	LIGHTING SYSTEM
---	-------------	----------------------	-----------------

Introduction

		Torque Wrench	HEADLIGHT ASSEMBLY LH FOG LIGHT ASSEMBLY LH TAIL LIGHT (REAR COMBINATION LIGHT) ASSEMBLY LH LICENSE PLATE LIGHT ASSEMBLY FOG LIGHT BULB HEADLIGHT DIMMER SWITCH ASSY
		Tire Pressure Gauge	LIGHTING SYSTEM
		Electrical Tester	LIGHTING SYSTEM LICENSE PLATE LIGHT ASSEMBLY MAP LIGHT ASSEMBLY ROOM LIGHT ASSEMBLY NO.2 ROOM LIGHT ASSEMBLY NO.3 HEADLIGHT DIMMER SWITCH ASSEMBLY HAZARD WARNING SIGNAL SWITCH ASSY HEADLIGHT LEVELING SWITCH STOP LIGHT SWITCH ASSEMBLY FRONT DOOR COURTESY SWITCH ASSEMBLY REAR DOOR COURTESY SWITCH ASSEMBLY BACK DOOR COURTESY SWITCH ASSEMBLY HEIGHT CONTROL SENSOR RR LH TURN SIGNAL FLASHER ASSEMBLY HEADLIGHT RELAY FOG LIGHT RELAY REAR FOG LIGHT SWITCH
	AG-8006	Tire Pressure Gauge	HEADLIGHT ASSEMBLY LH FOG LIGHT ASSEMBLY LH

 
Lubricant and others

		Sandpaper (No.100, No.400)	HEADLIGHT ASSEMBLY LH
		Sandpaper (No.500 to No.1000)	HEADLIGHT ASSEMBLY LH

		Screens for Test Use Headlight Cover Tape	HEADLIGHT ASSEMBLY LH
		Screens for Test Use	HEADLIGHT ASSEMBLY LH
		Thick Paper	HEADLIGHT ASSEMBLY LH
		Automotive 12V Battery	HEADLIGHT RELAY FOG LIGHT RELAY

WIPER AND WASHER

Service Tool

	09061-1C100	Clip Remover	WINDSHIELD WIPER MOTOR ASSEMBLY
---	-------------	--------------	---------------------------------

Introduction


		Torque Wrench	WINDSHIELD WIPER MOTOR ASSEMBLY REAR WIPER MOTOR ASSEMBLY WINDSHIELD WIPER SWITCH ASSEMBLY
		Electrical Tester	WINDSHIELD WIPER SWITCH ASSEMBLY

Lubricant and others

		DENSO No.50 Grease	WINDSHIELD WIPER MOTOR ASSEMBLY
		Automotive 12V Battery	WINDSHIELD WIPER MOTOR ASSEMBLY REAR WIPER MOTOR ASSEMBLY WINDSHIELD WIPER SWITCH ASSEMBLY WINDSHIELD WASHER MOTOR & PUMP ASSEMBLY
		Protective Tape	WINDSHIELD WIPER MOTOR ASSEMBLY

DOOR LOCK

Introduction


		Precision Phillips Screwdriver	DOOR CONTROL TRANSMITTER MODULE SET
	09960-97001	DS-II	KEY FREE SYSTEM
		Electrical Tester	ELECTRIC DOOR LOCK SYSTEM KEY FREE SYSTEM WIRELESS DOOR LOCK CONTROL SYSTEM(WITHOUT SMART DOOR LOCK) WIRELESS DOOR LOCK CONTROL SYSTEM(WITH SMART DOOR LOCK) KEY REMINDER WARNING SYSTEM FRONT DOOR MOTOR LOCK ASSEMBLY RH FRONT DOOR OUTSIDE HANDLE ASSEMBLY RH UNLOCK WARNING SWITCH ASSEMBLY

PP


Lubricant and others

		Automotive 12V Battery	ELECTRIC DOOR LOCK SYSTEM FRONT DOOR MOTOR LOCK ASSEMBLY RH FRONT DOOR MOTOR LOCK ASSEMBLY LH REAR DOOR MOTOR LOCK ASSEMBLY RH REAR DOOR MOTOR LOCK ASSEMBLY LH BACK DOOR LOCK ASSEMBLY
		Protective Tape	TRANSMITTER BATTERY (SMART KEY)

METER**SST**

	09843-18020	Diagnosis Check Wire	METER / GAUGE SYSTEM
---	-------------	----------------------	----------------------

Introduction

	09960-97001	DS-II	METER / GAUGE SYSTEM
		Electrical Tester	METER / GAUGE SYSTEM ENGINE OIL PRESURE SWITCH ASSEMBLY FUEL SENDER GAUGE ASSEMBLY

Lubricant and others

		Automotive 12V Battery	INDICATOR ASSEMBLY
--	--	------------------------	--------------------

AUDIO / VISUAL

Introduction

		Torque Wrench	AMPLIFIER ANTENNA ASSEMBLY
		Electrical Tester	AUDIO SYSTEM FRONT SPEAKER ASSEMBLY NO.1 SPEAKER ASSEMBLY RR

OTHER SYSTEM

Introduction


		Torque Wrench	POWER OUTLET SOCKET
		Electrical Tester	HORN RELAY IGNITION(STARTER) SWITCH ASSEMBLY

Lubricant and others

		Automotive 12V Battery	HORN RELAY
--	--	------------------------	------------

GLASS AND WINDOW

Introduction

		Sealant Gun	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
		Scraper	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
	09960-97001	DS-II	POWER WINDOW SYSTEM
		Torque Wrench	WINDSHIELD GLASS
		Electrical Tester	POWER WINDOW SYSTEM WINDSHIELD DEICER SYSTEM REAR WINDOW DEFOGGER SYSTEM POWER WINDOW REGULATOR MOTOR ASSEMBLY RH POWER WINDOW REGULATOR MOTOR ASSEMBLY LH WINDSHIELD GLASS DEICER RELAY DEFOG RELAY

PP

Lubricant and others

		Soapy Water	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
		White Gasoline	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
		Cutter Knife	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
		Gummed Tape	WINDSHIELD GLASS BACK WINDOW GLASS
		Piano Wire	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSEMBLY LH
		Battery	POWER WINDOW REGULATOR MOTOR ASSEMBLY LH POWER WINDOW REGULATOR MOTOR ASSEMBLY RH
		Automotive 12V Battery	WINDSHIELD DEICER SYSTEM POWER WINDOW REGULATOR MOTOR ASSEMBLY RH DEICER RELAY DEFOG RELAY
		Suction Rubber	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSY LH

		Seal Set (Part number:999-09600-U9-001)	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSY LH
		Protective Tape	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSY LH
		Wooden Block	WINDSHIELD GLASS BACK WINDOW GLASS QUARTER WINDOW ASSY LH

MIRROR

Introduction

		Torque Wrench	OUTER REAR VIEW MIRROR ASSEMBLY RH
		Electrical Tester	OUTER MIRROR SWITCH ASSEMBLY OUTER REAR VIEW MIRROR ASSEMBLY RH OUTER REAR VIEW MIRROR ASSEMBLY LH

PP

Lubricant and others

		Gummed Tape	FRONT FENDER SIDE VIEW DEVICE ASSEMBLY LH
		Battery	OUTER REAR VIEW MIRROR ASSEMBLY RH OUTER REAR VIEW MIRROR ASSEMBLY LH
		Protective Tape	OUTER REAR VIEW MIRROR ASSEMBLY RH INNER REAR VIEW MIRROR ASSEMBLY

INSTRUMENT PANEL


Lubricant and others

		Protective Tape	INSTRUMENT PANEL
--	--	-----------------	------------------

PP

SEAT

Service Tool

	09130-00160	Hog Ring Pliers	FRONT SEAT ASSEMBLY REAR SEAT ASSEMBLY RH (6:4 Division, Double Fold Type) REAR SEAT ASSEMBLY LH(6:4 Division, Double Fold Type)
---	-------------	-----------------	--

PP

Introduction


		Torque Wrench	FRONT SEAT ASSEMBLY REAR SEAT ASSEMBLY RH(6:4 Division, Double Fold Type) REAR SEAT ASSEMBLY LH(6:4 Division, Double Fold Type)
		Electrical Tester	SEAT HEATER SWITCH FRONT SEATBACK HEATER RH FRONT SEAT CUSHION HEATER RH

Lubricant and others

 
 
 
		Hog Ring	FRONT SEAT ASSEMBLY REAR SEAT ASSEMBLY RH(6:4 Division, Double Fold Type) REAR SEAT ASSEMBLY LH(6:4 Division, Double Fold Type)
		Protective Tape	FRONT SEAT ASSEMBLY

BODY


SST

	09812-00010	Door Hinge Set Bolt Wrench	FRONT DOOR REAR DOOR BACK DOOR
---	-------------	----------------------------	--------------------------------------

Service tool

	09013-1C110	"TORX" Socket Wrench T25	FRONT DOOR REAR DOOR
	09013-1C120	"TORX" Socket Wrench T30	FRONT DOOR REAR DOOR BACK DOOR
	09013-1C130	"TORX" Socket Wrench T40	FRONT DOOR REAR DOOR BACK DOOR
		Clip Remover	FRONT DOOR REAR DOOR

Introduction

	AP201-W	Handy Remover Wide Type	REAR DOOR
		Torque Wrench	BONNET(HOOD) BONNET(HOOD) LOCK CONTROL CABLE ASSEMBLY FRONT DOOR REAR DOOR BACK DOOR FUEL LID LOCK CONTROL CABLE FRONT FENDER LH


Lubricant and others

		MP Grease	FRONT DOOR REAR DOOR
		Butyl Tape	FRONT DOOR REAR DOOR BACK DOOR
		White Gasoline	FRONT DOOR FRONT FENDER LH

		Cutter Knife	FRONT FENDER LH
		Drier	FRONT DOOR FRONT FENDER LH

BODY EXTERIOR

Introduction

PP		Clip Remover	ROOF RACK ASSEMBLY LH FRONT DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH REAR DOOR GLASS WEATHER STRIP ASSEMBLY OUT LH
		Rubber Pallet	NO. 2 BLACK OUT TAPE LH NO. 3 BLACK OUT TAPE LH
	AP201-W	Handy Remover Wide Type	ROOF DRIP SIDE FINISH MOULDING LH ROCKER PANEL MOULDING LH
		Torque Wrench	FRONT BUMPER REAR BUMPER NO. 2 BLACK OUT TAPE ROOF RACK ASSEMBLY LH FRONT DOOR GLASS WEATHER-STRIP ASSEMBLY OUT LH REAR DOOR GLASS WEATHERSTRIP ASSEMBLY OUT LH

Lubricant and others

		White Gasoline	ROOF DRIP SIDE FINISH MOULDING LH ROCKER PANEL MOULDING LH NO. 2 BLACK OUT TAPE LH NO. 3 BLACK OUT TAPE LH
		Drier	ROOF DRIP SIDE FINISH MOULDING LH ROCKER PANEL MOULDING LH NO. 2 BLACK OUT TAPE LH NO. 3 BLACK OUT TAPE LH
		Cemedine EP001	ROOF DRIP SIDE FINISH MOULDING LH
		Protective Tape	ROOF DRIP SIDE FINISH MOULDING LH ROCKER PANEL MOULDING LH ROOF RACK ASSEMBLY LH

BODY INTERIOR

Service tool


		Clip Remover	ROOF HEADLINING ASSEMBLY
--	--	--------------	--------------------------

Lubricant and others

		Protective Tape	ROOF HEADLINING ASSEMBLY
--	--	-----------------	--------------------------

BODY MULTIPLEX COMMUNICATION SYSTEM (LIN)

SST

	09843-18020	Diagnosis Check Wire	MULTIPLEX BODY COMMUNICATION SYSTEM (LIN)
---	-------------	----------------------	---


PP

Introduction

		Electrical Tester	MULTIPLEX BODY COMMUNICATION SYSTEM (LIN)
--	--	-------------------	---

CAN COMMUNICATION

Introduction

	09960-97001	DS-II	CAN COMMUNICATION SYSTEM
		Electrical Tester	CAN COMMUNICATION SYSTEM

PP