

## Support List for PM1115UW

PM1115UW

### Introduction

This documentation is intended as a guideline only and is subject to change at any time.

Support for the listed printers is based on driver software. Unforeseen hardware configurations or changes to software or firmware might impact functionality.

If you encounter problems with any of the listed printers, please contact StarTech.com support at [www.startech.com/Support](http://www.startech.com/Support).

### Printer Support List

Printer Model	Notes
HP Business InkJet 1000	
HP Color Laserjet 1500L	
HP Color Laserjet 1600	
HP Color Laserjet 2500	
HP Color LaserJet 2550	
HP Color LaserJet 2550L/LN	
HP Color LaserJet 2600	
HP Color LaserJet 2605	
HP Color LaserJet 2700n	
HP Color LaserJet 2840	
HP Color LaserJet 3700	
HP Color Laserjet 4650	
HP Color Laserjet CP1215	
HP Color Laserjet CP1525nw	
HP Color Laserjet CM1312 MFP	
HP Color Laserjet CM1015 MFP	
HP Designjet 100	
HP Deskjet 1010	
HP Deskjet 1125C	
HP Deskjet 1180C	
HP Deskjet 1280	
HP Deskjet 1510	
HP Deskjet 2000 J210	
HP Deskjet 2020hc	
HP Deskjet 2050	
HP Deskjet 2130	
HP Deskjet 2510	

Printer Model	Notes
HP Deskjet IA 2520hc	
HP Deskjet 2540	
HP Deskjet 3000	
HP Deskjet 3070A	
HP Deskjet 3050	
HP Deskjet 3325	
HP DeskJet 3420	
HP Deskjet 3520	
HP Deskjet 3535	
HP Deskjet 3650	
HP Deskjet 3743	
HP Deskjet 3748	
HP Deskjet 3820	
HP DeskJet 3920	
HP DeskJet 3940	
HP Deskjet 450C	
HP DeskJet 5440	
HP Deskjet 5550	
HP Deskjet 5652	
HP Deskjet 810C	
HP Deskjet 830C	
HP Deskjet 845C	
HP DeskJet 9300	
HP Deskjet 948c	
HP Deskjet 9600	
HP Deskjet 9650	
HP Deskjet 970c XI	
HP Deskjet 9800	
HP Deskjet D1560	
HP Deskjet D2560	
HP Deskjet D5560	
HP DeskJet F370	
HP DeskJet F380	
HP DeskJet F4185	
HP DeskJet F4280	
HP Deskjet F4480	
HP Laserjet Pro M401n	
HP Laserjet M1005 MFP	
HP LaserJet 1022	

# Printer Support List

Printer Model	Notes
HP LaserJet 1022N	
HP LaserJet 1160	
HP LaserJet 1200	
HP LaserJet 1220	
HP Laserjet 1300	
HP Laserjet 1320	
HP Laserjet M1522n MFP	
HP Laserjet 2200d	
HP Laserjet 2300	
HP LaserJet 2410	
HP LaserJet 2420	
HP LaserJet 2550	
HP LaserJet 3015	
HP LaserJet 3050	
HP LaserJet 3055	
HP Laserjet 3200	
HP Laserjet 3330	
HP LaserJet 3330mfp	
HP LaserJet 3380	
HP LaserJet 4250	
HP Laserjet 4650	
HP Laserjet M1005	
HP Laserjet M1005 MFP	
HP Laserjet M1120 MFP	
HP LaserJet M1319F MFP	
HP LaserJet P2015	
HP Laserjet Pro M127fn	
HP Laserjet Pro M1536dnf	
HP Laserjet Pro M425dn MFP	
HP Laserjet Pro M521dn	
HP Officejet J3608	
HP Officejet 2620	
HP OfficeJet 4255	
HP Officejet 4500	
HP Officejet 4610	
HP Officejet 4620	
HP Officejet 4630	
HP OfficeJet 5470	
HP OfficeJet 5610	
HP Officejet J5780	
HP OfficeJet 6210	
HP OfficeJet 6310	
HP Officejet 6000	
HP Officejet 6100 eP	
HP Officejet 6500	
HP Officejet 6600	

Printer Model	Notes
HP Officejet 6700	
HP Officejet 7500A	
HP OfficeJet 7210	
HP OfficeJet J4580	
HP Officejet J4660	
HP Officejet J6480	
HP Officejet K7100	
HP OfficeJet K850	
HP OfficeJet Pro K5300	
HP OfficeJet Pro K550	
HP OfficeJet Pro K8600	
HP Officejet Pro L7380	
HP Officejet Pro L7590	
HP Officejet Pro 6230	
HP Officejet Pro 6830	
HP Officejet Pro 6500A Plus	
HP Officejet Pro 7000	
HP Officejet Pro 8000	
HP Officejet Pro 8100	
HP Officejet Pro 8500A Plus	
HP Officejet Pro 8500W	
HP Officejet Pro 8600	
HP Officejet Pro 8600 Plus	
HP Officejet Pro 8610	
HP Officejet Pro 8620	
HP Photosmart 2610	
HP Photosmart 3110	
HP Photosmart 5510	
HP Photosmart 5520	
HP Photosmart 6510	
HP Photosmart 6520	
HP Photosmart 7150	
HP Photosmart 7200	
HP Photosmart 7510	
HP Photosmart 7550	
HP Photosmart 7660	
HP Photosmart 7830	
HP Photosmart 7900	
HP Photosmart 8200	
HP Photosmart Plus B209a	
HP Photosmart Plus B210a	
HP Photosmart Plus C310a	
HP Photosmart A520	

# Printer Support List

Printer Model	Notes
HP Photosmart B109a	
HP Photosmart B110a AIO	
HP Photosmart C309a	
HP Photosmart C410a	
HP Photosmart C3180	
HP Photosmart C4180	
HP Photosmart C4280	
HP Photosmart C4385	
HP Photosmart C4480	
HP Photosmart C4580	
HP Photosmart C5180	
HP Photosmart C5280	
HP Photosmart C5380	
HP Photosmart C6180	
HP Photosmart C6280	
HP Photosmart C6380	
HP Photosmart C7180	
HP Photosmart C7280	
HP Photosmart C8180	
HP Photosmart D5160	
HP Photosmart D5360	
HP Photosmart D5460	
HP Photosmart D7160	
HP Photosmart D7260	
HP Photosmart D7360	
HP Photosmart Premium C309g	
HP Photosmart Premium C310g	
HP PSC 1315	
HP PSC 1350	
HP PSC 1410	
HP PSC 1610	
HP PSC 2210	
HP PSC 2310	
EPSON Aculaser C1100SE	
EPSON Aculaser C1600	
EPSON Aculaser C1700	
EPSON Aculaser C1750N	
EPSON Aculaser C1750W	
EPSON Aculaser C1900	
EPSON Aculaser C2900	
EPSON Aculaser C300-DN	
EPSON Aculaser C3800	
EPSON Aculaser C3900N	
EPSON Aculaser C9100	
EPSON Aculaser CX16NF	
EPSON Aculaser CX17NF	

Printer Model	Notes
EPSON Aculaser M1400	
EPSON Aculaser M2010DN	
EPSON Aculaser M2010D	
EPSON Aculaser M2310D	
EPSON Aculaser M2310DN	
EPSON Aculaser M2410D	
EPSON Aculaser M2410DN	
EPSON Aculaser MX14	
EPSON Aculaser MX14NF	
EPSON AL-M200DN	
EPSON AL-M7000	
EPSON AL-M8000	
EPSON AL-MX200DWF	
EPSON B-508DN	
EPSON B-518DN	
EPSON C750	
EPSON CC-500L	
EPSON CL-760	
EPSON E-300L	
EPSON E-520	
EPSON E-720	
EPSON EC-01	
EPSON EPL 5800	
EPSON EPL 5800	
EPSON EPL 5900	
EPSON EPL 6100	
EPSON EPL 6200	
EPSON K100	
EPSON L110	
EPSON L120	
EPSON L200	
EPSON L210	
EPSON L220	
EPSON L300	
EPSON L310	
EPSON L350	
EPSON L355	
EPSON L360	
EPSON L365	
EPSON L455	
EPSON L550	
EPSON L555	

# Printer Support List

Printer Model	Notes
EPSON L565	
EPSON L655	
EPSON L800	
EPSON L805	
EPSON L1300	
EPSON L1800	
EPSON LP2500	
EPSON LP-7700	
EPSON LP-8700	
EPSON LP-8800C	
EPSON LP8900	
EPSON LP-9500C	
EPSON LQ 2090C	
EPSON LQ 2190C	
EPSON LQ 300+II	
EPSON LQ-310	
EPSON LQ-635C	
EPSON LQ-690C	
EPSON M105	
EPSON M205	
EPSON ME 320	
EPSON ME 340	
EPSON ME Office 82WD	
EPSON ME Office 900WD	
EPSON ME Office 940FW	
EPSON ME Office 960FWD	
EPSON MC-2000	
EPSON PictureMate PM250	
EPSON PLQ-20C	
EPSON PLQ-20CM	
EPSON PM-860PT	
EPSON PM-890C	
EPSON PM-920C	
EPSON PM-930C	
EPSON PM-950C	
EPSON PM-970C	
EPSON PM-980C	
EPSON PM-A550	
EPSON PM-A620	
EPSON PM-A650	
EPSON PM-A720	
EPSON PM-A820	
EPSON PM-A840	
EPSON PM-A850	
EPSON PM-A890	
EPSON PM-A900	

Printer Model	Notes
EPSON PM-A920	
EPSON PM-A940	
EPSON PM-A950	
EPSON PM-A970	
EPSON PM-2200C	
EPSON PM-3500C	
EPSON PM-3700C	
EPSON PM-4000PX	
EPSON PM-D800	
EPSON PM-D870	
EPSON PM-D1000	
EPSON PM-FA700	
EPSON PM-G800	
EPSON PM-G820	
EPSON PM-G850	
EPSON PM-G860	
EPSON PM-G4500	
EPSON PM-T960	
EPSON PM-T990	
EPSON PX-5000	
EPSON PX-A640	
EPSON PX-A740	
EPSON PX-G5300	
EPSON PX-G5100	
EPSON PX-G930	
EPSON PX-G5000	
EPSON PX-V780	
EPSON RX 510	
EPSON RX 530	
EPSON RX 590	
EPSON RX 630	
EPSON RX 690	
EPSON Stylus C20	
EPSON Stylus C40	
EPSON Stylus C41UX/SX	
EPSON Stylus C43UX	
EPSON Stylus C45	
EPSON Stylus C59	
EPSON Stylus C60	
EPSON Stylus C63	
EPSON Stylus C67	
EPSON Stylus C79	
EPSON Stylus C90	

# Printer Support List

Printer Model	Notes
EPSON Stylus Color 1160	
EPSON Stylus Color 1500	
EPSON Stylus Color 1520	
EPSON Stylus Color 670	
EPSON Stylus Color 800	
EPSON Stylus Color 810	
EPSON Stylus Color 850	
EPSON Stylus Color 900	
EPSON Stylus CX-1500	
EPSON Stylus CX-2900	
EPSON Stylus CX-3500	
EPSON Stylus CX-3700	
EPSON Stylus CX-3900	
EPSON Stylus CX-4100	
EPSON Stylus CX-4700	
EPSON Stylus CX-4900	
EPSON Stylus CX-5300	
EPSON Stylus CX-5500	
EPSON Stylus CX-5505	
EPSON Stylus CX-5900	
EPSON Stylus CX-6900F	
EPSON Stylus CX-7300	
EPSON Stylus CX-7800	
EPSON Stylus CX-8300	
EPSON Stylus CX-9300F	
EPSON Stylus Office T30	
EPSON Stylus Office T40W	
EPSON Stylus Office TX300F	
EPSON Stylus Office TX320F	
EPSON Stylus Office TX510FN	
EPSON Stylus Office TX600FW	
EPSON Stylus Office TX610FW	
EPSON Stylus Office T1100	
EPSON Stylus Photo 915	
EPSON Stylus Photo 1270	
EPSON Stylus Photo 1290	
EPSON Stylus Photo 1390	
EPSON Stylus Photo 2100	
EPSON Stylus Photo 710	
EPSON Stylus Photo 720	
EPSON Stylus Photo 790	
EPSON Stylus Photo 810	
EPSON Stylus Photo 830U	
EPSON Stylus Photo 900	
EPSON Stylus Photo 915	
EPSON Stylus Photo EX2	

# StarTech.com

Hard-to-find made easy®

Printer Model	Notes
EPSON Stylus Photo EX3	
EPSON Stylus Photo R1800	
EPSON Stylus Photo R210	
EPSON Stylus Photo R230	
EPSON Stylus Photo R250	
EPSON Stylus Photo R270	
EPSON Stylus Photo R310	
EPSON Stylus Photo R350	
EPSON Stylus Photo R2400	
EPSON Stylus Photo R800	
EPSON Stylus Photo RX430	
EPSON Stylus Photo RX 510	
EPSON Stylus Photo RX 530	
EPSON Stylus Photo RX 590	
EPSON Stylus Photo RX 630	
EPSON Stylus Photo RX 650	
EPSON Stylus Photo RX 690	
EPSON Stylus Photo R2880	
EPSON Stylus Photo TX700W	
EPSON Stylus Photo TX800FW	
EPSON Stylus Photo TX820FWD	
EPSON Stylus Pro 7600	
EPSON Stylus TX550W	
EPSON Stylus TX420W	
EPSON Stylus TX410	
EPSON Stylus TX430	
EPSON Stylus TX235	
EPSON Stylus TX220	
EPSON Stylus TX200	
EPSON Stylus TX210	
EPSON Stylus TX130	
EPSON Stylus TX110	
EPSON Stylus TX100	
EPSON Stylus T22	
EPSON Stylus T20	
EPSON Stylus T21	
EPSON Stylus Photo T50	
EPSON WorkForce AL-M300D	
EPSON WorkForce AL-M300DN	
EPSON WorkForce AL-M400D	
EPSON WF-100	
EPSON WF-2521	
EPSON WF-2531	



# Printer Support List

Printer Model	Notes
EPSON WF-2541	
EPSON WF-2631	
EPSON WF-2651	
EPSON WF-3521	
EPSON WorkForce WF-3541	
EPSON WF-5191	
EPSON WF-5621	
EPSON WF-6091	
EPSON WF-7011	
EPSON WF-7511	
EPSON WF-7521	
EPSON WF-7611	
EPSON WF-8591	
EPSON WF-R5691	
EPSON WF-R8591	
EPSON WP-4531	
EPSON WP-4091	
EPSON XP30	
EPSON XP-102	
EPSON XP-202	
EPSON XP-225	
EPSON XP-302	
EPSON XP-402	
EPSON XP-422	
EPSON XP-701	
EPSON XP-721	
EPSON GP-C830	
EPSON GP-M800	
EPSON GP-C800	
EPSON AL-C500	
EPSON AL-C9300	
Canon BJJ9000	
Canon D380	
Canon E400	
Canon E600	
Canon I-255	
Canon I-355	
Canon I-450	
Canon I-455	
Canon I-470D	
Canon I-475D	
Canon I-550	
Canon I-560	
Canon I-850	
Canon I-865	
Canon I-950	

Printer Model	Notes
Canon I-6100	
Canon I-6500	
Canon I-9100	
Canon I-9950	
Canon IX4000	
Canon IX5000	
Canon IX6770	
Canon Imageclass D380	
Canon MP-160	
Canon MP-638	
Canon MP 770	
Canon PIXMA MX318	
Canon PIXMA MX320	
Canon PIXMA MX357	
Canon PIXMA MX377	
Canon PIXMA MX397	
Canon PIXMA MX416	
Canon PIXMA MX457	
Canon PIXMA MX477	
Canon PIXMA MX527	
Canon PIXMA MX700	
Canon PIXMA MX727	
Canon PIXMA MX927	
Canon PIXUS IP2500	
Canon PIXUS 990i	
Canon PIXMA E510	
Canon PIXMA iP1000	
Canon PIXMA iP1700	
Canon PIXMA iP1800	
Canon PIXMA Ip1880	
Canon PIXMA Ip1980	
Canon PIXMA Ip2000	
Canon PIXMA Ip2870	
Canon PIXMA iP3000	
Canon PIXMA Ip3300	
Canon PIXMA Ip3500	
Canon PIXMA Ip3680	
Canon PIXMA iP4000	
Canon PIXMA Ip4200	
Canon PIXMA Ip4300	
Canon PIXMA Ip4500	
Canon PIXMA Ip4760	
Canon PIXMA ip4970	

# Printer Support List

Printer Model	Notes
Canon PIXMA Ip5000	
Canon PIXMA Ip6000	
Canon PIXMA Ip7270	
Canon PIXMA Ip8500	
Canon PIXMA Ip8770	
Canon PIXMA MG2270	
Canon PIXMA MG2470	
Canon PIXMA MG2570	
Canon PIXMA MG2970	
Canon PIXMA MG3170	
Canon PIXMA MG3270	
Canon PIXMA MG3570	
Canon PIXMA MG4270	
Canon PIXMA MG5470	
Canon PIXMA MG5570	
Canon PIXMA MG5670	
Canon PIXMA MG6170	
Canon PIXMA MG6270	
Canon PIXMA MG6370	
Canon PIXMA MG7170	
Canon PIXMA MG7570	
Canon PIXMA MP110	
Canon PIXMA MP130	
Canon PIXMA MP145	
Canon PIXMA MP150	
Canon PIXMA MP180	
Canon PIXMA MP258	
Canon PIXMA MP450	
Canon PIXMA MP730	
Canon PIXMA MP780	
Canon PIXMA MP830	
Canon S-200SPX	
Lexmark E230	
Lexmark E322	
Lexmark P4350	
Lexmark P6250	
Lexmark T420	
Lexmark T620	
Lexmark W812	
Lexmark Z42	
Lexmark Z43	
Lexmark Z45	
Lexmark Z55	
Lexmark Z515	
Lexmark Z615	
Lexmark Z705	

Printer Model	Notes
FUJI Xerox DocuP 2050	
FUJI Xerox DocuP 240A	
FUJI Xerox DocuP C1110B	
FUJI Xerox DocuP CM205 f	
FUJI Xerox DocuP CP105 b	
FUJI Xerox DocuP P205 b	
FUJI Xerox DocuP M205 b	
FUJI Xerox DocuP M205 f	
FUJI Xerox DocuP M205 fw	
FUJI Xerox Phaser 3310	
Konica Minolta magicolor 2450	
Konica Minolta magicolor 5450	
Konica Minolta magicolor 7300	
Konica Minolta Magicolor 7300	
Konica Minolta PagePro 1350W	
Konica Minolta PagePro 9100	
Samsung CLP-315	
Samsung CLP-500	
Samsung CLP-510	
Samsung CLP-620ND	
Samsung CLP-661NDK	
Samsung CLP-670NDK	
Samsung CLP-680ND	
Samsung CLP-775N	
Samsung CLX2160	
Samsung ML-1510/1710	
Samsung ML-1520	
Samsung ML-1660	
Samsung ML-1710	
Samsung ML-1750	
Samsung ML-1915	
Samsung ML-2010	
Samsung ML-2165W	
Samsung ML-2250	
Samsung ML-2550	
Samsung ML-2580N	
Samsung ML-2580NK	
Samsung ML-3471ND	
Samsung ML-4555N	
Samsung ML-5010ND	
Samsung ML-5015ND	
Samsung ML-8951N	
Samsung SL-M2620ND	

# Printer Support List

StarTech.com

Hard-to-find made easy®

Printer Model	Notes
Samsung SCX-4016	
Samsung SCX-4100/4106/4116/4216F	
Panasonic KX-MB1500TW	
Panasonic KX-MB1520TW	
Panasonic KX-MB1530TW	
IBM InfoP 1116	
IBM InfoP 1312	
IBM InfoP 1316	
IBM InfoP 1332	
IBM InfoP 1412	
Brother MFC 1815	
Brother MFC 4800	
Brother MFC 4800J	
Brother MFC 6800	
Brother MFC 7220	
Brother MFC 7420	
Brother MFC 7820N	
Brother MFC 8840D	
Brother MFC 210C	
Brother MFC 240C	
Brother MFC-J200	
Brother MFC-J2320	
Brother MFC-J3520	
Brother MFC-J430W	
Brother MFC-J825DW	
Brother DCP-J100	
Brother DCP-J105	
Brother DCP-7030	
Brother HL-2140	
Brother HL-2170W	
Brother IntelliFax 2820	
OKI B4350	
BENQ CM3000	
Avision MF 3200	
Avision MF 3230	
DOCUJET 1610F	
DOCUJET UA1610	
Kyocera FS-1010	
Kyocera FS-1010KX	
Kyocera FS-1020	
Kyocera FS-1920	
Kyocera FS-2000D	
Kyocera FS-820	
Kyocera FS-920	
Kyocera FS-6020	
Kyocera FS-6026	