2017 VERSA SEDAN

QUICK REFERENCE GUIDE





- 1 Trip Computer
- 2 Low Tire Pressure Warning Light
- 3 Instrument Brightness Control*
- 4 Headlight and Turn Signal Switch
- 5 Wiper and Washer Switch
- ss Control* **Z** Steering Wheel Switches for Audio / Bluetooth®
 - 8 Cruise Control
 - Steering Wheel Tilt Adjustment*

Outside Mirror Control Switch

- Vehicle Dynamic Control (VDC)OFF Switch*
- Fuel-filler Door Release
- 12 Hood Release*
- Front Passenger Air BagStatus Light*
- Audio and Navigation System
 Heater and Air
 Conditioner (manual)
 USB / AUX Jack
 12 VPower Outlet

*See your Owner's Manual for information.

TABLE OF CONTENTS

NEW SYSTEM FEATURES

RearView Monitor (if so equipped)
Trip Computer
USB (Universal Serial Bus) Connection Port/Aux Jack and iPod® Interface
(if so equipped)
SiriusXM Travel Link and SiriusXM Traffic (if so equipped)

ESSENTIAL INFORMATION

Tire Pressure Monitoring System (TPMS) with Easy-Fill Tire Alert (if so equipped)4
Loose Fuel Cap
Fuel-filler Door
Clock Set/Adjustment

FIRST DRIVE FEATURES

Nissan Intelligent Key® System (if so equipped)	8
Rear Trunk Release	9
Seat Adjustments	9
Starting/Stopping the Engine	10
Headlight Control Switch	11
<i>N</i> iper and Washer Switch	12
Power Outside Mirror Control Switch	12
Heater and Air Conditioner (manual)	13
-M/AM/SiriusXM® Satellite Radio with CD Player (if so equipped)	14
Cruise Control (if so equipped)	15

SYSTEM GUIDE

NissanConnect™ Mobile Apps (if so equipped)	. 16
Hands-free Text Messaging Assistant (if so equipped)	
Bluetooth® Hands-free Phone System	. 18
System Operating Tips	. 18
Bluetooth® System without Navigation (if so equipped)	. 19
Bluetooth® System with Navigation (if so equipped)	. 21
Navigation System (if so equipped)	.23



Additional information about your vehicle is also available in your Owner's Manual, Navigation System Owner's Manual and at **www.NissanUSA.com**.



- Please see your Owner's Manual for important safety information and system operation limitations.
- A cellular telephone should not be used for any purpose while driving
- so full attention may be given to vehicle operation.
- Always wear your seat belt.
 - Supplemental air bags do not replace proper seat belt usage.
 - Children 12 and under should always ride in the rear seat properly secured in child restraints or seat belts according to their age and weight.
- Do not drink and drive.

For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)", the "Monitor, climate, audio, phone and voice recognition systems (section 4)" and the "Starting and driving (section 5)" of your Owner's Manual.

NEW SYSTEM FEATURES

REARVIEW MONITOR (if so equipped)

- When the shift lever is moved to the R (REVERSE) position, the front display shows the view to the rear of the vehicle.
- The colored lines on the display screen indicate approximate distances to objects.
 - Red 1.5 ft (0.5 m); Yellow 3 ft (1 m);
 Green 7 ft (2 m) and 10 ft (3 m).



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

TRIP COMPUTER

- With the ignition switch in the ON position, modes of the trip computer
 can be selected by pressing the trip computer change/reset button
 on the instrument panel.
- The following modes can be selected in the display (if so equipped):
 - **ODO** records the total distance the vehicle has been driven.



 
- Trip A measures the distance of one specific trip.
- Trip B measures the distance of a second specific trip.
- mpg displays the instant fuel consumption.
- mpg AVG displays the average fuel consumption since the last reset.
- DTE → D displays the estimated distance that can be driven before refueling.
- Outside Air Temperature (if so equipped) displays the outside air temperature in °F or °C.
- To reset Trip A, Trip B, mpg or mpg AVG, go to the desired mode on the trip computer and press and hold the trip computer change/reset button 2 for more than 3 seconds.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

USB (Universal Serial Bus) CONNECTION PORT/AUX JACK AND iPOD® INTERFACE (if so equipped)

- The USB port/Aux jack 1 is located below the instrument panel under the climate controls.
- When a compatible USB memory device, iPod® or auxiliary device is plugged into the USB port/Aux jack, compatible audio files stored on the device can be played through the vehicle's audio system.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

SiriusXM TRAVEL LINK AND SiriusXM TRAFFIC (if so equipped)

- Your vehicle's Navigation System is equipped with SiriusXM Travel Link and SiriusXM Traffic capabilities.
- SiriusXM Travel Link provides access to real-time weather information and forecasts, nearby fuel prices, movie listings and stock quotes.
- SiriusXM Traffic provides information that may help to avoid delays due to traffic incidents. Traffic jams, roadwork, road closures around the current location, etc., are represented graphically on the map by icons depicting the nature of the event.



Incidents on the route are automatically displayed as they are approached.


Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Navigation (section 4)" and the "General system information (section 6)" of your Navigation System Owner's Manual.

ESSENTIAL INFORMATION

TIRE PRESSURE MONITORING SYSTEM (TPMS) WITH EASY-FILL TIRE ALERT (if so equipped)

- A CHECK TIRE PRES warning message will appear in the trip computer 1 and the low tire pressure warning light 2 will illuminate when one or more tires are low in pressure and air is needed.
 - The tire pressures should be checked when the tires are cold. The tires are considered cold after the vehicle has been parked for 3 hours or more or driven less than 1 mi (1.6 km) at moderate speeds.
- After the tire pressures are adjusted, drive the vehicle at speeds above 16 mph (25 km/h). The CHECK TIRE PRES warning message and low tire pressure warning light
 will extinguish.

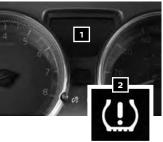

When adding air to an under-inflated tire, the TPMS with Easy-Fill Tire Alert (if so equipped) provides visual and audible signals to help you inflate the tire to the recommended COLD tire pressure.

To use the Easy-Fill Tire Alert (if so equipped):

- 1. Move the shift lever to the **P (PARK)** position and apply the parking brake.
- 2. Place the ignition switch in the ON position. Do not start the engine.
- 3. Add air to the under-inflated tire, and within a few seconds, the hazard warning lights will start flashing.
- 4. When the designated tire pressure is reached, the horn will beep once and the hazard warning flashers will stop flashing.
- 5. Repeat this procedure for any additional under-inflated tires.
- When the low tire pressure warning light 2 flashes for 1 minute and then remains on, the TPMS is not functioning properly. Have the system checked. It is recommended you visit a Nissan dealer for this service.
- Tire pressure rises and falls depending on the heat caused by the vehicle's operation and the outside temperature. Low outside temperature can lower the temperature of the air inside the tire, which can cause a lower tire inflation pressure. This may cause the low tire pressure warning light 2 to illuminate. If the warning light illuminates, check the tire pressure in your tires.
 - Check the tire pressure (including the spare tire) often and always prior to long distance trips.
- The Tire and Loading Information label contains valuable information. Please refer to the "Technical and consumer information (section 10)" of your Owner's Manual for the location of the Tire and Loading Information label.
 Please see your Owner's Manual for important safety information, system limitations, and additional

Please see your Owner's Manual for important safety information, system limitations, and additiona operating and feature information.

For more information, refer to the "Instruments and controls (section 2)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.

LOOSE FUEL CAP

- A LOOSE FUEL CAP warning message will display in the odometer 1 when the fuelfiller cap is not tightened correctly.
- To tighten, turn the cap clockwise until a single click is heard.
- The warning message will extinguish when the vehicle detects the fuel-filler cap is properly tightened and the trip computer change/reset button 2 is pressed for more than 1 second.
- If the cap is not fully tightened, the Malfunction Indicator Light (__] may also illuminate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" and the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

FUEL-FILLER DOOR

- The fuel-filler door release 1 is located to the left of the steering wheel and below the instrument panel.
- To open the fuel-filler door, pull the release. To lock, close the fuel-filler door securely.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)" of your Owner's Manual.

CLOCK SET/ADJUSTMENT

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type A) (if so equipped)

- 1. Press the **MENU** button **1** repeatedly until "Adjust Clock: NO" appears on the display.
- 2. Turn the TUNE/FOLDER knob 2 to change to "Adjust Clock: Yes".
- 3. Press the **MENU** button 1.
- 4. When "Change Hour" appears, turn the TUNE/FOLDER knob 2 to adjust the hours.
- 5. Press the **MENU** button 1.
- 6. When "Change Minute" appears, turn the **TUNE/FOLDER** knob 2 to adjust the minutes.
- 7. Press the **MENU** button 1 to finish.

To view detailed instructional videos regarding these and other features, please go to www.nissanownersinfo.mobi.









ESSENTIAL INFORMATION

FM/AM RADIO WITH COMPACT DISC (CD) PLAYER (Type B) (if so equipped)

- 1. Press the **SETUP** button **3**.
- 2. Turn the **TUNE/MENU** knob **5** to select "CLOCK".
- 3. Press the ENTER button 4.
- 4. Turn the **TUNE/MENU** knob **5** to select "Set time".
- 5. Press the ENTER button 4.

The display will return to the regular clock display after 10 seconds.

FM/AM/SAT RADIO WITH COMPACT DISC (CD) PLAYER (if so equipped)

- Press the ENTER/SETTING/ CLOCK button 6 to show the "Settings" screen on the display.
- 2. Turn the TUNE/SCROLL knob 7 to highlight "Clock Adjust".
- 3. Press the ENTER/SETTING/CLOCK button 6 to highlight the hours or minutes and use the TUNE/SCROLL knob 7 to adjust the value.
- 4. Press the ENTER/SETTING/CLOCK button 6 to set the value.
- Press the SBACK button B to return to the previous screen.

WITH NAVIGATION SYSTEM (if so equipped)

- To adjust the time and the appearance of the clock on the display:
 - 1. Press the APPS · i button 9.
 - 2. Touch the "Settings" key.
 - 3. Touch the "System" key.
 - 4. Touch the "Clock" key.
- The following settings can be adjusted:
 - Time Format: The clock can be set to 12 hours or 24 hours.
 - Date Format: The date can be changed to one of five different formats.
 - Clock Mode: From here, the clock mode options are:
 - Manual: Allows for the option "Set Clock Manually". Touch this to begin setting the clock manually using the "+" or "-" to adjust the hours, minutes, day, and month up or down.



PPS+INFORMATI	ÓN	7:01	9	APPS-CE
SiriusXM Traffic		SiriusXM Travel Link		C **
My Apps	P .,	Voice Commands	11	BACK
Settings			1	UNE AD





- **Time Zone**: Touch the "Time Zone" key **10** to choose from the applicable time zone list and/or touch the "Daylight Savings Time" key to switch between ON and OFF.
- **Auto**: Automatically sets the clock to the vehicle's current location.
- Press the BACK button 11 to return to the previous screen.

Date Format	F MM/DD/YYYY
Clock Mode	E Time Zone
Daylight Savings Time	OFF

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

FIRST DRIVE FEATURES

NISSAN INTELLIGENT KEY® SYSTEM (if so equipped)

- The Nissan Intelligent Key® system allows you to lock or unlock your vehicle, open your trunk and start the engine.
- It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).
- The operating range of the Intelligent Key is within 31.5 in (80 cm) from each request switch.
- To lock the vehicle, push either door handle request switch 1 once or press the button 2 on the key fob.
- To unlock the vehicle, perform one of the following procedures:
- 4
- Push either door handle request switch 1 once; the corresponding door will unlock. Push the door handle request switch 🚺 again within 5 seconds; all other doors will unlock, or
- Press the button 3 on the key fob to unlock the driver's side door. Press the **1** button **3** again; all other doors will unlock.
- To open the trunk, press the HOLD button 4 for more than 1 second.
- The Intelligent Key can also be used to activate the panic alarm by pressing and holding the putton 5 for more than 1 second. Once activated, the panic alarm and headlights will stay on for a period of time.

 
INTELLIGENT KEY BATTERY DISCHARGE

- If the battery of the Intelligent Key is discharged or environmental conditions interfere with the Intelligent Key operation, start the engine according to the following procedure:
 - 1. Move the shift lever to the P (PARK) position.
 - 2. Firmly apply the foot brake.
 - 3. Touch the ignition switch with the Intelligent Key, and a chime will sound.
 - 4. Within 10 seconds after the chime sounds, press the ignition switch START/STOP button while depressing the brake pedal and the engine will start.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Pre-driving checks and adjustments (section 3)", the "Starting and driving (section 5)" and the "Do-it-yourself (section 8)" of your Owner's Manual.





REAR TRUNK RELEASE

- Use one of the following methods to open the trunk:
 - Push the trunk opener request switch 1, located under the center of the trunk handle, for more than 1 second while carrying the Nissan Intelligent Key® (if so equipped) with you (that is, in your pocket or purse).
 - Press the trunk release $\underset{HOLD}{\bigoplus}$ button 2 on the Intelligent Key (if so equipped) for more than 1 second.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and** adjustments (section 3)" of your Owner's Manual.

SEAT ADJUSTMENTS

- To slide the front seat forward or backward, pull up on the lever
 under the front of the seat and slide forward or backward. Release the lever to lock the seat in position.
- To recline the seatback, pull up on the lever
 and lean back. To bring the seatback forward, pull the lever up and lean your body forward. Release the lever to lock the seatback in position.

SEAT LIFTER (if so equipped for driver's seat)

 To adjust the seat height, pull up or push down on the adjusting lever
 repeatedly.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Safety — Seats, seat belts and supplemental restraint system (section 1)" of your Owner's Manual.

9









FIRST DRIVE FEATURES

STARTING/STOPPING THE ENGINE

STARTING THE ENGINE

It is important to make sure the Intelligent Key is with you (that is, in your pocket or purse).

CONTINUOUSLY VARIABLE TRANSMISSION (Nissan Intelligent Key® models only if so equipped)



- Depress the brake pedal.
 - If the brake pedal is not depressed, pushing the ignition switch once enters the ACC mode.
 - If the ignition switch is pushed a second time, the vehicle will enter the ON mode.
- Move the shift lever to the P (PARK) position.
- Press the ignition switch **START/STOP** button to start or stop the engine.

CONTINUOUSLY VARIABLE TRANSMISSION/AUTOMATIC/MANUAL TRANSMISSION (if so equipped)

 
- Depress the brake pedal.
- Move the shift lever to the N (NEUTRAL) position (automatic transmission only).
- Depress the clutch pedal to the floor (manual transmission only).
- Turn the ignition switch to the **START** position.

TURNING THE ENGINE OFF

- For a Continuously Variable Transmission (Nissan Intelligent Key[®] models only – if so equipped), apply the brake pedal, move the shift lever to the P (PARK) position, apply the parking brake and press the ignition switch START/STOP button to turn the engine off.
- For a manual transmission, apply the brake pedal, place the vehicle in
 1 (FIRST) gear, apply the parking brake and turn the ignition switch to the
 LOCK position.
- For the automatic transmission and Continuously Variable Transmission, apply the brake pedal, move the shift lever to the **P** (**PARK**) position, apply the parking brake and turn the ignition switch to the **LOCK** position.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.





HEADLIGHT CONTROL SWITCH

HEADLIGHT CONTROL

Turn the headlight control switch to the EDGE position 1 to turn on the front parking, tail, license plate and instrument panel lights. Turn the switch to the ED position 2 to turn on the headlights.

HIGH BEAM SELECT

- With the headlights on, push the headlight control switch forward 3 to select the high beam function. The blue indicator light ≣O will illuminate in the instrument panel. Pull the headlight switch back to the original position to select the low beam. The blue indicator light will extinguish.
- Pull and release the headlight control switch 4 to flash the headlight high beams on and off.

FOG LIGHT SWITCH (if so equipped)

- The headlights must be on and the low beams () selected for the fog lights to operate.
- Turn the switch (inside collar) to the \$D position 5 to turn the fog lights on.
- Turn the switch (inside collar) to the OFF position to turn the fog lights off.

LANE CHANGE SIGNAL

- Move the lever up or down until the turn signal begins to flash but the lever does not latch to signal a lane change. Hold the lever until the lane change is completed.
- Move the lever up or down until the turn signal begins to flash but the lever does not latch and release the lever. The turn signal will automatically flash three times.

Choose the appropriate method to signal a lane change based on the road and traffic conditions.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.










FIRST DRIVE FEATURES

WIPER AND WASHER SWITCH

- Move the lever to one of the following positions to operate the windshield wipers:
 - Mist (MIST) One sweep operation of the wipers.
 - Intermittent (INT) Wipers operate intermittently. The intermittent operation speed can be adjusted by rotating the time control ring 3 to increase or decrease wiper speed (if so equipped).
 - Low (LO) Wipers operate at a continuous low-speed.
 - 5 High (**HI**) Wipers operate at a continuous high-speed.

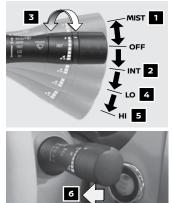

Washer \$\$\vee\$ - Pull the lever toward you to activate the washer.
 The wipers will operate several times.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

 
For more information, refer to the "Instruments and controls (section 2)" of your Owner's Manual.

POWER OUTSIDE MIRROR CONTROL SWITCH

- Move the switch 1 right or left to select the right or left mirror.
- Adjust each mirror to the desired position using the switch 2.
- Move the switch 1 to the center (neutral) position to prevent accidentally moving the mirrors.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "**Pre-driving checks and adjustments (section 3)**" of your Owner's Manual.



HEATER AND AIR CONDITIONER (manual)

1 FAN SPEED CONTROL DIAL

Turn the dial to the left to decrease fan speed or to the right to increase fan speed.

2 AIR FLOW CONTROL DIAL

- Turn the dial to select one of the following air flow outlets:
 - Air flows from the center and side vents.
 - Air flows from the center, side and foot vents.
 - Air flows mainly from the foot vents.
 - Air flows from the front defroster and foot vents.
 - Air flows mainly from the front defroster and side vents.

3 TEMPERATURE CONTROL DIAL

 Turn the temperature control dial left for cooler air or right for warmer air.

 
4 DEFROSTING FRONT AND SIDE WINDOWS


- First, move the air intake lever 5 to the left position to draw fresh air into the vehicle.
- Then turn the air flow control dial 2 to the front window defroster mode m.
- Align the left and right side vents 6 to direct air flow toward the front side windows.
- When the more of position is selected, the air conditioner will turn on automatically for better performance. This will dehumidify the air and help defog the windows.
- 7 REAR WINDOW DEFROSTER SWITCH
 - Push the rear window defroster switch III to turn the system on or off.
- This function automatically turns off after approximately 15 minutes.
 A/C BUTTON
 - Press the A/C button to turn the air conditioner on. This system helps cool and dehumidify the air inside the cabin and defog the windows.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

To view detailed instructional videos regarding these and other features, please go to **www.nissanownersinfo.mobi**.



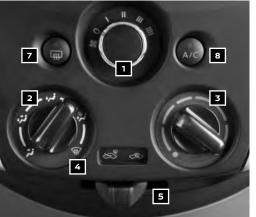

FIRST DRIVE FEATURES

≜ 6 5				
SXM FMAM	🖤 FM1		2:36	APPS
CD AUX	1 2	88.7 FM		C *13
NAV MAP	3 4 4			3
(CAMERA)	5 6			ВАСК
ON-OFF VOL			Tune	TUNE AUDI
			Tune	

FM/AM/SiriusXM[®] SATELLITE RADIO WITH CD PLAYER (if so equipped)

1 ON-OFF BUTTON/VOL (volume) CONTROL KNOB

- Press the ON-OFF button to turn the system on or off.
- Turn the VOL (volume) control knob to the right or left to increase or decrease the volume.

2 AUDIO BUTTON/TUNE KNOB

- Press the AUDIO button to go to the audio settings screen.
- To manually tune the radio, turn the **TUNE** knob left or right.

3 SEEK BUTTONS

- To tune and stop at the previous or next broadcast station, press the seek buttons I<4 or >>I.
- For satellite radio to switch to the first channel of the previous or next category, press the seek buttons I < or >> !.
- To change tracks on a CD, press the seek buttons I< or >>.
- To rewind or fast forward a track on a CD, press and hold the seek buttons I ◄ or ►►I.

4 STATION SELECT KEYS

- Twelve stations can be set for the FM band, six for the AM band and 18 for satellite radio.
- To store a station in a preset, you must first select a radio band by pressing the FM-AM button 5 or the SXM button 6 then tune to the desired FM, AM or satellite radio station.
- Now select and hold the desired station memory key (1-6) 4 until the preset number is updated on the display and a beep is heard. Programing is now complete.
- To retrieve a previously set station, select the radio band where the preset was stored then select the corresponding station memory key (1-6)

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

CRUISE CONTROL (if so equipped)

- The cruise control system enables you to set a constant cruising speed once the vehicle has reached 25 mph (40 km/h).
- The system will automatically maintain the set speed until you tap the brake pedal, accelerate, cancel or turn the system off.
- To activate the cruise control, push the CRUISE ON/OFF switch 1 on the steering wheel. The CRUISE indicator light in the instrument panel will illuminate.



- To set a cruising speed, accelerate the vehicle to the desired speed, push the COAST/SET switch 2 on the steering wheel and release. Take your foot off the accelerator pedal. Your vehicle will maintain the set speed.
- To reset at a faster cruising speed, push and hold the ACCEL/RES switch
 on the steering wheel. When the vehicle attains the desired speed, release the switch.
- To reset at a slower cruising speed, push and hold the COAST/SET switch
 on the steering wheel. Release the switch when the vehicle slows to the desired speed.
- To cancel the preset speed, push the CANCEL switch 4 on the steering wheel.
- To turn off cruise control, push the ON/OFF switch 1 on the steering wheel. The CRUISE indicator light in the instrument panel will extinguish.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Starting and driving (section 5)" of your Owner's Manual.

SYSTEM GUIDE

NISSANCONNECT[™] MOBILE APPS (if so equipped)

- NissanConnect^{5M} Mobile Apps (if so equipped) Your vehicle may be equipped with NissanConnect^{5M} Mobile Apps, allowing you to control various compatible smartphone applications through the vehicle's display screen. A basic package is included for a period of time from the original in-service date of the vehicle.
- To enroll in NissanConnectSM Mobile Apps;
 - 1. Create a Nissan Owner Portal account at **owners.NissanUSA.com**.
 - Make sure to include your vehicle's VIN when creating your account.
 Under the NissanConnect Mobile Apps tab, select the red button next to
 - Anage Subscription to enroll.
 - 3. Next, download the NissanConnect[™] Mobile Apps companion app from Google Play or the Apple App Store. Log into the companion app using your Nissan Owner Portal ID & password.
 - 4. Launch the app, select "United States", accept the Terms and Conditions.
 - 5. Select "Sign In", then sign in with the email user name and password you created when registering on the Nissan Owner Portal website.
- Pair your phone to the vehicle.
 - For Android® devices, the smartphone must be connected through the Bluetooth® Hands-Free Phone system.
 - For iPhone® on vehicles WITH Navigation, the device must be connected to the vehicle's USB port using your phone's USB cable.
- You can select which apps you want activated in the vehicle from the NissanConnectSM Mobile Apps companion app by selecting "Manage My Apps". Some apps shown in the companion app may not appear in your vehicle depending on availability for your model.
- Some applications require you to have the app downloaded and installed on your phone, while others require you to enter your username and password to log in. Not all apps shown on the NissanConnectsM application site are available on all models.
- To help identify specific applications available for your vehicle or to contact a specialist via chat, please visit www.NissanUSA.com/connect/support.
- Your available apps will only appear on the screen when your smartphone is connected to both the vehicle and the Internet.
 For additional information on connecting your device, see your Owner's Manual or visit www.NissanUSA.com/bluetooth.
- The NissanConnectSM app must be running on your device and the Connected icon 1 must be green before using your apps. If the Disconnected icon 2 is displayed, press the APPS 1 button 3 multiple times to ensure the connection is established.



- To access your apps with the vehicle controls, start your vehicle and then press the APPS·I button 3 on the control panel. The system may take a few seconds to boot up before the APPS·I button 3 is enabled.
 This is normal.
- If available, your apps can be accessed once the vehicle and cellular phone are connected through the NissanConnectSM Mobile Apps companion app.



Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

HANDS-FREE TEXT MESSAGING ASSISTANT* (if so equipped)

- This system allows for sending and receiving text messages through the vehicle's interface.
- Using predefined or custom messages, send a text to an entry stored in your Bluetooth[®] Hands-free Phone System.



- Once enabled, the text message, sender and delivery time are shown on the control panel display when the vehicle speed is less than 5 mph (8 km/h).
- Text messages have the option of being read aloud at all vehicle speeds.
- Many cellular phones may require special permission to enable text messaging. Check the cellular phone's screen during Bluetooth[®] pairing. For some cellular phones, you need to enable "Notifications" in the cellular phone's Bluetooth[®] menu for text messages to appear on the touch-screen display. For more information and instructions, refer to your cellular phone's Owner's Manual.
- Text message integration requires that the cellular phone support Message Access Profile (MAP) for both receiving and sending text messages. Some cellular phones may not support all text messaging features. Please see www.NissanUSA.com/bluetooth for compatibility information as well as your device's Owner's Manual.

* Laws in some jurisdictions may restrict the use of "Text-to-Speech". Some of the applications and features, such as social networking and texting, may also be restricted. Check local regulations for any requirements before using these features.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.

SYSTEM GUIDE

BLUETOOTH® HANDS-FREE PHONE SYSTEM*

A cellular phone should not be used while driving so full attention may be given to vehicle operation.

SYSTEM OPERATING TIPS

- Press the ** f button on the steering wheel to interrupt the voice prompts at any time and speak a command after the tone.
- To use the system faster, you may speak the second level commands with the main menu command on the main menu. For example, press the for button on the steering wheel, and after the tone, say "Call Redial".





- The "Help" command can be used to hear a list of available commands at any time.
- Reduce background noise as much as possible by closing windows and pointing vents away from the ceiling.
- Speak naturally without long pauses and without raising your voice.
- To cancel a Voice Recognition session, simply wait 5 seconds, say "Cancel" or "Quit", or press and hold the button on the steering wheel for 5 seconds.
- To increase or decrease the volume of the voice prompts, push the volume control switches + or on the steering wheel or turn the control dial on the audio system while the audio system is responding.
- Voice commands can be used to operate various Bluetooth[®] system features using the Nissan Voice Recognition system. See your Owner's Manual for detailed information.
- If the Voice Recognition system does not recognize your voice commands, train the system using the Voice Adaptation Mode.
- For more detailed information and instructions, refer to your cellular phone's Owner's Manual and visit **www.NissanUSA.com/bluetooth**.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITHOUT NAVIGATION* (if so equipped)

CONNECTING PROCEDURE

The vehicle must be stationary when connecting the cellular phone.

- Press the x to button on the steering wheel. The system announces the available commands.
- Say: "Connect Phone". The system acknowledges the command and announces the next set of available commands.



- 3. Say: "Add Phone". The system acknowledges the command and asks you to initiate connecting from the cellular phone handset.
- 4. Initiate connecting from the cellular phone:
 - The connecting procedure varies according to each cellular phone model. For detailed connecting instructions and a list of compatible cellular phones, please visit **www.NissanUSA.com/bluetooth**.
 - When prompted for a PIN, enter "1234" from the handset. (The PIN is assigned by NISSAN and cannot be changed.)
- 5. Say a name for the cellular phone when the system asks you to provide one. You can give the cellular phone a name of your choice.

PHONEBOOK SETUP

- The phonebook stores up to 1,000 entries for each cellular phone paired with the system.
- Depending on your cellular phone, the system may automatically download your cellular phone's entire phonebook to the vehicle's Bluetooth[®] system.
- If the phonebook does not download automatically, entries can be individually downloaded.
- To manually download entries:
 - 1. Press the 🔬 🌈 button on the steering wheel.
 - 2. After the tone, say "Phonebook".
 - 3. After the next tone, say "Transfer Entry". The system acknowledges the command and asks you to initiate the transfer from the cellular phone handset. The new contact phone number will be transferred from the cellular phone to the vehicle.
 - The transfer procedure varies according to each cellular phone. See your cellular phone's Owner's Manual for details. You can also visit **www.NissanUSA.com/bluetooth** for instructions on transferring phone numbers from NISSAN-recommended cellular phones.

SYSTEM GUIDE

- 4. The system repeats the number and prompts you for the next command. When you have finished entering numbers or transferring an entry, choose "Store".
- 5. The system confirms the name, location and number.

MAKING A CALL FROM THE PHONEBOOK

- In some cases, names stored using all UPPERCASE letters may not be recognized by the Voice Recognition system.
- 1. Press the 🔬 🌈 button on the steering wheel.
- 2. After waiting for the tone, say "Call".
- 3. After the next tone, speak the name of a phonebook entry. For example, "Michael Smith".
- 4. Confirm the correct name is recognized by saying "Dial" after the tone.

MAKING A CALL BY PHONE NUMBER

- 1. Press the 🔬 🌈 button on the steering wheel. A tone will sound.
- Say: "Call". The system acknowledges the command and announces the next set of available commands.
- 3. Say: "Phone Number". The system acknowledges the command and announces the next set of available commands.
- 4. Say the number you wish to call starting with the area code in single digit format.
- 5. When you have finished speaking the phone number, the system repeats it back and announces the available commands.
- 6. Say: "Dial". The system acknowledges the command and makes the call.

RECEIVING/ENDING A CALL

- When you receive a phone call, a ring tone sounds through the audio system.
- To accept the call, press the 🔬 🌈 button on the steering wheel.
- To reject the call, press the button on the steering wheel.
- To hang up the cellular phone at the end of a call or to disconnect during call placement, press the m button on the steering wheel.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual or please visit www.NissanUSA.com/bluetooth.

BLUETOOTH® SYSTEM WITH NAVIGATION* (if so equipped)

- Send predefined or custom text messages through your vehicle's Bluetooth[®] system.
- Receive texts through your vehicle's Bluetooth[®] system that can be read to you.
- Bluetooth[®] Streaming Audio allows you to use a compatible Bluetooth[®] cellular phone to play audio files on your device. Your compatible cellular phone can be connected to the vehicle's audio system, allowing audio files to play through the vehicle's speakers.

CONNECTING PROCEDURE

- Press the APPS. button on the control panel.
- 2. Select the "Settings" key 1.
- 3. Select the "Phone & Bluetooth" key 2.
- 4. Select the "Connect New Device" key 3.
- Initiate the connecting process from the handset. The system will display the message:

"Is PIN XXXXXX displayed on your Bluetooth device?"

If the PIN is displayed on your Bluetooth[®] device, select "Yes" to complete the connecting process.

VEHICLE PHONEBOOK

To access the vehicle phonebook:

- 1. Press the **f** button on the control panel.
- 2. Select the "Phonebook" key 4.
- 3. Choose the desired entry from the displayed list.

MAKING A CALL FROM THE PHONEBOOK

- Press the [√]_√ f button on the steering wheel to activate Voice Recognition.
- 2. Say: "Call".
- 3. Say a name in the vehicle phonebook to call that entry.

APPS+INFORMATION			7:01
SiriusXM Traffic	51/	SiriusXM Travel Link	
My Apps	2.	Voice Commands	F
Settings 1			
SETTINGS			2:42
♪ Audio	衙	System	
A Navigation	-	Traffic	
Phone & 2 Bluetooth	s uir	SXM	
PHONE & BLUETOOTH Connect New Device		FINGS	2:42
PHONE		a 0 L	7:06
T Carrier Name ✓ Device Name			
4 Phonebook Call Lists	Rei	tial 📲	1

SYSTEM GUIDE

MAKING A CALL BY PHONE NUMBER

- 1. Press the $\sqrt{2}$ button on the steering wheel to activate Voice Recognition.
- 2. Say: "Phone".
- 3. Say: "Dial Number". When prompted, speak the digits of the phone number you wish to dial.
- 4. Say: "Dial".

RECEIVING/ENDING A CALL

To accept the incoming call, either:

- 2. Select the 🏑 🌈 icon on the screen.

To reject the incoming call, either:

- Press the
 button on the steering wheel, or
- 2. Select the 🖚 icon on the screen.

To end a cellular phone call, either:

- 1. Press the 🖚 button on the steering wheel, or
- 2. Select the 🖚 icon on the screen.

* Some jurisdictions prohibit the use of cellular telephones while driving.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.





NAVIGATION SYSTEM (if so equipped)

- Your Navigation System can calculate a route from the current location to a preferred destination. The real-time map display and turn-by-turn voice guidance will lead you along the route.
- The Navigation System will continually update your vehicle's position. If you have deviated from the original route, it will recalculate the route from your current location.
- To help promote safe driving, some functions cannot be operated or have limited operation when the vehicle speed is above 5 mph (8 km/h). The on-screen text and keys for these restricted functions will be grayed-out or muted and cannot be selected while driving. These functions will become available again when the vehicle speed is reduced to 5 mph (8 km/h). Voice commands may be available for some of the restricted functions. For more information, refer to the "Monitor, climate, audio, phone and voice recognition systems (section 4)" of your Owner's Manual.
- 1 NAV button Press to access the functions of the Navigation System.
- 2 MAP button Press to display the current location map screen.
- **3 VOL** control knob Turn right to increase the volume or left to decrease the volume.
- 4 🗩 key Select to zoom the map in.
- 5 🗩 key Select to zoom the map out.
- 6 APPS·I button Press to access SiriusXM Traffic, My Apps, Settings, SiriusXM Travel Link and Voice Commands.
- 7 */ D button Press to change the display brightness between day and night modes. While the mode is being displayed, the brightness can be adjusted using the **TUNE** knob. Press and hold to turn the display off. Press again to turn the display on.

SYSTEM GUIDE

- **BACK** button Press to return to the previous screen.
- TUNE knob Turn to navigate the items in a list. Press to select a menu item.
- 10 Touch-screen display
- **11** SD-card location An SD-card with map data must be inserted here for map functions to operate.

Please see your Owner's Manual for important safety information, system limitations, and additional operating and feature information.

For more information, refer to your Navigation System Owner's Manual.

MEMO



Below is a list of helpful resources that can be used to learn more about the vehicle's systems and feature operations.

- Vehicle Owner's Manual
- Navigation System Owner's Manual (if so equipped)
- Printed Quick Reference Guide (this document)
- www.NissanUSA.com/bluetooth
- www.NissanUSA.com/connect
- www.youtube.com/user/NissanUSA
- Nissan Consumer Affairs: 1-800-647-7261
- Electronic Quick Reference Guide (Use Quick Response (QR) code or URL below.)
- Nissan Quick Guide (available in the iPhone App Store or Android Google Play Store for download to your smartphone)



To view detailed instructional videos, go to **www.nissanownersinfo.mobi/2017/versasedan** or snap this barcode with an appropriate barcode reader.



This Quick Reference Guide is intended to provide an overview of some of the unique features of your new vehicle. Please see your Owner's Manual for important safety information and system operation limitations. Features and equipment in your vehicle may vary depending on model, trim level, options selected, order, date of production, region or availability. Therefore, you may find information about features or equipment that are not included or installed on your vehicle.

All information, specifications and illustrations in this Quick Reference Guide are those in effect at the time of printing. NISSAN reserves the right to change specifications, performance, design or component suppliers without notice and without obligation. From time to time, NISSAN may update or revise this Quick Reference Guide to provide owners with the most accurate information currently available. Please carefully read and retain with this Quick Reference Guide all revision updates sent to you by NISSAN to ensure you have access to accurate and up-to-date information regarding your vehicle. Current versions of vehicle Quick Reference Guides, Owner's Manuals and any updates can also be found in the Owner section of the NISSAN website at https://owners.nissanusa.com/nowners/navigation/manualSGuide. If you have questions concerning any information in your Owner's Manual, contact Nissan Consumer Affairs. See the NISSAN CUSTOMER CARE PROCRAM page in the Owner's Manual for contact information.

Nissan, the Nissan Brand Symbol, Z and Nissan model names are Nissan trademarks. © 2017 Nissan North America, Inc. QR17EA ON17U2 Printing: April 2017 (16)

