

QUICKSTEAMER® **USER GUIDE**

2080, 2090 SERIES

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING YOUR DEEP CLEANER.

When using an electrical appliance, basic precautions should be observed, including the following:

⚠️ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

- » Connect to a properly grounded outlet only. See grounding instructions. Do not modify the 3-prong grounded plug.
- » Do not leave appliance when it is plugged in. Unplug from outlet when not in use and before servicing.
- » Do not expose to rain. Store indoors.
- » Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- » Do not use for any purpose other than described in this User's Guide. Use only manufacturer's recommended attachments.
- » Do not use with damaged cord or plug. If appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water, have it repaired at an authorized service center.
- » Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- » Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- » Do not handle plug or appliance with wet hands.
- » Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- » Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- » Turn off all controls before plugging or unplugging appliance.
- » Use extra care when cleaning on stairs.
- » Do not use to pick up flammable or combustible materials (lighter fluid, gasoline, kerosene, etc.) or use in areas where they may be present.
- » Do not use appliance in an enclosed space filled with vapors given off by oil base paint, paint thinner, some moth proofing substances, flammable dust, or other explosive or toxic vapors.
- » Do not use to pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.).
- » Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- » Use only BISSELL cleaning products intended for use with this appliance to prevent internal component damage. See the Cleaning Fluid section of this guide.
- » Do not immerse. Use only on surfaces moistened by the cleaning process.
- » Keep appliance on a level surface.
- » Do not carry the appliance while in use.

SAVE THESE INSTRUCTIONS FOR FUTURE USE


This model is for household use only. Commercial use of this unit voids the manufacturer's warranty.

⚠️ WARNING

Improper connection of the equipment-grounding conductor can result in a risk of electrical shock. Check with a qualified electrician or service person if you aren't sure if the outlet is properly grounded. **DO NOT MODIFY THE PLUG.** If it will not fit the outlet, have a proper outlet installed by a qualified electrician. This appliance is designed for use on a nominal 120-volt circuit, and has a grounding attachment plug that looks like the plug in the illustration. Make certain that the appliance is connected to an outlet having the same configuration as the plug. No plug adapter should be used with this appliance.

GROUNDING INSTRUCTIONS

This appliance must be connected to a grounded wiring system. If it should malfunction or break down, grounding provides a safe path of least resistance for electrical current, reducing the risk of electrical shock. The cord for this appliance has an equipment-grounding conductor and a grounding plug. It must only be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

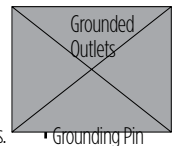


Thanks for buying a BISSELL deep cleaner

We're glad you purchased a BISSELL deep cleaner. Everything we know about floor care went into the design and construction of this complete, high-tech home cleaning system.

Your BISSELL deep cleaner is well made, and we back it with a limited one-year warranty. We also stand behind it with a knowledgeable, dedicated Consumer Care department, so, should you ever have a problem, you'll receive fast, considerate assistance.

My great-grandfather invented the floor sweeper in 1876. Today, BISSELL is a global leader in the design, manufacture, and service of high quality homecare products like your BISSELL deep cleaner.

Thanks again, from all of us at BISSELL.

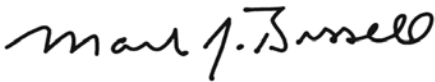


Mark J. Bissell
Chairman & CEO

Safety Instructions.....	2
Product View.....	4
Assembly.....	5
Operations.....	5-7
Maintenance & Care.....	8
Troubleshooting.....	9
Replacement Parts.....	10
Accessories.....	10
Warranty.....	11
Consumer Care.....	11
Product Registration.....	12

TIPS

- » Deep cleaning stairs and high-traffic areas on a regular basis helps prolong carpet life.
- » Check upholstery stuffing before cleaning. Colored stuffing may bleed through the fabric when it becomes wet.
- » Before turning off the machine, suction up clean water to thoroughly rinse out the interior of the flex hose. Then, lift the cleaning tool and point it upwards to drain any remaining water into the dirty water/ collection tank.

Product View

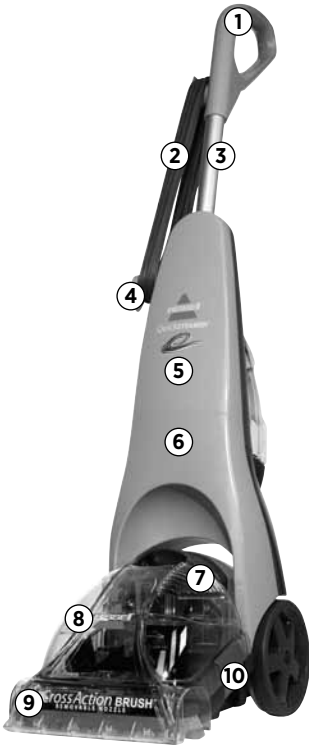

- 1 Spray Trigger
- 2 Power Cord
- 3 Handle Assembly
- 4 Lower Cord Wrap
- 5 Upper Body
- 6 Lower Body
- 7 Vent Cover (Containing Foam Filter)
- 8 Collection Tank
- 9 Removable Nozzle
- 10 Collection Tank Latch
- 11 Quick Release Cord Wrap™
- 12 Solution Tank
- 13 Power Switch
- 14 Detent Lever
- 15 Large Easy Rolling Wheels



Cleaning fluid

Keep plenty of genuine BISSELL 2X formula on hand so you can clean and protect whenever it fits your schedule. Always use genuine BISSELL deep cleaning formulas. Non-BISSELL cleaning solutions may harm the machine and will void the warranty.

⚠ WARNING

To reduce the risk of fire and electric shock due to internal component damage, use only BISSELL cleaning fluids intended for use with the deep cleaner.

	Professional Deep Cleaning	Pet Stain & Odor	Deep Clean & Protect	Pet Stain Pretreat	Stain Pretreat	Hard Floor Solutions™ formula	Prevent Boost
Best for	Out cleans all other formulas	Removes tough pet stains and contains patented odor removal technology	Deep cleans carpets and protects from future stains with Scotchgard™ Protector	Pretreat to help remove tough pet stains and odors	Pretreat to penetrate and loosen tough stains	For use with the Bare Floor Tool (select models)	Repels stains from soaking into carpet fibers
2X Concentrated	X	X	X			X	
Scotchgard™ Protection	X	X	X				

*ONLY BISSELL Protects from future stains with Scotchgard™ Protector

Scotchgard™ is a trademark of 3M®.

www.BISSELL.com



800.237.7691

Assembly

1. Slide upper body into lower body.
2. Secure with two screws.
3. Slide handle assembly down into upper body until it will go no further. Align screw slots.
4. Secure with screw.
5. Place solution tank on back of unit.

1.



2.



3.



4.



5.



⚠️ WARNING

Do not plug in your deep cleaner until you are familiar with all instructions and operating procedures.

Tip

» Always vacuum thoroughly before you deep clean. If possible, move large furniture to an area you will not be cleaning.

Operations

Before you clean

1. Remove easily moved furniture (chairs, lamps, coffee/cocktail tables, etc.) from room if needed.
2. Vacuum carpet thoroughly.
3. Decide where to begin. Plan to leave a path open to empty soiled water and refill cleaner.

NOTE: Carpeting will dry in three to four hours, depending on carpet style and air circulation in room. A floor fan speeds drying.

Tip

» Deep cleaning spots, spills, and high traffic areas on a regular basis can prolong carpet life.

Fill the tank

1. Remove the solution tank by lifting it straight up, then away from the lower body.
2. Unscrew the black cap on the solution tank.
3. Fill to the FORMULA line with BISSELL 2X formula. Fill the rest of the tank with hot (140°F/60°C MAX) tap water to the WATER fill line. Replace and tighten the black cap. ***Do not boil or microwave water as it can destroy the bladder.**
4. Place solution tank on lower body.
5. Rotate Quick Release Cord Wrap™ to release the power cord and plug into an outlet.

2.



Using Boost

For an extra cleaning boost, use BISSELL Boost with your cleaning solution.

1. Fill the clean tank with water and cleaning formula following the instructions in Step 3 above.
2. Add 1 oz. of BISSELL Boost to the solution.
3. Replace the cap on the tank and replace the tank on the machine.

Operations

Pre-Treating

Pre-treat stubborn stains and highly soiled carpet in hallways and other high-traffic areas.

1. Generously spray BISSELL Stain PreTreat evenly over soiled area. **DO NOT OVERWET CARPET.**
2. Wait 3-5 minutes before deep cleaning.



Carpet cleaning

1. Turn the unit ON by using your foot to depress the red power switch located on the foot of the machine.
2. With your foot, press the detent lever located to the right of the power switch.
3. Depress trigger to spray cleaning solution, while moving machine forward over soiled area **Do not overwet.**
4. To suction up water, repeat motion over same area without pressing trigger.
5. Repeat steps 3 and 4 until no more dirt can be removed.
6. Continue to clean entire carpet, working in 3' x 4' sections.
7. Empty the collection tank when dirty water reaches the full line, or when the solution tank is empty.
8. If floor nozzle stops spraying, turn power switch OFF and check water and cleaning solution levels. Refill if needed.

Tip

» It is recommended that every time your solution tank needs refilling that you empty the contents of the collection tank. If the collection tank gets too full, you may begin to see foam spitting out of the vent cover. If this happens, empty the collection tank.

To empty the collection tank

1. Turn power switch OFF and unplug power cord from outlet.
2. Remove and empty collection tank.
 - a. Release collection tank latches [1 each side] by pulling up from bottom of latch and then out.
 - b. Carefully remove collection tank from lower body by lifting handle.
 - c. Carry collection tank to a toilet or sink. To empty, pour out contents using opening at back of tank.
 - d. Rinse collection tank thoroughly.
 - e. Remove lint and hair from red gasket in base of unit. **(Do not remove gasket)**

2a.



2b.



2c.




2e.




Operations

3. a. Clean nozzle window by lifting latch and removing it from machine. Rinse under running water.
a. When finished, replace nozzle and secure with latch.

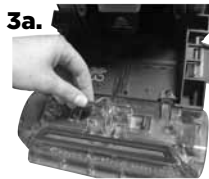

NOTE: For best results, it is recommended that the nozzle is cleaned after each use.

4. Replace collection tank on lower body and secure with latches.

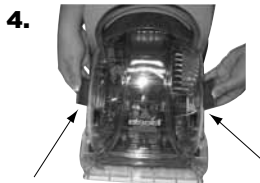

Hard floor cleaning (included on select models only)

1. Remove the collection tank (refer to steps 2a and b in the "To empty the collection tank" section on page 6)
2. Attach the hard floor tool by hooking it into the front of the removable nozzle and swinging it down until the tabs pop into place.
3. Replace the collection tank. Be sure to attach the two latches.
4. Fill solution tank with BISSELL 2X Hard Floor Solutions™ to FORMULA fill line. Fill the rest of the tank with hot (140°F/60°C MAX) tap water to the WATER fill line. Replace and tighten the black cap. ***Do not boil or microwave water as it can destroy the bladder.**
5. Follow steps 1-8 in "Carpet Cleaning" section on page 6.

WARNING

To reduce the risk of fire and electric shock- when cleaning a hard floor, the BISSELL hard floor tool 203-5639 (models 2080 & 2090) must be used and it must only be used with BISSELL 2X Hard Floor Solutions formula cleaning fluid intended for use with this appliance.

2.



2080/2090 series

Maintenance & Care

Machine storage

For best results, a few simple steps can assure your machine is well maintained after your cleaning is complete.

1. Flush your machine of any remaining residual solution
 - a. Fill the water tank with clean hot tap water.
 - b. Recline the handle and press the spray trigger for 15 seconds while making forward and backward passes on carpet. Release the trigger to suction. Repeat for another 15 seconds. Continue without pressing the trigger until there is no more water being suctioned.
2. Push the power button to turn the machine off. Unplug the machine and wrap the power cord.
3. Empty the water tank. Rinse out the water tank with hot tap water.
4. Empty the dirty water collection tank. Rinse the tank with hot tap water.
5. Wipe all surfaces with a soft cloth. Store cleaner upright in a protected dry area.


WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.


CAUTION

Do not store unit where freezing may occur. Damage to internal components may result.

To install the replacement brush belt

1. Turn the machine off and unplug from wall outlet.
2. Remove solution and collection tanks.
3. Lay machine down to access the bottom of the machine.
4. With a Phillips head screwdriver,  unscrew the brush cover and remove.
5. Remove the brush end cap and remove belt from brush.
6. Brush can now be removed.
7. Belt can be removed by sliding off the motor pulley.
8. Clean or replace belt. Attach belt to motor pulley and brush, insert brush into right side end cap.
9. Reattach the left end cap and slide brush back into place.
10. Replace the brush cover and screw into place.

Brush Cover

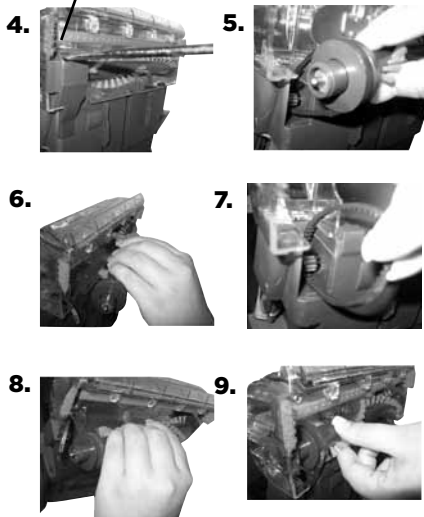

Troubleshooting

WARNING

To reduce the risk of electric shock, turn power switch off and disconnect plug from electrical outlet before performing maintenance or troubleshooting checks.

Problem	Possible causes	Remedies
Reduced spray OR no spray	Clean tank empty	Refill tank with water and formula
	Lint screen on solution tank cap clogged	Soak solution tank cap in warm water and then rinse under running water
Deep cleaner not picking up cleaning solution	Collection tank not aligned/ secured	Check tank proper alignment and secure with side latches
	Dirty tank full	Empty tank
	Removable nozzle installed improperly	Align four "hooks" into bottom first, then snap into place on top
	Removable nozzle full of debris	Remove nozzle and rinse under running water
	Red lint screen under collection tank clogged	Remove debris from lint screen

Please do not return this product to the store.







Other maintenance or service not included in the manual should be performed by an authorized service representative.

Thank you for selecting a BISSELL product.

For any questions or concerns, BISSELL is happy to be of service. Contact us directly at 1-800-237-7691.

Replacement Parts


These items are available for your BISSELL deep cleaner.
Call 1-800-237-7691 or visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
QUICKSTEAMER – 2080/2090 SERIES					
203-5520	Handle Assembly		203-5540	Solution Tank (Includes Cap and Insert Assembly)	
203-5523	Collection Tank		203-5541	Solution Tank Cap and Insert Assembly	
203-5546	DirtLifter® PowerBrush		203-5549	Belt	

*Not all parts are included with every model.

Accessories

These items are available for your BISSELL deep cleaner.
Call 1-800-237-7691 or visit www.BISSELL.com

PART #	PART NAME		PART #	PART NAME	
203-5639	Hard Floor Tool, provided with trial size Hard Floor Solutions™ formula (2080/2090 Series)				

*Not all parts are included with every model.

Cleaning Formula: Refer to bottom of page 4 of this guide for a full selection of cleaning formula available for purchase.

Warranty

This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state. If you need additional instruction regarding this warranty or have questions regarding what it may cover, please contact BISSELL Consumer Care by E-mail, telephone, or regular mail as described below.

Limited One-Year Warranty

Subject to the *EXCEPTIONS AND EXCLUSIONS identified below, upon receipt of the product BISSELL will repair or replace (with new or remanufactured components or products), at BISSELL's option, free of charge from the date of purchase by the original purchaser, for one year any defective or malfunctioning part.

See information below on "If your BISSELL product should require service".

This warranty applies to product used for personal, and not commercial or rental service. This warranty does not apply to fans or routine maintenance components such as filters, belts, or brushes. Damage or malfunction caused by negligence, abuse, neglect, unauthorized repair, or any other use not in accordance with the User's Guide is not covered.

BISSELL IS NOT LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE ASSOCIATED WITH THE USE OF THIS PRODUCT. BISSELL'S LIABILITY WILL NOT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

*EXCEPTIONS AND EXCLUSIONS FROM THE TERMS OF THE LIMITED WARRANTY

THIS WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTIES EITHER ORAL OR WRITTEN. ANY IMPLIED WARRANTIES WHICH MAY ARISE BY OPERATION OF LAW, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE ONE YEAR DURATION FROM THE DATE OF PURCHASE AS DESCRIBED ABOVE.

Some states do not allow limitations on how long an implied warranty last so the above limitation may not apply to you.

NOTE: Please keep your original sales receipt. It provides proof of date of purchase in the event of a warranty claim.

Service

If your BISSELL product should require service:

Contact BISSELL Consumer Care to locate a BISSELL Authorized Service Center in your area.

If you need information about repairs or replacement parts, or if you have questions about your warranty, contact BISSELL Consumer Care.

Website or E-mail:

www.BISSELL.com

Or Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8am - 10pm ET

Saturday 9am - 8pm ET

Sunday 10am - 7pm ET

Or Write:

BISSELL Homecare, Inc.

PO Box 3606

Grand Rapids, MI 49501

ATTN: Consumer Care

Register your product today!

Registering is quick, easy and offers you benefits over the lifetime of your product.

You'll receive:

BISSELL Rewards Points

Automatically earn points for discounts and free shipping on future purchases.

Faster Service

Supplying your information now saves you time should you need to contact us with questions regarding your product.

Product Support Reminders and Alerts

We'll contact you with any important product maintenance reminders and alerts.

Special Promotions

Optional: Register your email to receive notice of offers, contests, cleaning tips and more!

Visit www.BISSELL.com/registration now!

BISSELL Consumer Care

For information about repairs or replacement parts, or questions about your warranty:

Call:

BISSELL Consumer Care
1-800-237-7691

Monday - Friday 8 am - 10 pm ET
Saturday 9 am - 8 pm ET
Sunday 10am - 7pm ET

Write:

BISSELL Homecare, Inc.
PO Box 3606
Grand Rapids MI 49501
ATTN: Consumer Care

Visit the BISSELL website: www.BISSELL.com

When contacting BISSELL, have model number of cleaner available.

Please record your Model Number: _____

Please record your Purchase Date: _____

NOTE: Please keep your original sales receipt. It provides proof of purchase date in the event of a warranty claim. See Warranty on page 11 for details.

We can't wait to hear from you!

Rate this product and let us (and millions of your closest friends) know what you think!

www.BISSELL.com



©2014 BISSELL Homecare, Inc.
Grand Rapids, Michigan
All rights reserved. Printed in China
Part Number 160-4645 Rev 05/14
Visit our website at: www.BISSELL.com
Scotchgard is a trademark of 3M