



# *MOTOMANUAL*

RAZR v3i  
GSM

 
[motorola.com](http://motorola.com)

 


# HELLOMOTO

---


Introducing your new Motorola RAZR V3i GSM wireless phone.

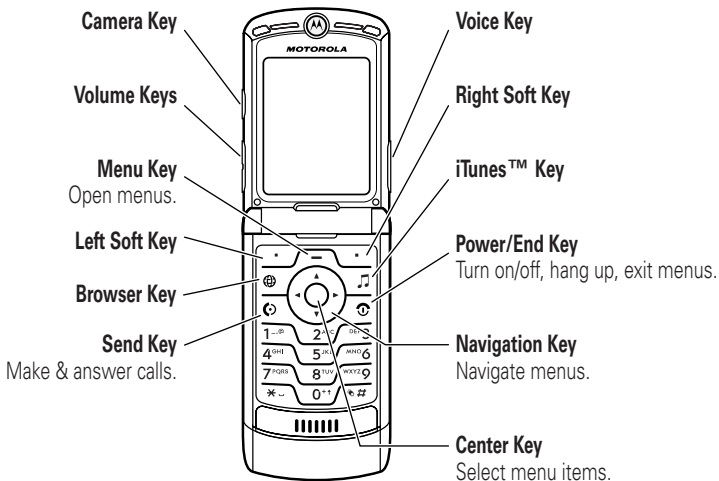

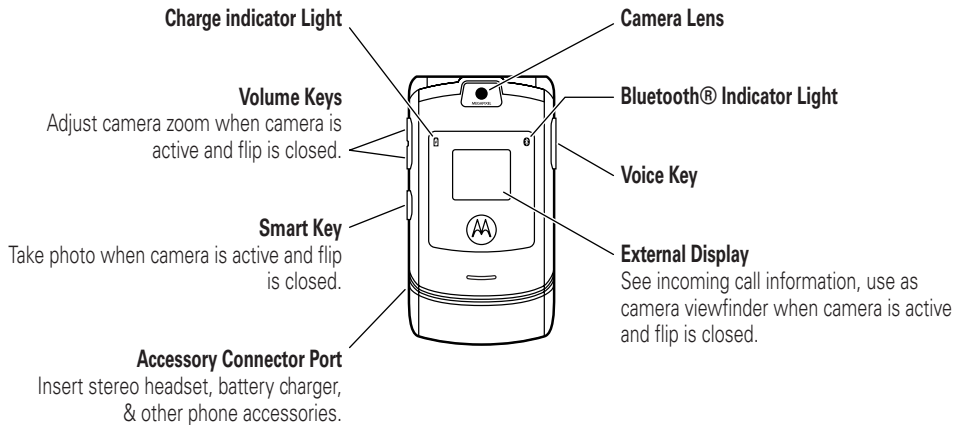


## Home Screen



- ① Press and hold the **Power Key**  for a few seconds to turn on your phone.

- ② Press the **Menu Key**  to open the **Main Menu**.
 
## Main Menu

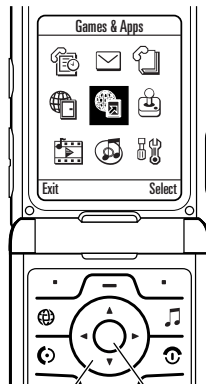

- ③ Press the **Navigation Key**  to highlight a menu feature.

- ④ Press the **Center Select Key**  to select it.

Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
[www.hellomoto.com](http://www.hellomoto.com)

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate

at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. America Online, AOL, the America Online & Design logo, the AOL & Design logo, and the Triangle Logo, are registered trademarks of America Online, Inc. in the United States and/or other countries. Instant Messenger and Buddy List are trademarks of America Online, Inc. Microsoft and Windows are registered trademarks of Microsoft Corporation; and Windows XP is a trademark of Microsoft Corporation. Macintosh is a registered trademark of Apple Computer, Inc. iTunes is a registered trademark of Apple Computer, Inc. All rights reserved. iTunes is a

trademark of Apple Computer, Inc., registered in the U.S. and other countries. All rights reserved.

© Motorola, Inc., 2006.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

### **Software Copyright Notice**

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or

otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 6809500A20-0

# contents

---

<b>menu map</b> . . . . .	<b>8</b>	<b>main attractions</b> . . . . .	<b>19</b>	codes & passwords . . .	55
<b>use and care.</b> . . . . .	<b>10</b>	airplane mode . . . . .	19	lock & unlock phone . .	55
<b>recycling information</b> . .	<b>11</b>	iTunes™ . . . . .	19	<b>customize.</b> . . . . .	<b>57</b>
<b>essentials</b> . . . . .	<b>12</b>	memory card . . . . .	26	ring style . . . . .	57
about this guide . . . . .	12	voice commands . . . . .	30	time & date . . . . .	58
SIM card . . . . .	13	photos . . . . .	32	wallpaper . . . . .	58
battery . . . . .	13	video clips . . . . .	34	screen saver . . . . .	59
turn it on & off . . . . .	16	multimedia messages .	38	themes . . . . .	59
make a call . . . . .	16	Bluetooth™ wireless .	40	display appearance . . .	60
answer a call . . . . .	17	<b>basics</b> . . . . .	<b>45</b>	answer options . . . . .	61
store a phone number in		display . . . . .	45	<b>calls.</b> . . . . .	<b>62</b>
the phonebook . . . . .	17	text entry . . . . .	48	turn off a call alert . . . .	62
call a stored phone		volume . . . . .	52	recent calls . . . . .	62
number . . . . .	18	navigation key . . . . .	53	redial . . . . .	63
search the phonebook .	18	smart key . . . . .	53	return a call . . . . .	63
your phone number . . .	18	external display . . . . .	53	notepad . . . . .	64
		handsfree speaker . . . .	54	hold or mute a call . . . .	64



call waiting . . . . .	64	<b>Safety Information . . . . .</b>	<b>96</b>
caller ID . . . . .	65	<b>Warranty . . . . .</b>	<b>102</b>
emergency calls . . . . .	65	<b>Hearing Aid</b>	
international calls . . . . .	66	<b>Compatibility . . . . .</b>	<b>108</b>
1-touch dial . . . . .	66	<b>WHO Information . . . . .</b>	<b>110</b>
voicemail . . . . .	66	<b>Product Registration . . . . .</b>	<b>110</b>
<b>other features . . . . .</b>	<b>68</b>	<b>Export Law</b>	
advanced calling . . . . .	68	<b>Assurances . . . . .</b>	<b>111</b>
phonebook . . . . .	71	<b>Wireless: The New</b>	
messages . . . . .	77	<b>Recyclable . . . . .</b>	<b>111</b>
personalize . . . . .	79	<b>Smart Practices While</b>	
call times & costs . . . . .	82	<b>Driving . . . . .</b>	<b>113</b>
handsfree . . . . .	83	<b>index . . . . .</b>	<b>115</b>
data & fax calls . . . . .	84		
network . . . . .	85		
personal organizer . . . . .	86		
security . . . . .	88		
fun & games . . . . .	89		
<b>service and repairs . . . . .</b>	<b>91</b>		
<b>SAR Data . . . . .</b>	<b>92</b>		

# menu map

## main menu



### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times



### Messages

- Create Message
- Message Inbox
- Media Templates
- Quick Notes
- Voicemail
- Email Msgs
- Outbox
- Drafts
- Browser Msgs \*
- Info Services \*



### Phonebook



### Internet



### Rogers Mall

- Get Ringtones
- Get Games
- Get Video
- Get Graphics
- Get Celebrity VMail
- Get My Pix
- Navigate Home



### Games & Apps



### Multimedia/Sounds

- Themes
- Camera
- Pictures
- Sounds
- Videos
- Video Camera



### iTunes



### Settings

- (see next page)

This is the standard main menu layout. **Your phone's menu may be different.**

\* optional features

## settings menu



### Personalize

- Home Screen
- Main Menu
- Voice Dial Setup
- Skin
- Greeting
- Wallpaper
- Screen Saver



### Ring Styles

- Style
- *style* Detail



### Connection

- USB Settings
- Bluetooth Link
- Sync



### Call Forward

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



### In-Call Setup

- Dialing Prefix
- In-Call Timer
- My Caller ID
- Answer Options
- Call Waiting



### Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup \*
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



### Phone Status

- My Tel. Numbers
- Battery Meter
- Storage Devices
- Voice Dial Languages \*
- Software Update
- Other Information



### Headset

- Auto Answer
- Voice Dial



### Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



### Airplane Mode

- Airplane Mode
- Prompt at Startup



### Network

- New Network
- Network Setup
- Available Networks
- My Network List
- Service Tone
- Call Drop Tone



### Security

- Phone Lock
- Lock Application
- Fixed Dial
- Call Barring \*
- SIM PIN
- New Passwords
- Certificate Mgmt



### Java Settings

- Java App Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight



### Tools

- Calculator
- Datebook
- Shortcuts
- Voice Records
- Alarm Clock
- Dialing Services
  - Fixed Dial
  - Service Dial \*
  - Quick Dial

\* optional features

# Use and Care

---

To care for your Motorola phone, please keep it away from:



## liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture.



## dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



## extreme heat or cold

Avoid temperatures below -10°C/14°F or above 45°C/113°F.



## cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



## microwaves

Don't try to dry your phone in a microwave oven.



## the ground

Don't drop your phone.

# Caring for the Environment by Recycling

---



When you see this symbol on a Motorola product, do not dispose the product with household waste.

## Recycling Mobile Phones and Accessories

---

Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or

electrical accessories to any Motorola Approved Service Centre in your region.

# essentials


---


**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.



## about this guide

This guide shows how to locate a menu feature as follows:

**Find it:** Press  >  **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press the *menu key*  to open

the menu, scroll to and select  **Recent Calls**, then scroll to and select **Dialed Calls**.

Press the *navigation key*  to scroll to and highlight a menu feature. Press the *center key*  to select the highlighted menu feature.

### symbols



This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.



 
This means a feature requires an optional accessory.

## SIM card


Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.

**Caution:** Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.

- 1 If necessary, press in the battery door release latch and remove the battery door.

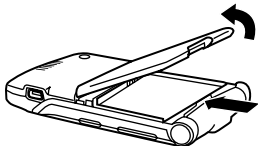

 - 2 Hold the SIM card with the notch in the lower left corner and the gold plate facing down. Slide the SIM card under the metal clip and into the card slot as shown.

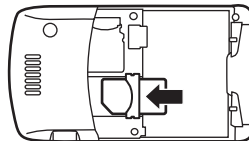

## battery

### battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place.
- Never expose batteries to temperatures below  $-10^{\circ}\text{C}$  ( $14^{\circ}\text{F}$ ) or above  $45^{\circ}\text{C}$  ( $113^{\circ}\text{F}$ ). Always take your phone with you when you leave your vehicle.



- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.



 
 
 
 
Contact your local recycling center for proper battery disposal.

**Warning:** Never dispose of batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the “Safety and General Information” section included in the gray-edged pages at the back of this guide.




## battery installation

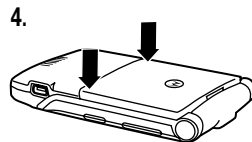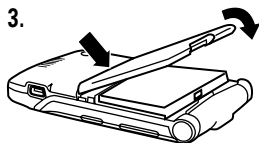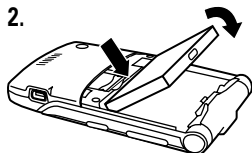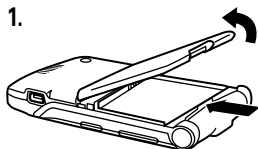

## battery charging

 New batteries are not fully charged. Plug the travel charger into your phone as shown. Plug the other end into an electrical outlet. Your phone might take several seconds to start charging the battery. The battery charge indicator light shows when the battery

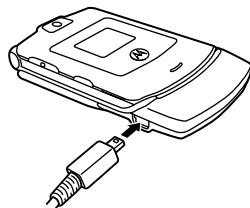

is charging. The display shows **Charge Complete** when finished.

**Tip:** Relax, you can't overcharge your battery. It will perform best after you fully charge and discharge it a few times.


**Note:** You can charge your battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.





## turn it on & off

 **Caution:** On power up, the phone may prompt you to enter your SIM card PIN code to unlock the SIM card. If you enter an


incorrect PIN code three times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.


To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your six-digit SIM card PIN code and/or four-digit unlock code.

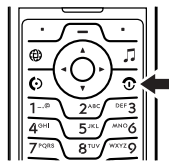

To turn off your phone, press and hold  for two seconds.


## make a call


Enter a phone number and press  to make a call.

To "hang up," close the flip or press .

**Note:** Closing the flip doesn't end a call when the handsfree speaker is turned on (for more information about the handsfree speaker, see page 54).

## answer a call

When your phone rings and/or vibrates, just open the flip or press  to answer.


To "hang up," close the flip or press .

**Note:** Closing the flip doesn't end a call when the handsfree speaker is turned on (for more information about the handsfree speaker, see page 54).

## store a phone number in the phonebook

You can store a phone number in your **Phonebook**.


**Note:** You can store a phonebook entry in phone memory or on your SIM card. You can't set a picture ID, ringer ID, or voice name for entries stored on the SIM card.

- 1 Enter a phone number in the home screen.
- 2 Press the **Store** key.
- 3 Enter a name and other details for the phone number. To edit details, scroll to them and press the center key .
- 4 Press the **Done** key to store the number.



To edit or delete a phonebook entry, see page 72.


To store an email address, press

 >  **Phonebook**, then press




 > **New** > **Email Address**.

## call a stored phone number

**Find it:**  >  **Phonebook**



- 1 Scroll to the contact.
- 2 Press  to call the contact.

## search the phonebook


To set the phonebook search method, press  >  **Phonebook**, then press  > **Setup** > **Search Method** > **Jump To** or **Find**.

To search for a phonebook entry, press the keypad key that contains the first letter of the entry. **Jump To** method immediately jumps to the first entry that begin with the key's letters. **Find** method prompts you to enter the name or speed number for the entry, depending on how the phonebook list is sorted.

## your phone number

From the home screen, press   to see your number.

**Tip:** Want to see your phone number while you're on a call? Press  > **My Tel. Numbers**.

To store or edit your name and phone number on your SIM card, press the  **Edit** key while showing your number. If you don't know your phone number, contact your service provider.



# main attractions

---



You can do much more with your phone than make and receive calls!

## airplane mode

*Airplane mode* turns off your phone's calling features in locations where wireless phone use is prohibited. You can use the phone's iTunes player and other non-calling features in airplane mode.

**Find it:** Press  >  **Settings** > **Airplane Mode** > **Airplane Mode** > **On** or **Off**

Your phone can prompt you to activate or deactivate airplane mode each time you turn on the phone:

**Find it:** Press  >  **Settings** > **Airplane Mode** > **Prompt at Startup** > **On** or **Off**

## iTunes™


You can use the iTunes desktop application on your computer to buy and download music and other digital audio content from the Internet, import songs from audio CDs, and create playlists of your favorite songs. Then you can transfer songs from your computer to your phone and play them through the iTunes application on your phone. The iTunes application on your phone supports AAC and MP3 song formats.

## install iTunes on your computer

Before you can download songs to your phone, you must install the iTunes desktop application on your computer.

**Requirements:** You must have iTunes desktop application version 6.0.1 or later installed to work with your phone. The iTunes desktop application requires Mac® OS X v10.3.6 or later, or Windows® 2000 or XP™ with the latest Service Pack.

- 1 Install the iTunes desktop application software from the CD-ROM that came with your phone, or download the iTunes desktop application software for free at [www.itunes.com](http://www.itunes.com).
- 2 Double-click the iTunes package to run the installer.
- 3 Follow the prompts to install the software.

- 4 When installation is complete, double-click the iTunes icon  on your desktop to open iTunes.

For more information about the iTunes desktop application software, see [www.itunes.com](http://www.itunes.com).

## use the iTunes Music Store

Use the iTunes desktop application on your computer to preview, buy, and download songs from the iTunes Music Store (not available in some countries). Most stores offer over a million songs for purchase. You can use an Apple account to purchase songs from the music store.

To browse and buy music:

- 1 Open the iTunes desktop application and click Music Store in the Source List.

- 2 Click the Sign In button and follow the instructions to set up an account, or enter your existing Apple account information.
- 3 When logged in to your account, browse and buy music.

**Tip:** When you buy a song, the display shows its name in the Purchased Music playlist. You can drag and drop these songs into playlists you create or directly onto your phone.

For more information about the iTunes Music Store, open iTunes and select Help > iTunes and Music Store Help.

## create a playlist

You can create playlists on your computer, and then transfer them to your phone. To create a playlist on your computer:

- 1 Open the iTunes desktop application on the computer.
- 2 Click the Add button (+) in the lower-left corner of the iTunes desktop application.
- 3 Enter a name for the playlist.
- 4 Drag songs from your music library to the playlist.

To transfer a playlist to your phone, see the following section.

## transfer music to your phone

### set bit rate conversion

Your Motorola phone supports audio files with a bit rate up to 128 kbps for AAC format, or 192 kbps for MP3 format. In order to play songs with higher bit rates on your phone, set the iTunes software on your computer to automatically convert higher bit rate songs to a rate compatible with your phone as follows:

- 1 Open the iTunes desktop application on your computer.
- 2 Use the USB cable to connect the phone to the computer, and wait for the Phone icon to appear in the Source List in the iTunes desktop application



**Note:** It may take up to one minute for the Phone icon to appear in the Source list.

- 3 From the menu bar, select **Edit > Preferences**.
- 4 When the iTunes Preferences window displays, select the **Phone** tab.
- 5 Select the check box for **Convert higher bit rate songs to 128 kbps AAC**.
- 6 Click **OK**.

## transfer music

You can **transfer** music from the iTunes desktop application to your phone.

**Note:** If your memory card has been used with another iTunes library, all songs will be deleted and overwritten.

- 1 Install a memory card in your phone (see page 26).
- 2 Set the memory card as the default USB connection on your phone. Press  >  **Settings > Connection > USB Settings > Default Connection > Memory Card**.
- 3 Open the iTunes desktop application on your computer.
- 4 Use the USB cable to connect the phone to the computer.

**Caution:** Do not disconnect the USB cable from the computer or phone while transferring song files. If the USB cable is disconnected during transfer, restart the transfer procedure to avoid corrupting song files.



- 5 When the Phone icon appears in the Source List in the iTunes desktop application, drag and drop individual song files or a playlist onto your phone.

**Note:** It may take up to one minute for the Phone icon to appear in the Source list.

An average song file may take 45 seconds or longer to download to the phone.

- 6 To disconnect your phone from the computer, click the eject icon next to the Phone icon in the Source list. Wait until the **Do Not Disconnect** message disappears from the phone display, then disconnect the USB cable from your phone.

Individual songs that you transfer are listed under the **Songs** menu on your phone. Playlist songs are listed under the **Playlist** menu on the phone.

**Note:** You can't transfer iTunes recognizable music over a Bluetooth™ wireless connection.


 
## play songs



**Note:** To play songs using iTunes on your phone, you must install a memory card in the phone (see page 26), and store the songs on the card.

**Note:** You must disconnect the USB cable from your phone to play songs. Don't disconnect the USB cable while music is transferring.

Press  to see the iTunes main screen.



To **play a song**, press  up/down to scroll to **Songs**, press  right to select **Songs**, scroll to a song, then press the **Play** key.


To **play all songs in a list**, press  up/down to scroll to **Albums**, **Artists**, or **Playlist**, press  right to select it, scroll to **All**, then press the **Play** key.

**Note:** You can't listen to iTunes over a Bluetooth headset.



## iTunes controls

 
### features

#### start iTunes

Press  to open iTunes.




#### select a menu option

 Press  up/down to scroll to a menu option, then press  right to select it.

To return to a previous option, press  left.

**Tip:** Use the right and left soft keys to **Play** songs or **Exit** menus.




#### pause a song

From the iTunes **Now Playing** screen, press the **Pause** key. Or from the home screen (when iTunes is hidden), press  up to switch from Play () to Pause ().

#### play next song

Press the Forward button ( right).

<b>features</b>
<b>start a song over</b> Press the Back button (⏮ left).
<b>play the previous song</b> Press the Back button (⏮ left) twice.
<b>fast forward</b> Press and hold the Forward button (⏭ right).
<b>rewind</b> Press and hold the Back button (⏮ left).
<b>shuffle songs</b> From the iTunes main screen, press ⏮ down to scroll to <b>Shuffle Songs</b> , then press <b>Play</b> .
<b>adjust song volume</b> From the <b>Now Playing</b> screen, press the volume keys, or press ⏮ up or down.


<b>features</b>
<b>hide iTunes</b> To hide the iTunes application while playing music: Press  > <b>Hide</b> . Your phone shows iTunes commands on the home screen. You can use other phone functions while listening to iTunes content. <b>Tip:</b> If you want to quickly hide iTunes, while playing music, press  .
<b>exit iTunes</b> From the iTunes main screen, press the <b>Exit</b> key. <b>Tip:</b> You can also press  twice from any iTunes screen.

## add artwork to your songs

You can add album cover art or pictures to your iTunes songs.

Open the iTunes desktop application on your computer. If necessary, click the View Artwork button in the lower-left corner of the iTunes desktop application to open the artwork window.

If a song contains album art, a thumbnail image of the album art appears in the artwork window. To add or change artwork, drag a picture file to the artwork window.

To see the full-screen artwork on your phone, press the center key .

## upgrade iTunes desktop application software

For more information about storing iTunes music on your phone, go to

<http://www.itunes.com/mobile/motorola> or <http://www.hellomoto.com>.

 
## memory card

You can use a removable TransFlash memory card with your phone to store and retrieve multimedia content (such as songs and photos).


## install a memory card

**Caution:** Don't bend or scratch your memory card. Keep it away from static electricity, water, and dirt.

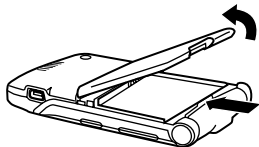

 - 1 Press in the battery door release latch and remove the battery door.

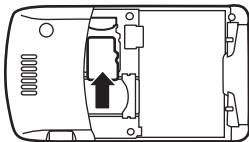


- 2 Slide the memory card under the metal clip and into the card slot as shown.






## see and change memory card information

**Find it:** Press  >  **Settings** > **Phone Status** > **Storage Devices**

- 1 Press  to scroll to the memory card.
- 2 Press the **Details** key to see memory card information.

**or**

Press  to open the **Storage Device** menu, to **Format** or **Rename** the memory card.





**To see files stored on the memory card,** open a file list (such as **Pictures**, **Videos**, or **Sounds**), then press  > **Switch Storage Device** > **Memory Card**. To see files stored on your phone again, press  > **Switch Storage Device** > **Phone**.

## reformat the memory card

You can reformat your memory card to erase files stored on the card.

**Note:** Use this procedure if your phone doesn't recognize the memory card, or if the iTunes desktop application on your computer doesn't recognize the phone as a valid iTunes device.

**Caution:** Reformatting the memory card erases all files stored on the card (including music, photos, and videos). After you erase the files, you can't recover them.

- 1 Press  >  Settings > Phone Status > Storage Devices.
- 2 Press  to scroll to the memory card.
- 3 Press  > Format.

## move files from the phone to the memory card

You can move files (such as pictures and photos, video clips, and sound files) from your phone to the memory card to free up phone memory.

**Note:** Moving a file to the memory card deletes the original from phone memory.

**To see files stored on your phone**, open a file list (such as **Pictures**, **Videos**, or **Sounds**), then press  > **Switch Storage Device** > **Phone**.

Scroll to the file you want to move, then press  > **Move** > **Memory Card**.

## connect the memory card to a computer

You can connect your phone to a computer to transfer files to and from the memory card.

**Note:** When your phone is connected to a computer, you can access the memory card only through the computer.

### On your phone:

Press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



### On your computer:

**1** Find where your phone's memory card appears as a Removable Disk icon. On a PC, this is the My Computer window. On a Macintosh® computer, it's on the desktop.

- 2** Double-click the Removable Disk icon to access the files on your phone's memory card.
- 3** To store the desired files onto the memory card, drag and drop them as follows: **MP3 files:** > mobile > audio  
**screen savers:** > mobile > picture  
**wallpapers:** > mobile > picture  
**video clips:** > mobile > video
- 4** When you finish, remove the phone with memory card safely from your computer:

**If you are using a PC,** right-click the Safely Remove Hardware icon in the system tray at the bottom of your computer screen. Then select USB Mass Storage Devices and Stop.

**If you are using a Mac,** select and drag the Removable Disk icon to the Trash.

5 Select USB Mass Storage Device, then OK.

### On your phone:

To return to **Data Fax** as your USB default connection, press  >  **Settings** > **Connection** > **USB Settings** > **Default Connection** > **Data/Fax Connection**.

## store and use protected content

If you try to play a copyrighted file, it might prompt you to download a license. Some licenses let you play a file only for a certain number of times or days. You cannot send, copy, or change copyrighted files.

For example, a license may allow you to use a copyrighted file five times or use the copyrighted file for three days before it expires.

To activate downloaded copyrighted files:

**Find it:** Press  > **Activation List** > *file type* > *file*

You can show the copyrighted file's **Status**, **Type**, **Activation**, and **Counts Remaining**.

## voice commands

You can use voice commands to make calls, and to open and use some phone applications.

**Note:** Not all phone languages support voice recognition and voice commands.

**Note:** You can send voice commands to your phone using a connected headset or handsfree car kit.



## open applications

To open the **Camera** or **Voicemail** applications, **Redial** (dialed calls list), or **Received Calls** list:

- 1 Press and release the voice key.  
Your phone prompts you to say a command.
- 2 Say one of the following commands:  
“Camera,” “Voicemail,” “Redial” (dialed calls list), or “Received Calls”  
Your phone opens the application.

## make a call

You can use voice commands to make a call:

- Use **name dial** to dial a phonebook entry by speaking the entry’s name.
- Use **digit dial** to dial any phone number by speaking its digits.


**Tip:** Speak numbers at a normal speed and volume, pronouncing each digit distinctly. Avoid pausing between digits.



- 1 Press and release the voice key.  
Your phone prompts you to say a command.
- 2 Say “Name Dial” or “Digit Dial.”
- 3 When prompted, say the name of the phonebook entry or speak the digits in the phone number.  
If your phone recognizes the name or number, it makes the call.

### Notes:

- Your phone may prompt you to repeat a name or number. If the name/number isn’t valid, the phone doesn’t make the call.

- If the phone doesn't recognize the name or number, the display shows a list of names/numbers, asks, "Did you say ...," and highlights the first item in the list. Say "Yes" to call the highlighted number, or "No" to go to the next list item.

 
To select the name or number manually, scroll to the name/number on the list and press the center key .


- You can improve voice dial operations by training the phone to recognize your voice. Press  >  **Settings** > **Personalize** > **Voice Dial Setup** > **Adapt Digits**.

## photos

### take a photo


Press  >  **Multimedia** > **Camera** to see the camera viewfinder.

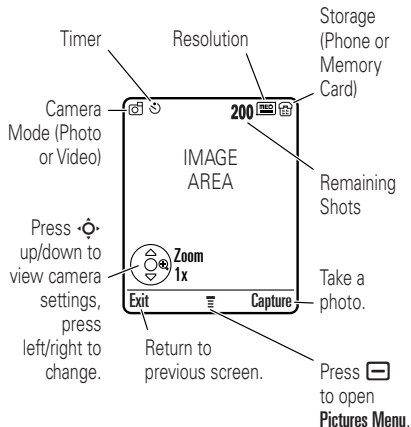

**Tip:** High-resolution images can be stored only on your memory card. To change picture resolution, press  > **Pictures Setup** > **Resolution** from the camera viewfinder.


- 1 Point the camera lens at the photo subject.
- 2 Press the **Capture** key to take a photo.
- 3 Press the **Send** key to send the photo in a multimedia message (see page 38).

**or**

Press  to select a storage option:  
**Store Only, Apply as Wallpaper, Apply as Screen Saver,**  
or **Apply as Phonebook Entry.**

**or**

Press the **Discard** key to delete the photo and return to the active viewfinder.

**Shortcut:** After taking a photo, press the center key  to quickly store it and return to the camera viewfinder.


**Note:** You can't assign a photo to a phonebook entry stored on the SIM card.

## self portrait

When the camera viewfinder is active, you can close the flip to show the viewfinder image in the external display. Press the smart key (see illustration on page 2) to take a photo. Open the flip to send, store, or discard the photo.

## camera settings

When the camera viewfinder is active, press  to open the **Pictures Menu** to select the following options:

 
options	
<b>View Photo Album</b>	See stored pictures and photos. Press  to perform various operations (such as <b>Delete</b> , <b>Rename</b> , or <b>Move</b> ) on a picture.
<b>Go To Video Mode</b>	Switch to the video camera.
<b>Switch Storage Device</b>	Choose to store and see pictures on your phone or memory card.  <b>Note:</b> High-resolution photos can be stored only on your memory card.
<b>Auto-Timed Capture</b>	Set a timer for the camera to take a photo.
<b>Adjust Brightness</b>	Adjusts brightness settings for the camera.
<b>Pictures Setup</b>	Adjust photo settings.

options	
<b>View Free Space</b>	See how much memory remains for storing pictures.

## video clips

### record a video clip

Press  >  **Multimedia** > **Video Camera** to see the video camera viewfinder.

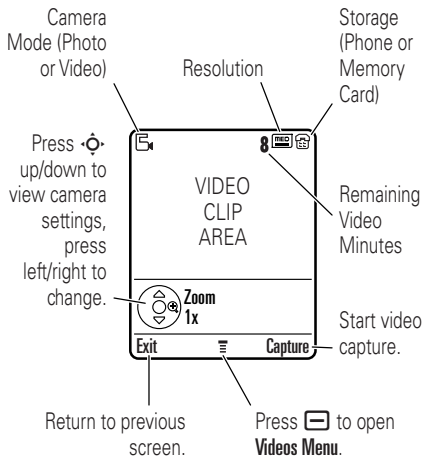


**Tip:** If you want to send your video in an multimedia message (MMS), the video length must be set to **MMS**. To set length, press **[Menu]** > **Videos Setup** > **Video Length**.

- 1 Point the camera lens at the video subject.
  - 2 Press the **Capture** key to begin video recording.
  - 3 Press the **Stop** key to stop video recording.
  - 4 Press the **Options** key to select a storage option: **Send in Message** or **Store Only**.
- or**
- Press the **Discard** key to delete the video clip.

If you choose to send the video clip in a message, see “send a multimedia message” on page 38.


When the video camera viewfinder is active, press **[Menu]** to open the **Videos Menu** to select the following options:


options	
<b>Go To Videos</b>	See stored video clips. Press  to perform various operations (such as <b>Delete</b> , <b>Rename</b> , or <b>Move</b> ) on a video clip.
<b>Go To Photo Mode</b>	Switch to the picture camera.
<b>Switch Storage Device</b>	Choose to store and see video clips on your phone or memory card.
<b>Videos Setup</b>	Adjust video recording settings.
<b>View Free Space</b>	See how much memory remains for storing video clips.


## play a video clip

 **Find it:** Press  >  **Multimedia** > **Videos** > *video clip*

The display shows the video clip in the playback screen.

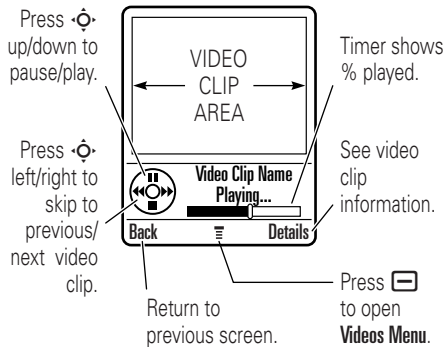

**Tip:** To fast forward or rewind a video, press and hold the navigation key () left or right.

From the stored video clips list, press  to open the **Videos Menu** to select the following options:

<b>options</b>	
<b>Send</b>	Insert a video clip in a new message.
<b>Switch Storage Device</b>	Choose to store and see video clips on your phone or memory card.
<b>New</b>	Activate the video camera to record a new video clip.
<b>Details</b>	See video clip information.
<b>Rename</b>	Rename a video clip.
<b>Delete</b>	Delete marked video clip(s).
<b>Move</b>	Move video clip(s) to another device, delete original(s) from phone memory.

<b>options</b>	
<b>Copy</b>	Copy video clip(s) to another device, leave original(s) on phone.
<b>Mark/Unmark</b>	Mark one or more video clips that you want to delete, move, copy, or assign to a category.
<b>Mark All</b>	Mark all the video clips to delete, move, copy, or assign to a category.
<b>Categories</b>	Create new category, or see video clips in a selected category.
<b>Assign</b>	Assign video clip(s) to a category.
<b>Videos Setup</b>	Adjust video recording settings.
<b>Get Video Clips</b>	Access a list of video clips to view.

## options

<b>View</b>	See how much memory
<b>Free Space</b>	remains for storing video clips.

# multimedia messages

For more messaging features, see page 77.


## send a multimedia message


A *Multimedia Messaging Service* (MMS) message contains pages with text and media objects (including photos, sounds, or video clips). You can send the multimedia message to other MMS-capable phones, and to email addresses.





**Find it:** Press  >  **Messages** > **Create Message**  
> **New Multimedia Msg**


- 1 Press keypad keys to enter text on the page (for more information about text entry, see page 48).

To insert a **picture, sound, video clip, voice record, quick note, or contact info** on the page, press  > **Add Media**. Select the file type and the file.


To insert **another page** in the message, enter text or objects on the current page and press  > **Add Media** > **New Page**. You can enter more text and objects on the new page.

- 2 When you finish the message, press  > **Message Options** to set message options:


To enter a **subject** for the message, scroll to **Subject** and press the center key .


To **attach a file** to the message, scroll to **Attachments** and press the center key . Select the file type and the file.




To set message **priority**, or request a message **delivery report** or **read report**, scroll to the option and press the center key .


- 3 When you finish setting message options, press the **Done** key.
- 4 Press the **Send To** key to select one or more message recipients:

To select a **phonebook entry**, scroll to the entry and press the center key . Repeat to add other phonebook entries.


To enter a new **phone number**, scroll to **[New Number]** and press the center key .

To enter a new **email address**, scroll to **[New Email Address]** and press the center key .

- 5 To **send** the message, press the **Send** key.

To **cancel or save** the message as a **Draft**, press .

## receive a multimedia message

When you receive a multimedia message or letter, your phone plays an alert and the display shows **New Message** with a message indicator (such as ).



Press the **Read** key to open the message.

- Photos, pictures, and animations show as you read the message.
  - A sound file plays when its page shows. Use the volume keys to adjust the sound volume.
- Note:** In a multimedia letter, you may have to scroll to an indicator in the text to play a sound file.
- Attached files are added to the end of the message. To open an attachment,

scroll to the file indicator/filename and press the **View** key (image), **Play** key (sound), or **Open** key (phonebook vCard, datebook vCalendar entry, or unknown file type).

## Bluetooth™ wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*). You can pair your phone with a Bluetooth headset or car kit to make handsfree calls, or pair your phone with a phone or computer that supports Bluetooth connections to exchange files.



**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the

laws and regulations on the use of these products.

**Note: Your phone's Bluetooth features and Bluetooth Class 1 power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Bluetooth features in France unless you are indoors.**

**For maximum Bluetooth security,** you should always pair Bluetooth devices in a safe, private environment.

### turn Bluetooth power on or off

**Find it:** Press  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Power** > **On**

**Note:** To extend battery life, use this procedure to set Bluetooth power to **Off** when not in use. Your phone will not pair with another device until you set Bluetooth power


back to **On** and pair your phone with the device again.

## use a headset or handsfree car kit


**Before you try to pair your phone with a handsfree device**, make sure the device is **on** and **ready** in pairing mode (see the device user's guide). You can pair your phone with only one device at a time.

**Find it:** Press  >  **Settings** > **Connection** > **Bluetooth Link** > **Handsfree** > **[Look For Devices]**

Your phone lists the devices it finds within range.

- 1 Scroll to a device in the list and press the center key .
- 2 Press the **Yes** key to pair with the device.

- 3 If necessary, enter the device passkey (such as **0000**) and press the **OK** key.

When your phone is paired, the Bluetooth indicator  shows in the home screen and the external Bluetooth indicator light flashes.


**Note:** When Bluetooth power is on, your phone can automatically pair with a handsfree device you have used before. Just turn on the device and move it near the phone.


## copy files to another device

You can copy a photo, picture, video clip, sound file, phonebook entry, datebook event, or bookmark to another phone or computer that supports Bluetooth connections.

**Before you try to copy a file to another device**, make sure the receiving device is **on** and **ready** in discoverable mode.

**Note:** You can't copy a copyrighted file.

- 1 On your phone, scroll to the object that you want to copy to the other device.
- 2 Press , then select:
  - **Copy** for a photo, picture, video clip, or sound file.
  - **Share Phonebook Entry** for a phonebook entry.
  - **Send** for a datebook event or bookmark.
- 3 Select a recognized device name, or **[Look For Devices]** to search for an unrecognized device where you want to copy the object.

**Note:** Once you connect your phone to a Bluetooth device, that device can start a similar Bluetooth connection with your phone. Your display shows the Bluetooth indicator  when there is a Bluetooth connection.

## receive files from another device

**Before you try to receive a file from another device**, make sure your phone's Bluetooth power is **on** (see page 40).

Have the other device send the file to your phone.

If your phone and the sending device don't recognize each other, you must place your phone in discoverable mode so the sending device can locate it:


**Find it:** Press  >  **Settings** > **Connection** > **Bluetooth Link** > **Setup** > **Find Me**

Press the **Accept** key to accept a file from another device. Your phone notifies you when file transfer is complete. If necessary, press the **Save** key to save the file to the appropriate location.

## send files to a printer

You can send a photo, picture, message, phonebook entry, or datebook event from your phone to a printer that supports Bluetooth connections.

**Note:** You can print A4 or US Letter size pages. To print another size, copy the object to a linked computer and print it from there. You cannot print **Quick Notes**, **MMS Templates**, or a phonebook **Mailing List**.







- 1 On your phone, scroll to the object that you want to print, then press  > **Print**.

**Tip:** If you see it, you can print it. After you capture a picture in the camera, you can press  > **Print and Store**.

- 2 If available, choose additional objects or print options.

- 3 Select a recognized printer name listed in the **Printers** menu, or **[Look For Devices]** to search for an unrecognized printer where you want to send the object.

## advanced Bluetooth features

features	
<b>pair with recognized device</b>	
 >  <b>Settings</b> > <b>Connection</b> > <b>Bluetooth Link</b> > <b>Handsfree</b> > <i>device name</i>	
<b>drop pairing with device</b>	
Scroll to the device name and press the <b>Drop</b> key.	
<b>switch to headset or car kit during call</b>	
 > <b>Use Bluetooth</b>	

## features

### switch back to phone during call




To switch from a headset or car kit to your phone during a call:

 > Use Handset

### move multimedia object to device




**Caution:** Moving an object **deletes** the original object from your phone.

Scroll to the object, press  > **Move**, select the device name.

### edit properties of recognized device



Scroll to the device name, press  > **Edit**.

### set Bluetooth options



 >  **Settings** > **Connection**  
> **Bluetooth Link** > **Setup**

 
# basics

---


See page 1 for a basic phone diagram.



## display

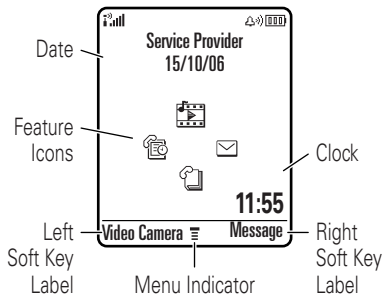
The *home screen* appears when you turn on the phone.



 
**Note:** Your home screen may look different, depending on your service provider.

 
To dial a number from the home screen, press number keys and .


The *menu indicator*  shows that you can press  to open the main menu. *Soft key labels* show the current soft key functions. For soft key locations, see page 1.


Press  up, down, left, or right in the home screen to open basic features. You can show or hide icons for these features in the home screen, and change the icons that are shown (for more information about changing icons in the home screen, see page 81).


Status indicators can show at the top of the home screen:

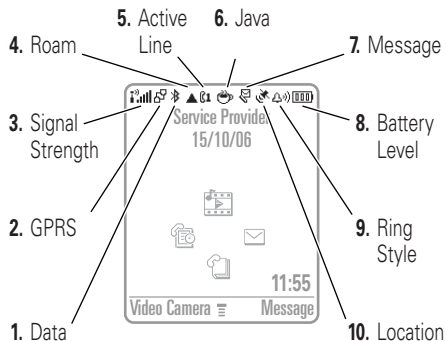



 **1 Data Indicator** – Shows connection status. The Bluetooth™ indicator  shows when your phone is paired with another device. Other indicators can include:


 = secure data transfer

 = unsecure data transfer

 = secure connection


 = unsecure connection

 
 = secure *Circuit Switch Data* (CSD) call



 = unsecure CSD call

**2 GPRS Indicator** – Shows when your phone is using a high-speed *General Packet Radio Service* (GPRS) network connection. Other indicators can include:




 = GPRS PDP context active

 

 = GPRS data available





**3 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when  or  shows.




**4 Roam Indicator** – The roam indicator  shows when your phone is seeking or using a network outside your home network. Other indicators can include:

 = 2G home	 = 2G roam
 = 2.5G home	 = 2.5G roam
 = 3G home	 = 3G roam

  


**5 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:

 = line 1 active	 = line 2 active
 = line 1 call forward on	 = line 2 call forward on



**6** The Java™ indicator  shows when a Java application is active.

**7 Message Indicator** – Shows when you receive a new message. Indicators can include:


 = text message	 = voicemail message
 = voicemail & text message	


**8 Battery Level Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.


**9 Ring Style Indicator** – Shows the ring style setting.



 = loud ring	 = soft ring
---	---

 = vibrate

  = vibrate and ring

 = vibrate then ring

 = silent ring


**10 Location Indicator** – Shows when your phone can send location information  or not .




## text entry



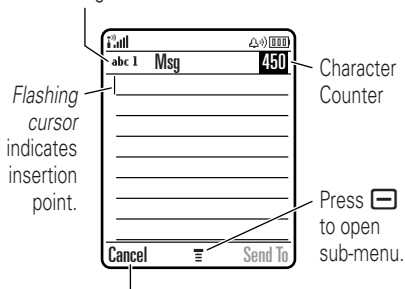 

Some features let you enter text.


For indicator descriptions, see following section.




Press the **Cancel** key to exit without changes.





Press  in a text entry screen to select an entry mode:

entry modes	
 or <b>1</b>	Your <b>Primary</b> text entry mode can be set to any iTAP®  or tap <b>1</b> mode.
 or <b>2</b>	Your <b>Secondary</b> text entry mode can be set to any iTAP  or tap <b>2</b> mode, or set to <b>None</b> if you don't want a secondary entry mode.
<b>123</b>	<b>Numeric</b> mode enters numbers only.
<b>@</b>	<b>Symbol</b> mode enters symbols only.





To set your primary and secondary text entry modes, press  > **Entry Setup** in a text entry screen and select **Primary Setup** or **Secondary Setup**.

**Tip:** WANT TO SHOUT YOUR MESSAGE?

Press  in a text entry screen to change text case to no capital letters (**abc**), next letter


capital (**Abc** with , , **1**↑, or **2**↑), or all capitals (**ABC** with , , **1**↑, or **2**↑).

## iTAP® mode

 Press  in a text entry screen to switch to iTAP mode. If you don't see  or , press  > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one keypress per letter. The iTAP software combines your keypresses into common words, and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

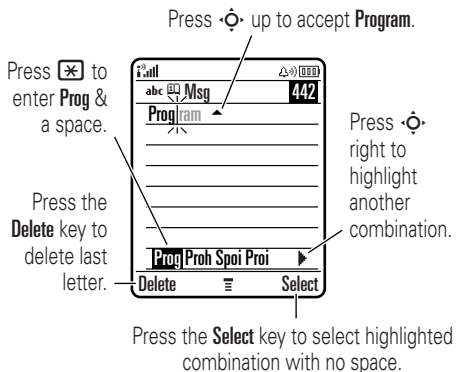

- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.


- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press **[1]** to enter punctuation or other characters.

## tap mode

 Press **[#]** in a text entry screen to switch to tap mode. If you don't see **1** or **2**, press **[=] > Entry Setup** to set tap mode as your primary or secondary text entry mode.


To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **[Z]** one time, your display shows:

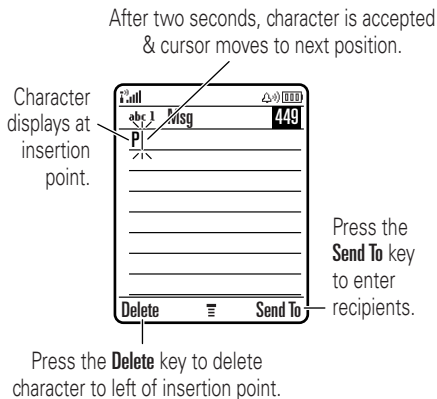


When you enter three or more characters in a row, your phone may guess the rest of the

 
word. For example, if you enter **Prog** your display might show:

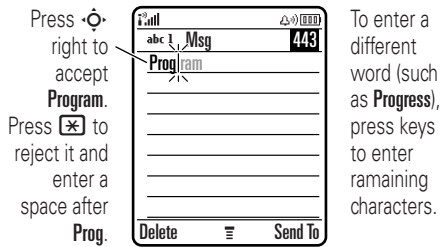



- The first character of every sentence is capitalized. If necessary, press **[Down Arrow]** to change the character to lowercase before the cursor moves to the next position.
- Press **[Down Arrow]** to move the flashing cursor to enter or edit message text.

- If you don't want to save your text or text edits, press  to exit without saving.
- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

## numeric mode

Press  in a text entry screen until you see **123**. Press the number keys to enter the numbers you want.

 
## symbol mode

Press  in a text entry screen until you see **@**. Press a keypad key to show its symbols at the bottom of the display. Scroll to the symbol you want, then press the center key .

## volume



Press the volume keys to:

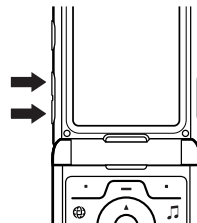- turn off an incoming call alert
- change the earpiece volume during a call
- change the ringer volume from the home screen



**Tip:** Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by repeatedly pressing the down volume key in the home screen. To set the ringer from the menu, see page 57.


## navigation key

 
Press the navigation key  up, down, left, or right to scroll and highlight menu items. When you highlight something, press the center key  to select it.



## smart key

The smart key gives you another way to do things. For example, when you scroll to a menu item, you can press the smart key to select it (instead of pressing the center

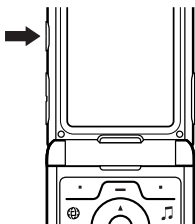

key ). To change what the smart key does in the home screen, see page 81.

## external display


When your phone is closed, the external display shows the time and indicates phone status, incoming calls, and other events. For a list of phone status indicators, see page 46.

## set phone ring style in external display

- 1 Press a volume key (see illustration on page 2) to see **Ring Styles**.
- 2 Press the smart key repeatedly, until the style you want appears.
- 3 Press a volume key to return to the home screen.

## return unanswered call in external display

Your phone keeps a record of your unanswered calls, and the external display shows **X Missed Calls**.

**Tip:** Since the microphone and earpiece are hidden when the phone is closed, use a headset or other handsfree device to make and receive calls. 

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

**1** Press the smart key (see illustration on page 2) to see the received calls list.

**2** Press the volume keys to scroll to an unanswered call.

- To call the number with a headset connected to your phone, press and hold the smart key.
- To exit without calling, press the smart key briefly.

## handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.

During a call, press the **Speaker** key to turn the handsfree speaker on or off. Your display shows **Spkrphone On** until you turn it off or end the call.





## Notes:


- Closing the flip doesn't end a call when the handsfree speaker is turned on.
- The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

## codes & passwords

Your phone's four-digit **unlock code** is originally set to **1234**. The six-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:

**Find it:** Press  >  **Settings** > **Security**  
> **New Passwords**

You can also change your **SIM PIN** codes or call barring password.

**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your six-digit security code instead.

**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the four-digit unlock code.

To **manually lock** your phone: Press  >  **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  >  **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

**Note:** You can make emergency calls on a locked phone (for more information, see page 65). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

# customize

---

## ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. The **Silent** profile silences your phone until you set another ring style. Here are the profiles you can choose:

 Loud

 Soft


 Vibrate


 Vibe & Ring

 Vibe then Ring

 Silent

The ring style profile indicator shows at the top of the home screen. To choose your profile:

**Find it:** Press  >  Settings > Ring Styles > Style > *style name*

**Shortcut:** When an option has a list of possible settings (like ring styles), press  left or right to select the setting.

**Tip:** You can quickly set your ringer to **Vibrate** or **Silent** by repeatedly pressing the down volume key in the home screen (see illustration on page 52).


## change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

**Note:** You can't use iTunes for alerts or ring tones on your phone.

**Note:** You can't set an alert for the **Silent** ring style profile.

**Find it:** Press  >  **Settings** > **Ring Styles** > *style name* **Detail**

- 1 Scroll to **Calls** (or **Line 1** or **Line 2** for dual line phones), then press the **Change** key to change it.
- 2 Scroll to the alert you want, then press the center key .
- 3 Press the **Back** key to save the alert setting.

## time & date

Your phone needs the time and date for the datebook.

To **synchronize** the time and date with the network: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate** > **On**.






To **manually** set the time and date, turn off **Autoupdate**, then: Press  >  **Settings** > **Initial Setup** > **Time and Date** > **Time and Date**.

## wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

**Note:** Your *theme* can set the wallpaper (see page 59).

**Find it:** Press  >  **Settings** > **Personalize** > **Wallpaper**

options	
<b>Picture</b>	Press  up or down to select a picture for your wallpaper image, or <b>None</b> for no wallpaper.
<b>Layout</b>	Select <b>Center</b> to center the image in the display, <b>Tile</b> to repeat the image across the display, or <b>Fit-to-screen</b> to stretch the image across the display.


## screen saver

Set a photo, picture, or animation as a screen saver image. The screen saver shows in the display when the flip is open and no activity is detected for a specified time.

**Note:** Your *theme* can set the screen saver (see next section).

**Tip:** This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

**Find it:** Press  >  **Settings** > **Personalize** > **Screen Saver**



options	
<b>Picture</b>	Press  up or down to select an image for your screen saver, or <b>None</b> for no screen saver.
<b>Delay</b>	Select the length of inactivity before the screen saver shows in the display.

## themes

A *phone theme* is a group of image and sound files that you can apply to your phone. Most themes include a wallpaper image, screen saver image, and






ring tone. Your phone may come with some themes, and you can download more.

To **apply** a theme: Press  >  **Multimedia** > **Themes** > *theme*.

To **download** a theme, see page 90.

**Caution:** You can delete the themes stored on your phone. After you delete a theme, you can't recover it.

To **delete** a theme: Press  >  **Multimedia** > **Themes**, scroll to the theme, and press  > **Delete** or **Delete All**.

## display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  >  **Settings** > **Personalize** > **Skin**.

To set your display **brightness**: Press  >  **Settings** > **Initial Setup** > **Brightness**.

To save battery life, the **backlight** can turn off when you're not using your phone. The backlight turns back on when you press any key. To set how long your phone waits before the backlight turns off:

Press  >  **Settings** > **Initial Setup** > **Backlight**.



**Note:** To turn the backlight on or off for Java™ applications, press  >  **Settings** > **Java Settings** > **App Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you press any key. To set how long your phone waits before the display turns off:

Press  >  **Settings** > **Initial Setup** > **Display Timeout**.

# answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

**Find it:** Press  >  **Settings** > **In-Call Setup**  
> **Answer Options**

options	
<b>Multi-Key</b>	Answer by pressing any key.
<b>Open to Answer</b>	Answer by opening the flip.

# calls

---


To make and answer calls, see page 16.

## turn off a call alert

You can press the volume keys to turn off a call alert before answering the call.




## recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.

**Shortcut:** Press  from the home screen to see the dialed calls list.

**Shortcut:** In a numbered list (like the dialed calls and received calls lists), press a number key to highlight a listing.


**Find it:** Press  >  **Recent Calls**


- 1 Scroll to **Received Calls** or **Dialed Calls**, then press the center key .
- 2 Scroll to a call. A ✓ next to a call means the call connected.
  - To call the number, press .
  - To see call details (like time and date), press the **View** key.
  - To see the **Last Calls Menu**, press . This menu can include:





options	
<b>Delete</b>	Delete one entry in the list.
<b>Delete All</b>	Delete all entries in the list.
<b>Hide ID</b>	Hide your caller ID for the next call.
<b>Show ID</b>	Show your caller ID for the next call.
<b>Send Message</b>	Open a new text message with the number in the <b>To</b> field.
<b>Add Digits</b>	Add digits after the number.
<b>Attach Number</b>	Attach a number from the phonebook or recent calls lists.

## redial


- 1 Press  from the home screen to see the dialed calls list.

- 2 Scroll to the entry you want to call, then press .

If you hear a **busy signal** and you see **Call Failed, Number Busy**, press  or the  **Retry** key to redial the number. When the call goes through, your phone rings or vibrates one time, shows **Redial Successful**, and connects the call.

## return a call



Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Scroll to the call you want to return, then press .

## notepad

The last set of digits entered on the keypad are stored in *notepad* memory. This can be the last phone number you called, or a number that you “jot down” during a call for later use. To see the number stored in the notepad:

**Find it:** Press  >  **Recent Calls** > **Notepad**


- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press .

## hold or mute a call

To put all active calls on hold, press  > **Hold**.

**64** calls

To put all active calls on mute, press


 > **Mute**.

## call waiting



When you're on a call, you'll hear an alert if you receive a second call.



Press  to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press  > **End Call On Hold**.

To turn the call waiting feature on or off:

**Find it:** Press  >  **Settings** > **In-Call Setup** > **Call Waiting**

## caller ID

*Calling line identification* (caller ID) shows the phone number for an incoming call in your external and internal displays.

Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (for more information, see page 73).

To show or hide **your phone number** for the next outgoing call, enter digits in the display, then:


**Find it:** Press  > **Hide ID/Show ID**





## emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.



## international calls




If your phone service includes international dialing, press and hold   to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.

## 1-touch dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone's memory phonebook, your SIM card's phonebook, or your fixed dial list:

**Find it:** Press  >  **Settings** > **Initial Setup** > **1 Touch Dial** > **Phone, SIM, or Fixed Dial**

To add a new phonebook entry, see page 17.  
To edit the speed dial number for a phonebook entry, press  >  **Phonebook**, scroll to the entry, then press  > **Edit**.

## voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number.

**Note:** Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**.

To **check** voicemail messages:

**Find it:** Press  >  **Messages** > **Voicemail**






Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider

**Note:** You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

# other features

---

## advanced calling

features	
<b>conference call</b>	
During a call:	
Dial next number, press  , press the <b>Link</b> key.	
<b>transfer a call</b>	
During a call:	
 > <b>Transfer</b> , dial transfer number, press  .	

## features

### attach a phone number





Dial an area code or prefix for a phonebook number, then:

 > **Attach Number**

### speed dial


















Speed dial a phonebook entry:

Enter speed dial number, press , press .

To add a phonebook entry, see page 17.

**Tip:** If you forget Aunt Mildred's speed dial number, press  >  **Phonebook**, scroll to her entry, and press the **View** key.

features	
<p><b>call forwarding</b></p> <p>Set up or cancel call forwarding:</p> <p> &gt;  <b>Settings</b> &gt; <b>Call Forward</b></p>	
<p><b>call barring</b></p> <p>Restrict outgoing or incoming calls:</p> <p> &gt;  <b>Settings</b> &gt; <b>Security</b> &gt; <b>Call Barring</b></p>	
<p><b>restrict calls</b></p> <p>Restrict outgoing or incoming calls:</p> <p> &gt;  <b>Settings</b> &gt; <b>Security</b> &gt; <b>Restrict Calls</b></p>	
<p><b>TTY calls</b></p> <p>Set up your phone for use with an optional TTY device:</p> <p> &gt;  <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>TTY Setup</b></p>	

features	
<p><b>change phone line</b></p> <p>If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number.</p> <p> &gt;  <b>Settings</b> &gt; <b>Phone Status</b> &gt; <b>Active Line</b></p> <p>The active line indicator shows the active phone line (see illustration on page 47).</p>	

## features



### fixed dial



When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.

**Note:** You must enter your SIM PIN2 code to turn fixed dialing on or off. If you forget your PIN2 code, contact your service provider.

Turn fixed dialing on or off:

 >  **Settings** > **Security** > **Fixed Dial**

Use the fixed dial list:

 >  **Tools** > **Dialing Services** > **Fixed Dial**

### service dial



Dial service phone numbers:

 >  **Tools** > **Dialing Services** > **Service Dial**

## features

### quick dial



Dial preprogrammed phone numbers stored by your service provider:



 >  **Tools** > **Dialing Services** > **Quick Dial**

Edit the quick dial list:

 >  **Settings** > **Personalize** > **Quick Dial**

### DTMF tones


Activate DTMF tones:

 >  **Settings** > **Initial Setup** > **DTMF**

Send DTMF tones during a call:

Press number keys.

Send stored numbers as DTMF tones during a call:

Scroll to a number in the phonebook or recent calls lists, then press  > **Send Tones**.



# phonebook

## features

### add new entry

**Note:** You can store a phonebook entry in phone memory or on your SIM card. You can't set a picture ID or voice name for entries stored on the SIM card.

 >  **Phonebook**

 > **New** > **Phone Number** or **Email Address**




**Shortcut:** Enter a phone number in the home screen, then press the **Store** key to create an entry for that number.

**Tip:** One phone isn't enough for some people. When creating a phonebook entry, select **MORE** to store another number for the same **Name**.

## features

### dial number

Call a number stored in the phonebook:

 >  **Phonebook**, scroll to the phonebook entry, press 

**Shortcut:** In the phonebook, press a keypad key to jump to entries that begin with the key's letters, or to search for the entry by name (see following feature).

## features

### search for entry

To set the phonebook search method:

 >  **Phonebook**

 > **Setup** > **Search Method** > **Jump To** or **Find**

To search for a phonebook entry, press the keypad key that contains the first letter of the entry. **Jump To** method immediately jumps to entries that begin with the key's letters. **Find** method prompts you to enter the name or speed number for the entry, depending on how the phonebook list is sorted.

### edit or delete an entry

Press  >  **Phonebook**, scroll to the phonebook entry, press . You can select **Edit**, **Delete**, or other options.

## features

### record a voice name

When creating a phonebook entry, scroll to **Voice Name** and press the **Record** key. Press and release the voice key and say the entry's name (within two seconds). When prompted, press and release the voice key and repeat the name.

**Note:** This option is available only when the phone language doesn't support voice commands (for more information about voice commands, see page 30).

**Note:** The **Voice Name** option isn't available for entries stored on the SIM card.

## features

### voice dial number

Voice dial a number stored in the phonebook:

Press and release the voice key, and say the entry's voice name (within two seconds).

**Note:** This option is available only when the phone language doesn't support voice commands. To use this feature, you must record a voice name for the phonebook entry (see preceding feature).

## features

### set ringer ID for entry

Assign a distinctive ring alert (ringer ID) to an entry:

 >  **Phonebook** > *entry*

 > **Edit** > **Ringer ID** > *ringer name*

**Note:** The **Ringer ID** option isn't available for entries stored on the SIM card.

To activate ringer IDs:

 >  **Settings** > **Ring Styles** > *style Detail*  
> **Ringer IDs**

## features

### set picture ID for entry

Assign a photo or picture to show in the display when you receive a call from an entry:

 >  Phonebook > entry

 > Edit > Picture > *picture name*

**Note:** The **Picture** option isn't available for entries stored on the SIM card.

### set picture ID view



Show entries as a text list, or with picture caller ID photos:

 >  Phonebook

 > Setup > View by > List or Picture

## features


### set category for entry

a>  Phonebook > entry  > Edit > Category > *category name*

**Note:** The **Category** option isn't available for entries stored on the SIM card.

### set category view

 >  Phonebook

 > Categories > *category view*

You can show **All** entries, entries in a predefined category (**Business**, **Personal**, **General**, **VIPs**), or entries in a category you create.

## features

### set category ringer ID

Set a distinctive ring alert (ringer ID) to sound when you receive calls from entries in a specific category:

Press  >  **Phonebook**,  
press  > **Categories**, scroll to the category,  
press  > **Edit** > **Ringer ID**

**Note:** The **Category** option isn't available for entries stored on the SIM card.




To activate ringer IDs:


 >  **Settings** > **Ring Styles** > *style* **Detail**  
> **Ringer IDs**

## features

### set primary number or address

Set the primary number for an entry with multiple numbers:

 >  **Phonebook**, scroll to the entry, press  
 > **Set Primary** > *number* or *address*

**Tip:** In **Primary** number view mode, you can still peek at other numbers stored for the same name. Scroll to the name and press  left or right to see the other numbers.

### create group mailing list

 >  **Phonebook**  
 > **New** > **Mailing List**

## features

### sort phonebook list

Set the order in which entries are listed:

 >  **Phonebook**


 > **Setup** > **Sort by** > *sort order*

You can sort the phonebook list by **Name**, **Speed No.**, or **Email**. When sorting by name, you can see **All** numbers or just the **Primary** number for each name.

### copy phonebook entry

Copy an entry from the phone to the SIM card, or from the SIM card to the phone:




 >  **Phonebook**, scroll to the entry, press

 > **Copy** > **Entries** > **To**

## features

### copy multiple entries

Copy multiple phonebook entries between the phone and SIM card:

 >  **Phonebook**, scroll to one entry, press  > **Copy** > **Entries**, press the **Change** key, scroll to another entry, press the **Add** key, repeat as necessary, press the **Done** key, > **To**.

### send phonebook entry to another device

Send a phonebook entry to another phone or computer that supports Bluetooth™ connections:




Press  >  **Phonebook**, scroll to the entry, press  > **Share Phonebook Entry**

For more information, see page 41.

## features

### print phonebook entry

Send a phonebook entry to a printer that supports Bluetooth™ connections:

 >  **Phonebook**, scroll to the entry, press  > **Print**.

You cannot print a **Mailing List**. For more information, see page 43.

## messages

For basic multimedia messaging features, see page 38.

## features

### send text message

 >  **Messages** > **Create Message**  
> **New Text Msg**



## features

### send email

 >  **Messages** > **Create Message**  
> **New Email**



### send quick note

Send a short, prewritten quick note:

 >  **Messages** > **Quick Notes**

Create a new quick note:

 >  **Messages** > **Quick Notes**  
> **[New Quick Note]**



### use a multimedia template

Open a multimedia template with preloaded media:

 >  **Messages** > **Media Templates**



## features

### read new message or email









When your display shows **New Message**, press the **Read** key to read the message you received.

### read old messages




 >  **Messages** > **Message Inbox**

Icons next to each message show if it is **unread** , **read** , **urgent** , **locked** , or has an **attachment** . Press  to perform various operations on a message.

### read old email



 >  **Messages** > **Email Msgs**


Press  to perform various operations on a message.

## features

### store message objects



Go to a multimedia message page, or scroll to an object in a letter, then:

 > **Store**

### browser messages



Read messages received by your micro-browser:

 >  **Messages** > **Browser Msgs**

### info services



Read subscription-based information services messages:

 >  **Messages** > **Info Services**



## features

### print message



Send a message to a printer that supports Bluetooth™ connections:

 >  **Messages**

Open your **Inbox**, **Email Msgs**, **Browser Msgs**, or **Info Services**, scroll to the message, and press  > **Print**.

You cannot print **Quick Notes** or **MMS Templates**. For more information, see page 40.

## features



### set up email accounts



You can set up and use multiple email accounts on your phone:

 >  **Messages**

 > **Email Msg Setup** > **Account Settings**  
> **[New Entry]**

**Note:** Your display shows a folder for each email account under  >  **Messages** > **Email Msgs**.

## personalize

## features

### language



Set menu language:

 >  **Settings** > **Initial Setup** > **Language**

## features

### scroll

Set the highlight bar to stop or wrap around in menu lists:

 >  Settings > Initial Setup > Scroll

### ringer IDs

Activate ringer IDs assigned to phonebook entries and categories:

 >  Settings > Ring Styles > *style* Detail > Ringer IDs

### ring volume

 >  Settings > Ring Styles > *style* Detail > Ring Volume

**Shortcut:** When an option has a list of possible numeric values (like ring volume), press a number key to set the value.

## features

### keypad volume

 >  Settings > Ring Styles > *style* Detail > Key Volume

### reminders

Set reminder alerts for messages that you receive:

 >  Settings > Ring Styles > *style* Detail > Reminders

### clock view

Show an analog or digital clock in the home screen:

 >  Settings > Personalize > Home Screen > Clock

## features

### menu view

Show the main menu as graphic icons or as a text-based list:

 >  **Settings** > **Personalize** > **Main Menu**  
> **View**



### main menu

Reorder your phone's main menu:

 >  **Settings** > **Personalize** > **Main Menu**  
> **Reorder**

### show/hide feature icons

Show or hide feature icons in the home screen:

 >  **Settings** > **Personalize** > **Home Screen**  
> **Home Keys** > **Icons** > **Show** or **Hide**

## features


### change feature icons & home keys

Change feature icons, soft key labels, and smart key function in the home screen:


 >  **Settings** > **Personalize** > **Home Screen**  
> **Home Keys**

### shortcuts

Create a shortcut to a menu item:

Scroll to the menu item, then press and hold .

Use a shortcut:

Press , then press the shortcut number.

### master reset

Reset all options **except** unlock code, security code, and lifetime timer:

 >  **Settings** > **Initial Setup** > **Master Reset**

## features


### master clear

**Caution:** Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

Clear all settings and entries you made **except** SIM card information, erase downloaded pictures and sound files, and reset all options **except** unlock code, security code, and lifetime timer:

 >  Settings > Initial Setup > Master Clear

## call times & costs

**Network connection time** is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.**

## features

### call times

Show call timers:

 >  Recent Calls > Call Times



## features

### in-call timer



Show time or cost information during a call:

> **Settings** > **In-Call Setup** > **In-Call Timer**

## handsfree

**Note:** The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving. Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

## features

### speakerphone



Activate a connected external speakerphone during a call:

Press the **Speaker** key (if available), or  
 > **Spkrphone On**.

### auto answer (car kit or headset)



Automatically answer calls when connected to a car kit or headset:

> **Settings** > **Car Settings** or **Headset**  
> **Auto Answer**










### voice dial (headset)








Enable voice dial with headset send/end key:

> **Settings** > **Headset** > **Voice Dial**

## data & fax calls

features
<b>auto handsfree</b> (car kit)  Automatically route calls to a car kit when connected:
 >  <b>Settings</b> > <b>Car Settings</b> > <b>Auto Handsfree</b>
<b>power-off delay</b> (car kit)  Set the phone to stay on for a specified time after the ignition is switched off:
 >  <b>Settings</b> > <b>Car Settings</b> > <b>Power-Off Delay</b>
<b>charger time</b> (car kit)  Charge the phone for a specified time after the ignition is switched off:
 >  <b>Settings</b> > <b>Car Settings</b> > <b>Charger Time</b>

features
<b>send data or fax</b>  Connect your phone to the device, then place the call through the device application.
<b>receive data or fax</b>  Connect your phone to the device, then answer the call through the device application.
<b>talk then fax</b>  Connect your phone to the device, enter fax number, press  > <b>Talk then Fax</b> , then press  to make the call.

## features

### use sync



You can call an Internet server and synchronize your phonebook and datebook entries with the server.

To set up an Internet sync partner, press

> **Settings** > **Connection** > **Sync** > **[New Entry]**. Enter the server details, including the server **URL** (you can omit `http://`) and **Data Paths** (the folders below the URL where your data is stored).

To synchronize files with an Internet sync partner, press > **Settings** > **Connection** > **Sync** > *sync partner*.

## network

### features

#### network settings



See network information and adjust network settings:

> **Settings** > **Network**

#### software update



Your service provider can send updated phone software over the air to your phone. When your phone receives a software update, you can choose to install it immediately, or defer installation until later. To install a deferred software update:

> **Settings** > **Phone Status** > **Software Update** > **Install Now**

# personal organizer


## features

### set alarm

 >  **Settings** >  **Tools** > **Alarm Clock**






### turn off alarm

When the display shows an alarm:

To turn off the alarm, press the **Disable** key or .

To set an eight minute delay, press the **Snooze** key.


### add new datebook event

 >  **Settings** >  **Tools** > **Datebook**, scroll to the day, press the center key , press  > **New**.

## features

### see datebook event

See or edit event details:

 >  **Settings** >  **Tools** > **Datebook**, scroll to the day, press the center key , press the **View** key.

### datebook event reminder

When the display shows an event reminder:

To see reminder details, press the **View** key.

To close the reminder, press the **Exit** key.



## features

### send datebook event to another device




Send a datebook event to another phone or computer that supports Bluetooth™ connections:


 >  **Settings** >  **Tools** > **Datebook**, scroll to the day, press the center key , scroll to the event, press  > **Send**

For more information, see page 40.

### print datebook month, week, or day

Send a datebook month, week, or day to a printer that supports Bluetooth™ connections:

 >  **Settings** >  **Tools** > **Datebook**

Go to the month, week, or day view and press  > **Print**.

For more information, see page 40.

## features




### create voice record

Press and hold the voice key, speak into the phone, release voice key.

**Note:** Recording of phone calls is subject to varying State and Federal laws regarding privacy and recording of phone conversations. Always obey the laws and regulations on the use of this feature.

### play voice record

Play back a voice record:




 >  **Settings** >  **Tools** > **Voice Records**  
> *voice record*

### calculator

 >  **Settings** >  **Tools** > **Calculator**

## features

### currency converter

 >  Settings >  Tools > Calculator

 > Exchange Rate

Enter exchange rate, press the **OK** key, enter amount, and select **\$** at the bottom of the display.

## features

### lock feature

 >  Settings > Security > Lock Application

### manage certificates



Enable or disable Internet access certificates stored on your phone:

 >  Settings > Security > Certificate Mgmt

Certificates are used to verify the identity and security of Web sites when you download files or share information.



## security

## features







### SIM PIN













**Caution:** If you enter an incorrect PIN code three times in a row, your SIM card is disabled and your display shows **SIM Blocked**.

Lock or unlock the SIM card:

 >  Settings > Security > SIM PIN

# fun & games

features
<b>manage pictures</b>  >  <b>Multimedia</b> > <b>Pictures</b> Press  to perform various operations (such as <b>Delete</b> , <b>Rename</b> , or <b>Move</b> ) on a photo, picture, or animation.
<b>manage video clips</b>  >  <b>Multimedia</b> > <b>Videos</b> Press  to perform various operations (such as <b>Delete</b> , <b>Rename</b> , or <b>Move</b> ) on a video clip.


features
<b>manage sounds</b>  Manage ring tones and music that you have downloaded:  >  <b>Multimedia</b> > <b>Sounds</b> Press  to perform various operations (such as <b>Delete</b> , <b>Rename</b> , or <b>Move</b> ) on a sound file.
<b>play music</b>   >  <b>Multimedia</b> > <b>Sounds</b> > <i>song name</i>
<b>create playlist</b>  Create a playlist of songs to play:  >  <b>Multimedia</b> > <b>Sounds</b> > <b>New Playlist</b>
<b>start micro-browser</b>  Press  .

## features

### download objects from web page





Download a picture, sound, or phone theme from a Web page:

Scroll to the file, press the center key , press the **Store** key.

### download game or application



Download a Java™ game or application with the micro-browser:

Press , scroll to the application, press the center key , press the **Download** key.

### start game or application



Start a Java™ game or application:



Press  >  **Games & Apps**, scroll to the game or application, press the center key .

## features

### create ring tones



Create ring tones that you can use with your phone:

 >  **Multimedia** > **Sounds** > **[New iMelody]**

# service and repairs

---

If you have questions or need assistance, we're here to help.

Go to

[www.motorola.com/consumer/support](http://www.motorola.com/consumer/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

# Specific Absorption Rate Data

---

## **This model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.26 W/kg, and when worn on the body, as described in this user guide, is 1.01 W/kg. The SAR value for this product in its data transmission mode (body-worn use) is 1.24 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR

value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.







***MOTOROLA***

## Important Safety and Legal Information

# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.\***

## Exposure To Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

---

\* The information provided in this document supersedes the general safety information in user's guides published prior to September 1, 2005.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

### External Antenna Care

If your mobile device has an external antenna, use only a Motorola-supplied or approved replacement antenna. Use of unauthorized antennas, modifications, or attachments could damage the mobile device and/or may result in your device not

complying with local regulatory requirements in your country.

DO NOT hold the external antenna when the mobile device is IN USE. Holding the external antenna affects call quality and may cause the mobile device to operate at a higher power level than needed.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

When using any data feature of the mobile device, with or without an accessory cable, position the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our website at [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so. These locations include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

### Pacemakers

If you have a pacemaker, consult your physician before using this device.

Persons with pacemakers should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from your

pacemaker when the mobile device is turned ON.

- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

### Hearing Aids

Some digital mobile devices may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.

### Other Medical Devices

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from RF energy.

## Driving Precautions

Check the laws and regulations on the use of mobile devices in the area where you drive. Always obey them.

When using your mobile device while driving, please:

- Give full attention to driving and to the road. Using a mobile device may be distracting. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving practices can be found in the "Smart Practices While Driving" section at the end of this guide and/or at the Motorola website:  
[www.motorola.com/callsmart](http://www.motorola.com/callsmart).

## Operational Warnings

Obey all posted signs when using mobile devices in public areas, such as health care facilities or blasting areas.

### Automobile Air Bags

Do not place a mobile device in the air bag deployment area.

### Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often but not always posted, and can include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain, dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

## Damaged Products





 
If your mobile device or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center. Do not attempt to dry it with an external heat source, such as a microwave oven.

## Batteries and Chargers

If jewelry, keys, beaded chains, or other conductive materials touch exposed battery terminals, this could complete an electrical circuit (short circuit), become very hot, and could cause damage or injury. Be careful when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

**Caution:** To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Your mobile device contains an internal lithium ion battery.

## Choking Hazards

Your mobile device or its accessories may include detachable parts, which may present a choking

hazard to small children. Keep your mobile device and its accessories away from small children.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video

games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are very tired.

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

# Motorola Limited Warranty for the United States and Canada

---

## What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a

consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## Products and Accessories

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.



<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

#### Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product

resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

### **Use of Non-Motorola Products and**

**Accessories.** Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or

that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

## Software

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.

## Exclusions

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media.**

Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

## What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products,

## How to Obtain Warranty Service or Other Information

<b>USA</b>	<b>Phones</b> 1-800-331-6456 <b>Pagers</b> 1-800-548-9954 <b>Two-Way Radios and Messaging Devices</b> 1-800-353-2729
<b>Canada</b>	<b>All Products</b> 1-800-461-4575
<b>TTY</b>	1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS

LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights,**

**and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

# Hearing Aid Compatibility with Mobile Phones

---

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

# Information from the World Health Organization

---

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF exposure by limiting the length of calls or by using handsfree

devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information:

<http://www.who.int./peh-emf>

## Product Registration

---

Online Product Registration:

<http://www.motorola.com/warranty>

Product registration is an important step toward enjoying your new Motorola product. Registering helps us facilitate warranty service, and permits us to contact you should your product require an update or

other service. Registration is for U.S. residents only and is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.



Thank you for choosing a Motorola product.

## Export Law Assurances

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or

re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

## Wireless: The New Recyclable

---

Your wireless phone can be recycled. Recycling your wireless phone reduces the amount of waste disposed in landfills and allows recycled materials to be incorporated into new products.

The Cellular Telecommunications Industry Association (CTIA) and its members encourage

consumers to recycle their phones and have taken steps to promote the collection and environmentally sound recycling of end-of-life wireless devices.

As a wireless phone user, you have an important role in ensuring that this phone is recycled properly. When it comes time to give this phone up or trade it

in for a new one, please remember that the phone, the charger, and many of its accessories can be recycled. It's easy. To learn more about CTIA's Recycling Program for Used Wireless Devices, please visit us at <http://promo.motorola.com/recycle/phones/whyrecycle.html>

# Smart Practices While Driving

---

## Drive Safe, Call Smart <sup>SM</sup>

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas. Contact [www.motorola.com/callsmart](http://www.motorola.com/callsmart) for more information.**

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features

help you to place your call without taking your attention off the road.

- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original™ handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain,

sleet, snow, ice, and even heavy traffic can be hazardous.

- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.
- **Use your mobile device to call for help.** Dial 911 or other local emergency number in

the case of fire, traffic accident, or medical emergencies.\*

- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

---

\* Wherever wireless phone service is available.

# index

---

- A**
    - accessories 12, 40, 83
    - accessory connector port 2
    - active line indicator 47
    - active line, change 69
    - airplane mode 19
    - alarm clock 86
    - alert
      - set 52, 53, 57
      - turn off 52, 62
    - animation 89
    - answer a call 17, 61
    - attach a number 63, 68
  - B**
    - backlight 60
  - battery 15
  - battery charge indicator light 2, 15
  - battery indicator 47
  - battery life, extend 13, 40, 59, 60
  - Bluetooth indicator light 2, 41
  - Bluetooth wireless 40, 76, 77, 79, 87
  - bonding. See Bluetooth wireless
  - brightness 60
  - browser messages 78
- C**
    - calculator 87
  - call
    - answer 17, 61
    - end 16, 17
    - make 16, 18, 71
  - call barring 55, 69
  - call forward indicator 47
  - call forwarding 69
  - call timers 82, 83
  - call waiting 64
  - caller ID 33, 63, 65, 74
  - camera 2, 32, 34
  - car kit 83
  - center key 1, 53
  - certificate management 88
  - clock 58, 80
  - codes 55
  - conference call 68

contrast 60  
copyrighted files 30  
customer support 91

## **D**

data call 84  
data indicator 46  
date 58  
datebook  
    add event 86  
    print 87  
    send event 87  
    synchronize 85  
dial a phone number 16, 18,  
70, 71  
dialed calls 62  
digit dial (voice) 30  
display 3, 45, 60, 80  
download media objects 78,  
90

drafts folder 39  
DTMF tones 70

## **E**

earpiece volume 52  
email 77, 78, 79  
email address 17, 71  
emergency number 65  
end a call 16, 17  
end key 1, 16, 17  
Enter Unlock Code message  
55  
export regulations 111  
external display 2, 53

## **F**

fax call 84  
feature icons 81  
fixed dial 70  
flip 17, 61

forward calls 69

## **G**

GPRS indicator 46  
group mailing list 75

## **H**

handsfree speaker 54  
headset 54, 83  
hearing aid compatibility 108  
hold a call 64  
home screen 3, 45, 80, 81

## **I**

in-call indicator 47  
Incoming Call message 65  
information services 78  
international access code 66  
iTAP text entry mode 49  
iTunes 19

## J

Java indicator 47

## K

keypad 61, 80

## L

language 79

licenses 30

linking. See Bluetooth wireless

location indicator 48

lock

- application 88

- phone 55

- SIM card 88

Low Battery message 47

## M

make a call 16, 18, 71

master clear 82

master reset 81

memory card 26

menu 3, 80, 81

menu icons 45, 81

menu indicator 45

menu key 1, 12, 45

message

- reading 39, 78

- sending 38, 77

message indicator 39, 47

message reminders 80

micro-browser 78

Missed Calls message 63

MMS, defined 38

multimedia message 38, 77

music 19, 89

mute a call 64

## N

name dial 30

navigation key 1, 12, 53

network settings 85

notepad 64

number. See phone number

numeric entry mode 52

## O

1-touch dial 66

open to answer 61

optional accessory 12

optional feature 12

## P

pairing. See Bluetooth wireless

passwords. See codes

personalize 79

phone number

- storing 17, 71
- your number 18, 69
- phonebook
  - add entry 17, 71
  - dial entry 18, 66, 68, 71
  - picture ID 33, 65
  - print 77
  - search 18
  - send entry 76
  - synchronize 85
- photo 32, 89
- picture 89
- picture ID 33, 65, 74
- PIN code 16, 55, 88
- PIN2 code 55, 70
- power key 1, 16
- printing 43, 77, 79, 87
- product registration 110

## **Q**

- quick dial 70

**118** index

- quick note 38, 77

## **R**

- received calls 62
- recent calls 62
- recycling 111
- redial 63
- reminders 80
- repairs 91
- restrict calls 69
- return a call 54, 63
- ring style 52, 53, 57
- ring style indicator 47
- ring tone 89
- ringer ID 65, 73, 75, 80
- ringer volume 52, 80
- roam indicator 47

## **S**

- safety information 96

- safety tips 113
- screen saver 59
- security code 55
- send key 1, 16, 17
- service dial 70
- shortcuts 81
- signal strength indicator 46
- silent mode 52, 53, 57
- SIM Blocked message 16, 88
- SIM card 13, 16, 55, 70, 88
- skin 60
- smart key 1, 2, 53, 54, 81
- soft keys 1, 45, 81
- software update 85
- speakerphone 83
- speed dial 66, 68
- stereo headset 2
- store phone numbers 17, 71
- store your phone number 18
- support 91



symbol entry mode 52  
sync 85

## T

tap text entry mode 50  
technical support 91  
telephone number. See  
phone number  
text entry 48  
text messaging 77  
theme 59  
time 58  
timers 82, 83  
transfer a call 68  
TTY device 69  
turn on/off 16

## U

unlock  
application 88

phone 16, 55  
SIM card 88  
unlock code 55

## V

vibrate mode 52, 53, 57  
video clip 34, 89  
voice commands 30  
voice dial 73, 83  
voice key 1  
voice name 72  
voice recognition 30  
voice record 87  
voicemail 66  
voicemail message indicator  
47, 66  
volume 52, 80  
volume keys 1, 2, 52

## W

wallpaper 58  
warranty 102  
WHO information 110

## Y

your phone number 18  
  
U.S. patent Re. 34,976



