Remote Condition Monitoring Customer Portal



ര

Landing page – myabb RCM



Indices show overview of your whole RCM drives installed base over 3 different dimensions. Overview updates automatically on frequent basis. Click here to access your RCM product list



Navigate from overview view to drive list view



Click any sector in indexes to access subset drives that all share the same condition level. Clicking yellow environment index area leads user to installation list that show details of all the drives that share same condition. In this example common criteria is; ambient temperature=tolerable.

Installations	View type:	Installations list ~							
Location filter: V Chang	le								
\backslash									
Search for installation Pr	oduct category	Product	Warranty and service	Condition					
+	+	+	+		+				
Selected filters Environment i	index - Tolerable 🗙	Clear filters Set initial	filters	ilters					
Installation Name 🗢		Customer Tag 🗢	Last Service	Next Service	Warranty Start ¢	Warranty Expiration	Lifecycle Status 💠	Serial Number 💠	Condition \$
AC \$800-07		XYZ	15/02/2016		24/11/2003	24/11/2005 EXPIRED	Active	123456789	• OK
AC\$800-07-3490-7		XYZ	08/07/2008					123456789	• OK
				← 1	\rightarrow				



RCM - Installation list

RCM products distinguished with condition light. Click on the condition text to filter up products with RCM connection.

earch for installation	Product category	Product	Warranty and service	Condition						
+	+	+	+	+					\backslash	\backslash
stallation Name 8		Cush	amar Tag 0	Last Service 8	Next Service 0	Warraniy Start 0	Warranty Expiration 8	Lifecycle Status 0	Serial Number 2	Condition #
CH550-01 - wall-mou	nted drive for HVAC	xyz						Active	123456789	• OK
C \$800-01		xyz	:			2005-05-23	2007-05-23 EXPIRED	Active	123456789	• Alarm
C 5800-01		xyz	:			2005-05-23	2007-05-23 EXPIRED	Active	123456789	• OK
C 5800-01		xyz				2005-05-23	2007-05-23 EXPIRED	Active	123456789	Alarm
C 5800-01		xyz		2008-06-25		2005-05-23	2007-05-23 EXPIRED	Active	123456789	Alarm
C 5800-07		xyz	1	2015-11-23		2003-11-24	2005-11-24 EXPIRED	Active	1234567 <mark>89</mark>	• OK
C 5800-07		xy	z			2005-05-01	2007-08-01 EXPIRED	Active	123456789	• Alarm
C 5800-104		xyz						Active	123456789	· Warning
C 5800-104		xyz	:					Active	123456789	• OK
C \$800-104		xyz						Active	123456789	• OK

Click any product to proceed

Color explanation. Green = OK , Yellow= drive in alert mode, Red = drive in fault mode



Live KPI – dashboard view

Dashboard shows latest drive status from KPI perspective. Each trend show min, max, average over latest up to 5 days with 5 minute plotting interval.

myABB business portal Dashboard > My installations > Installation Details Stress level (Good*) Reliability (Tolerable*) 0.2Nm Condition indexes show < > < 0.1Nm Environment (Poor*) 0.0Nm -0.1Nm Availability 11:30 11:00 11:30 11:00 Zoom can be used to widen & Time frame: last 30 days, updated once a day min avg max min 🔜 avg 🔜 max narrowing the time frame Speed Control Board Temperature Current 26/05/2016 26/05/2016 26/05/2016 2,000.0rpm 52.5C 1.000.0rpm 52.0C ۲ < > < 0.0rpm 51.5C -1,000.0rpm 51.0C -2,000.0rpm 50.5C 11:00 11:30 11:00 11:30 11:00 11:30 min 🔜 avg 🔜 max min avg max min avg max Energy Consumption 28/05/2018 1,598.0kWh < 1,597.0kWh 1,596.0kWh 1,595.0kWh 06:00 avg Recommended Service History Spa re Parts Related Documents Service Agreements Available Trainings Remote Condition Services Monitoring + + + RCM report Email Subscription Other RCM features (reports, email alerts) can be accessed here

> Use left and right side arrows to navigate trend backwards or forwards.

installation status over 4 Dimensions. Hover the mouse over the index to see text explanation appear.

Index color options are green, yellow and red. Index status updates automatically.



Cooling fan wear indicator for ACS880







Live KPI – Details View

Choose time parameters. System uses default time zone fetched from PC Operating System. If unavailable, system uses UTC by default.

Hover over to see exact datapoint info





Live KPI – Trend Comparison mode



List of available trends for comparison is populated by the web service



Live KPI – comparison mode



Activate / disactivate trends as per required.



RCM Report history

Generate custom report

Recommended Services		Service History	Spare Parts	Related Documents	Service Agreements	Available Trainings	Remote Condition Monitoring				
	+	+	+	+	+	+	-				
RCM report	Email	Subscription							V		
									Custom report		
Report Name \diamondsuit Report Creator \diamondsuit Date \diamondsuit											
🕁 ABB GISL	-Z14237(13/05/2016	EN								
🕁 ABB GISL	-Z142370	0008_(2015-02-03_01-0	0-00)_(2015-02-12_01-0	00-00)	jarkko	.pukkila@fi.abb.com		05/05/2016	EN		
🛃 ABB GISL	-Z142370	0008_(2015-02-03_01-0	0-00)_(2015-02-12_01-0	00-00)	jarkko	.pukkila@fi.abb.com		05/05/2016	EN		
🛃 ABB GISL	-Z14237(0008_(2015-02-01_01-0	0-00)_(2015-02-10_01-0	05/05/2016	EN						
ABB GISL-Z142370008_(2014-12-31_22-00-00)_(2015-01-30_22-30-00) jarkko.pukkila@fi.abb.com 05/05/2016											
🛃 ABB GISL	-Z14237(0008_(2016-04-30_22-0	0-00)_(2016-05-04_22-3	30-00)	jarkko	o.pukkila@fi.abb.com		05/05/2016	EN		
🕁 ABB GISL	-Z14237(0008_(2016-04-30_22-0	0-00)_(2016-05-04_22-3	30-00)	jarkko	o.pukkila@fi.abb.com		05/05/2016	EN		
🛃 ABB GISL	-Z14237(0008_(2016-04-30_22-0	0-00)_(2016-05-04_22-3	30-00)	mcp.c	ustomer@gmail.com		05/05/2016	EN		

Double-click to open .pdf report. Loading & opening pdf should take <10 sec. ← 1 2 →

Browse report history



Generate new report

Select date and time.

Note! Your local lime zone is **automatically fetched from** your PC operating System. If this is not possible, by default time zone is in UTC. **Note 2**: max duration from-to timespan for report is 3 months





Subscribe for email alerts

Recommende	d	Service History		Spare Parts		Related Documents	Service Agreements	Available Trainings	Remote Condition	
00111000	+		+		+	+	+	+	-	
RCM report	Email	Subscription								
Subscribe f	for em	ail notification	ns abo	ut drive even	its					
Select one or m	nany crite	ria about which ev	vents yo	u want to receive	email					
Selection Ev	ent descr	iption								
🗆 Dri	ive encou	untered a fault								
🗆 Dri	ive encou	untered a warning								
🗆 Dri	ive perfor	mance is limited o	due to re	aching internal lin	nit or ot	her reason				
Dri	ive paran	neters have been	changed	i						
Re	ceive not	tification if control	board te	emperature excee	ds	10 Celcius level				
Re	ceive not	tification if IGBT te	emperatu	ure exceeds	10	Celcius level				
🗆 Re	ceive not	tification if cooling	air temp	perature exceeds	0	Celcius level				
s	ave				1					
in one or olds base	r ma ed or	ny n the crite	eria							
ant to rec	eive	email ale	erts		Te val	mperature th lues	reshold setti	ing accepts i	numerical	



Power and productivity

