

DENON & MARANTZ

Reset – Initialization Procedures
(User (Micro) – Factory – Network)

[Click here for DENON](#)

[Click here for MARANTZ](#)

DENON

USER RESET

Page 1

Page 2

FACTORY RESET

Page 1

Page 2

NETWORK RESET

DENON
Model Info

MARANTZ
MODELS

DENON USER RESET (1 of 2)

Reset Type	Model	Button A	Button B	Button C	Procedure
<p>User (Micro) Reset Initialization Mode Page 1 of 2</p> <p>NOTE: All user settings will be lost after the set is initialized.</p>	AVR-X7200W AVR-X6300H AVR-X6200W AVR-X5200W AVR-X4300H AVR-X4200W AVR-X4100W AVR-X4000W	BACK	INFO	POWER	With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until "INITIALIZED" is displayed.
	AVR-X3300W AVR-X3200W AVR-X3100W AVR-X3000W AVR-X2300W AVR-X2200W AVR-X2100W AVR-X2000W AVR-X1300W AVR-X1200W AVR-X1100W AVR-X1000W AVR-S920W AVR-S910W AVR-S900W AVR-S720W AVR-S710W AVR-S700W	TUNER PRESET CH-	TUNER PRESET CH+	POWER	With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.
	AVR-S510BT AVR-S500BT	SOUND MODE ▶	TUNER PRESET CH +	POWER	

USER RESET

Page 1

Page 2

FACTORY RESET

Page 1

Page 2

NETWORK RESET

DENON
Model Info

MARANTZ
MODELS

DENON USER RESET (2 of 2)

Reset Type	Model	Button A	Button B	Button C	Procedure
<p style="text-align: center;">User (Micro) Reset Initialization Mode Page 2 of 2</p> <p>NOTE: All user settings will be lost after the set is initialized.</p>	AVR-4810CI	STANDARD	DSP SIMULATION	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	AVR-4520CI	BACK	INFO	POWER	
	AVR-4311CI	STANDARD	DSP SIMULATION	POWER	
	AVR-3313CI	BACK	INFO	POWER	
	AVR-3312CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-3311CI	STANDARD	DSP SIMULATION	POWER	
	AVR-2313CI	TUNER PRESET CH-	TUNER PRESET CH+	POWER	
	AVR-2312CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-2311CI	SURROUND MODE ▶	SURROUND MODE ◀	POWER	
	AVR-2113CI	TUNER PRESET CH-	TUNER PRESET CH+	POWER	
	AVR-2112CI	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-1913	SOURCE SELECT ▶	SOURCE SELECT ◀	POWER	
	AVR-1912	PRESET CHANNEL 2	PRESET CHANNEL 3	POWER	
	AVR-1911	SURROUND MODE ▶	SURROUND MODE ◀	POWER	
	AVR-1713	SOURCE SELECT ◀	SOURCE SELECT ▶	POWER	
	AVR-1712	DOCK CONTROL ◀◀	DOCK CONTROL ▶▶	POWER	
	AVR-1613	SOURCE SELECT ◀	SOURCE SELECT ▶	POWER	
	AVR-1612	iPOD SYSTEM ◀◀	iPOD SYSTEM ▶▶	POWER	
	AVR-1611	SURROUND MODE ▶	SURROUND MODE ◀	POWER	
	AVR-1513	SOURCE SELECT ▶	SOURCE SELECT ◀	POWER	
	AVR-1312	DOCK CONTROL ◀◀	DOCK CONTROL ▶▶	POWER	
	AVR-991 AVR-891 AVR-791 AVR-591	SURROUND MODE ▶	SURROUND MODE ◀	POWER	
	AVR-E400	SOURCE SELECT ▶	SOURCE SELECT ◀	POWER	
	AVR-391	SURROUND MODE ▶	SURROUND MODE ◀	POWER	
	AVR-E300 AVR-E200	SOURCE SELECT ▶	SOURCE SELECT ◀	POWER	

USER RESET

Page 1

Page 2

FACTORY RESET

Page 1

Page 2

NETWORK RESET

DENON
Model Info

MARANTZ
MODELS

DENON FACTORY RESET (1 of 2)

Reset Type	Model	Button A	Button B	Button C	Procedure
<p>Factory Reset Initialization Mode Page 1 of 2</p> <p>NOTE: All user settings will be lost and the factory settings (Including installer setup) will be restored after the set is initialized.</p>	AVR-X7200W AVR-X6300H AVR-X6200W AVR-X5200W AVR-X4300H AVR-X4200W AVR-X4100W AVR-X4000W	CURSOR ▲	CURSOR ▼	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	AVR-X3300W AVR-X3200W AVR-X3100W AVR-X3000W AVR-X2300W AVR-X2200W AVR-X2100W AVR-X2000W AVR-X1300W AVR-X1200W AVR-X1100W AVR-X1000W	ZONE2 SOURCE	DIMMER	POWER	
	AVR-S920W AVR-S910W AVR-S900W AVR-S720W AVR-S710W AVR-S700W	TUNER PRESET CH+	TUNE -	POWER	
	AVR-S510BT AVR-S500BT	Factory Reset is not available on these models			

USER RESET

Page 1

Page 2

FACTORY RESET

Page 1

Page 2

NETWORK RESET

DENON
Model Info

MARANTZ
MODELS

DENON FACTORY RESET (2 of 2)

Reset Type	Model	Button A	Button B	Button C	Procedure	
<p>Factory Reset Initialization Mode Page 2 of 2</p> <p>NOTE: All user settings will be lost and the factory settings (Including installer setup) will be restored after the set is initialized.</p>	AVR-4810CI AVR-4520CI AVR-4311CI AVR-3313CI	CURSOR ▲	CURSOR ▼	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>	
	AVR-3312CI	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-3311CI	CURSOR ▲	CURSOR ▼	POWER		
	AVR-2313CI	ZONE2/REC SOURCE	DIMMER	POWER		
	AVR-2312CI	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-2311CI	NA				
	AVR-2113CI	ZONE2 SOURCE	DIMMER	POWER		
	AVR-2112CI	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-1913	ZONE2 SOURCE	DIMMER	POWER		
	AVR-1912	PRESET CHANNEL 1	PRESET CHANNEL 2	POWER		
	AVR-1911	NA				
	AVR-1713	ZONE2 SOURCE	DIMMER	POWER		
	AVR-1712	DOCK CONTROL ■	DOCK CONTROL ◀◀	POWER		
	AVR-1613	TUNER PRESET CH +	DIMMER	POWER		
	AVR-1612	NA				
	AVR-1611	NA				
	AVR-1513	NA				
	AVR-1312	NA				
	AVR-991	CURSOR ▲	CURSOR ▼	POWER		
	AVR-891 AVR-791 AVR-591	NA				
	AVR-E400	ZONE2 SOURCE	DIMMER	POWER		
	AVR-391	NA				
	AVR-E300	TUNER PRESET CH +	DIMMER	POWER		
	AVR-E200	NA				

DENON NETWORK RESET

Reset Type	Model	Button A	Button B	Input Source	Procedure
Network Reset For Models with Built-in HEOS.	AVR-X6300H AVR-X4300H	Cursor ►	Dimmer	Online Music	With the power "On" and the input source set to "Online Music", press and hold the "CURSOR ►" and "DIMMER" buttons for more than 3 seconds. During initialization, the display shows "Network Reset" and when done, "Completed" is displayed for 5 seconds before returning to the normal display.

Network Initialization Mode

The following items are initialized:

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

Operations

With the power is on and the input source set to "Online Music", press and hold the "CURSOR ►" and "DIMMER" buttons for more than 3 seconds. "Network Reset" appears on the screen followed by "Completed", which is displayed for 5 seconds before returning to the normal display.

USER RESET

Page 1

Page 2

FACTORY RESET

Page 1

Page 2

NETWORK RESET

DENON
Model Info

MARANTZ
MODELS

MARANTZ

[USER RESET](#)

[FACTORY RESET](#)

[NETWORK RESET](#)

[MARANTZ Model Info](#)

[Denon Models](#)

Reset Type	Model	Button A	Button B	Button C	Procedure
 <p>USER (Micro) RESET Initialization Mode</p> <p>NOTE: All user settings will be lost after the set is initialized.</p>	SR7011 (HEOS)	GAME	INFO	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until "INITIALIZED" is displayed.</p>
	SR7010	GAME	A-DSX	POWER	
	SR7009				
	SR7008				
	SR7007				
	SR7005				
	SR6011	M-DAX	ZONE2 SOURCE	POWER	
	SR6010				
	SR6009				
	SR6008				
	SR6007				
	SR6006	ZONE SELECT	DISPLAY	POWER	<p>With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	SR6005	SURROUND MODE	AUTO	POWER	
	SR5011	M-DAX	ZONE2 SOURCE	POWER	
	SR5010				
	SR5009				
	SR5008				
	SR5007				
	SR5006	ZONE SELECT	DISPLAY	POWER	
SR5005	SURROUND MODE	AUTO	POWER		
NR1607	M-DAX	ZONE2 SOURCE	POWER		
NR1606					
NR1605					
NR1604					
NR1603					
NR1602	ENTER	RETURN	POWER	<p>With the power on, press and hold buttons A (MENU) and B (▼) for at least 3 seconds until "M-CLEAR" appears on the display.</p>	
NR1601					
NR1506	M-DAX	PRESET CH+	POWER		
NR1504	M-DAX	PRESET CH-	POWER		
NR1501	MENU	▼	POWER		
NR1403	M-DAX	PRESET CH-	POWER		
NR1402	ENTER	RETURN	POWER		


USER RESET

FACTORY RESET

NETWORK RESET

MARANTZ Model Info

Denon Models

Reset Type	Model	Button A	Button B	Button C	Procedure
 <p>FACTORY RESET Initialization Mode</p> <p>NOTE: All user settings will be lost and the factory settings (Including installer setup) will be restored after the set is initialized.</p>	SR7011 (HEOS) SR7010 SR7009 SR7008 SR7007	MOVIE	MUSIC	POWER	<p>Procedure: With the power off (Zones off), press and hold buttons "A" and "B" at the same time and while pressing these 2 buttons, press the power button (C) until the display flashes at 1-second intervals.</p>
	SR7005	CURSOR ▲	PURE DIRECT	POWER	
	SR6011 SR6010 SR6009	TUNER PRESET CH -	TUNER PRESET CH +	POWER	
	SR6008 SR6007	PRESET CH -	PRESET CH +	POWER	
	SR6006	M-DAX	DISPLAY	POWER	
	SR6005	N/A			
	SR5011 SR5010 SR5009	TUNER PRESET CH -	TUNER PRESET CH +	POWER	
	SR5008 SR5007	PRESET CH -	PRESET CH +	POWER	
	SR5006	M-DAX	DISPLAY	POWER	
	SR5005	N/A			
	NR1607 NR1606 NR1605 NR1604 NR1603	ZONE2 SOURCE	INTERNET RADIO	POWER	
	NR1602	MENU	DISPLAY	POWER	
	NR1601	N/A			
	NR1506	PRESET CH +	INTERNET RADIO	POWER	
	NR1504	PRESET CH -	PRESET CH +	POWER	
	NR1501	N/A			
	NR1403	PRESET CH -	PRESET CH +	POWER	
	NR1402	MENU	DISPLAY	POWER	

USER RESET

FACTORY RESET

NETWORK RESET

MARANTZ Model Info

Denon Models



Reset Type	Model	Button A	Button B	Input Source	Procedure
Network Reset For AVR with Built-in HEOS.	SR7011	BACK	ENTER	Online Music	With the power “On” and the input source set to “Online Music” , press and hold the “BACK” and “ENTER” buttons for more than 3 seconds. During initialization, the display shows “Network Reset” and when done, “Completed” is displayed for 5 seconds before returning to the normal display.

Network Initialization Mode

The following items are initialized:

- (1) Network setup
- (2) Friendly Name
- (3) Auto Update setting
- (4) Allow Update setting
- (5) Time Zone setting
- (6) Queue list
- (7) Internet Radio recently played station
- (8) Quick Select playback station
- (9) AirPlay Password
- (10) Bluetooth Pairing History
- (11) Crestron Connected Setup

Operations

With the power is on and the input source set to **“Online Music”**, press and hold the **“BACK”** and **“ENTER”** buttons for more than 3 seconds. **“Network Reset”** appears on the screen followed by **“Completed”**, which is displayed for 5 seconds before returning to the normal display.

USER RESET

FACTORY RESET

NETWORK RESET

MARANTZ Model Info

Denon Models